MXO 5 Series Oscilloscope User Manual

dataTec
Mess- und Prüftechnik. Die Experten.

Ihr Ansprechpartner / Your Partner:

dataTec AG
E-Mail: info@datatec.eu
datatec.eu

1802336902
Version 14

ROHDE&SCHWARZ
Make ideas real

This document describes the following MXO 5 series models with firmware version 2.10.x.x.

- MXO 54, 4 channels (1802.1008K04)
- MXO 58, 8 channels (1802.1008K08)

Mess- und Prüftechnik. Die Experten.

Ihr Ansprechpartner /
Your Partner:

dataTec AG
E-Mail: info@datatec.eu
datatec.eu

© 2026 Rohde & Schwarz
Muehldorfstr. 15, 81671 Muenchen, Germany
Phone: +49 89 41 29 - 0
Email: info@rohde-schwarz.com
Internet: www.rohde-schwarz.com
Subject to change – data without tolerance limits is not binding.
R&S® is a registered trademark of Rohde & Schwarz GmbH & Co. KG.
The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.
MATLAB® is a registered trademark of The MathWorks, Inc.
TEKTRONIX, TEK, and TEKPROBE are registered trademarks of Tektronix, Inc.
All other trademarks are the properties of their respective owners.

1802.3369.02 | Version 14 | MXO 5 Series

Throughout this document, R&S® is indicated as R&S.

Contents

1 Safety and regulatory information....25
1.1 Safety instructions....25
1.2 Labels on the product....31
1.3 Warning messages in the documentation....31
1.4 CE declaration of conformity....32
1.5 Where to find key documents on Rohde & Schwarz....32
1.6 Korea certification class A....32
2 Preface....33
2.1 Key features....33
2.2 Documentation overview....33
2.2.1 Manuals and instrument help....34
2.2.2 Specifications and product brochure....34
2.2.3 Calibration certificate....35
2.2.4 Release notes, open source acknowledgment....35
2.2.5 Application notes, application cards, videos....35
2.3 Options described in this document....35
3 Getting Started....37
3.1 Preparing for use....37
3.1.1 Lifting and carrying....37
3.1.2 Unpacking and checking....37
3.1.3 Choosing the operating site....37
3.1.4 Setting up the product....38
3.1.5 Considerations for test setup....40
3.1.6 Connecting to power....40
3.1.7 Connecting to LAN....41
3.1.8 Connecting external devices....41
3.1.9 Switching on or off....42
3.2 Instrument tour....43
3.2.1 Front view....43
3.2.2 Side view....45
3.2.3 Rear view....47

3.2.4 Keys and controls....48
3.2.5 Checking the functionality....56
4 Operating the instrument....59
4.1 Means of manual interaction....59
4.2 Touchscreen display....60
4.2.1 Information on the display....60
4.2.2 Control elements on the GUI....62
4.3 Applications....65
4.4 Toolbar....66
4.4.1 Using the toolbar....66
4.4.2 Configuring the toolbar....67
4.4.3 Toolbar functions....67
4.5 Signal bar....71
4.6 Working with waveforms....72
4.7 Rohde & Schwarz SmartGrid....74
4.8 Using the selection menu....75
4.9 Using dialogs....77
4.10 Entering data....78
4.11 Displaying results....80
4.12 Adding annotations....81
4.13 Information and notifications....83
4.14 Getting user assistance....84
4.14.1 Displaying help....85
4.14.2 Using help....85
5 Instrument setup....87
5.1 System settings....88
5.1.1 About settings....88
5.1.2 Network settings....89
5.1.3 Network drive mapping....92
5.1.4 Remote settings....94
5.1.5 Localization settings....95
5.1.6 Date and time settings....95
5.2 Option settings....97

5.2.1 Software options settings....97
5.3 Appearance settings....100
5.3.1 Colors....100
5.3.2 Grid....103
5.3.3 Dialogs....105
5.3.4 Measure....106
5.3.5 Peak list....107
5.3.6 Miscellaneous....107
5.4 Display settings....108
5.4.1 Persistence settings....108
5.4.2 Signal settings....109
5.4.3 Backlight settings....110
5.5 Front panel settings....111
5.5.1 Hardkeys: function assignment....111
5.5.2 Knobs....111
5.5.3 LED....112
5.6 Preset setup....112
5.6.1 Preset settings....113
5.6.2 Factory preset....114
5.6.3 Restoring settings....114
5.7 Maintenance settings....115
5.7.1 Firmware update....115
5.7.2 Alignment....115
5.7.3 Power management....118
5.7.4 Self-test....118
5.7.5 Service....119
5.8 Save / recall settings....120
5.8.1 Autonaming....120
5.8.2 CSV export....122
6 Acquisition and waveform setup....123
6.1 Horizontal setup....123
6.1.1 About the horizontal system....123
6.1.2 Horizontal Setup settings....124

6.1.3 Zoom settings....125
6.1.4 Roll mode....125
6.1.5 Reference clock....127
6.2 Acquisition....128
6.2.1 About the acquisition system....129
6.2.2 Acquisition setup....130
6.2.3 Segmentation settings....135
6.2.4 High definition mode....136
6.2.5 History settings....138
6.2.6 Speed....138
6.3 Vertical setup....138
6.3.1 About the vertical system....139
6.3.2 Vertical Setup settings....140
6.3.3 Bandwidth settings....143
6.3.4 Probe settings....144
6.3.5 Other vertical settings....144
6.4 Probes....145
6.4.1 Common probe settings....145
6.4.2 Setup for passive probes....147
6.4.3 Setup for active voltage probes....148
6.4.4 Setup for current probes....154
6.4.5 Modular probes....156
6.4.6 Setup for optical isolated probe systems....159
6.4.7 Probe adapter R&S RT-Z2T....163
6.4.8 Probe info....164
6.4.9 Adjusting passive probes....166
7 Trigger....167
7.1 Basics of triggering....167
7.1.1 Trigger information....168
7.2 Common trigger settings....169
7.3 Trigger sequence....171
7.3.1 Sequence setup....172
7.4 Trigger types....173

7.4.1 Edge trigger....174
7.4.2 Edge trigger on external trigger source....175
7.4.3 Glitch trigger....176
7.4.4 Width trigger....178
7.4.5 Runt trigger....179
7.4.6 Window trigger....181
7.4.7 Timeout trigger....183
7.4.8 Interval trigger....184
7.4.9 Slew rate trigger....186
7.4.10 Setup & Hold....188
7.4.11 State trigger....190
7.4.12 Pattern trigger....191
7.4.13 Line trigger....196
7.5 Trigger mode / holdoff....196
7.6 Hysteresis....198
7.7 Channel filter....200
7.8 Actions on trigger....201
7.9 Zone trigger....203
7.9.1 Using trigger zones and areas....208
7.9.2 Zone trigger settings....210
7.9.3 Logic operator settings....212
7.9.4 History settings....214
8 Signal configuration....215
8.1 Reference level setup....215
8.2 Gate setup....218
8.3 Timing reference....219
8.3.1 General settings of the timing reference....219
8.3.2 Explicit clock signal....220
8.3.3 Clock data recovery by software CDR....221
9 Waveform analysis....226
9.1 Zoom....226
9.1.1 Zoom settings....226
9.1.2 Zooming for details....229

9.2 Mathematics 230
9.2.1 Creating math waveforms 231
9.2.2 General math waveforms settings 231
9.2.3 Operator settings 233
9.2.4 Filter settings 234
9.2.5 Equations 236
9.2.6 Scale settings for math waveforms 241
9.3 History 243
9.3.1 About history 243
9.3.2 History setup 244
9.3.3 Quick access history dialog 247
9.3.4 Using history 248
9.4 Reference waveforms 249
9.4.1 Working with reference waveforms 250
9.4.2 Settings for reference waveforms 251
9.5 Waveform histograms 258
9.5.1 Histogram settings 259
9.5.2 Creating histograms 262
9.5.3 Analysis of waveform histograms 263
10 Measurements 264
10.1 Cursor measurements 264
10.1.1 Cursors and results of cursor measurements 264
10.1.2 Using cursors 265
10.1.3 Settings for cursor measurements 267
10.2 Automatic measurements 275
10.2.1 Measurement setup in general 275
10.2.2 Reference levels for measurements 282
10.2.3 Gate settings for measurements 283
10.2.4 Amplitude/time measurements 284
10.2.5 Histogram measurements 293
10.2.6 Basic jitter analysis (option R&S MXO5-K12) 297
10.2.7 Eye measurements (option R&S MXO5-K136) 302
10.2.8 Protocol measurements (option R&S MXO5-K500) 309

10.2.9 Annotation for measurements....313
10.2.10 Measurement results....314
10.2.11 Analysis of measurement results....315

11 Spectrum analysis....325
11.1 Fundamentals of spectrum analysis....325
11.2 Configuring spectrum waveforms....328
11.3 Spectrum setup....330
11.4 Spectrum scale....333
11.5 Spectrum gate....334
11.6 Spectrum peak list....335
11.7 Spectrum overlap....339

12 Applications....341
12.1 Mask testing....341
12.1.1 About mask testing....341
12.1.2 Mask test setup: general settings....343
12.1.3 Mask definition: polygon....346
12.1.4 Mask definition: auto mask....348
12.1.5 Actions on mask test results....349
12.1.6 Working with masks....351
12.2 Frequency response and impedance analyses (options R&S MXO5-K36/K337) 355
12.2.1 Results and plot of analysis....356
12.2.2 Using frequency response and impedance analysis....359
12.2.3 Dependencies of the measurement setup....360
12.2.4 Settings for frequency response and impedance analysis....361
12.2.5 Saving analysis results....373
12.2.6 Reference waveforms of FRA curves....374
12.2.7 Example of impedance analysis....378
12.3 Power analysis (option R&S MXO5-K31)....380
12.3.1 Power analysis initial settings....380
12.3.2 Power quality....384
12.3.3 Power harmonics....390
12.3.4 Switching loss....397
12.3.5 Turn on/off time....403

12.3.6 Power efficiency....408
12.3.7 Safe operating area (SOA)....415
12.3.8 Common functions for power measurements....421
12.4 3-phase power analysis (option R&S MXO5-K333)....427
12.4.1 3-phase power analysis initial settings....428
12.4.2 Common functions for 3-phase power measurements....430
12.4.3 3-phase power quality....437
12.4.4 3-phase power harmonics....444
12.4.5 3-phase power efficiency....450
12.5 Digital voltmeter....454
12.5.1 Using the digital voltmeter....455
12.5.2 Settings of the digital voltmeter....456
12.6 XY-plot....457
12.6.1 Settings for XY-plots....457
12.6.2 Displaying an XY-diagram....458
12.7 Eye analysis (option R&S MXO5-K136)....458
12.7.1 Calculation and display of eye diagrams....459
12.7.2 Eye diagram setup....459
12.7.3 Analysis of eye diagrams....466
13 Data and file management....467
13.1 Accessing, retrieving and handling data....467
13.2 Save/recall dialog....468
13.3 General and measurement settings: savesets....470
13.3.1 Using savesets....470
13.3.2 Waveform generator saveset....472
13.4 Waveform data....474
13.4.1 Save waveforms: settings....474
13.4.2 Saving waveforms....479
13.4.3 Waveform export files....481
13.5 Histogram data export....490
13.5.1 Files with waveform histograms....491
13.5.2 Files with histograms on measurement results....492
13.5.3 Data conversion....492

13.5.4 Settings for histogram export ... 493
13.6 Results ... 494
13.6.1 Save results: settings ... 494
13.6.2 Saving results ... 496
13.7 Sessions ... 497
13.7.1 Save a session ... 497
13.7.2 Load a session ... 499
13.8 Screenshots ... 500
13.8.1 Screenshot settings ... 501
13.8.2 Configuring and saving screenshots ... 504
13.8.3 Image viewer ... 505
13.9 File browser dialog ... 505

14 Protocol analysis ... 507
14.1 Basics of protocol analysis ... 508
14.1.1 Setup - general settings ... 508
14.1.2 Thresholds ... 509
14.1.3 Display ... 511
14.1.4 Filter ... 515
14.1.5 Format ... 516
14.1.6 Trigger ... 523
14.1.7 Measure ... 527
14.1.8 Export ... 528
14.1.9 Performing protocol analysis ... 529
14.1.10 Bit pattern editor ... 531
14.2 SPI bus (IC electronics, option R&S MXO5-K510) ... 533
14.2.1 About the SPI protocol ... 533
14.2.2 SPI configuration ... 534
14.2.3 SPI filter ... 538
14.2.4 SPI format configuration ... 540
14.2.5 SPI hardware trigger ... 546
14.2.6 SPI software trigger ... 547
14.2.7 Measure ... 550
14.2.8 SPI decode results ... 550

14.3 QUAD-SPI bus (IC electronics, option R&S MXO5-K510)....552
14.3.1 About the QUAD-SPI protocol....553
14.3.2 QUAD-SPI configuration....553
14.3.3 QUAD SPI filter....556
14.3.4 QUAD-SPI format configuration....559
14.3.5 QUAD SPI software trigger....563
14.3.6 Measure....566
14.3.7 QUAD-SPI decode results....566
14.4 OCTO-SPI bus (IC electronics, option R&S MXO5-K510)....568
14.4.1 About the OCTO-SPI protocol....569
14.4.2 OCTO-SPI configuration....570
14.4.3 OCTO SPI filter....574
14.4.4 OCTO-SPI format configuration....576
14.4.5 OCTO SPI software trigger....580
14.4.6 Measure....582
14.4.7 OCTO-SPI decode results....583
14.5 I²C (IC electronics, option R&S MXO5-K510)....584
14.5.1 About the I²C protocol....585
14.5.2 I²C configuration....587
14.5.3 I²C filter....591
14.5.4 I2C format configuration....594
14.5.5 I²C hardware trigger....599
14.5.6 I²C software trigger....603
14.5.7 Measure....606
14.5.8 I²C decode results....607
14.6 I3C (IC electronics, option R&S MXO5-K550)....609
14.6.1 About the I3C protocol....609
14.6.2 I3C configuration....611
14.6.3 I3C filter....615
14.6.4 I3C format configuration....618
14.6.5 I3C software trigger....624
14.6.6 Measure....626
14.6.7 I3C decode results....626

14.7 D-PHY (option R&S MXO5-K580)..... 629
14.7.1 D-PHY basics..... 629
14.7.2 D-PHY configuration..... 630
14.7.3 D-PHY filter..... 635
14.7.4 D-PHY format configuration..... 638
14.7.5 D-PHY software trigger..... 644
14.7.6 D-PHY decode results..... 647
14.8 UART (IC electronics, option R&S MXO5-K510)..... 650
14.8.1 About the UART / RS-232 interface..... 650
14.8.2 UART configuration..... 651
14.8.3 UART filter..... 655
14.8.4 UART format configuration..... 657
14.8.5 UART hardware trigger..... 663
14.8.6 UART software trigger..... 664
14.8.7 Measure..... 666
14.8.8 UART decode results..... 667
14.8.9 Performing UART decoding..... 668
14.9 NRZ clocked & unclocked (option R&S MXO5-K510)..... 671
14.9.1 NRZ basics..... 671
14.9.2 NRZ configuration..... 671
14.9.3 NRZ filter..... 675
14.9.4 NRZ format configuration..... 679
14.9.5 NRZ software trigger..... 686
14.9.6 Measure..... 690
14.9.7 NRZ decode results..... 690
14.10 Manchester (option R&S MXO5-K510)..... 693
14.10.1 Manchester basics..... 693
14.10.2 Manchester configuration..... 695
14.10.3 Manchester filter..... 700
14.10.4 Manchester format configuration..... 703
14.10.5 Manchester software trigger..... 708
14.10.6 Measure..... 712
14.10.7 Manchester decode results..... 712

14.11 8b/10b (option R&S MXO5-K510)....714
14.11.1 About the 8b/10b code....714
14.11.2 8b/10b configuration....715
14.11.3 8b/10b filter....717
14.11.4 8b/10b format configuration....720
14.11.5 8b/10b software trigger....726
14.11.6 Measure....729
14.11.7 8b/10b decode results....730
14.12 CAN (automotive electronics, option R&S MXO5-K520)....732
14.12.1 CAN configuration....732
14.12.2 CAN filter....738
14.12.3 CAN format configuration....741
14.12.4 CAN hardware trigger....746
14.12.5 CAN software trigger....755
14.12.6 Measure....759
14.12.7 CAN decode results....759
14.13 LIN (automotive electronics, option R&S MXO5-K520)....762
14.13.1 About the LIN protocol....762
14.13.2 LIN configuration....763
14.13.3 LIN filter....766
14.13.4 LIN format configuration....768
14.13.5 LIN hardware trigger....773
14.13.6 LIN software trigger....776
14.13.7 Measure....779
14.13.8 LIN decode results....779
14.14 SENT (automotive electronics, option R&S MXO5-K520)....782
14.14.1 About the SENT protocol....782
14.14.2 SENT configuration....786
14.14.3 SENT filter....790
14.14.4 SENT format configuration....794
14.14.5 SENT software trigger....799
14.14.6 Measure....803
14.14.7 SENT decode results....803

14.15 ARINC 429 (aerospace electronics, option R&S MXO5-K530)..... 805
14.15.1 About the ARINC 429..... 805
14.15.2 ARINC 429 configuration..... 806
14.15.3 ARINC 429 filter..... 810
14.15.4 ARINC 429 format configuration..... 812
14.15.5 ARINC 429 software trigger..... 818
14.15.6 Measure..... 820
14.15.7 ARINC 429 decode results..... 820
14.16 SpaceWire (aerospace communications, option R&S MXO5-K530)..... 822
14.16.1 SpaceWire basics..... 822
14.16.2 SpaceWire configuration..... 823
14.16.3 SpaceWire filter..... 826
14.16.4 SpaceWire format configuration..... 829
14.16.5 SpaceWire software trigger..... 835
14.16.6 Measure..... 837
14.16.7 SpaceWire decode results..... 837
14.17 MIL-1553 (aerospace electronics, option R&S MXO5-K530)..... 839
14.17.1 About the MIL-1553 protocol..... 839
14.17.2 MIL-1553 configuration..... 842
14.17.3 MIL-1553 filter..... 844
14.17.4 MIL-1553 software trigger..... 847
14.17.5 Measure..... 850
14.17.6 MIL-1553 decode results..... 850
14.18 SPMI (mobile electronics, option R&S MXO5-K550)..... 852
14.18.1 SPMI configuration..... 852
14.18.2 SPMI filter..... 855
14.18.3 SPMI format configuration..... 858
14.18.4 SPMI software trigger..... 864
14.18.5 Measure..... 868
14.18.6 SPMI decode results..... 868
14.19 RFFE (mobile electronics, option R&S MXO5-K550)..... 870
14.19.1 About the RFFE protocol..... 870
14.19.2 RFFE configuration..... 872

14.19.3 RFFE filter ... 874
14.19.4 RFFE format configuration ... 878
14.19.5 RFFE software trigger ... 884
14.19.6 Measure ... 888
14.19.7 RFFE decode results ... 888
14.20 10BASE-T1S (automotive Ethernet, option R&S MXO5-K560) ... 890
14.20.1 10BASE-T1S basics ... 890
14.20.2 10BASE-T1S configuration ... 891
14.20.3 10BASE-T1S filter ... 896
14.20.4 PPIFormat.PPIFrame.Name10BASE-T1S format configuration ... 898
14.20.5 10BASE-T1S software trigger ... 904
14.20.6 Measure ... 906
14.20.7 10BASE-T1S decode results ... 907
14.21 100BASE-T1 (automotive Ethernet, option R&S MXO5-K560) ... 909
14.21.1 100BASE-T1 configuration ... 910
14.21.2 100BASE-T1S filter ... 912
14.21.3 PPIFormat.PPIFrame.Color100BASE-T1 format configuration ... 914
14.21.4 100BASE-T1 software trigger ... 920
14.21.5 Measure ... 923
14.21.6 100BASE-T1 decode results ... 924
14.22 1000BASE-T1 (automotive Ethernet, option R&S MXO5-K560) ... 926
14.22.1 1000BASE-T1 basics ... 926
14.22.2 1000BASE-T1 configuration ... 927
14.22.3 1000BASE-T1 filter ... 930
14.22.4 1000BASE-T1 format configuration ... 933
14.22.5 1000BASE-T1 software trigger ... 939
14.22.6 Measure ... 942
14.22.7 1000BASE-T1 decode results ... 943
14.23 USB 1.1 (option R&S MXO5-K570) ... 945
14.23.1 USB protocol basics ... 945
14.23.2 USB 1.1 configuration ... 950
14.23.3 USB 1.1 filter ... 954
14.23.4 USB1.1 format configuration ... 957

14.23.5 USB 1.1 trigger....963
14.23.6 Measure....966
14.23.7 USB 1.1 decode results....966
14.24 USB 2.0 (option R&S MXO5-K570)....968
14.24.1 About the USB protocol....968
14.24.2 USB 2.0 configuration....969
14.24.3 USB 2.0 filter....972
14.24.4 USB 2.0 format configuration....975
14.24.5 USB 2.0 trigger....980
14.24.6 Measure....984
14.24.7 USB 2.0 decode results....984
15 Logic analysis on digital channels....986
15.1 Logic configuration....986
15.1.1 Setup....987
15.1.2 Bus....989
15.1.3 Label settings....990
15.1.4 Skew settings....991
15.2 Display....992
15.2.1 Logic bus - decode table....993
16 Waveform generator (option R&S MXO5-B6)....994
16.1 Setup of the waveform generator....994
16.1.1 General settings....994
16.1.2 Modulation settings....999
16.1.3 Sweep settings....1001
16.1.4 Arbitrary waveforms....1002
16.2 Synchronize settings....1006
16.3 Configuring the waveform generator....1007
16.3.1 Configuring a function waveform....1007
16.3.2 Configuring a modulation waveform....1007
16.3.3 Configuring a sine sweep waveform....1009
16.3.4 Configuring an arbitrary waveform....1009
17 Network operation....1011

17.1 Connecting the instrument to the network (LAN)..... 1011
17.1.1 Connecting the instrument to the network..... 1011
17.1.2 Assigning the IP address..... 1012
17.1.3 Using host names..... 1012
17.2 ScopeSync..... 1013
17.2.1 ScopeSync concept..... 1013
17.2.2 Using ScopeSync..... 1017
17.2.3 ScopeSync settings..... 1021
17.3 Web interface..... 1027
17.3.1 Settings on the MXO 5..... 1027
17.3.2 Web browser..... 1028
17.4 Remote operation with VNC client..... 1033
17.5 Remote control..... 1033
17.5.1 Remote control interfaces and protocols..... 1034
17.5.2 Starting and stopping remote control..... 1036
17.6 Remote control - status reporting system..... 1037
17.6.1 Hierarchy of status registers..... 1037
17.6.2 Structure of a SCPI status register..... 1039
17.6.3 Contents of the status registers..... 1040
17.6.4 Error queue..... 1045
17.6.5 Reset values of the status reporting system..... 1045
18 Remote control commands..... 1047
18.1 Conventions used in remote command description..... 1047
18.2 Finding the appropriate command..... 1048
18.3 Error messages on remote commands..... 1048
18.4 Frequently used parameters and suffixes..... 1049
18.4.1 Waveform parameter..... 1049
18.4.2 Slope parameter..... 1050
18.4.3 Polarity parameter..... 1051
18.5 Programming examples..... 1051
18.5.1 SmartGrid layout with zoom..... 1051
18.5.2 Creating a mask..... 1055
18.5.3 Saving screenshots to file..... 1056

18.5.4 Data transfer in roll mode....1056
18.6 Common commands....1057
18.7 General remote settings....1060
18.8 Instrument setup....1063
18.8.1 System....1063
18.8.2 Network drive mapping....1065
18.8.3 SmartGrid....1067
18.8.4 Toolbar....1073
18.8.5 Annotations....1074
18.8.6 Appearance....1086
18.8.7 Display....1091
18.8.8 Save/Recall....1094
18.8.9 Preset....1097
18.8.10 Maintenance....1098
18.9 Acquisition and waveform setup....1099
18.9.1 Starting and stopping acquisition....1099
18.9.2 Horizontal setup....1100
18.9.3 Roll mode....1102
18.9.4 Acquisition setup....1104
18.9.5 Vertical setup....1109
18.9.6 Probes....1115
18.9.7 Fast segmentation....1140
18.9.8 High definition mode....1140
18.9.9 Waveform data export....1142
18.9.10 Reference clock....1142
18.10 Trigger....1143
18.10.1 Common trigger settings....1143
18.10.2 Trigger sequence....1145
18.10.3 Edge trigger....1148
18.10.4 Glitch trigger....1150
18.10.5 Width trigger....1151
18.10.6 Runt trigger....1152
18.10.7 Window trigger....1155

18.10.8 Timeout trigger ... 1158
18.10.9 Interval trigger ... 1159
18.10.10 Slew rate trigger ... 1160
18.10.11 Setup & Hold ... 1163
18.10.12 State trigger ... 1165
18.10.13 Pattern trigger ... 1167
18.10.14 Trigger mode, holdoff ... 1168
18.10.15 Hysteresis ... 1172
18.10.16 Channel filter ... 1174
18.10.17 Actions on trigger ... 1175
18.10.18 Zone trigger ... 1178
18.11 Signal configuration ... 1185
18.11.1 Reference levels ... 1185
18.11.2 Gate ... 1191
18.11.3 Timing reference ... 1194
18.12 Waveform analysis ... 1201
18.12.1 Zoom ... 1202
18.12.2 Mathematics ... 1211
18.12.3 History ... 1215
18.12.4 Reference waveforms ... 1218
18.12.5 Waveform histograms ... 1227
18.13 Data management ... 1232
18.13.1 Instrument settings ... 1232
18.13.2 Saveset ... 1239
18.13.3 Generator saveset ... 1239
18.13.4 Waveform data: export to file ... 1240
18.13.5 Histogram data: export to file ... 1245
18.13.6 Sessions ... 1246
18.13.7 Results ... 1248
18.13.8 Screenshots ... 1250
18.13.9 Data transfer to remote computer ... 1253
18.14 Automatic measurements ... 1264
18.14.1 General settings ... 1264

18.14.2 Settings for amplitude/time measurements....1269
18.14.3 Settings for histogram measurements....1273
18.14.4 Settings for jitter measurements....1274
18.14.5 Default settings for eye measurements....1277
18.14.6 Settings for eye measurements....1279
18.14.7 Settings for protocol measurements....1283
18.14.8 Results....1285
18.14.9 Statistics....1288
18.14.10 Tracks....1289
18.14.11 Histograms on measurement results....1292
18.15 Cursor measurements....1294
18.15.1 Cursor setup....1295
18.15.2 Cursor results....1305
18.15.3 Peak search using cursors....1306
18.15.4 Cursor appearance....1308
18.16 Spectrum analysis....1309
18.16.1 Spectrum setup....1309
18.16.2 Spectrum gate....1319
18.16.3 Peak list....1320
18.16.4 Spectrum with frames and overlap....1325
18.16.5 Data export of spectrum waveforms....1327
18.17 Applications....1327
18.17.1 Mask testing....1327
18.17.2 Frequency response and impedance analyses (options R&S MXO5-K36/K337)....1341
18.17.3 Power analysis (option R&S MXO5-K31)....1366
18.17.4 3-phase power analysis (option R&S MXO5-K333)....1432
18.17.5 Digital voltmeter....1476
18.17.6 XY-plot....1479
18.17.7 Eye analysis (option R&S MXO5-K136)....1480
18.18 Protocols....1488
18.18.1 Configuration settings for all serial protocols....1489
18.18.2 SPI (option R&S MXO5-K510)....1494
18.18.3 QUAD-SPI (option R&S MXO5-K510)....1528

18.18.4 OCTO-SPI (option R&S MXO5-K510)....1560
18.18.5 I²C (option R&S MXO5-K510)....1591
18.18.6 I3C (option R&S MXO5-K550)....1627
18.18.7 D-PHY (option R&S MXO5-K580)....1660
18.18.8 UART / RS-232 (option R&S MXO5- K510)....1695
18.18.9 NRZ Clocked (option R&S MXO5-K510)....1728
18.18.10 NRZ Unclocked (option R&S MXO5-K510)....1758
18.18.11 Manchester (option R&S MXO5-K510)....1787
18.18.12 8b/10b (option R&S MXO5-K510)....1817
18.18.13 CAN (option R&S MXO5-K520)....1844
18.18.14 LIN (option R&S MXO5-K520)....1892
18.18.15 SENT (option R&S MXO5-K520)....1925
18.18.16 ARINC 429 (option R&S MXO5-K530)....1961
18.18.17 MIL-1553 (option R&S MXO5-K530)....1989
18.18.18 SpaceWire (option R&S MXO5-K530)....2018
18.18.19 SPMI (option R&S MXO5-K550)....2045
18.18.20 RFFE (option R&S MXO5-K550)....2076
18.18.21 10BASE-T1S (option R&S MXO5-K560)....2109
18.18.22 100BASE-T1 (option R&S MXO5-K560)....2140
18.18.23 1000BASE-T1 (option R&S MXO5-K560)....2171
18.18.24 USB 1.1 (option R&S MXO5-K570)....2202
18.18.25 USB 2.0 (option R&S MXO5-K570)....2233
18.19 Logic analysis on digital channels....2265
18.19.1 Digital channels....2266
18.19.2 Logic configuration....2269
18.19.3 Digital resolution....2277
18.19.4 Export of digital data....2278
18.20 Waveform generator (option R&S MXO5-B6)....2278
18.20.1 Waveform generator setup....2279
18.20.2 Synchronize settings....2296
18.21 ScopeSync....2298
18.22 Status reporting....2301
18.22.1 General commands....2303

18.22.2 STATus:OPERation register....2303
18.22.3 STATus:QUEStionable registers....2305
18.22.4 Reading out the CONDition part....2306
18.22.5 Reading out the EVENt part....2307
18.22.6 Controlling the ENABle part....2308
18.22.7 Controlling the negative transition part....2308
18.22.8 Controlling the positive transition part....2309
18.22.9 Other status commands....2310
18.22.10 Programming tips and examples....2311
18.23 Deprecated commands....2313
18.23.1 Base instrument....2313
18.23.2 Applications....2314
18.23.3 Serial protocols....2315

19 Maintenance and support....2325
19.1 Cleaning....2325
19.2 Changing fuses....2325
19.3 Contacting customer support....2326
19.4 Information for technical support....2326
19.5 Data security....2327
19.6 Transporting....2327
19.7 Storage....2327
19.8 Disposal....2327

List of commands....2329

1 Safety and regulatory information

The product documentation helps you to use the product safely and efficiently.

Where do I find safety information?

Safety information is part of the product documentation. It warns you of potential dangers and gives instructions on how to prevent personal injury or damage caused by dangerous situations. Safety information is provided as follows:

- In Section 1.1, "Safety instructions", on page 25. The same information is provided in many languages in printed format. The printed "Safety Instructions" for "Oscilloscopes and Accessories" are delivered with the instrument and the probes.
- Throughout the documentation, safety instructions are provided when you need to take care during setup or operation.

Intended use

The MXO 5 product is designed for measurements on circuits that are only indirectly connected to the mains or not connected at all. It is not rated for any measurement category.

The product is intended for the development, production and verification of electronic components and devices in industrial, administrative, and laboratory environments. Use the product only for its designated purpose. Observe the operating conditions and performance limits stated in the specifications document.

Target audience

The target audience of this document includes developers and technicians, administrators and maintenance personnel using oscilloscopes and probes. The required skills and experience of the users depend on the test setup and application of the product.

1.1 Safety instructions

Products from the Rohde & Schwarz group of companies are manufactured according to the highest technical standards. To use the products safely, follow the instructions provided here and in the product documentation. Keep the product documentation nearby and offer it to other users.

Use the product only for its intended use and within its performance limits. Intended use and limits are described in the product documentation such as the specifications document, manuals and the printed "Safety Instructions" document. If you are unsure about the appropriate use, contact Rohde & Schwarz customer support.

Using the product requires skilled persons or specially trained personnel. These users also need sound knowledge of at least one of the languages in which the user interfaces and the product documentation are available.

Reconfigure or adjust the product only as described in the product documentation or the specifications document. Any other modifications can affect safety and are not permitted.

Never open the casing of the product. Only service personnel authorized by Rohde & Schwarz are allowed to repair the product. If any part of the product is damaged or broken, stop using the product. Contact Rohde & Schwarz customer support at https://www.rohde-schwarz.com/support.

In these safety instructions, the term "product" covers instruments (oscilloscopes), probes and their accessories.

Lifting and carrying the instrument

Check the specifications document for the maximum weight of the instrument. A single person can only carry a maximum of 18 kg safely depending on age, gender and physical condition. If your instrument is heavier than 18 kg, do not move or carry it by yourself.

Use the instrument handles to move or carry the instrument. Do not use the mounted accessories instead of the handles. Accessories are not designed to carry the weight of the instrument.

To move the instrument safely, you can use lifting or transporting equipment such as lift trucks and forklifts. Follow the instructions provided by the equipment manufacturer.

Choosing the operating site

Only use the product indoors. The product casing is not waterproof. Water that enters can electrically connect the casing with live parts, which can lead to electric shock, serious personal injury or death if you touch the casing.

If Rohde & Schwarz provides accessories designed for outdoor use of your product, e.g. a protective cover, you can use the product outdoors.

You can operate the product up to an altitude of 2000 m above sea level. If a higher altitude is permissible, the value is provided in the specifications document. The product is suitable for pollution degree 2 environments where nonconductive contamination can occur. For more information on environmental conditions such as ambient temperature and humidity, see the specifications document.

Setting up the product

Always place the product on a stable, flat and level surface with the bottom of the product facing down. If the product is designed for different positions, secure the product so that it cannot fall over.

If the product has foldable feet, always fold the feet completely in or out to ensure stability. The feet can collapse if they are not folded out completely or if the product is moved without lifting it. The foldable feet are designed to carry the weight of the product, but not an extra load.

If stacking is possible, keep in mind that a stack of products can fall over and cause injury.

If you mount products in a rack, ensure that the rack has sufficient load capacity and stability. Observe the specifications of the rack manufacturer. Always install the products from the bottom shelf to the top shelf so that the rack stands securely. Secure the product so that it cannot fall off the rack.

Connecting the product

Before connecting the interfaces or measuring inputs of the product to other products or electrical circuits, make sure that the other products or electrical circuits provide special protection against electric shock. This protection principle is referred to as SELV (safety extra-low voltage) and is based on a low voltage level and increased insulation. Exceptions are indicated by a measurement category on the product and given in the specifications document.

Connecting to power and grounding

The mains power supply input of the instrument complies with overvoltage category II. Connect the product to a fixed installation used to supply energy-consuming equipment such as household appliances and similar loads. Keep in mind that electrically powered products have risks, such as electric shock, fire, personal injury or even death.

Take the following measures for your safety:

- Do not use an isolating transformer to connect the instrument to the mains power supply.
- Before switching on the product, ensure that the voltage and frequency indicated on the product match the available power source. If the power adapter does not adjust automatically, set the correct value and check the rating of the fuse.
- If a product has an exchangeable fuse, its type and characteristics are indicated next to the fuse holder. Before changing the fuse, switch off the product and disconnect it from the power source. How to change the fuse is described in the product documentation.
- Only use the power cable delivered with the product. It complies with country-specific safety requirements. Only insert the plug into an outlet with protective conductor terminal.
- Only use intact cables and route them carefully so that they cannot be damaged. Check the power cables regularly to ensure that they are undamaged. Also ensure that nobody can trip over loose cables.
- If you connect the product to an external power supply, use the one delivered with the product or recommended in the product documentation. The external power supply must conform to the country-specific regulations.
- Ensure that you can disconnect the product from the power source at any time. Pull the power plug to disconnect the product. The power plug must be easily accessible. If the product is integrated into a system that does not meet these requirements, provide an easily accessible circuit breaker at the system level.
- Replace parts that are relevant to safety only by original parts, e.g. power cables or fuses.

Performing measurements

Take the following measures for your safety:

- To ascertain a voltage-free state, use an appropriate voltage tester. Any measurement setup including an oscilloscope is not suitable for this purpose.
- The maximum input voltage on channel inputs and the external trigger input must not exceed the value specified in the specifications document.
- Observe all voltage and current ratings of the instrument, the probes, and the accessories. Exceeding the allowed voltages can lead to an electric shock.
  Limits and ratings are marked on the products and listed in the specifications documents.
  Consider that the rated voltage depends on the frequency. The voltage limitation curves or values are provided in the specifications document.
- Never cause any short circuits when measuring sources with high output currents.
- Use only probes and accessories that comply with the measurement category (CAT) of your measurement task. If the product is rated for any measurement category, the permitted category is indicated on the product and in the specifications document. If you use other than Rohde & Schwarz accessories, make sure that they are suitable for the instrument and the measurement task.
- Set the correct attenuation factor on the instrument according to the probe being used. Otherwise, the measurement results do not reflect the actual voltage level, and you might misjudge the actual risk.
- When working with high voltages and current probes, observe the additional operating conditions specified in these safety instructions.
- The probe pins are extremely pointed and can easily penetrate clothes and the skin. Handle the probe pins with great care. To exchange a probe pin, use tweezers or pliers to avoid injuries. When transporting the accessories, always use the box supplied with the probe.
- Prevent the probe from receiving mechanical shock. Avoid putting excessive strain on the probe cable or exposing it to sharp bends. Touching a broken cable during measurements can cause injuries.
- Set up all probe connections to the instrument before applying power.

Working with hazardous voltages

Voltages higher than 30 V RMS, or 42 V peak, or 60 V DC are regarded as hazardous contact voltages. Direct contact with them can cause serious injuries.

Make sure that only electrically skilled persons use the products for measurements on hazardous contact voltages. These working conditions require special education and experience to perceive risks and to avoid hazards which electricity can create.

When working with hazardous contact voltages, use protective measures to preclude direct contact with the measurement setup:

- Do not touch exposed connections and components when power is applied.
- Switch off the test circuit while connecting and disconnecting probe leads.
- Use only insulated voltage probes, test leads and adapters.
- Make sure that the input leads fulfill the safety requirements for your measurement.

The delivered input leads might have a jacket wear indicator that indicates a worn jacket by different jacket color. In this case, do not use the input lead. Replace it with a new one.

- When connecting to the DUT, keep your fingers behind finger guard. Remove jewelry, watches, and other metallic objects. Only use 4 mm safety banana plugs.

Using optical isolated probe systems

Optical isolated probes are classified as class 1 laser product. Class 1 lasers are safe under all conditions of normal use. The product fully contains the beam of a higher-class laser. Take the following measures for your safety:

- To avoid exposure to the laser beam, never remove any covers from the probe head or probe receiver, and never disassemble the product.
- Check the product before using to ensure that it is undamaged. If you have dropped the product or exposed it to excessive mechanical stress, always check the product. Do not use the product if any component is damaged.
- Send the product to service regularly.

Optical isolated probes measure differential voltages. The test circuit can have a different potential. The common mode voltage between the potentials of the DUT and the oscilloscope can be much higher than the differential voltage and is not measured by the probe. To avoid the risk of electrical shock, use protective measures:

- Always de-energize the test circuit before installing or removing the tip module.
- Never exceed the differential voltage rating.
- When measuring on a test circuit with high common mode voltage, use a tripod to hold the probe head.
- Keep the probe head and the tip cable away from circuits with different potential to prevent arc flash caused by a different potential.

Working with current probes

When working with current probes, you can measure high-frequency currents or currents that contain high-frequency components.

- Switch off the test circuit while connecting the probe.
- Do not attach the clamp to bare unisolated conductors. To avoid injury from a short circuit, measure at a location on an insulated wire where the insulation is sufficient for the circuit voltage.
- Connect the probe only to the secondary side of a breaker. With this measure, you can avoid injury if a short circuit occurs.
- The following effects can cause burns and fire or damage to the measurement site:
  - Eddy current loss can cause heating of the sensor head.
  - Dielectric heating can cause heating of cord insulation and other materials.
- When measuring current that includes a high-frequency component, consider the derating characteristics of the probe. Do not measure any current that exceeds the rated current.
- Using the probes with high frequencies or strong magnetic fields may cause the device to become abnormally hot, resulting in fire, equipment damage, or burns.

Measurement categories

IEC 61010-2-030 defines measurement categories that rate instruments on their ability to resist short transient overvoltages that occur in addition to the working voltage. Use the measurement setup only in electrical environments for which they are rated.

- 0 - Instruments without rated measurement category
  For measurements performed on circuits not directly connected to mains, for example, electronics, circuits powered by batteries, and specially protected secondary circuits. This measurement category is also known as CAT I.
- CAT II:
  For measurements performed on circuits directly connected to the low-voltage installation by a standard socket outlet, for example, household appliances and portable tools.
- CAT III:
  For measurements performed in the building installation, such as junction boxes, circuit breakers, distribution boards, and equipment with permanent connection to the fixed installation.
- CAT IV:
  For measurements performed at the source of the low-voltage installation, such as electricity meters and primary overcurrent protection devices.

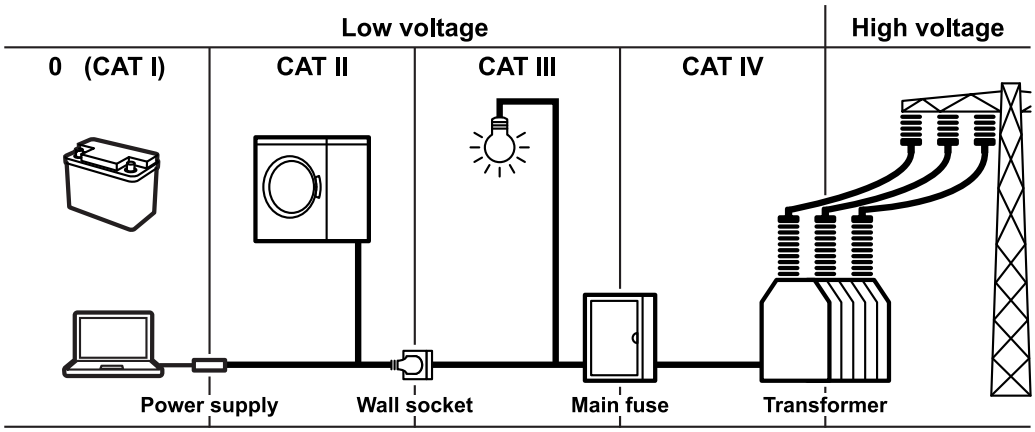

Cleaning the product

Use a dry, lint-free cloth to clean the product. When cleaning, keep in mind that the casing is not waterproof. Do not use liquid cleaning agents.

Meaning of safety labels

Safety labels on the product and its accessories warn against potential hazards.

	Potential hazard Read the product documentation to avoid personal injury or product damage.

	Electrical hazard Indicates live parts. Risk of electric shock, fire, personal injury or even death.

	Protective conductor terminal Connect this terminal to a grounded external conductor or to protective ground. This connection protects you against electric shock if an electric problem occurs.

1.2 Labels on the product

Labels on the casing inform about:

- Personal safety, see "Meaning of safety labels" on page 30
- Product and environment safety, see Table 1-1
- Identification of the product

Table 1-1: Labels regarding product and environment safety

	Chassis grounding terminal
	Take care when handling electrostatic sensitive devices.
	Labeling in line with EN 50419 for disposal of electrical and electronic equipment after the product has come to the end of its life. For more information, see "Disposing of electrical and electronic equipment" on page 2328.

1.3 Warning messages in the documentation

A warning message points out a risk or danger that you need to be aware of. The signal word indicates the severity of the safety hazard and how likely it will occur if you do not follow the safety precautions.

WARNING

Potentially hazardous situation. Could result in death or serious injury if not avoided.

CAUTION

Potentially hazardous situation. Could result in minor or moderate injury if not avoided.

NOTICE

Potential risks of damage. Could result in damage to the supported product or to other property.

1.4 CE declaration of conformity

The CE declaration of conformity of the instrument is delivered with the product. Keep the document for further reference.

The current version of this CE declaration of conformity is available at:

www.rohde-schwarz.com/company-documents/mxo5/

1.5 Where to find key documents on Rohde & Schwarz

Certificates issued to Rohde & Schwarz that are relevant for your country are provided at www.rohde-schwarz.com/key-documents, e.g. concerning:

- Quality management
- Environmental management
- Information security management
- Accreditations

1.6 Korea certification class A

이 기기는 업무용(A급) 전자파 적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.

2 Preface

2.1 Key features

The MXO 5 series oscilloscope is a next generation oscilloscope with 4 or 8 channels, evolved for more challenges.

Using the MXO 5, you can:

- Acquire, process and display signals with unrivaled speed.
- Detect signal details, faults and anomalies instantly.
- Increase your statistical confidence.

The MXO 5 series oscilloscopes utilize advanced technologies:

- Fastest update rate of up to 4.5 million waveforms/s thanks to MXO-EP ASIC
- 12 bit ADC at all sample rates, and 18 bit vertical resolution in HD mode
- Bandwidth up to 2 GHz, and up to 5 Gsample/s sample rate
- Deep standard memory: 500 Mpoints per channel
- High-precision digital trigger with best-in-class trigger jitter, also available in HD mode
- Nearly zero blind time: up to 99% real-time signal activity capture
- Lowest measurement noise
- Eco-friendly design: low power consumption, automatic power-up capability, scarcely audible

Features and applications help achieve fast and accurate results, for example:

- Segmented memory & history mode to analyze previous acquisitions
- Superior spectrum analysis with 45 000 FFT/s, which allows capture of spurious spectrum events
  4 simultaneous spectrums with independent time and frequency control
- Integrated arbitrary waveform generator
- Logic analysis with 16 digital channels
- Dual-path serial protocol analysis
- Frequency response analysis (Bode plots)
- Large high-resolution touchscreen, R&S SmartGrid, configurable toolbar, intuitive navigation
- Wide selection of compatible probes

2.2 Documentation overview

This section provides an overview of the MXO 5 user documentation.

2.2.1 Manuals and instrument help

You find the manuals on the product page at:

www.rohde-schwarz.com/manual/mxo5

Getting started manual

Introduces the MXO 5 and describes how to set up the product. A printed English version is included in the delivery.

User manual and help

Contains the description of all instrument modes and functions. It also provides an introduction to remote control, a complete description of the remote control commands with programming examples, and information on maintenance and instrument interfaces. Includes the contents of the getting started manual.

The contents of the user manual are available as help in the MXO 5. The help offers quick, context-sensitive access to the complete information on the instrument and its firmware.

The user manual is available for download or immediate display on the internet.

Safety instructions

Provides safety information in many languages. The printed document is delivered with the product.

Instrument security procedures manual

Deals with security issues when working with the MXO 5 in secure areas. It is available for download on the internet.

Service manual

Describes the performance test for checking compliance with rated specifications, firmware update, troubleshooting, adjustments, installing options and maintenance. The service manual is available for registered users on the global Rohde & Schwarz information system (GLORIS, https://gloris.rohde-schwarz.com).

2.2.2 Specifications and product brochure

The specifications document, also known as the data sheet, contains the technical specifications of the MXO 5. It also lists the firmware applications and their order numbers, and optional accessories. The product brochure provides an overview of the instrument and deals with the specific characteristics.

www.rohde-schwarz.com/brochure-datasheet/mxo5

2.2.3 Calibration certificate

The document is available on https://gloris.rohde-schwarz.com/calcert. You need the device ID of your instrument, which you can find on a label on the rear panel.

2.2.4 Release notes, open source acknowledgment

The release notes list new features, improvements and known issues of the current firmware version, and describe the firmware installation. The open source acknowledgment document provides verbatim license texts of the used open source software. It can also be read directly on the instrument.

www.rohde-schwarz.com/firmware/mxo5

2.2.5 Application notes, application cards, videos

Various documents and videos deal with special applications or background information on particular topics.

R&S®MXO 5 - Mediacenter

R&S®MXO 5 - Applications

Find various videos on Rohde & Schwarz products and test and measurement topics on YouTube: https://www.youtube.com/@Rohde-Schwarz

2.3 Options described in this document

In addition to the base unit, the following options are described in this documentation:

Type	Designation	Order No.
R&S MXO5-B1	MSO	1802.0660.02
R&S MXO5-B6	Waveform and pattern generator	1802.0753.02
R&S MXO5-K12	Basic jitter analysis	1802.1295.02
R&S MXO5-K31	Power analysis	1802.0799.02
R&S MXO5-K36	Frequency response analysis	1802.1943.02
R&S MXO5-K136	Eye analysis	1801.8621.02
R&S MXO5-K333	3-phase power analysis	1801.8650.02
R&S MXO5-K337	Impedance analysis	
R&S MXO5-K500	Bus analysis	1802.1308.02
R&S MXO5-K510	Triggering and decoding low speed serial buses: I2C, SPI, UART/RS-232/RS-422/RS-485, QUAD-SPI, NRZ clocked, NRZ unclocked, Manchester	1802.1243.02

Type	Designation	Order No.
R&S MXO5-K520	Triggering and decoding automotive protocols: CAN, CAN FD, CAN XL, LIN, SENT	1802.1920.02
R&S MXO5-K530	Decoding aerospace protocols: ARINC 429, MIL-STD-1553, SpaceWire	1802.1266.02
R&S MXO5-K550	Decoding MIPI low speed protocols: I3C, RFFE, SPMI	1802.1266.02
R&S MXO5-K560	Decoding automotive Ethernet protocols: 10BASE-T1S, 100BASE-T1, 1000BASE-T1	1802.1250.02
R&S MXO5-K570	Decoding automotive USB protocols: USB 1.1, USB 2.0	1801.9028.02

3 Getting Started

3.1 Preparing for use

Here, you can find basic information about setting up the instrument for the first time or when changing the operating site.

3.1.1 Lifting and carrying

See: "Lifting and carrying the instrument" on page 26.

3.1.2 Unpacking and checking

1. Unpack the product carefully.
2. Retain the original packing material. Use it when transporting or shipping the product later.
3. Using the delivery notes, check the equipment for completeness.
4. Check the equipment for damage.

   If the delivery is incomplete or equipment is damaged, contact Rohde & Schwarz.

3.1.3 Choosing the operating site

Specific operating conditions ensure proper operation and avoid damage to the product and connected devices. For information on environmental conditions such as ambient temperature and humidity, see the specifications document.

For safety information, see "Choosing the operating site" on page 26.

Electromagnetic compatibility classes

The electromagnetic compatibility (EMC) class indicates where you can operate the product. The EMC class of the product is given in the specifications document.

- Class B equipment is suitable for use in:
  - Residential environments
  - Environments that are directly connected to a low-voltage supply network that supplies residential buildings
- Class A equipment is intended for use in industrial environments. It can cause radio disturbances in residential environments due to possible conducted and radiated disturbances. It is therefore not suitable for class B environments.

If class A equipment causes radio disturbances, take appropriate measures to eliminate them.

3.1.4 Setting up the product

When setting up the instrument, follow the safety instructions:

- "Setting up the product" on page 26
- "Intended use" on page 25

3.1.4.1 Placing the product on a bench top

For standalone operation, place the instrument on a horizontal bench with even, flat surface. The instrument can be used in horizontal position, standing on its feet, or with the support feet on the bottom extended.

To place the product on a bench top

1. Place the product on a stable, flat and level surface.
2. **CAUTION!** The top surface of the product is too small for stacking. If you stack another product on top of the product, the stack can fall over and cause injury.

   If you want to save space, mount several products in a rack.

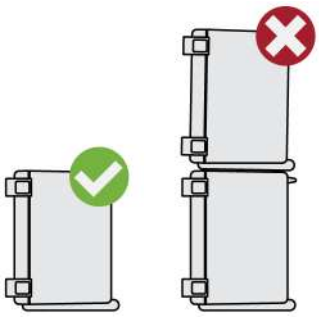

3. **CAUTION!** Foldable feet can collapse. For safety information, see "Setting up the product" on page 26.

   Always fold the feet completely in or out. With folded-out feet, do not place anything on top or underneath.
4. **NOTICE!** Overheating can damage the product.

   Prevent overheating as follows:

   - Keep a minimum distance of 10 cm between the fan openings of the product and any object in the vicinity to provide sufficient airflow and ventilation.
   - Do not place the product next to heat-generating equipment such as radiators or other products.

3.1.4.2 Mounting the product on a monitor arm

You can mount the oscilloscope to a monitor arm with VESA mount.

1. **NOTICE!** Only use a VESA mount compatible to FDMI MIS-D, up to 14 kg with M4x10 screws and standard 100 mm × 100 mm pattern.

   Order the VESA adapter R&S MXO5-Z7. For the order number, see the specifications document.

2. Mount the adapter to the rear panel of the oscilloscope. Follow the assembly instructions provided with the adapter.
3. Mount the VESA mount of the monitor arm to the VESA adapter.

3.1.4.3 Mounting the product in a rack

To prepare the rack

1. Observe the requirements and instructions in "Setting up the product" on page 26.
2. **NOTICE!** Insufficient airflow can cause overheating and damage the product.

   Design and implement an efficient ventilation concept for the rack.

To mount the oscilloscope in a rack

1. Use a rackmount kit to prepare the instrument for rack mounting.
   a) Order the rackmount kit designed for your oscilloscope. For the order number, see specifications document.
   b) Mount the rackmount kit. Follow the assembly instructions provided with the rackmount kit.
2. Lift the product to shelf height. If the rack is high, use a safe climbing aid when placing on upper shelves.
3. Grip the product by the handles. Slide the product onto the shelf until the rack brackets fit closely to the rack.
4. Tighten all screws at the rack brackets with a tightening torque of 1.2 Nm to secure the product at the rack.

To unmount the product from a rack

1. Loosen the screws at the rack brackets.
2. Remove the product from the rack.
3. If placing the product on a bench top again, unmount the rackmount kit from the product. Follow the instructions provided with the rackmount kit.

3.1.5 Considerations for test setup

Observe safety instructions, see "Performing measurements" on page 28.

Cable selection and electromagnetic interference (EMI)

Electromagnetic interference (EMI) can affect the measurement results.

To suppress electromagnetic radiation during operation:

- Use high-quality shielded cables, for example, double-shielded RF and LAN cables.
- Always terminate open cable ends.
- Ensure that connected external devices comply with EMC regulations.

Measuring accessories

Use only probes and measuring accessories that comply with IEC 61010-031.

Signal input and output levels

Information on signal levels is provided in the specifications document. Keep the signal levels within the specified ranges to avoid damage to the product and connected devices.

Preventing electrostatic discharge (ESD)

Electrostatic discharge is most likely to occur when you connect or disconnect a DUT.

► **NOTICE!** Electrostatic discharge can damage the electronic components of the product and the device under test (DUT).

Ground yourself to prevent electrostatic discharge damage:

a) Use a wrist strap and cord to connect yourself to ground.
b) Use a conductive floor mat and heel strap combination.

During operation, if the firmware observes a serious unexpected disturbance (e.g. due to ESD), it resets some hardware components and initiates a new alignment to ensure proper instrument functioning. Then it restores the user settings to the state before the disturbance.

3.1.6 Connecting to power

For safety information, see "Connecting to power and grounding" on page 27.

The MXO 5 can be used with different AC power voltages and adapts itself automatically to it.

The nominal ranges are indicated on a label near the power connector on the instrument and in the specifications document.

1. Plug the AC power cable into the AC power connector on the rear panel of the product. Only use the AC power cable that is delivered with the product.
2. Plug the AC power cable into a power outlet with ground contact.

If the voltage dips at the AC power connector (according to EN 61326-2-1 6.4.101), a restart of the MXO 5 can happen. All instrument settings are restored after the restart.

3.1.7 Connecting to LAN

For remote operation of the instrument using a computer, you need a local area network (LAN) connection.

Network environment

Before connecting the product to a LAN, consider the following:

- Install the latest firmware to reduce security risks.
- For internet or remote access, use secured connections if applicable.
- Ensure that the network settings comply with the security policies of your company. Contact your local system administrator or IT department before connecting your product to your company LAN.
- When connected to the LAN, the product may potentially be accessed from the internet, which may be a security risk. For example, attackers might misuse or damage the product.

To connect a LAN cable

► Connect an RJ-45 cable to the LAN connector on the rear panel, and to the LAN.

For supported LAN interfaces, refer to the specifications document.

By default, the MXO 5 is configured to use DHCP. Configuration of a static IP address is not required.

3.1.8 Connecting external devices

3.1.8.1 Connecting USB devices

You can use USB connectors to connect various devices:

- Connect a keyboard and a mouse for operation and data entry, alternatively or in addition to the touchscreen functionality.
- Connect USB flash drives to save screenshots, and to transfer files to and from the instrument without a network connection.

► Connect the USB device to any of the USB connectors.

You can connect or disconnect USB devices during operation of the instrument.

3.1.8.2 Connecting external monitors

Using the HDMI or DisplayPort connector on the side panel, you can connect one external monitor or projector to the oscilloscope. The display connectors do *not* support hot swapping, the monitor is recognized by the instrument during the boot process.

1. **NOTICE!** Missing ground contact can damage the oscilloscope.

   Ensure that the monitor and the oscilloscope are connected to a ground contact.
   See also: Section 3.1.6, "Connecting to power", on page 40.

2. **NOTICE!** Use only standard-compliant monitor cables.

   Connect the monitor or projector to a display connector.

3. Switch on the oscilloscope. See also "To switch on the product" on page 42.

   The oscilloscope recognizes the external monitor. During the running session, you can disconnect the monitor and connect it again.

If the monitor provides touch functionality, an additional connection can be required, e.g. a USB connection. Refer to the documentation of your monitor.

The oscilloscope outputs a Full HD image with 1920x1080 pixel. If the screen resolution of the monitor is set higher than the instrument's resolution, the application window uses a 1920x1080 area of the monitor display. For full-screen display, adjust the monitor's screen resolution.

3.1.9 Switching on or off

The instrument is switched on or off with the power switch and the [Power] key. The [Power] key is located in the bottom left corner of the front panel. The power switch is located at the rear panel of the instrument.

Table 3-1: Overview of power states

Status	LED	Power switch
Off	(unlighted)	[0] (off)
Standby	yellow	[I] (on)
Ready	green	[I] (on)

To switch on the product

The product is off but connected to power.

1. Set the switch on the power supply to position [I].

   The power key on the front panel lights up.

2. Press the [Power] key on the front panel.

The instrument performs a system check, boots the operating system, and then starts the MXO 5 firmware.
The [Power] key turns green and the illuminated keys on the front panel light up.
If the previous session was terminated regularly, the oscilloscope uses the last settings.

Before you start measurements, be sure to comply with the warm-up phase specified in the specifications document.

To shut down the product

The product is in the ready state.

► Press the [Power] key.

All current settings are saved, and the software shuts down. The [Power] key turns yellow. The standby power supplies only the power switch circuits.

The "Power" icon in the "Menu" shuts down only the firmware application. To shut down the instrument completely, use the [Power] key.

Remote command for firmware shutdown: `SYSTem:EXIT` on page 1064.

To disconnect from power

The product is in the standby state.

1. **NOTICE!** Risk of data loss. If you disconnect the product from power when it is in the ready state, you can lose settings and data. Shut it down first.

   Set the switch on the power supply to position [0].

   The LED of the [Power] key is switched off.

2. Disconnect the product from the power source.

3.2 Instrument tour

This section describes the front, rear and side view of the instrument including all function keys and connectors.

3.2.1 Front view

This section provides an overview of the MXO 5 front panel.

Figure 3-1: Front view of MXO 5 with 8 input channels

1 = Display
2 = Keys and controls
3 = Analog input channels
4 = Connectors for demo signal output
5 = Connectors for logic probe (R&S MXO5-B1 Mixed Signal Option)
6 = [Power] key
7 = USB connectors
8 = Connectors for probe compensation

Analog channel inputs

The MXO 5 has 4 or 8 channel inputs to connect the input signals, depending on the model.

You can connect probes with Rohde & Schwarz probe interface or BNC connectors. The input impedance is selectable, the values are 50 Ω and 1 MΩ.

The maximum input voltage on channel inputs is:

- 400 V (V_p) and 300 V (RMS) at 1 MΩ input impedance, derates at 20 dB/decade to 5 V (RMS) above 250 kHz.
- 30 V (V_p) and 5 V (RMS) at 50 Ω input impedance

Demo
The pins are intended for demonstration purposes.

Logic Channels
Two connectors for logical probes with 8 digital channels each (D0 to D7 and D8 to D15). Using logic channels requires the Mixed Signal Option R&S MXO5-B1.

The maximum input voltage at 100 kΩ input impedance is ±40 V (Vp) and 32 V (RMS), derates to 7 V (RMS) with 20 dB/decade at frequencies above 25 MHz. The maximum input frequency for a signal with the minimum input voltage swing and normal hysteresis setting is 400 MHz.

USB
Three USB 3.1 gen1 interfaces of type A. They are used to connect a mouse or keyboard, a USB flash drive for storing and reloading instrument settings and measurement data, and to update the firmware.

Probe Comp.
Probe compensation terminal to adjust passive probes to the input channel.

⎍ Square-wave signal for probe compensation.

⊥ Ground connector for probes.

For details, see the specifications document.

3.2.2 Side view

On the side of the instrument, you can find the computer connectors and the ground connector for probes.

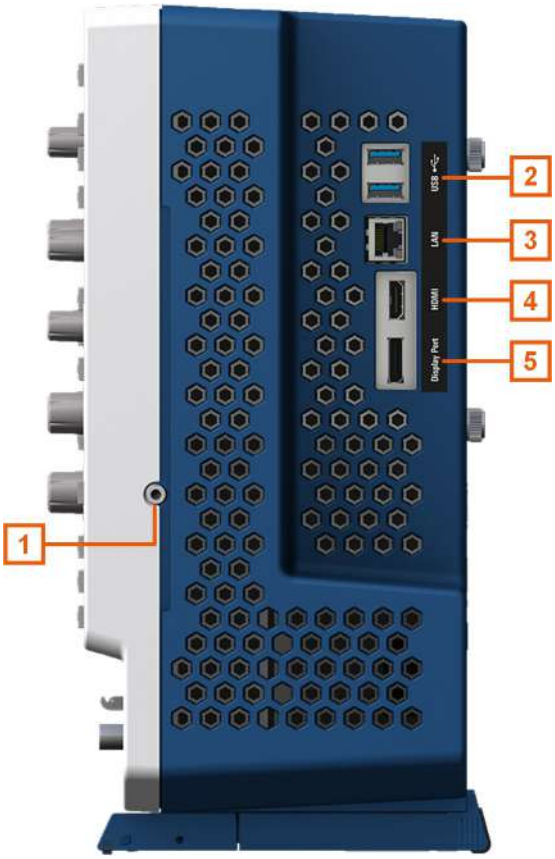

Figure 3-2: Side view of MXO 5

1 = Grounding terminal
2 = USB connector
3 = LAN connector
4 = HDMI display output
5 = DisplayPort connector

Grounding terminal ⏚
4 mm banana jack to connect ground of DUT and test fixtures, and wrist strap.

USB
Two USB 3.1 gen1 interfaces of type A.

LAN
8-pin RJ-45 connector used to connect the instrument to a Local Area Network (LAN). It supports 10/100/1000BASE-T, LXI compliant.

HDMI
HDMI Version 2.0 connector for an external monitor or projector. The monitor shows the complete content of the instrument's screen.

DisplayPort
DisplayPort connector for an external monitor or projector. It supports DisplayPort++ version 1.3.

3.2.3 Rear view

On the rear panel of the MXO 5, you find more connectors and the power supply switch.

Figure 3-3: Rear panel view of MXO 5

USB Device = USB connector, type B
Trigger Out = BNC connector for trigger out signal
Ref In 10MHz = BNC connector for incoming reference signal
Ref Out 10MHz = BNC connector for outgoing reference signal
Gen1, Gen 2 = BNC connectors for optional function generator output (option R&S MXO5-B6)
Trigger In = BNC connector for external trigger input
1 = Kensington lock slot to secure the instrument against theft
2 = AC power supply connector and mains power switch
3 = Exchangeable solid state disk (SSD, option R&S MXO5-B19)

USB Device
USB 3.1 gen1 interface of type B (device USB), to be used for remote control of the instrument.

Trigger Out
BNC output that can function as pass/fail output or trigger output.

Ref In 10 MHz
BNC input connector for 10 MHz reference frequency signals.

Ref Out 10 MHz
BNC output for 10 MHz frequency reference. Can be switched between internal and external reference.

See also: "Menu" > "Horizontal" > "Setup" tab > "Ref clock"

Gen1, Gen 2: Function generator
BNC output of the function generator, requires option R&S MXO5-B6.

Trigger In
The external trigger input is a BNC connector that is used to control the measurement by an external signal. The trigger level can be set from -5 V to 5 V.

For the external trigger input, the maximum input voltage is 400 V (V_p) and 300 V (RMS) at 1 MΩ input impedance.

Transient overvoltages on all input connectors must not exceed 400 V (V_p).

AC power supply connector and mains power switch
The instrument supports a wide range power supply. It automatically adjusts to the correct range for the applied voltage. There is no line voltage selector.

The AC mains power switch disconnects the instrument from the AC power line.

When you power up the instrument, be sure to comply with the warm-up phase specified in the specifications document before you start measurements.

3.2.4 Keys and controls

For an overview of the front panel keys, see Section 3.2.1, "Front view", on page 43.

3.2.4.1 Power key

The [Power] key is located on the lower left corner of the front panel. It starts up and shuts down the instrument's software.

The light of the key shows the instrument state, see Section 3.1.9, "Switching on or off", on page 42.

Remote command: `SYSTem:SHUTdown` on page 1065.

3.2.4.2 Trigger controls

The keys and knob in the Trigger functional block adjust the trigger and start or stop acquisition.

[Run / Stop]
Starts and stops the continuous acquisition.

The [Run / Stop] key lights green when the acquisition is running. When the acquisition is stopped, the key lights red.

Remote command:
`RUN` on page 1100
`STOP` on page 1100

[Single]
Starts a defined number of acquisitions.

The [Single] key lights green when the acquisition is running. When the acquisition is stopped, the key lights red.

Press the key again to stop a running acquisition. To set the number of acquisitions, select "Menu" > "Acquisition", and set "N-single/avg count".

Remote command:
`SINGle` on page 1100

[Level]
The rotary knob sets the trigger level for all trigger types that require one level. For trigger types with two levels, the knob sets the lower level. Turn clockwise to move up the trigger level. Press the knob to set the trigger level to 50% of the signal amplitude.

Remote command:
`TRIGger:EVENt<ev>:LEVel<n>[:VALue]` on page 1144

[Auto Norm]
Toggles the trigger mode between "Auto" and "Normal". The current setting is shown on the trigger label.

Auto	The instrument triggers repeatedly after a time interval if the trigger conditions are not fulfilled. If a real trigger occurs, it takes precedence. The time interval depends on the timebase.

Norm The instrument acquires a waveform only if a trigger occurs. The "Norm" indicator turns green.

Remote command:
TRIGger:MODE on page 1169

[Source]
Toggles the trigger source: C1, C2, C3, etc. The key lights up in the color of the selected channel.

[Slope]
Toggles the trigger slope or trigger polarity, dependent on the trigger type. The current setting is shown on the trigger label.

[Zone]
Opens the configuration for the zone trigger. A zone trigger combines the trigger condition with the intersection or non-intersection of one or more zones or masks.

Remote command:
TRIGger:ZONE:EXPRession[:DEFine] on page 1179

3.2.4.3 Horizontal controls

The rotary knobs in the Horizontal functional block adjust the horizontal parameters. These settings are effective for all channel waveforms. In addition, a [Zoom] key is available.

[Position]
The rotary knob changes the horizontal position of the waveforms. Turn clockwise to move the waveforms to the right. To set the value to zero, press the knob. The current value is shown in the "Horizontal" label above the diagram.

The horizontal position defines the zero point of the diagram. It is the time distance to the reference point, which marks the rescaling center of the horizontal scale.

In a spectrum diagram, the knob changes the center frequency.

Remote command:
TIMebase:HORizontal:POSition on page 1101
CALCulate:SPECtrum<sp>:FREQuency:CENTer on page 1312

[Scale]
The rotary knob adjusts the horizontal scale for all signals. The horizontal scale is also known as timebase.

Turn clockwise to stretch the waveforms. Doing so, the scale value *time/div* decreases. Press the knob to toggle between coarse and fine scale adjustment.

In a spectrum diagram, the knob changes the span.

Remote command:
`TIMebase:SCALe` on page 1101
`CALCulate:SPECtrum<sp>:FREQuency:SPAN` on page 1313

[Zoom]
Activates a zoom and supports the zoom setup.

If no zoom is on, the first press opens a zoom diagram for the active diagram. If at least one zoom is shown, the keypress opens the "Zoom" dialog. If only one zoom is defined, the next press closes the dialog and removes the zoom. If several zooms are defined and the dialog is open, the key toggles the zooms.

3.2.4.4 Vertical controls

The keys and knobs in the Vertical functional block select a signal and adjust the vertical scale and position of the selected signal.

Figure 3-4: Vertical controls of MXO 5 with 4 input channels

Figure 3-5: Vertical controls of MXO 5 with 8 input channels

[C<n>]
Turns on and selects a channel. If the channel is active, the key lights up in the corresponding channel color.

The effect of the keypress depends on state of the channel:
- If channel is off: turns on the channel and selects it.
- If the channel is on and in focus (selected): opens the corresponding channel dialog.
- If the channel is on, but not in focus (not selected): selects the channel waveform.
- If the channel is selected, and the dialog is open: turns off the channel, and closes the dialog.

The vertical rotary knobs are focused on the selected waveform. They are illuminated in the color of the selected waveform.

Remote command:
`CHANnel<ch>:STATe` on page 1110

[Position]
The vertical [Position] knob changes the vertical offset or the position of the selected waveform. The horizontal axis and the selected waveform are moved vertically. You can select whether the knob changes the offset or the position in the "Menu" > "Settings" > "Frontpanel" > "Knobs" dialog.

- Position indicates the vertical location in divisions.
- Offset moves the vertical center of the selected channel to the offset value.

If the selected waveform is a math or reference waveform, serial bus, or logic channel, the knob changes its vertical position.

The knob lights up in the color of the selected waveform. Turn clockwise to move up the waveform. To set the value to zero, press the knob.

The current offset value is shown in the channel icon.

Remote command:
`CHANnel<ch>:POSition` on page 1111
`CHANnel<ch>:OFFSet` on page 1111

[Scale]
Sets the vertical scale, which defines the displayed amplitude of the selected waveform.

The [Scale] knob lights up in the color of the selected waveform.

Turn the knob clockwise to stretch the waveform. Doing so, the scale value V/div decreases. Press the knob to toggle between fine and coarse adjustment. For analog waveforms, the scale value is shown in the signal icon.

To get the maximum resolution of the waveform amplitude, make sure that the waveforms cover most of the diagram's height.

Remote command:
`CHANnel<ch>:SCALe` on page 1110
`CALCulate:MATH<m>:VERTical:SCALe[:VALue]` on page 1213
`REFCurve<rc>:SCALe` on page 1223

[Gen]
Available only for MXO 5 with 4 input channels.

Opens the "Waveform Generator" dialog, if option R&S MXO5-B6 is installed.

The waveform generator can generate various function and arbitrary waveforms, sweeps, and parallel patterns. For detailed characteristics, refer to the specifications document.

[Logic]
Available only for MXO 5 with 4 input channels.

Opens the "Logic" dialog to configure and enable the logic buses L1 to L4. A logic bus (or parallel bus) has up to 16 logic (digital) channels. If logic buses are active, pressing the key toggles these buses.

The key lights up if at least one logic bus is enabled.

[Bus]
Available only for MXO 5 with 4 input channels.

Opens and closes the "Protocol" tab in the "Apps" dialog, where you can select the required serial protocol and proceed to the protocol setup. The key lights up if the decoding of a serial bus is active.

[FFT]
Available only for MXO 5 with 4 input channels.

Opens and closes the "Spectrum" dialog. The key lights up if a spectrum is active.

[Ref]
Opens the "Reference" dialog box, where you can configure and display reference waveforms. Press the key repeatedly to switch the reference waveform.

If a reference waveform is selected, the vertical rotary knobs are illuminated in white or light gray (default colors), depending on the selected waveform.

[Math]
Opens the "Math" dialog, where you can configure the calculation of mathematical waveforms using various mathematic operations on other waveforms. Press the key repeatedly to toggle the selected math waveform. If no math waveform is active, the key closes the dialog.

If a math waveform is selected, the vertical rotary knobs are illuminated in blue (default color).

3.2.4.5 Analysis keys

The controls in the bottom functional block have various functions.

[Multiuse]
The multiuse knob changes the element that is in focus. It lights up when a function is active on the knob.

- If a numeric entry field in a dialog has the focus: turn to increase or decrease the value. Press the knob to toggle fine and coarse increment.

- If a cursor set has the focus: press to toggle the cursor line, and turn to adjust its position.
- If a zoom has the focus: press to toggle the edges of the zoom, and turn to adjust its position.
- If a gate has the focus: press to toggle the complete gate and the edges of the gate, and turn to adjust its position.
- To change the intensity, press the [Intensity] key and turn the knob.

[Intensity]
Adjusts the intensity of the waveforms on the screen: Press the [Intensity] key and turn the [Multiuse] knob. The current value is shown in the input box in the upper right corner of the screen.

[Cursor]
Starts a cursor measurement: sets vertical and horizontal cursors in the active diagram, and displays results of the cursor measurement. If cursors are already set, the keypress opens the "Cursor" dialog, where you can adjust the settings. The next keypress closes the dialog.

Cursors are markers which are placed at points of interest on a waveform. The instrument measures the cursor positions and delta values between parallel cursors.

If cursors are already set but not in focus, pressing the key sets the focus on the cursor set. You can adjust the cursor lines using the [Multiuse] knob.

If a cursor set has the focus, the key opens the "Cursor" dialog. If one cursor set is "On", the next press closes the dialog. If several cursors are "On", pressing the key toggles the cursor sets.

[Measure]
Opens the "Measurement" dialog, where you can set up various measurements. If the dialog is open, pressing the key closes the dialog.

[History]
Activates the history and opens the history player. The next keypress closes the player. The history shows stored acquisitions that were acquired before the current one. The key is illuminated as long as the history is active.

[HD]
Activates the high definition mode and opens the HD settings dialog.

If the dialog is open, pressing the key closes the dialog. If the dialog is closed, the key disables the high definition mode. The key is illuminated as long as the HD mode is active.

[Touch Lock]
Locks the touchscreen to prevent unintended use. When the touchscreen is off, the key is illuminated. Press again to unlock the touchscreen.

Camera
Performs the action that is assigned to the key in "Settings" > "Front panel" > "Hardkeys". By default, the key saves a screenshot of the waveform display.

[Preset]
Resets the instrument to a predefined state and starts the continuous acquisition. All measurements, mask tests, zoom, and most individual settings are deleted, and all channels except for channel 1 are disabled.

You can define preset configurations and save them to a file. The [Preset] key can be configured to set either factory defaults or a user-defined preset configuration.

[Autoset]
The instrument analyzes the enabled channel signals, and adjusts appropriate horizontal, vertical, and trigger settings to display stable waveforms.

In particular, the horizontal scale is set to a common value for all active channels, record length and sample rate are set to automatic detection. Vertical scale and offset are set for each channel individually. Probe settings, channel coupling and impedance remain unchanged. The trigger source is set to the signal with the lowest frequency, and the trigger type to positive edge. The trigger level is adjusted, and the trigger position is set to the reference point. Measurements, math and spectrum waveforms are kept. Undo and redo of an autoset is possible.

[Clear]
Deletes all measurement results including long-term measurement and statistics, all waveforms, and the history.

Apps
Opens the "Apps" dialog, where you can start an application, serial protocol or another analysis function.

3.2.5 Checking the functionality

To check if the instrument works correctly, you can use the probe compensation signal and check the displayed signal.

1. Perform a self-alignment of the instrument:
   a) Warm up the instrument. The minimum warm-up time is indicated in the specifications document.
   b) Remove all probes from the input connectors.
   c) Open the "Menu", and select "Settings" > "Maintenance" > "Alignment".
   d) Tap "Start Alignment". Wait until the alignment has finished successfully.
2. Connect the probe's ground connector to the ground pin ⊥, and the tip to the square wave pin ⎍.
3. Press the [Preset] key.
4. Connect the probe to the input connector [C1].
   The instrument recognizes the probe, and a signal is displayed in the diagram.
5. Tap the signal icon of C1 to open the vertical settings.
6. In the "Vertical" > "Setup" dialog, adjust the following:

- "Scale" = 600 mV/div
- "Offset" = 900 mV

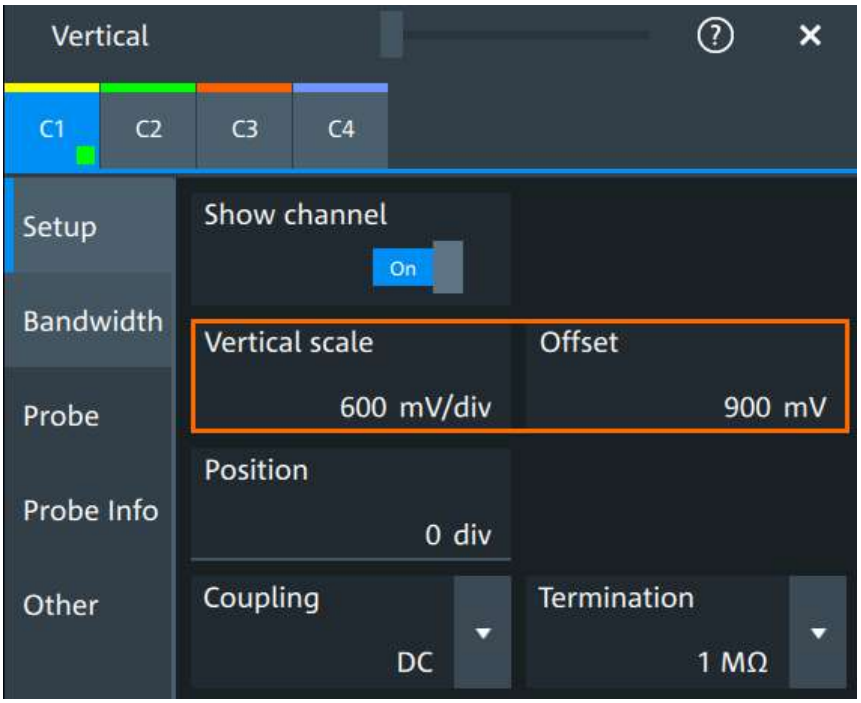

7. Turn the horizontal [Scale] knob to set the horizontal scale to 1 ms/div.
8. Press the [Source] key to set the trigger source to C1. The color of the key indicates the selected channel.
9. Turn the [Level] knob to set the trigger level to 300 mV.
10. Check the rectangle signal on the screen. The displayed signal should have an amplitude of about 3.3 V, which covers 5.5 divisions.

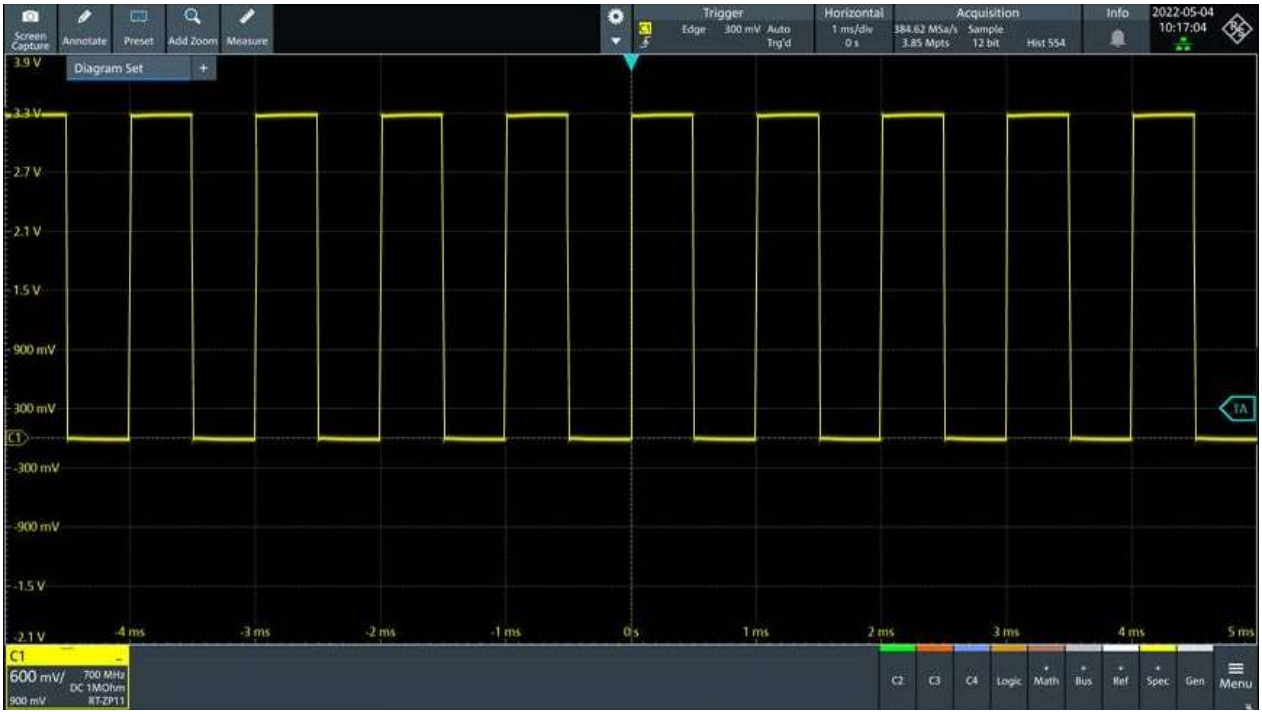

11. Repeat steps 4 to 10 for all other channels. Make sure to adjust the vertical settings for the connected channel, and also to set the trigger source to the connected channel.

4 Operating the instrument

There are three ways to operate the MXO 5.

Manual operation

Use the touchscreen, keys and rotary knobs, or an optional mouse and/or keyboard. The principles of manual operation are explained in this section.

Remote control

Create programs to automatize repeating settings, tests, and measurements. The instrument is connected to a computer that runs the program.

This way of operation is described in: Section 18, "Remote control commands", on page 1047.

Remote operation

For remote monitoring and operation of the instrument, a VNC server is installed on the MXO 5. You need a LAN connection to the computer, and a VNC client or web browser to connect to the instrument.

For details, refer to Section 17, "Network operation", on page 1011.

4.1 Means of manual interaction

The MXO 5 provides the following means of manual interaction, which you can use alternatively or complementary:

- Touchscreen:
  Using the touchscreen allows for direct interaction with the instrument. Use your finger to place waveforms on the screen, mark areas for zoom, set parameters in dialogs, enter data, and much more. The control elements and actions on the screen are based on common concepts, and you easily become familiar with the user interface.

  Tapping the screen works like clicking mouse buttons:

  – Tap = click: Selects a waveform or parameter, or provokes an action.
  – Double-tap = double-click: Has the same effect as touch and hold, it opens the on-screen keyboard or keypad, or a specific editor if available.

  Use gestures to scale the waveform:

  – Spread or pinch two fingers horizontally to change the time scale.
  – Spread or pinch two fingers vertically to change the vertical scale of the active waveform.
- Function keys and rotary knobs:
  The front panel provides frequently used functions and controls to operate the instrument. Use knobs to set levels and scales, and keys to initiate actions and to open dialogs.

- Optional mouse and/or keyboard
  These devices work in the normal manner.

4.2 Touchscreen display

4.2.1 Information on the display

The GUI shows the waveforms and measurement results, and also information and everything that you need to control the measurements. All waveform-related GUI elements are explained in this section. An overview of control elements - like dialog, toolbar - is given in Section 4.2.2, "Control elements on the GUI", on page 62.

Figure 4-1: Information in the graphical user interface

1 = Diagram
2 = Layout
3 = Trigger position
4 = Toolbar
5 = Grid
6 = Trigger, horizontal and acquisition label
7 = Info
8 = Trigger level

9 = Menu
10 = Signal bar with signal activators (10a), and active waveforms (10b)
11 = Waveform markers indicate the offset of the waveforms

Diagram
A diagram shows one or more waveforms: analog and digital channels, reference and math waveforms, tracks, and serial buses. Zoom details, spectrum and other special waveforms are shown in separate diagrams. One diagram can hold up to 16 analog waveforms, i.e. analog channels, reference and math waveforms, and tracks.

To arrange the diagrams on the screen, the Rohde & Schwarz SmartGrid function helps you to find the target place simply and quickly. For details, see Section 4.7, "Rohde & Schwarz SmartGrid", on page 74. You can also adjust the diagram size by dragging the diagram border.

Layout tab
A layout shows a set of diagrams and result tables. You can configure up to four layout tabs using the SmartGrid functionality. For details, see Section 4.7, "Rohde & Schwarz SmartGrid", on page 74.

Grid
The grid shows the vertical and horizontal divisions. The division lines are labeled with the correspondent values. The grid labels have the color of the waveform to which they belong. If several waveforms are shown in one diagram, the grid has the color of the selected waveform.

Trigger position and trigger level
The blue markers show the horizontal position of the trigger and the vertical trigger level. You can touch and move the trigger markers in the diagram to set the positions. The trigger point is the zero point of the diagram.

The trigger position can be moved outside the diagram.

Trigger
The "Trigger" label shows the main trigger settings. If you tap the label, the corresponding dialog opens.

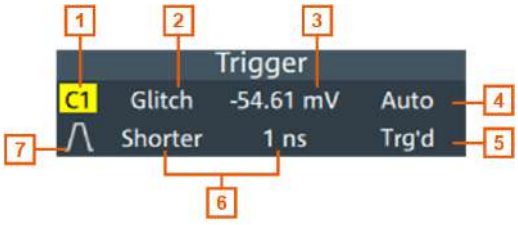

Figure 4-2: Trigger label

1 = Trigger source
2 = Trigger type
3 = Trigger level
4 = Trigger mode
5 = Trigger state
6 = Trigger type specific settings
7 = Trigger slope

See also: Section 7.1.1, "Trigger information", on page 168.

Horizontal
The "Horizontal" label shows the main timebase settings. If you tap the label, the corresponding dialog opens.



Figure 4-3: Horizontal label

1 = Time scale
2 = Horizontal position

Acquisition
The "Acquisition" label shows the main acquisition settings, and the progress of long acquisitions. If you tap the label, the corresponding dialog opens.

Figure 4-4: Acquisition label

1 = Sample rate (before interpolation)
2 = Record length. A yellow warning icon indicates insufficient memory.
3 = Acquisition mode
4 = Number of acquired waveforms
5 = Resolution. Active high definition mode is indicated by "HD".

Info
The "Info" button on the toolbar points to the status messages and other information. To open the message box, tap the button.

See also: Section 4.13, "Information and notifications", on page 83.

Signal bar
The signal bar summarizes all waveforms as described in Section 4.5, "Signal bar", on page 71.

4.2.2 Control elements on the GUI

The GUI provides everything that you need for control, to analyze waveforms, and to get measurement results. Figure 4-5 shows the control elements at a glance.

Figure 4-5: Control elements on the graphical user interface

1 = Toolbar
2 = Tab in a dialog
3 = Dialog
4 = Result table
5 = Signal bar
6 = Menu

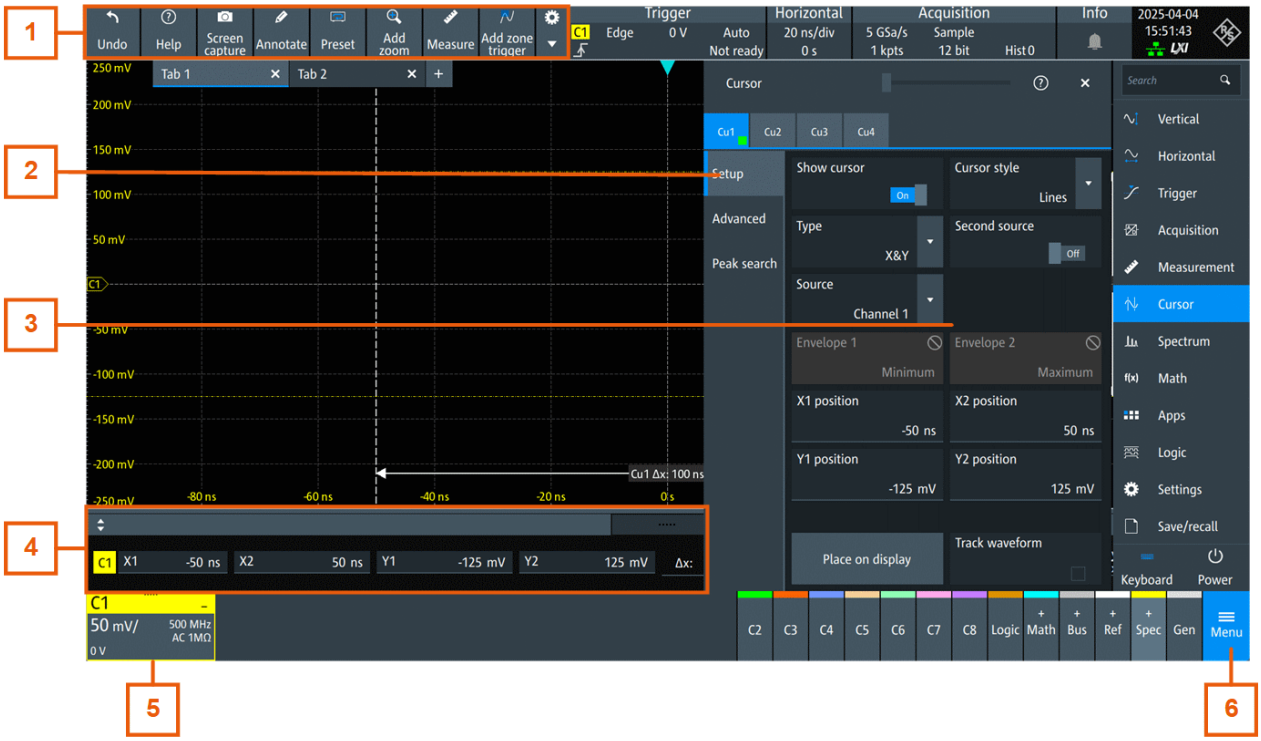

Figure 4-6: Control elements on the graphical user interface

1 = Toolbar
2 = Tab in a dialog
3 = Dialog
4 = Result table
5 = Signal bar
6 = Menu

Toolbar (1)

The icons on the toolbar provide quick and easy access to the most important functionality. For a detailed description, refer to Section 4.4, "Toolbar", on page 66.

If you adjust the settings of an analyzing function, e.g., cursor measurement, the overlay menu is shown instead of the icons. The overlay menu provides the most important settings of the current action. If you need more settings, "Setup" opens the corresponding dialog.

Dialog (2, 3)

The tabs of the dialogs contain all task-oriented settings and operations, and buttons for calling related tabs. The usage of dialogs is described in Section 4.9, "Using dialogs", on page 77.

Result table (4)

If you perform cursor or automatic measurements, the result table shows the results of the action below the diagrams. You can move the result tables to the left or right of the diagrams.

See also: Section 4.11, "Displaying results", on page 80.

Signal bar (5)
The signal bar summarizes all waveforms as described in Section 4.5, "Signal bar", on page 71.

Menu (6)
The menu provides access to the complete functionality of the MXO 5.

At the bottom of the menu, you find the "Keyboard" icon to open the on-screen keyboard. The "Power" icon shuts down the firmware.

At the top of the menu, you can find a search field for a quick access to any parameter you need. A list of all found results is shown on the left side of the menu. Tap the result entry and the dialog containing this parameter opens.

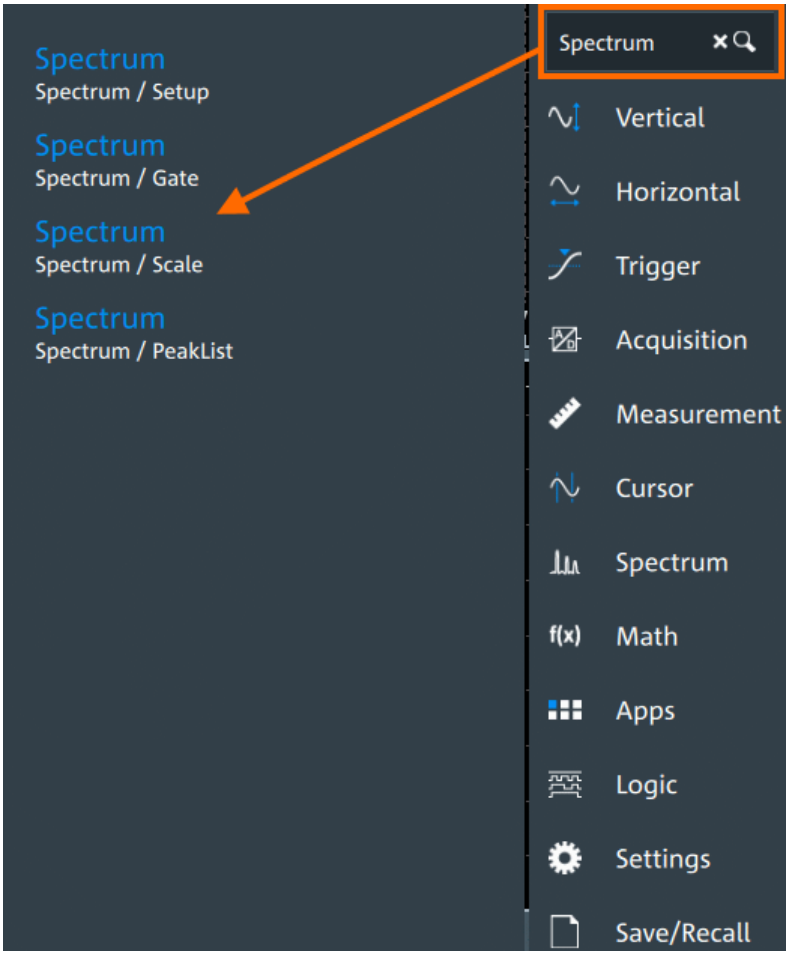

4.3 Applications

The "Apps" dialog provides fast access to all available applications, for example, to serial protocols, frequency response analysis or file browser.

► To open the "Apps" dialog:

- Open "Menu" > "Apps".
- Press the [Apps] key on the front panel.

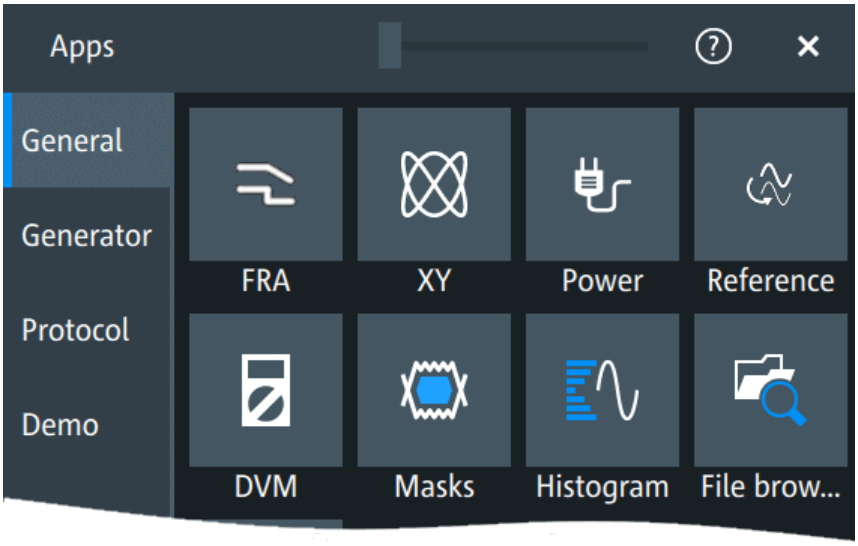

4.4 Toolbar

The toolbar provides direct access to important control and measurement functions.

By default, the toolbar shows the most frequently used functions. You can configure the content of the toolbar, see Section 4.4.2, "Configuring the toolbar", on page 67.

4.4.1 Using the toolbar

Using the toolbar is easy and straightforward.

Some of the toolbar functions are one-click actions. These actions are performed immediately when you tap the icon.

Other toolbar functions are analyzing functions. These actions are interactive actions.

To use analyzing functions (interactive actions)

1. Tap the icon of the function in the toolbar.
2. Check and adjust the settings in the overlay menu.
3. Select the source waveform if needed. For zoom, drag a rectangle, or tap the diagram to define the zoom area.
4. If the overlay menu does not close automatically, tap the icon.

4.4.2 Configuring the toolbar

You can configure the content of the toolbar so that only the required functions are displayed.

The toolbar configuration is part of the user preferences. It is retained when you switch off and on the instrument, and you can save it in the user preferences and user-defined preset.

1. To open the toolbar configuration, tap the icon in the toolbar:

2. Select the required toolbar functions:
   a) In the "Show/Hide tools" section, disable all functions that you do not need.
   b) In the "Show/Hide tools" section, enable the functions that you want to add to the toolbar.
   c) In the "Drag to rearrange tools" section, move the icons to arrange them as required.
3. To empty the toolbar, select "Deslect all".
4. To get the factory configuration of the toolbar, select "Restore default".

A detailed description of the toolbar functions is given in Section 4.4.3, "Toolbar functions", on page 67.

Remote commands:

- `DISPlay:TOOLbar:COUNt?` on page 1073
- `DISPlay:TOOLbar:DESelect` on page 1074
- `DISPlay:TOOLbar:RESTore` on page 1074

4.4.3 Toolbar functions

This section describes all toolbar functions.

You can configure the content of the toolbar, see Section 4.4.2, "Configuring the toolbar", on page 67.

Undo....68
Redo....68
Help....68
Recall....68
Save setup....68
Screenshot....69
Annotate....69
Clear....69
Autoset....69
Preset....69

Run / stop and Run single....69
Force trigger....69
Add zoom....69
Add cursor....69
Measure....69
Add mask....70
Histogram....70
Add gate....70
Edit spectrum....70
Save waveform....70
Add zone trigger....70
Delete....70
File browser....70
DVM....70
XY....70
Get signals....71
Image viewer....71
Gen1, Gen2....71

Undo
Undoes the last setting actions step by step. On a keyboard, you can use the shortcut [Ctrl]+[Z].

Some actions cannot be revoked: locking the touchscreen with [Touch Lock], and saving data.

The undo stack is deleted when reloading settings from file, and during reference waveform actions (save, load and preset with active reference waveform).

Redo
Recovers the undo steps in reverse order. On a keyboard, you can use the shortcut [Ctrl]+[Y].

Help
Enables the context help display. The help window opens when you tap a parameter.

See also: "To display the context help" on page 85.

Recall
Opens a window to select and load instrument settings that were previously stored in a saveset.

Save setup
Saves the current instrument settings in a saveset.

You can reload the saveset using the "Recall" toolbar icon, or using "Menu" >"Save/ recall" > "Recall" tab > "Saveset".

The filename is created according to the autonaming pattern, defined in "Menu" > "Settings" > "Save / recall" > "Autonaming" tab.

Screenshot
Saves a screenshot of the current display using the settings defined in "Menu" >"Save/ recall" > "Save" tab > "Screenshot".

Annotate
Displays drawing tools for marking areas on the diagram, and for adding text. You can also select the color.

See also: Section 4.12, "Adding annotations", on page 81.

Clear
Deletes all measurement results including all waveforms and statistics.

Remote command:
`DISPlay:CLR` on page 1094

Autoset
Performs an autoset. The instrument analyzes the enabled channel signals, and adjusts appropriate horizontal, vertical, and trigger settings to display stable waveforms.

The icon has the same functionality as the corresponding key on the front panel. It is useful when you operate the instrument remotely.

Preset
Resets the instrument to a predefined state and starts the continuous acquisition. All measurements, mask tests, zoom, and most individual settings are deleted, and all channels except for channel 1 are disabled.

The icon has the same functionality as the corresponding key on the front panel. It is useful when you operate the instrument remotely.

Run / stop and Run single
Starts and stops the continuous acquisition, or starts a defined number of acquisition cycles. The icons have the same functionality as the corresponding keys on the front panel. They are useful when you operate the instrument remotely.

Force trigger
Starts an immediate single acquisition. If the acquisition is running in normal mode and no valid trigger occurs, use "Force trigger" to confirm that a signal is available. Then you can use the displayed waveform to determine how to trigger on it.

Add zoom
Adds a zoom diagram, an area of the acquired waveform which is visually enlarged. Click a diagram to create a zoom or draw a rectangle to define the range of the zoom.

Add cursor
Adds a cursor set. Select the cursor type and the source to be measured.

See also: Section 10.1, "Cursor measurements", on page 264.

Measure
Adds one or more measurements to the waveform.

Tap the icon, and select the category and the measurements in the overlay menu. Select the waveform to be measured, and close the overlay menu.

Add mask
Starts the on-screen mask definition and the testing against the defined mask.

Tap the icon and draw a rectangle for the first mask segment. Use the overlay menu to add more segments to the mask, to create more masks, and to edit mask segments on the display. You can also move the mask segments on the screen.

Histogram
Creates a histogram. Tapping the icon opens the overlay menu, where you select the histogram type. Tap a diagram, or drag a rectangle on the diagram to define the histogram window. The histogram for the selected waveform is created.

Add gate
Creates a new gate.

Tap the icon, and then tap the diagram or draw a rectangle to define the limits of the gate. The "Gate" dialog opens, where you can adjust the geate settings and add measurements to use the gate.

Edit spectrum
Edit the existing spectrum settings in the overlay menu.

Save waveform
Saves the selected waveform.

Add zone trigger
Defines a zone trigger, which combines the trigger condition with the intersection or non-intersection of one or more zones.

See also: Section 7.9, "Zone trigger", on page 203.

Delete
Removes waveforms, diagrams, zooms, trigger zones and other elements from the display.

Tap the "Delete" icon. A recycle bin icon marks all objects that can be deleted. Tap this icon to remove an object. Tap the "Delete" icon again to disable the function.

File browser
Opens the file browser dialog.

See: Section 13.9, "File browser dialog", on page 505.

DVM
Starts the digital voltmeter application.

See: Section 12.5, "Digital voltmeter", on page 454.

XY
Starts the XY-plot application.

See: Section 12.6, "XY-plot", on page 457.

Get signals
Imports the active analog channel waveforms from the connected oscilloscope.

See Section 17.2, "ScopeSync", on page 1013.

Image viewer
Starts the screenshot viewer.

See: Section 13.8.3, "Image viewer", on page 505.

Gen1, Gen2
Turns on or off the waveform generator. For better visibility, a gererator icon is darker than the other icons in the toolbar.

4.5 Signal bar

The signal bar is the control center for all waveforms. All enabled waveforms are shown on the left side of the signal bar. On the right side of the signal bar, you see the signal activators of inactive waveforms and buses. On the right of the signal bar, you find signal activators for the waveform generator and ScopeSync connections.

When you tap a signal activator, the corresponding dialog opens. to enable the waveform. The signal activators for analog and digital channels and for math waveforms also activate the waveform.

Each waveform is represented by a signal icon. If the waveform is shown in a diagram, the signal icon displays its main settings. If you tap a signal icon, the dialog with settings for this waveform opens. If you tap the "Minimize" icon on the signal icon, the waveform switches from the diagram area to the signal icon: the icon is grayed out. See Section 4.6, "Working with waveforms", on page 72 for a detailed description.

In Figure 4-1, the signal icons C1, C2 and C3 show the main settings, and the waveforms are displayed in diagrams.



Figure 4-7: Signal label of an active analog channel

1 = Vertical scale
2 = Offset
3 = Bandwidth
4 = Coupling and termination

If many waveforms are active, then waveforms of the same type are grouped in one signal icon. Tap the group icon to open the individual signal icons.

4.6 Working with waveforms

The MXO 5 can create and display many waveform types. The most important are:

- Channel waveforms:
  For each analog input channel, one channel waveform is shown.
- Reference waveforms:
  Reference waveforms can be used as reference for comparison and analysis.
- Math waveforms:
  Mathematic waveforms can be created with mathematic operations performed on channel, reference, and other math waveforms.
- Zoom waveforms:
  Zoom waveforms show the details of waveforms.
- Digital waveforms:
  The Mixed Signal Option R&S MXO5-B1 provides 16 digital channels grouped in two logic probes (pods) with 8 channels each.

Waveform handling

The MXO 5 can show and analyze many waveforms. To handle this multitude while keeping track of it, the MXO 5 provides intelligent support:

- The color system helps to distinguish the waveforms.
  The color of the vertical rotary knobs indicates the signal that is focused (selected).
  The color of each waveform can be changed, the color of its signal icon and of the illuminated keys is adjusted to the new color. Alternatively, a color table can be assigned to a waveform.
  Settings: "Menu" > "Settings" > "Appearance" > "Colors" tab.
- You can arrange the waveforms in one diagram, or in separate diagrams. The Rohde & Schwarz SmartGrid function helps to arrange the waveforms.
  See also: "Diagram" on page 61.

Waveform states

Depending on its place on the screen and the effect of settings, a waveform has one of the following states:

- Off
- Active:
  The waveform is shown in a diagram
- Selected:
  One of the active waveforms that has the focus. In each diagram, one of the assigned waveforms is selected – it appears "on top" in the diagram, and the grid labels have the color of the selected waveform.
  The vertical [Position] and the [Scale] knobs are illuminated with the color of the selected waveform.
- Minimized:
  The waveform signal icon is greyed out, and the waveform is removed from the diagram.

To switch a waveform on

A channel waveform is activated when you connect the probe. You can switch it on and off according to your needs.

► Choose one of the following ways:

- Press the channel key.
- Select the signal activator in the signal bar.
- In the "Vertical" dialog box, select the channel. Tap "State" > "On".

The waveform is now active, selected, and is shown in the diagram.

Remote command: `CHANnel<ch>:STATe` on page 1110

To select a waveform

► Choose one of the following ways:

- Tap the waveform in the waveform diagram.
- Tap the signal icon.
- To select a channel, reference, or math waveform, press the corresponding key.

Note: Zoom waveforms in zoom diagrams cannot be selected.

To minimize a waveform

► Tap the "Minimize" icon in the upper right corner of the waveform's signal icon in the signal bar.

The waveform disappears from the diagram and the signal icon turns lighter gray.

► To set the waveform back to its previous diagram immediately, use "Undo".

To arrange a waveform using the SmartGrid

► See Section 4.7, "Rohde & Schwarz SmartGrid", on page 74.

To switch off a waveform

► Do one of the following:

- Tap the "Delete" icon in the toolbar, and then signal icon of the waveform. You can also tap the waveform directly. If several waveforms overlap or lie close together, a selection list is shown.
- To switch off a minimized waveform, tap the "Close" icon in the upper right corner of the signal icon.
- If the waveform is an input channel:
  - Disable "State" in the "Vertical" > "Setup" tab.
  - Select the channel. Then press its channel key twice.

Remote command: `CHANnel<ch>:STATe` on page 1110

4.7 Rohde & Schwarz SmartGrid

The Rohde & Schwarz SmartGrid helps to create and arrange the diagrams on the screen with drag&drop. The diagram layout depends on the position where you drop the signal icon, in relation to an existing diagram.

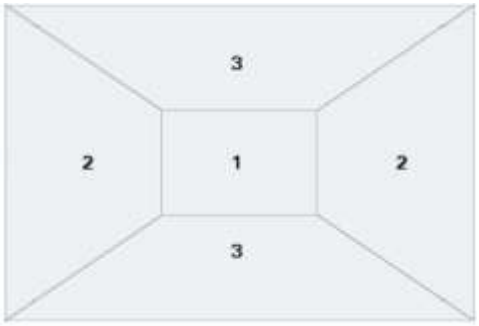

Figure 4-8: SmartGrid positions

1 = In the existing diagram, overlay of signal
2 = New diagram on the left or right
3 = New diagram above or below

The diagram configuration is deleted when you use "Preset" or `*RST`.

To arrange a waveform using the SmartGrid

1. Select the layout that you want to rearrange.
2. Drag the signal icon to the diagram area, and move it around.
   The Rohde & Schwarz SmartGrid appears and a blue or highlighted area shows where the waveform will be placed.

3. Drop the waveform in the target area.

The waveform appears in an existing or in a new diagram, and it is selected for further actions.

4. To change the size of a diagram, touch the border between two diagram frames and drag it to the required position.
5. If a diagram is empty, you see a trash can icon in the diagram center. Use the icon to delete the diagram, or drag waveform icons into the diagram.

Remote commands: see Section 18.8.3, "SmartGrid", on page 1067.

Working with layouts

A SmartGrid configuration of one or more diagrams is called "tab" or "layout". You can define several layouts and switch between them.

1 = Tab 1 (layout 1, blue underline indicates that the set is currently displayed)
2 = Tab 2 (layout 2)
3 = Tap to remove a layout
4 = Tap to add a layout

You can add up to four layouts at the upper left corner of the screen:

1. Tap on the ⊞ icon next to the layout.

   A new layout is created.
2. To change the layout name, touch and hold the tab name. The on-screen keyboard opens to enter the new name. Names must be unique.
3. To remove the layout, tap on the ⊠ next to the layouts title.

4.8 Using the selection menu

The selection menu, or comb menu, helps select objects on the screen if several objects are close beside. These objects are, for example, waveforms, zoom edges, gate limits, trigger zones and cursor lines. When you tap or click a point in a diagram, the firmware determines the objects around the point and provides an appropriate menu. Each found object is represented by a comb. The selection menu is created and arranged anew at each finger tap, there are no predefined positions for the objects.

Table 4-1: Selection menu icons

Symbol	Description
	Comb
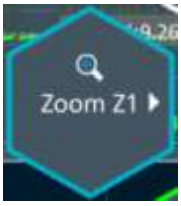	: indicates that a submenu is available. If more than 6 objects are detected, related objects are grouped to submenus. Tap on the object group to display the submenu
	: indicates that there are more than 6 objects that are available. In this case some of the objects are not directly displayed. Tap on one of the combs and rotate the selection to display all the choices.

To use the selection menu

1. Tap the screen at the point of interest.

   The selection menu provides all objects that were found around the point. In the image below, the objects of "Cursor Cu1" and "Zoom Z1" are grouped in submenus.

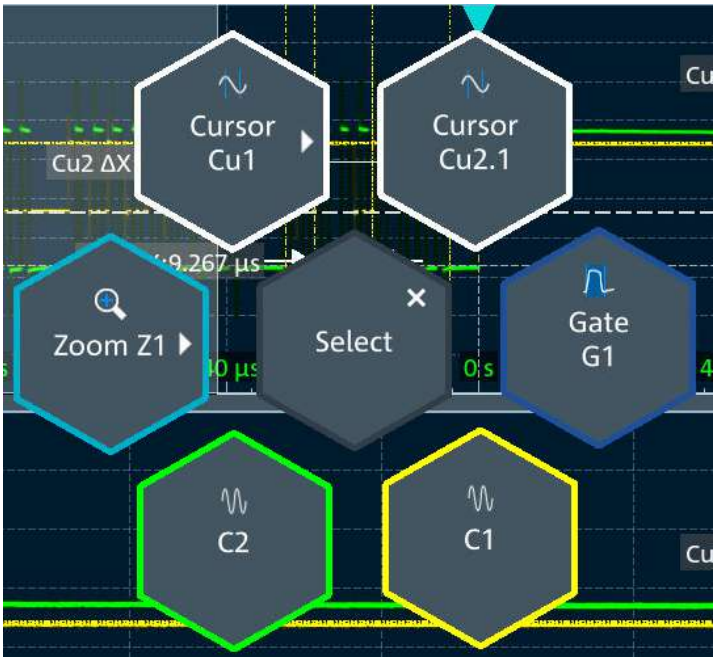

2. Select the comb of the needed object, or object group.
3. If you have selected an object, the object gets the focus. Change its position directly on the screen or with the [Multiuse] knob, or perform other actions depending on the selected object.
4. If you have selected an object group, the submenu opens.

   The image shows the submenu of "Zoom Z1".

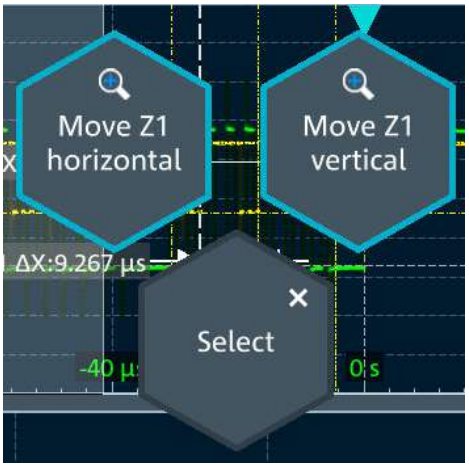

5. In the submenu, select the comb of the needed object.
6. Modify the selected object as required.

4.9 Using dialogs

All functionality is provided in dialogs as known from computer programs. This section provides an overview of the accessing methods and describes how to use the dialogs.

Each dialog has icons in the upper right corner:

	Closes the dialog.
	Opens the help window for the dialog.
	Shift sideways to change the transparency of the dialog.

For direct access to important control and measurement functions, use the toolbar, see Section 4.4, "Toolbar", on page 66.

To open a dialog

► Perform one of the following actions:

- Open the "Menu", and select the menu entry.
- Press the function key on the front panel.
- Double-tap a result to open the corresponding settings dialog.
- To open the "Vertical" dialog of a waveform, tap the signal icon.
- Tap the "Horizontal", "Acquisition" or "Trigger" label to open the corresponding dialog.

To close a dialog

► Tap the "Close" icon in the upper right corner.

4.10 Entering data

To set parameter values and enter other data, you use the various knobs and the on-screen keypad or keyboard.

To use scale, position and level knobs

The instrument has dedicated rotary knobs to set vertical and horizontal positions and scale, and the trigger level.

1. Turn the knob to change the value.
2. Press the knob:
   - [Scale]: to toggle the increment.
   - [Position]: to set to zero.
   - [Level]: to set the trigger level to 50% of the signal.

To enter values with the on-screen keypad

To enter numeric values and units in dialogs, an on-screen keypad is available.

1. Double-tap the entry field. The on-screen keypad opens.

2. Enter a numeric value using the following methods:
   - To use the default value, tap "Reset" (if available).
   - To get the value that was used before the keypad was displayed, tap "CE".
   - To use the minimum or maximum value, tap "Min" or "Max", respectively.
   - To increase the displayed value in fixed steps, tap "Inc".
     To decrease the value in fixed steps, tap "Dec".
   - To enter a user-defined value, tap the numbers and complete the entry by tapping the unit button.
     – "±" changes the sign of the value.
   - To calculate a value, tap the calculator to display the arithmetic operators. Use the displayed fields to calculate your values.

3. To activate caps lock when you enter a text value, double-tap the shift key (up arrow key).

4. Tap ↵ to complete the entry.

To enable the on-screen keyboard

1. Tap "Menu".
2. Tap on "Keyboard" to enable the on-screen keyboard.

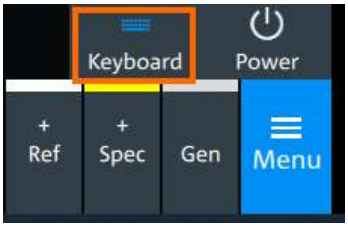

If the on-screen keyboard is enabled, the keyboard icon is colored blue. If it is disabled, the color is white.

To enter data with the on-screen keyboard

1. Double-tap the entry field to open the on-screen keyboard.

2. Enter the text as you would on a normal keyboard.
   - To change the language, tap 🌐. The current language is shown on the blank key.
   - To display numbers and signs, tap &123.
3. Tap ↵ to complete the entry or ⌨ to minimize the keyboard.

4.11 Displaying results

The results of measurements, protocol decoding and others are displayed immediately.

The font size can be adjusted.

To arrange the results on the display

1. Touch and hold the "....." field on top of the results table.

2. Drag on the screen. The SmartGrid indicates where the result table can be placed. Drop the box on one of the buttons. The results are shown at the left the right, or below the diagrams.

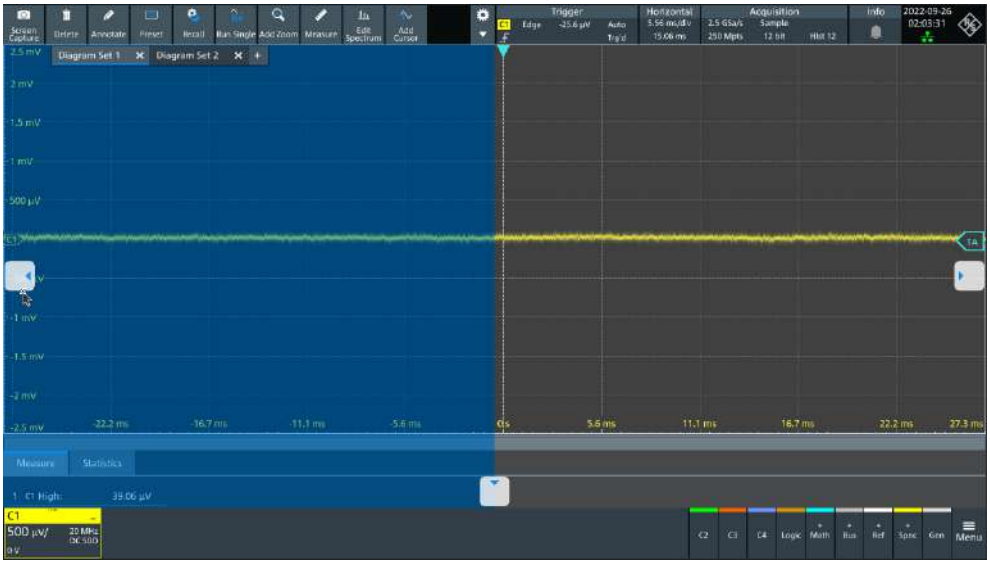

To open the corresponding settings

► Double-tap one of the result values.

The corresponding dialog opens.

To adjust the font size of results

1. Open the "Menu" > "Settings" > "Appearance" dialog.
2. Select the "Dialogs" tab.
3. Set the "Result dialog" > "Font size".

4.12 Adding annotations

The MXO 5 provides an easy way to add annotations to the screen. With the toolbar "Annotate" you can add text, forms or even draw.

To add an annotation

1. On the toolbar, tap on the "Annotate" icon.

The annotation overlay menu opens.

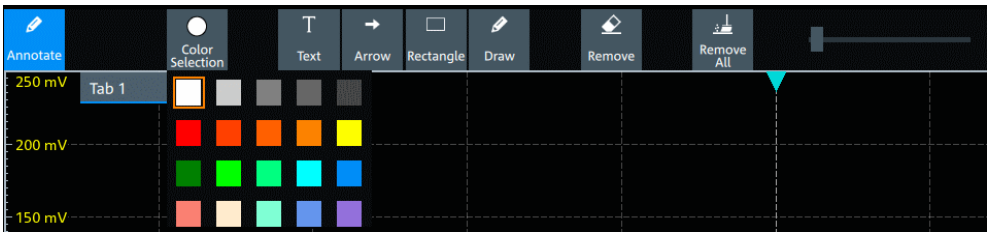

2. Tap "Color selection" and select the color that you want to use for your annotations.
3. Add one or more of the following:
   - One of the predefined forms: "Arrow" or "Rectangle"
   - "Text": adds a text element to the screen and opens on-screen keyboard. You can change the text later, by tapping on an existing annotation and typing in the new text.
   - "Draw": you can draw any form on the screen.

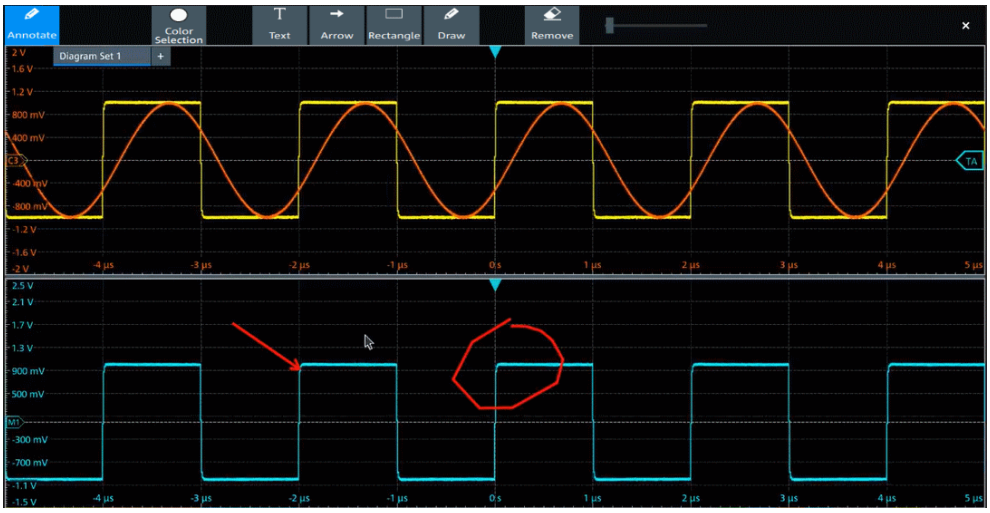

4. To move one of the annotations, tap on it and drag it to the required position.

To remove an annotation

1. In the "Annotate" overlay menu, tap on "Remove".
2. Tap on any existing "Arrow", "Rectangle" or "Text" annotation to remove it.
3. The "Remove" function, acts as an eraser on drawings: it enables you to erase only certain parts of your drawing. Drag your finger over any part of your drawing to erase it.
4. To remove all annotations from the screen, tap on "Remove all".

Remote commands: see Section 18.8.5, "Annotations", on page 1074.

4.13 Information and notifications

The MXO 5 provides various information:

- Instrument information, e.g. connection status, firmware version
- Notifications, e.g. status messages, incompatible settings, insuffcient memory
- Progress information, e.g. for long acquisitions, data saving

Instrument information

In the upper right corner of the screen, you see the Rohde & Schwarz logo, date and time, the symbolic information on LAN connection and the notifications status.



The connection status icon in the upper right corner indicates the status of the LAN connection.

- Green indicates that the instrument is connected to the LAN.
- Red indicates a connection error - mostly the LAN cable is not connected.
- Blinking indicates that the device indicator on the instrument's homepage is switched on, and a device identification command was sent.

► To see the instrument information, select the Rohde & Schwarz logo.

You can find information about the instrument model, bandwidth, network settings, firmware version and operating time.

► To hide the date and time or change the display format, select the date/time display.

Notifications

Notifications are status messages, information on mismatching settings, insufficient memory and similar information. They are displayed for a few seconds and saved.

► To read the notifications, select "Info".

You can delete the list of notifications.

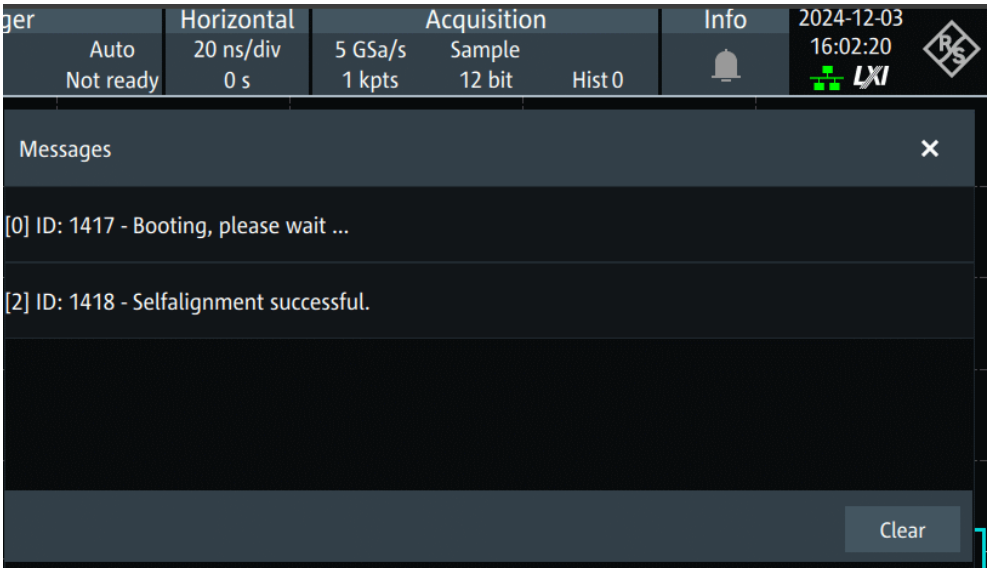

Progress information

If an acquisition, operation or process takes more time until results are displayed, a progress bar or symbol indicates that a process is running.

The progress of saving operations and update or creation of a reference waveform is shown in a progress bar. You can cancel the process. A notification informs about the result.

Figure 4-9: Progress bar for saving waveform data

The progress of running acquisitions is shown in the acquisition label. A circle indicates the state of the current, incomplete acquisition. Progress in roll mode, average mode and single acquisition with N > 1 is indicated by a progress bar and counter.

Figure 4-10: Progress of incomplete long acquisition in average mode, Run single = 5, first acquisition is finished

4.14 Getting user assistance

If you need information on the functionality, you can use the integrated product help. It provides contextual information on a setting or dialog. If the help window is open,

you can browse and search for further information using links, table of contents, and search.

4.14.1 Displaying help

To display the context help

1. Enable the "Help" icon on the toolbar.



2. Tap the parameter for which you need information.

   The "Help" window opens and displays the comprehensive description and the corresponding remote command. You can browse the help for further information.

To open a dialog help

1. Open a dialog.
2. Tap the "Help" icon in the dialog header.
3. Tap a subtab or menu item.

   The help window opens with the dialog help page, where you can select the topics.

4.14.2 Using help

You can find a specific information and navigate the contents by following means:

- Table of contents
- Buttons in the help window title:

  – "Home": Go to the start page
  – "Back", "Forward": Browse the pages that you visited before
- Search with filter:

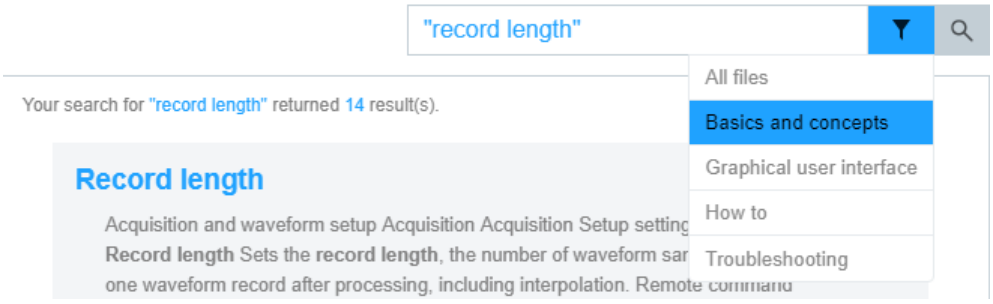

– Enter the word to be found, or a phrase in quotes.
– Tap the filter icon and select the information type.

5 Instrument setup

Access: "Menu" > "Settings".

In the "Settings" dialog, you can adapt various instrument settings to your requirements, such as language, display appearance, and assign functions to some keys.

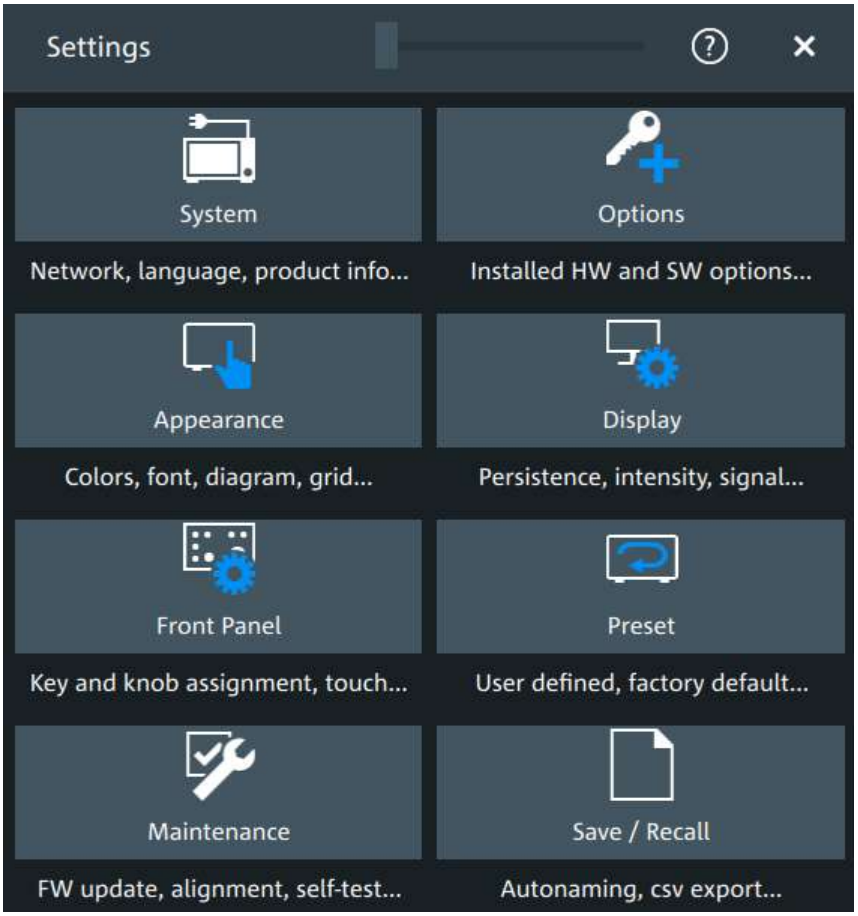

The following settings and procedures are described in the current section:

- System settings 88
- Option settings 97
- Appearance settings 100
- Display settings 108
- Front panel settings 111
- Preset setup 112
- Maintenance settings 115
- Save / recall settings 120

5.1 System settings

In the "Settings" > "System" dialog box, you find all instrument, firmware and network-related information. Here you can also set the language that is used in the dialogs.

5.1.1 About settings

Access: "Menu" > "Settings" > "System" > "About".

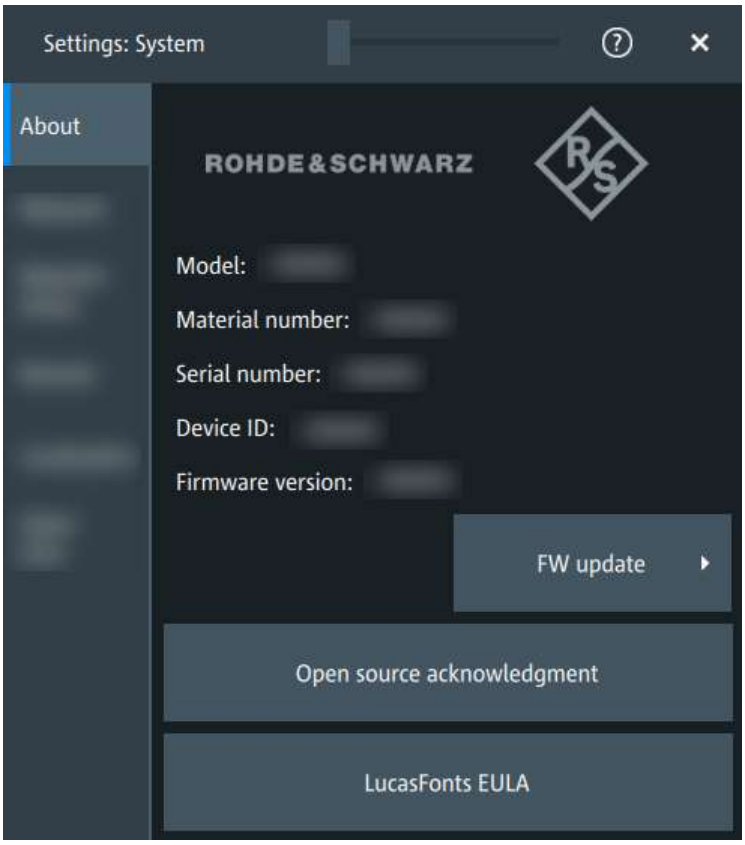

Instrument
Displays general information about the instrument, including:

- "Material number"
- "Serial number"
- "Device ID"
- "Firmware version"

Remote command:
`*IDN?` on page 1057

FW update
Opens the "FW update" dialog box. See Section 5.7.1, "Firmware update", on page 115.

Open source acknowledgment
Displays the "Open Source Acknowledgment" document.

LucasFonts EULA
Displays the copyright of the font provider.

5.1.2 Network settings

Access: "Menu" > "Settings" > "System" > "Network".

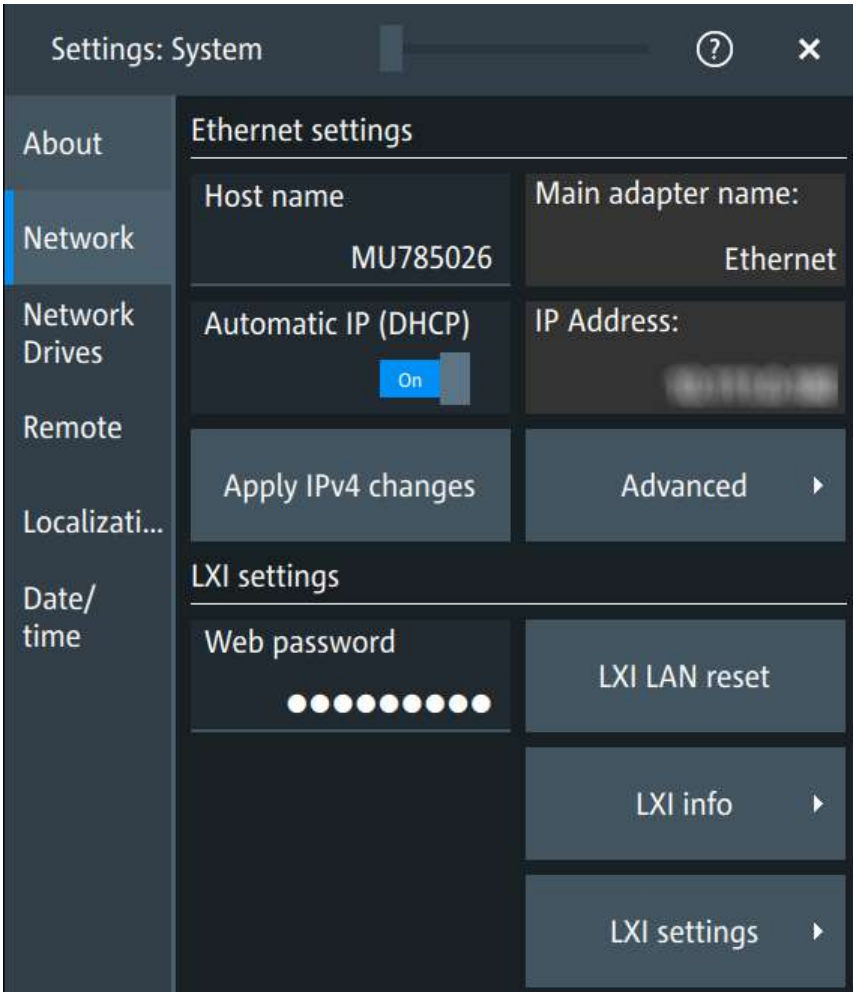

Host name
Indicates the currently defined host name. This value is required to configure the instrument for work in a network.

You can change the host name here. After changing the host name, you have to reboot the instrument.

NOTICE! Risk of network problems. Incorrect configuration of the host name can create network problems. Consult your network administrator before changing the name.

Remote command:
SYSTem:COMMunicate:NET[:HOSTname] on page 1063

Automatic IP (DHCP)
If enabled, the IP address of the oscilloscope is obtained automatically.

IP address
Shows the current IP address of the instrument. If "Automatic IP (DHCP)" is "Off", you can change the IP address here. For complete manual configuration, select "Advanced". See also: Section 17.1, "Connecting the instrument to the network (LAN)", on page 1011.

Advanced
Opens a dialog box to configure the network connection.

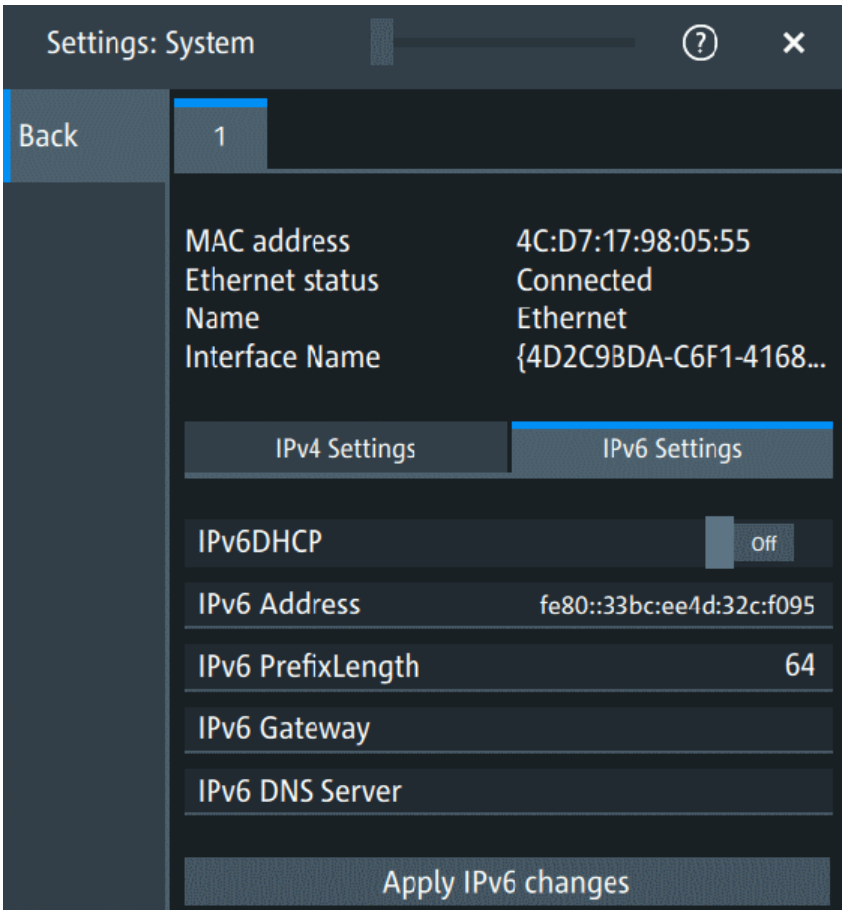

You need these settings to configure the LAN connection manually, without DHCP.

NOTICE! Connection errors can affect the entire network. Make sure to assign valid address information before connecting the instrument to the LAN. Contact your network administrator to obtain a valid IP address and other connection data.

See also: Section 17.1, "Connecting the instrument to the network (LAN)", on page 1011.

Web password
Password for LAN configuration. The default password is *LxiWebIfc*.

LXI LAN reset
Resets the LAN configuration to its default configuration. Use the reset when you cannot access the instrument via LAN due to invalid configuration.

The LAN settings are configured in the "Advanced" dialog, or using the instrument's web browser (see Section 17.3, "Web interface", on page 1027).

The LAN reset uses the LAN Configuration Initialize (LCI) reset mechanism for the instrument. According to the LXI standard, a LAN reset must set the following network parameters to a default state:

Parameter	Value
TCP/IP mode	DHCP + auto IP address
Dynamic DNS	Enabled
ICMP ping	Enabled
Password for LAN configuration	LxiWebIfc

LXI info
Opens a dialog with relevant LXI information. You can reload the information, for example, after changing connection data in the instrument's web browser.

For information on the LXI standard, refer to the LXI website at https://www.lxistandard.org.

LXI settings
Opens a dialog with important LXI settings. These settings are also available in the instrument's web browser.

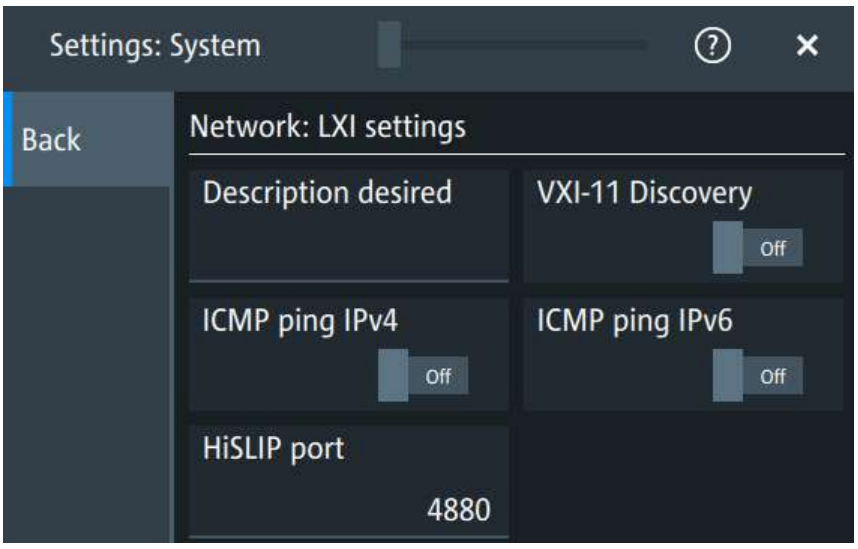

Description desired ← LXI settings
Network description of the instrument.

VXI-11 Discovery ← LXI settings
Enables the automatic detection in a LAN via the VXI-11 discovery protocol and programming by IVI drivers.

ICMP ping IPv4, ICMP ping IPv6 ← LXI settings
Enables the ping utility to verify the connection between the LXI-compliant instrument and another device. Ping is useful for diagnosing IP network or router failures. The ping utility is not password-protected.

HiSLIP port ← LXI settings
Sets the port that is used by the High Speed LAN Instrument Protocol (HiSLIP).

5.1.3 Network drive mapping

You can map up to 8 network drives or shared folders to the MXO 5 and store the measurement data directly in one of these folders.

Requirements:

- The MXO 5 and the target folder must be in the same network. Connection is established via DHCP. Direct connection is not supported.
- You need administrative rights and credentials to access the folder.
- Make sure that the network connection is not restricted by security settings.

5.1.3.1 Connecting a network drive

1. Open "Menu" > "Settings" > "System" > "Network drives".
2. Select "+ Add".
3. Tap the "Empty" button.
4. Enter the "Local folder" on the MXO 5, the "Network folder", and access credentials. For details, see Section 5.1.3.2, "Network drive settings", on page 92.
5. Tap "Connect".

If you want to connect a folder on your personal computer, share this folder and give full permissions to all users before you connect the folder to the MXO 5: Folder properties > "Sharing" > "Advanced Sharing".

5.1.3.2 Network drive settings

Access: "Menu" > "Settings" > "System" > "Network drives" > "+ Add" > select drive

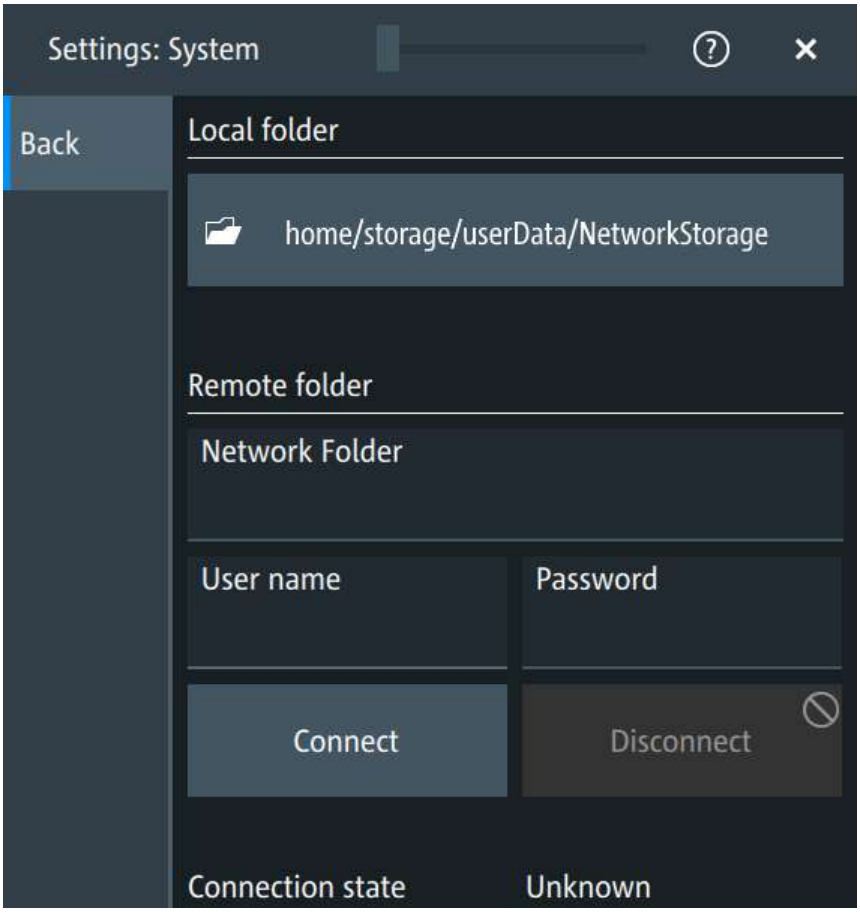

Local folder
Set the local folder on the MXO 5, to which the network folder is mapped. Under this name, you find the connected folder in the file browser on the instrument and in the "File manager" of the web interface.

Remote command:
`MMEMory:NDRive<m>:LPATh` on page 1066

Network folder
Sets the network folder that is mapped to the local folder. Use the full path in UNC syntax, for example, `\\net1\data\team1\osc`.

Remote command:
`MMEMory:NDRive<m>:NPATh` on page 1066

User name, Password
Enter the user name and the password to access the network folder.

Remote command:
`MMEMory:NDRive<m>:UNAMe` on page 1067
`MMEMory:NDRive<m>:PWORd` on page 1066

Connect, Disconnect, Connection state
Connect or disconnects the remote network folder to the local folder. An "Info" message informs on success or failure, and the overall connection state is shown in the dialog.

Remote command:
`MMEMory:NDRive<m>:CONNect` on page 1065
`MMEMory:NDRive<m>:DCONnect` on page 1066

5.1.4 Remote settings

Access: "Menu" > "Settings" > "System" > "Remote".

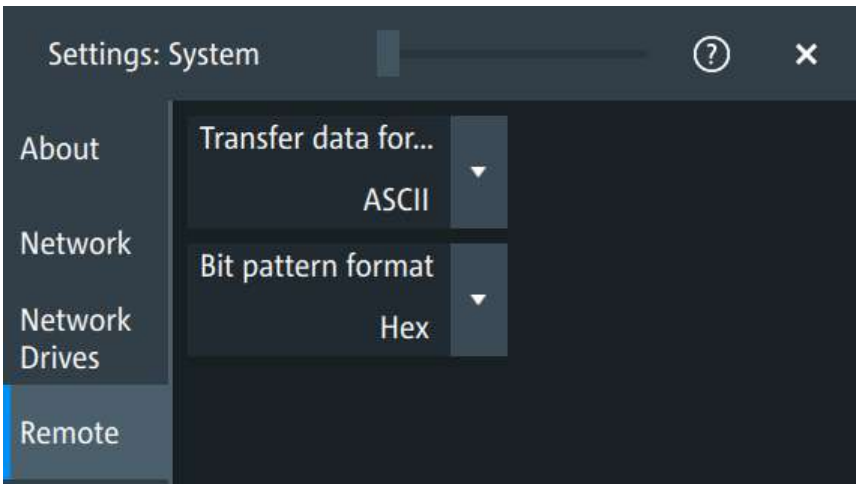

The following settings are required for remote control and data transfer via a connected computer.

Transfer data format
Selects the data format that is used for transmission of waveform data from the MXO 5 to the controlling computer.

If you need physical data (e.g. in Volt or Ampere) for further analysis, use the floating point formats for export. No data conversion is needed.

"Ascii"	Data values are returned in ASCII format as a list of comma-separated values in floating point format.
"FLOAT"	Binary format. Up to 7 significant digits are stored (32 bit). If there are more than 7 digits, the number is rounded off.
"DOUBLE"	Binary format. Up to 15 significant digits of the numbers (64 bit) are stored.
"INT8/16/32"	Signed integer data with length 8/16/ 32 bit.

Remote command:
`FORMat[:DATA]` on page 1060

Bit pattern format
Sets the format for all bit pattern queries.

Remote command:
FORMat:BPATtern on page 1062

5.1.5 Localization settings

Access: "Menu" > "Settings" > "System" > "Localization".

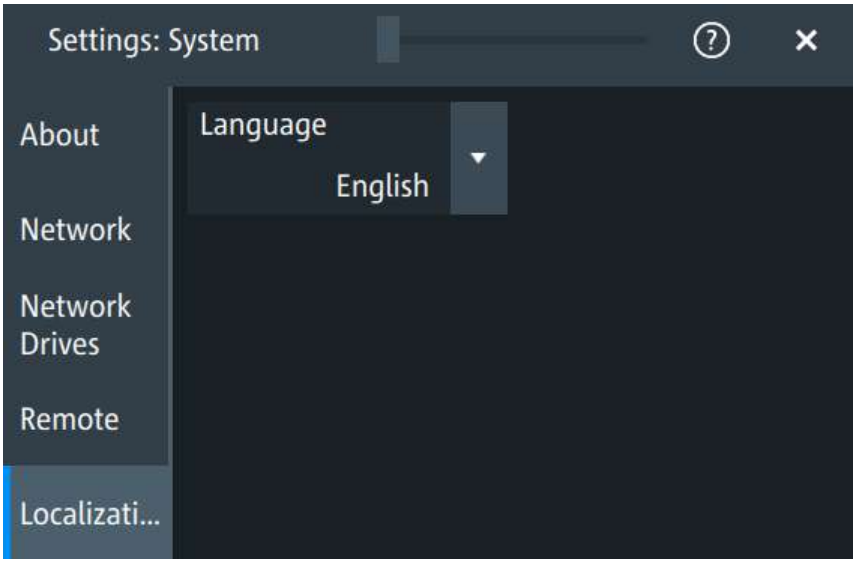

Language
Selects the language in which the menu, dialogs, results and other screen information is displayed. You can change the language on runtime.

Available languages are, for example, English, German, French, Japanese. For a complete list of supported languages, refer to the specifications document.

5.1.6 Date and time settings

Access: "Menu" > "Settings" > "System" > "Date/time".

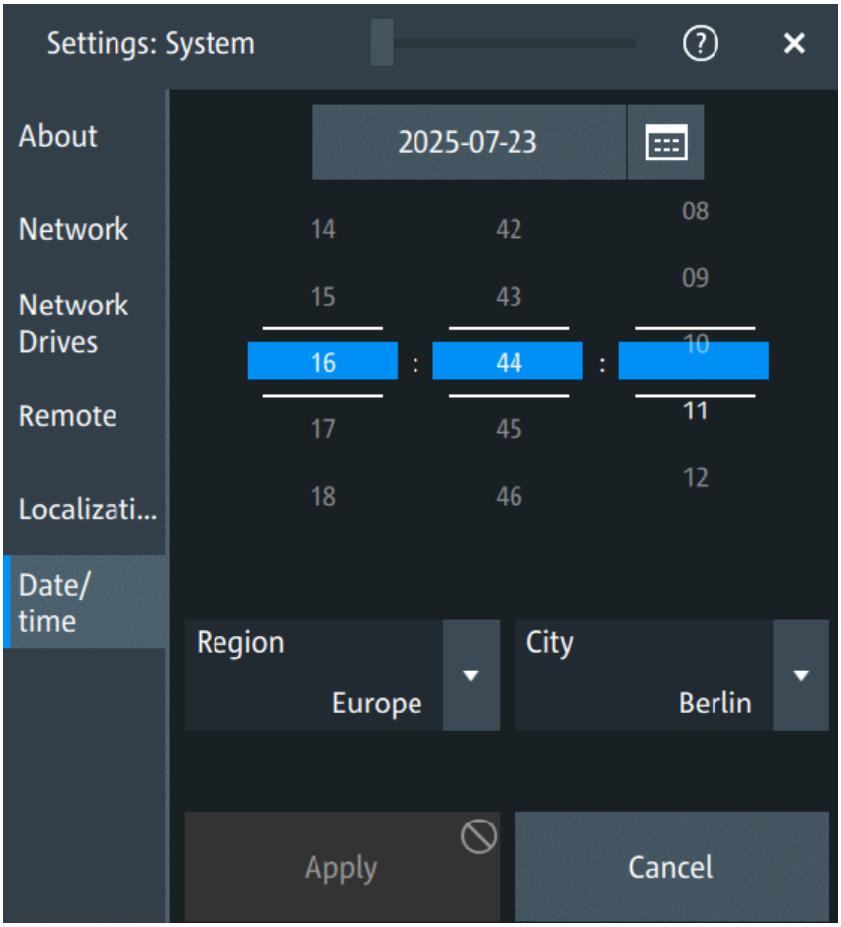

The instrument uses the system time of the operating system, but you can change date and time for the MXO 5 firmware.

1. To change the date:
   a) Tap the date button.
   b) Select the date in the calendar.
   c) Tap the blue calendar icon to close the calendar.
2. To change the time, move the hour, minute and second sliders to the required values.
3. Adjust the "Region" and "City" to indicate your location.
4. Tap "Apply".

Remote command:

- `SYSTem:DATE` on page 1064
- `SYSTem:TIME` on page 1065

5.2 Option settings

Additional options for the MXO 5 are enabled using a license key. To obtain the license key, consult your sales representative.

You can obtain registered or unregistered licenses.

Unregistered licenses

Unregistered licenses are not assigned to a particular instrument. The instrument accepts only registered licenses. If your license is delivered unregistered, use the online tool R&S License Manager to register the license for your instrument. The registration of a permanent license is irreversible, so ensure that you register it for the correct instrument. For registration, you need the device ID of the instrument on which the option will be installed.

5.2.1 Software options settings

Access: "Settings" > "Options" > "Software"

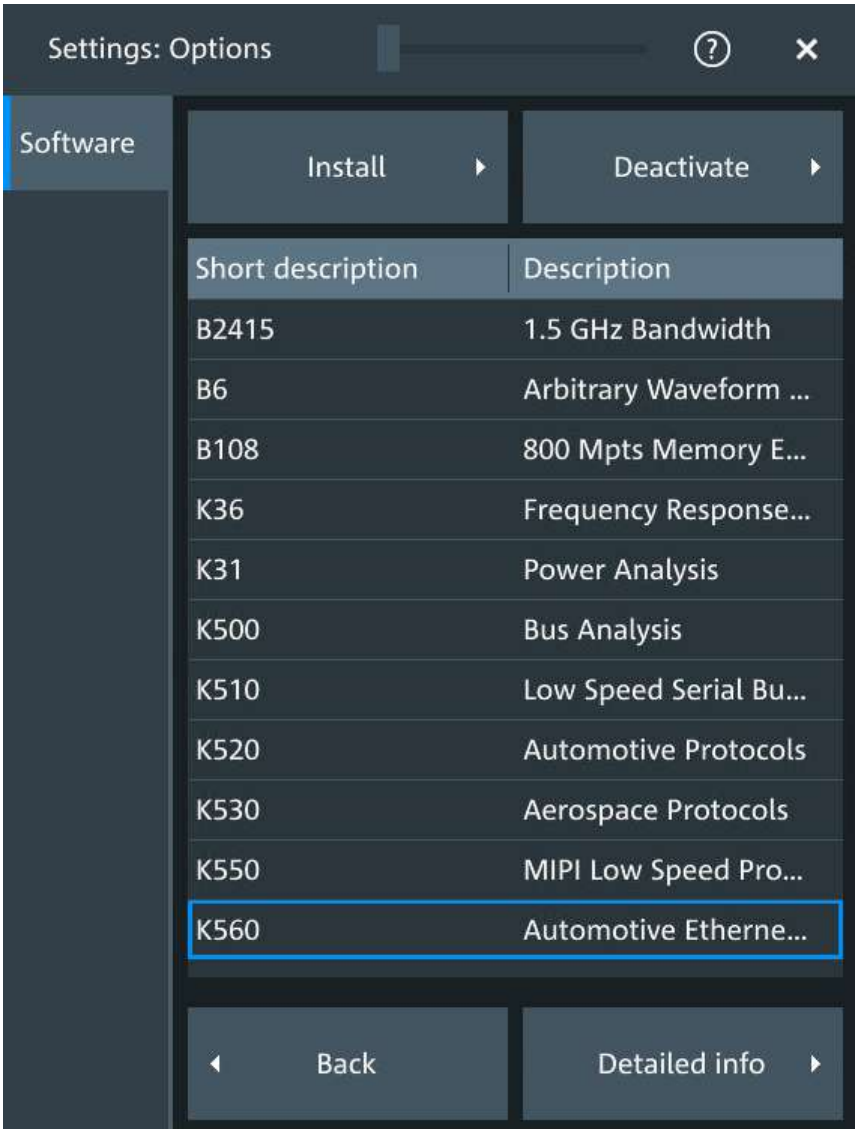

In this dialog, you can access settings for installing and deactivating options. In the "Detailed info" dialog, you can get an overview of all options installed on your MXO 5.

5.2.1.1 Install options

Access: "Settings" > "Options" > "Software" > "Install"

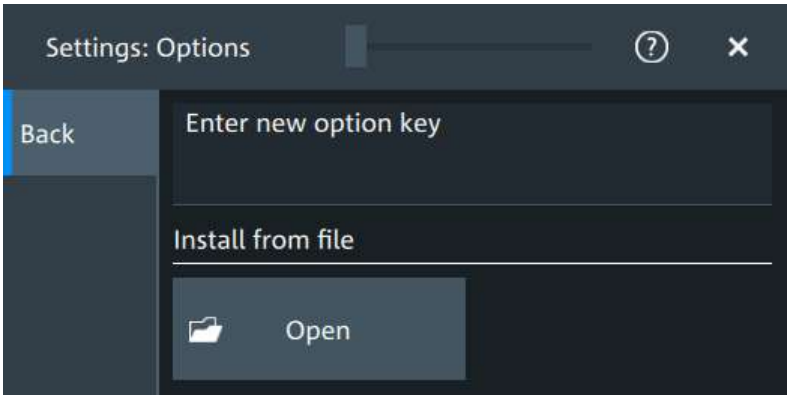

In the "Install" tab, you can install new options using license keys.

Enter new option key
Enter the license key here to activate the option. For license keys delivered as a file, use "Install from file" on page 99.

Install from file
If you got a license file, install the license here.

Tap "Open" to open the file selection dialog, or enter the complete path and filename.

5.2.1.2 Deactivate options

Access: "Settings" > "Options" > "Software" > "Deactivate"

To deactivate an option, use the "Deactivate" dialog. When you deactivate, note the response key, or save the response to a file. Registered options cannot be deactivated, they are bound to the instrument.

5.2.1.3 Detailed info

In the "Detailed info" dialog, you can get an overview of all options installed on your MXO 5 with status and expire information.

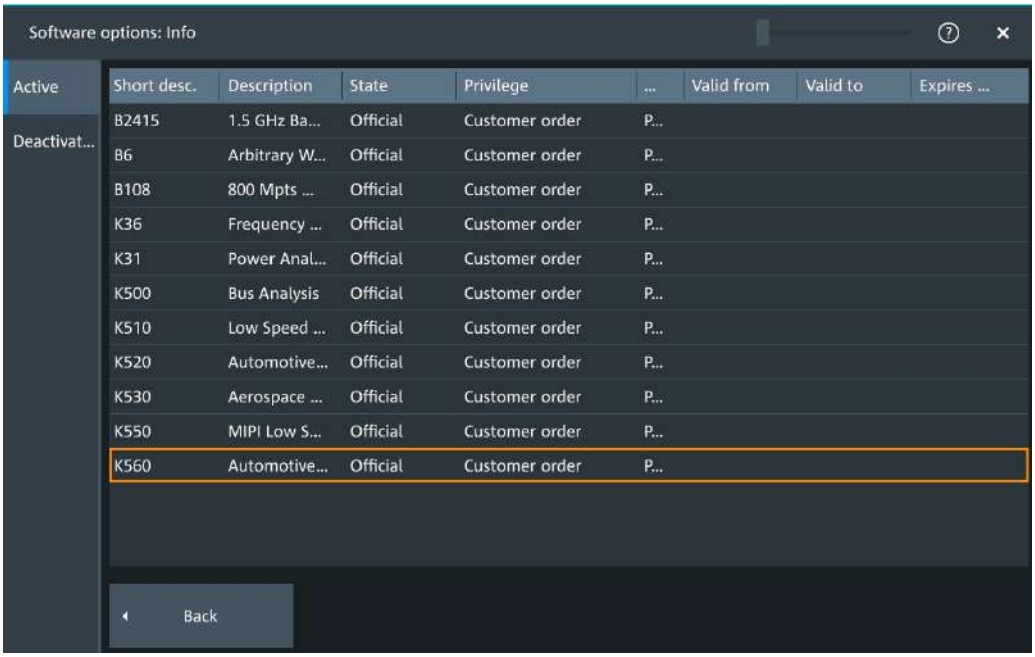

5.3 Appearance settings

In the "Settings" > "Appearance" dialog box, you define the look and feel of the display element, e.g. waveform colors, result position, or grid behavior.

Appearance settings are not included in user-defined presets. To reset all appearance settings at once, use the factory preset.

5.3.1 Colors

Access: "Settings" > "Appearance" > "Colors"

By default, various colors are assigned to the different waveform types for better visibility and distinguishability. You can change the color assignment and assign another color or a color table to waveforms. For digital channels, you can select any color, or use the default color with state coloring.

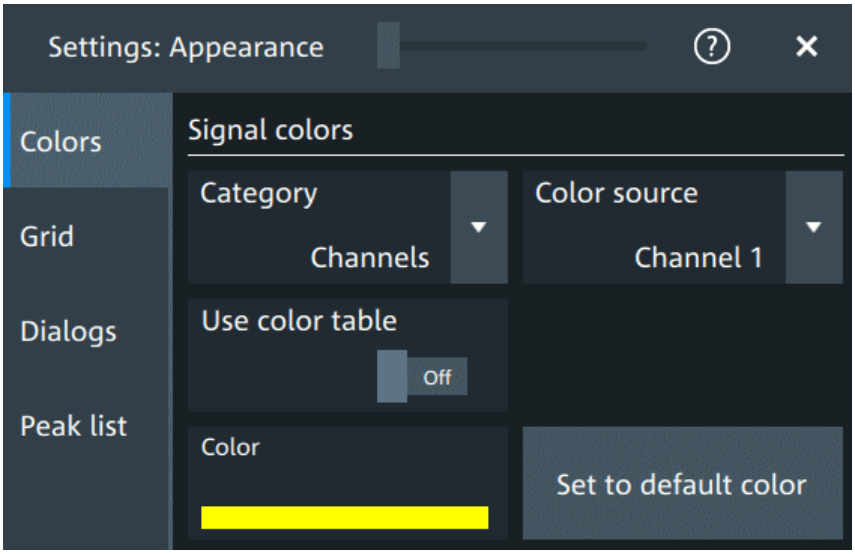

Category
Selects the category of the waveform, e.g. "Channels", "Math", "Reference".

You can then select one of the waveforms of the selected category with "Color source".

Color source
Selects the waveform to which the color or the color table is assigned.

Use color table
If enabled, the selected waveform is displayed according to its assigned color table.

If disabled, the selected color is displayed, and the intensity of the signal color varies according to the cumulative occurrence of the values.

The setting is not available for digital channels and parallel buses.

Remote command:
`DISPlay:COLor:SIGNal:USE` on page 1088

Assigned color table
Assigns a color table to the source waveform instead of a dedicated color. Color tables define the color of the waveform pixels depending on the cumulative occurrence of the associated values.

The following color tables are provided:
- "False colors": color changes gradually in a wide color spectrum.
- "Single Event": single events and seldom events appear yellow, a higher cumulative occurrence is shown with blue color. This view helps to identify specific events.
- "Spectrum": colors display the wavelengths of the light. Low cumulative occurrence is displayed blue like high wavelength.
- "Temperature": color changes gradually from blue (low temperature) to red (high temperature) with increasing cumulative occurrence.

Remote command:
`DISPlay:COLor:SIGNal:ASSign` on page 1087

Color
Shows the current color of the selected waveform. To change the color, tap the button.

In the "Color" dialog, you can pick from a list of basic colors. To define another color, select "User defined colors", and adjust the color settings.

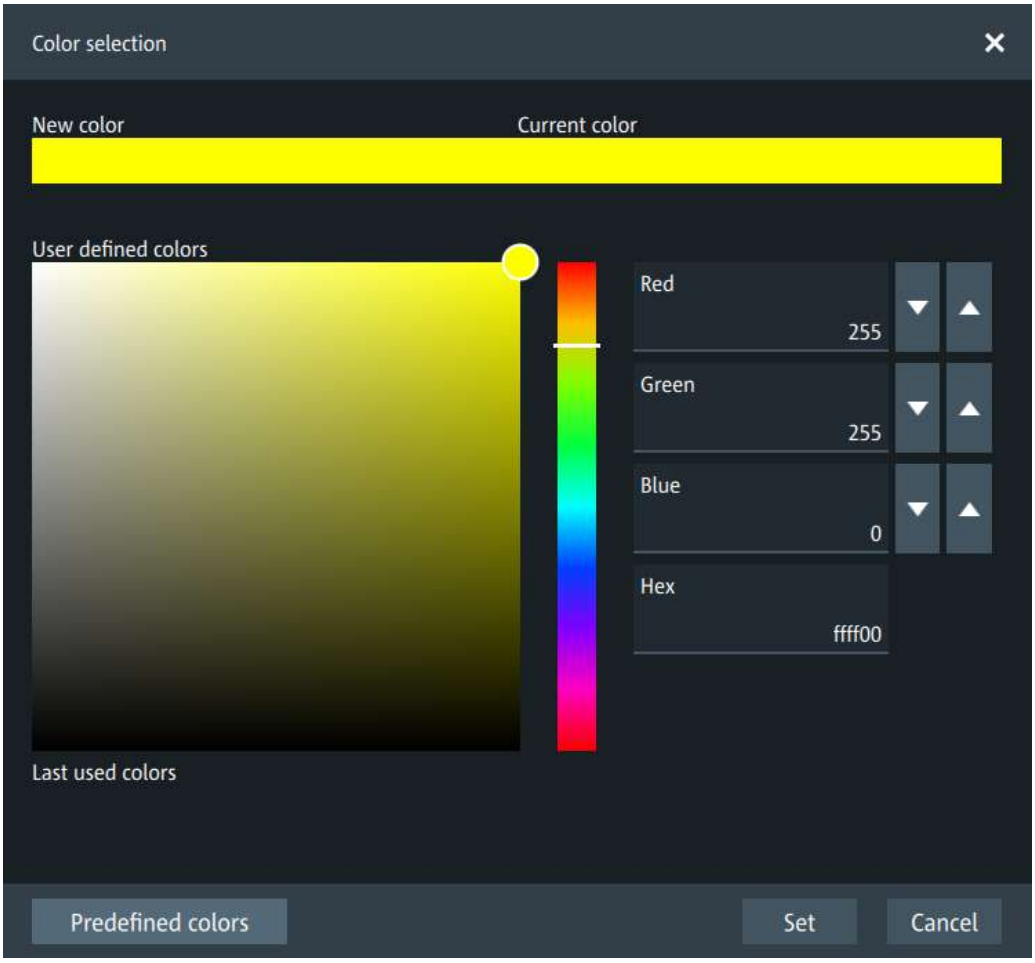

The color of the waveform, its signal icon, and the illuminated keys are adjusted to the new color. If the waveform is a spectrum, the knobs for vertical scale and position retain the color of the spectrum's source.

Remote command:
`DISPlay:COLor:SIGNal:COLor` on page 1087

Set to default color
Resets the color of the selected waveform to the factory default.

Remote command:
`DISPlay:COLor:SIGNal:COLor <Signal>,DEF`

Use state coloring
The setting is available for digital channels and logic buses.

If enabled, the high and low levels and the state transition get different predefined colors.

If disabled, you can select a color for the digital channel or bus. The channel is displayed with the selected color, and the high level has a thicker line than the low level.

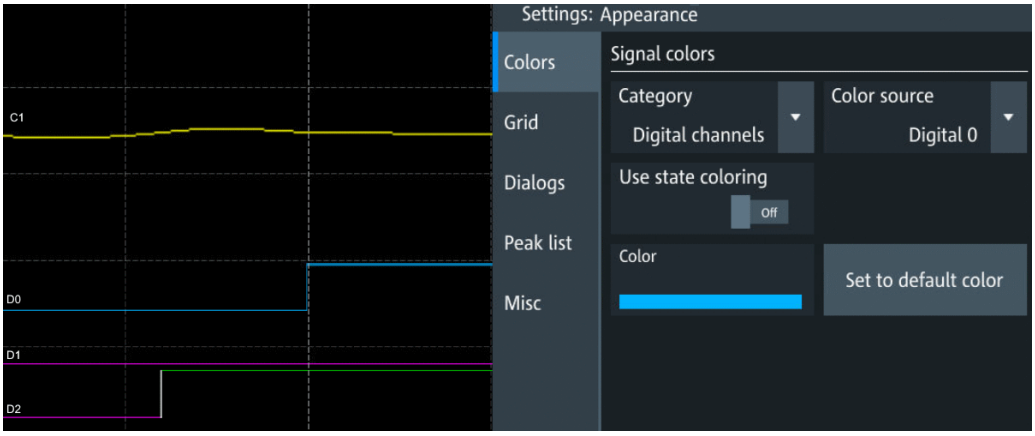

Figure 5-1: D0 has a selected color (blue). D1 and D2 have state coloring. D1 is on low level, D2 changes from low to high.

5.3.2 Grid

Access: "Settings" > "Appearance" > "Grid"

Show grid
If selected, a grid is displayed in the diagram area. A grid helps you associate a specific data point to its exact value on the x- or y-axis.

Remote command:
`DISPlay:DIAGram:GRID` on page 1089

Show labels
If selected, labels mark values on the x- and y-axes in specified intervals in the diagram.

Remote command:
`DISPlay:DIAGram:LABels` on page 1089

Show fine grid scale
If selected, the crosshair is displayed as a ruler with scale markers. If disabled, the crosshair is shown as dashed lines.

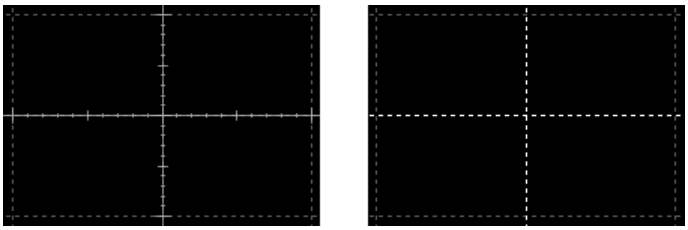

Remote command:
`DISPlay:DIAGram:FINegrid` on page 1088

Show crosshair
If selected, a crosshair is displayed in the diagram area. A crosshair allows you to select a specific data point by its coordinates.

Remote command:
`DISPlay:DIAGram:CROSshair` on page 1088

Keep X-grid fixed
If enabled, the vertical grid lines remain in their position when the horizontal position is changed. Only the values at the grid lines are adapted.

Remote command:
`DISPlay:DIAGram:XFIXed` on page 1089

Keep Y-grid fixed
If enabled, the horizontal grid lines remain in their position when the position of the curve is changed. Only the values at the grid lines are adapted.

Fixed horizontal grid lines correspond to the behavior of traditional oscilloscopes.

Remote command:
`DISPlay:DIAGram:YFIXed` on page 1090

Show div label (x)
If selected, the time scale value is shown at the diagram bottom instead of the horizontal grid labels. For example, 10 ns/div is shown instead of the values 0, 10, 20, 30... ns.

Remote command:
DISPlay:DIAGram:XPDivlabel on page 1089

Channel label
Select the information to be shown in the waveform labels at the waveform.

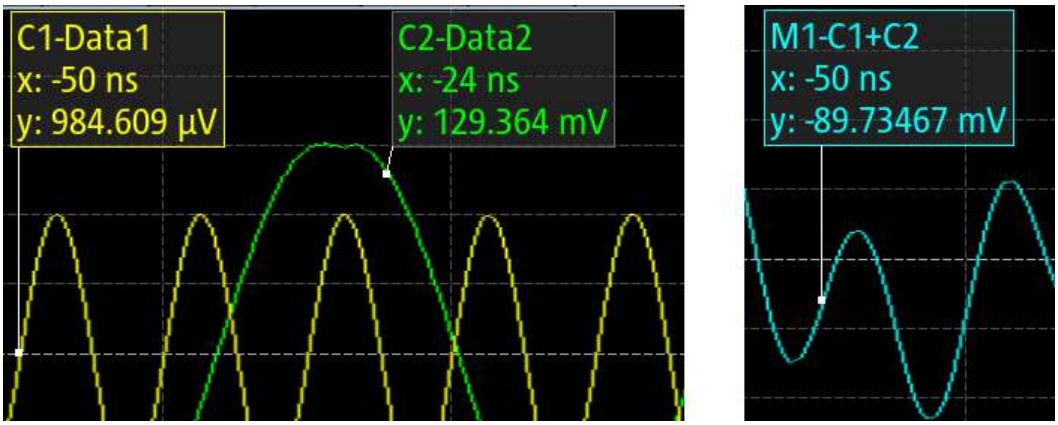

Figure 5-2: Waveform labels with complete information, for analog channels and math waveform

"Show signal shortcut"	Shows the generic short name of the waveform, e.g, C1, C2, R1, M1.
"Show signal label"	Shows the user-defined label. These labels are defined in the setup dialog of the waveform, e.g. in the "Vertical" > "Setup" tab for analog channels, and in the "Math" > "Setup" tab for math waveforms.
"Show X position"	Shows the x-position of the attachment point of the waveform label to the waveform.
"Show Yposition"	Shows the y-position of the attachment point of the waveform label to the waveform.

5.3.3 Dialogs

Access: "Settings" > "Appearance" > "Dialogs"

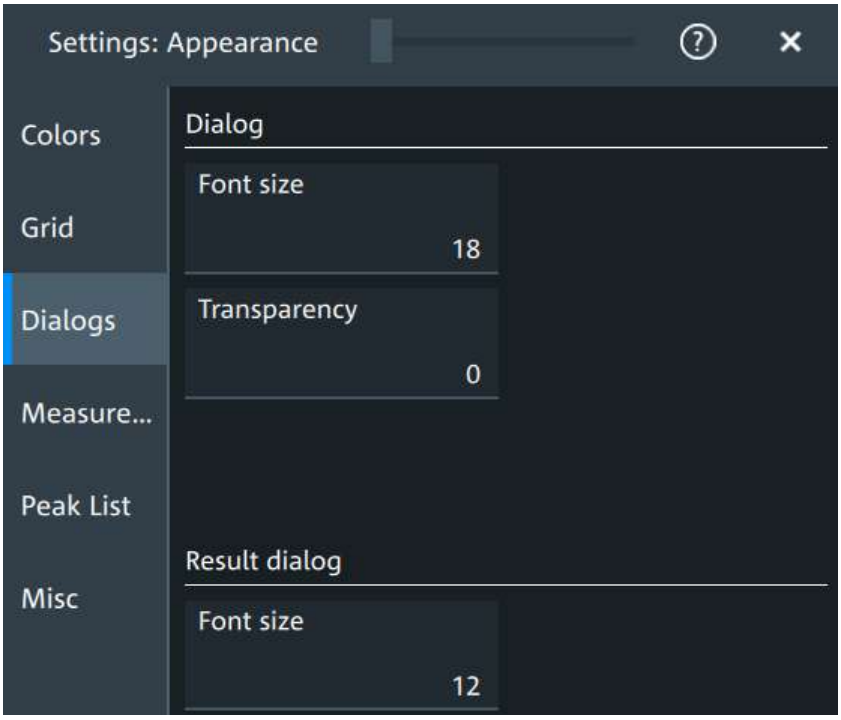

Font size (Dialog)
Sets the font size of the text in dialog boxes.

Remote command:
`DISPlay:DIALog:FONTsize` on page 1090

Transparency (Dialog)
Sets the transparency of the dialog box background. For high transparency values, you can see the waveform display in the background, and possibly check the effect of the changed setting. For lower transparency values, readability in the dialog box improves.

You can also set the dialog transparency by moving the transparency bar at the top of the dialog.



Remote command:
`DISPlay:DIALog:TRANsparency` on page 1090

Font size (Result dialog)
Sets the font size of the text in result tables.

Remote command:
`DISPlay:RESult:FONTsize` on page 1090

5.3.4 Measure

Access: "Settings" > "Appearance" > "Measure"

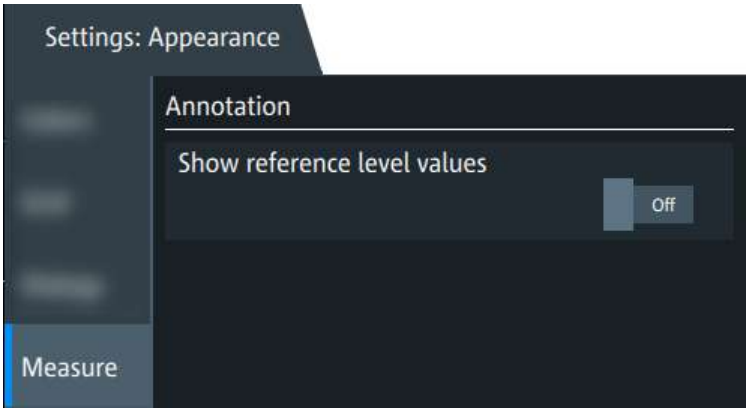

Show reference level values
If selected, the values of the reference levels are displayed.

Remote command:
`DISPlay:MEASurements:LEVels` on page 1091

5.3.5 Peak list

Access: "Settings" > "Appearance" > "Peak list"

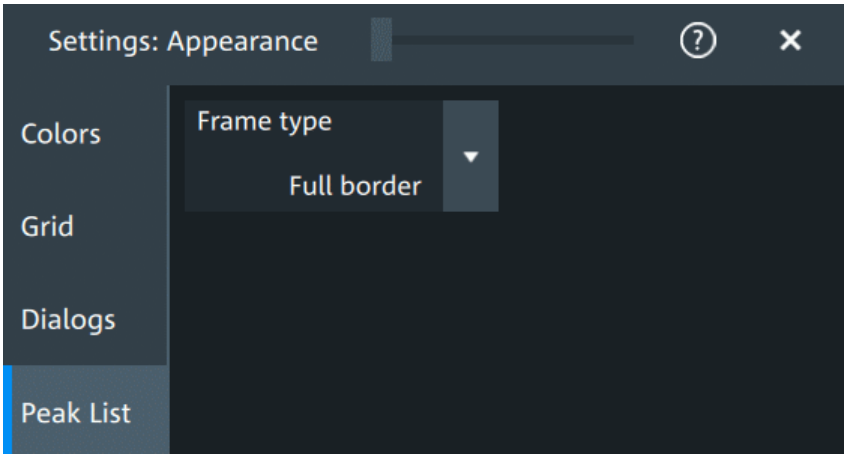

Peak list settings apply to peak list measurements. They are visible when the peak list for spectrum measurements is enabled.

Frame type
Defines the layout of the labels, full border or none.

Remote command:
`CALCulate:SPECtrum<sp>:PLISt:LABel:BORDer` on page 1091

5.3.6 Miscellaneous

Access: "Settings" > "Appearance" > "Misc"

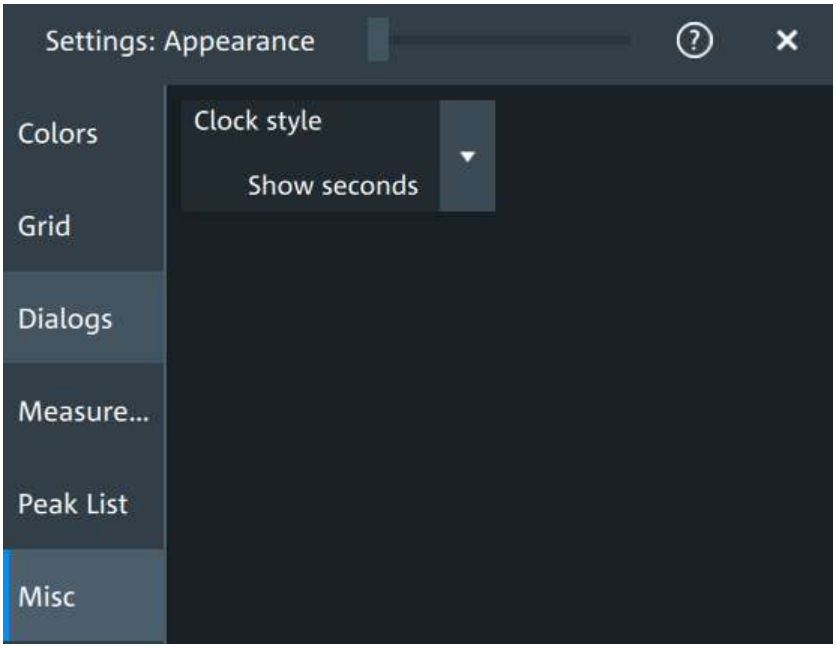

Clock style
Select how the clock in the upper right corner of the screen is displayed:

- "Show seconds": format is hh:mm:ss
- "Hide seconds": format is hh:mm
- "Hide clock": no time is shown

5.4 Display settings

In the "Settings" > "Display" dialog, you can define the display settings like brightness and signal intensity.

5.4.1 Persistence settings

Access: "Menu" > "Settings" > "Display" > "Persistence".

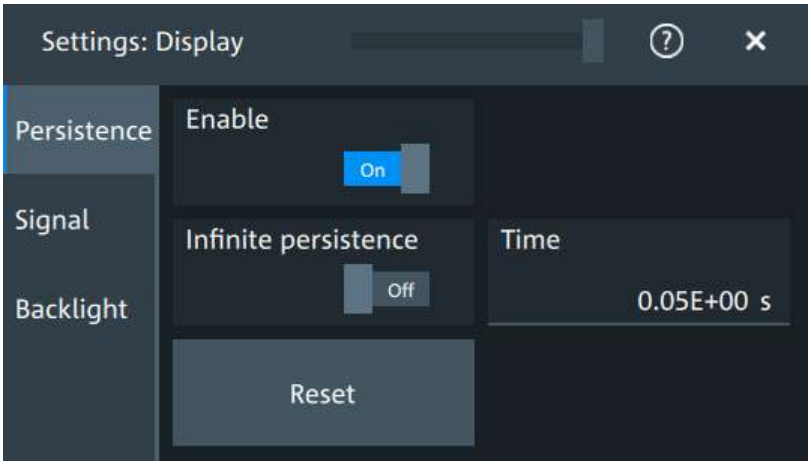

Enable
If enabled, each new data point in the diagram area remains on the screen for the duration that is defined using Time, or as long as Infinite persistence is enabled.

If disabled, the waveform points are displayed only for the current acquisition.

Remote command:
`DISPlay:PERSistence[:STATe]` on page 1092

Infinite persistence
If infinite persistence is enabled, each new waveform point remains on the screen until this option is disabled. Use infinite persistence to display rare events in the signal.

Remote command:
`DISPlay:PERSistence:INFinite` on page 1092

Time
Sets a time factor that controls how long the waveforms points fade away from the display. Thus, the MXO 5 emulates the persistence of analog phosphor screens.

Remote command:
`DISPlay:PERSistence:TIME` on page 1092

Reset
Resets the display, removing all persistent waveform points.

Remote command:
`DISPlay:PERSistence:RESet` on page 1092

5.4.2 Signal settings

Access: "Menu" > "Settings" > "Display" > "Signal".

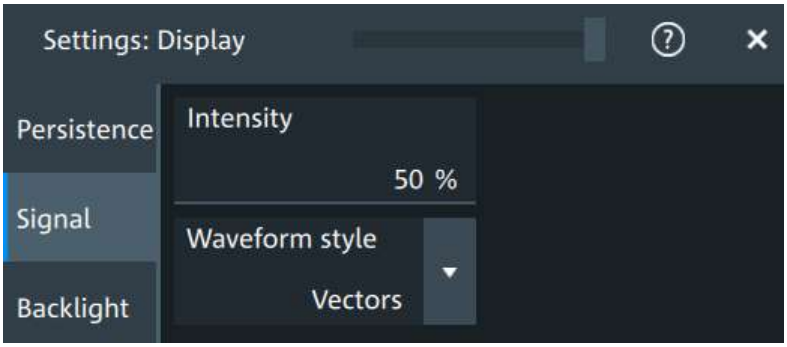

Intensity
The intensity determines the strength of the waveform line in the diagram. Enter a percentage between 0 (not visible) and 100% (strong). The default value is 50%.

You can also use the [Intensity] knob to adjust the waveform intensity directly.

Remote command:
`DISPlay:INTensity` on page 1093

Waveform style
Selects the style in which the waveform is displayed.

"Vectors" The individual waveform points are connected by a line.
Define the strength of the line using the [Intensity] knob.

"Dots" Only the individual waveform points are displayed.
To see the dots of one waveform, perform one acquisition with [Single] and N=1 (N-single/avg count). During continuous acquisition, or a [Single] acquisition with N > 1, the dots of multiple subsequent waveforms are displayed on the screen, and the waveform looks like a line.

Remote command:
`DISPlay:DIAGram:STYLe` on page 1093

5.4.3 Backlight settings

Access: "Menu" > "Settings" > "Display" > "Backlight".

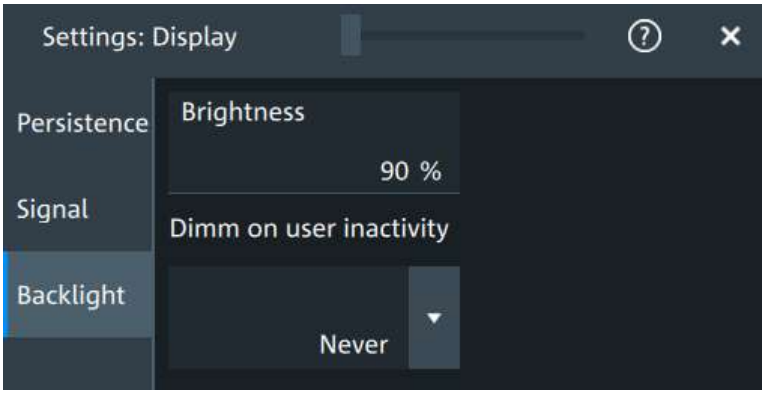

Brightness
Sets the background luminosity of the touchscreen.

Remote command:
`DISPlay:BACKlight[:BRIGtness]` on page 1094

Dimm on user inactivity
Selects a time, after which the monitor brightness is reduced, if the instrument was inactive. Remote control of the instrument is also considered as an activity.

Remote command:
`DISPlay:BACKlight:DIMMing` on page 1094

5.5 Front panel settings

In the "Front panel" dialog box, you can assign functions to keys and knobs and adjust the brightness of the keys.

5.5.1 Hardkeys: function assignment

Access: "Settings" > "Front panel" > "Hardkeys"

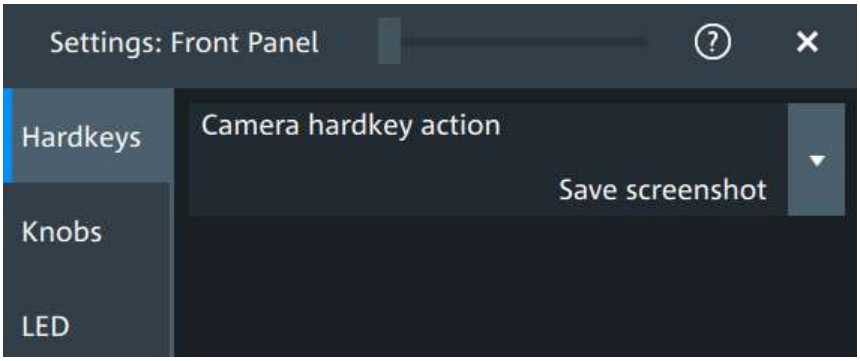

Camera hardkey action
The Camera key on the bottom right is a shortcut key that initiates an associated action.

You can assign one of the following actions:
- Save screenshot
- Open screenshot setup

Configure the settings for the selected action.
- Screenshots: "Save/recall" key > "Save" tab > "Screenshot", see Section 13.8, "Screenshots", on page 500.

5.5.2 Knobs

Access: "Settings" > "Front panel" > "Knobs"

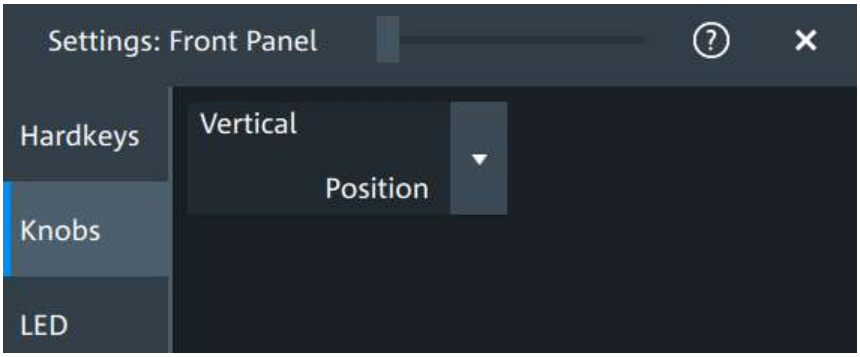

Vertical
The vertical Position knob can change the waveform position or the offset of the selected waveform. Select the action that you want to perform.

See also: "[Position]" on page 52.

5.5.3 LED

Access: "Settings" > "Front panel" > "LED".

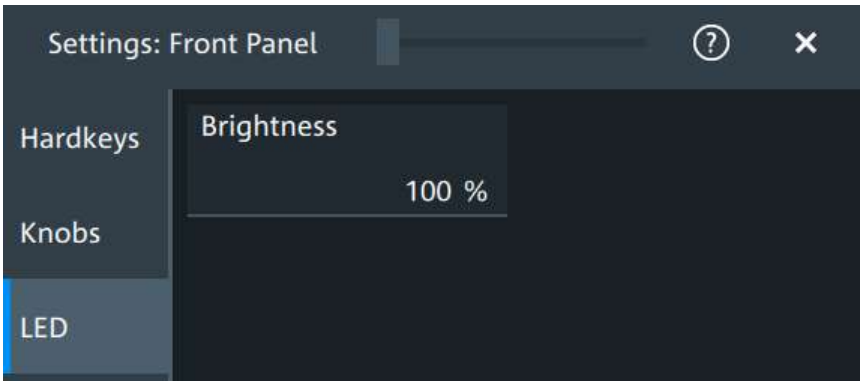

Brightness
Defines the luminosity of illuminated front panel keys and knobs.

5.6 Preset setup

The preset sets the MXO 5 to a default configuration, or to a user-defined configuration. A user-defined preset file is one of the saveset files, which are stored locally. It contains the measurement setup, while the user's display settings are not included. You can save the current configuration to a preset file, and enable the saved preset file to be applied with the "Preset" toolbar icon.

See also: Section 13.3, "General and measurement settings: savesets", on page 470.

5.6.1 Preset settings

Access: "Menu" > "Settings" > "Preset" > "Settings".

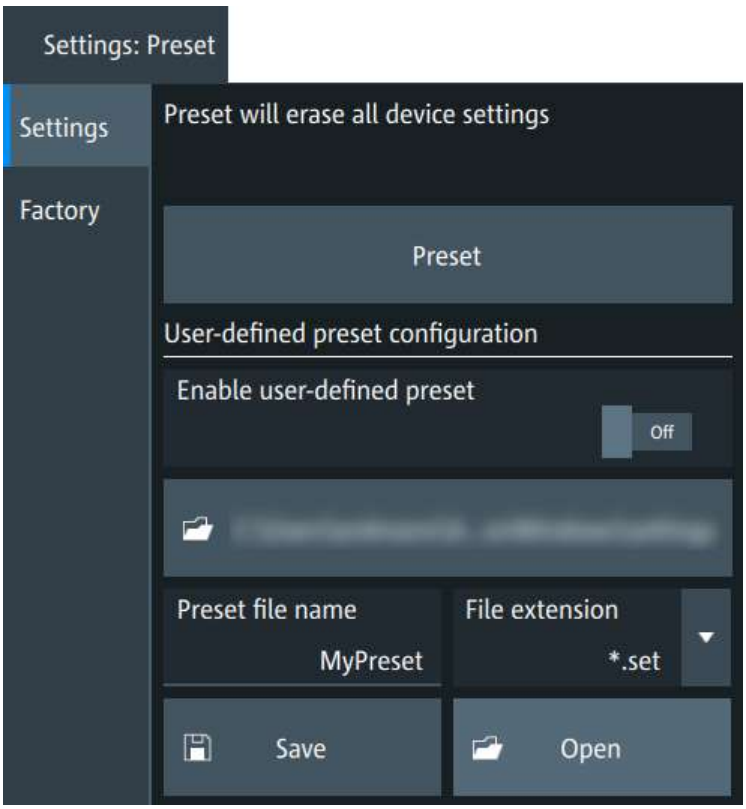

Preset
Set the MXO 5 to a default configuration, or to a user-defined configuration.

Enable user-defined preset
If enabled, the settings from the selected saveset are restored when the [Preset] key is pressed.

If disabled, [Preset] sets the instrument to the factory defaults.

Remote command:
`USERdefined:PRESet[:ENABle]` on page 1097

Preset file selection
Select the saveset file that contains the required settings.

<Directory>	Shows the currently used directory. To change the directory, tap the button and select the correct directory in the file dialog.
"Preset file name"	Enter the filename of the preset file. This file is loaded on user-defined preset. The filename is also used when you save a preset file with "Save".
"File extension"	The file extension is `.set`.

Remote command:
USERdefined:PRESet:NAME on page 1097
USERdefined:PRESet:OPEN on page 1097

Save, Open
"Save" writes the current settings immediately to the file that is named in "Preset file name" in the selected directory. "Open" loads a saveset file as preset settings.

Remote command:
USERdefined:PRESet:SAVE on page 1097
USERdefined:PRESet:OPEN on page 1097

5.6.2 Factory preset

Access: "Menu" > "Settings" > "Preset" > "Factory".

Factory preset
Resets the MXO 5 to the factory default settings, to the initial state. Factory settings comprise all instrument settings.

Remote command:
SYSTem:PRESet on page 1064

5.6.3 Restoring settings

When you have changed many settings, and you are not sure which settings are causing which effect, you can restore the default settings and start anew. The following methods are available:

- Saving the settings as a user-defined preset and rest the settings to user-defined default values
- Restoring all settings on the MXO 5 to the factory-defined values
- Loading settings from a file

To save a user-defined preset

1. Open the "Menu" > "Settings" > "Preset" tab.
2. Enter a name for the preset file. Select the file format.
3. Tap "Save".

   Note: If you want to store the file in another directory than the displayed one, select "Save as". See also: Section 13.9, "File browser dialog", on page 505.

To rest the settings to user-defined default values

1. Open the "Menu" > "Settings" > "Preset" > "Settings" tab.
2. In "Preset file name", enter the name of the file that contains the required settings.
3. To use these settings as preset values, select "Enable user-defined preset".

4. Tap "Preset".

   To preset the instrument whenever needed, press the [Preset] key.

To restore all settings to the factory defaults

1. Open the "Menu" > "Settings" > "Preset" > "Factory" tab.
2. Tap the "Factory preset" button.

   All settings on the MXO 5 are reset to their factory-defined values.
   As long as no user-defined preset file is loaded and "Enable user-defined preset" is disabled, the preset also resets the settings to factory defaults.

5.7 Maintenance settings

In the "Settings" > "Maintenance" dialog box, you can update the firmware, perform self-alignment.

5.7.1 Firmware update

Access: "Menu" > "Settings" >"Maintenance" > "FW update".

Your instrument is delivered with the latest firmware version. Firmware updates are provided on the internet at:

The "Release Notes" describe the improvements and modifications of all firmware versions. They also explain how to update the firmware. They are available along with the firmware on the same web page.

Remote commands:

- `SYSTem:FW:FILepath` on page 1064
- `SYSTem:FW:STARt` on page 1065

5.7.2 Alignment

When data from several input channels is displayed at the same time, it can be necessary to align the data. Alignment is done vertically or horizontally to synchronize the time bases or amplitudes and positions. Perform an alignment, for example, when strong temperature changes occur (> 5°).

5.7.2.1 Alignment settings

Access: "Menu" > "Settings" > "Maintenance" > "Alignment"

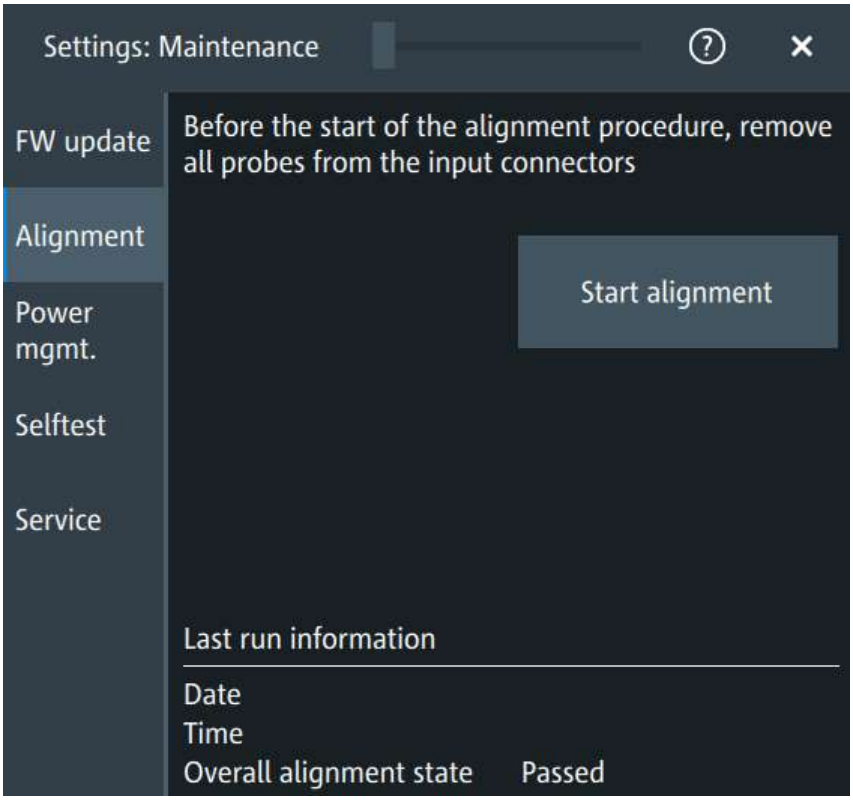

Start alignment
Starts the self-alignment procedure for all channels.

Date, Time, Overall alignment state
Show the date, time and the summary result of the self-alignment process: not aligned, passed or failed. Detailed results are provided on the "Alignment results" tab.

Remote command:
`CALibration:DATE?` on page 1098
`CALibration:TIME?` on page 1098
`CALibration:RESult?` on page 1099

Show results
Opens a dialog to display the alignment results.

For each channel, the results of the individual alignment steps are shown for all technical channel component. In case you require support, you may be asked to provide this information.

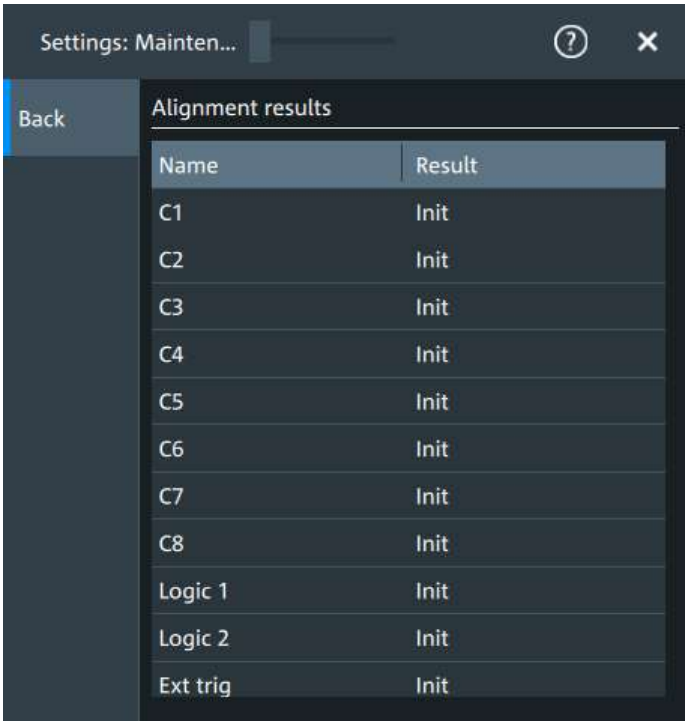

5.7.2.2 Performing a self-alignment

The self-alignment aligns the data from several input channels vertically and horizontally to synchronize the timebases, amplitudes and positions. The self-alignment process includes a basic hardware check.

Recommendation on performing the self-alignment:

- When putting the instrument into operation for the first time
- After a firmware update
- Once a week
- When major temperature changes occur (> 5°)

1. Warm up the instrument before you start the self-alignment. The minimum warm-up time is indicated in the specifications document.
2. Remove the probes from the input connectors.
3. Open "Menu" > "Settings" > "Maintenance".
4. In the "Alignment" tab, tap "Start alignment".

   The alignment is performed, the process can take several minutes. A message box informs you about the running process, wait until this message box closes.
   The overall pass/fail result is shown in the "Overall alignment state" field.

5.7.3 Power management

Access: "Menu" > "Settings" > "Maintenance" > "Power mgmt."

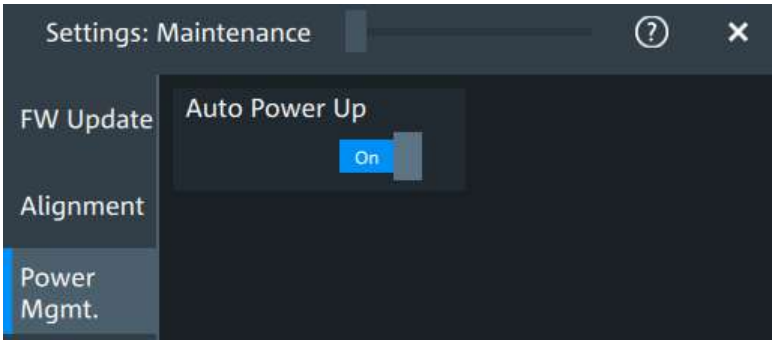

Auto power up
If enabled, the instrument powers up automatically when it is connected to the mains voltage, and after a power outage. If disabled, the instrument also powers up after a power outage if it was running when the power outage occurred.

Remote command:
`SYSTem:APUP` on page 1099

5.7.4 Self-test

The instrument's selftest checks the hardware for correct operation. Perform the self-test if you suspect problems in hardware operation.

Access: "Settings" > "Maintenance"> "Selftest"

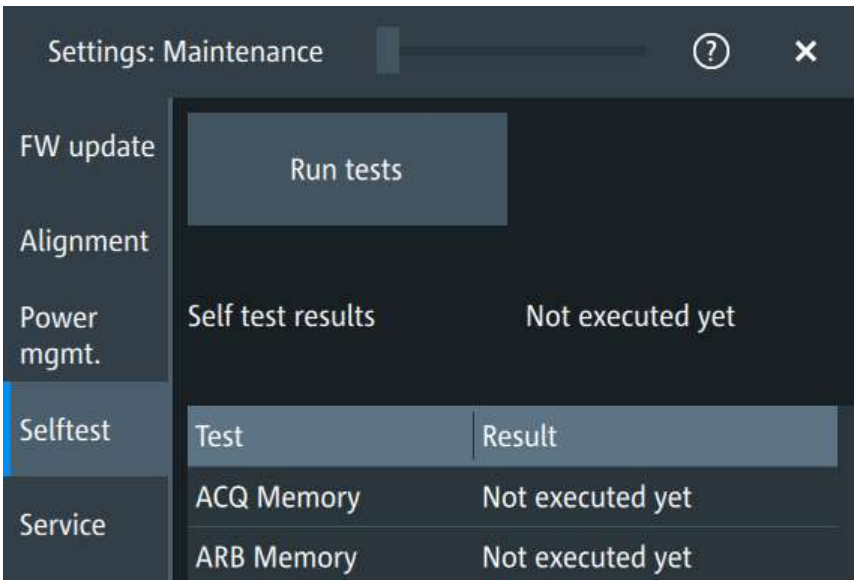

The selftest can take several minutes. The summary result is shown in the "Selftest results" field, and the results of the single tests are shown in the "Result" column of the test table.

Run tests
Starts the selftest.

Remote command:
*TST? on page 1060

Selftest results
Shows the summary result of the self-test: pass or fail.

Test table
The table shows the available tests and their particular tests results. This can be helpful in case you need support.

5.7.5 Service

Access: "Menu" > "Settings" > "Maintenance" > "Service"

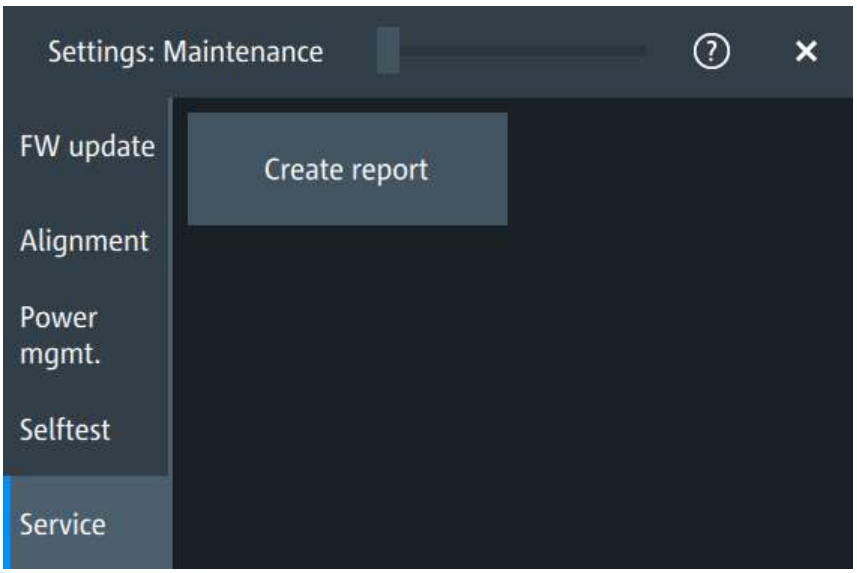

Create report
Creates a service report.

The service report is a ZIP file with a complete bug report, all relevant setup information, reporting and log files, alignment files, and the instrument configuration.

If a USB flash drive is connected, the report is saved on the USB flash drive. Otherwise, the report is saved in the user data folder /home/storage/userData.

See also: Section 19.4, "Information for technical support", on page 2326.

Remote command:
SERVice:REPort on page 1099

5.8 Save / recall settings

5.8.1 Autonaming

Access: "Menu" > "Settings" > "Save/recall" > "Autonaming" tab.

5.8.1.1 Autonaming settings

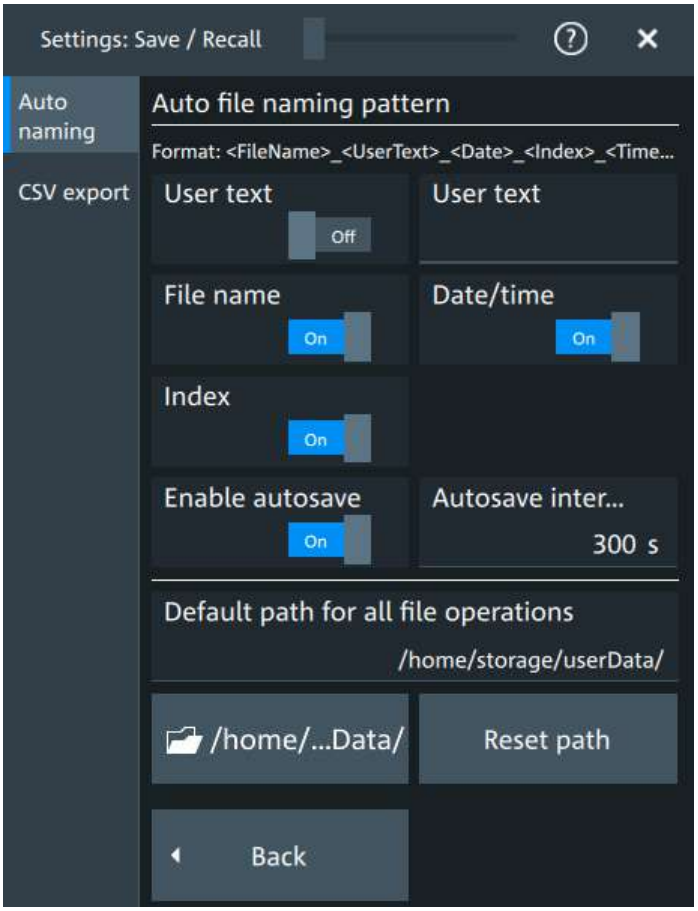

In the "Autonaming" tab, you can define the pattern for automatic filename generation. This name is used as the default filename. The default path is the storage location for all saved files and their subdirectories. The local directory for user data is `/home/storage/userData`, the path to a USB storage device is `/run/media/usb/<MyDriveName>/`.

User text
If enabled, inserts the specified user text after the prefix.

Remote command:
`MMEMory:AUTonaming:USERtext` on page 1096
`MMEMory:AUTonaming:TEXT` on page 1096

File name base
If enabled, inserts the default filename. The filename indicates the type of data that is saved, for example, RefCurve.

Remote command:
MMEMory:AUTonaming:PREFix on page 1095

Date/time
If enabled, the current date and time are inserted in the filename pattern.

Remote command:
MMEMory:AUTonaming:TIME on page 1095

Index
If enabled, inserts an index.

Remote command:
MMEMory:AUTonaming:INDex on page 1095

Enable autosave
Enables the automatic saving. A saveset is generated and saved in a given interval that you define with "Autosave interval". If you switch off the instrument, the last saved settings are recovered.

Remote command:
MMEMory:AUSave:ENABle on page 1095
MMEMory:AUSave:INTerval on page 1095

Default path for all file operations
Defines the path that is displayed in the file selection dialog box for loading and storing operations. Locally, all user data is written to `/home/storage/userData`. You can create subfolders in this folder.

If a USB storage device is connected, the path is automatically changed to the USB path `/run/media/usb/<MyDriveName>/`.

To switch the directory quickly, double-tap the path button. Use the symbols on the left of the file explorer box to change the directory.

Remote command:
MMEMory:AUTonaming:DEFaultpath on page 1096

Reset path
Resets the default file path to the factory default.

Remote command:
MMEMory:AUTonaming:RESPath on page 1096
MMEMory:AUTonaming:RESall on page 1096

5.8.1.2 Defining default file paths and names

When a save or load operation is performed, a default filename and path is provided. You can configure which path is used, and how the filename is generated. In the file selection dialog box, you can change the folder and name as desired.

To define the default file path

1. Tap "Menu" > "Settings".
2. Select the "Save/recall" tab.
3. Select the "Autonaming" tab.
4. Double-tap the path button.

   The directory selection dialog box is opened.
5. Select the folder in which the data is stored by default. Use the symbols on the left of the file explorer box to switch to often used directories.
   Alternatively, you can tap the "Default path for all file operations" field and type the path.
6. To restore the factory-set default path, tap "Reset" next to the path field.

To define the automatic filename pattern

The automatic filename pattern can consist of the following elements:

<FileName>_<UserText>_<Date>_<Index>_<Time>

The prefix depends on the data type to be stored and cannot be changed by the user. The other elements can be enabled or disabled as required.

1. Tap "Menu" > "Settings".
2. Select the "Save/recall" tab.
3. Select the "Autonaming" tab.
4. If you want to exclude the "File name base", "Date/time" or an "Index" (serial number), disable the corresponding option.
5. To insert a user-defined text after the prefix, enable "User text". Enter the text in the edit field.

   The specified elements are used to generate the default filename for the next storage operation.

5.8.2 CSV export

Access: "Menu" > "Settings" > "Save/recall" > "CSV export" tab.

Currently, there are no active settings in this dialog.

6 Acquisition and waveform setup

6.1 Horizontal setup

The "Horizontal" dialog provides the timebase configuration for channel and spectrum waveforms.

6.1.1 About the horizontal system

Horizontal settings, also known as timebase settings, adjust the waveforms in horizontal direction.

Typically, the trigger is the determining point of the waveform record. In many scenarios, you want to analyze the waveform some time before or after the trigger. To adjust the horizontal acquisition window to the waveform section of interest, you can use the following parameters:

- The **horizontal position** defines the time distance of the trigger point (the zero point of the diagram) to the reference point. Changing the horizontal position, you can move the trigger point, even outside the screen.
- The **reference point** is the rescaling center of the time scale on the screen. If you modify the time scale, the reference point remains fixed on the screen, and the scale is stretched or compressed to both sides of the reference point.

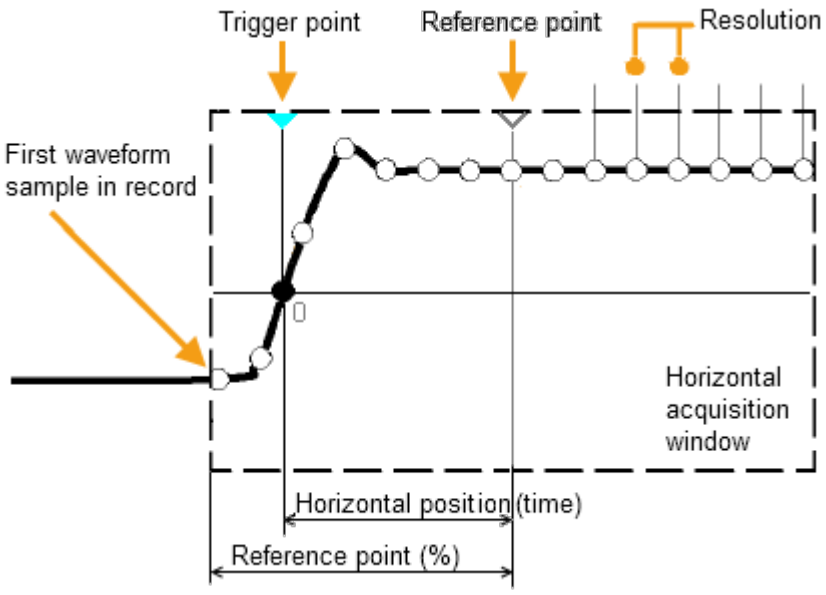

Unlike vertical settings, which are waveform-specific, the horizontal settings apply to all active waveforms.

Timebase settings are interdependent:

*Timebase range = Time scale * Number of divisions*

The number of divisions is 10, which is the only constant parameter.

6.1.2 Horizontal Setup settings

Access: "Menu" > "Horizontal" > "Setup" tab, or tap the "Horizontal" label above the diagram.

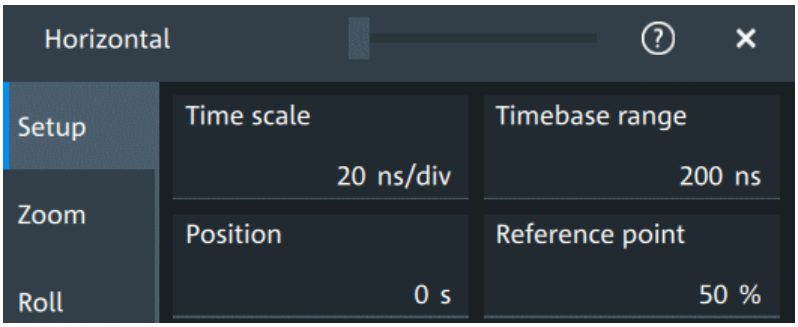

Time scale
Sets the horizontal scale, the time per division, for all waveforms in the time domain, for example, channel and math waveforms.

Increase the scale to see a longer time interval of the waveform. Decrease the scale to see it in more detail. The scale has a point that remains fixed on the screen when the scale value is changing: the reference point.

Remote command:
`TIMebase:SCALe` on page 1101

Timebase range
Sets the time of one acquisition, which is the time across the 10 divisions of the diagram: *Acquisition time = Time scale * 10 divisions*.

Changing the acquisition time changes the time scale, too.

For long timebases, the acquisition progress is shown in the acquisition label.

Remote command:
`TIMebase:RANGe` on page 1101

Position
Defines the time distance between the reference point and the trigger point, which is the zero point of the diagram. The horizontal position is also known as trigger offset.

If you want to see a section of the waveform some time before or after the trigger, enter this time as horizontal position. The requested waveform section is shown around the reference point. Use positive values to see waveform sections after the trigger - the waveform and the diagram origin move to the left.

Remote command:
`TIMebase:HORizontal:POSition` on page 1101

Reference point
Sets the position of the reference point in % of the screen. It defines which part of the waveform is shown.

The reference point marks the rescaling center of the time scale on the screen. If you modify the time scale, the reference point remains fixed on the screen, and the scale is stretched or compressed to both sides of the reference point. If the "Position" is 0, the trigger point is on the reference point.

The reference point is not marked in the diagram.

Remote command:
`TIMebase:REFerence` on page 1102

6.1.3 Zoom settings

The zoom settings are described in Section 9.1, "Zoom", on page 226.

6.1.4 Roll mode

Access: "Menu" > "Horizontal" > "Roll" tab.

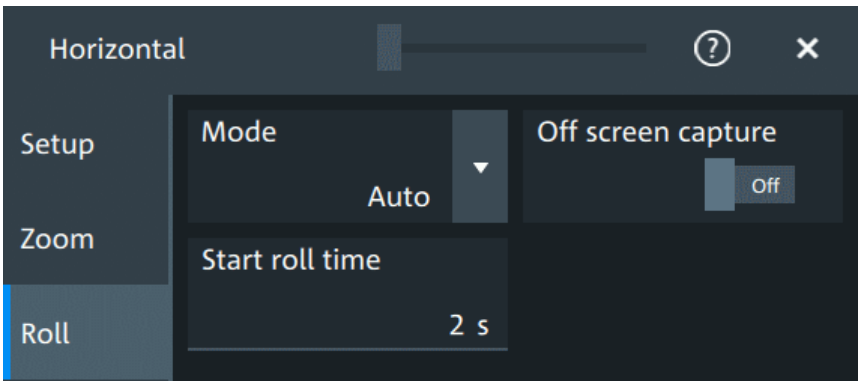

In this dialog, you can define the behavior of the roll mode.

Roll mode and acquisition setup

The settings "SR mode" and "RL mode" can affect the display of the waveform display in roll mode if these settings are set to "Manual". The resulting acquisition time is centered on the screen center.

If the acquisition time (*record length / sample rate*) is longer than the timebase range, the roll mode starts invisibly, outside the right screen edge. The data appears with some delay.

If the acquisition time is shorter than the timebase range, there is a gap from the right screen edge to the beginning of the data. If "SR mode" and "RL mode" are set to "Auto", the instrument optimizes the acquisition settings.

Roll mode settings

Progress bar....126
Mode....126
Start roll time....126
Off screen capture....127

Progress bar

The "Roll" progress bar in the "Acquisition" label shows how the record length is filled. The bar turns green when all samples are acquired, and the record is filled.



Left = incomplete roll waveform
Middle = roll completed with "Off screen capture" = Off
Right = roll completed with "Off screen capture" = On

Mode

Selects, if the roll mode is started automatically by the instrument or if it is turned off.

In roll mode, the instrument shows the waveforms immediately, without waiting for the complete acquisition of the waveform record. If the timebase is slow - at long time scale values - the roll mode saves time waiting for the waveform display. The instrument displays the newly acquired waveform points at the right edge of the display and moves the waveform to the left.

The roll mode has the following restrictions:

- Roll mode disables persistence.
- Event actions are not possible.

The instrument activates the roll mode automatically if the following conditions are fulfilled:

- "Timebase range" exceeds the defined "Start roll time".
- "Acquisition mode" is set to "Sample" or "Peak detect".
- Actual sample rate ≤ 0.05 * sample rate of the instrument, i.e. ≤ 250 Msample/s or 125 Msample/s depending on the number of active channels.
- "N-single/avg count" = 1.
- Fast segmentation is disabled.
- Event actions are disabled.
- All serial buses are disabled.
- All mask tests are disabled.

Measurement statistics evaluate the currently displayed waveform. Therefore, "Measure all events" is enabled automatically in roll mode.

See also: "Roll mode and acquisition setup" on page 125.

Remote command:

`TIMebase:ROLL:ENABle` on page 1102

`TIMebase:ROLL:STATe?` on page 1103

Start roll time

Sets the minimum acquisition time for the automatic start of the roll mode.

The instrument activates the roll mode automatically if the "Timebase range" exceeds the value of the "Start roll time".

Remote command:
`TIMebase:ROLL:MTIMe` on page 1102

Off screen capture
If enabled, the analyzable waveform in roll mode is extended. You can run the roll mode, stop the acquisition after some time, and analyze the data that is on the display and in the unvisible area on the left.

If "Off screen capture" = Off, the analyzable record length is the value that is set in the "Acquisition" > "Setup" tab. The record length determines the length of the displayed waveform.

If "Off screen capture" = On, the whole acquisition memory can be used. After the defined record length is filled, more data is recorded at the left of the completed record length until you stop the acquisition or the acquisition memory is filled.

The current number of recorded data points is shown in the progress bar when the bar is green, or returned by the remote command `ACQuire:ROLLmode:POINts?`. See also: "Roll mode and acquisition setup" on page 125.

The "Roll" progress bar in the "Acquisition" label shows how the record length is filled.

After stopping the acquisition, you can analyze the complete roll waveform, including the invisible part:
- Increase the "Time scale" to see a longer part of the waveform.
- Scroll the waveform: tap and drag the waveform to the right.

If you want to save the waveform, disable "Off screen capture". When the needed data is displayed, save the waveform. Thus, one record length is saved. With active "Off screen capture", the amount of data cannot be limited.

Remote command:
`ACQuire:ROLLmode:OSCapture` on page 1103
`ACQuire:ROLLmode:POINts?` on page 1103

6.1.5 Reference clock

Access: "Menu" > "Horizontal" > "Setup" tab > "Ref clock"

The oven-controlled crystal oscillator (OCXO) produces a 10 MHz internal reference signal with precise and stable frequency. You can output this clock signal for synchronization of other instruments. Conversely, you can also use an external 10 MHz reference signal. The input and output connectors for reference signals are on the rear panel of the instrument.

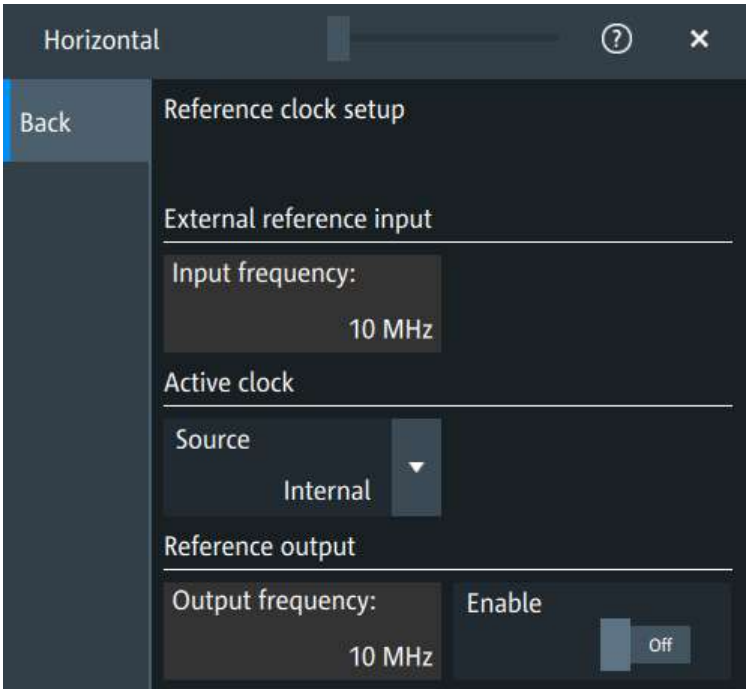

Input frequency
Shows the frequency of the external reference signal. The frequency of the external reference must be 10 MHz.

Active clock: Source
Selects the source of the reference clock: internal reference signal of the OCXO, or an external reference signal.

Remote command:
`SENSe[:ROSCillator]:SOURce` on page 1142

Output frequency
Shows the frequency of the output reference signal. The frequency is always 10 MHz.

Remote command:
`SENSe[:ROSCillator]:OUTPut:FREQuency?` on page 1142

Reference output: Enable
Sends the used reference clock signal to the Ref Out 10MHz connector.

If "Active clock: Source" is set to extern, the external reference signal is output instead of the internal clock.

Remote command:
`SENSe[:ROSCillator]:OUTPut[:ENABle]` on page 1142

6.2 Acquisition

Access: "Menu" > "Acquisition".

Acquisition settings define the processing of the captured samples in the instrument.

6.2.1 About the acquisition system

Sampling and processing

The A/D converter samples the continuous signal under test at specific points in time and captures digital values. The converter is working at a constant rate specified in GHz.

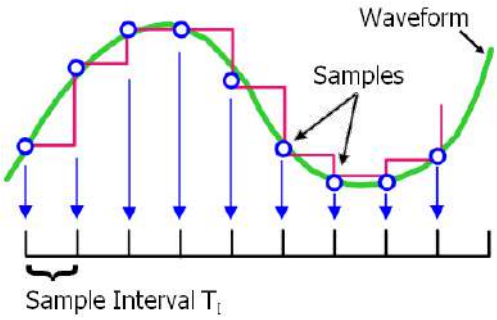

The captured values are processed according to the acquisition settings. The result is a waveform record that contains **waveform samples** and is stored in the **waveform memory**. The waveform samples are displayed on the screen and build up the waveform.

The number of waveform samples in one waveform record is called **record length**. The rate of recording waveform samples - the number of waveform samples per second - is the **sample rate**. The higher the sample rate, the better the resolution is and the more details of the waveform are visible.

Sample rate = 1 / Resolution

The sample rate can be the same as the constant rate of the A/D converter, or higher, or lower. To get a higher sample rate, interpolation is used. Several interpolation methods are available. Other processing methods reduce the sample rate, or build the resulting waveform from several consecutive acquisitions of the signal. These methods are called acquisition modes.

Minimum sample rate and aliasing

A sufficient resolution is essential for correct reconstruction of the waveform. If the signal is undersampled, aliasing occurs - a false waveform is displayed. To avoid aliasing and accurately reconstruct a signal, the sample rate must be at least 3 to 5 times the fastest frequency component of the signal. A higher sample rate increases signal fidelity, increases the chance to capture glitches and other signal anomalies, and improves the zoom-in capabilities.

Interleaving

The MXO 5 with **8 channels** achieves its highest sample rate of 5 Gsample/s by interleaving channels by twos. Interleaving assumes that only one of the paired channels

is used. If the second channel of a pair is used (on display, or as trigger source, math source, or measurement source), the interleaving mode is disabled. Without interleaving, the channels work with 2.5 Gsample/s and reduced bandwidth.

The interleaved channels of an 8-channel oscilloscope are:

- C1 and C5
- C2 and C6
- C3 and C7
- C4 and C8

The **4-channel** MXO 5 is always in interleaving mode, and all 4 channels work with 5 Gsample/s and maximum bandwidth.

6.2.2 Acquisition setup

Access: "Menu" > "Acquisition" > "Setup" tab.

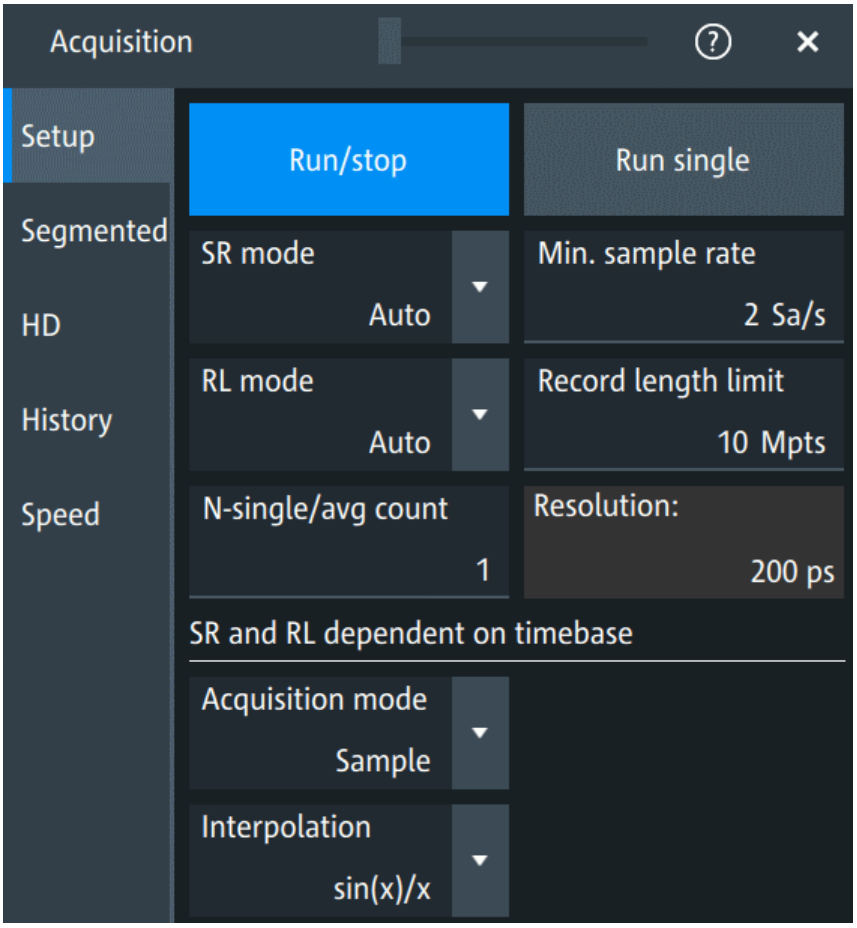

Figure 6-1: Acquisition settings: automatic sample rate and record length

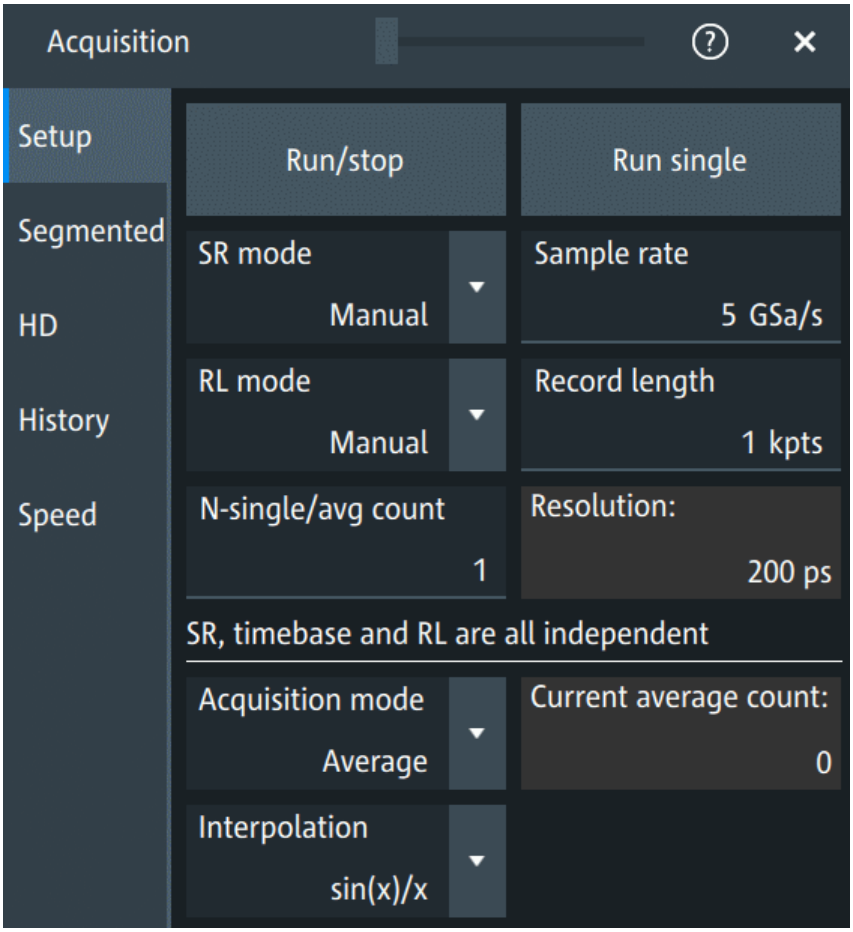

Figure 6-2: Acquisition settings: manual sample rate and record length

Run/stop
Starts and stops the continuous acquisition.

The [Run / Stop] key lights green when the acquisition is running. When the acquisition is stopped, the key lights red.

As a remote action in a ScopeSync setup, "Run/stop" starts a continuous acquisition on both connected scopes, or stops the acquisition. With active ScopeSync, continuous acquisition is a series of single acquisitions: after each trigger, the acquired waveforms of selected channels are transferred to the leading scope. Only waveforms that are based on the identical trigger event are shown simultaneously on the leading scope. When you stop the acquisition, the ongoing waveform import is completed. There is no waveform or measurement result persistence.

The Run / Stop key and the "Run / stop" tool adapt their function if ScopeSync is active.

Remote command:
`RUN` on page 1100
`STOP` on page 1100

Run single
Starts a defined number of acquisitions.

The [Single] key lights green when the acquisition is running. When the acquisition is stopped, the key lights red.

To set the number of acquisitions, set "N-single/avg count" in the "Acquisition" setup. The acquisition progress is shown in the acquisition label, see "Progress information" on page 84.

As a remote action in a ScopeSync setup, "Run single" starts a single acquisition on both connected oscilloscopes. It is a real single acquisition, the "N-single/avg count" setting is ignored. The [Single] key and the "Run single" tool adapt their function if ScopeSync is active. Single mode is the preferred acquisition mode in ScopeSync.

Remote command:
`SINGle` on page 1100

SR mode
Defines how the sample rate is set.

The sample rate considers the samples of the ADC, and the processing of the captured samples including interpolation.

"Auto" Sample rate is determined automatically and changes due to instrument internal adjustments due to other setting changes. You can set a minimum sample rate with Min. sample rate.

"Manual" The sample rate is manually defined with Sample rate.

Remote command:
`ACQuire:SRATe:MODE` on page 1108

Min. sample rate
Sets the minimum value of the sample rate for calculation in automatic sample rate mode. It is the sample rate of the processed waveform record including interpolation.

Remote command:
`ACQuire:SRATe:MINimum` on page 1108

Sample rate
Sets the number of waveform points per second in manual sample rate mode. It is the sample rate of the processed waveform record including interpolation.

The sample rate in the dialog differs from the sample rate that is shown in the acquisition label above the diagram. The value in the acquisition label shows the sample rate of the acquisition itself, before interpolation. It is the ADC sample rate or an integer decimated value of the ADC sample rate, which allows you to estimate whether the signal was sufficiently sampled in the acquisition.

If interpolation is used to reach the defined value, it is indicated by "Sample rate (IT)" in the dialog.

Remote command:
`ACQuire:SRATe[:VALue]` on page 1108

RL mode
Selects the mode of the waveform record length adjustment.

The record length is the number of waveform samples that are stored in one waveform record after processing, including interpolation. It determines the length of the displayed waveform.

"Auto" Record length is determined automatically and changes due to instrument internal adjustments due to other setting changes. You can set a maximum record length with Record length limit.

"Manual" The waveform record length is manually defined with Record length.

Remote command:
`ACQuire:POINts:MODE` on page 1106

Record length limit
Sets the maximum value of the record length for calculation in automatic record length mode.

Remote command:
`ACQuire:POINts:MAXimum` on page 1106

Record length
Sets the record length in manual record length mode.

If the record length value is too high in combination with other settings and activated features, the memory is not sufficient to process the data. In this case, a warning information is shown in the dialog.

Remote command:
`ACQuire:POINts[:VALue]` on page 1106
`ACQuire:POMemory?` on page 1107

N-single/avg count
The acquisition and average count has several effects:

- It sets the number of waveforms acquired with "Run single".
- It defines the number of waveforms used to calculate the average waveform. Thus, the instrument acquires sufficient waveforms to calculate the correct average if "Average" is enabled for waveform arithmetic. The higher the value is, the better the noise is reduced.
- It sets the number of acquisitions to be acquired in a fast-segmentation acquisition series, and in the history.
- It is the "Finished" criteria for a mask test.

The setting is read-only if "Segmented" > "Acquire maximum" is "On". See also "Acquire maximum" on page 136.

Remote command:
`ACQuire:COUNt` on page 1105

Resolution
Shows the current resolution.

The resolution is the time between two waveform samples in the waveform record. It considers the processing of the captured samples including interpolation. A fine resolution with low values produces a more precise waveform record. The resolution is the reciprocal of the sample rate.

If interpolation is used to reach the defined value, it is indicated by "Resolution (IT)" in the dialog.

Remote command:
`ACQuire:RESolution?` on page 1107

Acquisition mode
Sets how the waveform is built from the captured samples.

"Sample" Usually, most signals are displayed optimally with this acquisition mode but very short glitches can remain undiscovered by this method.

"Peak detect" The minimum and the maximum of n samples are recorded as waveform points, the other samples are discarded. Thus the instrument can detect fast signal peaks at slow time scale settings that would be missed with other acquisition modes.

"Envelope" Each acquisition is done in peak detection mode, and the minimum and maximum values in a sample interval over some consecutive acquisitions build the envelope. The resulting diagram shows two envelope waveforms: the minimums (floor) and maximums (roof).

"Average" The average is calculated from the data of the current acquisition and a specific number of consecutive acquisitions before. The method reduces random noise. It requires a stable, triggered and repetitive signal.
The number of acquisitions for average calculation is defined with N-single/avg count.
If the waveform is clipped, the instrument shows a distorted average waveform to indicate the clipping. Adjust the vertical scale to avoid the clipping. The acquisition progress is shown in the acquisition label.

Remote command:
`ACQuire:TYPE` on page 1109

Current average count
Shows the current number of acquired waveforms that contribute to the average, for Acquisition mode = "Average".

Remote command:
`ACQuire:AVERage?` on page 1104

Interpolation
Selects the interpolation method.

If the defined sample rate ("Sample rate") is higher than the ADC sample rate, interpolation adds points between the captured samples of the waveform by various mathematic methods. All captured and interpolated points are used in measurements, and they are included in exports. If interpolation of samples is active, it is indicated by "Sample rate (IT)" and "Resolution (IT)".

"Linear" Two adjacent ADC sample points are connected by a straight line, the interpolated points are located on the line. You see a polygonal waveform similar to the real signal, and also the ADC sample points as vertexes.

"sin (x)/x" Two adjacent ADC sample points are connected by a sin(x)/x curve, and also the adjoining sample points are considered by this curve. The interpolated points are located on the resulting curve. This interpolation method is precise and shows the best signal curve.

"Sample/Hold" The ADC sample points are displayed like a histogram. For each sample interval, the voltage is taken from the sample point and considered as constant, and the intervals are connected with vertical lines. Thus, you see the discrete values of the ADC - the measured samples.

Visual interpolation of the waveforms and zoom waveforms on the display is independent of the calculated sample interpolation, and it is not indicated.

Remote command:
`ACQuire:INTerpolate` on page 1105

6.2.3 Segmentation settings

Access: "Menu" > "Acquisition" > "Segmented" tab.

You can acquire a limited number of segments, or the maximum number.

In the R&S ScopeStudio software, acquisition settings and functions that need an acquisition take effect if the channel source is a simulated waveform, created by the generator. If the channel source is loaded from a file, the acquisition-related settings can be imported with the data from the oscilloscope, either as a saveset, or included in a session. Changing imported acquisition-related settings has no effect.

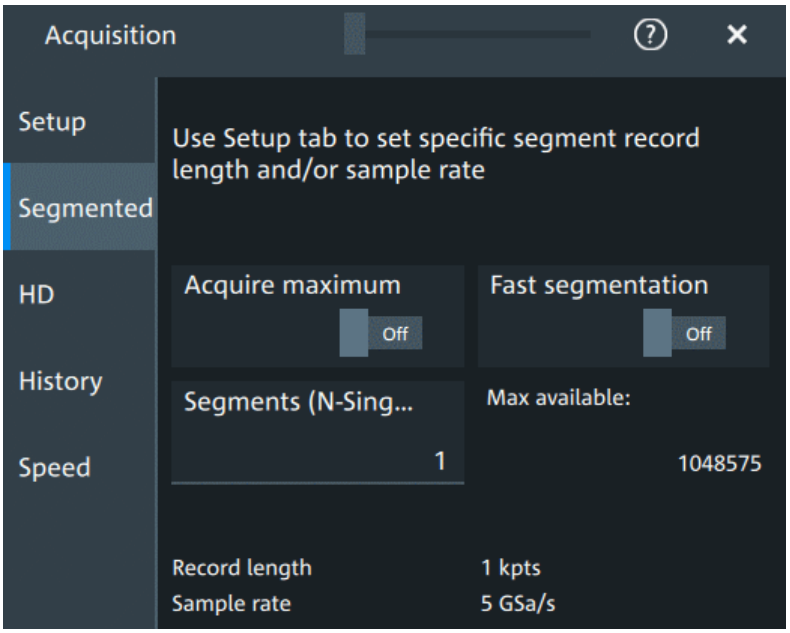

Acquire maximum
The setting takes effect for N-single acquisitions ("Run single"). During continuous acquisition ("Run / stop"), the history is used completely.

If "On", "Segments (N-single)" is set to the maximum number of available segments. Thus, the history is filled completely with an N-single acquisition. "Segments (N-single)" is read-only, you cannot change the value. The number of available segments depends on current the number of active channels, sample rate, record length, and other settings.

If "Off", set the number of segments in "Segments (N-single)", which is the same setting as "N-single/avg count" on the "Setup" tab. Thus you can acquire a fast segmentation acquisition series and history of defined length with "Run single".

You can stop the running acquisition before the series is completed.

The number of acquired waveforms is shown in the "History" dialog, when the history is active.

Remote command:
`ACQuire:SEGMented:MAX` on page 1140

Fast segmentation
If fast segmentation is enabled, the acquisitions are performed as fast as possible, without processing and displaying the waveforms. When acquisition has been stopped, the data is processed and the latest waveform is displayed. Older waveforms are stored in segments. You can display and analyze the segments using the history.

Remote command:
`ACQuire:SEGMented:STATe` on page 1140

Segments (N-single)
See "N-single/avg count" on page 133.

Max available
Shows the maximum number of segments that can be captured with current sample rate and record length settings.

6.2.4 High definition mode

The high definition mode increases the numeric resolution of the waveform signal by using digital filtering, leading to reduced noise. The higher vertical resolution reduces quantization noise and acquires waveforms of higher accuracy with finer details of the signal to be seen. The high definition is also applied to the digital trigger, thus the MXO 5 can trigger with the same high resolution with which they can display signals.

The maximum numeric resolution in high definition mode is 18 bit. The actual value depends on the selected bandwidth. Increasing the bandwidth reduces the resulting digital resolution. For dependencies and details, refer to the MXO 5 specifications.

The number of vertical resolution bits defines the number of vertical levels that the acquisition samples are mapped to (quantization). For example, 16 bits of resolution represent 65536 voltage quantization levels, while 8 bits of resolution represent only

256 voltage levels. The waveform values are recorded with a word length of 16 bit, except for peak detect decimation.

6.2.4.1 High definition settings

Access: "Menu" > "Acquisition" > "HD" tab.

High definition is a special acquisition mode of the oscilloscope. This mode has only two settings - the filter bandwidth and the filter type.

State
Enables high definition mode, which increases the numeric resolution of the waveform signal.

Remote command:
`HDEFinition:STATe` on page 1141

Bandwidth
Sets the filter bandwidth for the high definition mode.

Increasing the bandwidth reduces the resulting digital resolution. For dependencies and details, refer to MXO 5 specifications.

Remote command:
`HDEFinition:BWIDth` on page 1141

Filter characteristics
Selects the filter that is used to reduce the bandwidth:

"Gaussian"	Gaussian filter
"Bessel"	Bessel-Thomson filter, which has maximally flat group delay. It preserves the waveform shape of signals. Bessel filters are preferred in applications requiring high fidelity and timing accuracy.
"Brickwall"	Rectangular filter with full transmission in the pass band and complete attenuation in the stop band.

Remote command:
`HDEFinition:BFTYpe` on page 1141

Resolution in bits
Displays the resulting vertical resolution in high definition mode. The higher the filter bandwidth, the lower the resolution.

Remote command:
`HDEFinition:RESolution?` on page 1141

6.2.5 History settings

The history settings are described in Section 9.3.2, "History setup", on page 244.

6.2.6 Speed

Access: "Menu" > "Acquisition" > "Speed" tab.

The "Speed" dialog shows information on the current acquisition performance values of the MXO 5.

You can see the number of "Acquisitions per second", "Average blind time" and the "Percentage of time captured".

6.3 Vertical setup

The controls and parameters of the vertical system adjust the vertical scale and position of the waveform, and the waveform display. The probe settings also belong to the vertical setup.

The signal icons at the bottom of the display show the most important actual settings for each channel.

The signal icon also indicates if the incoming data is clipped before processing, i.e. the input range of the ADC is exceeded.

There are several ways to adjust vertical settings:

- Use the keys and knobs in the Vertical functional block of the front panel to select the channel, to scale the waveform, and to set the position or offset.
  See Section 3.2.4.4, "Vertical controls", on page 51.
- Use the "Vertical" dialog to adjust all vertical settings. See:
  - Section 6.3.2, "Vertical Setup settings", on page 140
  - Section 6.3.3, "Bandwidth settings", on page 143
  - Section 6.4, "Probes", on page 145
  - Section 6.3.5, "Other vertical settings", on page 144
- On the touchscreen, you can adjust the vertical settings directly on the screen:
  - Drag one finger vertically on the screen to change the position of the selected channel waveform.
  - Spread or pinch two fingers in vertical direction to change the vertical scale of the selected waveform.

6.3.1 About the vertical system

The controls and parameters of the vertical system are used to scale and position the waveform vertically.

Vertical scale and resolution

Vertical scale and vertical position directly affect the resolution of the waveform amplitude. The vertical scale corresponds to the ADC input range. To get the full resolution of the ADC, set up the waveforms to cover most of the height of the diagram.

With an MXO 5, you work with multiple diagrams, and each diagram obtains the full vertical resolution, no matter where the diagram is placed. Therefore, use a separate diagram for each waveform instead of the traditional setup that arranges the waveforms side by side in one diagram.

Bandwidth

For analog applications, the highest signal frequency determines the required oscilloscope bandwidth. The oscilloscope bandwidth should be higher than the maximum frequency included in the analog test signal to measure the amplitude with very little measurement error. To avoid aliasing, the oscilloscope bandwidth should be at least 3 times higher than the maximum frequency included in the signal.

Most test signals are more complex than a simple sine wave and include several spectral components. A digital signal, for example, is built up of several odd harmonics. For digital signals, the oscilloscope bandwidth should be at least 5 times higher than the clock frequency to be measured.

The oscilloscope is not a stand-alone system. You need a probe to measure the signal of interest, and the probe has a limited bandwidth, too. The combination of oscilloscope and probe creates a system bandwidth. To reduce the effect of the probe

on the system bandwidth, the probe bandwidth should exceed the bandwidth of the oscilloscope, the recommended factor is 1.5 x oscilloscope bandwidth.

6.3.2 Vertical Setup settings

Access: "Menu" > "Vertical" > "Setup" tab

The "Setup" tab provides all basic vertical settings. The channels are listed in horizontal subtabs. Make sure to select the correct channel tab before you enter the settings.

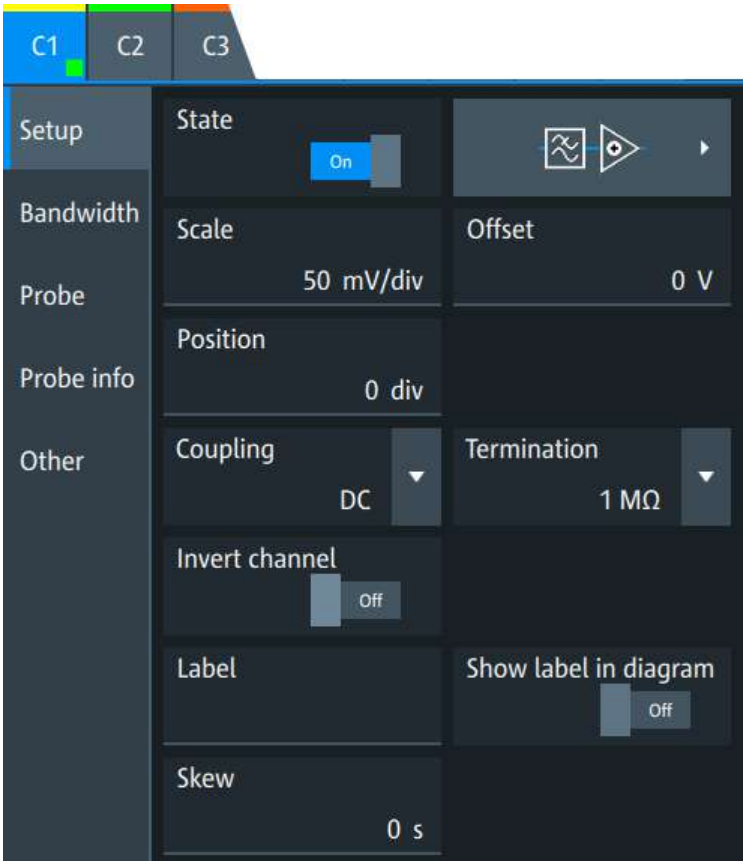

State
Switches the selected channel signal on or off.

The signal icon opens on the signal bar. The waveform of the last acquisition is displayed in the diagram.

Remote command:
`CHANnel<ch>:STATe` on page 1110

Signal flow (graphical button)
Opens a dialog that shows the signal flow as currently configured. In addition, the main settings are shown for information.

Scale
Sets the vertical scale, which defines the displayed amplitude of the selected waveform.

The unit depends on the connected probe.

The current value is shown in the signal icon. Vertical scale directly affects the resolution of the waveform amplitude. To get the best resolution of the ADC, set the waveforms to cover most of the height of the diagram.

Remote command:
`CHANnel<ch>:SCALe` on page 1110

Offset
Sets the offset voltage, which corrects an offset-affected signal. The vertical center of the selected channel is shifted by the offset value and the signal is repositioned within the diagram.

The waveform marker indicates the offset on the vertical scale.

To set the offset automatically, use [Autoset]. The current value is shown in the signal icon.

Use the offset to measure small AC voltages that are overlaid by higher DC voltages. Unlike AC coupling, the DC part of the signal is not lost with offset setting.

If an active probe is connected, the offset limit is defined by the probe. Refer to the documentation of the probe for allowed values.

If a Rohde & Schwarz differential probe is connected, the "Offset" is the common-mode offset. Set the common-mode offset to compensate for a common DC voltage applied to both input sockets (referenced to the ground socket). Thus, you can measure on differential signals with high common mode levels. You can measure the common mode input voltage using the R&S ProbeMeter.

Remote command:
`CHANnel<ch>:OFFSet` on page 1111

Position
Moves the selected signal up or down in the diagram. While the offset sets a voltage, position is a graphical setting given in divisions. The visual effect is the same as for offset.

Remote command:
`CHANnel<ch>:POSition` on page 1111

Coupling
Sets the filter for the input signal. The coupling determines what part of the signal is used for waveform analysis and triggering.

The selected coupling is shown in the signal icon.

"DC" Passes both DC and AC components of the signal.

"AC" Connection through DC capacitor, removes DC and very low-frequency components. AC coupling is useful if the DC component of a signal is of no interest. The waveform is centered on zero volts. AC coupling is available with termination 1 MΩ.

If AC coupling is set, the attenuation of passive probes has no effect, and voltage is applied to the instrument with factor 1:1. Observe the voltage limits, otherwise you can damage the instrument.

Remote command:
`CHANnel<ch>:COUPling` on page 1112

Termination
Selects the input impedance of the channel input according to the connected probe.

Connection with 50 Ω termination is used to connect, for example, active probes. Connection with 1 MΩ termination is used to connect standard passive probes.

Remote command:
`CHANnel<ch>:COUPling` on page 1112

Invert channel
Turns the inversion of the signal amplitude on or off. To invert means to reflect the voltage values of all signal components against the ground level.

Inversion is indicated in the signal icon by a line above the channel name.

If the inverted channel is the trigger source, the instrument triggers on the inverted signal. You can use inversion, for example, to switch the polarity of a differential signal without changing the probe connections.

Remote command:
`CHANnel<ch>:INVert` on page 1112

Label
Defines a label text. The label is shown on the signal icon. Characters and label length are not resticted.

Remote command:
`DISPlay:SIGNal:LABel` on page 1112

Show label in diagram
Displays a waveform label at the waveform in the diagram, with the content defined in "Settings" > "Appearance" > "Grid". See Section 5.3.2, "Grid", on page 103 for details on the content settings.

Skew
Sets a skew value to compensate for the delay of the measurement setup or from the circuit specifics that the instrument cannot compensate automatically. It affects only the selected input channel.

Delay differences between channels are caused by the different length of cables, probes, and other sources. Correct deskew values are important for accurate triggering. Signals that are routed over lines with different lengths have a different propagation delay. This delay can lead to a non-synchronous waveform display.

Remote command:
CHANnel<ch>:SKEW:TIME on page 1113

6.3.3 Bandwidth settings

Access: "Menu" > "Vertical" > "Bandwidth" tab

The "Bandwidth" tab provides all settings that affect the bandwidth of the measurement system. The channels are listed in horizontal subtabs. Make sure to select the correct channel tab before you enter the settings.

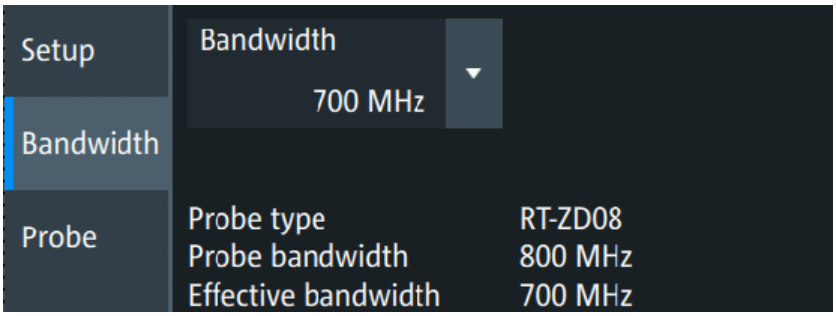

Bandwidth
Sets the bandwidth limit. The specified bandwidth indicates the range of frequencies that the instrument can acquire and display accurately with less than 3 dB attenuation. Frequencies above the limit are removed from the signal, and noise is reduced.

The selected bandwidth is shown on the signal icon.

For basic information, see also: "Bandwidth" on page 139.

"Full" At full bandwidth, all frequencies in the instrument's frequency range are acquired and displayed. Full bandwidth is used for most applications. However, at full bandwidth, the displayed bandwidth can be less than the instrument bandwidth depending on the connected probe, the number of active channels and other settings.

"xx MHz" Frequencies above the selected limit are removed to reduce noise.

Remote command:
CHANnel<ch>:BANDwidth on page 1113

Probe type, Probe bandwidth
Shows the type of the connected probe and its bandwidth. The probe is recognized automatically, or selected in the "Probe" tab. See Section 6.4.1, "Common probe settings", on page 145.

Effective bandwidth
Shows the effective bandwidth of probe and oscilloscope system.

6.3.4 Probe settings

See Section 6.4, "Probes", on page 145.

6.3.5 Other vertical settings

Access: "Menu" > "Vertical" > "Other" tab

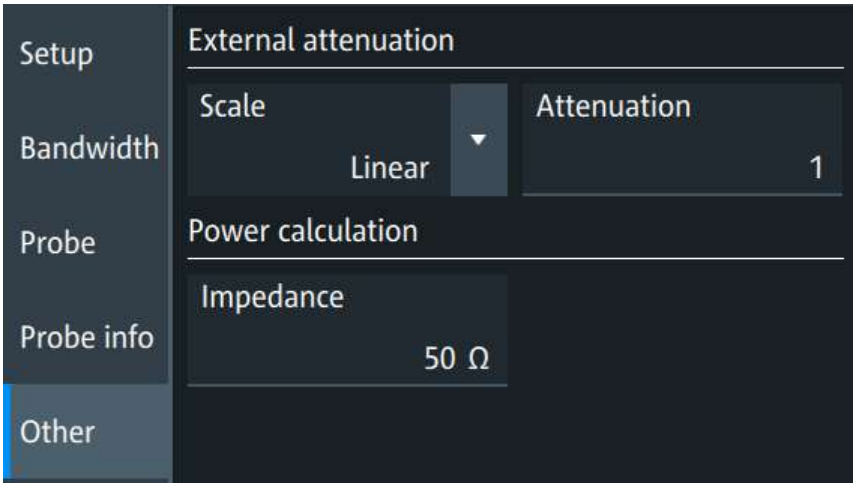

External Attenuation: Scale, Attenuation
Consider a voltage divider that is part of the DUT before the measuring point. The external attenuation is included in the measurement, and the instrument shows the results that would be measured before the divider. External attenuation can be used with all probes.

"Scale" Select linear or logarithmic attenuation scale.

"Attenuation" Enter the attenuation of the voltage divider according to the selected scale. The conversion from linear to logarithmic values depends on the "Vertical unit" of the probe:
For voltage-based unit (V and A):
*attenuation (dB) = 20 * log_{10}(attenuation factor)*
For power-based unit (W):
*attenuation (dB) = 10 * log_{10}(attenuation factor)*

Remote command:
`CHANnel<ch>:EATScale` on page 1114
`CHANnel<ch>:EATTenuation` on page 1114

Impedance
Sets the impedance of the connected probe for power calculations and measurements.

The value is used, for example, for scale calculation in the spectrum diagram.

Remote command:
`CHANnel<ch>:IMPedance` on page 1115

6.4 Probes

With MXO oscilloscopes, you can use various probe types. Mostly these probes are passive and active voltage probes. The instrument can detect many probes and read out the probe-specific parameters, for example, bandwidth and attenuation.

You find all settings that are relevant for the connected probe in the "Vertical" > "Probe" tab. The settings on the "Probe" tab change according to the type of the attached probe. Probes with Rohde & Schwarz probe interface (probe box), and also many other passive voltage probes, are recognized by the instrument. The oscilloscope reads out the main characteristics of the probe and displays them. Other probes cannot be detected, but their characteristics are known to the instrument. These known probes are called "Predefined probes". Probes that are not recognized automatically and not predefined are unknown probes, they require manual setting of measurement unit and attenuation.

The complete characteristic of the connected probe is shown on the "Vertical" > "Probe Info" tab.

6.4.1 Common probe settings

Access: "Menu" > "Vertical" > "Probe" tab

Most the settings in the "Probe" tab are available for all probes. For some probe types, additional settings are needed. These settings are described in the sections for the individual probe types.

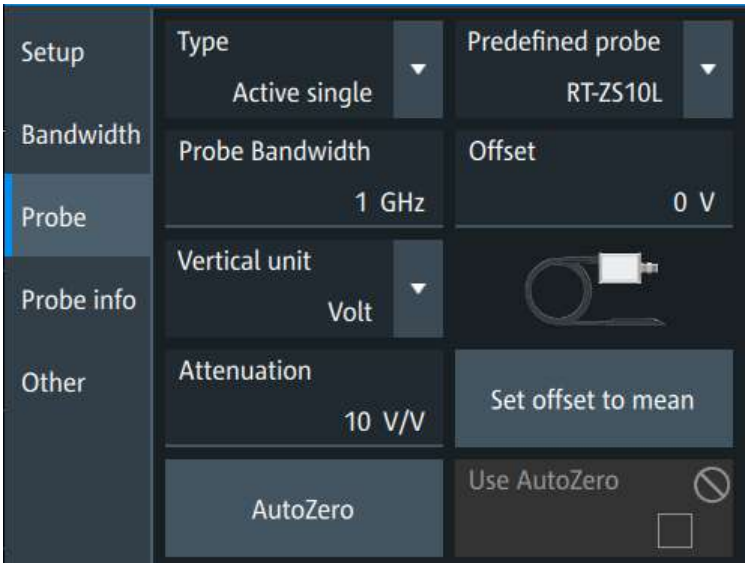

An external attenuation can be set on the "Other" tab, see Section 6.3.5, "Other vertical settings", on page 144.

The common probe settings are:

Predefined probe, Type and Name of the probe 146
Probe bandwidth 146
Offset 146
Vertical unit 146
Attenuation 146
Set offset to mean 147
AutoZero, Use AutoZero 147

Predefined probe, Type and Name of the probe
The model name and type of a detected probe are shown in the dialog.

If the instrument cannot recognize the probe, "None" is indicated in the "Type" and "Predefined probe" lists. Select the used probe "Type", and then the used model in "Predefined probe". The corresponding bandwidth, and attenuation or gain are shown.

If the probe is not detected and not listed as predefined probe, it is an unknown probe. To configure these probes, set "Type" to "User defined". Then select the attenuation or gain in "Predefined probe". You can also adjust the Vertical unit and Attenuation separately.

Remote command:
`PROBe<ch>:SETup:NAME?` on page 1119
`PROBe<ch>:SETup:TYPE?` on page 1120
`PROBe<ch>:SETup:STATe?` on page 1120
`PROBe<ch>:SETup:ATTenuation:DEFProbe` on page 1117

Probe bandwidth
Shows the bandwidth of the connected probe. For probes that are not detected or predefined, set the bandwidth manually.

Remote command:
`PROBe<ch>:SETup:BANDwidth?` on page 1118

Offset
Channel offset that is also set on "Vertical" > "Setup" tab. See "Offset" on page 141.

Vertical unit
Shows the unit of the connected probe if the probe is detected or predefined. For unknown probes, select the unit that the probe can measure.

Remote command:
`PROBe<ch>:SETup:ATTenuation:UNIT` on page 1118

Attenuation
Shows the attenuation of the connected probe if the probe is detected or predefined. If the probe is unknown to the instrument, set the correct attenuation of the probe in "Manual attenuation".

The vertical scaling and measured values are multiplied by this factor so that the displayed values are equal to the actual measured signal values.

Make sure to set the attenuation factor on the instrument according to the probe being used. Otherwise, the measurement results do not reflect the actual voltage level, and you might misjudge the actual risk.

Remote command:
PROBe<ch>:SETup:ATTenuation[:AUTO]? on page 1116
PROBe<ch>:SETup:ATTenuation:MANual on page 1116

Set offset to mean
Compensates automatically for a DC component of the input signal using the result of a background mean measurement.

The result is shown in "Offset". The function is probe-independent and supports quick and convenient measurements of input signals with different DC offsets. It detects offset values even when the signal is out of the current measurement range. It also sets the zero level to the determined DC offset in the middle of the screen and thus prevents clipping of the waveform.

Remote command:
PROBe<ch>:SETup:OFFSet:TOMean on page 1118

AutoZero, Use AutoZero
Voltage probes can have a zero error. The zero error is the voltage appearing at the probe output when nothing is connected to the probe. If a zero error occurs, it results in an external offset and the waveform is not displayed around 0 V.

To correct the zero error of voltage probes, short the signal pin and the ground pin together. Then select "AutoZero". While the alignment is running, the instrument switches to DC coupling to display the waveform correctly.

To correct the zero error, enable "Use AutoZero".

"AutoZero" uses the current scale and attenuation settings during alignment. If you change these settings, e.g. the vertical scale, repeat "AutoZero".

If a current probe is connected, the function demagnetizes the probe's sensor head and sets the waveform to zero position.

Remote command:
PROBe<ch>:SETup:OFFSet:AZERo on page 1119
PROBe<ch>:SETup:OFFSet:USEautozero on page 1119

6.4.2 Setup for passive probes

Passive probes are the most widely used probes for voltage measurements with oscilloscopes. If a passive probe is connected, the probe attenuation is read out and shown in the "Probe" tab.

Passive probes require compensation, see Section 6.4.9, "Adjusting passive probes", on page 166.

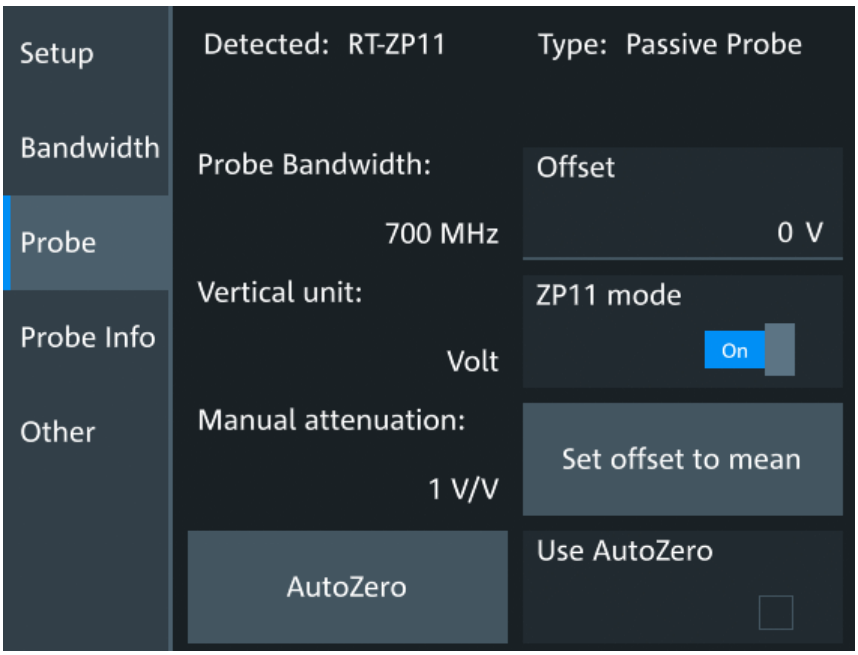

Figure 6-3: Passive probe R&S RT-ZP11, detected by the oscilloscope

The settings for passive probes are common settings, which are available for all probe types. See Section 6.4.1, "Common probe settings", on page 145 for description of the settings.

For R&S RT-ZP11, a special setting is available.

ZP11 mode
Enable if R&S RT-ZP11 is connected to adjust the probe bandwidth to 700 MHz.

If you use 500 MHz passive probe, e.g. R&S RT-ZP10, disable the setting.

6.4.3 Setup for active voltage probes

Active voltage probes with Rohde & Schwarz probe interface have an integrated data memory that contains identification data and individual probe correction parameters. The MXO 5 can detect these probes and read out the data. Furthermore, the Rohde & Schwarz probe interface provides special features: the micro button and the ProbeMeter.

Active voltage probes that are offered by Rohde & Schwarz but not equipped with a Rohde & Schwarz probe interface are known to the MXO 5 as predefined probes.

6.4.3.1 Settings for the Rohde & Schwarz probe interface

The Rohde & Schwarz probe interface provides special features: the micro button and the ProbeMeter.

MicroButton
The micro button is located on the probe head. Pressing this button, you initiate an action on the instrument directly from the probe. The button is disabled during internal automatic processes, for example, during self-alignment, autoset, and level detection.

Select the action that you want to start from the probe.

"Run continuous"
Starts or stops the acquisition (same as Run / Stop key).

"Run single" Starts a defined number of acquisitions (same as [Single] key).

"Autoset" Starts the autoset procedure (same as Autoset key).

"Auto zero" Starts an auto zero measurement.

"Offset to mean"
Performs an automatic compensation for a DC component of the input signal using the result of a background mean measurement.

"Save image to file"
Saves the current display as image according to the image settings.

"No action" Select this option to prevent unwanted actions due to unintended usage of the micro button.

"Find trigger level" Sets the trigger level automatically to *0.5 * (MaxPeak – MinPeak)*.

"Probe mode" Only available if a R&S RT-ZM modular probe is connected. Sets the measurement mode of the modular probe.

"Probe setup" Opens the probe setup on the screen.

Remote command:
`PROBe<ch>:SETup:MODE` on page 1121

ProbeMeter
Activates the integrated R&S ProbeMeter on probes with Rohde & Schwarz probe interface.

The R&S ProbeMeter is a voltmeter. It measures DC voltages between the probe tip and ground connection or between the probe tips with very high precision. The measurement runs continuously and in parallel to the measurements of the oscilloscope.

If a single-ended or power rail probe is connected, the ProbeMeter measures DC voltages between the probe tip and ground connection and enables ground-referenced measurements of voltages.

If a differential probe is connected, you can select if the ProbeMeter measures differential and common mode voltages, or single-ended voltages. See "Display" on page 151.

Remote command:
`PROBe<ch>:PMETer:STATe` on page 1123
`PROBe<ch>:PMETer:RESults:SINGle?` on page 1123
`PROBe<ch>:PMETer:RESults:COMMon?` on page 1124
`PROBe<ch>:PMETer:RESults:DIFFerential?` on page 1124
`PROBe<ch>:PMETer:RESults:NEGative?` on page 1125
`PROBe<ch>:PMETer:RESults:POSitive?` on page 1125

6.4.3.2 Setup for R&S RT-ZD differential probes

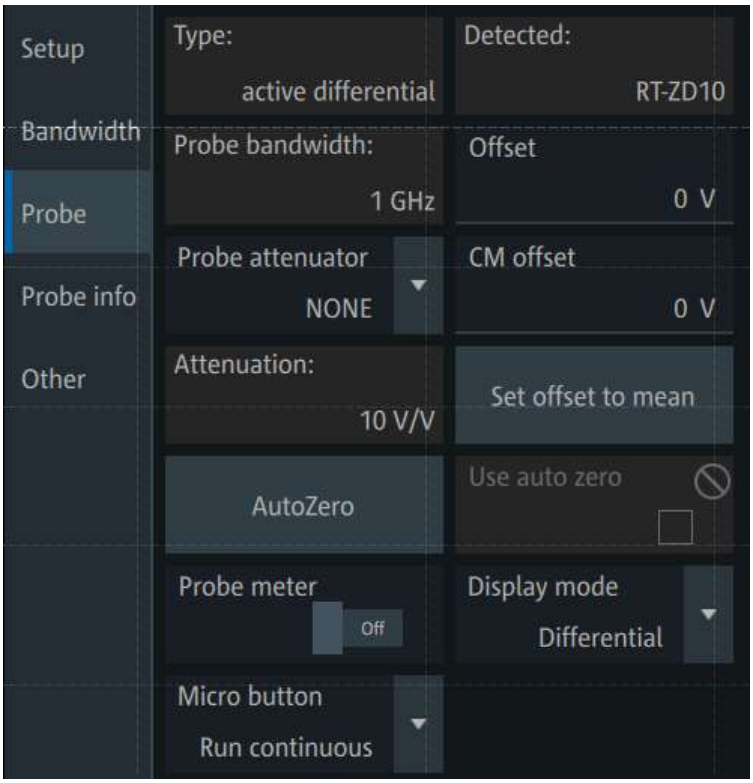

Figure 6-4: Probe setup for active differential probe R&S RT-ZD30

Most settings are common settings, which are available for all probe types. See Section 6.4.1, "Common probe settings", on page 145 for description of these settings.

R&S RT-ZD differential probes have the Rohde & Schwarz probe interface and support its functions. For details, see Section 6.4.3.1, "Settings for the Rohde & Schwarz probe interface", on page 148.

The "Offset" is the differential offset, see "Offset" on page 141.

Specific settings for R&S RT-ZD probes are the following:

CM offset
Sets the common-mode offset to compensate for a common DC voltage that is applied to both input sockets (referenced to the ground socket). The setting is available for Rohde & Schwarz differential probes and for modular probes in CM measurement mode.

Offset compensation is particularly helpful for measurements on differential signals with high common mode levels, for example, current measurements using a shunt resistor. You can measure the common mode input voltage using the R&S ProbeMeter.

Remote command:
`PROBe<ch>:SETup:CMOFfset` on page 1122

Probe attenuator
If you use an external attenuator together with one of the differential active probes R&S RT-ZD10/20/30, select the attenuator used to include its attenuation in the measurements.

Remote command:
`PROBe<ch>:SETup:EPATtenuator` on page 1123

Display
Selects the voltage to be measured by the ProbeMeter of differential active probes:

- "Differential / Common Mode":
  Differential voltage is the voltage between the positive and negative signal sockets. Common mode voltage is the mean voltage between the signal sockets and the ground socket. It measures the voltage level relative to ground, for example, to check the operating voltage window.
- "Single Ended Pos/Neg":
  Measures the voltage between the positive/negative signal socket and the ground. The ProbeMeter always measures the common mode and differential voltages. Single-ended voltages are calculated values:
  $V_p = V_{cm} + 0.5 * V_{in}$ and $V_n = V_{cm} - 0.5 * V_{in}$

Remote command:
`PROBe<ch>:SETup:DISPlaydiff` on page 1122

6.4.3.3 Setup for R&S RT-ZPR power rail probes

R&S RT-ZPR power rail probes are designed for power integrity measurements. They can measure small signals in the millivolt range with large DC-offset components.

R&S RT-ZPR power rail probes have the Rohde & Schwarz probe interface and support the ProbeMeter, but not the micro button. For details, see Section 6.4.3.1, "Settings for the Rohde & Schwarz probe interface", on page 148.

R&S RT-ZPR probes require 50 Ω input termination.

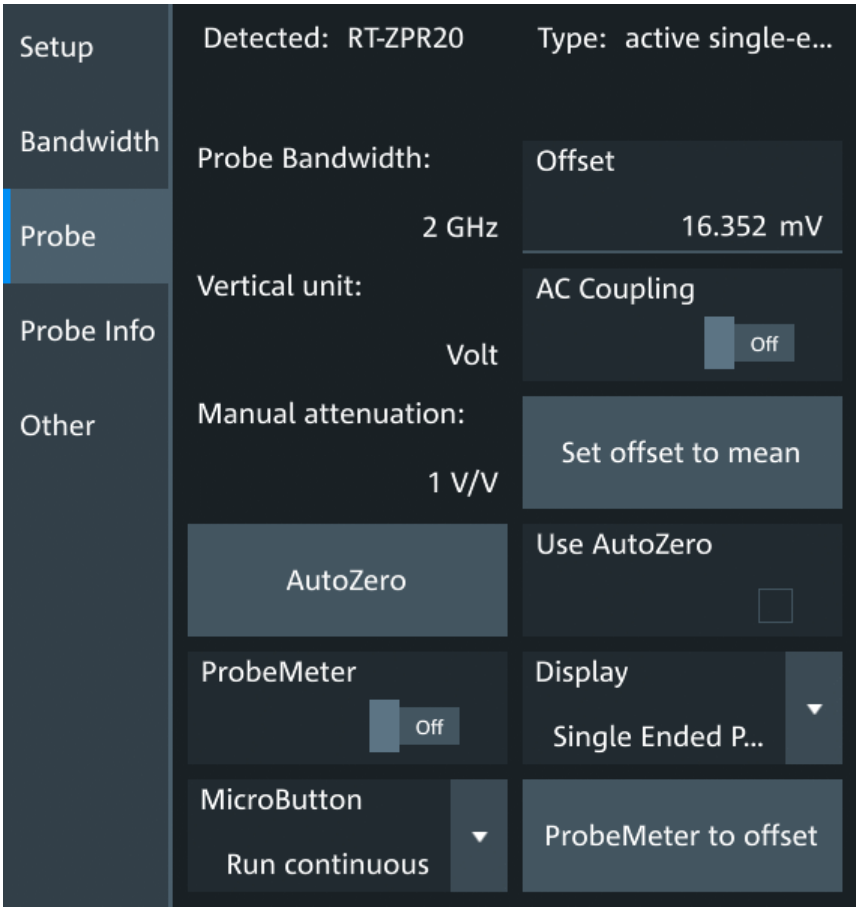

Figure 6-5: Probe setup for power rail probe R&S RT-ZPR20

Most settings are common settings, which are available for all probe types. See Section 6.4.1, "Common probe settings", on page 145 for description of these settings.

The "Offset" is the channel offset, see "Offset" on page 141.

Specific settings for R&S RT-ZPR probe are the following:

AC Coupling
Enables AC coupling in R&S RT-ZPR power rail probes, which removes DC and very low-frequency components. The R&S RT-ZPR probe requires 50 Ω input termination, for which the channel AC coupling is not available. The probe setting allows AC coupling also at 50 Ω inputs.

Remote command:
`PROBe<ch>:SETup:ACCoupling` on page 1122

Set offset to ProbeMeter value, ProbeMeter to offset
Sets the measured R&S ProbeMeter value as offset. Thus, the value is considered in measurements.

The function is available if the ProbeMeter is active.

Remote command:
PROBe<ch>:SETup:ADVanced:PMToffset on page 1126

6.4.3.4 Setup for R&S RT-ZHD high-voltage differential probes

R&S RT-ZHD high-voltage differential probes are designed to measure safely high-voltage floating circuits using a grounded oscilloscope. They extend the measurement capability of oscilloscopes to measure electronic power converters, inverters, motor speed controls, switch mode power supplies and many other applications.

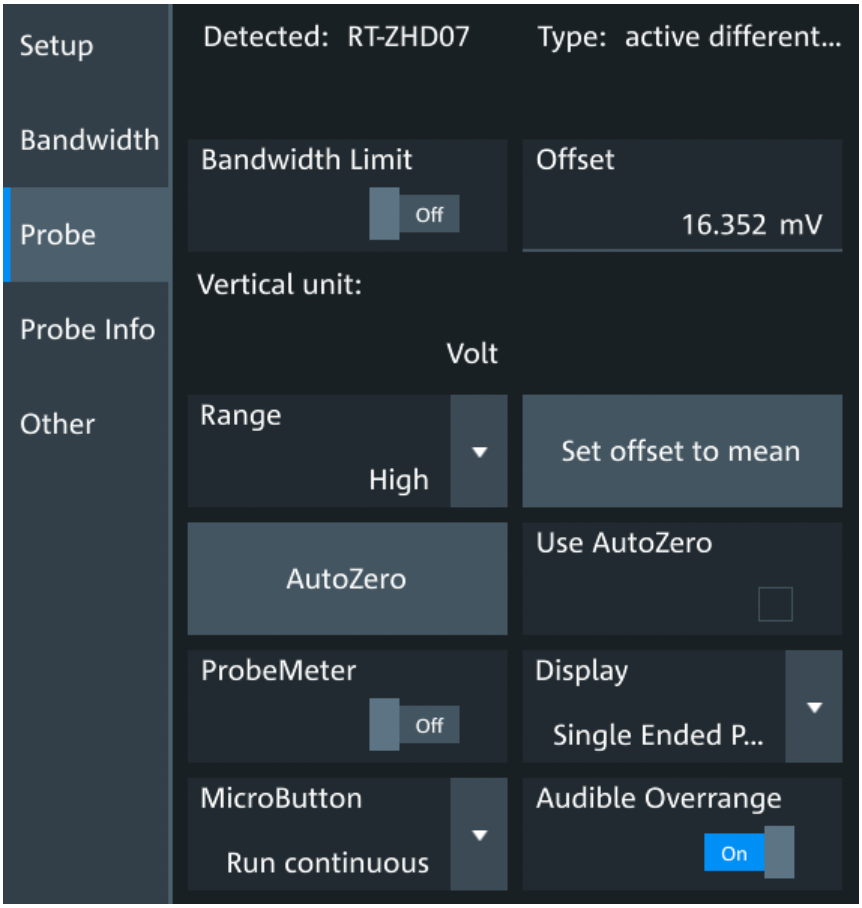

Figure 6-6: Setup for high-voltage differential probe R&S RT-ZHD07

Most settings are common settings, which are available for all probe types. See Section 6.4.1, "Common probe settings", on page 145 for description of these settings.

Bandwidth and attenuation values are indicated on the probe control box. The "Offset" is the differential offset, see "Offset" on page 141.

R&S RT-ZHD high-voltage differential probes have the Rohde & Schwarz probe interface and support its functions. For details, see Section 6.4.3.1, "Settings for the Rohde & Schwarz probe interface", on page 148.

Specific settings for R&S RT-ZHD probes are the following:

Bandwidth limit
Activates the lowpass filter in the probe control box. The filter frequency depends on the probe type and is indicated on the probe control box.

You can set the filter on the probe control box or at the oscilloscope.

Remote command:
`PROBe<ch>:SETup:ADVanced:FILTer` on page 1126

Range
Sets the voltage range of an R&S RT-ZHD probe. You can set the range on the probe control box or at the oscilloscope.

"Auto" The voltage range is set only at the oscilloscope with "Scale".

"Low" Sets the lower voltage range of the connected probe. The range values depend on the probe type and are indicated on the probe control box.

"High" Sets the higher voltage range of the connected probe. The range values depend on the probe type and are indicated on the probe control box.

Remote command:
`PROBe<ch>:SETup:ADVanced:RANGe` on page 1126

Audible overrange
Activates the acoustic overrange warning in the probe control box. You can also activate the sound directly on the probe control box.

Remote command:
`PROBe<ch>:SETup:ADVanced:AUDioverload` on page 1125

6.4.4 Setup for current probes

The setup and adjustment of current probes depends on the output connector of the probe: BNC or Rohde & Schwarz probe box.

Current probes R&S RT-ZCxx

The current probes **R&S RT-ZCxx** have BNC connectors. They are known to the MXO 5 as predefined probes, see "Predefined probe, Type and Name of the probe" on page 146. Demagnetizing and zero adjustment is done on the probe, see the probe's User Manual for details. Make sure to demagnetize and adjust the probe before taking measurements.

Current probes R&S RT-ZCxxB

Current probes **R&S RT-ZCxxB** have a Rohde & Schwarz probe interface; they are powered and remotely controlled by the oscilloscope.

When the probe is connected, demagnetization is performed automatically.

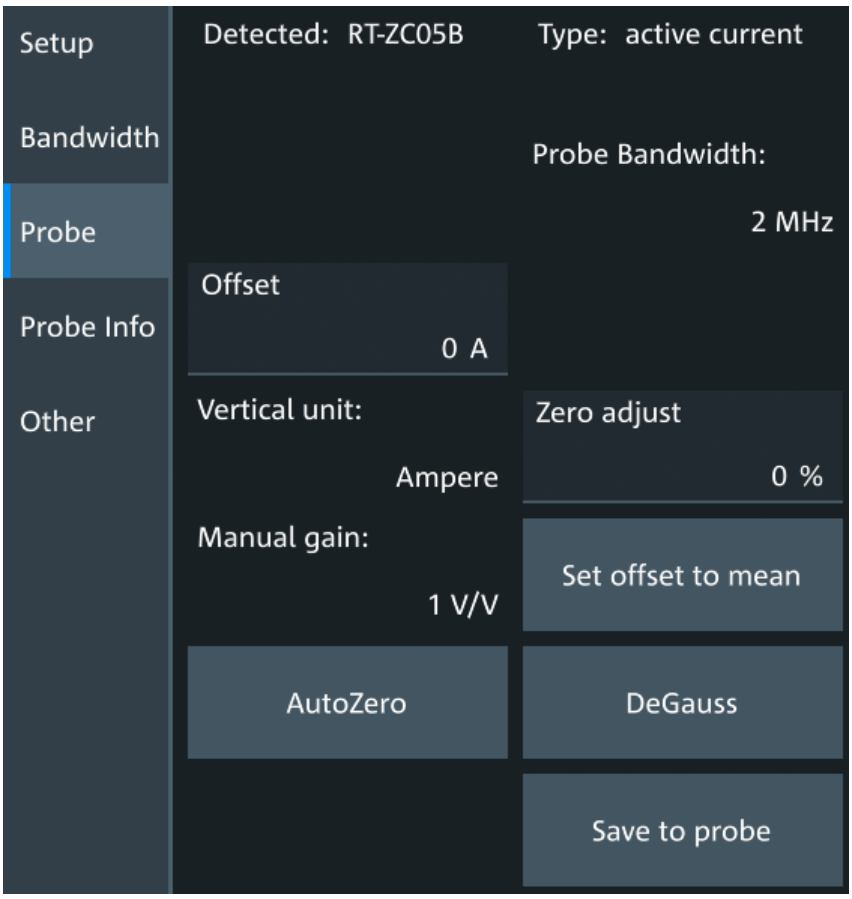

Figure 6-7: Setup for current probe R&S RT-ZC05B

Most settings are common settings, which are available for all probe types. See Section 6.4.1, "Common probe settings", on page 145 for description of these settings.

Current probes are adjusted by the following functions.

Gain, Manual gain
Shows the gain of the connected probe if the probe is detected or predefined. For unknown current probes, set the correct gain of the probe.

The vertical scaling and measured values are multiplied by this factor so that the displayed values are equal to the actual measured signal values.

Remote command:
`PROBe<ch>:SETup:GAIN:AUTO?` on page 1131
`PROBe<ch>:SETup:GAIN:MANual` on page 1131

DeGauss
Demagnetizes the core if it has been magnetized by switching the power on and off, or by an excessive input. Always carry out demagnetizing before measurement.

The demagnetizing process takes about one second. During demagnetizing, a demagnetizing waveform is displayed.

Demagnetizing is done automatically when R&S RT-ZCxxB is connected to the oscilloscope, or when "AutoZero" is performed.

Remote command:
PROBe<ch>:SETup:DEGauss on page 1131

Zero adjust
Zero adjust corrects the effect of an offset caused by temperature drift, and compensates for the remanence. The setting is only available if DC coupling is set.

To set the waveform to zero level by the instrument, use "AutoZero". The detected value is displayed.

Alternatively, you can adjust the value manually until the waveform is set to zero level. Make sure to demagnetize the probe before zero adjustment.

The value is given in percent of the maximum range, which is internally defined. The actual setup range depends on the temperature drift, the measured current and other variables, and it can change over time. If you measure high currents, the probe core magnetizes, which impairs the measurement results. Therefore, repeat "AutoZero" before the measurement.

Remote command:
PROBe<ch>:SETup:OFFSet:ZADJust on page 1132

Save to probe
Saves the zero adjust value in the probe box. If you connect the probe to another channel or to another Rohde & Schwarz oscilloscope, the value is read out again, and you can use the probe without further adjustment.

Remote command:
PROBe<ch>:SETup:OFFSet:STPRobe on page 1132

6.4.5 Modular probes

The probes of the R&S RT-ZM family are modular probes. They have a probe head and a probe amplifier connected by a cable, and various probe tip modules and tip cables for different applications. R&S RT-ZM probes are equipped with Rohde & Schwarz probe interface, and provide special features: R&S ProbeMeter, micro button, and a wide offset compensation range.

The following common probe settings are available:

- "Probe bandwidth" on page 146
- "Vertical unit" on page 146
- "Attenuation" on page 146
- "AutoZero, Use AutoZero" on page 147

The R&S RT-ZM probes support the following features of the Rohde & Schwarz probe interface:

- "MicroButton" on page 149
- "ProbeMeter" on page 149

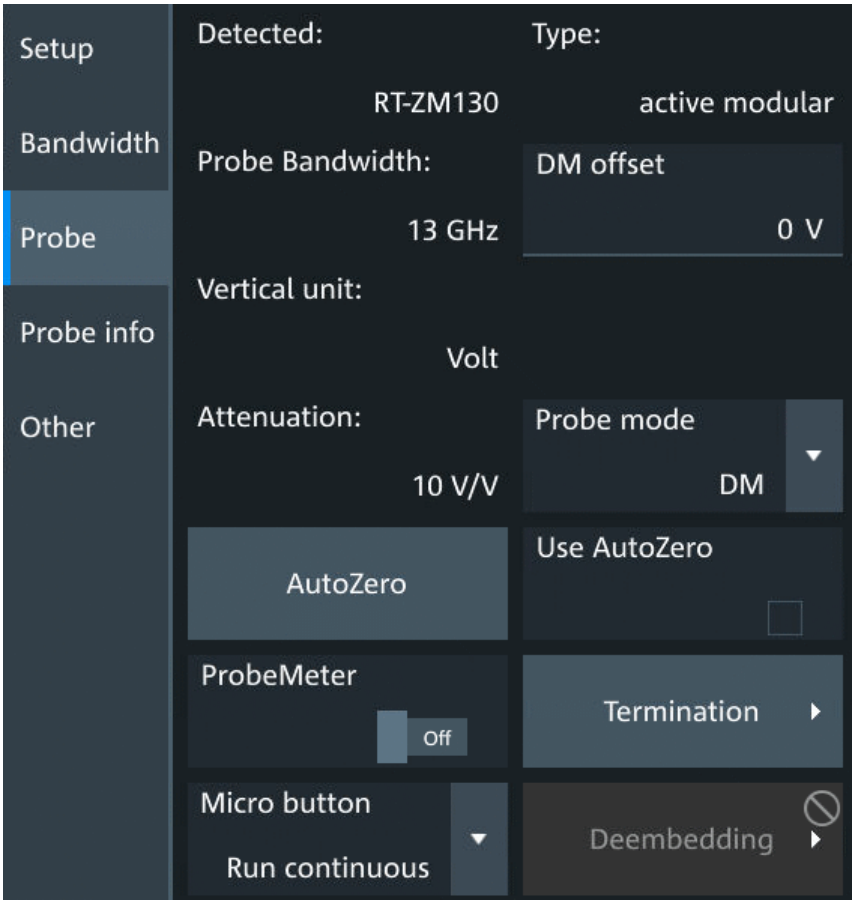

The specific functions of modular probes are described in the following sections:

- Setup parameters of modular probes.....157
- Termination voltage with R&S RT-ZMA40 SMA module.....158

6.4.5.1 Setup parameters of modular probes

Access: "Menu" > "Vertical" > "Probe" tab, and R&S RT-ZM probe is connected to the channel

Probe mode
Sets the measurement mode of modular probes.

The modular probes of the R&S RT-ZM family have a multimode function. You can switch between single-ended, differential and common mode measurements without reconnecting or resoldering the probe. You can set the probe mode in the dialog, and you can assign the probe mode setting to the micro button.

If you use the R&S RT-ZMA30 browser module, only DM measurements are possible because this module has no ground connector.

The measurement modes are:

"DM" Differential-mode input voltage (V_{dm}), the voltage between the positive and negative input terminal.

$$V_{dm} = V_p - V_n$$

"CM" Common-mode input voltage (V_{cm}), the mean voltage between the positive and negative input terminal vs. ground.

$$V_{cm} = \frac{V_p + V_n}{2}$$

"P" Positive single-ended input voltage (V_p). The voltage between the positive input terminal and the ground.

"N" Negative single-ended input voltage (V_N). The voltage between the negative input terminal and the ground.

Remote command:
`PROBe<ch>:SETup:PRMode` on page 1127

DM offset, CM offset, P offset, N offset
Compensate offset voltages. The dialog shows the offset of the selected probe mode.

The offset of the selected probe mode is used as the channel offset and considered automatically for correction. For example, in CM mode, the common mode offset is used as the channel offset.

"DM Offset" Compensates a DC voltage applied between the positive (V_p) and the negative (V_n) input terminal at the probe tip.

"CM Offset" Compensates a DC voltage applied to both input terminals referenced to ground.

"P Offset" Compensates a DC voltage applied to the positive input terminal (V_p) referenced to ground.

"N Offset" Compensates a DC voltage applied to the negative input terminal (V_n) referenced to ground.

Remote command:
`PROBe<ch>:SETup:DMOFfset` on page 1128
`PROBe<ch>:SETup:CMOFfset` on page 1122
`PROBe<ch>:SETup:NOFFset` on page 1128
`PROBe<ch>:SETup:POFFset` on page 1129

6.4.5.2 Termination voltage with R&S RT-ZMA40 SMA module

Access: "Menu" > "Vertical" > "Probe" tab > "Termination"

Termination voltage is relevant if you use the R&S RT-ZMA40 SMA module. The SMA module applies a termination voltage (±4 V) to the DUT to enable measurements against a common mode DC voltage instead of ground. This measurement is required for many digital signal standards.

The termination voltage can be controlled at the oscilloscope. Therefore, connect the V_T terminal of the R&S RT-ZM probe amplifier to the V_T terminal of the R&S RT-ZMA40

SMA module using the red DC lead (see R&S RT-ZM User Manual). The required termination voltage is measured and adjusted automatically, but can also be set manually.

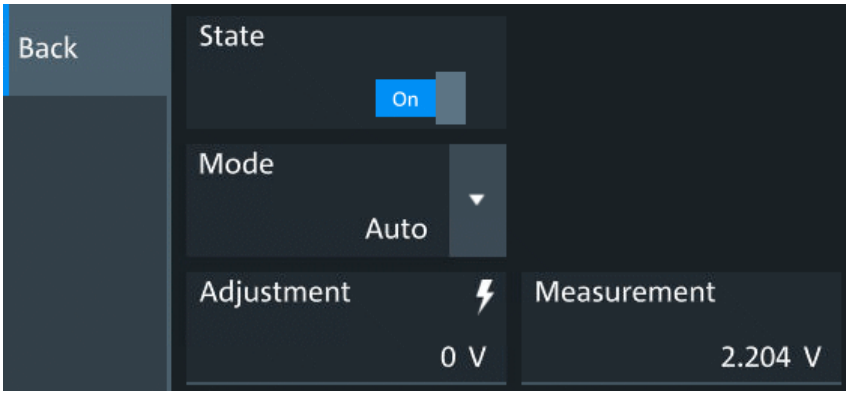

State
Activates control of the termination voltage.

Remote command:
`PROBe<ch>:SETup:TERM:STATe` on page 1130

Mode
Selects the voltage that is used for termination.

In auto mode, the instrument uses the measured common mode voltage for termination. In manual mode, you can enter the voltage to be used for termination. Use the manual mode if you know the common mode voltage of the DUT.

Remote command:
`PROBe<ch>:SETup:TERM:MODE` on page 1130

Adjustment
Sets the voltage to be used for termination correction in manual termination mode.

Remote command:
`PROBe<ch>:SETup:TERM:ADJust` on page 1129

Measurement
Shows the measured common mode voltage.

Remote command:
`PROBe<ch>:SETup:TERM:MEASure?` on page 1129

6.4.6 Setup for optical isolated probe systems

The R&S RT-ZISO is an optical isolated probe system. It consists of the probe head with exchangeable tip module, probe receiver, and scope connector cable. The probe head is permanently connected to the probe receiver by an optical cable, which is an optical isolated cable with multifiber system. To connect the probe receiver to the MXO 5, the scope connector cable is used. This cable provides the required supply voltage and transmits the measurement data and control signals simultaneously.

The power consumption of the probes is monitored by the power monitor. See Section 6.4.8.1, "Power monitor", on page 165 for details.

6.4.6.1 Setup parameters of optical isolated probes

Access: "Menu" > "Vertical" > "Probe" tab > select channel with connected R&S RT-ZISO probe.

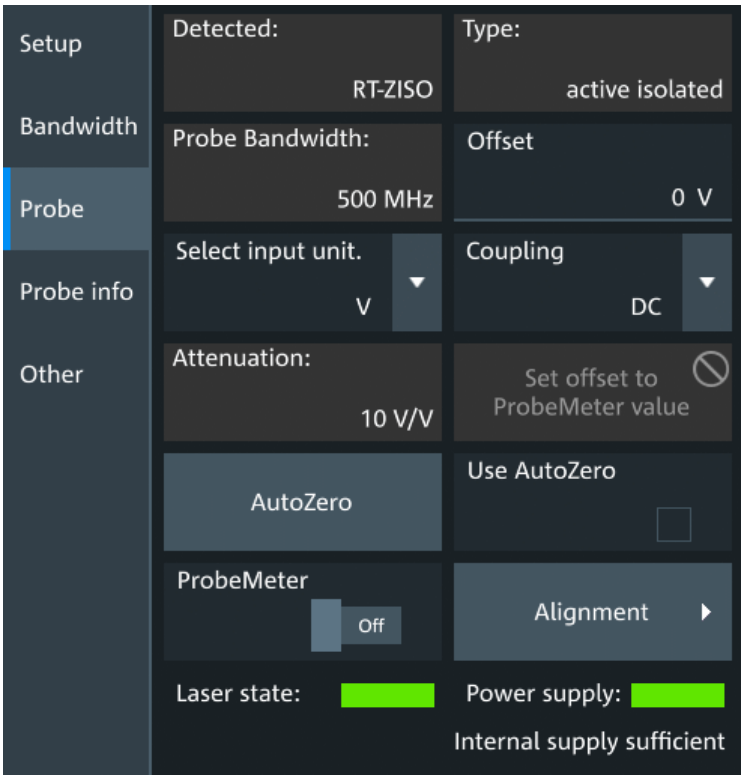

Most settings are common settings, which are available for all probe types. See Section 6.4.1, "Common probe settings", on page 145 for description of these settings.

The dialog also shows some vertical settings

- "Offset". See "Offset" on page 141 for details.
- "Coupling". See "Coupling" on page 141 for details.

Set the vertical scale in the "Setup" tab. The probe adjusts its attenuation automatically.

Select input unit
Sets the unit of the R&S RT-ZISO signal.

Remote command:
`PROBe<ch>:SETup:ADVanced:UNIT` on page 1132

Set offset to ProbeMeter value, ProbeMeter to offset
Sets the measured R&S ProbeMeter value as offset. Thus, the value is considered in measurements.

The function is available if the ProbeMeter is active.

Remote command:
`PROBe<ch>:SETup:ADVanced:PMToffset` on page 1126

Alignment
Opens the "Alignment" dialog. See Section 6.4.6.2, "Alignment", on page 161.

Laser state
The color indicates the current status of the laser:

- Green: the laser is working.
- Yellow: the laser needs service, but is still working.
- Red: defective laser, send it to your Rohde & Schwarz service center.

Remote command:
`PROBe<ch>:SETup:LASer:STATe?` on page 1133

Power supply
Indicates wether the power supply of the R&S RT-ZISO is sufficient.

Details on power consumption are given in the power monitor. See Section 6.4.8.1, "Power monitor", on page 165.

If you use an MXO 5 with more than four R&S RT-ZISO probes, an external power supply is needed. Refer to the documentation of the R&S RT-ZISO probe.

6.4.6.2 Alignment

Access: "Menu" > "Vertical" > "Probe" tab > select channel with connected R&S RT-ZISO probe > "Alignment".

The dialog provides functions to correct the zero point and gain errors.

Align the probe before first use, and when the ambient conditions have been changed, for example, when strong temperature changes occur (> 5°).

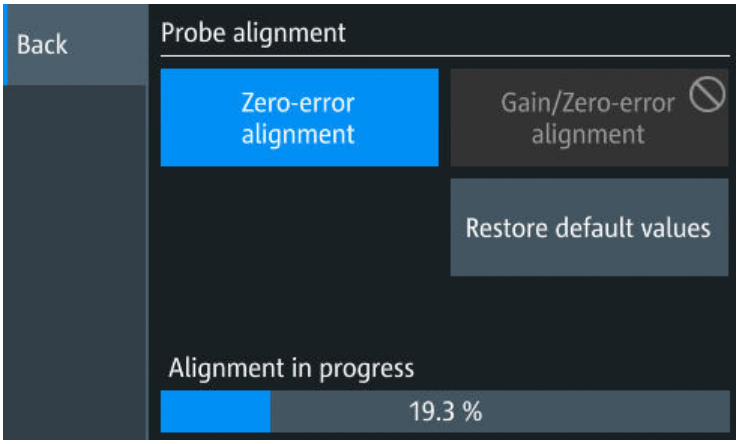

The progress of the alignment process is shown in a progress bar below the buttons.

Zero-error alignment
Performs a self-alignment and corrects the zero point error of the R&S RT-ZISO probe.

Tip modules are not affected by the alignment. Attaching or removing the tip module does not change the process or result.

The alignment can take about a minute, the progress is shown in the dialog. Wait until the process has been finished. After successful alignment, the correction data is automatically written to the non-volatile flash of the probe.

Remote command:
`PROBe<ch>:SETup:ALIGnment:ZERO:EXECute` on page 1134

Gain/Zero-error alignment
Corrects the zero point error and the gain error of the R&S RT-ZISO probe.

Tip modules are not affected by the alignment. Attaching or removing the tip module does not change the process or result.

The alignment can take about a minute, the progress is shown in the dialog. Wait until the process has been finished. After successful alignment, the correction data is automatically written to the non-volatile flash of the probe.

Remote command:
`PROBe<ch>:SETup:ALIGnment:GAIN:EXECute` on page 1134

Restore default values
Resets the zero point and gain error correction to the factory default values.

Remote command:
`PROBe<ch>:SETup:ADVanced:RDEFaults` on page 1134

6.4.6.3 Tip info dialog

Access: "Menu" > "Vertical" > "Probe" > select channel with connected R&S RT-ZISO probe > "Tip info"

The dialog shows the characteristics of the tip modules that are connected to the probes.

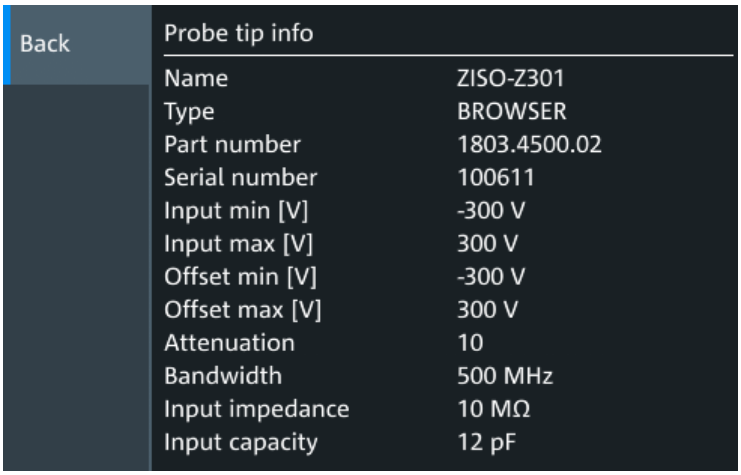

Remote commands:

- `PROBe<ch>:SETup:TIPModel:NAME?` on page 1135
- `PROBe<ch>:SETup:TIPModel:INFO?` on page 1135

6.4.7 Probe adapter R&S RT-Z2T

Using the R&S RT-Z2T probe interface adapter, you can connect selected Tektronix active probes with TekProbe BNC™ level II interface.

1. Connect the R&S RT-Z2T adapter to the channel input.
2. Connect the probe to the adapter.

   The instrument identifies the adapter.
3. Select "Menu" > "Vertical" > "Probe" tab.

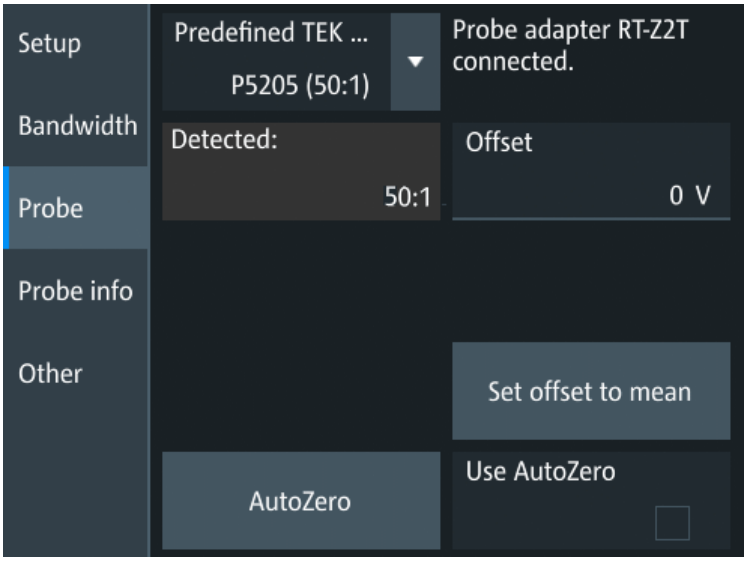

   The dialog shows that the R&S RT-Z2T probe interface adapter is connected, and supported Tektronix probes are listed as "Predefined probe".
4. Select the "Predefined probe" in the "Probe" tab.

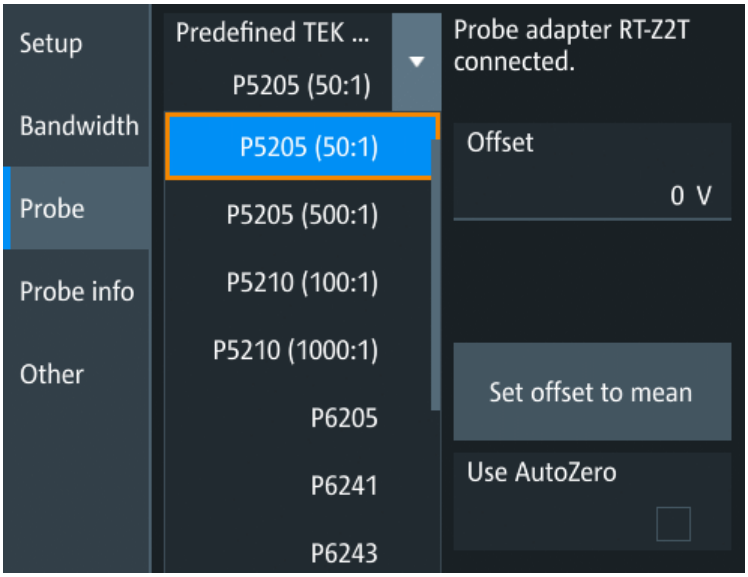

See also: "Predefined probe, Type and Name of the probe" on page 146.

The power consumption of the R&S RT-Z2T probe interface adapter in the "Power monitor": "Vertical" > "Probe Info" > "Power monitor".

6.4.8 Probe info

The dialog shows general information on the connected probe, for example, type, serial number, and part number. Below, electrical characteristics are shown, like bandwidth, attenuation, input capacitance and impedance, voltage and DC offset range.

For a specification of the probe parameters, refer to the specifications document.

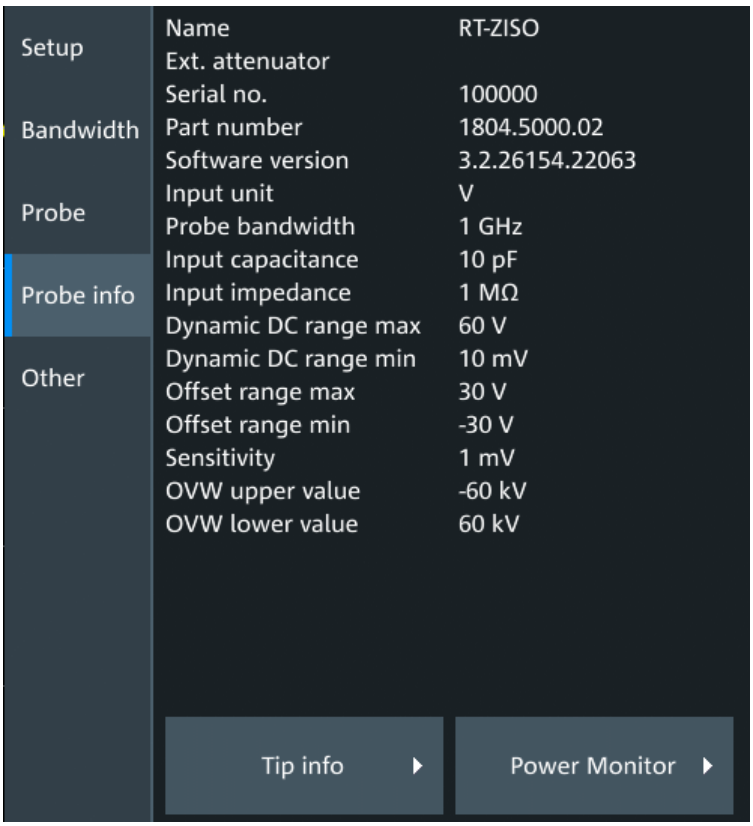

Remote commands: Section 18.9.6.7, "Probe attributes", on page 1136.

6.4.8.1 Power monitor

The power monitor informs about the connected probes and their power consumption. The maximum available power per rail and per single channel are also shown.

If you use several R&S RT-ZISO probes, the power of the instrument can be insuffcient to power all probes. The power monitor notifies you of insufficient power. To solve the problem, you can remove redundant probes, or use the external power supplies to power the R&S RT-ZISO probes.

6.4.8.2 Tip info

The "TIP info" button and dialog are available if an R&S RT-ZISO probe is connected to the channel. See Section 6.4.6.3, "Tip info dialog", on page 162 for details.

6.4.9 Adjusting passive probes

When using a passive probe, you have to compensate it when you connect it to the instrument the first time. Compensation matches the probe cable capacitance to the oscilloscope input capacitance to assure good amplitude accuracy from DC to upper bandwidth limit frequencies. A poorly compensated probe reduces the performance of the probe-oscilloscope system and introduces measurement errors resulting in distorted waveforms and inaccurate results.

Two connector pins are located on the front panel. The ⊥ pin is on ground level. The ⎍ pin supplies a square wave signal with 1 kHz for low frequency probe compensation.

1. Connect the BNC connector of the probe to one of the channel inputs.
2. Connect the probe's ground connector to the ground compensation pin, and the probe tip to the signal pin.
3. Press [Autoset].

   A square wave appears on the display.
4. Adjust the compensation trimmer of the probe to optimum square wave response. For details, refer to the documentation of your probe.

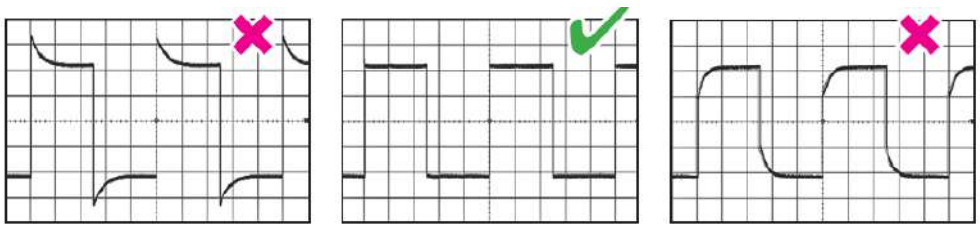

7 Trigger

This section describes the trigger capabilities of the MXO 5.

- Basics of triggering....167
- Common trigger settings....169
- Trigger sequence....171
- Trigger types....173
- Trigger mode / holdoff....196
- Hysteresis....198
- Channel filter....200
- Actions on trigger....201
- Zone trigger....203

7.1 Basics of triggering

Triggering means to capture the interesting part of the relevant waveforms, and the trigger point is the determining point in the waveform record. Choosing the right trigger type and configuring all trigger settings correctly allows you to detect various incidents in analog, digital, and protocol signals.

How the oscilloscope triggers

A trigger occurs if the complete set of trigger conditions is fulfilled. The instrument acquires continuously and keeps the sample points to fill the pre-trigger part of the waveform record. When the trigger occurs, the instrument continues acquisition until the post-trigger part of the waveform record is filled. Then it stops acquiring and waits for the next trigger. When a trigger is recognized, the instrument does not accept another trigger until the acquisition is complete and the holdoff time has expired.

Trigger setup on the oscilloscope

A simple trigger setup includes:

- Source of the trigger signal
- Trigger type selection and setup
- Horizontal position of the trigger, see: Section 6.1.1, "About the horizontal system", on page 123
- Trigger mode

The MXO oscilloscopes provide various trigger types for troubleshooting and signal analysis, for example, edge trigger, glitch trigger, interval trigger, pattern trigger, and much more.

For complex tasks like verifying and debugging designs, advanced trigger settings are available:

- Filter to remove high or low frequencies from the trigger signal.
- Hysteresis to avoid unwanted trigger events caused by noise.
- Holdoff to define exactly which trigger event causes the trigger.

- Trigger sequences to combine several event conditions.

Action on trigger

A trigger can initiate one or more actions, for example, a trigger out signal, saving a screenshot or saving waveform data. All available actions can be initiated at the same time.

Trigger sequence

A trigger sequence joins two or more separate trigger conditions with an optional delay time and an optional reset time or reset condition. Similar setups are also known as multi-step triggers or A/B trigger.

7.1.1 Trigger information

Information on the most important trigger settings is shown in the trigger label above the diagram. If you tap the trigger label, the "Trigger" dialog opens.

If you trigger on a single event, the trigger label shows:

- Trigger source
- Trigger type
- Trigger level
- Trigger mode
- Edge or polarity, and important trigger-type specific settings
- Trigger state

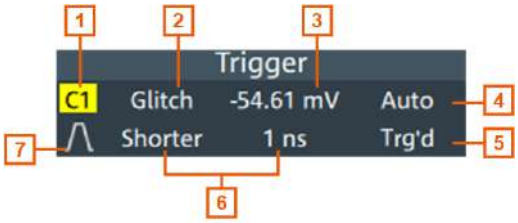

Figure 7-1: Trigger label on the toolbar

1 = Trigger source
2 = Trigger type
3 = Trigger level
4 = Trigger mode
5 = Trigger state
6 = Trigger type specific settings
7 = Trigger slope

If you trigger on a sequence, the trigger label shows:

- Sequence type
- Trigger mode
- Trigger state

7.2 Common trigger settings

Access: "Menu" > "Trigger" > "Setup" tab

The common trigger settings are the trigger sequence, trigger source, the trigger type, and the trigger level. To set the trigger level automatically, use "Find level".

These common settings are set once for a single event. In a trigger sequence, they are specific for each condition.

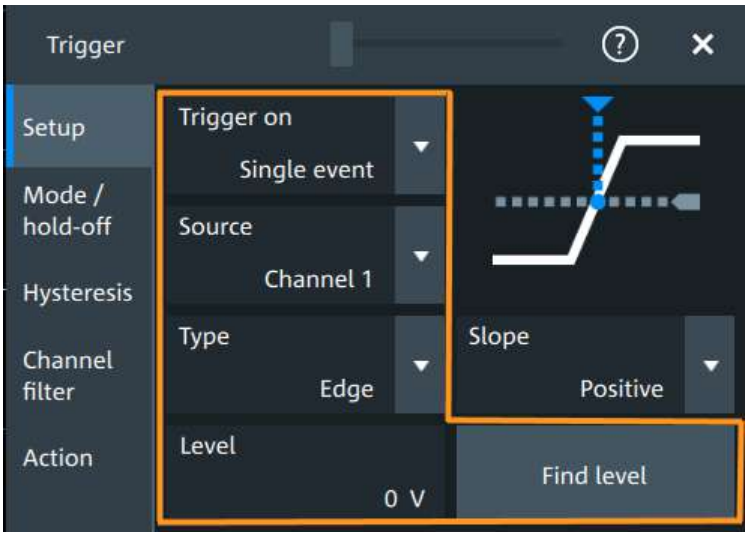

Depending on the trigger type, additional settings are needed. They are explained in the trigger-type specific sections, see Section 7.4, "Trigger types", on page 173.

Trigger on 169
Source 169
Type 170
Level 170
Find level 171

Trigger on
Selects, if you want to trigger on a single event, or on a series of events.

Remote command:
`TRIGger:MEVents:MODE` on page 1144

Source
Selects the source of the trigger signal for the selected trigger event. The trigger source works even if it is not displayed in a diagram.

Available sources depend on the trigger sequence setting. If you trigger on a single event, all inputs can be used as trigger source. If you trigger on a sequence, only analog channels can be set as trigger source for A, B, and R-events.

The trigger source can be:
- Channel <n>: an analog input channel
- Extern: external analog signal connected to the external trigger input. For the external trigger source, the analog edge trigger is available.

- Line: The instrument generates the trigger from the AC power input and synchronizes the signal to the AC power frequency. Use this source if you want to analyze signals related to the power line frequency, such as lighting equipment and power supply devices. For the line trigger source, the edge trigger type is available.
- Digital channels D0 to D15
  Requires option R&S MXO5-B1. Digital channels are only available for triggering on single event. Available trigger types are: edge, width, timeout, state and pattern.
- Serial buses
  If one or more serial protocol options are installed, you can trigger on various conditions in the bus signal. If the hardware trigger is supported for a protocol, triggering on single event is possible. For all protocols, the software trigger is supported in a "A → Serial bus". hardware and software trigger have different trigger settings.

For the state trigger, this source is the "Clock source", the clock signal.

For the setup & hold trigger, this source is the "Data source", the data signal.

Remote command:
`TRIGger:EVENt<ev>:SOURce` on page 1145

Type
Selects the trigger type. In a trigger sequence, the trigger type is set for each condition.

The current trigger type is shown on the button and in the trigger label above the diagram.

The following trigger types are available:
- Edge trigger, see page 174
- Glitch trigger, see page 176
- Width trigger, see page 178
- Runt trigger, see page 179
- Window trigger, see page 181
- Timeout trigger, see page 183
- Interval trigger, see page 184
- Slew rate trigger, see page 186
- Setup & Hold, see page 188
- State trigger, see page 190
- Pattern trigger, see page 191

If the external trigger input is used as the trigger source, the analog edge trigger is the only available trigger type.

For digital channels, the edge, width, timeout, state and pattern trigger are available.

Remote command:
`TRIGger:EVENt<ev>:TYPE` on page 1144

Level
Sets the voltage level or threshold for the trigger.

You can also drag the trigger level marker on the display, or turn the [Level] knob. To set the trigger level to 50% of the signal amplitude, press the [Level] knob.

For the setup & hold trigger, this level sets the voltage level for the data signal. At this level, the setup and hold time are measured.

For the timeout trigger, the trigger level is the threshold for the high and low signal states.

Runt, window and slew rate triggers require two trigger levels (upper and lower), which are defined as specific settings.

Remote command:
`TRIGger:EVENt<ev>:LEVel<n>[:VALue]` on page 1144
`TRIGger:ANEDge:LEVel` on page 1148 (for external trigger source)

Find level
Sets the trigger level automatically to *0.5 * (MaxPeak – MinPeak)*.

In a trigger sequence, "Find level" affects all active events of the sequence (A, B, and R event).

The function is not available for trigger sources "Extern" and "Line".

Remote command:
`TRIGger:FINDlevel` on page 1145

7.3 Trigger sequence

With MXO 5, you can trigger on a single trigger event, or on a sequence of events. A trigger sequence consists of at least two event conditions and additional conditions defining when the trigger occurs.

All trigger sequences require that analog input channels C<n> are set as trigger source for the A-trigger. The instrument checks all trigger settings for compatibility and adjusts them if they do not fit.

The following trigger types are only available for triggering on single event:

- Setup & Hold
- State
- Pattern

A → B → R sequence

The trigger sequence "A → B → R", for example, consists of two subsequent events: A-trigger and B-trigger with optional B-trigger delay and count. In addition, an optional reset condition R can be configured: timeout or R-trigger condition. A-, B-, and R-triggers are configured in the same way.

After the A-trigger conditions have been met, and an optional delay has passed, the B-trigger with independent conditions is enabled. The instrument waits until one or a specified number of B-trigger conditions occur. If the reset condition is not fulfilled, the latest B-trigger causes the trigger event, and then the sequence starts again. The B-trigger can only cause the trigger event if it occurs after the A-trigger and after the delay time.

If you expect, for example, an irregular B-trigger, you can configure a reset condition to restart the sequence. The reset condition can be a simple timeout, and/or a reset event that is defined in the same way as the A- and B-trigger conditions.

7.3.1 Sequence setup

Access: "Menu" > "Trigger" > "Setup" tab > "Trigger on" = "Sequence"

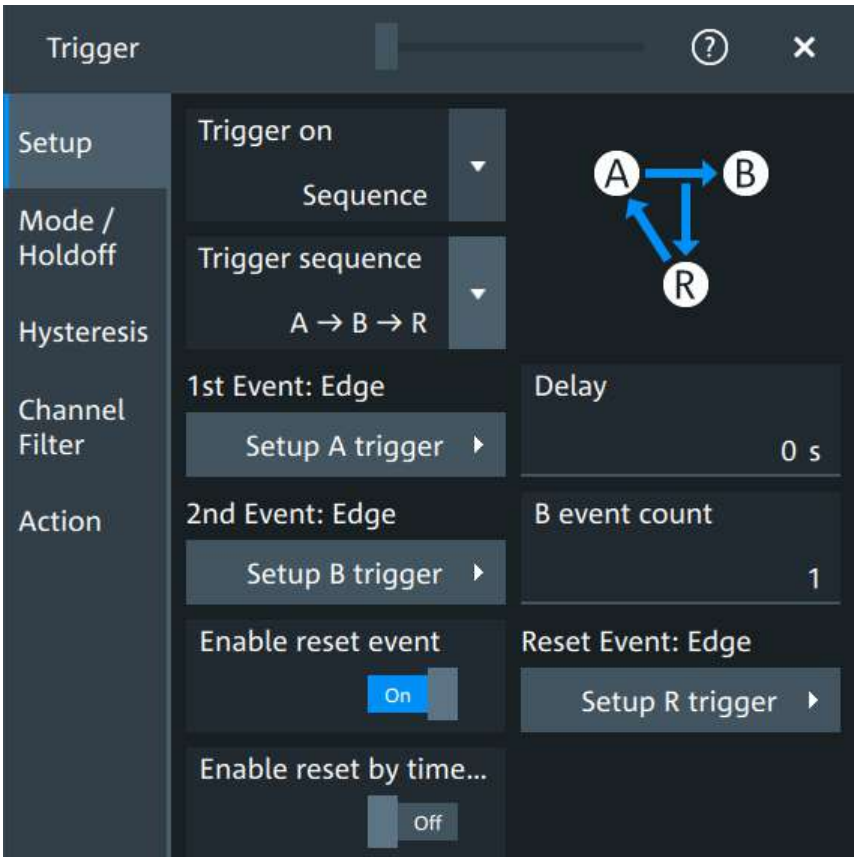

Figure 7-2: Trigger setup dialog with selected A → B → R sequence

Trigger sequence
Selects the type of the trigger sequence.

"A → B → R" Triggers if all conditions of A- and B-events, as well as additional delay and count, and optional reset timeout and/or R-event conditions are fulfilled.
B-trigger and R-trigger are configured in the same way as the A-trigger. You can configure a delay between the A- and B-trigger, and define a number of fulfilled B-trigger conditions to be ignored. The reset condition R can be a timeout or a trigger condition, or a combination of both.

"A → Zone Trigger" Triggers if the conditions of the A-event and the zone trigger are fulfilled.
See Section 7.9, "Zone trigger", on page 203

"A → Serial bus" Triggers if the conditions of the A-event and the serial bus are fulfilled.
See Section 14.1.6, "Trigger", on page 523.

Remote command:
TRIGger:MEVents:AEVents on page 1146

Delay
Sets the time that the instrument waits after an A-trigger until it recognizes B-triggers.

Remote command:
TRIGger:MEVents:SEQuence<se>:DELay on page 1146

B event count
Sets the number of B-trigger conditions to be fulfilled after an A-trigger. The last B-trigger causes the trigger event. The waiting time for B-triggers can be restricted with a reset condition: timeout or reset event.

Remote command:
TRIGger:MEVents:SEQuence<se>:COUNt on page 1146

Enable reset event
If enabled, the trigger sequence is restarted by the R-trigger condition if the specified number of B-triggers does not occur before the R-trigger conditions are fulfilled.

Remote command:
TRIGger:MEVents:SEQuence<se>:RESet:EVENt on page 1147

Enable reset by time, Reset timeout
If reset timeout is enabled, the instrument waits for the "Reset timeout" time for the specified number of B-triggers. If no trigger occurs during that time, the sequence is restarted with the A-trigger.

Remote command:
TRIGger:MEVents:SEQuence<se>:RESet:TIMeout[:ENABle] on page 1147
TRIGger:MEVents:SEQuence<se>:RESet:TIMeout:TIME on page 1147

7.4 Trigger types

- Edge trigger....174
- Edge trigger on external trigger source....175
- Glitch trigger....176
- Width trigger....178
- Runt trigger....179
- Window trigger....181
- Timeout trigger....183
- Interval trigger....184
- Slew rate trigger....186
- Setup & Hold....188

- State trigger....190
- Pattern trigger....191
- Line trigger....196

7.4.1 Edge trigger

Access: "Menu" > "Trigger" > "Setup" tab > "Type = Edge"

The edge trigger is the most common trigger type. The trigger occurs when the signal from the trigger source passes the trigger level in the specified direction (slope).

This section describes the trigger-type specific settings. For settings that apply to all trigger types, see Section 7.2, "Common trigger settings", on page 169.

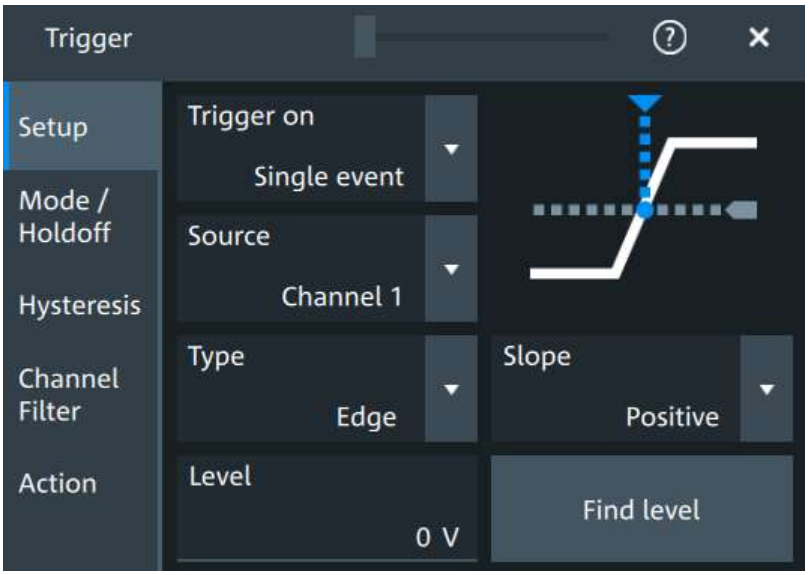

Level
See "Level" on page 170.

Remote command:
`TRIGger:EVENt<ev>:LEVel<n>[:VALue]` on page 1144

Slope
Sets the edge direction for the trigger.

"Positive"	Selects the rising edge, which is a positive voltage change.
"Negative"	Selects the falling edge, which is a negative voltage change.
"Either"	Selects the rising and falling edge. After starting an acquisition, the instrument triggers on the first identified edge.

Remote command:
`TRIGger:EVENt<ev>:EDGE:SLOPe` on page 1148

7.4.2 Edge trigger on external trigger source

Access: "Menu" > "Trigger" > "Setup" tab > "Source" = "Extern" > "Type = Analog Edge"

If an external trigger signal is connected to the Trigger In connector, and the trigger source is set to "Extern", the analog edge trigger is available. Triggering on an external source is only possible if you trigger on a single event but not for sequences.

This section describes the trigger-type specific settings. For settings that apply to all trigger types, see Section 7.2, "Common trigger settings", on page 169.

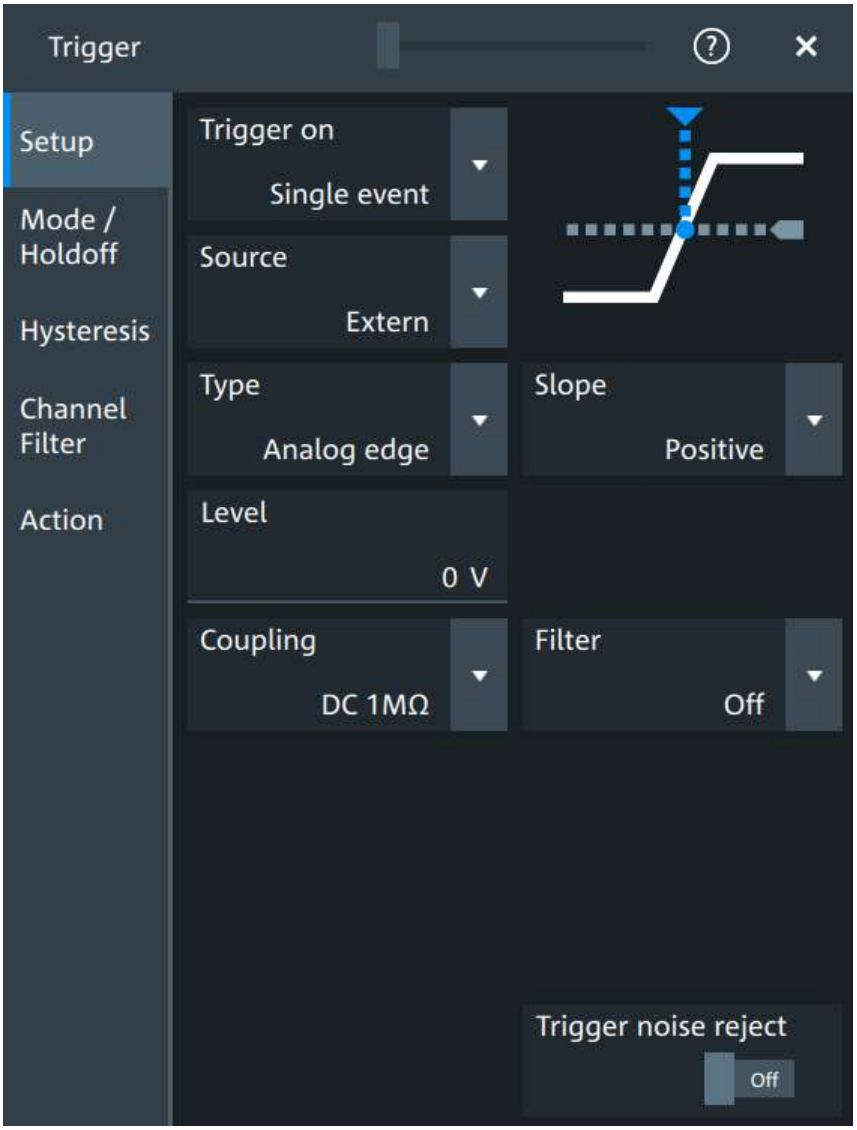

The "Slope" and "Level" are the same settings as for the edge trigger, see:

- "Level" on page 170
- "Slope" on page 174

Specific settings for the analog edge trigger are the following:

Coupling
Sets the connection of the external trigger signal, i.e. the input impedance and a termination. The coupling determines what part of the signal is used for triggering.

"DC 50 Ω" Connection with 50 Ω termination, passes both DC and AC components of the signal.

"DC 1 MΩ" Connection with 1 MΩ termination, passes both DC and AC components of the signal.

"AC 1 MΩ" Connection with 1 MΩ termination through DC capacitor, removes DC and very low-frequency components. The waveform is centered on zero volts.

Remote command:
`TRIGger:ANEDge:COUPling` on page 1148

Filter, Cut-off
Selects the filter mode for the external trigger signal, and sets the cut-off frequency.

"Off" The trigger signal is not filtered.

"LF reject" Frequencies lower than the "Cut-off" frequency are rejected, higher frequencies pass the filter.

"RF reject" Frequencies higher than the "Cut-off" frequency are rejected, lower frequencies pass the filter.

Remote command:
`TRIGger:ANEDge:FILTer` on page 1149
`TRIGger:ANEDge:CUToff:HIGHpass` on page 1149
`TRIGger:ANEDge:CUToff:LOWPass` on page 1149

Trigger noise reject
Enables an automatic hysteresis on the trigger level to avoid unwanted trigger events caused by noise.

Remote command:
`TRIGger:ANEDge:NREJect` on page 1150

7.4.3 Glitch trigger

Access: "Menu" > "Trigger" > "Setup" tab > "Type = Glitch"

The glitch trigger detects pulses shorter or longer than a specified time. It identifies deviation from the nominal data rate and helps to analyze causes of even rare glitches and their effects on other signals.

This section describes the trigger-type specific settings. For settings that apply to all trigger types, see Section 7.2, "Common trigger settings", on page 169.

Level
See "Level" on page 170.

Remote command:
`TRIGger:EVENt<ev>:LEVel<n>[:VALue]` on page 1144

Polarity
Sets the polarity of a pulse, which is the direction of the first pulse slope.

"Positive"	Selects positive going pulses, the width is defined from the rising to the falling slopes.
"Negative"	Selects negative going pulses, the width is defined from the falling to the rising slopes.
"Either"	Selects both positive and negative going pulses.

Remote command:
`TRIGger:EVENt<ev>:GLITch:POLarity` on page 1150
`TRIGger:EVENt<ev>:RUNT:POLarity` on page 1154

Range
Selects how the time limit of the runt pulse is defined.

Remote command:
`TRIGger:EVENt<ev>:GLITch:RANGe` on page 1150

Width
Sets the length of a glitch. The instrument triggers on pulses shorter or longer than this value, depending on the value set with "Range".

You need to know the expected pulse widths of the circuit to set the glitch width correctly.

Remote command:
`TRIGger:EVENt<ev>:GLITch:WIDTh` on page 1151

7.4.4 Width trigger

Access: "Menu" > "Trigger" > "Setup" tab > "Type = Width"

The width trigger compares the pulse width (duration) with given time limits. It detects pulses with an exact pulse width, pulses shorter or longer than a given time, and also pulses inside or outside the allowable time range. The pulse width is measured at the trigger level.

This section describes the trigger-type specific settings. For settings that apply to all trigger types, see Section 7.2, "Common trigger settings", on page 169.

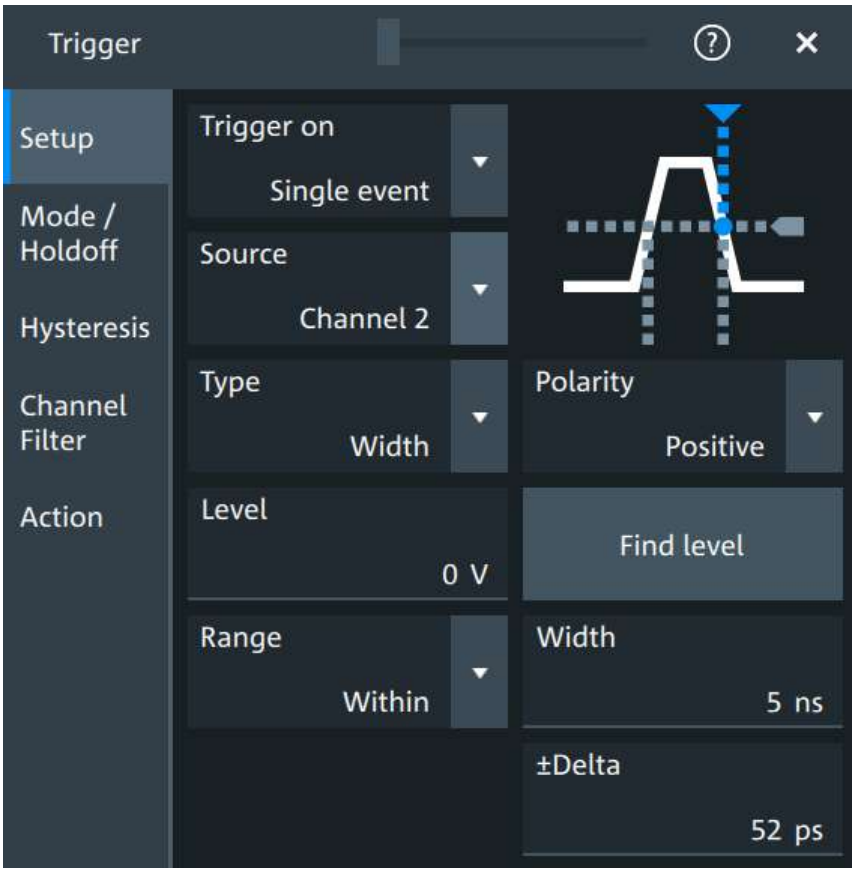

Level
See "Level" on page 170.

Remote command:
`TRIGger:EVENt<ev>:LEVel<n>[:VALue]` on page 1144

Polarity
Sets the polarity of a pulse, which is the direction of the first pulse slope.

"Positive" Selects positive going pulses, the width is defined from the rising to the falling slopes.

"Negative" Selects negative going pulses, the width is defined from the falling to the rising slopes.

"Either" Selects both positive and negative going pulses.

Remote command:
`TRIGger:EVENt<ev>:WIDTh:POLarity` on page 1151

Range
Selects how the range of a pulse width is defined.

"Longer" Triggers on pulses longer than the given "Width".

"Shorter" Triggers on pulses shorter than the given "Width".

"Within" Triggers on pulses inside a given range. The range of the pulse width is defined by "±Delta" related to "Width".

"Outside" Triggers on pulses outside a given range. The range definition is the same as for "Within" range.

Remote command:
`TRIGger:EVENt<ev>:WIDTh:RANGe` on page 1152

Width
For the ranges "Within" and "Outside", the width defines the center of a range which is defined by the limits "±Delta".

For the ranges "Shorter" and "Longer", the width defines the maximum and minimum pulse width, respectively.

Remote command:
`TRIGger:EVENt<ev>:WIDTh:WIDTh` on page 1152

±Delta
Defines a range around the width value.

The combination "Range" = "Within" and "±Delta" = 0 triggers on pulses with a pulse width that equals "Width".

The combination "Range" = "Outside" and "±Delta" = 0 means to trigger on pulse widths ≠ "Width".

Remote command:
`TRIGger:EVENt<ev>:WIDTh:DELTa` on page 1151

7.4.5 Runt trigger

Access: "Menu" > "Trigger" > "Setup" tab > "Type = Runt"

A runt is a pulse lower than normal in amplitude. The amplitude crosses the first threshold twice in succession without crossing the second one. For example, this trig-

ger can detect logic, digital, and analog signals remaining below a specified threshold amplitude because I/O ports are in undefined state.

This section describes the trigger-type specific settings. For settings that apply to all trigger types, see Section 7.2, "Common trigger settings", on page 169.

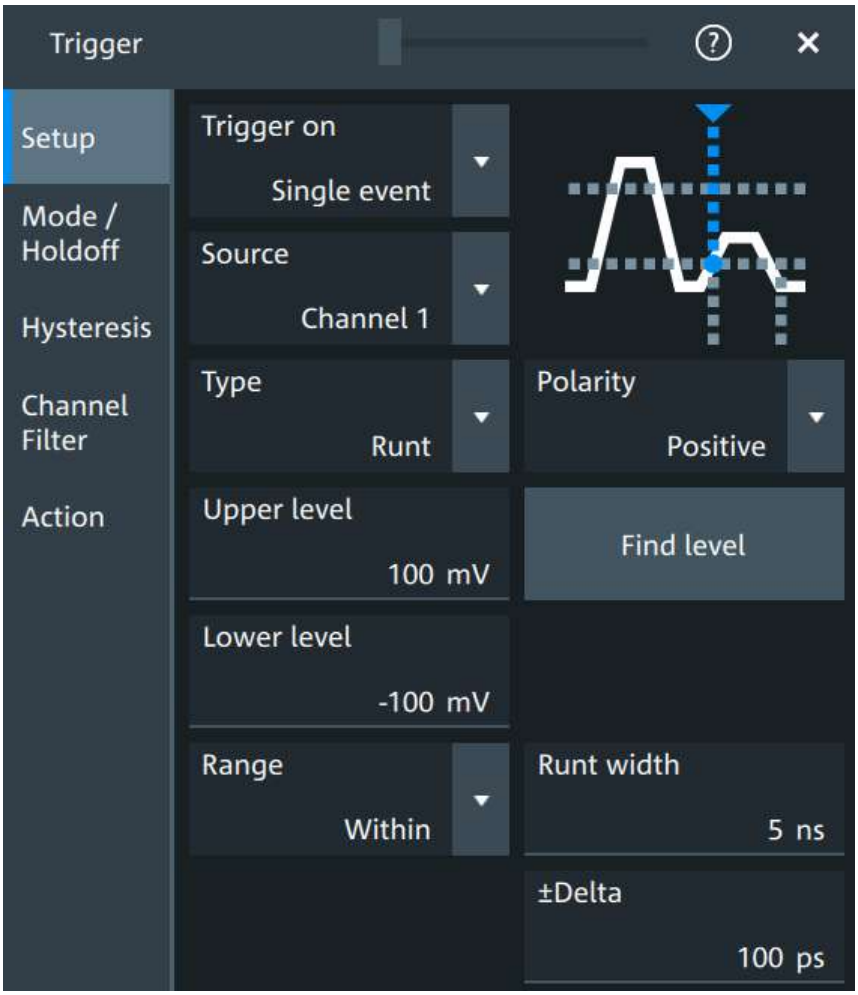

Polarity
Sets the polarity of a pulse, which is the direction of the first pulse slope.

"Positive" Selects positive going pulses, the width is defined from the rising to the falling slopes.

"Negative" Selects negative going pulses, the width is defined from the falling to the rising slopes.

"Either" Selects both positive and negative going pulses.

Remote command:
`TRIGger:EVENt<ev>:GLITch:POLarity` on page 1150
`TRIGger:EVENt<ev>:RUNT:POLarity` on page 1154

Upper level
Sets the upper voltage limit.

Remote command:
TRIGger:EVENt<ev>:LEVel<n>:RUNT:UPPer on page 1153

Lower level
Sets the lower voltage limit.

Remote command:
TRIGger:EVENt<ev>:LEVel<n>:RUNT:LOWer on page 1153

Range
Selects how the time limit of the runt pulse is defined.

"Any runt"	Triggers on all runts fulfilling the level condition, without time limitation.
"Longer"	Triggers on runts longer than the given "Runt width".
"Shorter"	Triggers on runts shorter than the given "Runt width".
"Within"	Triggers if the runt length is inside a given time range. The range is defined by "Runt width" and "±Delta".
"Outside"	Triggers if the runt length is outside a given time range. The range definition is the same as for "Within" range.

Remote command:
TRIGger:EVENt<ev>:RUNT:RANGe on page 1154

Runt width
For the ranges "Shorter" and "Longer", the runt width defines the maximum and minimum pulse width, respectively.

For the ranges "Within" and "Outside", the runt width defines the center of a range which is defined by "±Delta".

Remote command:
TRIGger:EVENt<ev>:RUNT:WIDTh on page 1155

±Delta
Defines a range around the runt width value.

Remote command:
TRIGger:EVENt<ev>:RUNT:DELTa on page 1153

7.4.6 Window trigger

Access: "Menu" > "Trigger" > "Setup" tab > "Type = Window"

The window trigger checks the signal run in relation to a "window". The window is formed by the upper and lower voltage levels. The trigger condition is fulfilled, if the waveform enters or leaves the window, or if the waveform stays inside or outside for a time longer or shorter than specified.

With the window trigger, you can display longer transient effects.

This section describes the trigger-type specific settings. For settings that apply to all trigger types, see Section 7.2, "Common trigger settings", on page 169.

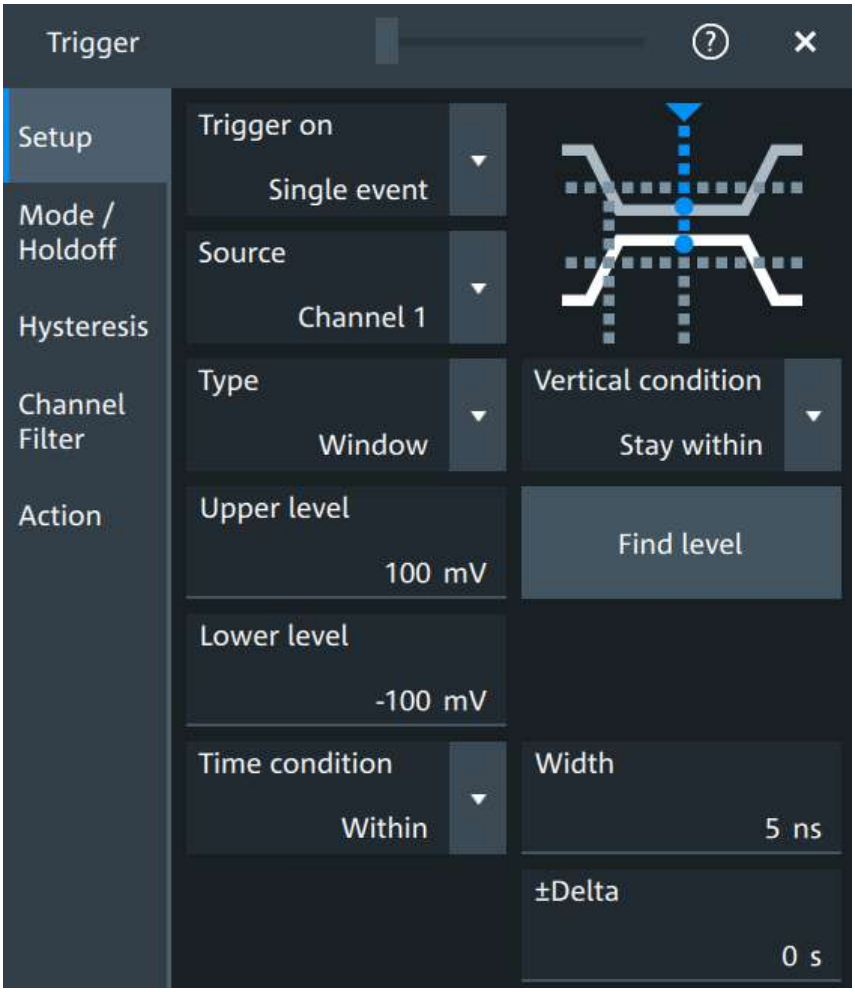

Vertical condition
Selects how the signal run is compared with the window.

"Enter"	Triggers when the signal crosses the upper or lower level and thus enters the window made up of these two levels.
"Exit"	Triggers when the signal leaves the window.
"Stay within"	Triggers if the signal stays between the upper and lower level for a specified time. The time is defined in various ways by the "Time condition".
"Stay outside"	Triggers if the signal stays above the upper level or below the lower level for a specified time. The time is also defined by the "Time condition".

Remote command:
`TRIGger:EVENt<ev>:WINDow:RANGe` on page 1156

Upper level
Sets the upper voltage limit.

Remote command:
`TRIGger:EVENt<ev>:LEVel<n>:WINDow:UPPer` on page 1155

Lower level
Sets the lower voltage limit.

Remote command:
TRIGger:EVENt<ev>:LEVel<n>:WINDow:LOWer on page 1155

Time condition
Available for "Vertical condition" = "Stay within"/"Stay outside".

Selects how the time limit of the window is defined.

"Within"	Triggers if the signal stays inside or outside the vertical window limits at least for the time *Width - Delta* and for *Width + Delta* at the most.
"Outside"	"Outside" is the opposite definition of "Within". The instrument triggers if the signal stays inside or outside the vertical window limits for a time shorter than *Width - Delta* or longer than *Width + Delta*.
"Shorter"	Triggers if the signal crosses vertical limits before the specified "Width" time is reached.
"Longer"	Triggers if the signal crosses vertical limits after the specified "Width" time is reached.

Remote command:
TRIGger:EVENt<ev>:WINDow:TIME on page 1157

Width
For the ranges "Within" and "Outside", the width defines the center of a time range which is defined by the limits "±Delta".

For the ranges "Shorter" and "Longer", it defines the maximum and minimum time lapse, respectively.

Remote command:
TRIGger:EVENt<ev>:WINDow:WIDTh on page 1157

±Delta
Defines a range around the width value.

Remote command:
TRIGger:EVENt<ev>:WINDow:DELTa on page 1156

7.4.7 Timeout trigger

Access: "Menu" > "Trigger" > "Setup" tab > "Type = Timeout"

The timeout trigger checks if the signal stays above or below the threshold voltage for a specified time lapse. In other words, the trigger occurs if the trigger source does not have the expected transition within the specified time.

This section describes the trigger-type specific settings. For settings that apply to all trigger types, see Section 7.2, "Common trigger settings", on page 169.

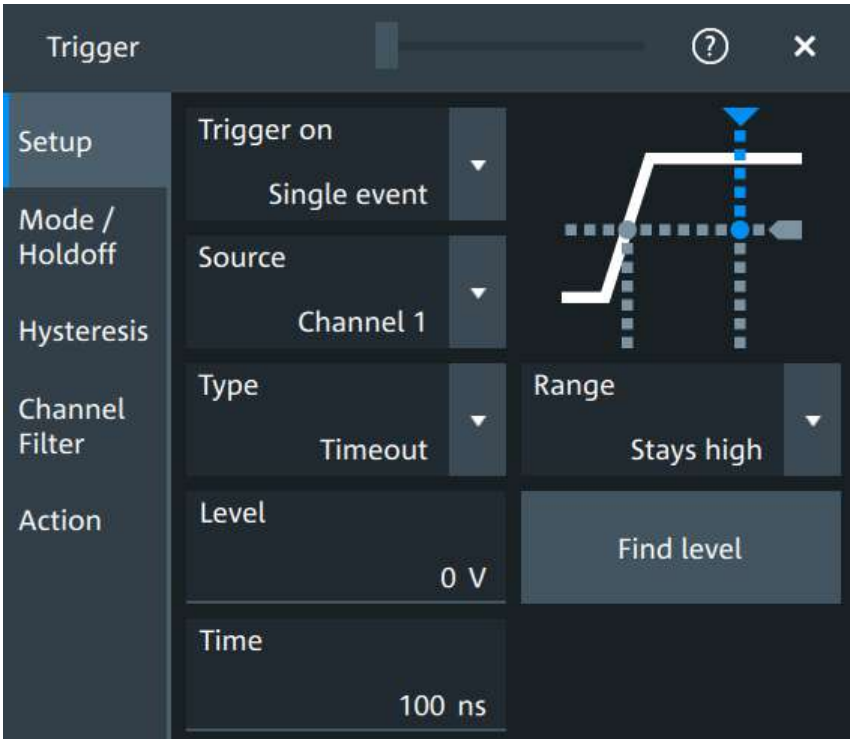

Level
Sets the threshold for the high and low signal states.

Remote command:
`TRIGger:EVENt<ev>:LEVel<n>[:VALue]` on page 1144

Range
Sets the relation of the signal level to the trigger level for the timeout trigger.

"Stays high" The signal level stays above the trigger level.

"Stays low" The signal level stays below the trigger level.

"High or low" The signal level stays above or below the trigger level.

Remote command:
`TRIGger:EVENt<ev>:TIMeout:RANGe` on page 1158

Time
Sets the time limit for the timeout at which the instrument triggers.

Remote command:
`TRIGger:EVENt<ev>:TIMeout:TIME` on page 1158

7.4.8 Interval trigger

Access: "Menu" > "Trigger" > "Setup" tab > "Type = Interval"

The interval trigger analyzes the time between two pulses.

The interval trigger can analyze either rising or falling edges, but searching for an interval is also possible for both edges at the same time ("Either").

This section describes the trigger-type specific settings. For settings that apply to all trigger types, see Section 7.2, "Common trigger settings", on page 169.

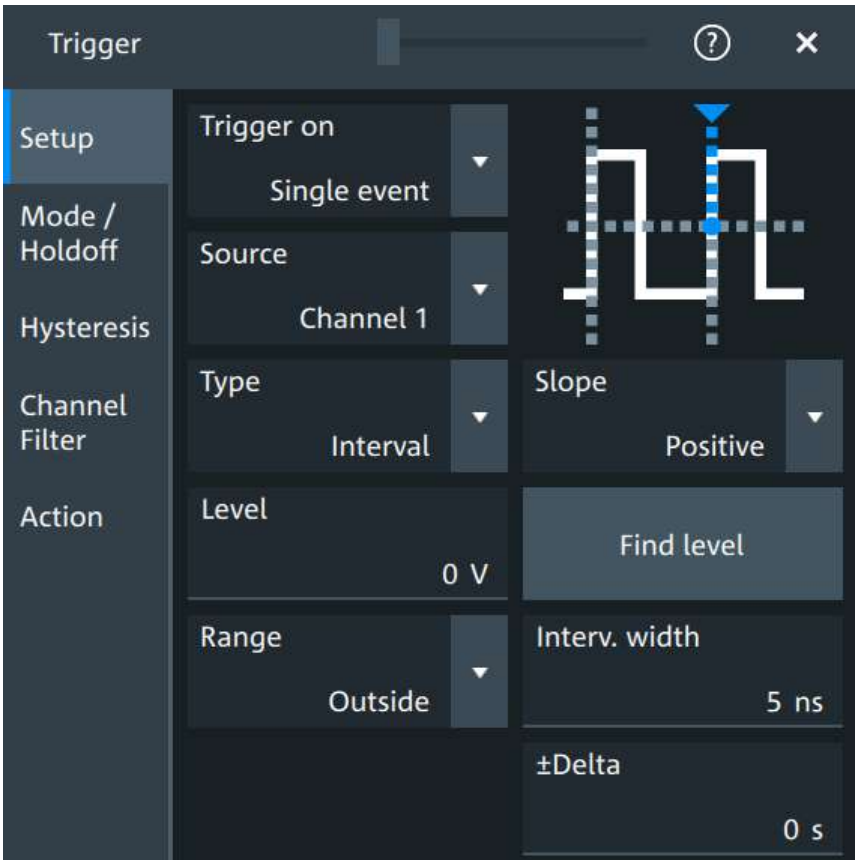

Level
See "Level" on page 170.

Remote command:
`TRIGger:EVENt<ev>:LEVel<n>[:VALue]` on page 1144

Slope
Sets the edge for the trigger. You can analyze the interval between positive edges or between negative edges.

Remote command:
`TRIGger:EVENt<ev>:INTerval:SLOPe` on page 1160

Range
Selects how the range of an interval is defined:

"Within" Triggers on pulse intervals inside a given range. The range is defined by "Interv. width" and "±Delta".

"Outside" Triggers on intervals outside a given range. The range definition is the same as for "Within" range.

"Shorter" Triggers on intervals shorter than the given "Interv. width".

"Longer" Triggers on intervals longer than the given "Interv. width".

Remote command:
`TRIGger:EVENt<ev>:INTerval:RANGe` on page 1159

Interv. width
Sets the time between two pulses for the interval trigger.

Remote command:
`TRIGger:EVENt<ev>:INTerval:WIDTh` on page 1160

±Delta
Defines a range around the "Interv. width" value.

Remote command:
`TRIGger:EVENt<ev>:INTerval:DELTa` on page 1159

7.4.9 Slew rate trigger

Access: "Menu" > "Trigger" > "Setup" tab > "Type = Slew rate"

The slew rate trigger is also known as transition trigger. It triggers if the transition time from the lower to higher voltage level (or vice versa) is shorter or longer as defined, or outside or inside a specified time range.

The slew rate trigger finds slew rates faster than expected or permissible to avoid overshooting and other interfering effects. It also detects slow edges violating the timing in pulse series.

This section describes the trigger-type specific settings. For settings that apply to all trigger types, see Section 7.2, "Common trigger settings", on page 169.

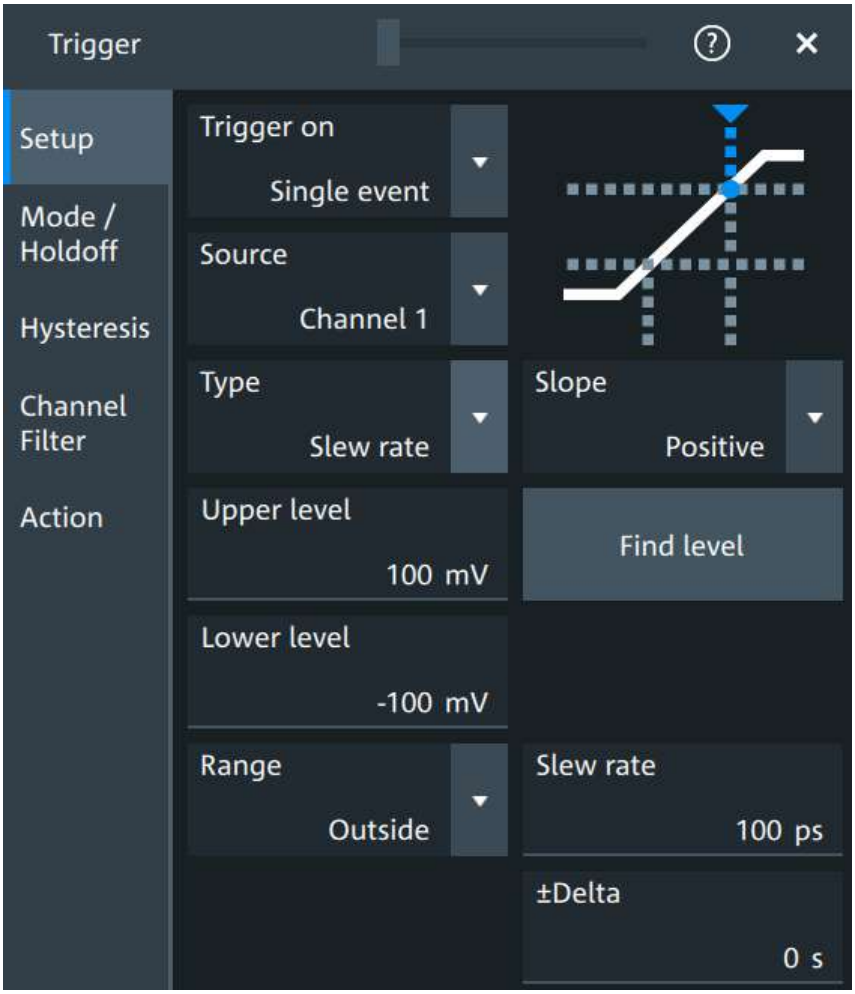

Slope
Sets the edge direction for the trigger.

"Positive"	Selects the rising edge, which is a positive voltage change.
"Negative"	Selects the falling edge, which is a negative voltage change.
"Either"	Selects the rising and falling edge. After starting an acquisition, the instrument triggers on the first identified edge.

Remote command:
`TRIGger:EVENt<ev>:SLEW:SLOPe` on page 1163

Upper level
Sets the upper voltage threshold. When the signal crosses this level, the slew rate measurement starts or stops depending on the selected slope.

Remote command:
`TRIGger:EVENt<ev>:LEVel<n>:SLEW:UPPer` on page 1161

Lower level
Sets the lower voltage threshold. When the signal crosses this level, the slew rate measurement starts or stops depending on the selected slope.

Remote command:
TRIGger:EVENt<ev>:LEVel<n>:SLEW:LOWer on page 1161

Range
Selects how the time limit for the slew rate is defined. The time measurement starts when the signal crosses the first trigger level - the upper or lower limit depending on the selected slope. The measurement stops when the signal crosses the second level.

"Within" Triggers on slew rates inside a given time range. The range is defined by "Slew rate" and "±Delta".

"Outside" Triggers on slew rates outside a given time range. The range definition is the same as for "Within" range.

"Shorter" Triggers on slew rates shorter than the given "Slew rate" limit.

"Longer" Triggers on slew rates longer than the given "Slew rate" limit.

Remote command:
TRIGger:EVENt<ev>:SLEW:RANGe on page 1162

Slew rate
For the ranges "Within" and "Outside", the slew rate defines the center of a range which is defined by the limits "±Delta".

For the ranges "Shorter" and "Longer", the slew rate defines the maximum and minimum slew rate limits, respectively.

Remote command:
TRIGger:EVENt<ev>:SLEW:RATE on page 1162

±Delta
Defines a time range around the given slew rate.

Remote command:
TRIGger:EVENt<ev>:SLEW:DELTa on page 1161

7.4.10 Setup & Hold

Access: "Menu" > "Trigger" > "Setup" tab > "Type = Setup & Hold"

The setup & hold trigger analyzes the relative timing between two signals: a data signal and the synchronous clock signal. Many systems require, that the data signal must be steady for some time before and after the clock edge, for example, the data transmission on parallel interfaces. With this trigger type, you can also test the time correlation of sideband and in-band signals.

The setup & hold trigger is also known as Data2Clock trigger.

This section describes the trigger-type specific settings. For settings that apply to all trigger types, see Section 7.2, "Common trigger settings", on page 169.

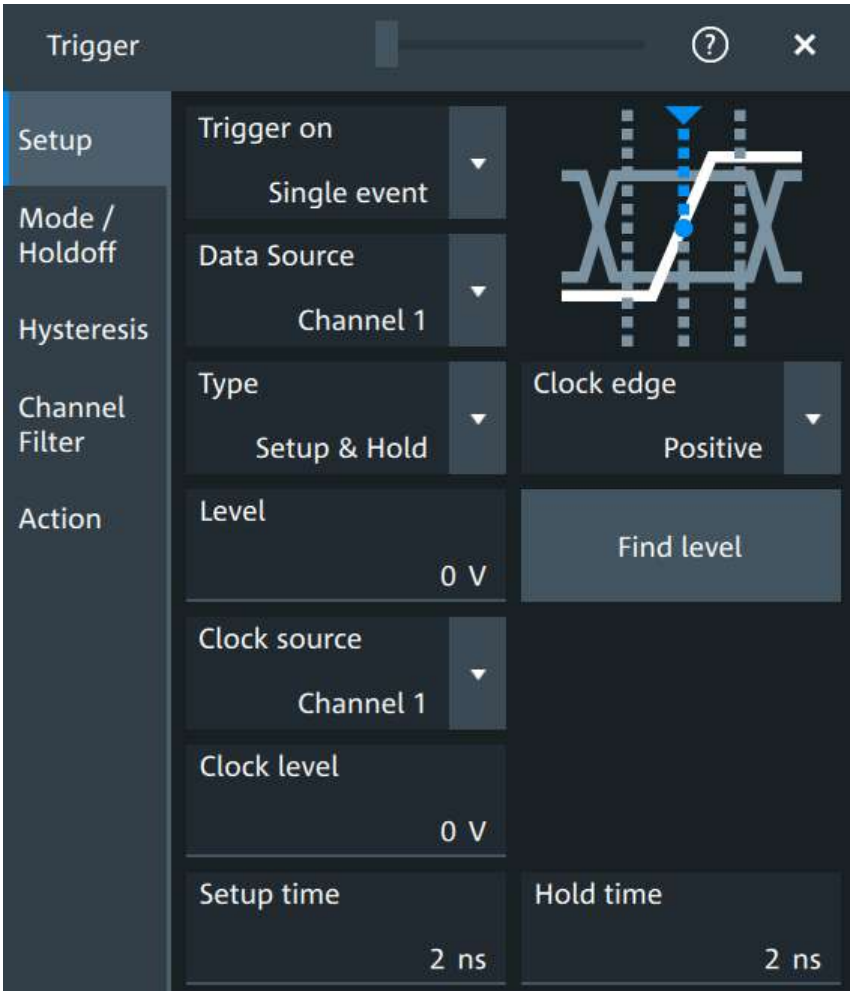

Data source
Selects the input channel of the data signal.

Remote command:
`TRIGger:EVENt<ev>:SOURce` on page 1145

Level
Sets the voltage level for the data signal. At this level, the setup and hold time are measured.

Remote command:
`TRIGger:EVENt<ev>:LEVel<n>[:VALue]` on page 1144

Clock source
Selects the input channel of the clock signal.

Remote command:
`TRIGger:EVENt<ev>:SETHold:CSOurce[:VALue]` on page 1164

Clock edge
Sets the edge of the clock signal. Edge and level define the time reference point.

"Positive" Rising edge, a positive voltage change.

"Negative" Falling edge, a negative voltage change.

"Both" Both the rising and the falling edge.

Remote command:
`TRIGger:EVENt<ev>:SETHold:CSOurce:EDGE` on page 1163

Clock level
Sets the voltage level for the clock signal.

Both the clock level and the clock edge define the starting point for calculation of the setup and hold time.

Remote command:
`TRIGger:EVENt<ev>:SETHold:CSOurce:LEVel` on page 1163

Setup time
Sets the minimum time **before** the clock edge while the data signal must stay steady above or below the data level.

Remote command:
`TRIGger:EVENt<ev>:SETHold:STIMe` on page 1164

Hold time
Sets the minimum time **after** the clock edge while the data signal must stay steady above or below the data level.

Remote command:
`TRIGger:EVENt<ev>:SETHold:HTIMe` on page 1164

7.4.11 State trigger

Access: "Menu" > "Trigger" > "Setup" tab > "Type = State"

The state trigger verifies if the channel states match the defined pattern at the clock edge. The trigger occurs if the logical combination of the input channels is true at the crossing point of the selected clock edge and the trigger level.

This section describes the trigger-type specific settings. For settings that apply to all trigger types, see Section 7.2, "Common trigger settings", on page 169.

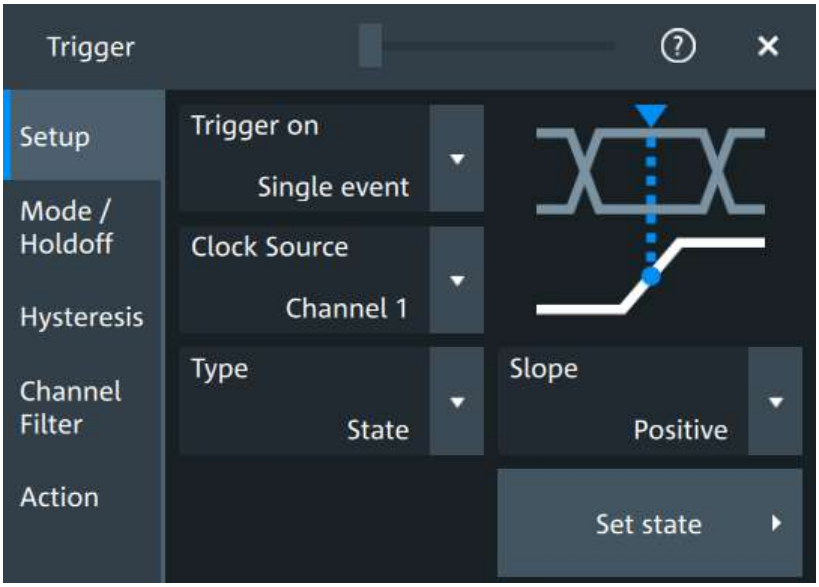

1. Select the "Clock source" and the "Slope".
2. Tap "Set state".
   See Section 7.4.12.2, "Settings for state and pattern trigger of analog channels", on page 193 for setting details.

Slope
Sets the edge direction for the trigger.

"Positive"	Selects the rising edge, which is a positive voltage change.
"Negative"	Selects the falling edge, which is a negative voltage change.
"Either"	Selects the rising and falling edge. After starting an acquisition, the instrument triggers on the first identified edge.

Remote command:
`TRIGger:EVENt<ev>:STATe:SLOPe` on page 1166

7.4.12 Pattern trigger

Access: "Menu" > "Trigger" > "Setup" tab > "Type = Pattern"

The pattern trigger works like a logic trigger. It provides logical combinations of the input channels and can be used for verifying the operation of digital logic. If the channel states match the desired pattern, the pattern trigger occurs.

This section describes the trigger-type specific settings. For settings that apply to all trigger types, see Section 7.2, "Common trigger settings", on page 169.

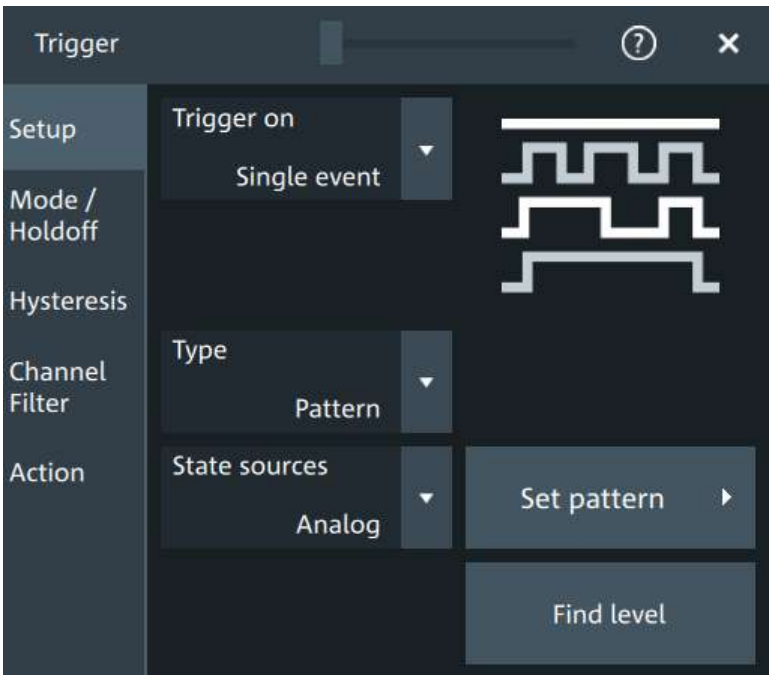

► Tap "Set pattern".
See Section 7.4.12.2, "Settings for state and pattern trigger of analog channels", on page 193 for setting details.

7.4.12.1 General settings

State sources
Selects if the source of the trigger for the pattern type is an "Analog" or "Digital" channel.

Remote command:
`TRIGger:EVENt<ev>:PATTern:QUALify:SOURces` on page 1168

Set pattern
Opens a dialog for setting the pattern by defining the channel stated and logic operator..

For analog channels, see Section 7.4.12.2, "Settings for state and pattern trigger of analog channels", on page 193.

For digital channels, see Section 7.4.12.3, "Settings for state and pattern trigger of digital channels", on page 195.

Find level
Sets the trigger level automatically to *0.5 * (MaxPeak – MinPeak)*.

In a trigger sequence, "Find level" affects all active events of the sequence (A, B, and R event).

The function is not available for trigger sources "Extern" and "Line".

Remote command:
TRIGger:FINDlevel on page 1145

7.4.12.2 Settings for state and pattern trigger of analog channels

Access for state trigger: "Menu" > "Trigger" > "Setup" tab > "Type = State" > "Set state"

Access for pattern trigger: "Menu" > "Trigger" > "Setup" tab > "Type = Pattern" > "Set pattern"

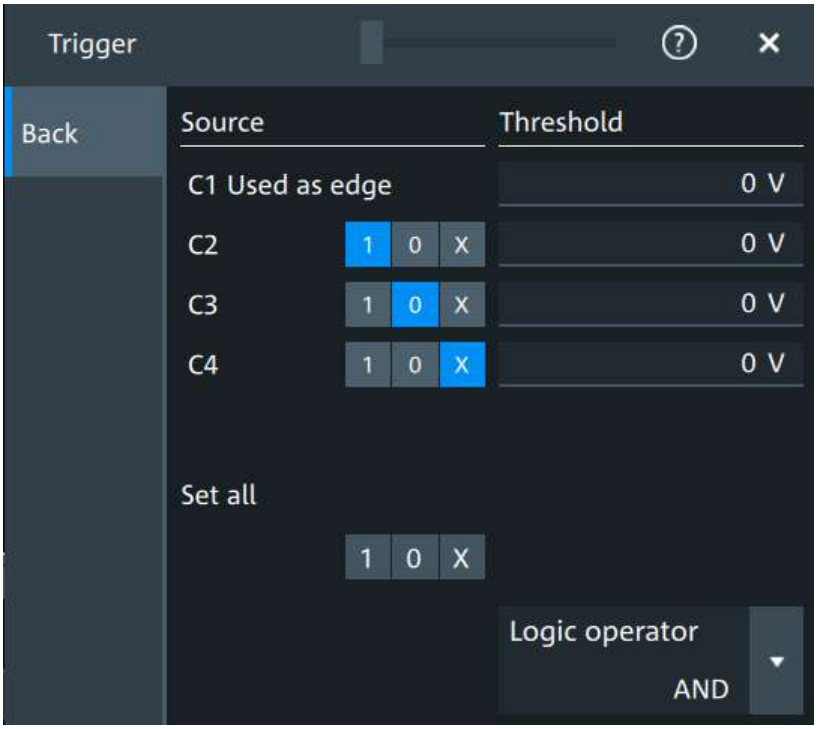

Figure 7-3: Detailed settings for state trigger

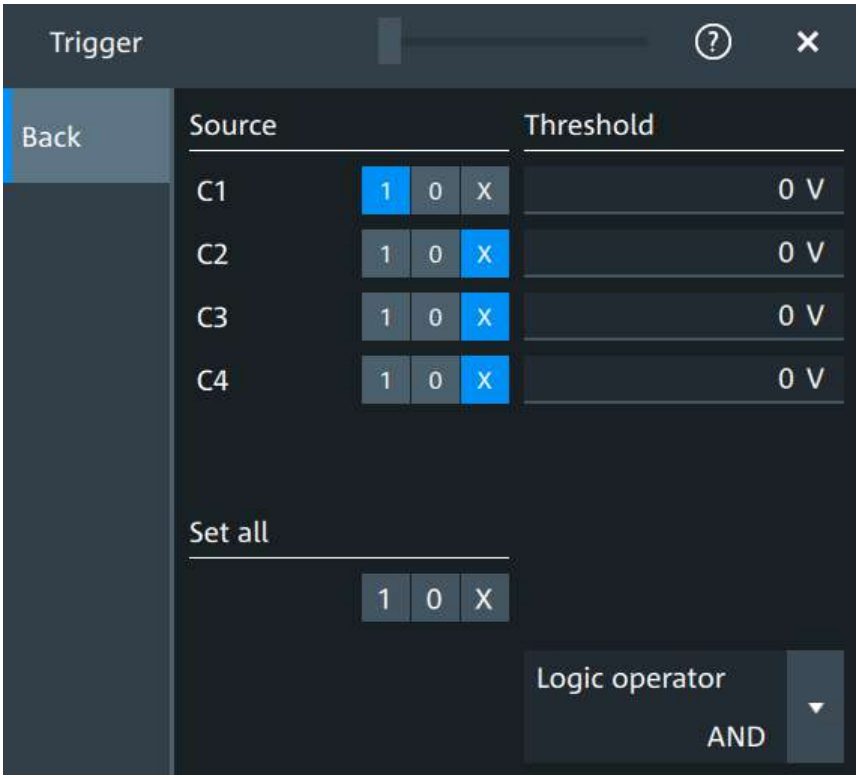

Figure 7-4: Detailed settings for pattern trigger

Source: channel states
Set the state for each channel. For the state trigger, the clock source is indicated and does not get a state.

Remote command:
`TRIGger:EVENt<ev>:STATe:QUALify:ANALog:CHAN<n>:HLX` on page 1165
`TRIGger:EVENt<ev>:PATTern:QUALify:ANALog:CHAN<n>:HLX` on page 1167

Threshold
Set the threshold for each channel.

Remote command:
`TRIGger:EVENt<ev>:LEVel<n>[:VALue]` on page 1144

Set all
Sets all channels to the selected state.

Logic Operator
Defines the logic combination of the channels and their states.

- "AND": logical AND, conjunctive combination
- "OR": logical OR, disjunctive combination

Remote command:
`TRIGger:EVENt<ev>:STATe:QUALify:LOGic` on page 1165
`TRIGger:EVENt<ev>:PATTern:QUALify:LOGic` on page 1167

TRIGger:EVENt<ev>:PATTern:QUALify:DIGital:LOGic on page 1168
TRIGger:EVENt<ev>:STATe:QUALify:DIGital:LOGic on page 1166

7.4.12.3 Settings for state and pattern trigger of digital channels

Access: "Menu" > "Trigger" > "Setup" tab > "Type = Pattern" > "Set pattern"

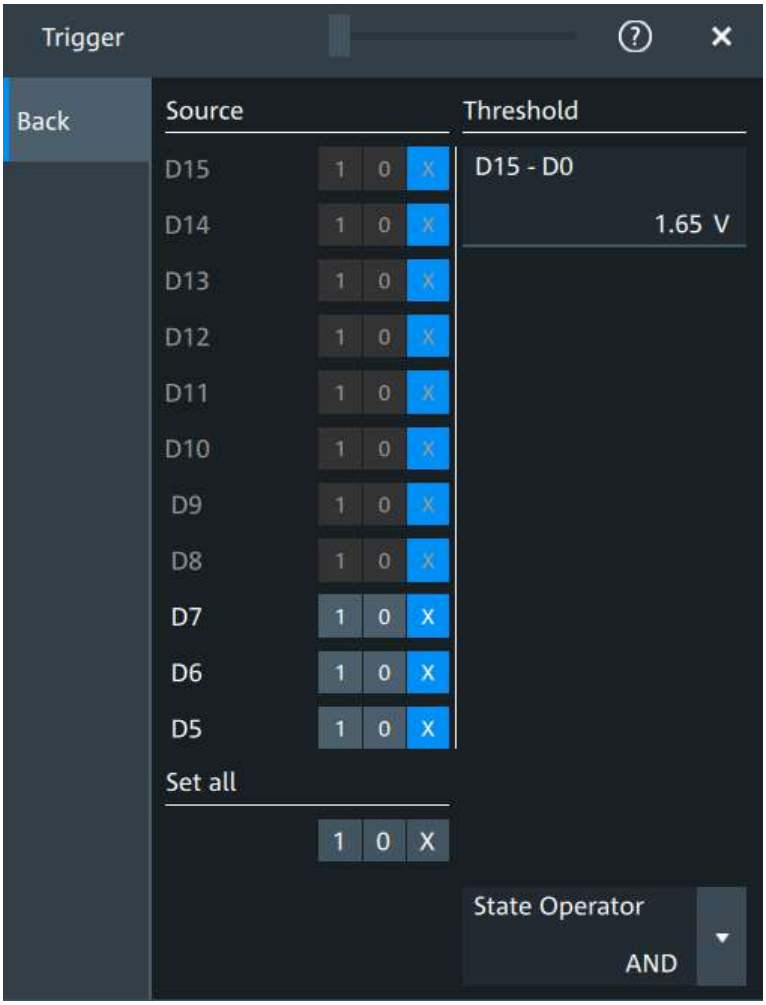

Source: channel states
Set the state for each channel.

Remote command:
TRIGger:EVENt<ev>:PATTern:QUALify:DIGital:CHAN<n>:HLX on page 1167
TRIGger:EVENt<ev>:STATe:QUALify:DIGital:CHAN<n>:HLX on page 1166

Set all
Sets all channels to the selected state.

Logic Operator
Defines the logic combination of the channels and their states.

- "AND": logical AND, conjunctive combination
- "OR": logical OR, disjunctive combination

Remote command:
`TRIGger:EVENt<ev>:STATe:QUALify:LOGic` on page 1165
`TRIGger:EVENt<ev>:PATTern:QUALify:LOGic` on page 1167
`TRIGger:EVENt<ev>:PATTern:QUALify:DIGital:LOGic` on page 1168
`TRIGger:EVENt<ev>:STATe:QUALify:DIGital:LOGic` on page 1166

7.4.13 Line trigger

Access: "Menu" > "Trigger" > "Setup" tab > "Source" = "Line"

The line trigger is an edge trigger that triggers on the AC power input and synchronizes the signal to the AC power frequency. It is not a trigger type but rather a special trigger source. Use the line source if you want to analyze signals related to the power line frequency, such as lighting equipment and power supply devices.

Slope
Selects the rising or falling edges of the AC power input.

Remote command:
`TRIGger:EVENt<ev>:EDGE:SLOPe` on page 1148

7.5 Trigger mode / holdoff

Access: "Trigger" menu > "Mode / holdoff" tab

Holdoff conditions define a waiting time after the current trigger until the next trigger can be recognized.

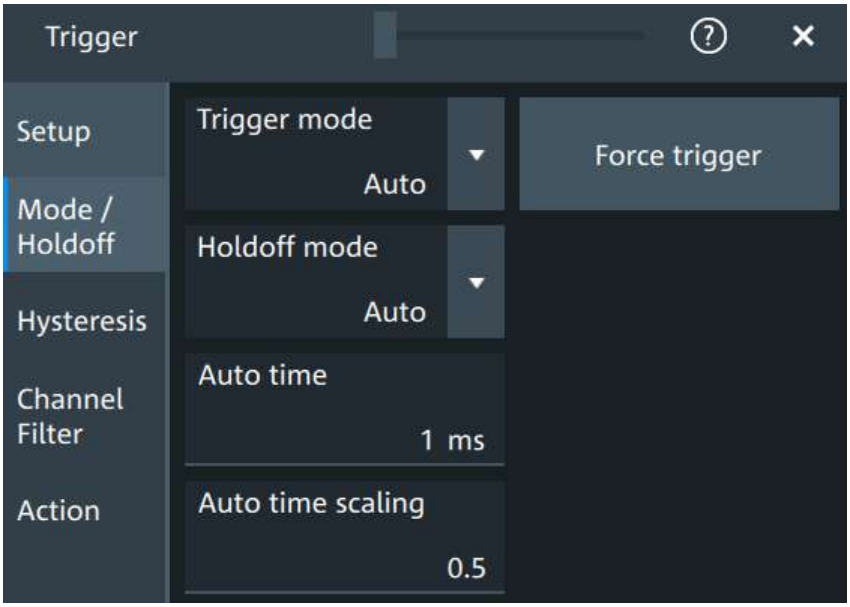

Trigger mode
Sets the trigger mode which determines the behavior of the instrument if no trigger occurs. The current setting is shown on the trigger label.

In a trigger sequence, the trigger mode affects only the A-trigger.

To toggle quickly between "Auto" and "Normal" mode, use the [Auto Norm] key on the front panel (in "Trigger" section).

"Auto" The instrument triggers repeatedly after a time interval if the trigger conditions are not fulfilled. If a real trigger occurs, it takes precedence. This mode helps to see the waveform even before the trigger conditions are set correctly. The waveform on the screen is not synchronized, and successive waveforms are not triggered at the same point of the waveform. The time interval depends on the timebase settings.

"Normal" The instrument acquires a waveform only if a trigger occurs, that is, if all trigger conditions are fulfilled. If no trigger occurs, no waveform is acquired and the last acquired waveform is displayed. If no waveform was captured before, none is displayed.
When no trigger has been found for longer than one second, a message box appears that shows the time elapsed since the last trigger.

"Free run" The instrument starts acquisition immediately and triggers after a short time interval independent of the timebase settings and faster than in "Auto" mode. Real triggers are ignored. Use this mode if the "Auto" mode is too slow.

Remote command:
`TRIGger:MODE` on page 1169

Force trigger
Provokes an immediate single acquisition. Force the trigger if the acquisition is running in normal mode and no valid trigger occurs. Thus, you can confirm that a signal is available and use the waveform display to determine how to trigger on it.

Remote command:
`TRIGger:FORCe` on page 1169

Holdoff mode
Selects the method to define the holdoff condition.

The trigger holdoff defines when the next trigger after the current will be recognized. Thus, it affects the next trigger to occur after the current one. Holdoff helps to obtain stable triggering when the oscilloscope is triggering on undesired events.

Holdoff settings are not available if the trigger source is an external trigger input or serial bus, and if you trigger on a sequence of events.

Example:

For example, you want to analyze the first pulse in a burst of several pulses. At first, you select a sufficiently slow time base to display the entire burst. Then, you set the holdoff time a little longer than the length of the burst. Now, each trigger corresponds to the first pulse in successive bursts, and you can change the time base to display the waveform in more detail.

The following methods are available:

"Time" Defines the holdoff directly as a time period. The next trigger occurs only after the "Holdoff time" has passed.

"Events" Defines the holdoff as a number of trigger events. The next trigger only occurs when this number of events is reached. The number of triggers to be skipped is defined in "Holdoff events".

"Random" Defines the holdoff as a random time limited by "Minimum time" and "Maximum time". For each acquisition cycle, the instrument selects a new random holdoff time from the specified range.
Random holdoff prevents synchronization to discover effects invisible with synchronized triggering, for example, the features of a pulse train.

"Auto" The holdoff time is calculated automatically based on the current horizontal scale.
"Auto time scaling" defines the factor that the horizontal scale is multiplied with.
"Auto time" shows the resulting holdoff time: *Auto time = Auto time scaling * Horizontal scale*.

"Off" No holdoff

Remote command:
`TRIGger:HOLDoff:MODE` on page 1169
`TRIGger:HOLDoff:TIME` on page 1171
`TRIGger:HOLDoff:EVENts` on page 1171
`TRIGger:HOLDoff:MAX` on page 1171
`TRIGger:HOLDoff:MIN` on page 1171
`TRIGger:HOLDoff:AUTotime?` on page 1170
`TRIGger:HOLDoff:SCALing` on page 1170

7.6 Hysteresis

Access: "Menu">"Trigger" > "Hysteresis"

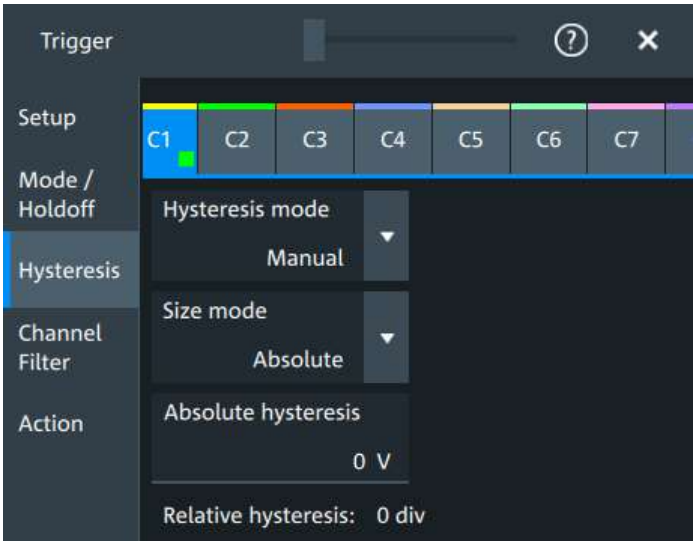

The rejection of noise by setting a hysteresis avoids unwanted trigger events caused by noise oscillation around the trigger level. You can select the hysteresis mode and value for each channel separately.

HW hysteresis
Displays the hysteresis that is set by the instrument in automatic hysteresis mode.

Remote command:
`TRIGger:NOISe<m>:EFFective?` on page 1172

Hysteresis mode
Selects how the hysteresis is set.

"Auto" Automatic mode is the recommended mode. The hysteresis is set by the instrument to reject the internal noise of the instrument.

"Manual" The hysteresis is defined directly in absolute or relative values.

Remote command:
`TRIGger:NOISe<m>:MODE` on page 1173

Size mode
Selects whether the hysteresis is defined in absolute or relative values. The setting is available only in manual hysteresis mode.

Remote command:
`TRIGger:NOISe<m>:MODE` on page 1173

Absolute hysteresis
Defines a range in absolute values around the trigger level. If the signal oscillates inside this range and thus crosses the trigger level, no trigger event occurs.

Remote command:
`TRIGger:NOISe<m>:ABSolute` on page 1172

Relative hysteresis
Defines a range in divisions around the trigger level in division or as percentage. If the signal oscillates inside this range and thus crosses the trigger level, no trigger event occurs.

Remote command:
`TRIGger:NOISe<m>:PERDivision` on page 1173
`TRIGger:NOISe<m>:RELative` on page 1173

7.7 Channel filter

Access: "Menu">"Trigger" > "Channel filter"

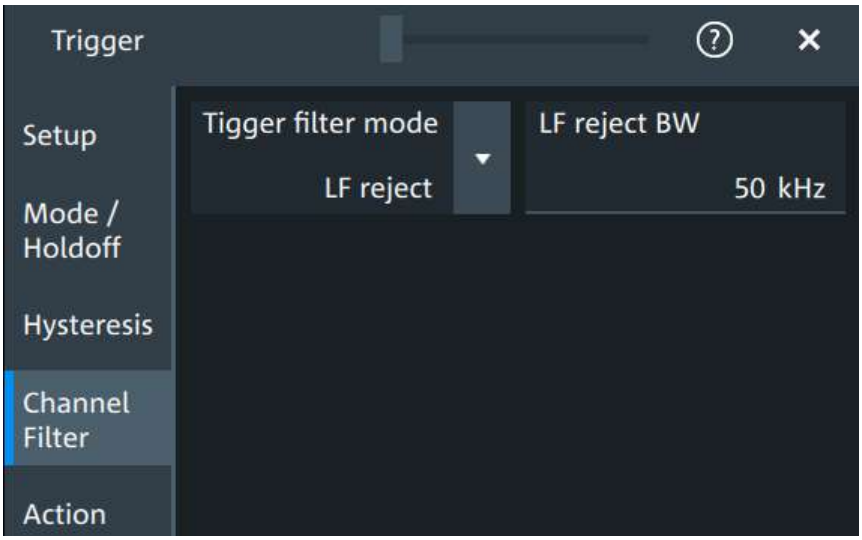

Trigger filter mode
Selects the filter mode for the trigger channel.

"Off"	The trigger signal is not filtered.
"LF reject"	Frequencies lower than the "LF reject BW" are rejected, higher frequencies pass the filter.
"RF reject"	Frequencies higher than the "RF reject BW" are rejected, lower frequencies pass the filter.

Remote command:
`TRIGger:FILTermode` on page 1174

LF reject BW
Sets the limit frequency limit for the highpass filter of the trigger signal. Frequencies lower than this value are rejected, higher frequencies pass the filter.

Remote command:
`TRIGger:LFReject` on page 1175

RF reject BW
Sets the limit frequency limit for the lowpass filter of the trigger signal. Frequencies higher than this value are rejected, lower frequencies pass the filter.

Remote command:
`TRIGger:RFReject` on page 1175

7.8 Actions on trigger

Access: "Menu" > "Trigger" > "Action" tab

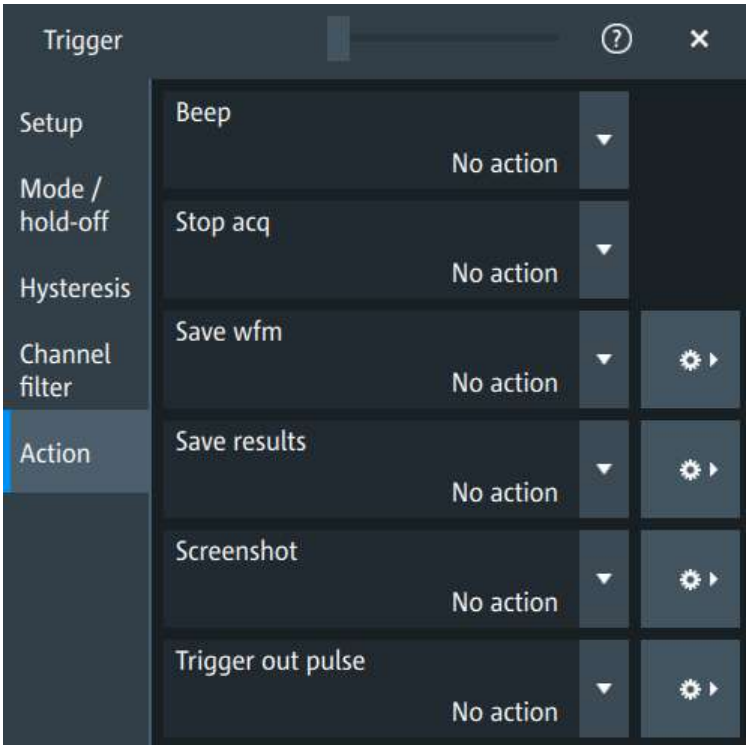

The action settings define what happens when a trigger occurs. All available actions can be initiated at the same time. To activate an action, set it to "On trigger".

Beep
Generates a beep sound.

Remote command:
`TRIGger:ACTions:BEEP` on page 1175

Stop acq
Stops the acquisition when a trigger occurs.

Remote command:
`TRIGger:ACTions:STOP` on page 1178

Save wfm
Saves the waveform data to a file according to the folder, filename and extension settings in the "Menu" > "Save/recall" > "Save" > "Waveform" dialog.

To select the waveforms and adjust the file path, tap the settings icon.

See also Section 13.4.2, "Saving waveforms", on page 479.

Remote command:
`TRIGger:ACTions:WFMSave` on page 1178

Save results
Saves the results to a file according to the settings in "Menu" > "Save/recall" > "Save" > "Results".

To select the waveforms and adjust the file path, tap the settings icon.

See also Section 13.6, "Results", on page 494.

Remote command:
`TRIGger:ACTions:SRESults` on page 1177

Screenshot
Saves a screenshot according to the settings in the "Menu" > "Save/recall" > "Save" > "Screenshot" dialog.

To adjust the screenshot settings, tap the settings icon.

See also Section 13.8, "Screenshots", on page 500.

Remote command:
`TRIGger:ACTions:SCReenshot` on page 1177

Trigger out pulse
Selects, if a pulse is provided to the [Trigger Out] connector on the rear panel. The trigger-out signal is used to synchronize the measurements of other instruments.

To adjust the outgoing signal, tap the settings icon.

Remote command:
`TRIGger:ACTions:OUT:STATe` on page 1176

Settings for the trigger out pulse
In this dialog you can adjust the trigger out pulse.

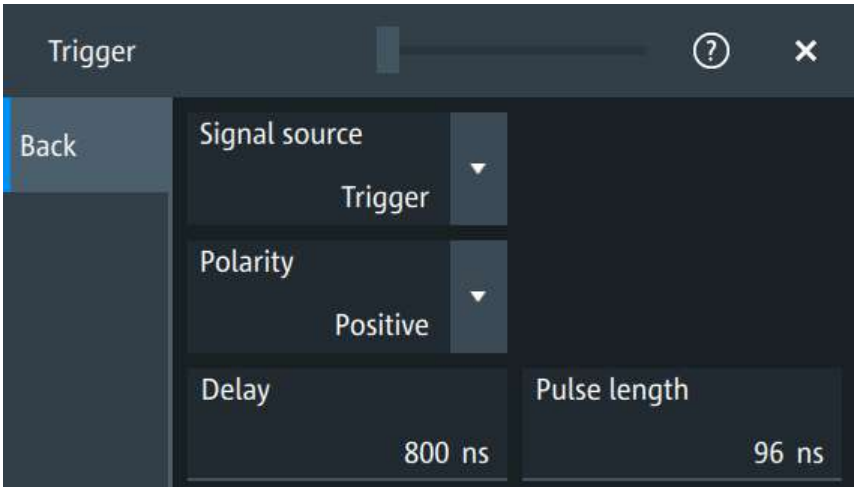

Signal source ← Settings for the trigger out pulse
Defines when the trigger out signal is initiated: at the trigger point, when waiting for the trigger, or when the post-trigger time is finished.

Remote command:
`TRIGger:ACTions:OUT:SOURce` on page 1176

Polarity ← Settings for the trigger out pulse
Sets the polarity of the trigger out pulse, which is the direction of the first pulse edge.

Remote command:
`TRIGger:ACTions:OUT:POLarity` on page 1177

Delay ← Settings for the trigger out pulse
Defines the delay of the first pulse edge to the trigger point. The minimum delay is 600 ns.

Remote command:
`TRIGger:ACTions:OUT:DELay` on page 1176

Pulse length ← Settings for the trigger out pulse
Sets the length of the trigger out pulse.

Remote command:
`TRIGger:ACTions:OUT:PLENgth` on page 1176

7.9 Zone trigger

The zone trigger triggers on the intersection or non-intersection of the signal and one or more zones. The zone can be applied to any active input signal like the normal hardware trigger, and also to math waveforms, XY-plots and normal spectrum traces. So, the zone trigger works in the time domain and in the frequency domain.

You can use the zone trigger, for example, to solve the following tasks:

- Triggering on differential math signals.

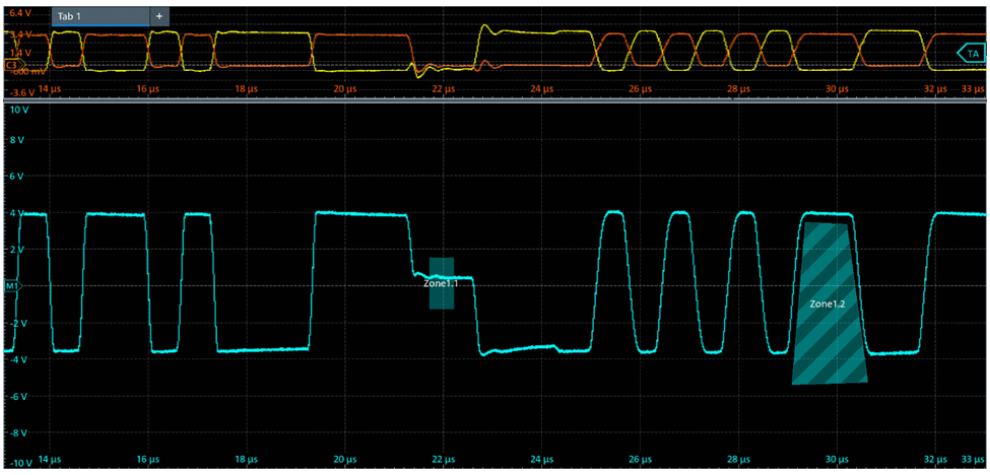

Figure 7-5: Zone trigger on math

- Trigger if a peak in the spectrum occurs: define a zone in the spectrum diagram to filter amplitude peaks.

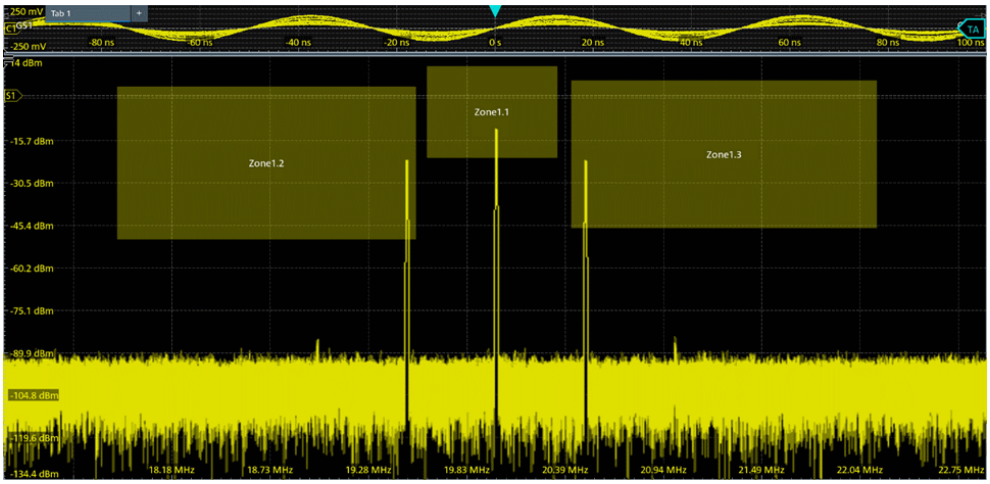

Figure 7-6: Zone trigger on spectrum

- Separate rising and falling edges: define a zone around the base or top of the digital signal.

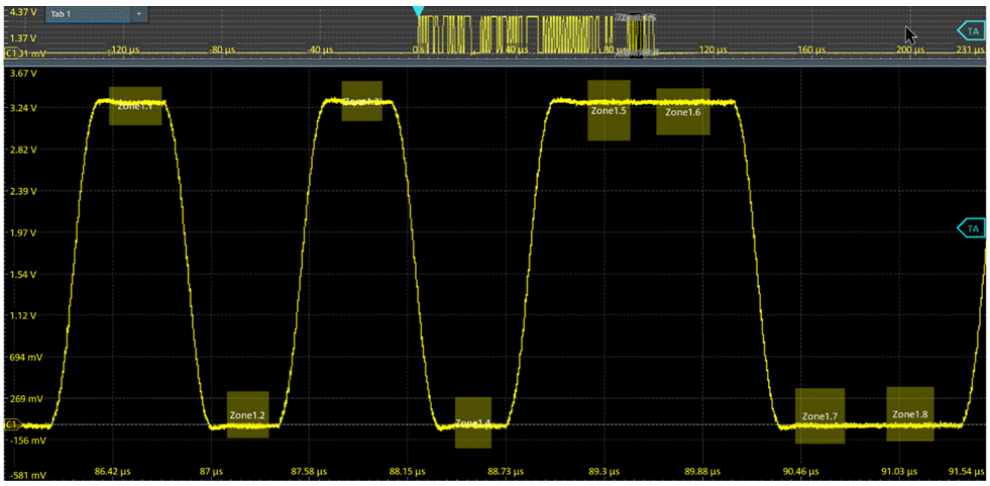

Figure 7-7: Zone trigger on digital serial pattern

- Zoom on a trigger event, even when capturing large amounts of time.

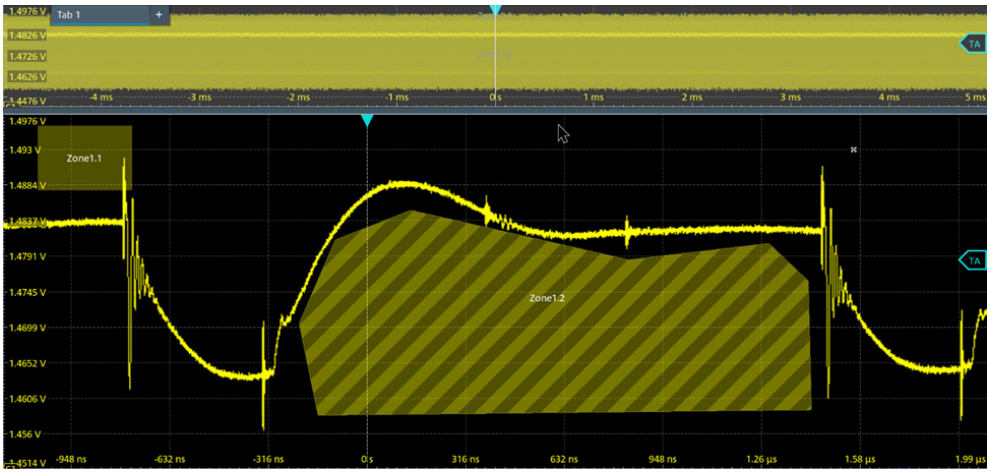

Figure 7-8: Zoom on a zone trigger in the mV and ns range

- Filter events in the history after the acquisition has finished.

The zone trigger is the second step of the "A → ZoneTrigger" trigger sequence and acts like a filter on previous acquisitions. The A-trigger condition and then the zone condition must be fulfilled independently.

Note that the trigger mode applies only to the A-trigger. If only the zone trigger conditions are relevant for the trigger, you can set the trigger mode to "Free run". Thus, you can use the zone trigger to trigger on a spectrum trace without triggering on a signal in the time domain, or you can analyze DC signals.

When an acquisition fulfills the complete trigger definition including the zone trigger, the acquisition is kept in the history memory. Otherwise, the acquisition is discarded. Moreover, you can apply the zone trigger to stored history waveforms that were acquired without zone trigger and thus filter the history waveforms on replay.

Trigger zone definition

With the MXO 5, you can define up to 4 trigger zones. A zone consists of up to 8 areas associated with a single source. In total, 32 areas can be defined.

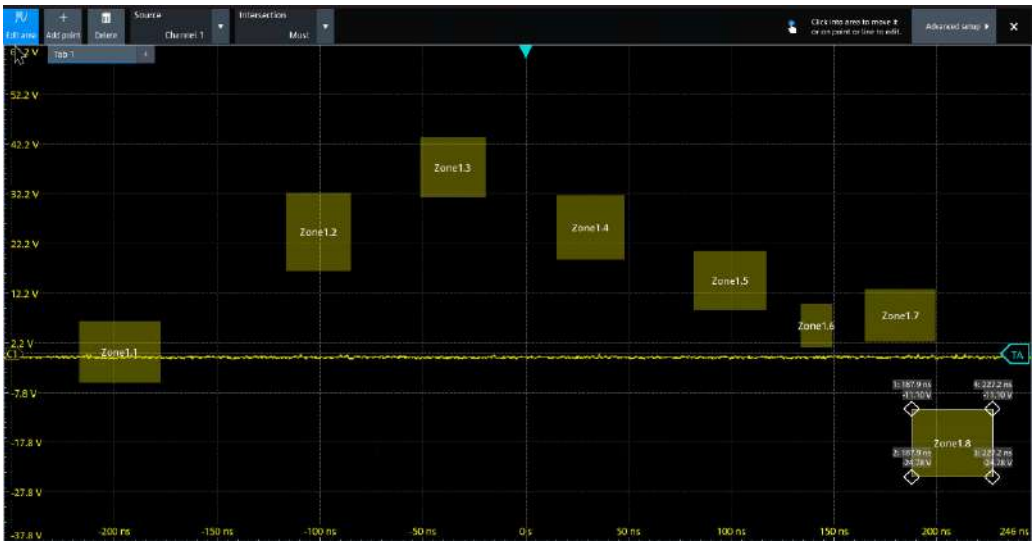

Figure 7-9: 1 trigger zone with 8 areas

The zone is applied to the diagram onto which it is drawn and has the color of the source. All areas of the zone have to be in the same diagram. If a zone is shown in a diagram for which it is not applied, for example in a zoom diagram, it is shown in a gray color.

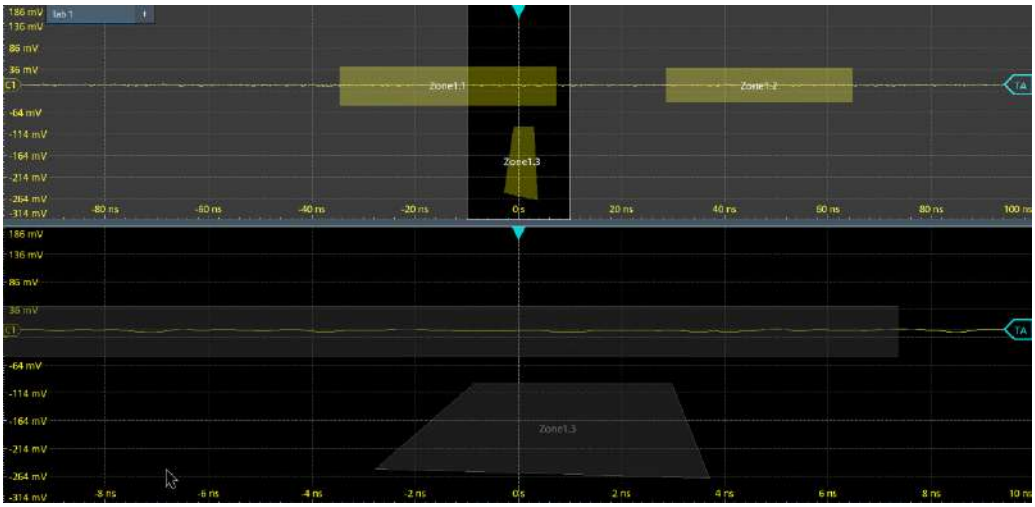

Figure 7-10: Trigger zone and a zoom diagram

Trigger zones can be applied to different sources, for example, the source of zone 1 is channel 1, and the source of zone 2 is a math signal. For the zone trigger condition, the zones are combined by Boolean operators: AND, OR, XOR, NOT. Thus, you can trigger on different waveform types simultaneously.

Trigger area definition

An area is a graphical shape on the screen, defined by pixels. It is a part of the zone for a trigger. The area has the following characteristics:

- An area is a polygon that is applied against a captured waveform. All areas of the same zone have the same source.

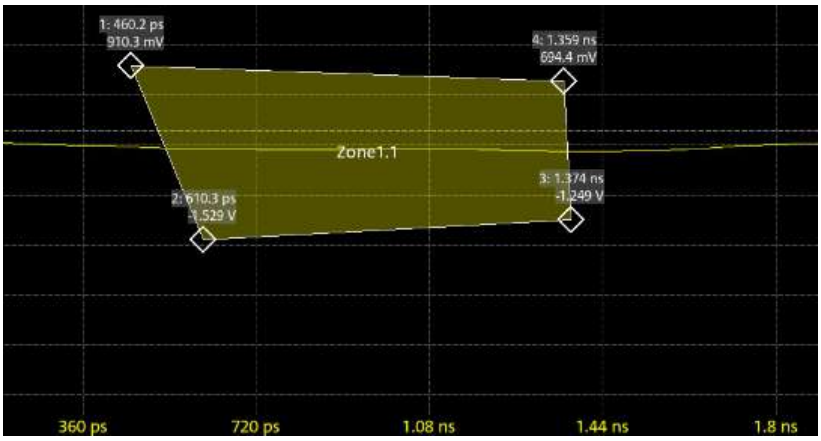

Figure 7-11: 1 area of a trigger zone

- An area can be defined from 3 up to 16 sides.

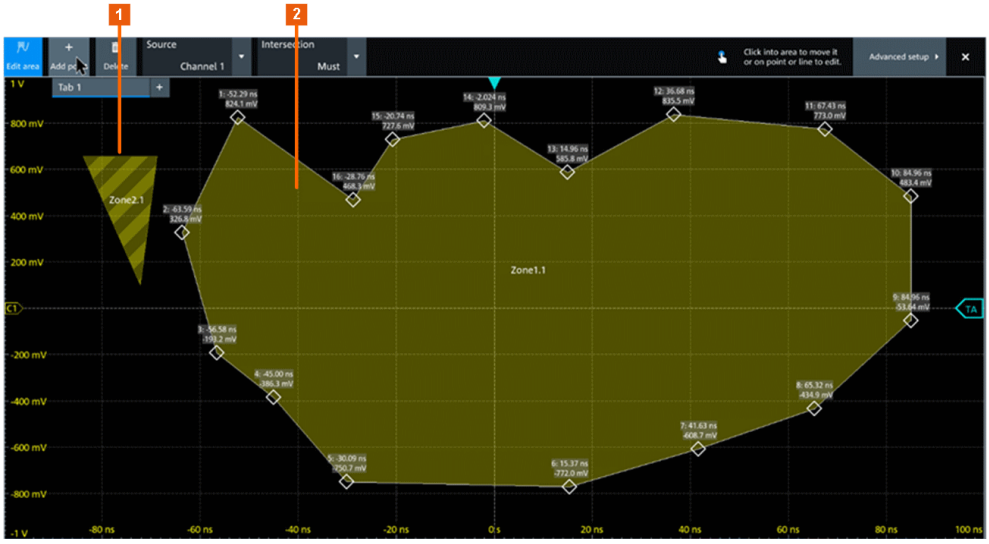

Figure 7-12: Area sizes

1 = 3 point area with "Intersection" = "Must not"
2 = 16 point area with "Intersection" = "Must"

- A zone area can have only one range in y-direction at a certain time point. If a shape is not valid, the invalid point is marked red, and an attention symbol is shown at the area name.

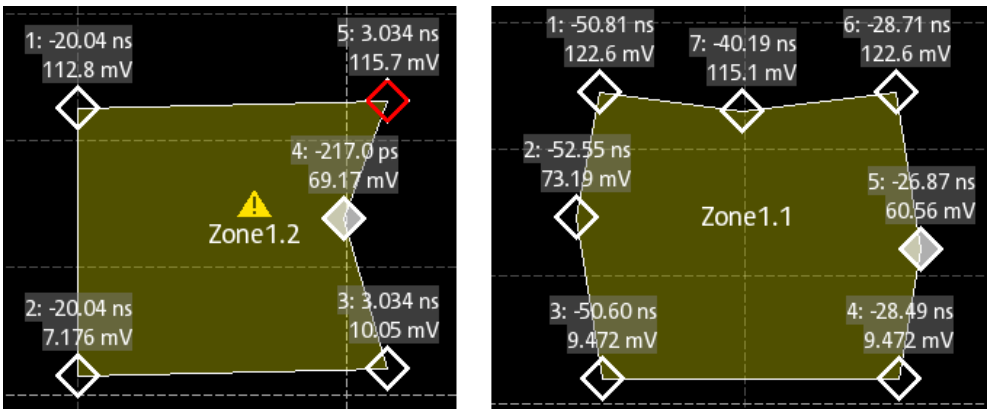

Figure 7-13: Invalid zone area (left) and valid zone area (right)

To check the validity in remote control, use `ZONE<m>:AREA<n>:VALid?` and `ZONE<m>:AREA<n>:POINt<o>:VALid?`.

- Next to each point, the number of the point and the horizontal and vertical values are shown.

Figure 7-14: Area point definition

1 = Number of the point
2 = Horizontal and vertical values of the point

- An area has a defined intersect condition, defining if the signal must intersect the area to allow the instrument to trigger, or if it must not intersect the area.
On the screen, an area that fulfills a "Must" condition has a solid fill in the color of the source channel. An area that fulfills a "Must not" also has the same color as the source channel, but is striped.

7.9.1 Using trigger zones and areas

You can define the trigger zones on the display through the toolbar:

To add trigger zones and areas

1. Tap the "Add zone trigger" icon on the toolbar.

The trigger zone toolbar opens.
Alternatively, you can use the Zone key on the front panel.



2. Select the "Source" of the zone, the signal to which the zone condition is applied.
3. Select if the signal must violate the zone to cause a trigger ("Intersect" = "Must"), or vice versa ("Intersect" = "Must not").
4. Tap "Add zone".
5. Draw a rectangle in the diagram to create the first area of a new zone trigger.
6. To add more areas to the zone, tap "Add Area".

7. Draw a rectangle in the same diagram to add a new trigger area.
8. Select if the signal must violate the area to cause a trigger (must intersect), or vice versa (must not intersect).
9. You can add more areas and further more zones to the zone trigger.

   Make sure to draw them in the correct diagram because zones affect only the diagram where they were defined.

To edit an existing area

1. Tap an existing zone area.
2. To change the shape of the zone area, tap the corner points of the zone on the SmartGrid.
3. Move the point to the required coordinates on the SmartGrid.
4. If necessary, add more points to the zone area:
   a) In the toolbar, tap "Add point".

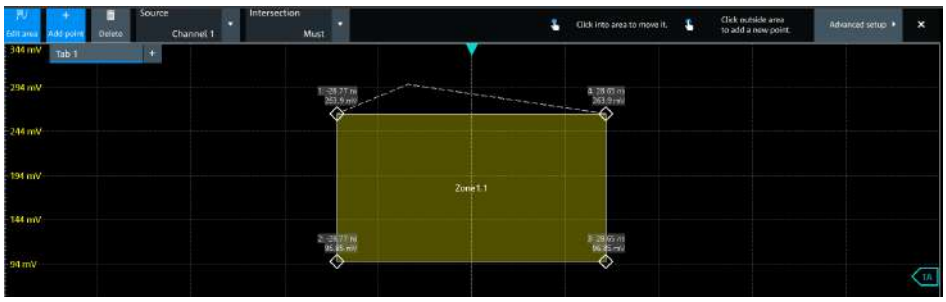

   b) Tap outside of the area to add the new point.
   c) If necessary, add more points.
   d) If necessary to change the coordinates of a point, tap on it and move it.

To delete an area or point

1. Tap an existing zone area.
2. In the "Edit area" toolbar, tap the delete icon.
3. Tap on the area that you want to delete or edit.

Delete icons appear at the area points and in the middle of the area.

4. To delete a point from the area, tap on the "Delete" icon on top of the point.
5. To delete the whole area, tap the "Delete" icon in the middle of the area next to the area "Label".

7.9.2 Zone trigger settings

Access: "Menu" > "Trigger" > "Setup" tab > select sequence with zone trigger > "Setup Z trigger" > "Setup" tab, or: Toolbar > "Add zone trigger" icon > "Advanced setup".

In this dialog, you can add zones and areas to your zone trigger and adjust their shapes.

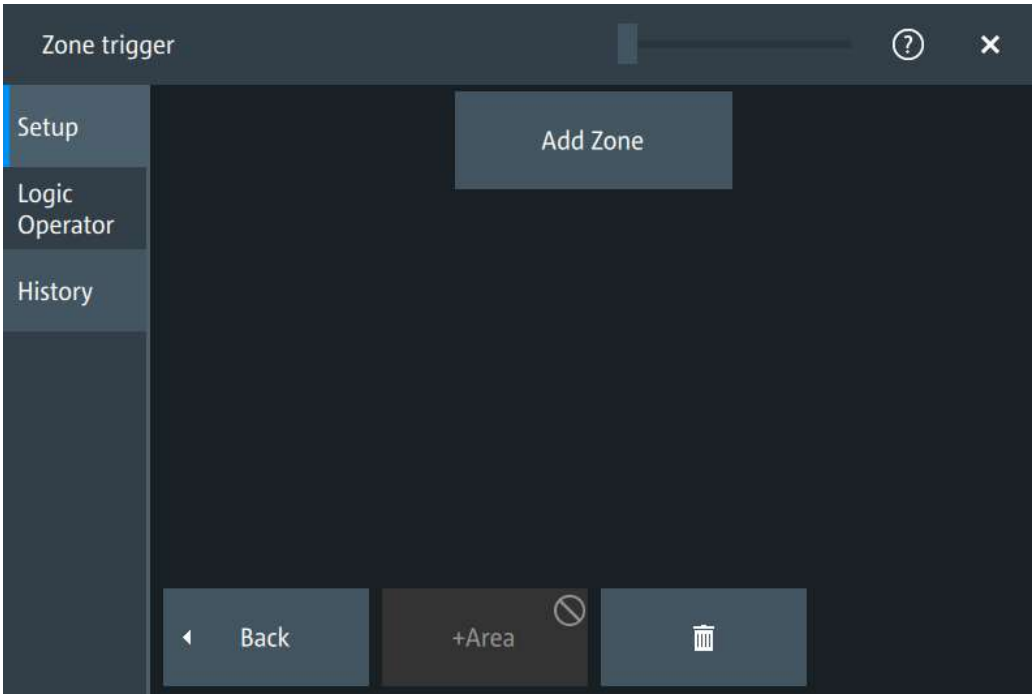

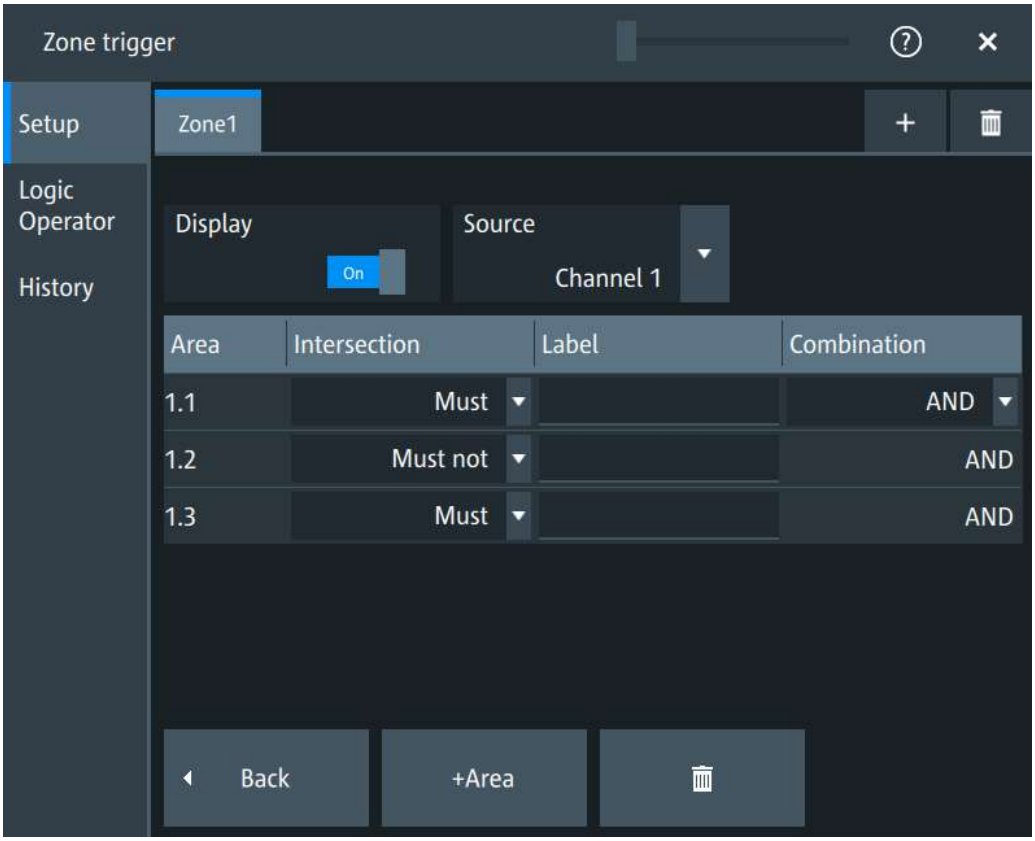

Add zone,
Adds a new trigger zone. You can add up to four zones.

Remote command:
`ZONE<m>:ADD` on page 1179

Display
Enables the display of the zone on the screen.

Remote command:
`ZONE<m>[:VISible]` on page 1185

Source
Sets the source of the zone trigger. The zone can be applied to any active input signal, math waveform, XY-plot, normal spectrum trace and power waveforms.

Reference waveforms are not supported as a spurce for the zone trigger. Thus, also math waveforms are not supported if they are calculated on reference waveforms.

Remote command:
`ZONE<m>:SOURce` on page 1185

Area
Defines the area and its condition for the zone.

"+Area" Adds a new area to the zone. You can add up to 8 areas.

"Intersect" Defines if the signal must intersect the area to allow the instrument to trigger, or if it must not intersect the area.

"Label" Defines a label for the selected area.

"Combination" Sets the logic combination that applies to all areas in a zone. Available are "AND" or "OR".
Example: If three areas are defined and the combination is "OR", then the Boolean state of the zone is Zone1 = Area1 OR Area2 OR Area3..

Remote command:
`ZONE<m>:AREA<n>:ADD` on page 1180
`ZONE<m>:AREA<n>:COUNt?` on page 1180
`ZONE<m>:AREA<n>:INTersect` on page 1180
`ZONE<m>:AREA<n>:LABel` on page 1180
`ZONE<m>:ACOMbination` on page 1179

Delete icon
Enables the removal of areas of the zone.

You can also delete all current areas with "Delete All".

Remote command:
`ZONE<m>:REMove` on page 1184
`ZONE<m>:AREA<n>:REMove` on page 1183

7.9.3 Logic operator settings

Access: "Menu" > "Trigger" > "Setup" tab > select sequence with zone trigger > "Setup Z trigger" > "Logic operator" tab.

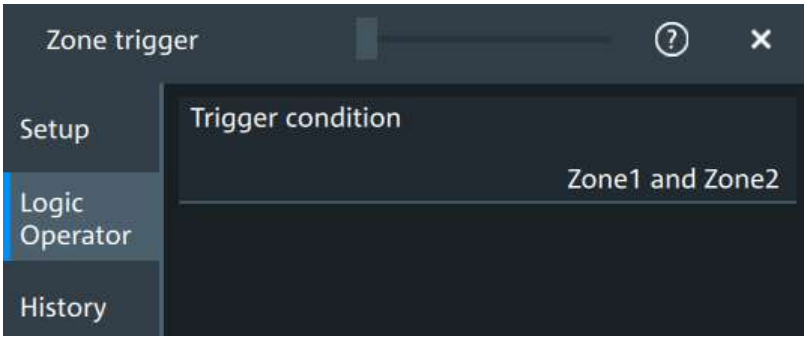

Trigger condition
Sets a logical expression for the trigger condition between different defined zones.

If all required zones are defined, you can type the logical expression directly, or use the trigger condition editor.

Double-tap the "Trigger condition" field to open the editor:

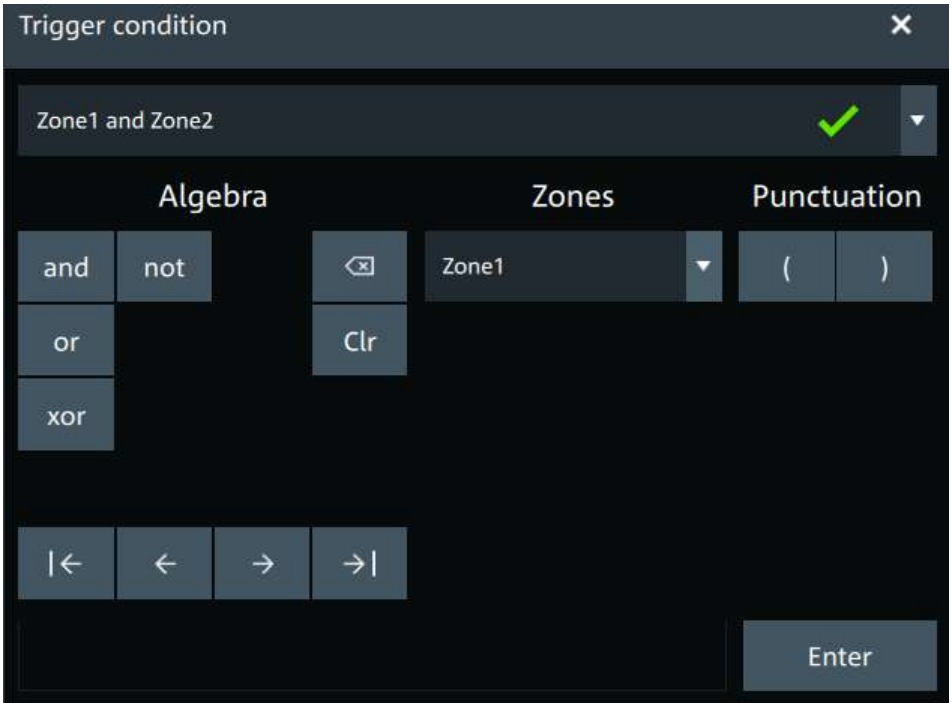

The keys of the "Trigger condition" editor are described in Trigger condition keys.

Table 7-1: Trigger condition keys

Icon	Description
and	And
not	Must not intersect
or	Or
xor	Exclusive or
Zone	Selects the zone
Clr	Clear expression in editor
(	Left bracket to enclose operands
)	Right bracket to enclose operands
|←	Moves cursor to beginning
←	Moves cursor 1 step to the left
→	Moves cursor 1 step to the right
→|	Moves cursor to end

Remote command:
`TRIGger:ZONE:EXPRession[:DEFine]` on page 1179

7.9.4 History settings

Access: "Menu" > "Trigger" > "Setup" tab > select sequence with zone trigger > "Setup Z trigger" > "History" tab.

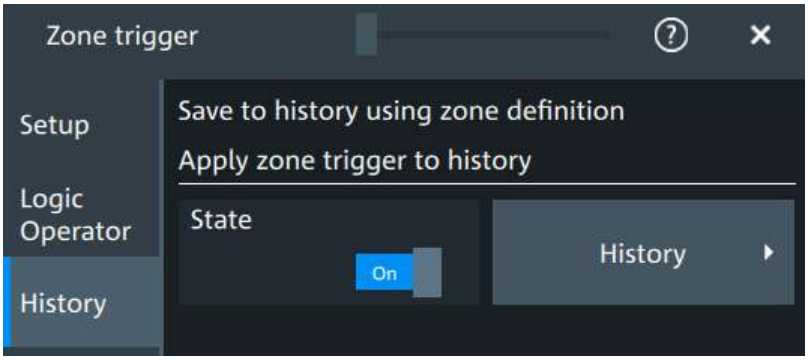

When a zone trigger is defined, the history saves only acquisitions that fulfill the complete trigger condition including the zone trigger condition. On the other hand, you can use the current zone trigger definition to filter the history replay.

Apply zone trigger to history
If enabled, the instrument applies the zone trigger condition to the acquisitions that are stored in the history memory. Tap "History" to open the history player and analyze the filtered waveforms.

Using "Apply zone trigger to history", you can:
- Acquire waveforms with high speed and filter them afterwards in the history.
- Change the zone trigger condition after acquisition.

Remote command:
`TRIGger:ZONE:HISTory` on page 1184

8 Signal configuration

8.1 Reference level setup

Some measurements and analysis tasks require reference levels to obtain the measurement points, e.g. time measurements or timing reference. You can define 8 sets of reference levels. During configuration of the analysis task, you select which set of reference levels is used.

Access: "Menu" > "Apps" > "General" tab > "Signal config" > "Reference level" tab

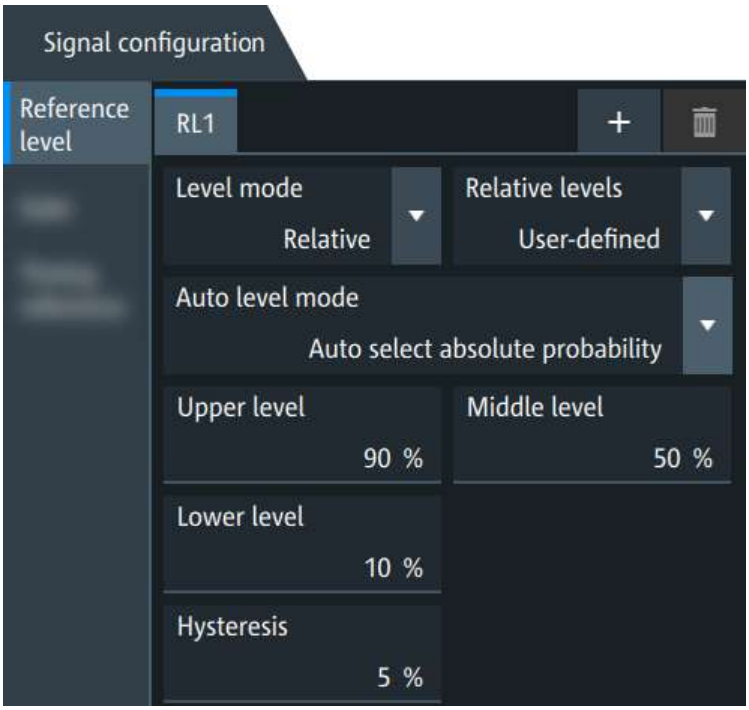

Figure 8-1: Relative reference level settings

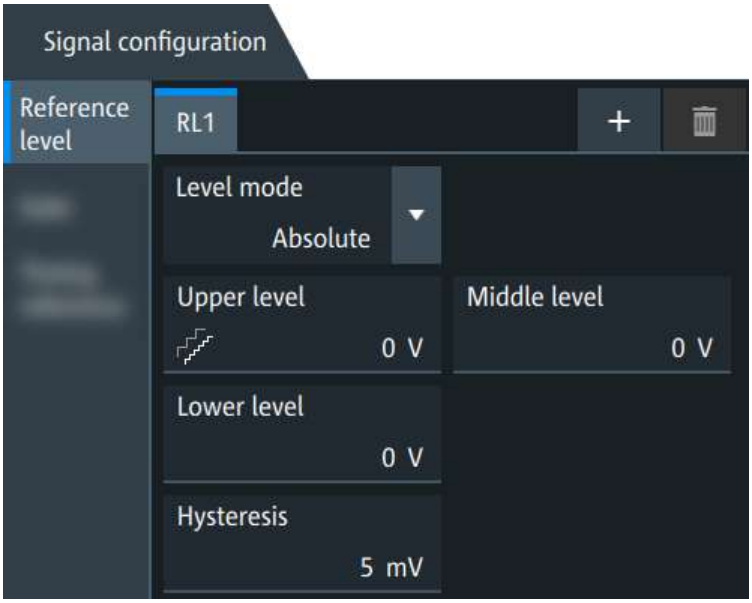

Figure 8-2: Absolute reference level settings

RLx
Select the correct reference level tab before you enter the settings.

You can add up to 8 reference levels.

Remote command:
`REFLevel<rl>:ENABle` on page 1186

Level mode
Defines if the reference level is set in absolute or relative values.

Remote command:
`REFLevel<rl>:LMODe` on page 1186

Absolute Level mode
In the absolute mode, the reference values are set in absolute values with the unit of the vertical axis.

Upper level, Middle level, Lower level ← Absolute Level mode
Set the lower, middle and upper reference signal levels.

Remote command:
`REFLevel<rl>:ABSolute:LLEVel` on page 1187
`REFLevel<rl>:ABSolute:MLEVel` on page 1187
`REFLevel<rl>:ABSolute:ULEVel` on page 1188

Relative Level mode
In the relative mode, the reference values are set as percentages of the signal amplitude.

Auto level mode ← Relative Level mode
Defines the computation method for high and low signal levels. The instrument analyzes and measures the signal, and defines the signal levels using the selected method. The reference levels are then defined on the computed signal levels.

See also: Section 10.2.5, "Histogram measurements", on page 293.

"Auto select absolute probability"	The most suitable signal levels are used.
"Peak probability"	The signal levels with the highest probability values are used. These values are the upper peak value and the lower peak value of the histogram measurement.
"Mean probability"	The signal levels with mean probabilities are used.
"Absolute peak"	The absolute peak signal levels are used. These values are the maximum and minimum signal values of the amplitude measurement.

Remote command:
`REFLevel<rl>:AUTO:MODE` on page 1186

Relative levels ← Relative Level mode
Selects the lower, middle and upper reference levels, defined as percentages of the signal amplitude.

Available relative levels:

- 5/50/95
- 10/50/90
- 20/50/80
- User defined: Enter "Upper level", "Middle level", and "Lower level".

For example, for "5/50/95" the levels are set to the following values:

- Lower level = 5% of the signal amplitude
- Middle level = 50% of the signal amplitude
- Upper level = 95% of the signal amplitude

Remote command:
`REFLevel<rl>:RELative:MODE` on page 1189

Upper level, Middle level,Lower level ← Relative Level mode
Define the reference levels in percent, if "Level mode" is set to "User-defined".

Remote command:
`REFLevel<rl>:RELative:LOWer` on page 1188
`REFLevel<rl>:RELative:MIDDle` on page 1189
`REFLevel<rl>:RELative:UPPer` on page 1189

Hysteresis
Defines a hysteresis for the middle reference level. A rise or fall from the middle reference value that does not exceed the hysteresis is rejected as noise.

Remote command:
`REFLevel<rl>:ABSolute:HYSTeresis` on page 1187
`REFLevel<rl>:RELative:HYSTeresis` on page 1188

8.2 Gate setup

Gate areas limit various measurements to a user-defined range of the waveform.

You can define up to 8 separate gates. You can define absolute or relative limit values, or use an existing zoom, cursor set or spectrum as a gate.

Then, you assign the gates to analysis tasks, for example, to measurements or power analysis.

Access: "Menu" > "Apps" > "General" tab > "Signal config" > "Gate" tab

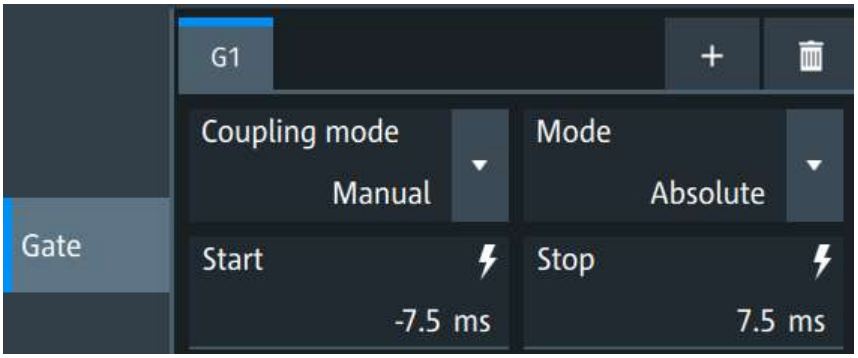

Add
Creates a new gate.

Remote command:
`GATE<g>:ENABle` on page 1191

Coupling mode
The gate coupling mode selects how the gate area is defined.

"Manual"	Manually define the gate with a user-defined start and stop values.
"Cursor"	Cursor coupling is available if a cursor is defined. The gate area is defined by the cursor lines of an active cursor measurement. If several cursor measurements are enabled, select the "Cursor" to be used for gating. The start and stop values of the gate are adjusted to the values of the cursor line positions. The measurement is limited to the part of the waveform between the cursor lines.
"Zoom"	Zoom coupling is available if a zoom is defined. The gate area is defined identically to the zoom area - if you change the zoom, the gate changes as well. If several zoom diagrams are defined, select the "Zoom" diagram to be used for gating. The start and stop values of the gate are adjusted to the values of the zoom positions.
"Spectrum"	Spectrum coupling is available if a spectrum is enabled. If several spectrums are enabled, select the "Spectrum" diagram to be used for gating.

Remote command:
GATE<g>:GCOupling on page 1191
GATE<g>:CURSor on page 1192
GATE<g>:ZDIagram on page 1192

Mode, Start, Stop
Selects if the gate settings are configured using absolute or relative values.

"Absolute" The gate is defined by absolute start and stop values with "Start" and "Stop".

"Relative" The gate's start and stop values are defined by a percentage of the value range with "Relative start" and "Relative stop".

Lightning symbols in the value fields indicate that the gate is not yet assigned to any measurement.

Remote command:
GATE<g>:MODE on page 1192
GATE<g>:ABSolute:STARt on page 1193
GATE<g>:ABSolute:STOP on page 1193
GATE<g>:RELative:STARt on page 1193
GATE<g>:RELative:STOP on page 1193

8.3 Timing reference

The timing reference is the clock that is used for jitter measurements, for example. You can configure up to 4 timing references. The clock can be a captured clock signal, or it can be recovered from the data signal by software CDR.

8.3.1 General settings of the timing reference

Access: "Menu" > "Apps" > "General" tab > "Signal config" > "Timing reference".

Type
Defines the origin of the clock signal - either an existing clock signal or waveform, or a clock generated by clock data recovery (CDR).

"Explicit clock" The clock is an existing clock signal.

"Software CDR" The clock is generated by a software algorithm.

Remote command:
TREFerence<m>:TYPE on page 1201

Reference levels
Selects the set of reference levels that is used for the timing reference measurements.

Remote command:
TREFerence<m>:RFLSet on page 1200

8.3.2 Explicit clock signal

Access: "Menu" > "Apps" > "General" tab > "Signal config" > "Timing reference" > "Type" = "Explicit clock".

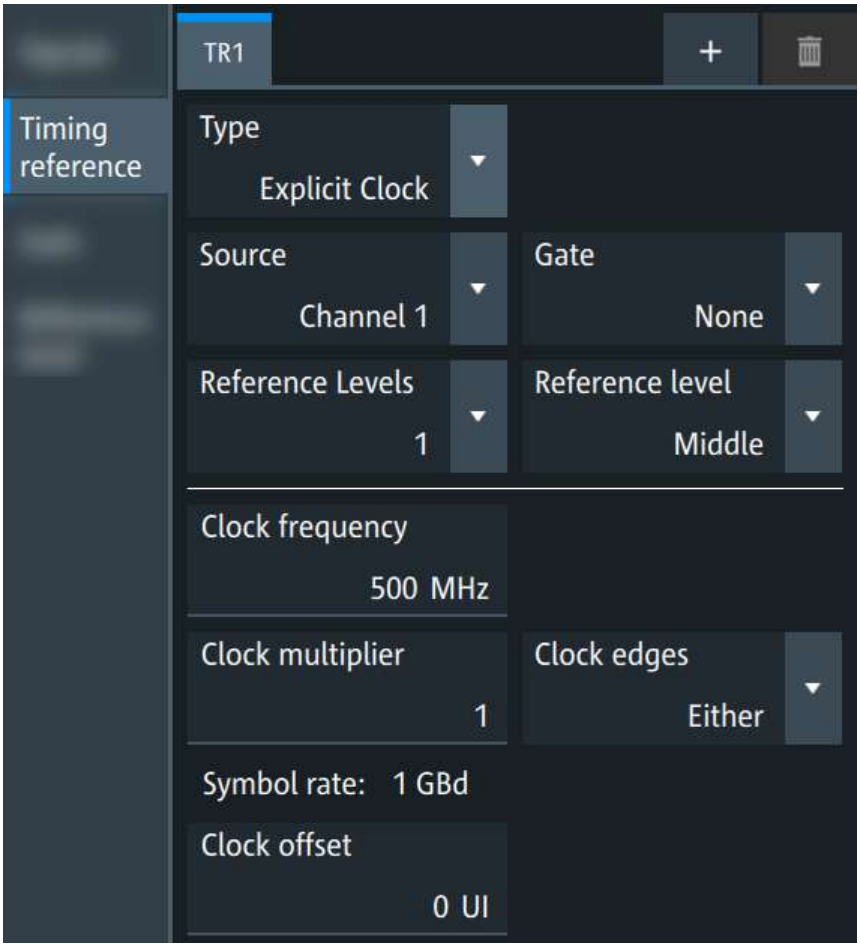

Reference level
Selects the reference level that is used for the timing reference measurement if the clock is an existing clock signal.

Remote command:
`TREFerence<m>:CLK:REFLevel` on page 1198

Source
Selects the clock source if the clock is an existing clock signal.

Remote command:
`TREFerence<m>:SOURce` on page 1200

Clock frequency
Sets the frequency of the clock signal. The setting is relevant if the clock is an explicit clock signal.

Remote command:
TREFerence<m>:CLK:FREQuency on page 1197

Clock multiplier
Sets a value for the clock multiplier, which is the ratio of an internal clock rate to the externally supplied clock. It defines the number of samples per clock interval. The setting is relevant if the clock is an explicit clock signal.

Remote command:
TREFerence<m>:CLK:FACTor on page 1197

Clock edges
Sets the clock edges that are used for measurements. The setting is relevant if the clock is an explicit clock signal.

"Positive" The positive clock slope can be used, for example, for single data rate (SDR) signals with bit start at the positive clock edge.

"Negative" The negative clock slope can be used, for example, for SDR signals with bit start at the negative clock edge.

"Either" Both edges can be used for double data rate (DDR) signals.

Remote command:
TREFerence<m>:EDGE on page 1198

Symbol rate
Shows the symbol rate of the data signal. The setting is relevant if the clock is an explicit clock signal.

SymbolRate = *ClockFrequency* * *Multiplier* * *EdgeCount*, where EdgeCount = 2 for either slope and EdgeCount = 1 for positive and negative slopes.

Remote command:
TREFerence<m>:SYMRate on page 1200

Clock offset
Sets the offset between the clock edge and the data edge in unit intervals. The setting is relevant if the clock is an explicit clock signal.

Remote command:
TREFerence<m>:CLK:OFFSet on page 1198

8.3.3 Clock data recovery by software CDR

Access: "Menu" > "Apps" > "General" tab > "Signal config" > "Timing reference" > "Type" = "Software CDR".

If "Type" is set to "Software CDR", you need to set up the algorithm for the clock data recovery.

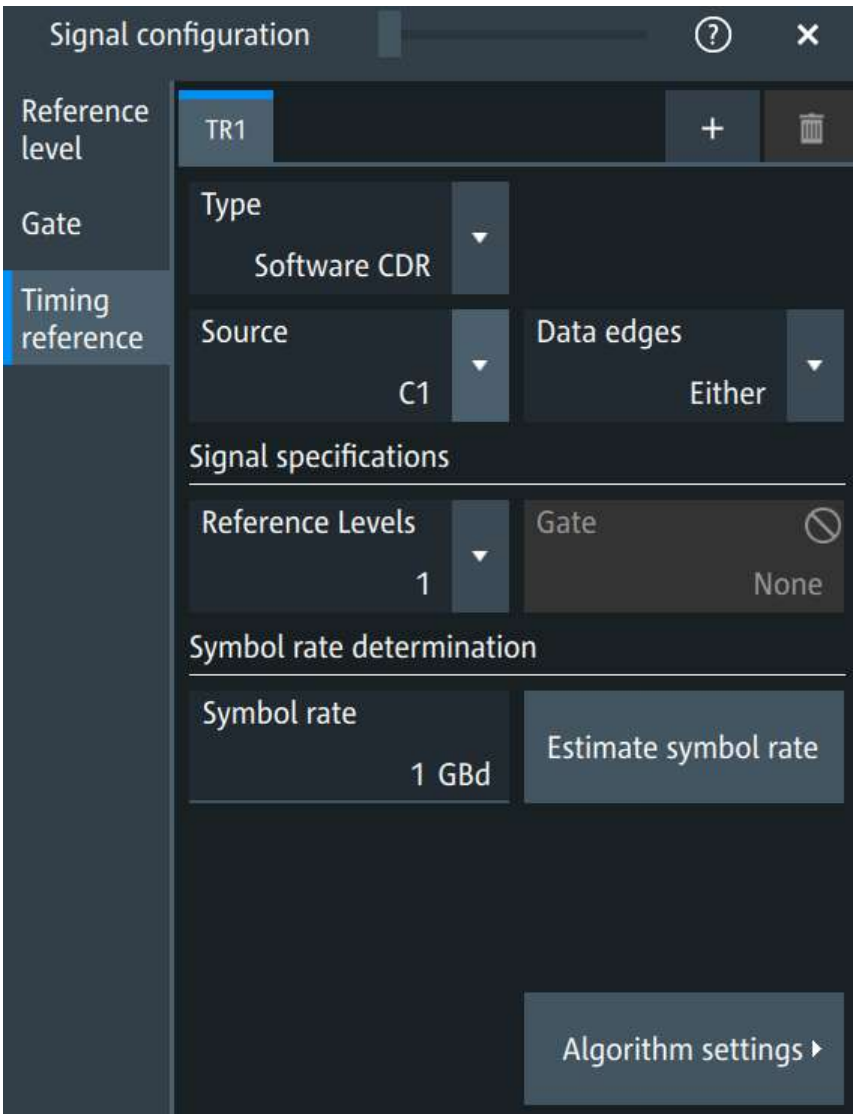

Source
Selects the signal from which the clock is recovered.

Remote command:
`TREFerence<m>:SOURce` on page 1200

Data edges
Selects the edges of the data stream that are used for the clock recovery.

- "Either": Both positive and negative edges are used.
- "Positive" or "Negative": Only one edge direction is used. Use one of these settings if the other edge delivers unreliable results.

Remote command:
`TREFerence<m>:EDGE` on page 1198

Symbol rate
Sets the quiescent frequency of the PLL. It corresponds to the data rate of the data stream from which the clock is to be recovered.

Remote command:
`TREFerence<m>:SYMRate` on page 1200

Estimate symbol rate
Starts a software algorithm to detect the symbol rate for the selected source automatically.

Remote command:
`TREFerence<m>:CDR:SOFTware:SREStimate` on page 1196

Algorithm
Sets the software algorithm that is used for software clock data recovery.

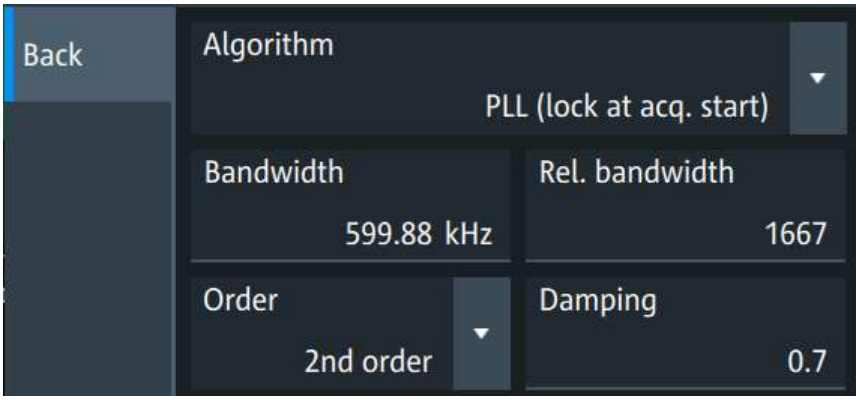

"Constant freq."	CDR uses the nominal symbol rate to generate the clock signal. The method assumes that the frequency of the signal is constant during the complete acquisition.
"PLL"	PLL is the phase-locked loop control system. It can follow slow deviations in the frequency of the data stream. Thus, it acts as a highpass filter regarding the jitter that remains on the signal.
"Feed Forward"	The feed-forward algorithm is a mathematical optimization method used for clock data recovery. It is faster than PLL, i.e., the settling time is shorter. Feed forward is also more precise than PLL.
"PLL (lock at acq. start)"	Phase-locked loop control system, which is locked at the acquisition start.

Remote command:
`TREFerence<m>:CDR:SOFTware:ALGorithm` on page 1194

Clock resync
Enables continuous synchronization of the clock with the data signal. At constant clock frequency without resync, the clock starts at the first detected edge and clocks with the given or estimated bit rate or symbol rate. With synchronization, the clock searches for the next edge and synchronizes to this edge. Thus, the sampling points are not exactly at constant frequency but aligned to the defined edges of the data signal.

Remote command:
TREFerence<m>:CDR:SOFTware:CFRequency:CRSYnc on page 1195

Bandwidth
Sets the PLL bandwidth. It defines the part of the spectrum that the PLL can follow during synchronization. The PLL bandwidth is usually defined by the transmission standard.

Remote command:
TREFerence<m>:CDR:SOFTware:BWIDth on page 1194

Rel. bandwidth
Sets the relative bandwidth, which is the ratio of the nominal bit rate to the PLL bandwidth.

Remote command:
TREFerence<m>:CDR:SOFTware:RELBwidth on page 1196

Order
Sets the order of the PLL: first or second order. PLL of higher order can compensate for more complex jitter behavior.

Remote command:
TREFerence<m>:CDR:SOFTware:PLL:ORDer on page 1195

Damping
Sets the damping factor, which is only relevant for second order PLL.

Remote command:
TREFerence<m>:CDR:SOFTware:PLL:DAMPing on page 1195

Initial phase sync
Available for "Algorithm" = "PLL".

Defines the phase reference for the first clock edge.

"First data edge"	The first clock edge matches the first edge of the data signal.
"First sample"	The first clock edge matches the first sample of the waveform at the left border of the display.

Remote command:
TREFerence<m>:CDR:SOFTware:PLL:SYNC on page 1196

Selected results
Available for "Algorithm" = "PLL".

The PLL requires some time to synchronize to the phase of the data stream. You can select when the CDR algorithm returns clock edges:

"All"	All clock edges are used.
"After initial sync."	The clock edges of the synchronization time are discarded; results are gathered after initial synchronization of the CDR. Thus, meaningful TIE measurement results can be obtained.

Remote command:
`TREFerence<m>:CDR:SOFTware:SELResults` on page 1197

9 Waveform analysis

This chapter describes general methods to check and analyze waveforms. These are:

- Zoom....226
- Mathematics....230
- History....243
- Reference waveforms....249
- Waveform histograms....258

9.1 Zoom

The zoom magnifies a part of the waveform to view more details. The zoom is applied to all waveforms that are visible in a diagram.

For each diagram, you can define one zoom area.

- You can define the zoom by drawing, moving and adjusting the zoom area on the touchscreen.
- You can precisely define the size of the zoom area by entering start and stop values in a dialog box.

Zoomed waveforms are shown in separate zoom diagrams, in addition to the waveform diagrams. On the original waveform diagram, a rectangle indicates the zoomed section of the waveform - this is the zoom area. You can modify the zoom area by moving the rectangle as a whole, and by moving its edges. To toggle between these modes, tap the zoom area. You can also set exact positions.

Zoom areas can be used for gating, for example, to define a measurement gate. You can set the gate exactly to the limits of the zoom.

9.1.1 Zoom settings

Access: "Menu" > "Horizontal" > "Zoom" tab.

The "Zoom" tab allows you to specify start and stop values for the x- and y-axes. The acquired data within these ranges is zoomed.

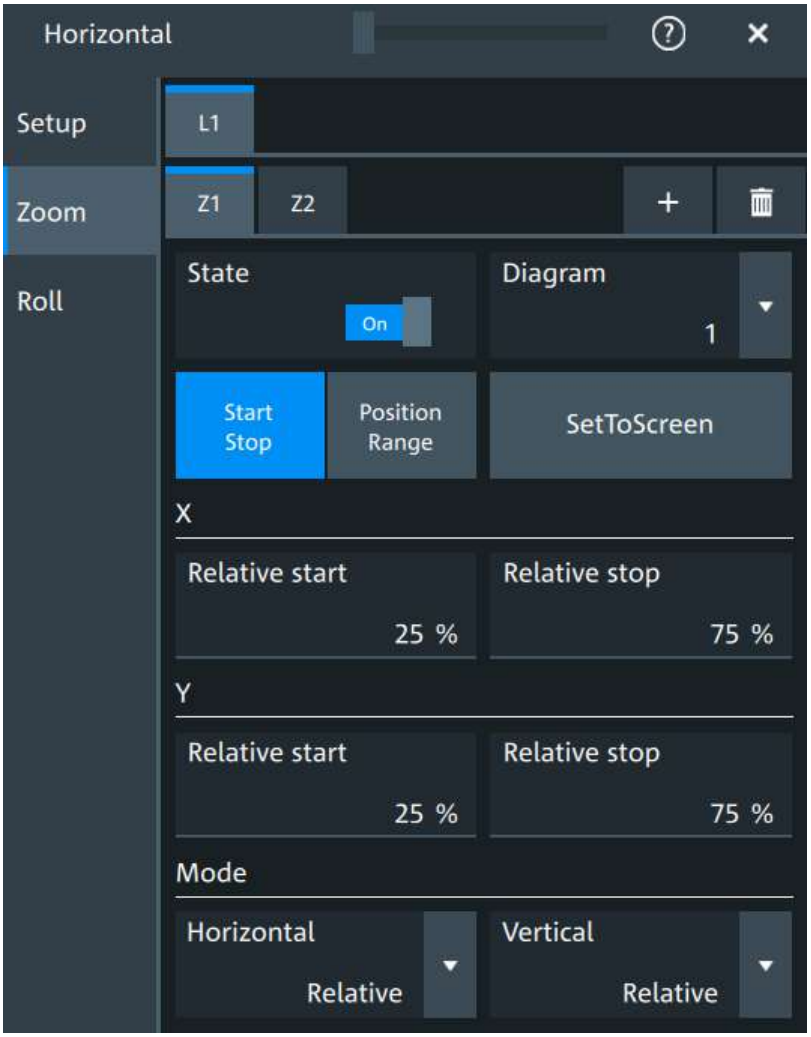

Tabx
Selects one of the enabled SmartGrid layouts.

Zx
Selects the zoom window. You can add up to 8 different zooms.

State
Enables the zoom.

Remote command:
`LAYout<ly>:ZOOM<zo>[:ENABle]` on page 1202

Diagram
Indicates which of the waveform diagrams is selected for zooming. The number is displayed on the screen in the middle of each diagram.

Remote command:
`LAYout<ly>:ZOOM<zo>:SOURce` on page 1207

Start Stop, Position range
Selects how the window for the zoom diagram is defined. You can select between defining "Start Stop" values or "Position range".

Start Stop
The "Start Stop" tab allows you to specify start and stop values for the x- and y-axes. The acquired data within these ranges is zoomed.

According to the selected "Mode", absolute or relative values are used.

"Start", "Relative start"
Defines the lower limit of the zoom area on the axis.

"Stop", "Relative stop"
Defines the upper limit of the zoom area on the axis.

Remote command:
`LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:STARt` on page 1204
`LAYout<ly>:ZOOM<zo>:HORizontal:RELative:STARt` on page 1206
`LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:STOP` on page 1204
`LAYout<ly>:ZOOM<zo>:HORizontal:RELative:STOP` on page 1206
`LAYout<ly>:ZOOM<zo>:VERTical:RELative:STARt` on page 1209
`LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:STARt` on page 1208
`LAYout<ly>:ZOOM<zo>:VERTical:RELative:STOP` on page 1210
`LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:STOP` on page 1208

Position range
If "Position range" is selected, you specify the x and y position of center point of the zoom area plus a range for the x- and y-axes. The area defined by that point and the ranges is zoomed. You can set absolute values or relative values (in percent of the screen, depending on the "Mode" selection.

"Range" Defines the width or height of the zoom area.

"Position" Defines the x or y value of the centerpoint of the zoom area.

Remote command:
`LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:POSition` on page 1203
`LAYout<ly>:ZOOM<zo>:HORizontal:RELative:POSition` on page 1205
`LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:SPAN` on page 1204
`LAYout<ly>:ZOOM<zo>:HORizontal:RELative:SPAN` on page 1206
`LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:POSition` on page 1207
`LAYout<ly>:ZOOM<zo>:VERTical:RELative:POSition` on page 1209
`LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:SPAN` on page 1208
`LAYout<ly>:ZOOM<zo>:VERTical:RELative:SPAN` on page 1210

Set to screen
Sets the zoom area to the whole screen.

Remote command:
`LAYout<ly>:ZOOM<zo>:SSCReen` on page 1211

Mode
Defines if absolute or relative values are used to specify the "Horizontal" (x-axis) and the "Vertical" (y-axis) values.

Remote command:
`LAYout<ly>:ZOOM<zo>:HORizontal:MODE` on page 1205
`LAYout<ly>:ZOOM<zo>:VERTical:MODE` on page 1209

9.1.2 Zooming for details

To define the zoom area on the touchscreen

For graphical zooming, you use your finger on the screen.

1. On the toolbar, tap the "Add zoom" icon.

   The zoom overlay menu opens.

2. Draw a rectangle in the diagram that defines the zoomed area.
   While you drag your finger on the screen, a dotted rectangle indicates the current zoom area.

   The indicated area is magnified in a new zoom diagram. The original diagram shows the zoom area as a rectangle.

3. If the position of the zoom area is not correct, drag the rectangle in the overview to the correct position.

4. If the size of the zoom area is not yet ideal, tap the rectangle in the overview diagram.
   Now, 4 white lines indicate the edges of the zoom area. A dashed white line indicates the selected edge, which you can adjust.

5. Touch the edge that you want to move. Drag it to the required position.

To create a zoom using the zoom dialog box

► If you want to create a new, unconfigured zoom, tap the "Add" icon.

To define the zoom area numerically using start/stop values

1. Open "Menu" > "Horizontal".
2. In the "Zoom" tab, select "Start Stop".

3. Select a value for "Mode" > "Horizontal" to define "Absolute" or "Relative" x-axis values. Relative values cause the zoom area to adapt to the input values dynamically.
4. For "X", define the "Relative start" and "Relative stop" values. They define the lower and upper borders of the zoom area on the x-axis.
5. Select the "Mode" > "Vertical" to define "Absolute" or "Relative" y-axis values.
6. For "Y", define the "Relative start" and "Relative stop" values. They define the lower and upper borders of the zoom area on the y-axis.

   When you close the dialog box, the specified area is magnified in a new zoom diagram. The original diagram is displayed with the zoom area indicated as a rectangle.

To define the zoom area numerically using position and range values

1. Open "Menu" > "Horizontal".
2. In the "Zoom" tab, select "Position range".
3. Select "Mode" > "Horizontal" to define "Absolute" or "Relative" x-axis values. Relative values cause the zoom area to adapt to the input values dynamically.
4. Under "X" > "Position", define the x-value of the center point of the zoom area.
5. Under "X" > "Range", define the width of the zoom area.
6. Select the "Mode" > "Vertical" to define "Absolute" or "Relative" y-axis values.
7. Under "Y" >"Position", define the y-value of the center point of the zoom area.
8. Under "Y" > "Range", define the height of the zoom area.

   When you close the dialog box, the specified area is magnified in a new zoom diagram. The original diagram is displayed with the zoom area indicated as a rectangle.

9.2 Mathematics

Math waveforms are calculated waveforms. You can define up to 8 math waveforms and display them on the screen, and use it as source for further analysis.

It is calculated out of one or two analog channels, or another math waveform using several predefined operations. You can define up to 5 equations. The complete configuration is called equation set and can be saved for later use.

Activating math waveforms reduces the available memory.

You can analyze math waveforms in the same way as channel waveforms: use zoom, perform automatic and cursor measurements, and save as reference waveform.

You can store a math waveform as a reference waveform and restore it later. See Section 9.4, "Reference waveforms", on page 249.

9.2.1 Creating math waveforms

Math waveforms are created and displayed in addition to the channel and other waveforms. They can also be used for analysis, e.g. measurements, even if the math waveform is not active.

1. Open "Menu" > "Math" > "Setup".
   Alternatively, press the [Math] key.
2. Define the mathematic operation with one of the following methods:
   - Use basic operations in "Operator" subtab.
   - Define a filtered waveform in the "Filter" subtab.
   - Create a mathematic equation in the formula editor on the "Equation" subtab.
3. Enable "State".

   The math waveform is displayed on the screen. A green dot in the math waveform tab indicates that the waveform is active.

4. To change the vertical scaling of the math waveform, open the "Scale" tab.
5. Set the "Scale mode" to "Manual".
6. Enter the "Vertical scale" factor (per division). If necessary, add a "Vertical offset". Default is the automatic scaling.
7. Close the "Math" dialog box.

9.2.2 General math waveforms settings

Access: "Menu" > "Math" > "Setup" tab

You can define up to 8 different math waveforms. Each waveform is defined in a separate tab in the "Math" dialog.

You can find a summary of the state and operations of all math waveforms in the "All" tab.

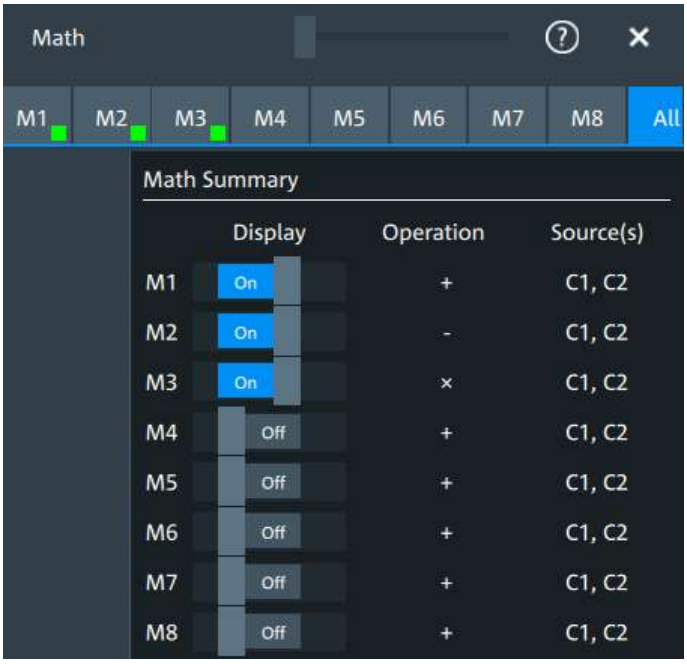

This section describes the general settings in the "Setup" tab. The subtabs for the definition of the mathematic operation are explained separately:

- Section 9.2.3, "Operator settings", on page 233
- Section 9.2.4, "Filter settings", on page 234
- Section 9.2.5, "Equations", on page 236

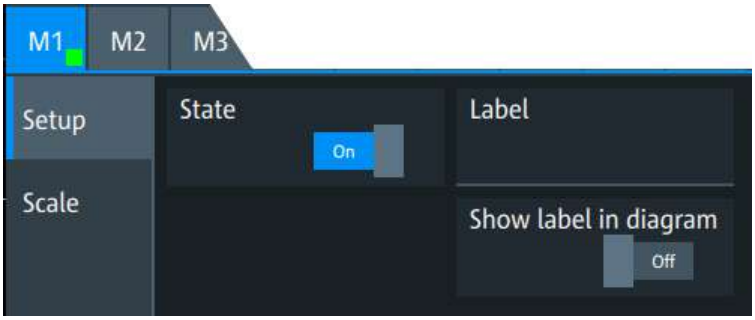

State
Activates the selected Math channel and displays the defined math waveforms.

Remote command:
`CALCulate:MATH<m>:STATe` on page 1211

Label
Defines a label for the selected math waveform.

Remote command:
`CALCulate:MATH<m>:LABel` on page 1213

Show label in diagram
Displays a waveform label at the waveform in the diagram, with the content defined in "Settings" > "Appearance" > "Grid". See Section 5.3.2, "Grid", on page 103 for details on the content settings.

9.2.3 Operator settings

Access: "Menu" > "Math" > "Setup" tab > "Operator".

To create simple math waveforms, use the settings in the "Operator" subtab. It provides common math functions.

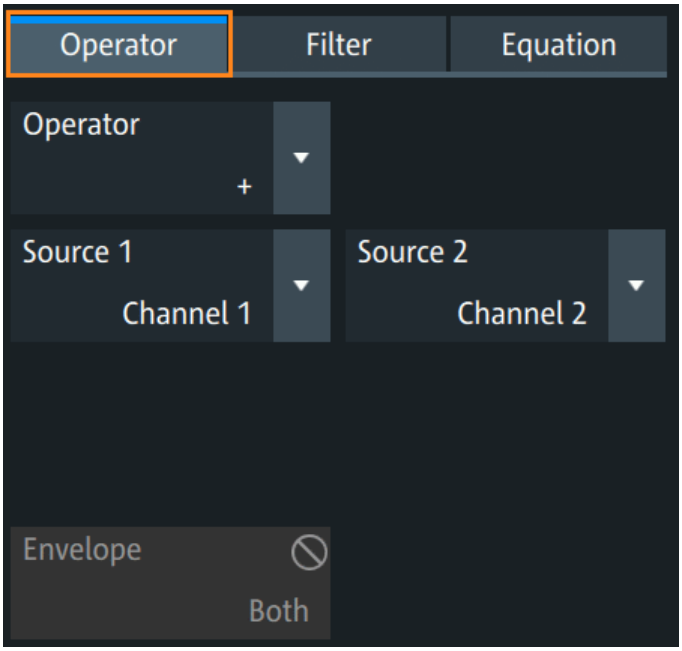

Operator
Defines the type of operation to be performed on the selected signal sources.

The following functions are available:

"+"	Adds the values of 2 sources (channel or math waveform).
"-"	Subtracts source 2 from source 1.
"x"	Multiplies the two sources.
"/"	Divides source 1 by source 2.
"1/x"	Calculates the reciprocal of the source.
"- x"	Calculates the negative value of the source.
"|x|"	Determines the absolute value of the source.
"Δx/Δt"	Differentiates the source value relating to the time value. Not possible on envelope waveforms and waveforms with "Peak detect" decimation.
"Integral"	Calculates the definite integral of the source.

"log(x)"	Calculates the logarithm of the source value based on 10.
"ln(x)"	Calculates the natural logarithm of the source value (based on e).
"ld(x)"	Calculates the binary logarithm of the source value (binary logarithm, based on 2).
"x^2"	Squares the source. If the source contains negative values that have been clipped, then the result contains positive clipping.
"√x"	Calculates the square root of the source. Note that the square root of a negative number is undefined and the result is clipped.
"Rescale"	Rescaling of x.

Remote command:
`CALCulate:MATH<m>[:EXPRession][:DEFine]` on page 1211

Source 1, Source 2
Defines the signal source to be evaluated by the math function.

a, b
Define the values for the rescale function, if "Operator" = "Rescale"

"a"	Multiplication factor
"b"	Offset of the signal source on the y-axis.

Noise reject
Only available for "Operator" = "Δx/Δt".

Sets the number of neighboring samples that are skipped for differentiation.

To suppress noise effects during differentiation, it can be useful not to consider two directly neighboring points to calculate *dx* (x_n-x_{n-1}). Instead, some samples in-between are skipped and a point a few samples further is used (e.g. x_n-x_{n-3}).

Envelope wfm selection
Selects the upper or lower part of the input waveform for mathematic calculation, or a combination of both.

Remote command:
`CALCulate:MATH<m>:ENVSelection` on page 1214

9.2.4 Filter settings

Access: "Menu" > "Math" > "Setup" > "Filter" tab

The finite impulse response filter is a filter to create filtered math waveforms with lowpass, highpass, or bandpass. The filter requires additional settings.

You can set up the filter in the "Filter" tab, or enter the filter formula in the formula editor. The editor provides more filters than the "Filter" tab. For details, see Table 9-3.

You can also define the filter coefficients in a CSV file and use the file for filtering. See "Bandpass and bandstop FIR filter with CSV file" on page 235.

In remote control, filter settings are defined in the expression string, see `CALCulate:MATH<m>[:EXPRession][:DEFine]` on page 1211.

Bandpass and bandstop FIR filter with CSV file

To define a bandpass or bandstop, you need a CSV file that contains the comma-separated filter coefficients in one row. The maximum number of filter coefficients is 100 000 taps. No other parameters are allowed in the file.

To create the CSV file, we recommend using the MATLAB Filter Design & Analysis tool. In the tool, enter the filter type, filter order and filter frequencies. Alternatively, you can create the filter and the CSV file with Python.

Make sure to set the sample frequency in MATLAB or Python and the sample rate at the oscilloscope to the same value. If the values differ, the filter is shifted in frequency.

On the MXO 5, select "Menu" > "Math" > "Setup" > "Filter", the filter "Type" = "User defined", and load the CSV file.

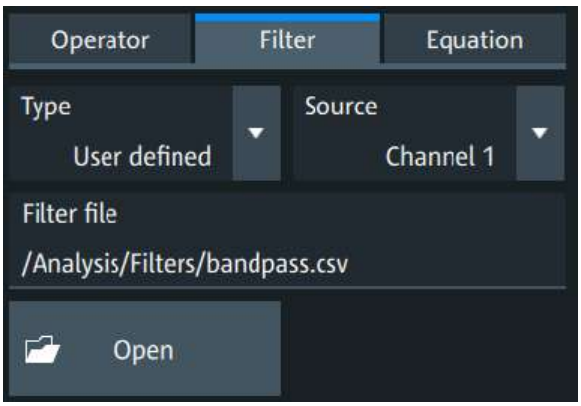

All settings on the "Filter" tab are explained below. You can also enter the appropriate function in the formula editor, see Table 9-3.

Type
Selects if the filter is a highpass, lowpass, or user-defined filter (bandpass/bandstop filter defined in a CSV file).

Source 1
Selects the input channel of the signal.

Cut-off
Sets the limit frequency for the filter.

Cutoff frequency for lowpass filter

The cutoff frequency depends on the horizontal resolution and the filter characteristics. The cutoff frequency range for the lowpass filter is:

$f_c = (0.01 ... 0.2) * f_a$ for Gaussian FIR filter

$f_c = (0,01 ... 0.4) * f_a$ for rectangular FIR filter

Cutoff frequency for highpass filter

The highpass filter is always rectangular. The cutoff frequency range for the highpass filter is:

$f_c = (0,01 ... 0.4) * f_a$

Where: f_c = cutoff frequency to be set for the lowpass filter, and f_a = reciprocal of the resolution, or sample rate of the postprocessing system (including, for example, interpolation).

Characteristics
Selects if a Gaussian or a rectangular shape is used for the lowpass filter. The high-pass filter always uses a rectangular shape.

Filter file, Open
If the "User defined" filter type is selected, choose the file with the filter coefficients. Select "Filter file" to type the path and filename, or tap "Open" to select the file in the file browser.

For information on filter files, see "Bandpass and bandstop FIR filter with CSV file" on page 235.

9.2.5 Equations

In the "Equation" tab, you can enter complex formulas to define a math waveform. The formula editor helps to enter formulas easily with correct syntax, using a large selection of operators and signal sources.

1. In the "Math" dialog, open the "Equation" tab.
2. Double-tap on "Math formula" to display the formula editor.

9.2.5.1 Math formula editor

Using the formula editor you can define math functions freely, using a selection of operators and signal sources.

9-1 shows an overview of the math formula dialog and its different sections. The separate functions are described below.

For a procedure to create equations, see Section 9.2.5.2, "Defining a formula in the formula editor", on page 241.

Figure 9-1: Math formula editor overview

1 = Math expression
2 = Numeric
3 = Unit
4 = Source
5 = Filters
6 = Algebra
7 = Math punctuation
8 = "Enter": press to complete the equation entry . The button is grayed out if the expression is not valid.
9 = Information display: additional information about the selected function is displayed.
10 = Cursor keys

Math expression

Use the various buttons of the editor to assemble the equation. If you know the exact syntax, you can also type the equation. You can see immediately whether the input is complete and correct.

We recommend connecting a keyboard to type the equations.

Figure 9-2: Math expression line

1 = Indicates the math waveform that is configured, e.g "Math 1" = "M1"
2 = Math expression input field
3 = Displays the status of the current expression: valid or not
4 = Displays a list of the last 20 used expressions

Buttons of the formula editor and their usage

Table 9-1: Source

Unit	Description
Analog channels	All analog channel waveforms of the device
Other math waveforms	All math waveforms of the device
Track channels	All track waveforms of a device
Reference	All reference waveforms of the device for which the source of reference is an analog channel (e.g. R3)

Table 9-2: Unit

Unit	Description
A	Ampere: the unit for electrical current.
V	Volt: the unit for electrical difference of potential
W	Watt: the unit for power. It is used to quantify the rate of energy transfer.
Ohm	Ohm: the unit for electrical resistance
Siemens	Siemens: the unit for electrical conductance
S	Second: the unit for time
Hz	Hertz: the unit for frequency, the number of occurrences of a repeating event per second.
dBm	dBm: the unit for power level. dBm is expressed in decibels (dB) with reference to 1 milliwatt (mW).
dB	dB: the unit for power gain, expressed in the base-10 logarithm of the ratio between two power levels.
dBµV	dBµV: the unit for voltage level. dBµV is expressed in decibels (dB) relative to 1µV across 50Ω resistance.
dBV	dBV: the unit for voltage level. dBV is expressed in decibels (dB) relative to 1V across 50Ω resistance
Degree	Degree: the unit for an angle. A degree is a measure of angle equal to 1/360 of a full rotation.
rad	Radian: the unit for an angle. 2π radians make up a full rotation.

If you type the unit, put it in square brackets, for example *C1[A]*C3[V]*. Additional parenthesizes are required if you want to assign the unit to the result of the equation, for example *(C1*C3)[W]*

Table 9-3: Filters

Value	Usage/Comment *FormulaEditor expression*
FIR highpass	*FIR(highpass,source,limit,shape)*: source = input channel of the signal, limit = cutoff frequency shape = rectangle for the highpass filter **Example:** *FIR(highpass,C2,3e+09,rectangle)* Sets a rectangle highpass filter on Channel 2 with a 3 GHz cutoff frequency
FIR lowpass	*FIR(lowpass,source,limit,shape)* source = input channel of the signal limit = cutoff frequency shape = Gaussian or rectangle for the lowpass filter **Example:** *FIR(lowpass,C1,1e+07,gaussian)* Sets a Gaussian lowpass filter on Channel 1 with a 10 MHz cutoff frequency
FIR user defined	*FIR(userdef,source,path)* source = input channel of the signal path = string containing the path and filename of the filter file. The file contains the comma-separated filter coefficients. **Example:** *FIR(userdef,Ch1,"/run/media/usb/<MyDriveName>//bandpass.csv")* Sets a bandpass on channel 1 with filter coefficients saved in the `bandpass.csv` file.
IIR lowpass	*IIR(lowpass,source,limit,shape,order)* source = input channel of the signal limit = cutoff frequency shape = Bessel or Butterworth filter order = feedback filter order, 1 or 2 **Example:** *IIR(lowpass,C1,100000,bessel,1)* Sets a Bessel lowpass filter of first order on channel 1 with 100 kHz cutoff frequency.

Table 9-4: Numeric

Icon	Description	Usage/Comment *FormulaEditor expression*
0...9	Numeric characters	
 Backspace	Erases the character before the cursor	
Clr	Clear expression in editor	Restart editing
e	Math. constants, Euler number	Euler number: 2.7182...
π	Math. constants, Pi	Pi: 3.14159...

Icon	Description	Usage/Comment *FormulaEditor expression*
.	Decimal point	
±	Changes the sign of the equation	

Table 9-5: Algebra

Icon	Description	Usage/Comment *FormulaEditor expression*
+	Addition	
-	Subtraction	
*	Multiplication	
/	Division	
a^b	Exponentiation with base a	a: base, b: exponent *a^b*
|x|	Absolute x value	*abs(x)*
√x	Square root of x	*sqrt(x)*
x^2	x*x	*pow(x)*
1/x	Reciprocal of x	*1/(x)*
d/dx	Derivation of x	*Derivation(x,y)* With x = waveform and y = number of skipped samples (noise reject)
∫xdx	Integral of x	*integral(x)*
ax+b	Scaling of x	*Rescale(x,a,b)* With x = waveform, a= gain factor, and b= constant
$\log_{10}$	Decimal logarithm (base 10)	*log(x)*
$\log_e$	Natural logarithm (base e)	*ln(x)*
$\log_2$	Binary logarithm (base 2)	*ld(x)*

Table 9-6: Math punctuation

Icon	Description	Usage/Comment *FormulaEditor expression*
(	Left bracket	Enclose operands
)	Right bracket	Enclose operands
,	Comma	Separates operands
[	Left square bracket	Enclose unit
]	Right square bracket	Enclose unit

Table 9-7: Cursor keys

Icon	Description
|←	Moves cursor to beginning
←	Moves cursor 1 step to the left
→	Moves cursor 1 step to the right
→|	Moves cursor to end

9.2.5.2 Defining a formula in the formula editor

1. Open the "Menu" > "Math" dialog.
2. Select the "Equation" tab.
3. Double-tap the editing area.

   The "Formula Editor" is displayed.
4. Enter the math formula including all required signal sources and operators by selecting the corresponding keys in the editor. For details on the available keys, see Section 9.2.5.1, "Math formula editor", on page 236.
5. To perform a rescaling function, proceed as follows:
   a) Select the rescaling function using the "ax+b" key.
   b) Behind the left bracket, insert the signal source using one of the following keys:
      - "Cx" for a channel
      - "Mx" for a math function
      - "Rx" for a reference waveform
   c) After the first comma, insert the "a" value, i.e. the scaling factor, using the number keys.
   d) After the second comma, insert the "b" value, i.e. the scaling offset, using the number keys.

   The resulting expression could be, for example: `rescale(C1,3,4)`
6. To insert a unit, press "Unit". Select a value from the list.

   If you type the unit, put it in square brackets, for example *C1[A]*C3[V]*. Additional parenthesizes are required if you want to assign the unit to the result of the equation, for example *(C1*C3)[W]*

9.2.6 Scale settings for math waveforms

Access:"Menu" > "Math" > "Scale" tab

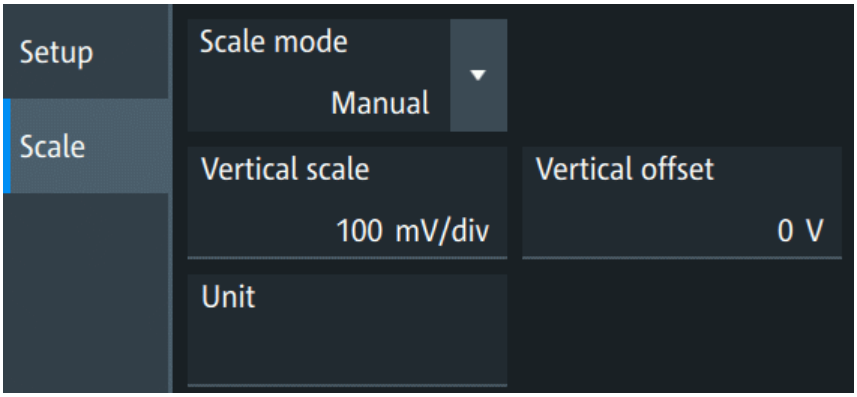

Scale mode
By default, the vertical scale is adapted to the current measurement results automatically to provide an optimal display. However, if necessary, you can define scaling values manually to suit your requirements.

"Manual" Enter the required values for "Vertical scale" and "Vertical offset".

"Auto" "Vertical scale" and "Vertical offset" are read-only.

Remote command:
`CALCulate:MATH<m>:VERTical:SCALe:MODE` on page 1214

Vertical scale
Sets the scale of the y-axis in the math function diagram. The value is defined as "<unit> per division", e.g. *50 mV/div*. In this case, the horizontal grid lines are displayed in intervals of 50 mV.

If Scale mode is set to "Auto", this setting is read-only.

Remote command:
`CALCulate:MATH<m>:VERTical:SCALe[:VALue]` on page 1213

Vertical offset
Sets a voltage offset to adjust the vertical position of the math function on the screen. Negative values move the waveform up, positive values move it down.

If Scale mode is set to "Auto", this setting is read-only.

Remote command:
`CALCulate:MATH<m>:VERTical:OFFSet` on page 1214

Unit
Sets a user-defined unit for the math operation.

Remote command:
`CALCulate:MATH<m>:UNIT` on page 1213

9.3 History

The history accesses the data of previous acquisitions and provides them for further analysis.

9.3.1 About history

If a continuous acquisition runs, the captured data is stored in the sample memory and the current acquisition is processed and shown on the display. After the acquisition is stopped, the history accesses the captured samples that were stored, displays these samples as history waveforms, and makes them available for further analysis. It considers all channels that were enabled during the running acquisition.

When a new single acquisition is started, the memory is cleared and written anew. In continuous acquisition, stopping and starting the acquisition does not clear the memory, and the history memory is continued. When the memory is full, new acquisitions are stored, and the oldest are removed (first in, first out). The history memory is cleared when the acquisition parameters are changed. To clear the history memory on demand, use the "Clear" tool on the toolbar.

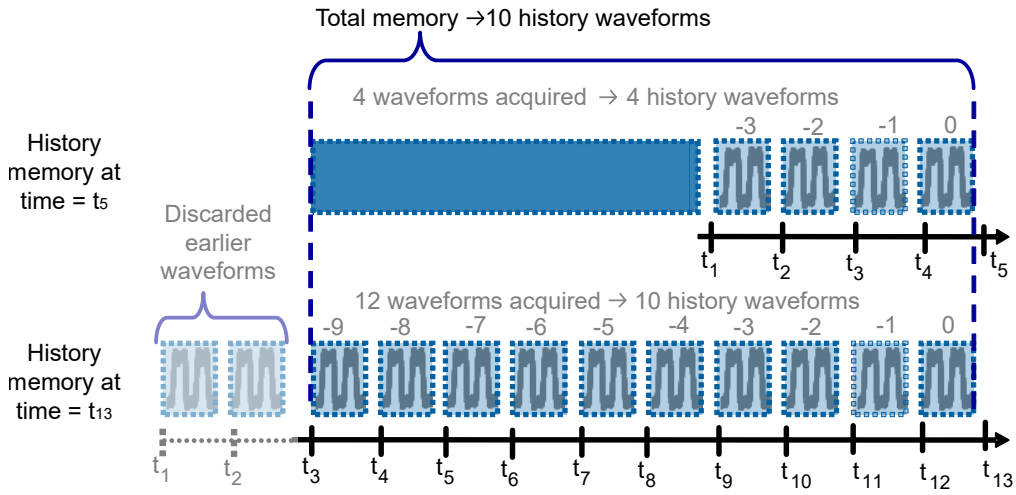

Figure 9-3: History memory. In this example, the memory can store 10 waveforms.

The number of stored history waveforms depends on the memory size, the number of enabled channels, and the record length. The shorter the record length, the less the number of channels, and the larger the memory, the more history waveforms are saved.

You can work with history waveforms in the same way as with the waveform of the latest acquisition: use zoom, cursors, measurements, create math waveforms and so on. You can also save a single history waveform for further analysis.

9.3.2 History setup

The "History" dialog contains the complete functionality on history viewing and information.

The most important information and functions are also provided in the quick-access history dialog box.

In the R&S ScopeStudio software, acquisition settings and functions that need an acquisition take effect if the channel source is a simulated waveform, created by the generator. If the channel source is loaded from a file, the acquisition-related settings can be imported with the data from the oscilloscope, either as a saveset, or included in a session. Changing imported acquisition-related settings has no effect.

Access: "Menu" > "Acquisition" > "History" tab.

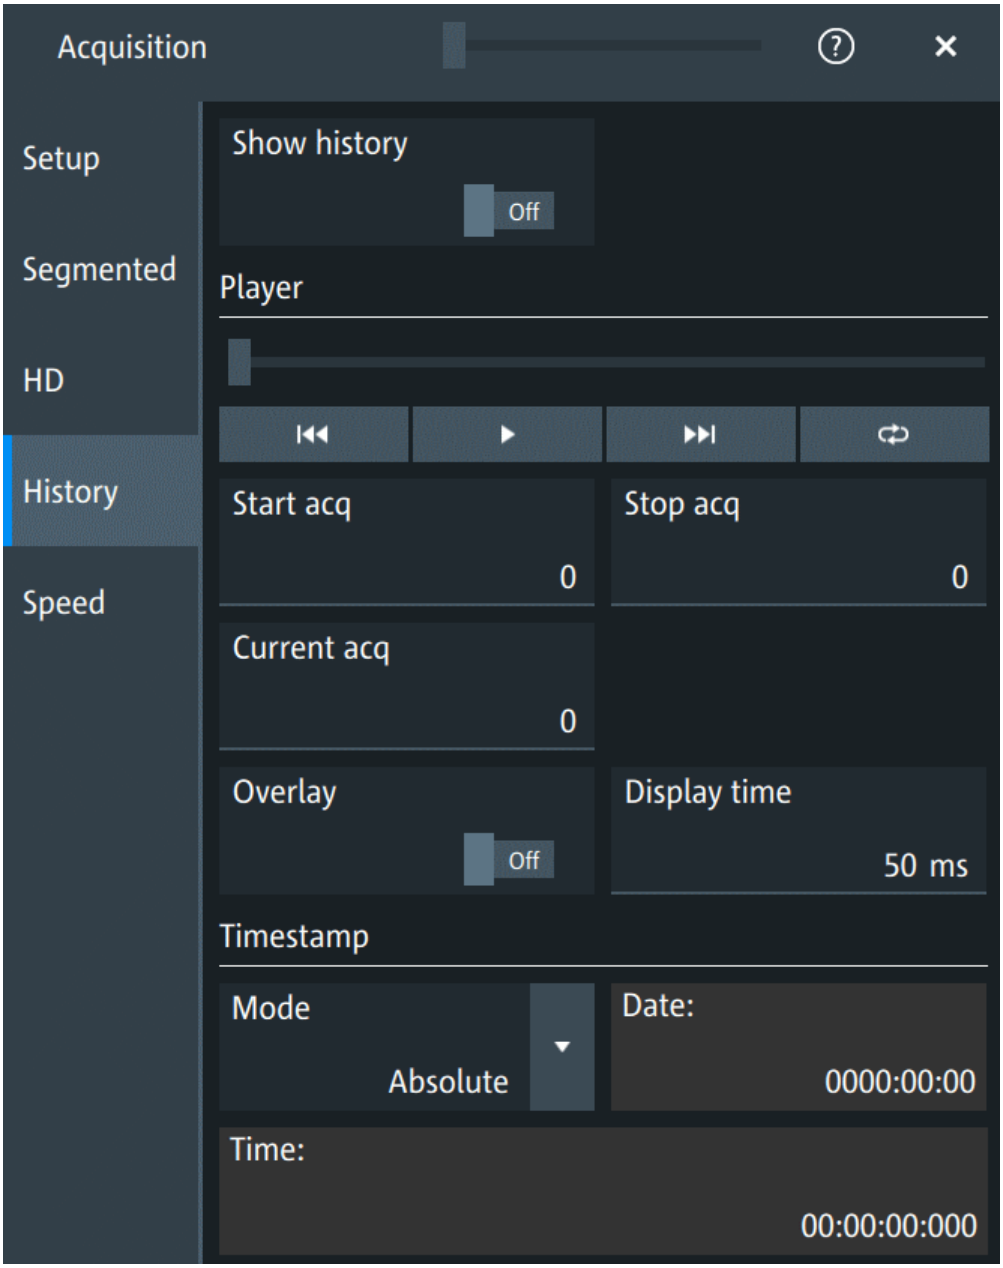

Show history....245
Player....246
Start acq....246
Stop acq....246
Current acq....246
Overlay....246
Display time....246
Time stamp....247

Show history

Enables the history mode and allows you to save history waveforms to file.

The history display is enabled automatically when you press the [History] button.

To disable the history, you can also close the quick-access "History" dialog box.

Remote command:
ACQuire:HISTory[:STATe] on page 1218

Player
The player can be used to control the playback of the history waveforms.

Sets the oldest acquisition in the sample memory as "Start acq" and "Current acq".

Starts and stops the replay of the history waveforms from "Start acq" to "Stop acq".

Sets the newest acquisition in the sample memory as "Stop acq" and "Current acq". This acquisition always has the index "0".

"Auto repeat": If selected, the playback of the selected history segments repeats automatically. See also: "Auto repeat" on page 248.

Remote command:
ACQuire:HISTory:PLAY on page 1215

Start acq
Sets the index of the first (oldest) acquisition to be displayed or exported. The index is always negative.

Remote command:
ACQuire:HISTory:STARt on page 1216

Stop acq
Sets the index of the last (newest) acquisition to be displayed or exported. The newest acquisition of the complete acquisition series always has the index "0".

Remote command:
ACQuire:HISTory:STOP on page 1216

Current acq
Accesses a particular acquisition in the memory to display it, or to save it. The newest acquisition always has the index "0". Older acquisitions have a negative index.

If a history replay is running, the field shows the number of the currently shown acquisition.

Remote command:
ACQuire:HISTory:CURRent on page 1215

Overlay
Displays the segments with infinite persistence. Thus, you can see all data points of all displayed segments of a player cycle.

It is the same setting as "Infinite persistence" on page 109.

Display time
Sets the display time for one acquisition. The shorter the time, the faster the replay is.

The setting takes effect for usual history replay and the display of a fast segmentation series via the history.

Remote command:
ACQuire:HISTory:TPACq on page 1216

Time stamp
The time stamp shows the time of the currently displayed history acquisition. Thus, the time relation between acquisitions is always available.

The time stamp "Mode" can be absolute or relative:

- In "Absolute" mode, the instrument shows the date and the daytime of the current acquisition.
- In "Relative" mode, the time difference to the newest acquisition (index = 0) is shown.

During history replay, the time value is displayed and updated if the replay speed ("Display time") is slow enough, that is 40 ms or slower.

The quick-access history dialog box always shows the time according to the "Mode" that is selected in the "Acquisition" > "History" tab.

Remote command:
ACQuire:HISTory:TSDate? on page 1217
ACQuire:HISTory:TSABsolute? on page 1217
ACQuire:HISTory:TSRelative? on page 1217
ACQuire:HISTory:TSRReference? on page 1218

9.3.3 Quick access history dialog

The quick access history dialog is visible when the history is active. Closing the dialog disables the history display ("Show history" = "Off")

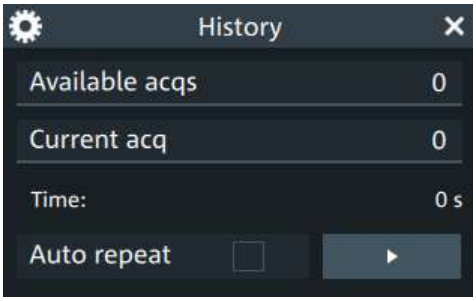

Available acqs....247
Current acq....248
Time....248
Auto repeat....248
Play....248

Available acqs
Number of acquisitions that is saved in the memory and available for history viewing. It is also the number of acquisitions in a fast segmentation acquisition series.

Remote command:
ACQuire:AVAilable? on page 1104

Current acq
Index of the current acquisition, same as Current acq in the history setup.

Time
Shows the timestamp of the current acquisition. See "Time stamp" on page 247.

Auto repeat
If selected, the playback of the selected history segments repeats automatically.

Remote command:
`ACQuire:HISTory:REPLay` on page 1216

Play
Starts and stops the replay of the history waveforms. See also: "Player" on page 246.

9.3.4 Using history

You can access the history of waveforms in two ways:

- Display a particular acquisition.
- Replay all or a part of the saved waveforms to track the signal run.

To open the history and get information

1. Press the [History] key on the front panel.

   A running acquisition is stopped, the history mode is enabled and the quick-access "History" dialog box is displayed. The [History] key lights up as long as the history mode is active.

2. Open the full configuration dialog box:
   - Tap the icon.
   - Open "Menu" > "Acquisition" dialog > "History" tab.

To display a particular acquisition

You can analyze a selected history waveform, and save it to a file.

► In the quick-access "History" dialog, enter the number of the required acquisition in the "Current acq" field. The newest acquisition always has the index "0", older acquisitions have a negative index.

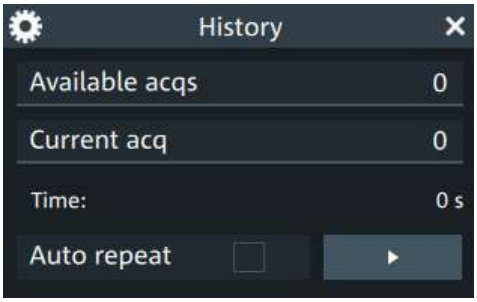

Alternatively, you can configure and start the history display from the "History" configuration dialog:

1. Open the "History" configuration tab.
2. If the history mode is off (the [History] key is not illuminated), select "Show history".
3. Drag the slider to the required acquisition. The current number is shown in the "Current acq" field.
   Alternatively, enter the number of the required acquisition in the "Current acq" field.

To save a single history waveform

1. Select and display the required history waveform as described in "To display a particular acquisition" on page 248.
2. Save the selected waveform using "Save/recall" > "Save" tab > "Waveform". For details, see Section 13.4, "Waveform data", on page 474.

To replay history waveforms

If you want to see the complete acquisition series without any setup, simply tap in the quick-access "History" dialog box. For specific analysis of history data, use the history "Viewer" setup.

1. Open the "History" configuration dialog tab.
2. If the history mode is off, enable "Show history".
3. Tap to start.

To exit the history

► Choose one of the following ways:
- Close the quick-access "History" dialog box.
- In the "History" configuration tab, disable "Show history".
- Start the acquisition.

9.4 Reference waveforms

Reference waveforms can be displayed in addition to the signal waveforms, saved to a file, and loaded back for further analysis.

You can configure up to 8 reference waveforms to display stored waveforms. Various waveform types can be used as reference waveforms, for example, analog signals, math waveforms, or spectrum.

Supported file formats

Reference waveforms can be loaded from REF, BIN and CSV files.

BIN is supported for waveforms that were saved on RTO2000, RTO6, RTE or RTP in BIN format.

Loading from CSV is supported under the following conditions:

- One analog channel waveform is stored in the CSV file. Envelope values are supported.
  Other waveform types than analog channels are not supported.
  Multichannel CSV files are not supported.
- The trigger time is not reconstructed, the trigger is always in the middle of the waveform.
- Clipping detection on measurements on a reference waveform from CSV is not supported.

9.4.1 Working with reference waveforms

- "To open the "Reference waveform" dialog" on page 250
- "To load a reference waveform" on page 250
- "To display and configure a reference waveform" on page 250
- "To save a reference waveform" on page 251

To open the "Reference waveform" dialog

► There are several ways to open the "Reference waveform" dialog:

- In the "Menu" > "Apps" > "General" tab, select "Reference".
- Select the "+ Ref" signal activator on the signal bar.
- Press the [Ref] key

To load a reference waveform

Note: Reference waveforms can be loaded from REF files and CSV files with single channel waveforms.

1. Open the "Reference waveform" dialog as described in "To open the "Reference waveform" dialog" on page 250.
2. Select the tab for the reference waveform that you want to load ("R1/2/3/4/5/6/7/8").
3. In the "Setup" tab, select "Open".
4. In the file browser dialog, select the "File type": "*.ref" or "*.csv".
5. Select the file.
6. Tap "Open".

   The selected waveform is loaded to the specified reference waveform.

To display and configure a reference waveform

1. Open the "Reference waveform" dialog as described in "To open the "Reference waveform" dialog" on page 250.
2. Select the tab for the reference waveform that you want to display, e.g. "R1".

3. Load a stored reference waveform as described in To load a reference waveform.
   Alternatively, select a source that you want to display as a reference:
   a) In the "Setup" tab, select "Source".
   b) Select the "Source" from the selection list. The list shows all active waveforms that you can save as references.
   c) Tap the "Create/Update" button to update the current reference waveform with the source data.
4. Tap the "Show" button.
   The reference waveform is displayed on the screen.
5. A reference waveform can have its own scaling settings or it can be scaled according to the source settings. By default, the scaling of the reference waveform is coupled to the source settings. Also, you can stretch it or compress it in vertical and horizontal directions.
   If necessary, change the settings on the "Vertical" and "Rescale" tabs of the "Reference waveform" dialog.
   To restore the original settings, tap the "Set to original" in the "Vertical" tab.
   For a description of the scaling settings, see Section 9.4.2.4, "Rescale settings", on page 256.

To save a reference waveform

1. Open the "Reference waveform" dialog as described in "To open the "Reference waveform" dialog" on page 250.
2. Select the tab for the reference waveform that you want to store, e.g. "R1".
3. Display and configure the reference waveform as described in "To display and configure a reference waveform" on page 250.
4. Tap "File extension" to select the file format.
   Note that reference waveforms can be loaded from REF files and CSV files only.
5. To save the waveform, tap "Save as".
6. Enter a filename and select the directory. The file type is defined according to the selection in the previous steps.
   The source settings of the reference waveform and the current scaling settings are stored to the specified file.

9.4.2 Settings for reference waveforms

To compare waveforms and analyze differences between waveforms, you can use up to 8 reference waveforms.

You can save an unlimited number of reference waveforms and load them for further use.

The display of a reference waveform is independent from the display of the source waveform; you can move, stretch and compress the curve vertically and horizontally.

9.4.2.1 Reference waveform setup

Access: "Menu" > "Apps" > "General" tab > "Reference" > "Setup" tab

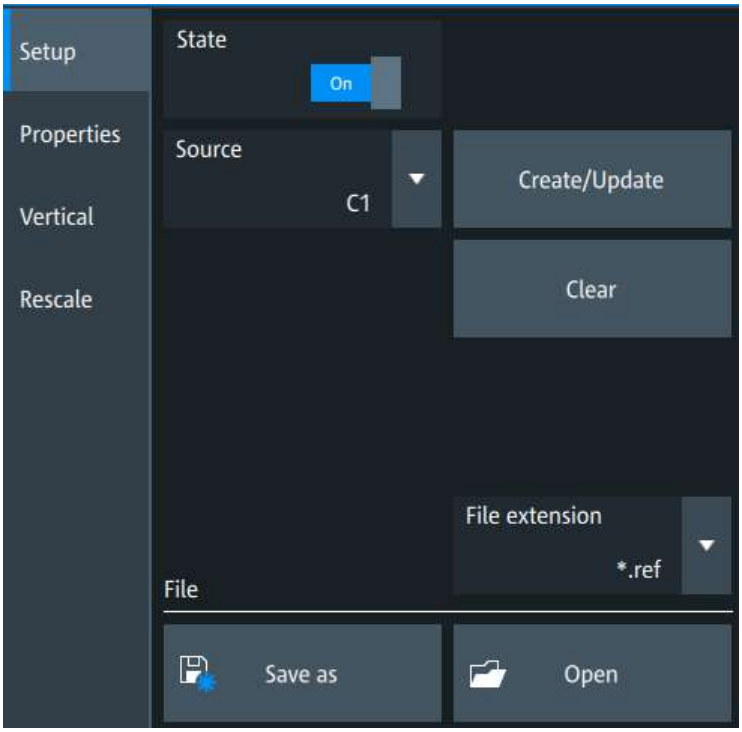

In the "Setup" tab, you select the target reference waveform and its source.

R1/2/3/4/5/6/7/8
Each tab contains the settings for one of the available reference waveforms.

Show
Enables the display of the reference waveform in the diagram. Before you can display it, create the reference waveform.

Remote command:
`REFCurve<rc>:STATe` on page 1222

Source
Selects the source waveform from the active waveforms, e.g. input channels, math waveforms, or spectrum.

Remote command:
`REFCurve<rc>:SOURce` on page 1221

Create/Update
Copies the selected source waveform with all its settings to the memory of the reference waveform. If there is a previously defined reference waveform in this memory, it is updated by the current source waveform. If the acquisition is running, the reference waveform is a snapshot.

A progress bar informs you about the process.

Remote command:
`REFCurve<rc>:UPDate` on page 1222

Clear
Deletes the selected reference waveform. It disappears from the display, and its memory is deleted.

Remote command:
`REFCurve<rc>:CLEar` on page 1219

File extension
Selects the file format.

Save as
Saves the reference waveform. The complete reference waveform is stored in a file and can be reloaded later.

A progress bar informs you about the process.

See also:
- Section 13.4, "Waveform data", on page 474
- Section 13.4.3, "Waveform export files", on page 481

Remote command:
`REFCurve<rc>:NAME` on page 1219
`REFCurve<rc>:SAVE` on page 1220
To abort the saving, use `REFCurve<rc>:ABORt` on page 1219.

Open
Opens a file selection dialog box and loads the selected reference waveform file.

See "Supported file formats" on page 249.

Remote command:
`REFCurve<rc>:OPEN` on page 1220

9.4.2.2 Reference waveform properties

Access: "Menu" > "Apps" > "General" tab > "Reference" > "Properties" tab

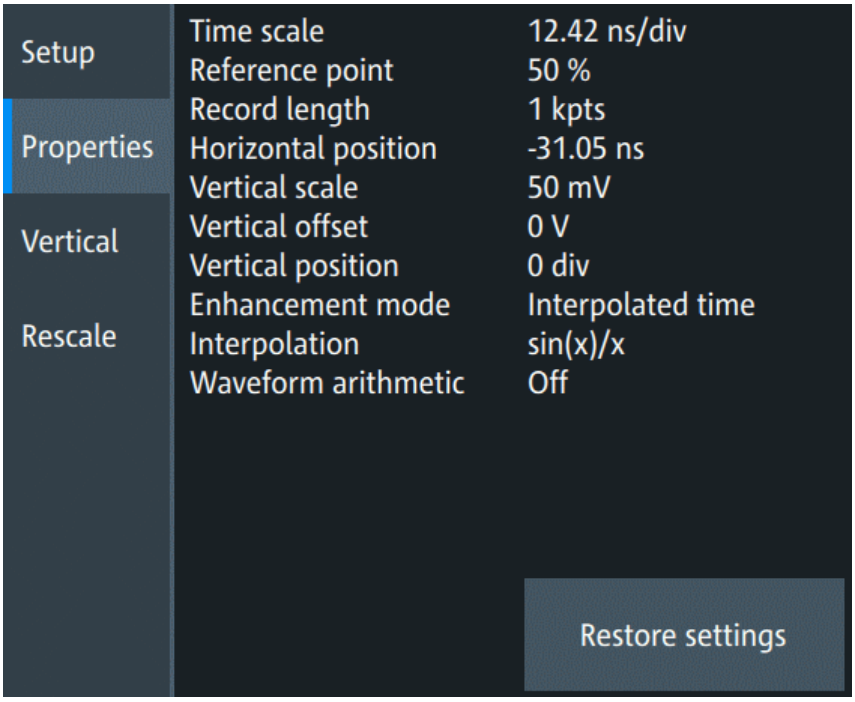

A reference waveform can be scaled, stretched and positioned in the diagram. The "Properties" tab shows the original settings of the reference waveform, which are stored together with the waveform data.

The following settings are displayed:

- Time scale
- Reference point
- Record length
- Position
- Scale
- Offset
- Position
- Enhancement mode
- Interpolation
- Waveform arithmetic

Enhancement mode
The enhancement mode is taken from the source waveform of the reference. The enhancement mode is set automatically by the instrument and depends on the sample rate. As long as the waveform sample rate is not higher than the ADC sample rate, the instrument works automatically in real time mode (RT). At higher waveform sample rates, the instrument changes to interpolated time mode (IT), where interpolation adds waveform points between the captured ADC samples by various mathematical methods, see Interpolation.

Waveform arithmetic
The waveform arithmetic is taken from the source waveform of the reference, and it cannot be changed for the reference. Waveform arithmetic builds the resulting waveform from several consecutive acquisitions of the signal. The arithmetic methods are envelope and average, which are set in the Acquisition mode.

Restore settings
Applies the original settings of the reference waveform to the horizontal and vertical settings of the selected waveform.

Remote command:
`REFCurve<rc>:RESTore` on page 1220

9.4.2.3 Vertical settings for reference waveforms

Access: "Menu" > "Apps" > "General" tab > "Reference" > "Vertical" tab

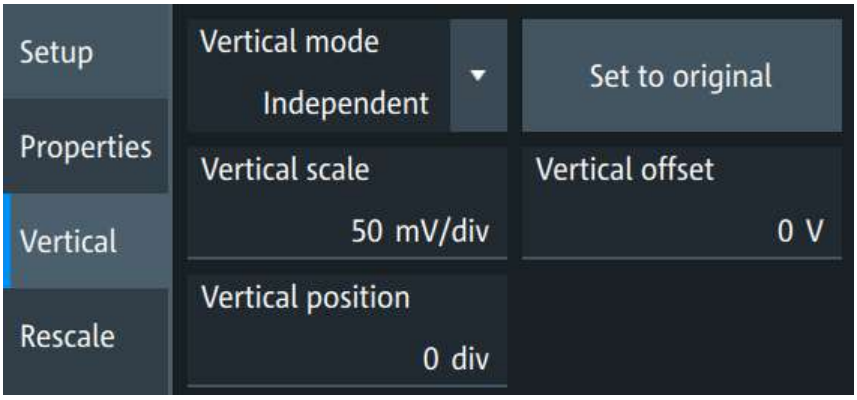

Vertical mode
Selects the type of vertical settings:

"Coupled to source" Vertical position and scale of the source are used.

"Independent" Scaling and position can be set specific to the reference waveform.

Remote command:
`REFCurve<rc>:VMODe` on page 1226

Set to original
Available, if "Vertical mode" = "Independent".

Restores the original vertical settings of the reference waveform.

Remote command:
`REFCurve<rc>:TOORiginal` on page 1226

Vertical scale
Available, if "Vertical mode" = "Independent".

Sets the vertical scale, which defines the displayed amplitude of the selected waveform.

The unit of the reference is the same as the unit of the source waveform.

Remote command:
`REFCurve<rc>:SCALe` on page 1223

Vertical offset
The vertical offset moves the reference waveform vertically. Enter a value with the unit of the waveform.

Remote command:
`REFCurve<rc>:OFFSet` on page 1220

Vertical position
Available, if "Vertical mode" = "Independent".

Moves the reference waveform up or down in the diagram.

Remote command:
`REFCurve<rc>:POSition` on page 1223

9.4.2.4 Rescale settings

Access: "Menu" > "Apps" > "General" tab > "Reference" > "Rescale" tab

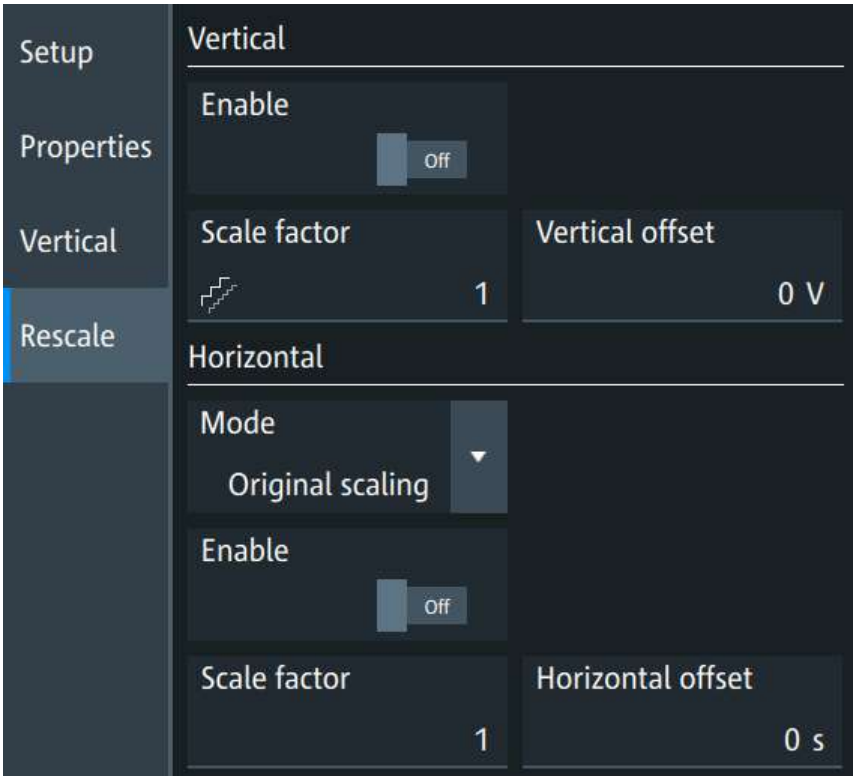

In the "Rescale" tab you can adjust the vertical and horizontal scaling of the reference waveform.

Vertical
Stretching and offset change the display of the waveform independent of the vertical scale and position.

Enable ← Vertical
If enabled, the vertical offset and factor are applied to the reference waveform.

Remote command:
`REFCurve<rc>:RESCale:VERTical:STATe` on page 1225

Scale factor ← Vertical
Sets the vertical scale factor. A factor greater than 1 stretches the waveform vertically, a factor lower than 1 compresses the curve.

Remote command:
`REFCurve<rc>:RESCale:VERTical:FACTor` on page 1225

Vertical offset ← Vertical
The vertical offset moves the reference waveform vertically. Enter a value with the unit of the waveform.

Like vertical offset of a channel waveform, the offset of a reference waveform is subtracted from the measured value. Negative values shift the waveform up, positive values shift it down.

Remote command:
`REFCurve<rc>:RESCale:VERTical:OFFSet` on page 1225

Horizontal
Stretching and offset change the display of the waveform independent of the horizontal settings of the source waveform and of the horizontal diagram settings.

Mode ← Horizontal
Selects the type of horizontal settings:

"Original scaling"	Horizontal scaling and reference point of the source waveform are used.
"Adjust to X Axis"	The current horizontal settings of the diagram are used.

Remote command:
`REFCurve<rc>:HMODe` on page 1223

Enable ← Horizontal
If enabled, the horizontal offset and factor are applied to the reference waveform.

Remote command:
`REFCurve<rc>:RESCale:HORizontal:STATe` on page 1224

Scale factor ← Horizontal
Sets the horizontal scale factor. A factor greater than 1 stretches the waveform horizontally, a factor lower than 1 compresses the curve.

Remote command:
`REFCurve<rc>:RESCale:HORizontal:FACTor` on page 1224

Horizontal offset ← Horizontal
Moves the waveform horizontally. Enter a value with a time unit suitable for the time scale of the diagram.

Positive values shift the waveform to the right, negative values shift it to the left.

Remote command:
`REFCurve<rc>:RESCale:HORizontal:OFFSet` on page 1224

9.5 Waveform histograms

Histograms are used to plot density of data. They show graphically how often which signal values occur. The histogram accumulates the measured y-values (vertical histogram), or the occurrence of a sample at a given time on the x-axis (horizontal histogram). The data is accumulated during the running acquisition cycle. They are a prerequisite for histogram measurements.

You can analyze the complete waveform by a histogram, or a part of it by defining a histogram window. The maximum count of a waveform value is assigned to the full height (histogram peak). All other count values are displayed relative to the maximum.

You can define up to 8 histograms. They are created quickly using the toolbar icon and overlay menu, or in the "Histogram" app dialog.

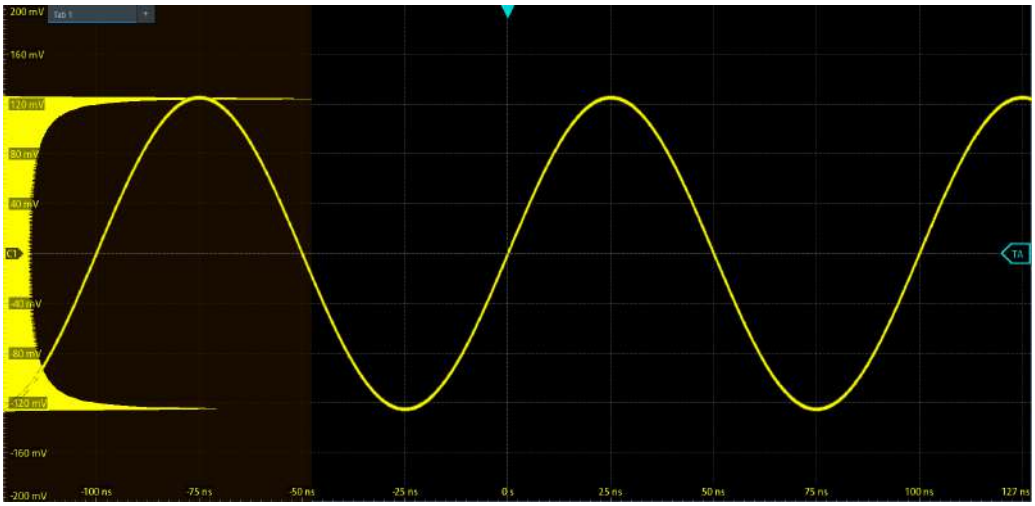

Figure 9-4: Full histogram

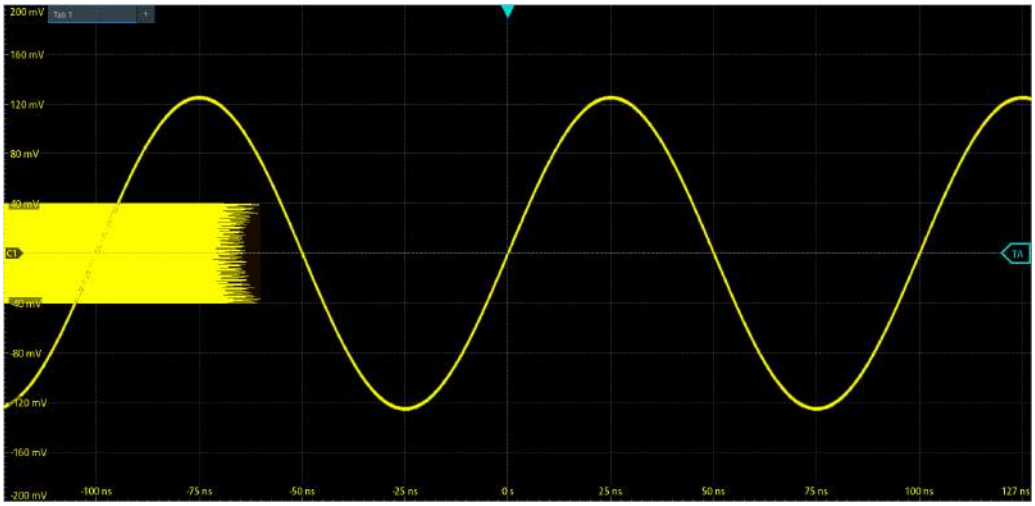

Figure 9-5: Histogram window

9.5.1 Histogram settings

Access: "Menu" > "Apps" > "General" tab > "Histogram".

The general histogram setup is done in the "Setup" tab. To analyze a part of the waveform, use the "Window" tab.

9.5.1.1 Setup for histograms

Access: "Menu" > "Apps" > "General" tab > "Histogram" > "Setup" tab

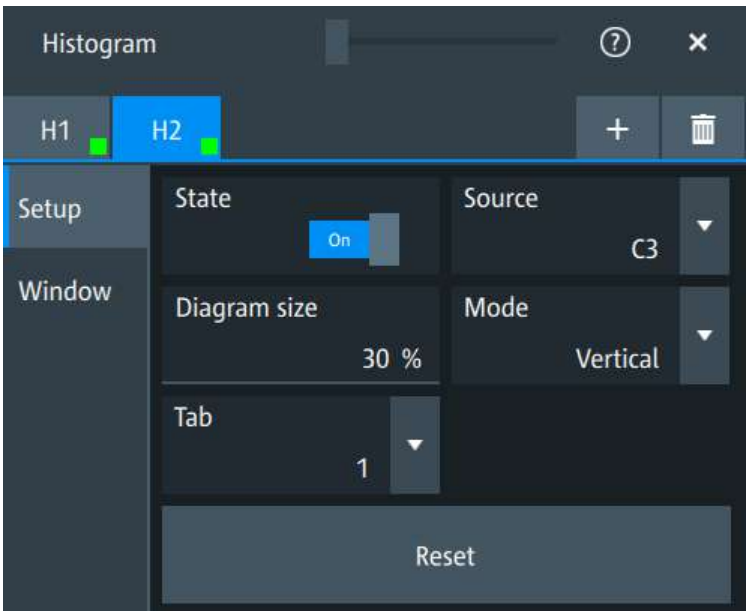

State
Enables or disables the histogram evaluation and display. The histogram settings are kept until the histogram is deleted.

Remote command:
`HISTogram<m>:ENABle` on page 1227

Source
Defines the source, the waveform that is analyzed by the histogram. Any analog channel waveform, math or reference waveform can be selected.

Remote command:
`HISTogram<m>:SOURce` on page 1228

Diagram size
Defines the size of the histogram in percent of the diagram width or height.

Mode
Defines the type of histogram.

A vertical histogram has horizontal bars that show the occurrence of the vertical values.

A horizontal histogram has vertical bars the show the occurrence of a sample at a given time on the x-axis. This histogram type is in particular relevant for histogram windows.

Remote command:
`HISTogram<m>:MODE` on page 1228

Tab
If several tabs are available in the diagram, you can select the tab that displays the histogram.

The histogram is always in the same diagram as the source waveform is. If the source waveform is not displayed in the tab selected for the histogram, the source is automatically enabled in this tab, together with the histogram. If you delete a tab with a histogram, the histogram is deleted also.

Reset
Restarts the calculation of the selected histogram.

To reset all histograms and measurements, select "Clear" on the toolbar.

Remote command:
`HISTogram<m>:RESet` on page 1228

9.5.1.2 Window settings for histograms

Access: "Menu" > "Apps" > "General" tab > "Histogram" > "Window" tab

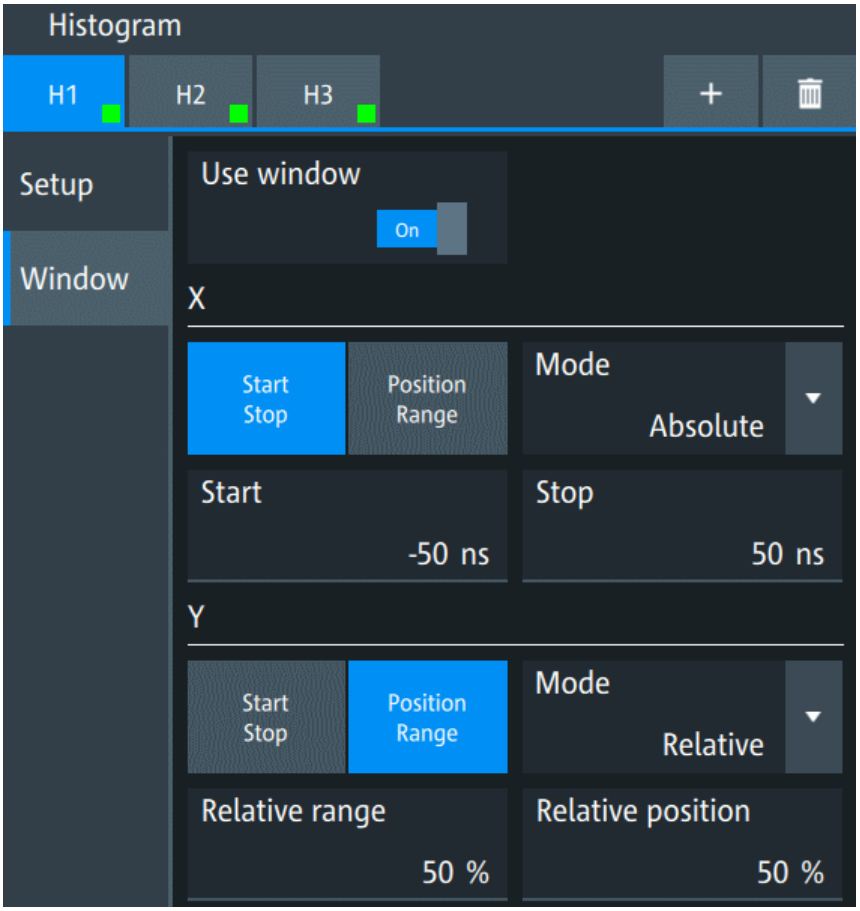

Use window
When you use a histogram window, the analyzed part of the source waveform is limited vertically and horizontally.

Remote command:
`HISTogram<m>:WINDow:ENABle` on page 1229

Start Stop | Position Range
Select whether you want to use start and stop values to limit the histogram window, or the center position and range of the window. The selections can be different for the vertical and horizontal limit.

Mode
Defines whether the window limits are entered as absolute or relative values.

Remote command:
`HISTogram<m>:WINDow:HORizontal:MODE` on page 1229
`HISTogram<m>:WINDow:VERTical:MODE` on page 1229

Start, Stop, Range, Position
Set the horizontal window limits as absolute values: start and stop, or center position and range of the window.

Remote command:
HISTogram<m>:WINDow:HORizontal:ABSolute:STARt on page 1230
HISTogram<m>:WINDow:HORizontal:ABSolute:STOP on page 1230
HISTogram<m>:WINDow:HORizontal:ABSolute:POSition on page 1230
HISTogram<m>:WINDow:HORizontal:ABSolute:SPAN on page 1230

Relative start, Relative stop, Relative range, Relative position
Set the horizontal window limits as relative values in % of the diagram width: start and stop, or center position and range of the window.

Remote command:
HISTogram<m>:WINDow:HORizontal:RELative:STARt on page 1230
HISTogram<m>:WINDow:HORizontal:RELative:STOP on page 1230
HISTogram<m>:WINDow:HORizontal:RELative:POSition on page 1230
HISTogram<m>:WINDow:HORizontal:RELative:SPAN on page 1230

Start, Stop, Range, Position
Set the vertical window limits as absolute values: start and stop, or center position and range of the window. The values remain unchanged if you change the unit of the y-axis.

Remote command:
HISTogram<m>:WINDow:VERTical:ABSolute:STARt on page 1231
HISTogram<m>:WINDow:VERTical:ABSolute:STOP on page 1231
HISTogram<m>:WINDow:VERTical:ABSolute:POSition on page 1231
HISTogram<m>:WINDow:VERTical:ABSolute:SPAN on page 1231

Start, Stop, Range, Position
Set the vertical window limits as relative values in % of the diagram height: start and stop, or center position and range of the window. The values remain unchanged if you change the unit of the y-axis.

Remote command:
HISTogram<m>:WINDow:VERTical:RELative:STARt on page 1231
HISTogram<m>:WINDow:VERTical:RELative:STOP on page 1231
HISTogram<m>:WINDow:VERTical:RELative:POSition on page 1231
HISTogram<m>:WINDow:VERTical:RELative:SPAN on page 1231

9.5.2 Creating histograms

To create a histogram quickly with toolbar icons

1. Select the waveform for which you need a histogram.
2. Tap the histogram icon on the toolbar.
3. Select the histogram type on the overlay menu: vertical or horizontal. See "Mode" on page 260.
4. Tap the diagram with the waveform to be measured, or draw a rectangle on the screen to define the window for histogram calculation.

The histogram range is shown in the diagram and a histogram with the selected waveform as a source is defined and displayed.

5. To adjust the histogram range:
   a) Double-tap the histogram.
   b) Tap "Setup" on the overlay menu.
   c) Adjust the start and stop values.

To create and configure a histogram in the dialog box

1. Select "Menu" > "Apps" > "General" tab > "Histogram".

2. To create a histogram, tap the "Add" icon in the upper right corner of the dialog box.
3. Select a "Source" for the histogram. The source can be any analog input signal, math or reference waveform.
4. Define the histogram "Mode": vertical for an amplitude, horizontal for a time-based histogram.
5. If you need to evaluate only a part of the waveform:
   a) Select the "Window" tab.
   b) Enter the start value and the stop value in x and in y direction, either as absolute or relative values. Alternatively, you can enter the center position of the window, and its range.
   c) Enable "Use window".
6. On the "Setup" tab, enable the histogram.

9.5.3 Analysis of waveform histograms

To view the histogram in more detail, use the zoom.

To get exact numeric results of the histogram, use the measurement functions. See Section 10.2.5, "Histogram measurements", on page 293.

You can export the histogram data to file, one histogram per file. See Section 13.5, "Histogram data export", on page 490.

For remote transfer of histogram data, use `EXPort:HISTogram<m>:DATA:HEADer?` and `EXPort:HISTogram<m>:DATA[:VALues]?`.

10 Measurements

Using the MXO 5 you can perform and display different measurements simultaneously, based on the active signal or math waveforms. The color of the results in the result table corresponds with the source waveform color.

10.1 Cursor measurements

- Cursors and results of cursor measurements 264
- Using cursors 265
- Settings for cursor measurements 267

10.1.1 Cursors and results of cursor measurements

Cursor measurements determine the results at the current cursor positions. The cursors can be positioned manually, or can be configured to follow the waveform. You can measure on one waveform, on two different waveforms, or on multiple different waveforms (sources).

Up to 4 cursor sets can be configured and displayed. Each cursor set consists of a pair of horizontal or vertical cursor lines, or both. Cursor lines can be coupled so that the initially defined distance is always maintained.

The cursors are displayed in the diagrams of the source waveform only, or in all diagrams. For each measurement, labels can be defined for the cursors. By default, the cursor lines are labeled as Cu1.1 and Cu1.2.

How to set up cursor measurements is described in Section 10.1.2, "Using cursors", on page 265. The Section 10.1.3, "Settings for cursor measurements", on page 267 provides a detailed description of all settings.

For details on using the result table, see Section 4.11, "Displaying results", on page 80.

10.1.1.1 Cursor measurements on time-based waveforms

The cursor for measurement on time-based waveforms returns the following results. The results are displayed automatically when a cursor measurement is enabled.

Label	Description
"X1, X2"	Time at the position of the vertical cursors.
"Y1, Y2"	Vertical values of the waveform at the position of the horizontal cursors in V or A.

Label	Description
"Δx"	Difference between the vertical cursor (time) values
"1/Δx"	Inverse time difference
"Δy"	Difference between the horizontal cursor values
"Δy/Δx"	Slope of the waveform between the cursors (if measured on one source)

For measurements on multiple waveforms, the Y-values are measured on each source waveform.

With option R&S MXO5-K136, these values are also measured with cursors in eye diagrams. The unit of the results corresponds to the selected "Mode" of the eye. See also: Section 12.7, "Eye analysis (option R&S MXO5-K136)", on page 458.

10.1.2 Using cursors

You can start cursor measurements in the toolbar, or using the [Cursor] key. For detailed configuration, use the "Cursor" dialog.

10.1.2.1 Starting a simple cursor measurement

To add cursors using the toolbar

1. Tap the "Add cursor" icon on the toolbar.

2. Select the channel that you want to apply the cursor to.
   Tap the waveform that you want to measure. Alternatively, you can draw a rectangle in the diagram to position the cursor lines.

   The cursor lines appear and the cursor results are displayed in the result table.

To display cursors using the [Cursor] key

1. Select the waveform that you want to measure.
2. Press the [Cursor] key.

   The cursor lines and the measurement results are displayed.

10.1.2.2 Configuring a cursor measurement

To modify the position of the cursor lines, you can drag the lines on the screen. In addition, various settings are possible to refine the measurement.

The complete configuration of cursor measurements is provided in the "Cursor" dialog. The settings of the dialog are described in Section 10.1.3, "Settings for cursor measurements", on page 267.

1. To open the "Cursor" dialog, use one of these ways:
   - Select "Menu" > "Cursor".
   - Press the [Cursor] key.
   - Double-tap in the results table (but not on a result).
2. Select the "Setup" tab.
3. Select the subtab for the cursor set that you want to use.
4. Select the Source mode.
5. Depending on the selected "Source mode", select one, two or several sources - the measured waveforms. Available sources are shown in the source list.
6. For single source and second source mode, select the "Type": X (vertical), Y (horizontal), or XY (both).
7. If the acquisition mode is set to "Envelope" or "Peak detect", select which horizontal cursor is positioned to the maximum and which to the minimum envelope values.
8. Define the exact position of the cursor lines:
   a) Enter the X-position for each vertical cursor.
   b) To position the horizontal cursors automatically, select "Track waveform". The Y-position follows the waveforms.
   In this case, Cu 1.1 indicates the current maximum, Cu 1.2 indicates the current minimum. If both horizontal and vertical cursor lines are displayed, the horizontal cursors are placed at the crossing points of the vertical cursor lines with the waveform. If you adjust the vertical cursor lines, the horizontal cursors follow.
   c) If "Track waveform" is off, enter the Y-position for each horizontal cursor.
9. To display the cursor in all diagrams that are in the same domain as the selected source (time or spectrum), enable "Show in all diagrams" in the "Advanced" tab.
10. To keep the distance between the vertical cursors when one cursor is moved, enable "X" or "Y" in the "Advanced" tab.
11. To set the cursors for a spectrum measurement to peak values, select the "Peak search" tab.
    Tap one of the buttons to place the cursors on the selected peak value. For details, see Section 10.1.3.3, "Peak search tab", on page 272.
12. Tap "Show cursor" in the "Setup" tab to activate the cursor measurement.

    The cursors lines and the results are displayed. For details on cursor measurement results, see Section 10.1.1, "Cursors and results of cursor measurements", on page 264.

10.1.2.3 Configuring the cursor display

By default, the cursors are displayed as lines in the diagrams and labeled according to the syntax: Cu<cursor set number>.<1|2>

For example, the cursors for the cursor set 2 are labeled 2.1 and 2.2. The horizontal and the vertical cursors lines have the same labels.

You can change the default cursor display and labels.

To set the cursor style

1. Select "Menu" > "Cursor".
2. Select the subtab for the cursor set you want to configure.
3. Select the "Setup" tab.
4. Select the "Cursor style". See also: "Cursor style" on page 268.

To add labels to cursor lines

1. Select "Menu" > "Cursor".
2. Select the subtab for the cursor set you want to configure.
3. Select the "Advanced" tab.
4. Enter a label for "Vertical cursor 1", "Vertical cursor 2", "Horizontal cursor 1", "Horizontal cursor 2".
5. Enable "Show label".

10.1.3 Settings for cursor measurements

Cursor measurements are configured in the "Cursor" dialog.

10.1.3.1 Setup tab

Access: "Menu" > "Cursor" > "Setup" tab

You can define up to 4 cursor sets (or cursor measurements). Each cursor set is configured on a separate tab.

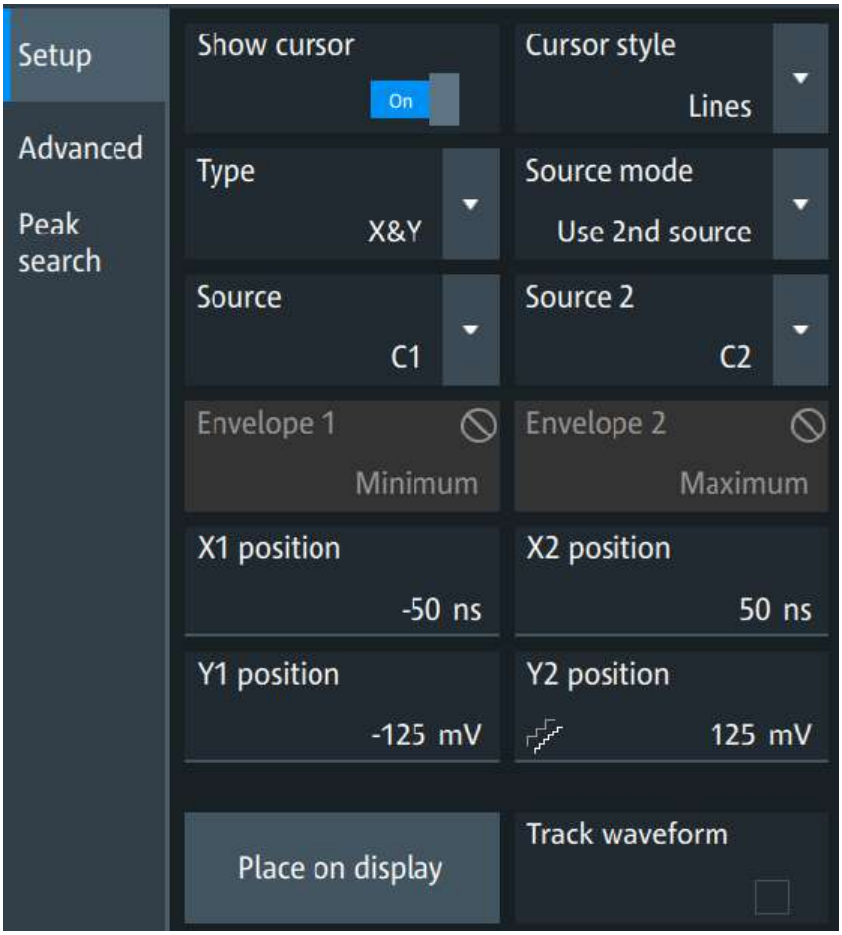

Show cursor
Enables the selected cursor measurement.

Remote command:
`CURSor<cu>:STATe` on page 1296

Cursor style
Defines how the cursor is displayed in the diagram.

"Lines" The cursors are displayed as lines.

"Line & Rhombus"
The cursors are displayed as lines. The intersections of the cursors with the waveforms are displayed by rhombus-shaped points.

"VLine & Rhombus"
Vertical line and rhombus: the cursors are displayed as vertical lines. The intersections of the cursors with the waveforms are displayed by rhombus-shaped points.

"Rhombus" The intersections of the cursors with the waveforms are displayed by rhombus-shaped points.

Remote command:
`CURSor<cu>:STYLe` on page 1308

Type
Defines the cursor type to be used for the measurement.

"X" (vertical cursors)
: Both vertical cursor lines are set automatically to the trigger position, and you can reposition them manually. Not available for measurements on multiple sources.

"Y" (horizontal cursors)
: Horizontal cursors are positioned automatically along the waveform and can be adjusted manually. Not available for measurements on multiple sources.

"X&Y" (both vertical and horizontal cursors)
: Horizontal cursors are positioned automatically along the waveform and vertical cursors are set to the trigger position. You can reposition all cursor lines manually.

Remote command:
`CURSor<cu>:FUNCtion` on page 1296

Source mode
Selects the number of sources that you want to measure. The dialog adapts to the selected mode.

"Single source"	The cursor lines are set on one waveform.
"Use 2nd source"	The cursor lines are set on two waveforms. The second cursor lines Cu2 are set on the second source to measure differences between the two waveforms.
"Multiple sources"	Several waveforms are selected to be measured with one cursor set. The cursor type is always "X&Y", and "Track waveform" is active. For each waveform, the Y-value at the position of the vertical cursor line is measured.

Remote command:
`CURSor<cu>:SMODe` on page 1297

Source
Defines the source of the cursor measurement. Various waveform types can be measured. The available sources are listed.

With option R&S MXO5-K136, eyes also can be measured. If an eye is selected as a source, the second source is also an eye. The eye source is not available if you measure on multiple sources.

Remote command:
`CURSor<cu>:SOURce` on page 1297

Source 2
Selects a second source for the cursor measurement if "Source mode" is set to "Use 2nd source". The second cursor lines Cu2 measure on the second source. Using a second source, you can measure differences between two channels with cursors.

Remote command:
`CURSor<cu>:SSOurce` on page 1299

Select sources
Select the waveforms to be measured if "Source mode" is set to "Multiple sources". The selection dialog lists all possible active sources.

Remote command:
`CURSor<cu>:SOURce` on page 1297

Envelope 1, Envelope 2
Define which horizontal cursor is positioned to the maximum and which to the minimum envelope values.

Envelope selection is effective under the following conditions:
- The acquisition mode of the cursor source waveform is set to envelope or peak detect, see Acquisition mode.
- Both horizontal and vertical cursors are enabled (Type = "X&Y").
- Track waveform is enabled.

"Minimum" The horizontal cursor is set to the crossing point of the vertical cursor line with the minimum waveform envelope.

"Maximum" The horizontal cursor is set to the crossing point of the vertical cursor line with the maximum waveform envelope.

Remote command:
`CURSor<cu>:X1ENvelope` on page 1304
`CURSor<cu>:X2ENvelope` on page 1304

X1 position, X2 position
Define the left and right position of the vertical cursor lines.

Remote command:
`CURSor<cu>:X1Position` on page 1299
`CURSor<cu>:X2Position` on page 1300

Y1 position, Y2 position
Define the upper and lower position of the horizontal cursor lines.

If Track waveform is enabled, the user setting is disabled and the Y-position is determined by the instrument.

Remote command:
`CURSor<cu>:Y1Position` on page 1300
`CURSor<cu>:Y2Position` on page 1301

Track waveform
If enabled, the horizontal cursor lines track the waveform. If the waveform changes, e.g. during a running measurement, the cursors move along with it.

The function is available if both horizontal and vertical cursors are displayed. The horizontal cursor lines are positioned to the crossing points of the vertical cursors with the waveform. For cursor measurements on multiple sources, tracking is always active.

Tracking disables the Y-coupling (coupling horizontal cursor lines) and the Y-position settings.

In envelope or peak detect acquisition mode, the envelope is tracked.

The function is not available for measurements on eyes (R&S MXO5-K136).

Remote command:
CURSor<cu>:TRACking[:STATe] on page 1302

Place on display
Resets the cursors to their initial positions. Reset is helpful if the cursors have disappeared from the display or need to be moved for a larger distance.

Remote command:
CURSor<cu>:SSCReen on page 1301

10.1.3.2 Advanced settings

Access: "Menu" > "Cursor" > "Advanced" tab

The settings in the "Advanced" cursor tab configure the behavior and display of cursor lines, and labels for the lines.

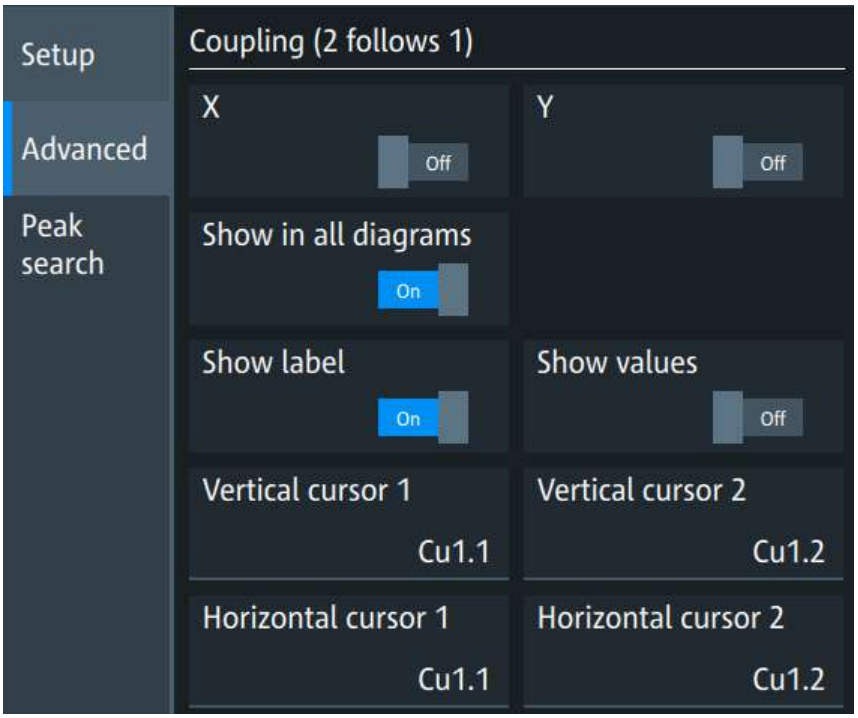

X, Y
Couple the horizontal or vertical cursor lines so that the distance between the two lines remains the same if one cursor is moved. "X" couples the vertical cursor lines, and "Y" couples the horizontal cursor lines.

Remote command:
CURSor<cu>:XCOupling on page 1304
CURSor<cu>:YCOupling on page 1304

Show in all diagrams
Shows the enabled cursor measurements in all active diagrams of the time domain.

In the spectrum domain, the setting is disabled. The cursors are shown only on the source spectrum of the measurement.

Remote command:
`CURSor<cu>:SIAD` on page 1303

Show label
Shows the cursor labels in the diagram.

Remote command:
`CURSor<cu>:LABel` on page 1302

Show values
Shows the measured values in the cursor labels.

Remote command:
`CURSor<cu>:DISPlay:VALues` on page 1303

Vertical cursor 1, Vertical cursor 2
Defines the label to be displayed with the vertical cursor lines. By default, the cursors are labeled as Cu1.1, Cu1.2, Cu2.1, ...

Remote command:
`CURSor<cu>:VERTical<n>:LABel` on page 1303

Horizontal cursor 1, Horizontal cursor 2
Defines the label to be displayed with the horizontal cursor lines. By default, the cursors are labeled as Cu1.1, Cu1.2, Cu2.1, ...

Remote command:
`CURSor<cu>:HORizontal<n>:LABel` on page 1302

10.1.3.3 Peak search tab

Access: "Menu" > "Cursor" > "Peak search" tab

The settings on this tab are only available in spectrum mode, i.e. the source of the cursor measurement is a spectrum. In this case, the cursors can indicate the results of a peak search on the waveform. Changing the noise reject settings, you can define which peaks are detected.

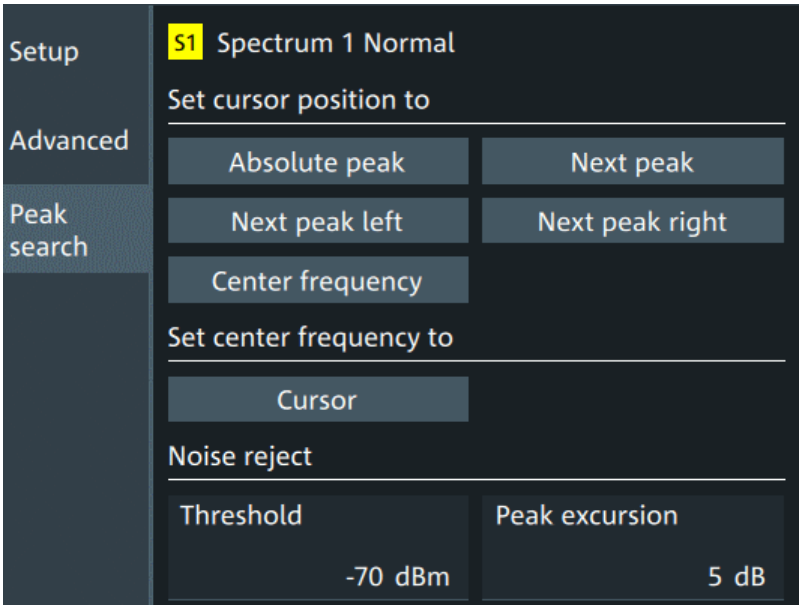

Absolute peak
Sets both cursors to the absolute peak value.

Remote command:
`CURSor<cu>:MAXimum[:PEAK]` on page 1307

Next peak
Cursor 2 is set to the next smaller absolute peak from the current position.

Remote command:
`CURSor<cu>:MAXimum:NEXT` on page 1308

Next peak left
Cursor 2 is set to the next peak to the left of the current position.

Remote command:
`CURSor<cu>:MAXimum:LEFT` on page 1307

Next peak right
Cursor 2 is set to the next peak to the right of the current position.

Remote command:
`CURSor<cu>:MAXimum:RIGHt` on page 1307

Center frequency
Sets the vertical cursor line Cu1 to the center frequency.

Remote command:
`CURSor<cu>:FFT:TOCenter` on page 1307

Set center frequency to
Sets the center frequency to the frequency value that is measured at cursor line Cu1.

Remote command:
`CURSor<cu>:FFT:SETCenter` on page 1307

Threshold
Sets an absolute threshold as an additional condition for the peak search. Only peaks that exceed the threshold are detected.

This setting is only available for spectrum waveforms. It is valid for cursor measurements, spectrum measurements and peak search.

Remote command:
`CALCulate:SPECtrum<sp>:THReshold` on page 1317

Peak excursion
Defines a minimum level value by which the waveform must drop left and right of the local maximum to be listed as a peak. Enter a peak excursion value to omit close by peaks and list just the highest peak.

This setting is only available for spectrum waveforms. It is valid for cursor measurements, spectrum measurements and peak search.

Example:

In the figure below, 2 peaks are shown, that rise above the defined "Threshold". Peak 1 fulfills the defined "Peak excursion" value and is counted as a peak. Peak 2 does not fulfill the defined "Peak excursion" value on the right and is not counted as a peak.

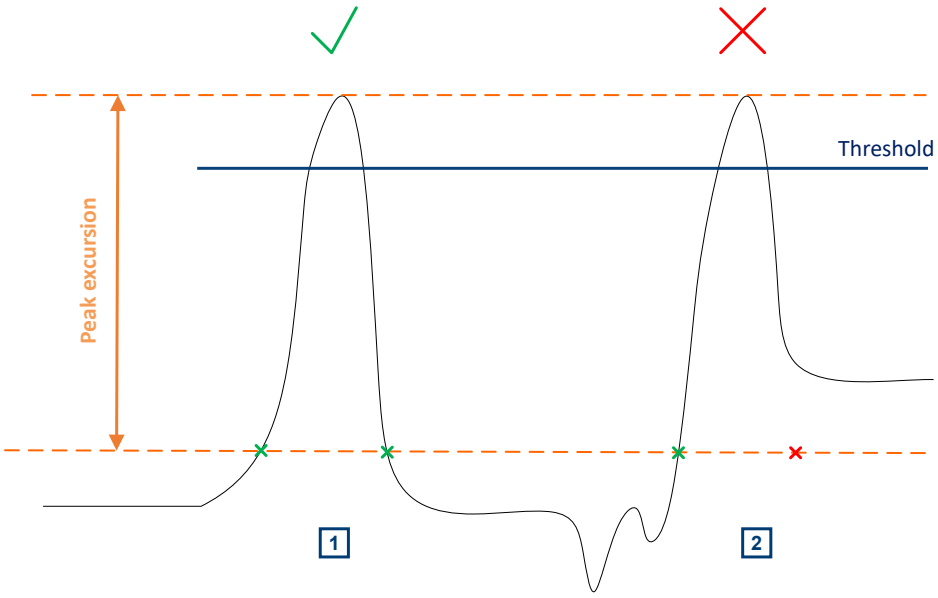

Remote command:
`CALCulate:SPECtrum<sp>:PEXCursion` on page 1317
`CURSor<cu>:PEXCursion` on page 1308

10.2 Automatic measurements

You can perform up to 24 different measurements simultaneously. Available sources and measurement types depend on the selected category. For most measurement types, specific settings are available for configuration.

10.2.1 Measurement setup in general

10.2.1.1 Starting an automatic measurement

There are several methods to start a measurement, each with slightly different effects:

- Using the "Measure" icon on the toolbar:
  See: "To start a measurement using the toolbar icon" on page 275.
- Pressing the [Measure] key on the front panel.
- Using the "Measurement" dialog.
  See: "To add a new measurement in the measurement dialog" on page 275.

To start a measurement using the toolbar icon

1. Tap the "Measure" icon on the toolbar.

   The measurement overlay menu opens.

2. Select the "Category".
3. Tap the measurements that you want to perform. You can scroll left and right through the measurement list to view all available measurements for the selected "Category".
4. Select the source that you want to apply the measurement on.
5. If needed, click "Setup" to configure further measurements.

   The measurement results are displayed.

To add a new measurement in the measurement dialog

1. Press the [Measure] key to open the measurement dialog.
2. In the "Setup" tab, press "+ Add".

   A dialog opens to select the measurements.
3. Select the "Source" for the measurement.
4. Select the "Category" of the measurement that you want to add, e.g. "Horizontal".

All available measurements for this category are displayed. For more details on the available measurement types, see the correspondig section.

5. Tap a measurement on the list to select it.
   Selected measurements are marked with a blue check mark in their checkbox.

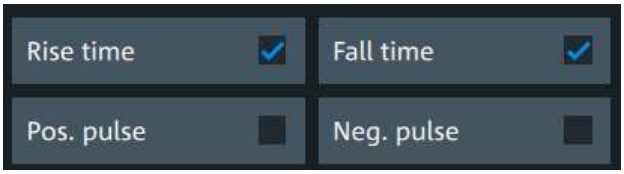

6. The measurements of some categories are listed on several tabs. To switch between the tabs, tap the points at the bottom of the list.

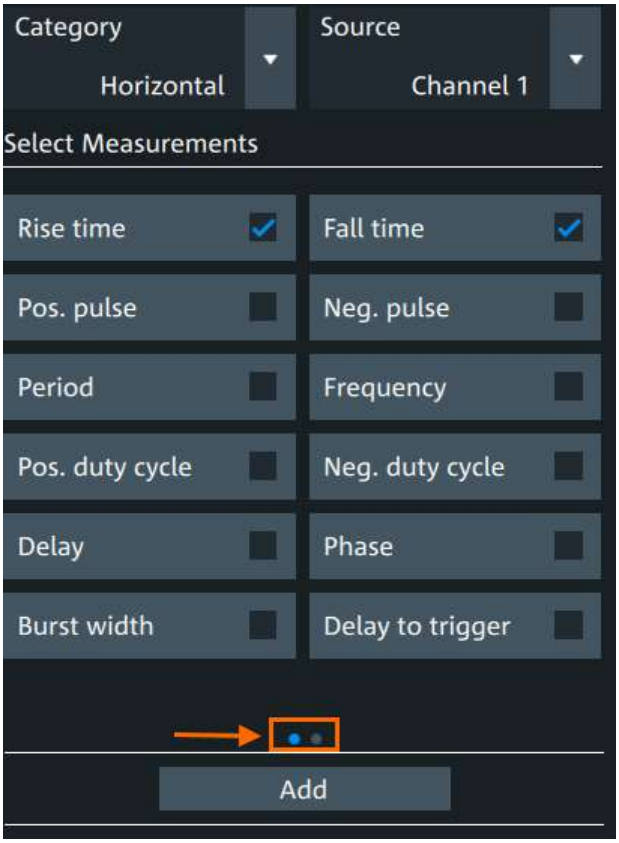

7. Tap "Add" to add the selected measurements.

   All selected measurements are active by default.

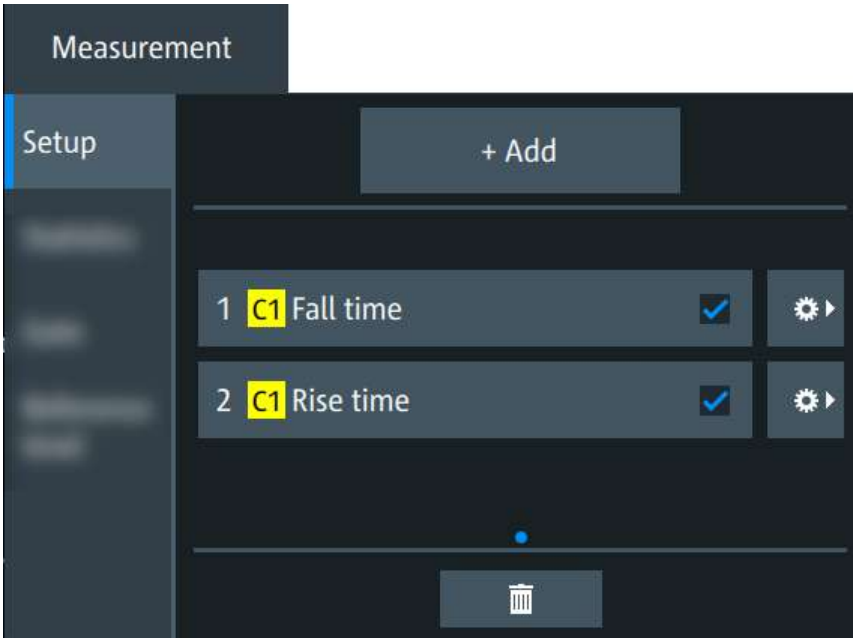

8. To deactivate a measurement while leaving it in the measurement list, deselect the checkmark.
9. To configure a measurement, select the (settings icon).

To delete a measurement

1. Press the [Measure] key to open the measurement dialog.
2. In the "Setup" tab, tap .

   A delete icon appears in the selection button of each measurement.

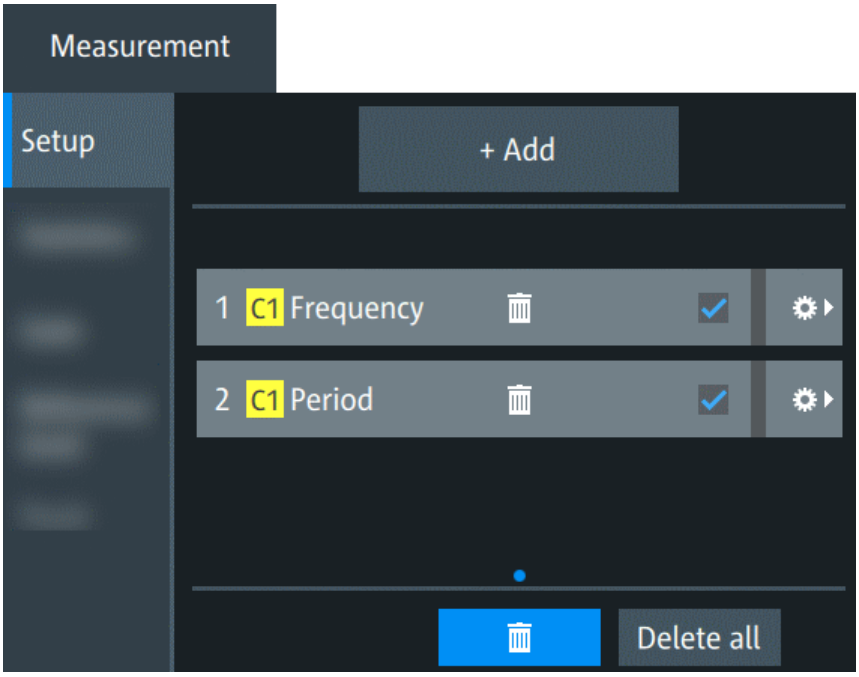

3. Tap the button of the measurement that you want to delete. Alternatively, tap "Delete All" to delete all measurements.

10.2.1.2 Setup tab

Access: "Menu" > "Measurement" > "Setup" tab.

The "Setup" tab shows the selected measurements. You can activate or deactivate the measurements. Tap the "Settings" icon to open the specific settings for the measurement type.

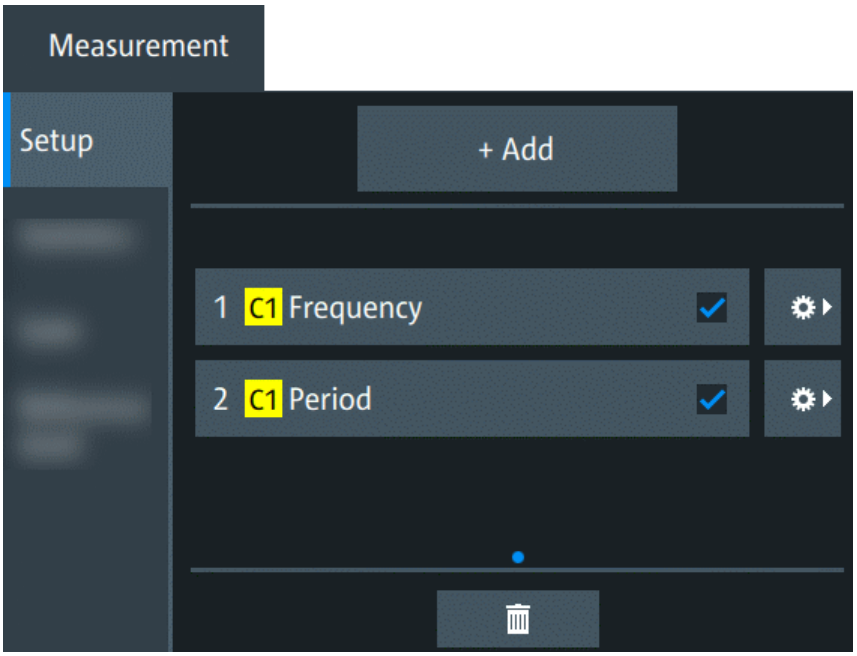

+ Add
Opens a dialog to select the measurements. See Section 10.2.1.3, "Add measurement dialog", on page 278.

Delete icon
Enables the removal of measurements. You can delete a single measurement by tapping the "Delete" icon next on it.

You can also delete all current measurements with "Delete All".

10.2.1.3 Add measurement dialog

Access: "Menu" > "Measurement" > "Setup" tab > "+ Add".

In this dialog, you select the category and the measurements to be done.

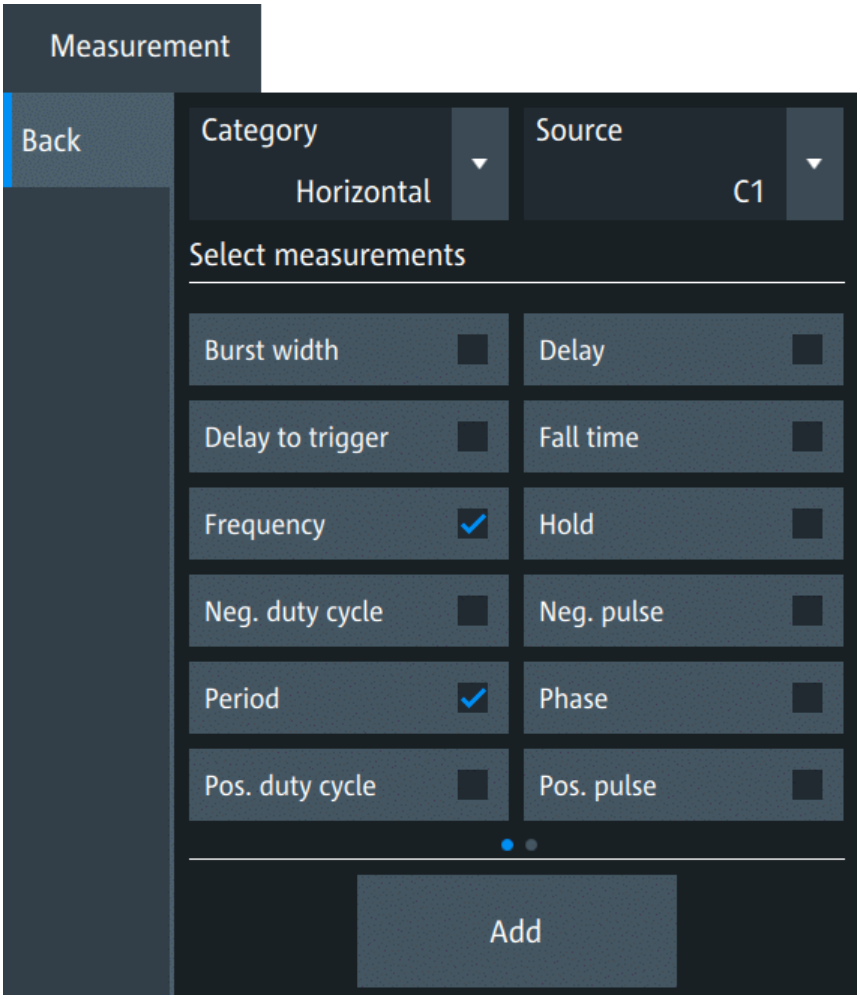

Category
Selects the measurement category. Some measurements are listed in more than one category.

The following categories are available:

- Amp/time: amplitude and time measurements, includes the categories "Horizontal", "Vertical" and "Count"
- Jitter measurements (available if the jitter option is installed)
- Histogram: measurements on waveform histograms
- Protocol: advanced analysis of serial protocols with option R&S MXO5-K500

Remote command:
In remote control, the measurements are selected directly. A preselection of the category is not neccessary.

Source
Sets the source of the measurement.

Available sources depend on the selected category. For example, histogram measurements require a waveform histogram as source, and protocol measurements require a serial bus.

The source is applied to all measurements that are selected in the dialog. You can change it later for the individual measurement.

Remote command:
MEASurement<mg>:SOURce on page 1265

Select measurements
Select the required measurements of the selected category. The list can have several pages, which are represented by dots at the bottom of the list. Tap a dot to change the page.

Remote command:
MEASurement<mg>:MAIN on page 1267

Add
Adds the selected measurements and returns to the "Setup" tab.

The measurements are listed and activated by default. You can deactivate single measurements in the "Setup" tab.

Remote command:
MEASurement<mg>[:ENABle] on page 1265
MEASurement<mg>:ACTive on page 1265

10.2.1.4 Configuration of measurement types: common settings

When you select the settings icon of a measurement in the "Setup" tab, a dialog with more setting opens. Some of these settings are common for many or all measurement types, independent of their category, others are specific for the selected measurement type.

For category and type-specific settings, see:

- Section 10.2.4.2, "Settings for amplitude/time measurements", on page 288
- Section 10.2.6.2, "Settings for jitter measurements", on page 298
- Section 10.2.5.2, "Settings for measurements on histograms", on page 295
- Section 10.2.8.2, "Settings for protocol measurements", on page 311

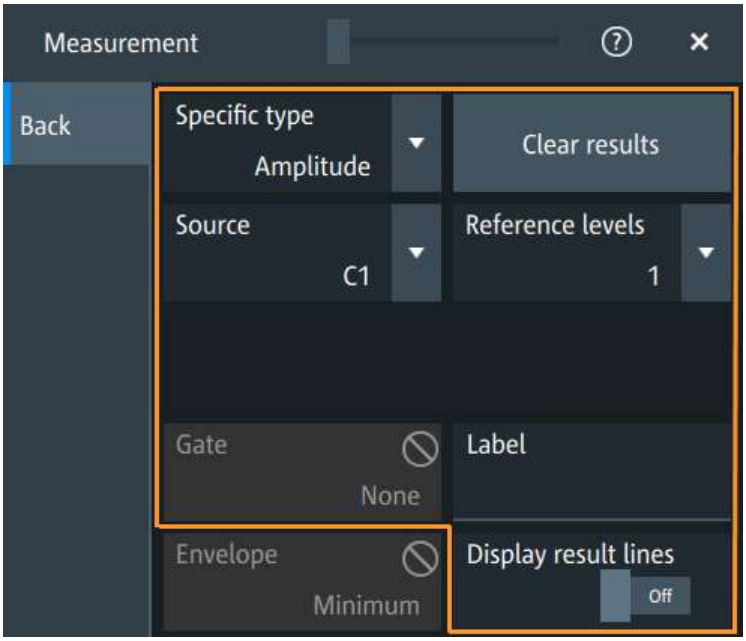

This section describes the common settings.

Specific type
Selects the type of measurement that you want to define the settings for. The list provides all measurement types of the same category.

Remote command:
`MEASurement<mg>:MAIN` on page 1267

Clear results
Deletes all results of the selected measurement.

Remote command:
`MEASurement<mg>:CLEar` on page 1268

Source
Sets the source of the measurement.

Available sources depend on the category of the measurement. For example, histogram measurements require a waveform histogram as source, and protocol measurements require a serial bus.

In setup/hold measurements, this source is the "Data source".

Remote command:
`MEASurement<mg>:SOURce` on page 1265

Reference levels
Selects the set of reference levels that is used for the measurement and for the first measurement source. Each source of the measurement can have its own reference level set. For most measurements, one source is needed. For delay measurements, for example, two measurement sources are required, and each source can have its own reference levels.

Only the numbers of defined reference level sets are listed. Define the reference level set before you select it, see Section 8.1, "Reference level setup", on page 215.

Remote command:
`MEASurement<mg>:REFLevel<rl>:REFerence` on page 1272

Gate
Assigns a gate to the selected measurement to limit the measurement range. Define a gate before you select it, see Section 8.2, "Gate setup", on page 218.

Alternativley, you can assign the gates to measurements in the "Gate" tab, see Section 10.2.3, "Gate settings for measurements", on page 283.

Remote command:
`MEASurement<mg>:GATE` on page 1268

Label
Adds a user-defined label to the measurement.

Display result lines
Enables the measurement annotations for the selected measurement. These annotations are, for example, periods, maximum and minimum values, relevant reference levels, and more.

See also: Section 10.2.9, "Annotation for measurements", on page 313.

Remote command:
`MEASurement<mg>:DISPlay:RESults` on page 1268

10.2.2 Reference levels for measurements

Access: "Menu" > "Measurement" > "Reference level" tab

Measurements require reference levels to obtain the measurement points, e.g. time measurements or pulse count. The dialog shows the definition of the selected reference level set and all active measurements. If no reference level set has been defined before, or the correct definition is missing, select "RL setup" and configure the the reference level set before you assign it. See Section 8.1, "Reference level setup", on page 215 for details.

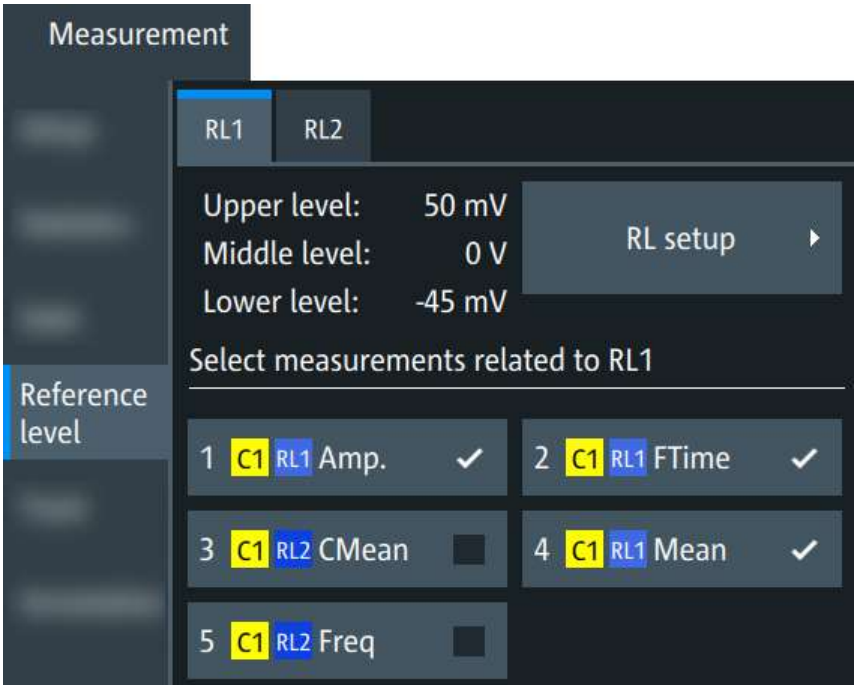

1. Select the RL subtab, e.g. "RL1".
2. Select the measurements that use the selected reference level set.

Remote command: `MEASurement<mg>:REFLevel<rl>:REFerence` on page 1272

10.2.3 Gate settings for measurements

Access: "Menu" > "Measurement" > "Gate" tab.

You can limit the measurements to a user-defined range of the waveform. The dialog shows the limits of the selected gate and all active measurements. If no gate has been defined before, or the correct gate is missing, select "Gate setup" and configure the gate before you assign it. See Section 8.2, "Gate setup", on page 218 for details.

1. Select the gate subtab, e.g. "G1".
2. Select the measurements to be limited by the selected gate.

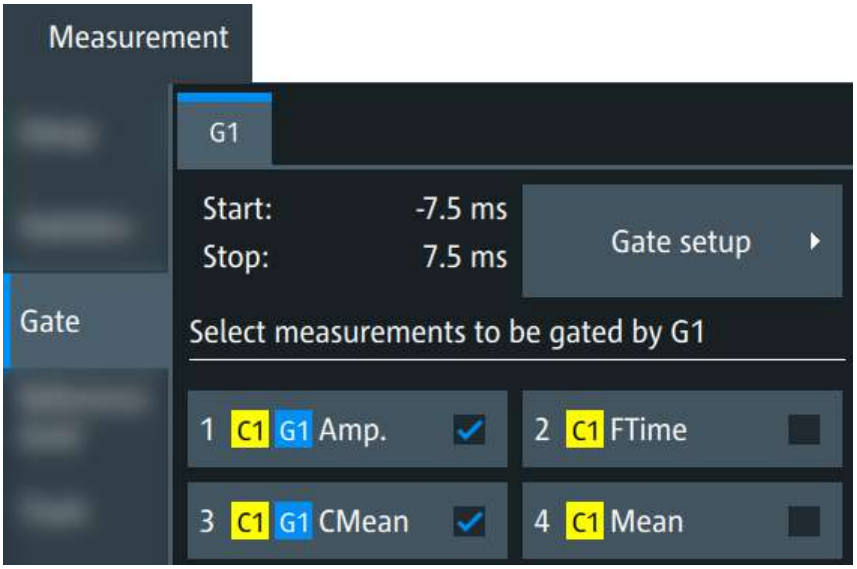

Remote command: MEASurement<mg>:GATE on page 1268.

10.2.4 Amplitude/time measurements

10.2.4.1 Overview of amplitude/time measurements

The MXO 5 provides many measurement types in the "Amp/time" category to measure time, amplitude and area characteristics, and to count pulses and edges.

Horizontal measurements (time)

Meas. type	Label	Description	Formula, graphic
Rise Time	RTime	Rise time of the first rising edge, the time it takes the signal to rise from the lower reference level to the upper reference level. Measurement of all events in the acquisition is possible.	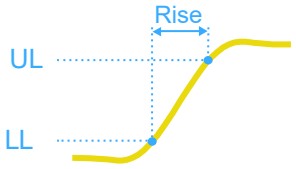
Fall Time	FTime	Fall time of the first falling edge, the time it takes the signal to fall from the upper reference level to the lower reference level. Measurement of all events in the acquisition is possible.	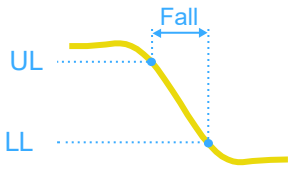
Pos. pulse	PPuls	Duration of the first positive pulse: time between a rising edge and the following falling edge measured on the middle reference level. Measurement of all events in the acquisition is possible.	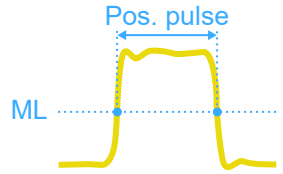

Meas. type	Label	Description	Formula, graphic
Neg. pulse	NPuls	Duration of the first negative pulse: time between a falling edge and the following rising edge measured on the middle reference level. Measurement of all events in the acquisition is possible.	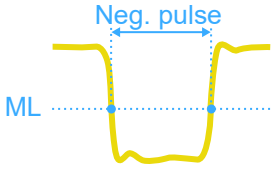
Period	T	Time between the first two consecutive waveform edges of the same direction, measured on the middle reference level. The measurement requires at least one complete period of a triggered signal. Measurement of all events in the acquisition is possible.	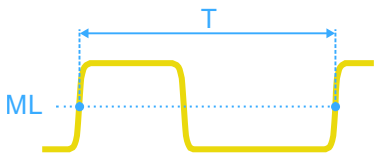
Frequency	Freq	Frequency of the signal, reciprocal value of the measured period.	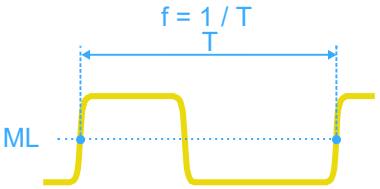
Delay	Delay	Time difference between two slopes of the same or different waveforms, measured on the middle reference level. A negative result indicates that the slope of the second source comes before the slope of the first source.	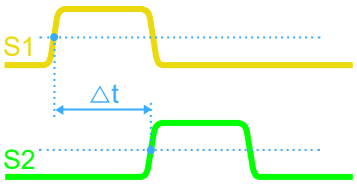
Phase	Phs in °	Phase difference between two waveforms, measured on the middle reference level.	*Phase = Delay / Period * 360* 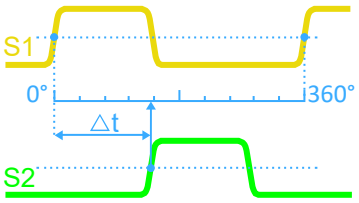
Burst width	Bst	Duration of one burst. The burst is measured on the middle reference level from the first edge to the last edge, regardless of whether these edges rise or fall.	
Setup Hold Setup/Hold time	Setup Hold SHT	Setup and Hold time measurements with positive and/or negative clock edge, measured on the middle reference level. See "Setup/Hold time measurement" on page 290.	
Setup/Hold ratio	SHR	Setup/Hold ratio measurement with positive and/or negative clock edge.	*SHR = Setup / (Setup + Hold)*
Delay to trigger	DTO	Time between the trigger point and the next signal slope, measured on the middle reference level. Slope direction can be selected. If the edge is to the left of the trigger (before trigger), the result is negative.	

Meas. type	Label	Description	Formula, graphic
Slew rate rising	SRRise in V/s = V*Hz	Steepness of the rising edge: voltage difference between the lower and higher reference level, divided by the rise time.	*SRRise = ΔV / Δt* 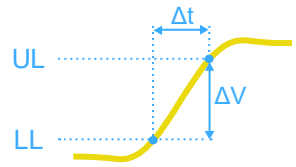
Slew rate falling	SRFall in V/s = V*Hz	Steepness of the falling edge: voltage difference between the higher and lower reference level, divided by the fall time.	*SRFall = ΔV / Δt* 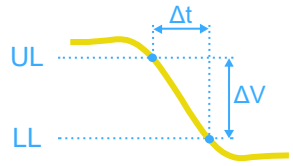
Pos. duty cycle	PDCyc	Width of the first positive pulse in relation to the period in %.	$PDCyc = \frac{T_{PosPulse}}{T_{Period}} \times 100\%$
Neg. duty cycle	NDCyc	Width of the first negative pulse in relation to the period in %.	$PDCyc = \frac{T_{NegPulse}}{T_{Period}} \times 100\%$

Vertical measurements (amplitude)

The unit of most amplitude measurement results depends on the measured source.

Meas. type	Label	Description	Formula, graphic
High	High	High level of the displayed waveform - the upper maximum of the sample distribution, or the mean value of the high level of a square wave without overshoot. The measurement requires at least one complete period of the signal. Also known as top level.	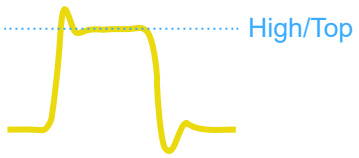
Low	Low	Low level of the displayed waveform - the lower maximum of the sample distribution, or the mean value of the low level of a square wave without overshoot. The measurement requires at least one complete period of the signal. Also known as base level.	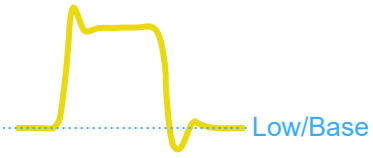
Amplitude	Amp	Difference between the high level and the low level of the signal. The measurement requires at least one complete period of the signal.	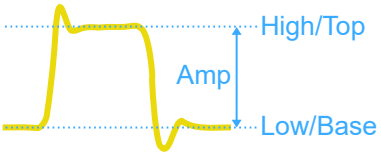
Max	Max	Maximum value within the displayed waveform.	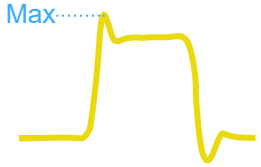

Meas. type	Label	Description	Formula, graphic
Min	Min	Minimum value within the displayed waveform.	
Peak to peak	PTP	Difference of maximum and minimum values.	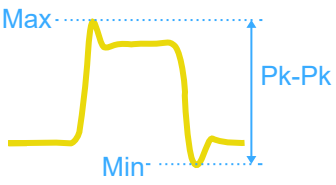
Mean	Mean	Arithmetic average of the complete displayed waveform.	$Mean = \frac{1}{N}\sum_{k=1}^{N} x^k$
RMS	RMS	RMS (root mean square) value of the voltage of the complete displayed waveform.	$RMS = \sqrt{\frac{1}{N}\sum_{k=1}^{N} {x_k}^2}$
σ (S-dev/AC-RMS)	σ	Standard deviation of one cycle, usually of the first, left-most signal period.	$\sigma = \sqrt{\frac{1}{N-1}\sum_{k=1}^{N} (x_k - Mean)^2}$
Crest factor	Crest	The crest factor is also known as the peak-to-average ratio. It is the maximum value divided by the RMS value of the displayed waveform.	$Crest = \frac{Max\,\lvert x_k \rvert}{RMS}$
Pos. Overshoot	P.OS	Overshoot of a square wave after a rising edge. It is calculated from measurement values High, local Max and Amplitude.	$OSpos = \frac{Max_{local} - High}{Amplitude} \times 100\%$
Neg. Overshoot	N.OS	Overshoot of a square wave after a falling edge. It is calculated from measurement values Low, local Min and Amplitude.	$OSneg = \frac{Low - Min_{local}}{Amplitude} \times 100\%$
Cycle Amp	CAmp	Amplitude of one cycle	
Cycle mean	CMean	Mean value of one cycle	
Cycle RMS	CRMS	RMS (root mean square) value of one cycle	
Cycle σ(S-dev)	Cycσ	Standard deviation of one cycle	
Cycle max	CMax	Maximum value of one cycle	
Cycle min	CMin	Minimum value of one cycle	
Cycle peak to peak	CPTP	Peak-to-peak value of one cycle: the difference of CMax and CMin	
Cycle crest	CCrest	Crest factor of one cycle	

Area and cycle measurements

All cycle measurements require that at least one complete period of the signal is acquired. Cycle measurements can be found in the "Amp/time" category.

Meas. type	Label	Description/result	
Area	Area	Area between the waveform and ground. T_{Eval}: evaluation time, time of a full waveform or limited by a gate	$Area = \frac{T_{Eval}}{N_{Eval}} \times \sum_{k=1}^{N_{Eval}} x(k)$
Cycle area	CArea	Area between the waveform and ground, measured for one period, see also "Area" measurement.	

Counting

Meas. type	Label	Description/result	
Pulse count	PCount	The number of positive or negative pulses of the waveform, or of both positive and negative pulses. The mean value of the signal is determined. If the signal passes the mean value, an edge is counted. A positive pulse is counted if a rising edge and a following falling edge are detected. A negative pulse is counted if a falling edge and a following rising edge are detected.	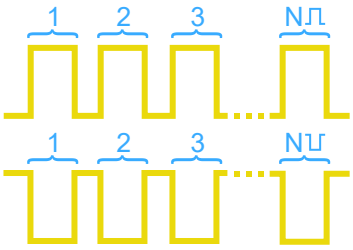
Edge count	EdCo	The number of positive or negative edges, or of both positive and negative edges. The mean value of the signal is determined, and an edge is counted every time the signal passes the mean value.	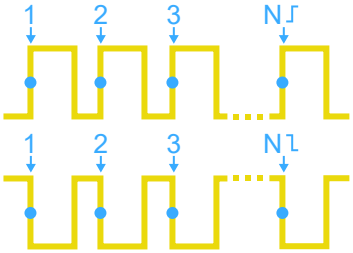

10.2.4.2 Settings for amplitude/time measurements

You can define additional parameters for some measurements.

Access: "Menu" > "Measurement" > "Setup" tab > add amplitude/time measurement > ⚙ settings of a measurement.

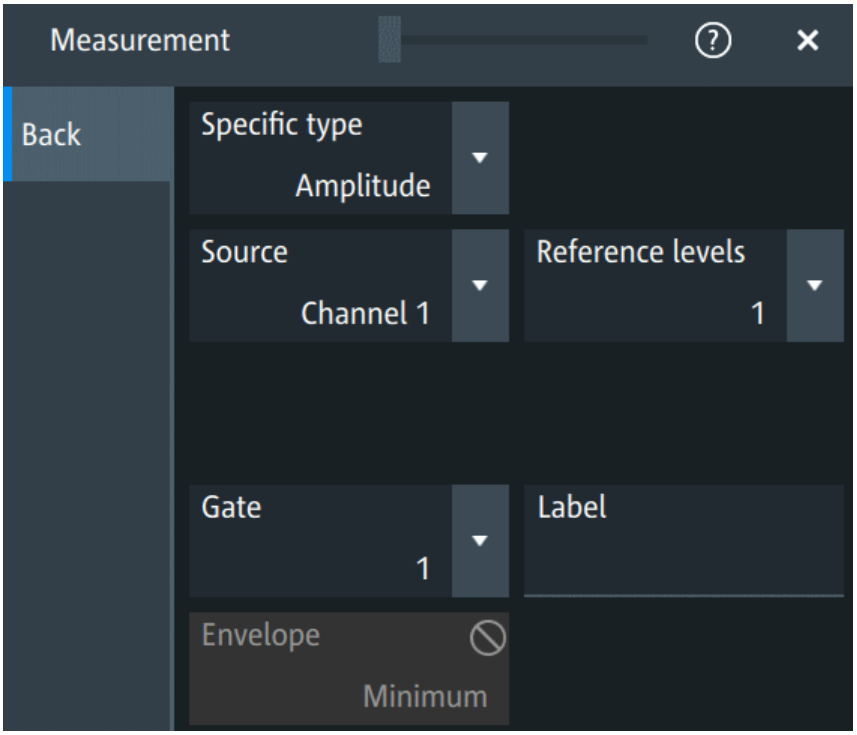

For a description of common measurement settings, see:

- "Clear results" on page 281
- "Specific type" on page 281
- "Source" on page 281
- "Reference levels" on page 281
- "Gate" on page 282
- "Label" on page 282
- "Display result lines" on page 282

Envelope
This setting is only available for measurements on envelope waveforms, see Acquisition mode.

"Both"	The upper and the lower envelope are used in measurements. For time measurements, the averages of min and max values are used, that is, the measurement is performed on the average waveform built from the upper and lower envelope.
"Maximum"	Measurements are performed on the upper envelope.
"Minimum"	Measurements are performed on the lower envelope.

Remote command:
`MEASurement<mg>:ENVSelect` on page 1269

Pulse count
Available, if "Specific type" is set to "Pulse train".

Sets the number N of positive pulses for the "Pulse train" measurement. This measurement measures the duration of N pulses, measured from the selected edge of the first pulse to the opposite edge of the N-th pulse.

Remote command:
`MEASurement<mg>:AMPTime:PTCount` on page 1270

Pulse slope
Available, if "Specific type" is set to "Pulse count" or "Pulse train".

Sets the first slope of the pulses to be counted.

"Positive" Positive pulses are counted.

"Negative" Negative pulses are counted.

"Either" Both positive and negative pulses are counted.

Remote command:
`MEASurement<mg>:AMPTime:PSLope` on page 1271

Edges slope
Available, if "Specific type" is set to "Edge count".

Sets the edge direction to be used for the selected measurement: positive, negative, or either edge.

Remote command:
`MEASurement<mg>:AMPTime:ESLope` on page 1270

Setup/Hold time measurement
Setup/Hold measurements analyze the relative timing between two signals: a data signal and the synchronous clock signal. Setup time is the time that the data signal is steady before the clock edge. Hold time is the time that the data signal is steady after the clock edge.

"Setup/Hold time" measures and displays the setup and hold durations. "Setup/Hold ratio" measurements return the ratio of the setup time to the sum of hold and setup time: $T_{Setup} / (T_{Setup} + T_{Hold})$.

The clock edge can be defined, the polarity of the data signal does not matter.

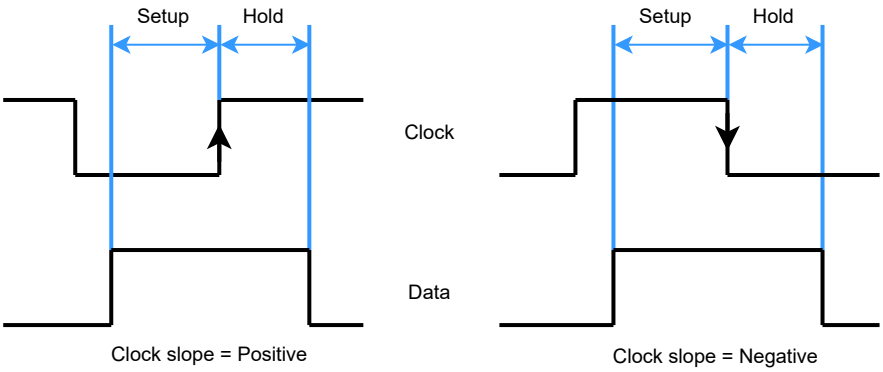

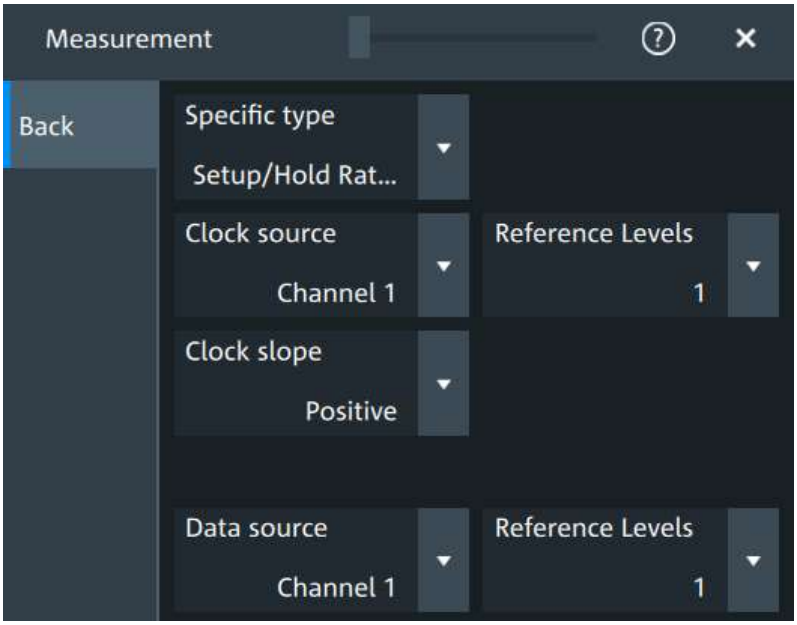

Source 2, Clock source ← Setup/Hold time measurement
Sets the waveform used as the clock for the setup/hold measurement, or the second source waveform for delay and phase measurements.

Remote command:
`MEASurement<mg>:SSRC` on page 1267

Clock slope ← Setup/Hold time measurement
Sets the edge of the clock from which the setup and hold times are measured: positive, negative, or either of them. If "Either" is selected, the clock edges next to the data edge are considered regardless of the clock slope.

Remote command:
`MEASurement<mg>:AMPTime:CSLope` on page 1270

Data source ← Setup/Hold time measurement
Sets the source for the data signal. See also: "Source" on page 281.

Delay and phase measurement
The specific settings for delay measurement allow you to measure the time between any two slopes at any reference level. Therefore, the reference levels and the slopes must be defined for each source individually. The measurement result is negative if the edge of the second source comes before the edge of the first source.

To measure the phase difference between two waveforms, you also set the slope, direction and reference level for each source individually. You can also specify the phase unit.

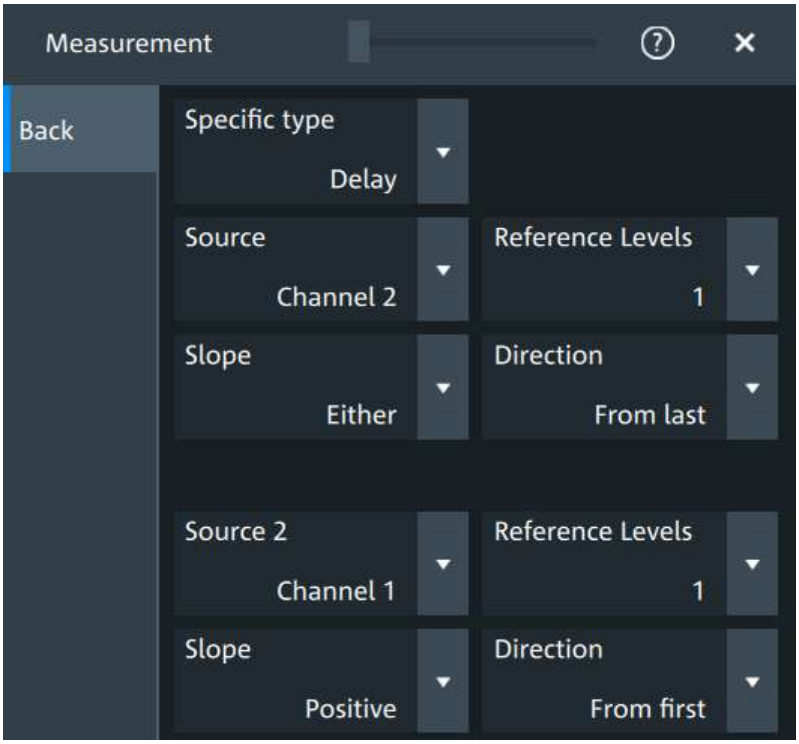

Slope ← Delay and phase measurement
Available, if "Specific type" is set to "Phase" or "Delay".

Sets the edge direction to be used for the selected measurement: positive, negative, or either edge.

Remote command:
`MEASurement<mg>:AMPTime:DELay<n>:SLOPe` on page 1272

Direction ← Delay and phase measurement
Selects the direction for counting slopes for each source: from the beginning of the waveform, or from the end.

Remote command:
`MEASurement<mg>:AMPTime:DELay<n>:DIRection` on page 1271

Phase unit ← Delay and phase measurement
Selects the unit of the oase: degrees or radians.

Remote command:
`MEASurement<mg>:AMPTime:PHASe:UNIT` on page 1272

Delay to trigger measurement settings
Delay to trigger measures the time between the trigger point and the following slope of a waveform. The delay between the trigger and the slope can be high compared to the accuracy of the acquisition, and the trigger point can even be outside of the current acquisition.

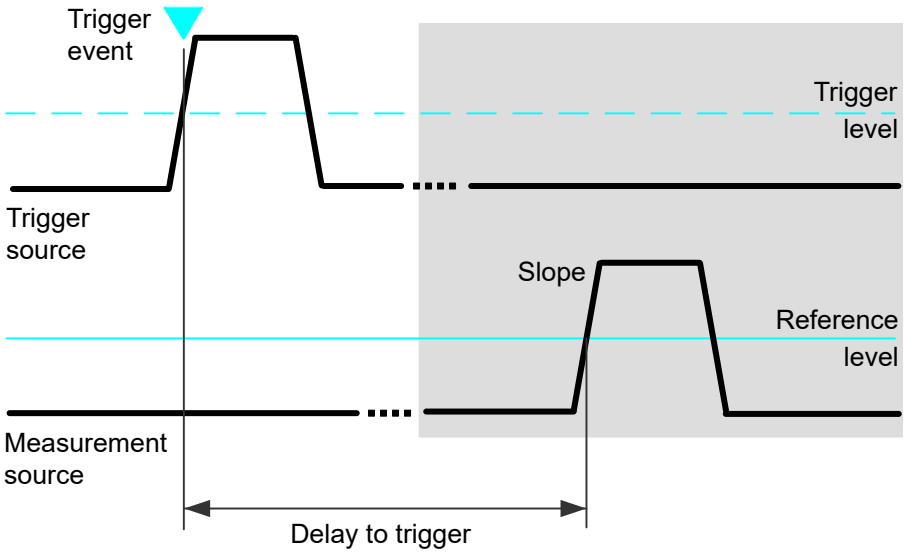

To configure the trigger conditions, use the trigger setup.

"Edges slope" Sets the edge direction to be used for delay measurement: positive, negative, or either edge.

Remote command:
`MEASurement<mg>:AMPTime:DTOTrigger<n>:SLOPe` on page 1271

Unit (slew rate measurements)
Sets the denominator of the unit for slew rate measurements.

10.2.5 Histogram measurements

You can perform measurements on waveform histograms.

Note that graphical changes on the display, e.g. changing the diagram size or the size of the result table, reset the histogram measurements in run mode and also in stop mode.

10.2.5.1 Overview of measurements on histograms

The specific measurement types for waveform histograms are provided in the "Histogram" category. To see these measurement types, an active waveform histogram is required.

To select and activate measurements in remote control, use:

- `MEASurement<mg>:MAIN` on page 1267
- `MEASurement<mg>[:ENABle]` on page 1265
- `MEASurement<mg>:ACTive` on page 1265

Meas. type	Label	Description, result	Graphic
Histogram peak	HPeak	The maximum sample value in the histogram.	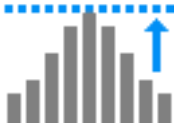
Histogram samples	HSamp	The number of samples from all acquisitions included in the current histogram.	
Maximum	HMax	The highest signal value with a probability > 0.	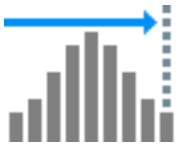
Mean	HMean	The weighted arithmetic average of the histogram.	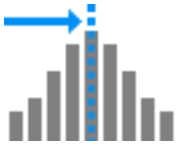
Minimum	HMin	The lowest signal value with a probability > 0.	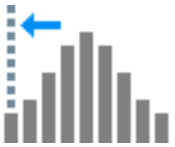
Max - Min	MxMn	The range of signal values with a probability > 0.	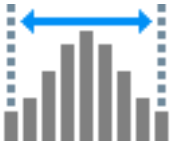
Median	Med	The signal value for which half the samples lie above, the other half below in the histogram. The sample count of one signal value after the other are accumulated until half the total number of samples in the histogram is reached. The signal value for which 50% of the samples are accumulated is the median.	
Peak value	Peak	The signal value at the histogram peak.	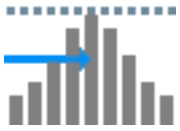
Lower peak value	LPeak	The signal value at the maximum sample value in the lower half of the histogram.	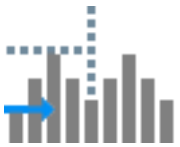
Upper peak value	UPeak	The signal value at the maximum sample value in the upper half of the histogram.	

Meas. type	Label	Description, result	Graphic
σ(S-dev)	H σ	Standard deviation of the sample numbers.	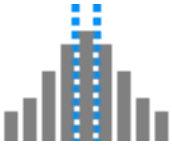
Mean ± σ	Mn±σ	Percentage of samples in the range between (mean value + standard deviation) and (mean value - standard deviation).	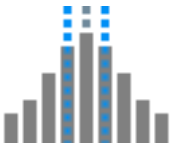
Mean ± 2 * σ	Mn±2*σ	Percentage of samples in the range between (mean value + 2 * standard deviation) and (mean value - 2 * standard deviation)	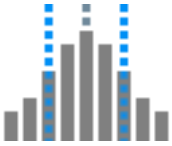
Mean ± 3 * σ	Mn ±3*σ	Percentage of samples in the range between (mean value + 3* standard deviation) and (mean value - 3* standard deviation)	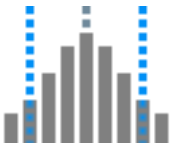
Marker - P	Mkr-%	The marker value (according to the selected probability domain marker type) minus the defined limit. The value is restricted to the histogram range.	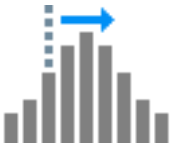
Marker + P	Mkr+%	The marker value (according to the selected probability domain marker type) plus the defined limit. The value is restricted to the histogram range.	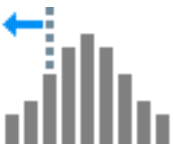
Waveform count	WCount	The number of waveforms the histogram is based on.	

10.2.5.2 Settings for measurements on histograms

Access: "Menu" > "Measurement" > "Setup" tab > add histogram measurement > ⚙ settings of a measurement.

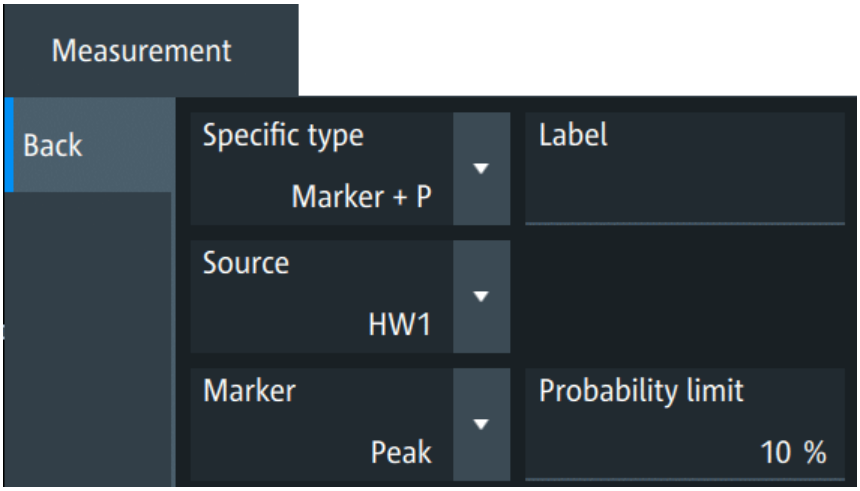

For most measurements on histograms, only common settings are required.

The measurement types "Marker + P" and "Marker - P" require additional settings.

For a description of common measurement settings, see:

- "Specific type" on page 281
- "Clear results" on page 281
- "Source" on page 281
- "Label" on page 282

Marker
Defines the marker position in the probability domain.

The setting is relevant for measurements "Marker + P" and "Marker - P".

"Peak"	The y-value with the maximum sample value in the histogram
"Upper Peak"	The y-value at the maximum sample value in the upper half of the histogram
"Lower Peak"	The y-value at the maximum sample value in the lower half of the histogram
"Maximum"	The highest y-value with a probability > 0
"Minimum"	The lowest y-value with a probability > 0
"Median"	The y-value for which half the samples lie above, the other half below in the histogram
"Mean"	The weighted arithmetic average of the histogram

Remote command:
`MEASurement<mg>:HISTogram:PROBability:TYPE` on page 1273

Probability limit
Defines a range around the marker.

The setting is relevant for measurements "Marker + P" and "Marker - P".

Remote command:
`MEASurement<mg>:HISTogram:PROBability:LIMit` on page 1273

10.2.6 Basic jitter analysis (option R&S MXO5-K12)

10.2.6.1 Overview of basic jitter measurements

The specific measurements for basic jitter analysis are provided in the "Jitter" category.

To select and activate measurements in remote control, use:

- `MEASurement<mg>:MAIN` on page 1267
- `MEASurement<mg>[:ENABle]` on page 1265
- `MEASurement<mg>:ACTive` on page 1265

Table 10-1: Jitter measurements

Meas. type	Label	Description	Formula, graphic
Cycle-cycle duty cycle	CCDCyc	Difference between the duty cycle of two adjacent cycles. The measurement is based on the duty cycle measurement. You can select the pulse polarity for the duty cycle measurement.	$\Delta R_{Cyc\ k} = R_{Cyc\ k+1} - R_{Cyc\ k}$ for $k = 1,...,K-1$
Cycle-cycle width	CCWid	Difference between the pulse width of two adjacent cycles. The measurement is based on the pulse width measurement. You can select the pulse polarity to be measured.	$\Delta T_{Pulse\ k} = T_{Pulse\ k+1} - T_{Pulse\ k}$ for $k = 1,...,K-1$
Cycle-cycle jitter	CCJit	Difference between the periods of two adjacent cycles. The measurement is based on the period measurement. You can select the slope and the reference level on which the period is measured.	$\Delta T_{Period\ k} = T_{Period\ k+1} - T_{Period\ k}$ for $k = 1,...,K-1$ 
N-cycle jitter	NCJit	Difference between the time of two adjacent groups of N cycles (periods) each. You can select the slope and the reference level on which the time is measured, and the number of periods in the groups.	$\Delta T_{Ncycle\ k} = T_{Ncycle\ k+1} - T_{Ncycle\ k}$ for k = *cycle group index* 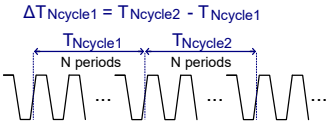
Time interval error	TIE	Time difference between the slope of the input signal and the slope of a reference signal. The reference signal can be a captured clock waveform, or a clock generated by clock data recovery (CDR, software algorithm or hardware generation). You can select the slope and the reference level on which the TIE is measured.	$TIE_k = t_{Signal\ k} - t_{Clock\ k}$ for $k = 1,...,K$ 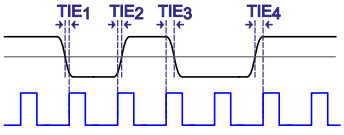
Unit interval	UI	Period of the clock signal. If no clock signal is available, it is recovered by CDR. The period is calculated as the time difference between two consecutive clock edges of the same polarity.	$UI_k = t_{Clock\ k+1} - t_{Clock\ k}$ for $k = 1,...,K-1$
Data rate	DR	Frequency of the clock signal. If no clock signal is available, it is recovered by CDR. The measurement is based on the unit interval measurement.	$R_{Clock\ k} = 1 / UI_k$ for $k = 1,...,K-1$

Meas. type	Label	Description	Formula, graphic
Skew delay	SkwD	Delay between the edges of two interdependent waveforms. The measurement is a simplified variant of the "Delay" measurement assuming that both sources are similar except for the delay.	*Skew delay* = $\Delta t_k = t_{Source2} - t_{Source1}$ for $k = 1,...,K$ 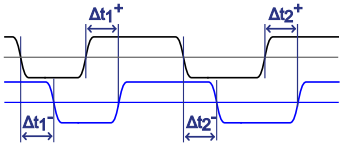
Skew phase	SkwP	Phase difference between the edges of two waveforms.	*Skew phase = Skew delay / Period * 360°* = $\Delta t_k / \Delta T_{Period\ k} * 360°$

10.2.6.2 Settings for jitter measurements

Access: "Menu" > "Measurement" > "Setup" tab > add jitter measurement > ⚙ settings of a measurement.

For a description of common measurement settings, see:

- "Specific type" on page 281
- "Source" on page 281
- "Reference levels" on page 281
- "Gate" on page 282
- "Label" on page 282

Settings for cycle-cycle measurement

The cycle-cycle measurements are used to analyze the quality of clock signals. They require a few additional settings for period and pulse width measurement.

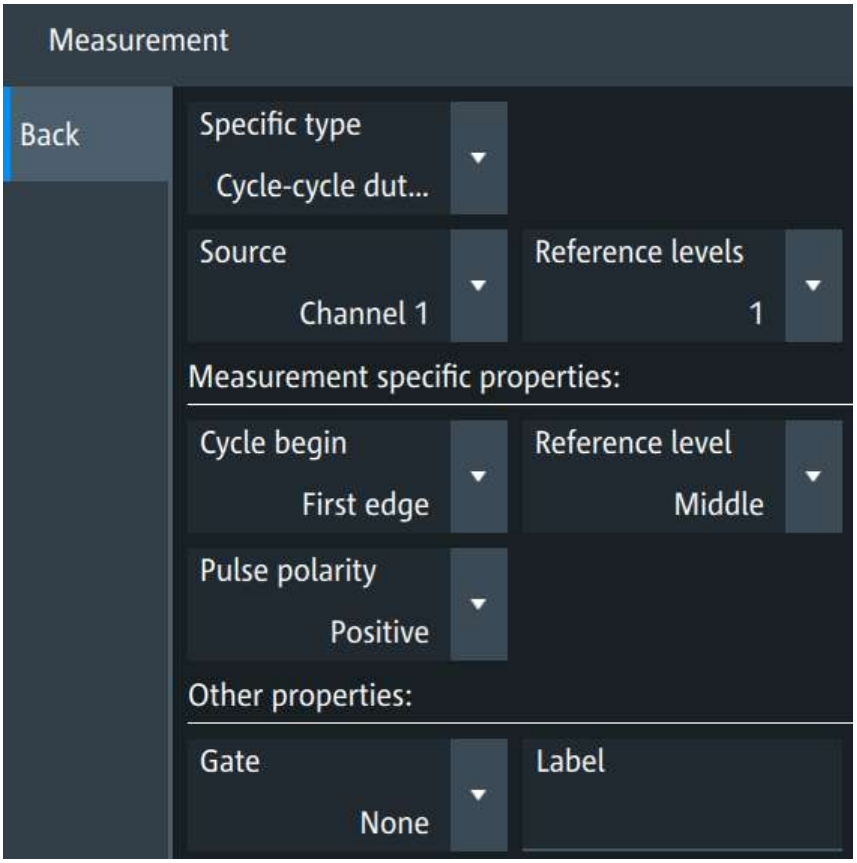

Figure 10-1: Setup for cycle-cycle duty cycle measurement

Cycle begin, Slope
For cycle-cycle jitter, N-cycle jitter, and cycle-cycle duty cycle measurements, "Cycle begin" selects the slope at which the periods and thus the jitter is measured: first edge, positive, negative or either.

For time-interval error measurements, "Slope" sets the edges of the data signal that are used for measurements: positive, negative or either.

"First edge" Measures the period from the first edge that is found, no matter of its direction.

"Positive" Measures the period at positive going edges.

"Negative" Measures the period at negative going edges.

"Either" Measures the period at both positive and negative going edges. This option is useful, for example, to check the clock stability of a double data rate clock.

Remote command:
`MEASurement<mg>:JITTer:SLOPe` on page 1276

Pulse polarity
For cycle-cycle width and the cycle-cycle duty cycle measurements, "Pulse polarity" sets the polarity of pulses for which the pulse width is measured: positive or negative.

For skew delay and skew phase measurements, "Edge polarity" sets the edge of the first waveform from which the measurements starts: positive, negative or either.

Remote command:
MEASurement<mg>:JITTer:POLarity on page 1275

Reference level
Selects the reference level that is used for time measurements.

Remote command:
MEASurement<mg>:JITTer:REFLevel<rl> on page 1275

Number of cycles
Sets the number of periods (cycles) that are accumulated to measure the N-cycle jitter.

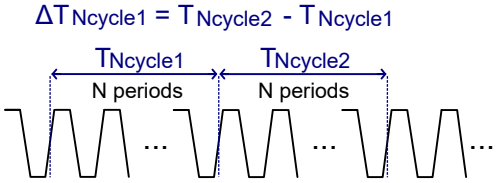

Remote command:
MEASurement<mg>:JITTer:NCYCles on page 1274

Settings for delay measurements

Skew delay and skew phase measurements are intended to measure the time difference between the edges of two waveforms. The measurements are simplified variants of the "Delay" and "Phase" measurements assuming that both sources are similar except for the delay.

Source 1, Source 2
"Source 1" is the reference signal, and "Source 2" is the signal compared to the reference signal.

Skew delay = $\Delta t_k = t_{Source2} - t_{Source1}$ for $k = 1,...,K$

See also: "Clock slope" on page 291.

Remote command:
MEASurement<mg>:SOURce on page 1265

Edge polarity
See "Pulse polarity" on page 299.

Relative polarity
Sets the edge of the second waveform relative to the first waveform.

"Matching" Measures from positive to positive edge or from negative to negative edge.

"Inverse" Measures from positive to negative edge or from negative to positive edge.

Remote command:
MEASurement<mg>:JITTer:RELPolarity on page 1276

Reference level
Selects the reference level that is used for time measurements on "Source 2".

Remote command:
`MEASurement<mg>:JITTer:REFLevel<rl>` on page 1275

Settings for data measurements

The following measurements are intended to analyze serial data:

- Time interval error
- Unit interval
- Data rate

The clock can be a captured clock signal, or it can be recovered from the data signal. The clock or CDR is configured in the "Timing reference" dialog, see Section 8.3, "Timing reference", on page 219.

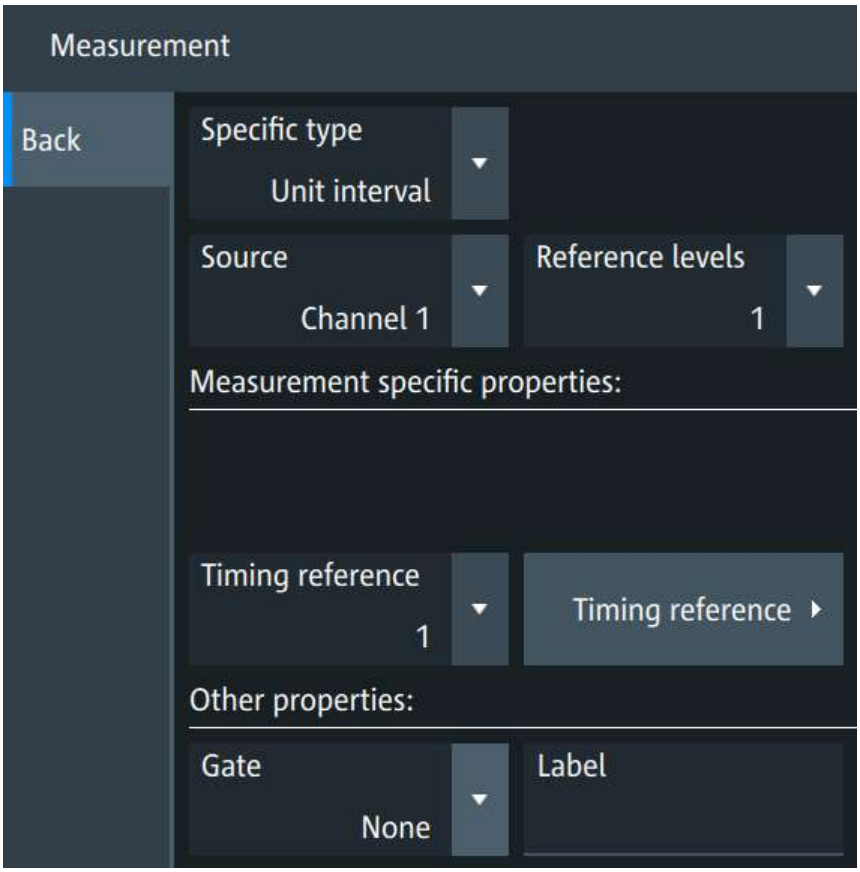

Figure 10-2: Setup for unit interval measurement

Slope
Sets the edges of the data signal that are used for measurements. The setting is relevant for time-interval error measurements.

See also: "Cycle begin, Slope" on page 299.

Timing reference
Selects the timing reference, which is one of the available clock configurations.

For configuration of the timing reference, see Section 8.3, "Timing reference", on page 219.

Remote command:
`MEASurement<mg>:JITTer:TREF` on page 1277

Unit
Sets the unit to bps (bit per second), or to Hz for analysis of radar signals. The setting is available for data rate measurements.

Remote command:
`MEASurement<mg>:JITTer:UNIT` on page 1277

10.2.7 Eye measurements (option R&S MXO5-K136)

The measurements on eye diagrams are used for evaluation of signal quality and show the combined effects of channel noise and intersymbol interference. By creating histograms of the eye diagram, important jitter parameters can be determined. See also: Section 12.7.1, "Calculation and display of eye diagrams", on page 459.

Eye measurements are done on active configured eye diagrams. For configuration, see Section 12.7.2, "Eye diagram setup", on page 459.

The following characteristic values can be determined:

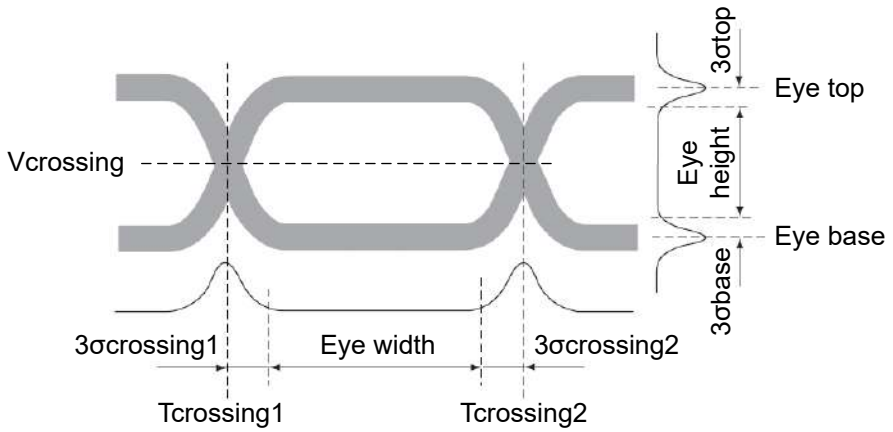

Figure 10-3: Basic eye diagram characteristics

Eye top = Mean of the upper vertical histogram
σtop = Standard deviation of the upper vertical histogram
Eye base = Mean of the lower vertical histogram
σbase = Standard deviation of the lower vertical histogram
Tcrossing = First and second mean of the horizontal histogram
σcrossing = Standard deviation of the horizontal histogram

10.2.7.1 Overview of eye measurements

The specific measurement types for eye diagrams are provided in the "Eye" category. To see these measurement types, an active eye diagram is required.

To select and activate measurements in remote control, use:

- `MEASurement<mg>:MAIN` on page 1267
- `MEASurement<mg>[:ENABle]` on page 1265
- `MEASurement<mg>:ACTive` on page 1265

Table 10-2: Eye measurements

Meas. type	Description/Result
Extinction ratio (%)	The extinction ratio is an indication of efficiency. It describes the ratio of the power used to transmit a logic level 1, to the energy used to transmit a logic level 0. The MXO 5 provides extinction ratio measurements as a percentage, and in decibels. *ER(%) = Eye base / Eye top * 100* Prerequisite: *Eye base > 0* and *Eye top > 0* because the extinction ratio is defined only for positive values.
Extinction ratio (dB)	Extinction ratio in decibels. The fraction is inverted in comparison to ER(%). *ER(dB) = 10log (Eye top / Eye base)*
Eye height	The vertical eye opening indicates the sensitivity of the transmission to noise. With algorithm "Three sigma": *(Eye top – 3 * σtop) – (Eye base + 3 * σbase)* With algorithm "Actual": eye height is calculated in a user-defined window, in % of the eye period.
Eye width	The horizontal eye opening indicates the time range during which the sampling of the logical state is possible. With algorithm "Three sigma": *(Tcrossing2 – 3 * σcrossing2) – (Tcrossing 1 – 3 * σcrossing1)*
Eye top	Mean of the upper vertical histogram, mean value of a logic 1 inside a window defined in in the measurement defaults. The default window is 40% – 60% of the eye period. The eye top is also known as level 1.
Eye base	Mean of the lower vertical histogram, mean value of a logic 0 inside a window defined in in the measurement defaults. The default window is 40% – 60% of the eye period. The eye base is also known as level 0.
Q factor	*Q factor = (Eye amplitude) / (σtop + σbase)*
Noise (RMS)	Quadratic mean of the noise of eye top and eye base. *Noise(RMS) = (σtop + σbase)/2*
S/N ratio	Signal-to-noise ratio *SNR = 10log (Eye amplitude / Noise(RMS)*
Duty cycle distortion	Difference of mean time of rising and falling edges at a user defined level relative to the difference of crossing times. The default level is 50% of the amplitude.
Eye rise time	Duration for signal to rise from 10% to 90% of the high signal level.

Meas. type	Description/Result
Eye fall time	Duration for signal to fall from 90% to 10% of the high signal level.
Eye bit rate	Frequency between two crossings. *Eye bit rate = 1 / difference of crossing times*
Eye amplitude	*Eye amplitude = Eye top - Eye base*
Jitter (peak to peak)	Average of the jitter for both crossing points. *Jitter = (σcrossing1 + σcrossing2) / 2*
Jitter (6 * σ)	*Jitter (6 * σ) = Jitter (RMS) * 6*
Jitter (RMS)	Standard deviation of a histogram around crossing time at crossing level or at a user defined level.
Crossing points (%)	Percentage of points crossing the eye. *Eye crossing = 100 * (Crossing level - Eye base) / (Eye top - Eye base)*

10.2.7.2 Settings for eye measurements

Common settings for all eye measurement types

Access: "Menu" > "Measurement" > "Setup" tab > add eye measurement > ⚙ settings of a measurement.

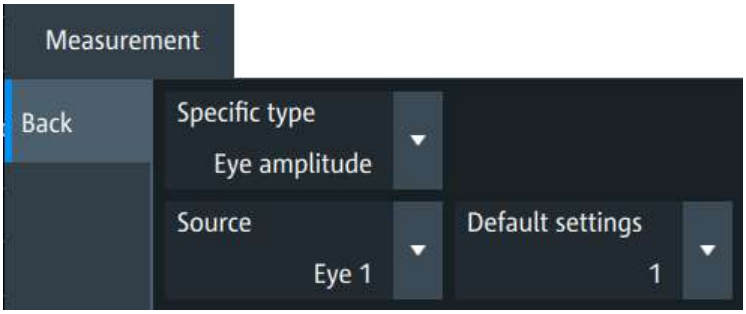

Specific type
Selects the specific measurement type of eye measurements.

Source
See "Source" on page 281.

Default settings
Selects the default measurement configuration.

Remote command:
`MEASurement<mg>:EYE:DEFSettings` on page 1281

Default settings for all eye measurement types

The settings in the "Defaults" tab are relevant for all eye measurements. You can define up to 8 sets of default measurement configurations.

Access: "Menu" > "Measurement" > "Defaults" tab

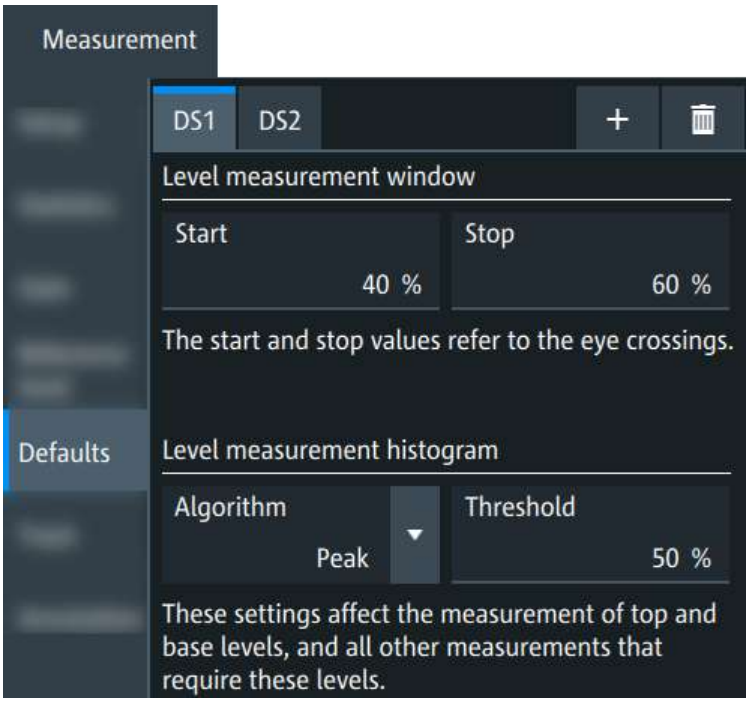

Start, Stop
Define the global start and stop times for the eye measurements.

Remote command:
`MDEFaults:SETTings<m>:EYE:RELative:STARt` on page 1278
`MDEFaults:SETTings<m>:EYE:RELative:STOP` on page 1279

Algorithm
Selects the algorithm, which defines how to compute the top and base levels and the corresponding sigma values.

"Mean"	Mean value of the histogram. The Sigma value is the standard deviation of the histogram.
"Peak"	Maximum peak of the histogram. Only values corresponding to this peak are used to compute sigma.
"Inner peak"	Inner peak of the histogram. Only values corresponding to this peak are used to compute sigma.
"Outer peak"	Outer peak of the histogram. Only values corresponding to this peak are used to compute sigma.

Remote command:
`MDEFaults:SETTings<m>:EYE:ALGorithm` on page 1277

Threshold
Sets the threshold that is used to separate peaks. Two peaks are separated if they are split by a valley of height *Threshold * Maximal_histogram_value*.

The threshold is only relevant for the peak algorithms.

Remote command:
MDEFaults:SETTings<m>:EYE:THReshold on page 1279

Specific settings for eye measurement types

Access: "Menu" > "Measurement" > "Setup" tab > add eye measurement > ⚙ settings of a measurement.

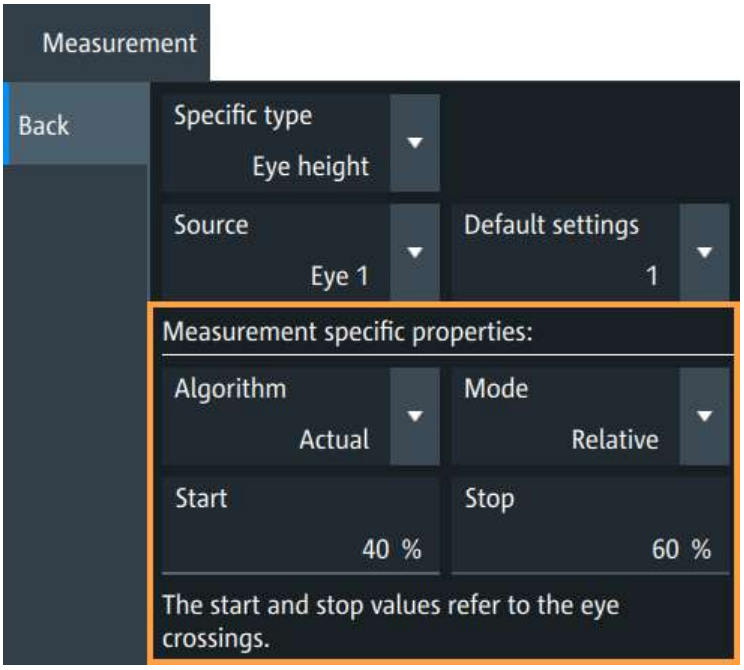

Figure 10-4: Settings for eye height measurement. The same settings are used for eye width measurements.

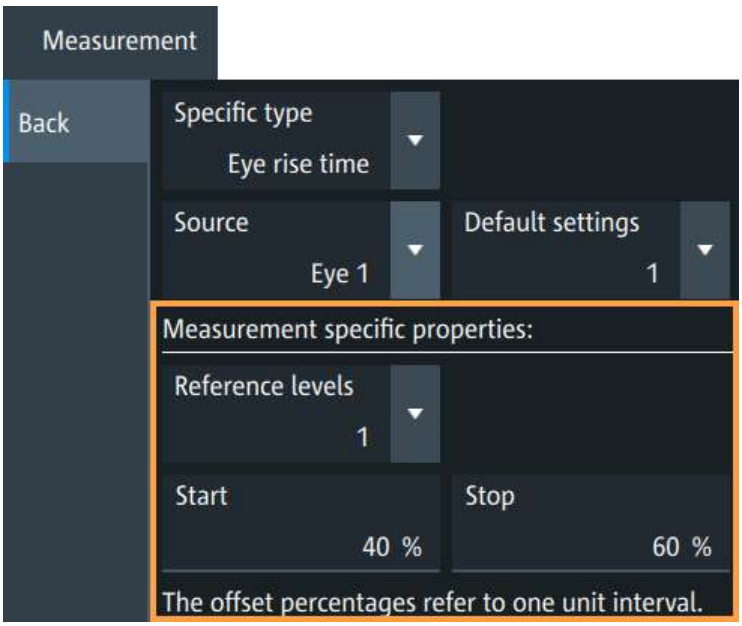

Figure 10-5: Settings for eye rise and fall time measurements

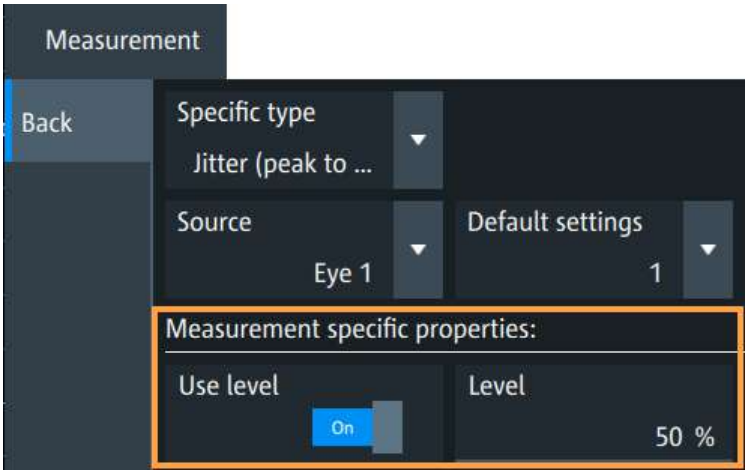

Figure 10-6: Settings for jitter measurements

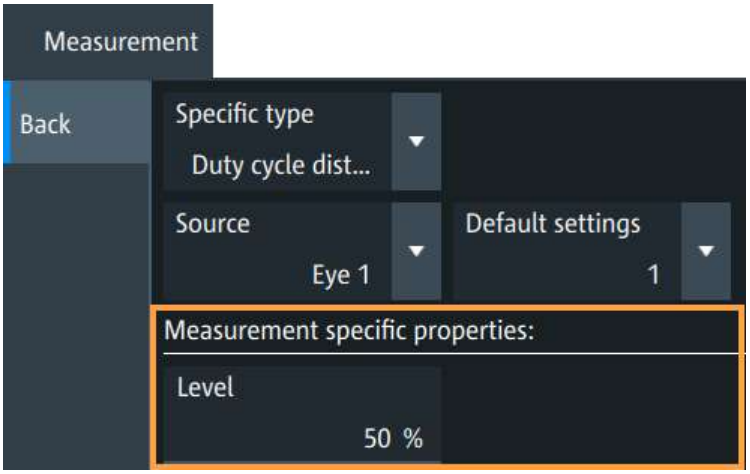

Figure 10-7: Settings for duty cycle measurement

Algorithm (for eye height, eye width)
Selects the algorithm for the measurement of the eye height and eye width.

"Three sigma" The eye height is measured with the settings defined in the "Defaults" tab:
Eye height = (Eye top - 3σtop) - (Eye base + 3σbase)
The eye width is measured at the crossing level:
Eye width = (Tcrossing2 - 3σcrossing2) - (Tcrossing1 + 3σcrossing1)

"Actual" The actual height is the vertical distance between the top and the bottom of the eye opening at the sampling point. It represents the range of levels over which the signal can reliably distinguish between logical 1 and logical 0. The default window is 40% - 60% of the eye period. Specific start and stop values are used for calculation.

"Maximum"	The maximum height is the theoretical maximum vertical distance between the highest possible 1 level and the lowest possible 0 level. The default measurement window is 40% - 60% of the eye period. The maximum width of an eye diagram is the maximum horizontal distance between the points where the ideal eye opening crosses the decision threshold level. Perfect signal timing, no jitter and no distortions are assumed. Specific start and stop values are used for maximum calculation.
"Crossing level"	The eye width is measured at the crossing level.
"Meas. window"	The eye width is measured as the horizontal distance between the points where the eye opening crosses the threshold level. Specific start and stop values are used for calculation.

Remote command:
`MEASurement<mg>:EYE:ALGorithm` on page 1280

Mode (for eye height, eye width)
Selects between absolute and relative values for the measurement-specific start and stop values.

Remote command:
`MEASurement<mg>:EYE:MODE` on page 1282

Start, Stop (for eye height, eye width)
Set the absolute start and stop values for the selected algorithm.

Remote command:
`MEASurement<mg>:EYE:ABSolute:STARt` on page 1280
`MEASurement<mg>:EYE:ABSolute:STOP` on page 1280

Start, Stop (eye height and width, rise/fall time)
Set the relative start and stop values for the selected algorithm of eye height and eye width measurements.

For rise time and fall time eye measurements, the settings define the offset before and after the first eye crossing. Only values inside the specified horizontal range are considered for the measurements.

Remote command:
`MEASurement<mg>:EYE:RELative:STARt` on page 1282
`MEASurement<mg>:EYE:RELative:STOP` on page 1283

Use level (jitter)
If enabled, you can define a user-defined level for the jitter measurements on eye diagrams ("Jitter (peak to peak)", "Jitter (RMS)", "Jitter (6 * σ)").

Remote command:
`MEASurement<mg>:EYE:USELevel` on page 1283

Level (jitter, duty cycle)
Defines the relative level for the jitter measurements on eye diagrams if "Use level" is on. The setting also defines the level for duty cycle distortion measurement.

Remote command:
MEASurement<mg>:EYE:LEVel on page 1281

10.2.8 Protocol measurements (option R&S MXO5-K500)

10.2.8.1 Overview of protocol measurements

The specific measurement types for protocol measurements are provided in the "Protocol" category. To see these measurement types, an active serial bus is required.

To select and activate measurements in remote control, use:

- MEASurement<mg>:MAIN on page 1267
- MEASurement<mg>[:ENABle] on page 1265
- MEASurement<mg>:ACTive on page 1265

Meas. type	Label	Description/result	
Frame/frame	F2F	The time from the start of one frame to the start of the next frame.	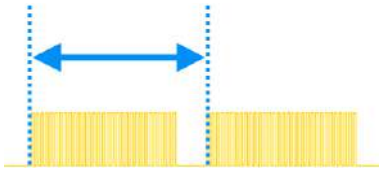
Trig/frame	T2F	The time from a trigger event to the start of the next frame.	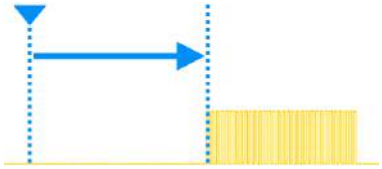
Frame/trig	F2T	The time from the start of a frame to the next trigger event.	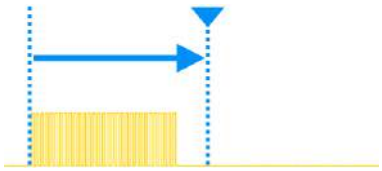
Field value	FVal	The value of a selected field in a frame.	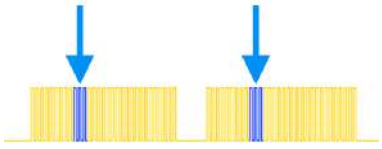
Main bit rate	BPS	The nominal bits per second (bps) in a selected frame. The measurement ignores, for example, gaps in a LIN frame or a bus park bit in an RFFE or SPMI frame.	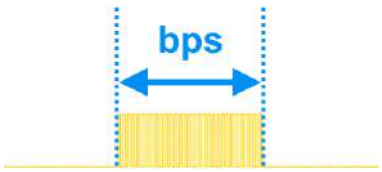

Meas. type	Label	Description/result	
2nd bit rate	BPS2	Like main bit rate, but optional for protocols with multiple bit rates, e.g. CAN/CAN-XL, SPMI or RFFE write / read.	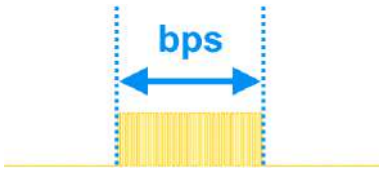
Bus idle	Idle	Percentage of idle times between all frames in an acquisition.	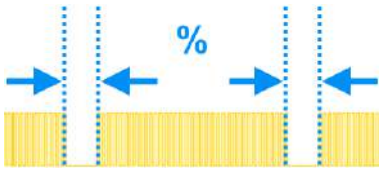
Gap	Gap	The gap time (not necessarily idle) between two frames.	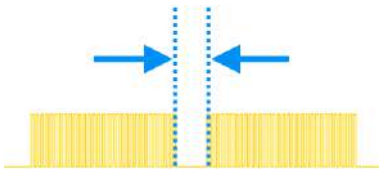
Frame count	FCnt	The number of complete frames in an acquisition.	
Frame errors	FECnt	The number of erroneous frames in an acquisition.	
FER	FER	The frame error rate, hence the percentage of erroneous frames in an acquisition.	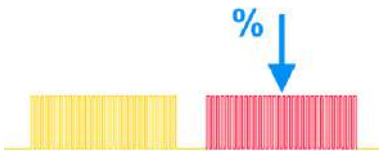
Cons FER	CFER	The frame error rate (percentage) of two or more consecutive erroneous frames.	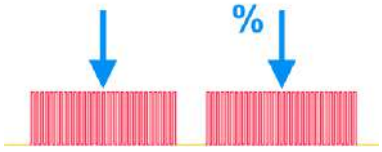
RS errors	RSErr	Available only in the 1000BASE-T1 protocol: The number of transmission errors in a PHY frame, in which the forward error correction algorithm of the Reed-Solomon decoder can correct up to 25 errors.	

10.2.8.2 Settings for protocol measurements

You can define additional parameters for some protocol measurements.

Access: "Menu" > "Measurement" > "Setup" tab > add protocol measurement > ⚙ settings of a measurement.

Available only, if "Source" = "Serial Bus N".

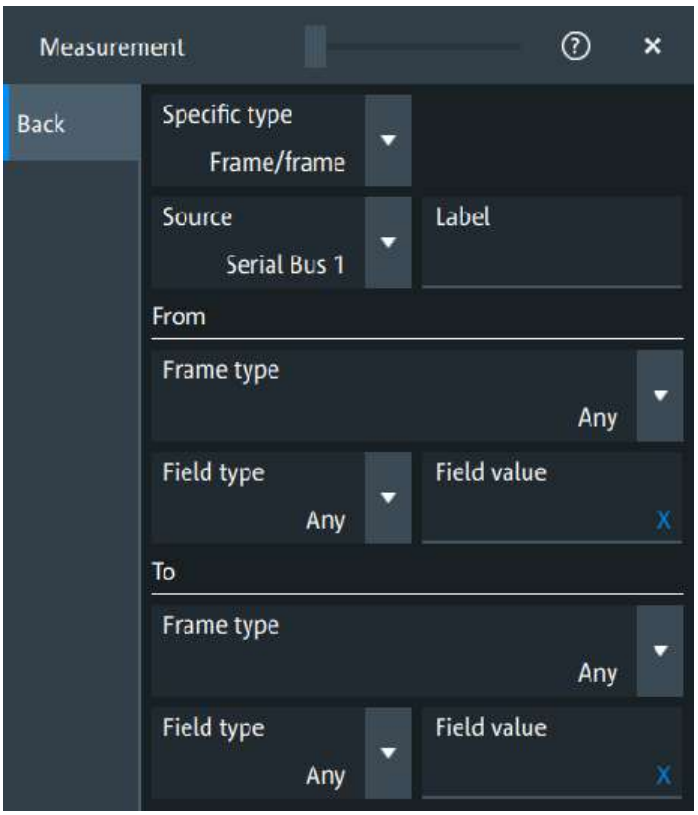

For a description of common measurement settings, see:

- "Specific type" on page 281
- "Clear results" on page 281
- "Source" on page 281
- "Label" on page 282

Frame Identification or From

"Frame Identification" is available only for the measurement types "Frame/trig", "Trig/frame" and "Field value". "Frame Identification" specifies where the measurement is executed.

"From" is available only for the measurement type "Frame/frame", which requires a "From" - "To" condition. "From" specifies where the measurement starts.

All other measurement types do not require these settings.

Frame Type ← Frame Identification or From
In a "Frame Identification", this setting specifies the type of the frame at which the measurement is executed.

In a "From" - "To" condition, this setting specifies the type of the frame at which the measurement starts.

Remote command:
`MEASurement<mg>:PROTocol:FNAMe` on page 1284

Field Type ← Frame Identification or From
In a "Frame Identification", this setting specifies the type of the field at which the measurement is executed.

In a "From" - "To" condition, this setting specifies the type of the field at which the measurement starts.

Remote command:
`MEASurement<mg>:PROTocol:FDName` on page 1284

Field Value ← Frame Identification or From
In a "Frame Identification", this setting specifies the value of the field at which the measurement is executed.

In a "From" - "To" condition, this setting specifies the value of the field at which the measurement starts.

Remote command:
`MEASurement<mg>:PROTocol:FDValue` on page 1284

To
"To" is available only for the measurement type "Frame/frame", which requires a "From" - "To" condition. "To" specifies where the measurement ends.

Frame Type ← To
Specifies the type of the frame at which the "Frame/frame" measurement ends.

Remote command:
`MEASurement<mg>:PROTocol:F2Name` on page 1284

Field Type ← To
Specifies the type of the field at which the "Frame/frame" measurement ends.

Remote command:
`MEASurement<mg>:PROTocol:FD2Name` on page 1285 (used also for Tracked)

Field Value ← To
Specifies the value of the field at which the "Frame/frame" measurement ends.

Remote command:
`MEASurement<mg>:PROTocol:FD2Value` on page 1285

Tracked
Available only for the measurement type "Field value". This setting selects the field type to be displayed.

Remote command:
`MEASurement<mg>:PROTocol:FD2Name`, the same command is used for Field Type.

10.2.9 Annotation for measurements

Measurement annotations mark the significant places in the diagram, for example, periods, maximum and minimum values, relevant reference levels, and more. The lines help understand the measurement results.

In the "Annotation" tab, you can select the measurements to be annotated. Alternatively, you can enable "Display result lines" in the "Setup" of a selected measurement. See "Display result lines" on page 282.

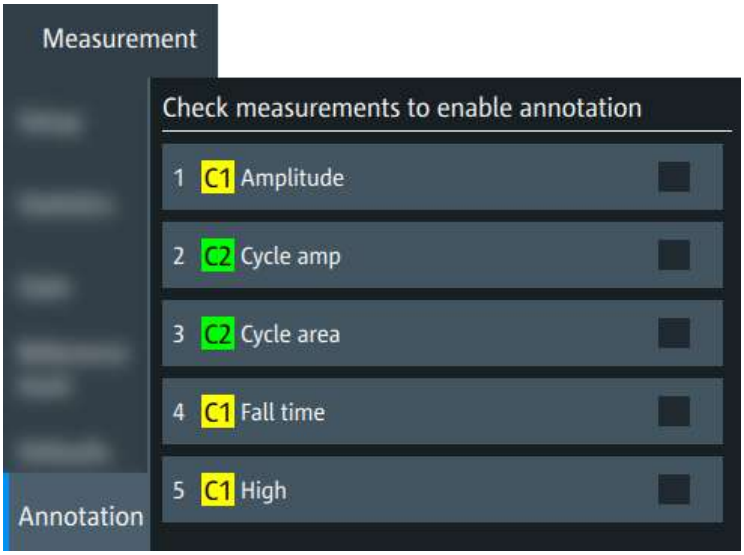

The "Check measurements to enable annotations" list shows all active measurements. The list is empty if no measurement is active. Configure and activate the measurements first, then select them for annotation.

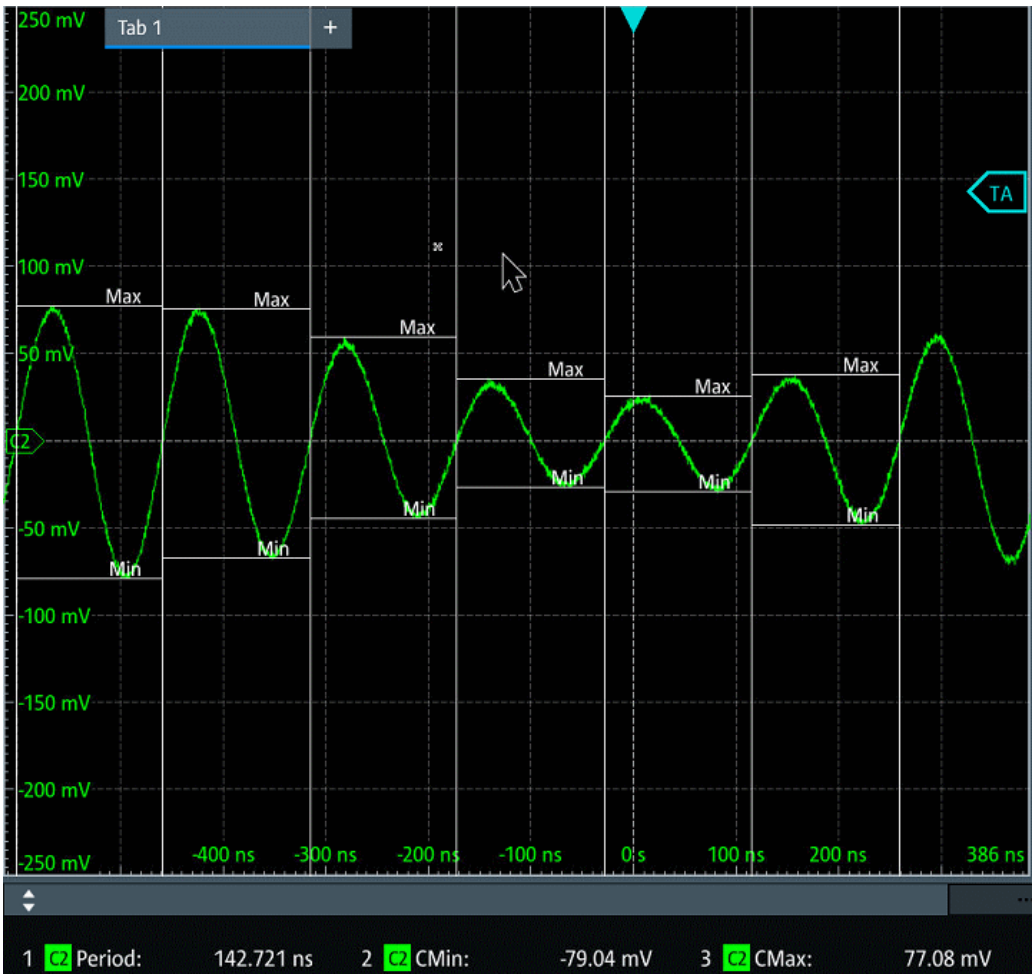

Figure 10-8: Example of annotations for cycle measurements

10.2.10 Measurement results

The measurement results are shown in a table below the grid.

Dashes (---) indicate that no valid waveform is available, for example, if the source waveform is off.

For further analysis of measurement results, the following evaluations are available:

- Section 10.2.11.1, "Statistics", on page 315
- Section 10.2.11.2, "Track", on page 317

You can save the measurement results to file, see Section 13.6, "Results", on page 494.

10.2.11 Analysis of measurement results

The behavior of measurement results over time can be evaluated in different ways, for example, with statistics and tracks.

- Statistics....315
- Track....317
- Histograms on measurement results....321

10.2.11.1 Statistics

In addition to the current measurement results, you can enable a statistical evaluation. It returns the current, minimum and maximum measurement values, the average and standard deviation, and the number of measured waveforms. The results are shown in a separate tab below the grid. If the cursor measurement is active simultaneously, its results are shown beside the statistics results.

If statistics are enabled, the following results are calculated. .

Label	Description
Max	Positive peak value (maximum)
Min	Negative peak value (minimum)
Mean	Arithmetic mean (average)
RMS	Root mean square
σ (S-dev)	Standard deviation
Rel. σ	Relative standard deviation (*S-dev / Mean*)
Event count	Number of measured events (e.g. rising edges, pulses etc.)
Wave count	Number of waveforms (acquisitions) the measurement is based on

Access: "Menu" > "Measurement" > "Statistics" tab.

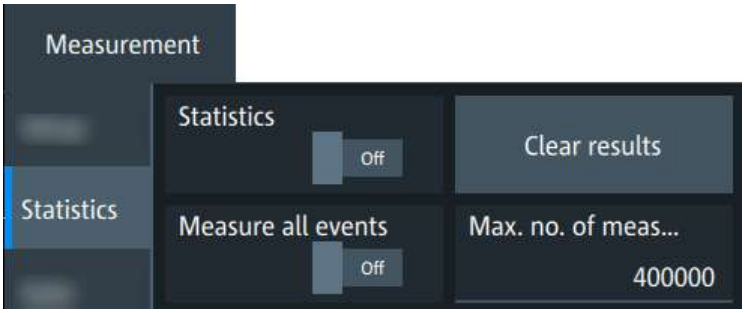

Statistics
Activates or deactivates the statistical evaluation for all measurements.

Remote command:
`MEASurement<mg>:STATistics[:ENABle]` on page 1288

Clear results
Deletes the statistical results for all measurements including the histogram, and starts a new statistical evaluation.

Remote command:
`MEASurement<mg>:STATistics:ARESet` on page 1288
To delete results of individual measurements, use `MEASurement<mg>:CLEar` on page 1268 or `MEASurement<mg>:STATistics:RESet` on page 1268.

Measure all events
Normally, only one measurement is performed for each acquired waveform to get best performance. If "Measure all events" is enabled, more than one result is taken from one acquired waveform and the results are included in evaluation. For example, the rise time is measured on all pulses in the waveform, not only on the first.

The result table shows only the first result of the waveform, the following results are used only for evaluation. The number of considered results can be restricted: see Max. No. of events.

Measuring all events is useful when calculating statistics and histograms. It can also be useful when generating tracks; however, it reduces the performance of the instrument.

The setting affects all measurements, it is a global setting. However, if a track is enabled for a selected measurement, all results are considered for this measurement, independent from the global setting.

Remote command:
`MEASurement<mg>:MULTiple` on page 1289

Max. No. of events
Sets the maximum number of measured events per acquisition.

Remote command:
`MEASurement<mg>:MNOMeas` on page 1289

10.2.11.2 Track

A track shows the measurement results over time for an acquired waveform. The track is the graphical interpretation of all measurement values of a single acquisition. Furthermore, the track reveals trends of change in the analysis and preserves the timing relationship of the measurement results to the signal.

Tracks can be enabled for each active measurement. Enabling the track also enables "Measure all events" for the selected measurement.

To analyze tracks, you can use cursor measurements, zoom, mathematics and spectrum.

Track activation

Access: "Menu" > "Measurement" > "Track" tab.

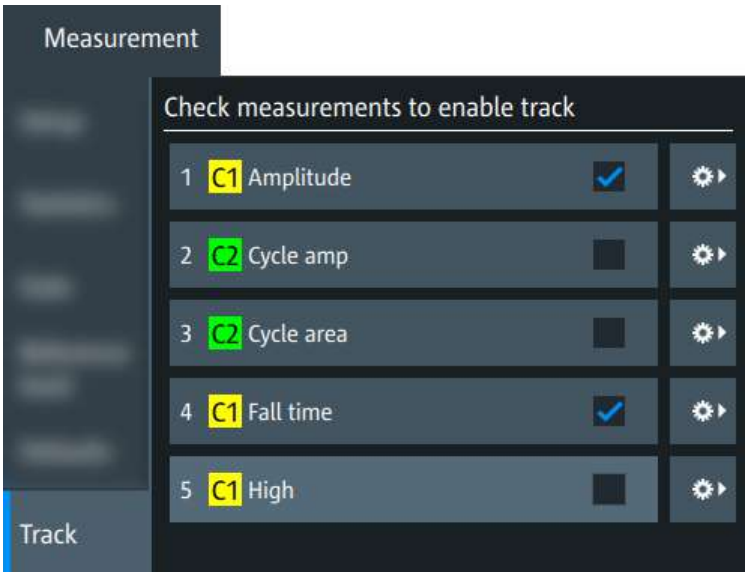

Figure 10-9: Measurement selection for tracks

Check measurements to enable track
The list shows all active measurements. The list is empty if no measurement is active. Enable the measurements first, then select them for track analysis.

Select the checkbox of a measurement to enable the track for this measurement.

Tap the settings icon to open the track settings.

Track settings

Access: "Menu" > "Measurement" > "Track" tab > tap measurement button.

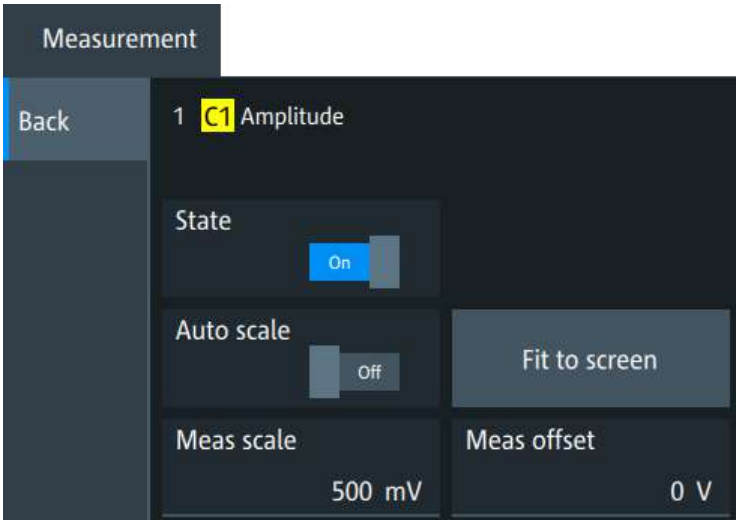

Figure 10-10: Track settings

State
Enables or disables the track for the selected measurement.

Enabling the track also enables "Measure all events" for the selected measurement.

Remote command:
`MEASurement<mg>:TRACk[:STATe]` on page 1290

Auto scale
Performs an automatic scaling whenever the track does not fit in the diagram during the measurement period.

Remote command:
`MEASurement<mg>:TRACk:CONTinuous` on page 1290

Fit to screen
Sets the vertical scale and the offset of the track, so that the complete height of the diagram is used.

Remote command:
`MEASurement<mg>:TRACk:AUTO` on page 1290

Meas scale
Defines the vertical scale of the track diagram. If "Auto scale" is on, the current scale value is displayed.

You can also select the track waveform and use the vertical [Scale] knob to change the scale.

Remote command:
`MEASurement<mg>:TRACk:SCALe` on page 1291

Meas offset
Defines the offset of the track waveform. If "Auto scale" is on, the current offset value is displayed.

You can also select the track waveform and use the vertical [Position] knob to change the offset.

Remote command:
`MEASurement<mg>:TRACk:OFFSet` on page 1290

Examples of track usage

The examples in this section provide ideas on how you can use tracks for waveform analysis.

Tracks with math functions

Figure 10-11: Tracks used in math functions

The example is set up as follows:

- Waveform on channel 1
- 3 measurements on C1: positive duty cycle, period and positive pulse width
- Enable track for each measurement: Track 1 (positive duty cycle), Track 2 (period), Track 3 (positive pulse width)
- Math1 = Trk1 * Trk2
- Math2 = Math1 / 100
  Expected values: Period * Pos. duty cycle / 100 = Positive pulse width, i.e. Math2 = Trk3
- Math3 = Math2 - Trk3
  Expected values = 0

Spectrum on tracks

Figure 10-12: Track and spectrum on this track. C1 is not in the diagram.

The example is set up as follows:

- Waveform on channel 1
- Period measurement on C1
- Enable track for the period measurement: Track 1
- Spectrum with "Source" = Track 1
- Enable "Peak list" > "Peak on waveform"

Zoom on tracks

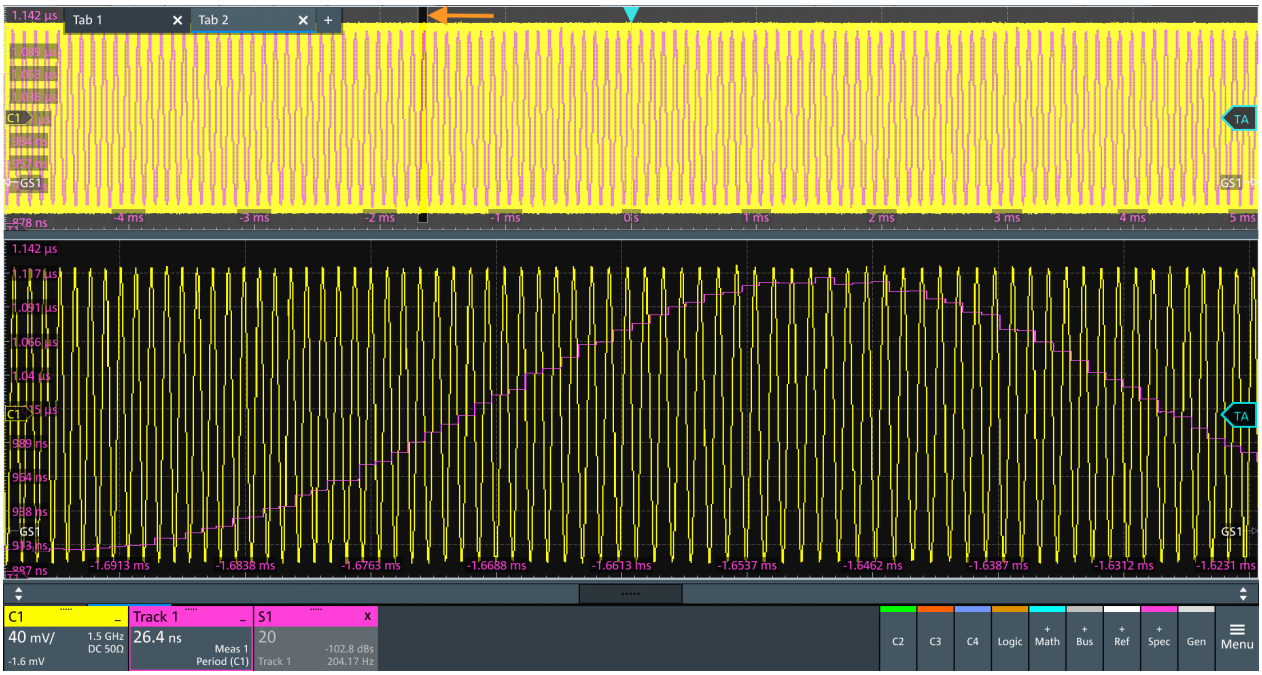

Figure 10-13: Track and C1 in the upper diagram, zoom below

The example is set up as follows:

- Waveform on channel 1
- Period measurement on C1
- Enable track for the period measurement: Track 1.
- Drag and drop the track on the channel waveform.
- Create zoom.

10.2.11.3 Histograms on measurement results

Access: "Menu" > "Measurement" > "Histogram" tab.

Histograms are available not only for channel, math and reference waveforms, but also for measurement results. A histogram on measurement results is the cumulative occurrence distribution of measurement results in a graphic. Each histogram is shown in a separate diagram; one histogram per measurement can be created. The source is a measurement, and all events in all acquisitions are measured and included in the histogram.

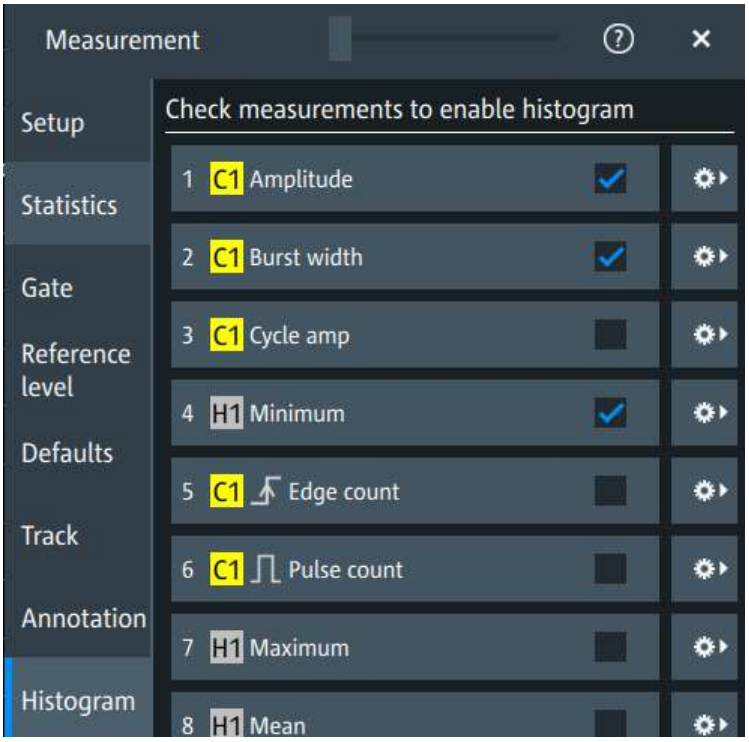

The list shows all active measurements. The list is empty if no measurement is active. Enable and configure the measurements first, then select them for histogram analysis.

1. Select the checkbox of a measurement to enable the histogram for this measurement.
2. Tap the settings icon to open the histogram settings for the selected measurement.

Histogram settings

Access: "Menu" > "Measurement" > "Histogram" tab > Settings of a measurement

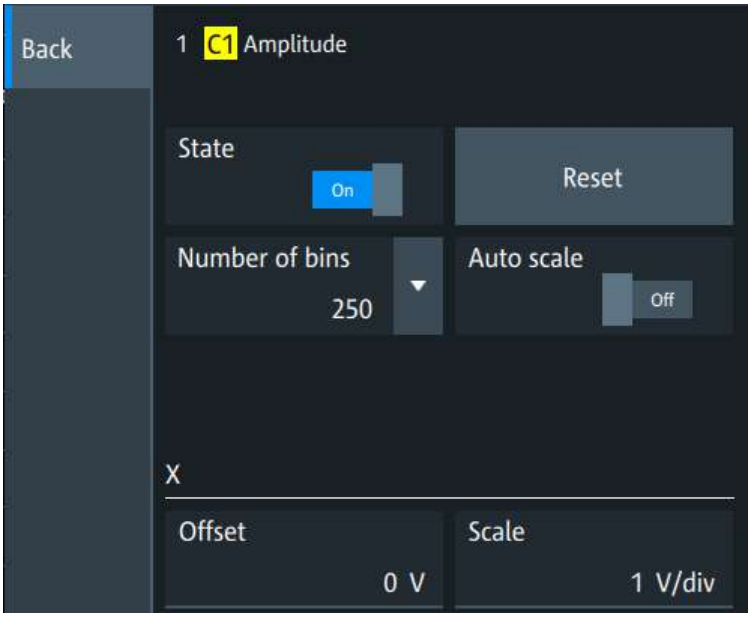

State
Enables the histogram for the selected measurement. Enabling the histogram enables also the statistics and "Measure all events".

Remote command:
`MEASurement<mg>:STATistics:HISTogram[:ENABle]` on page 1293

Reset
Resets the cumulation of measurement results, all bins are set to zero.

Remote command:
`MEASurement<mg>:STATistics:HISTogram:RESet` on page 1294

Number of bins
Sets the number of columns (bins) to be displayed in the histogram. Cumulative histogram values are kept if you change the number of bins.

Remote command:
`MEASurement<mg>:STATistics:HISTogram:HBINs` on page 1293

Auto scale
If on, the range on the x-axis is continuously adjusted to the measured values. If off, you can set the offset and the scale of the histogram.

The unit of the x-axis is the unit of the measurement, e.g. Volt for an amplitude measurement.

Remote command:
`MEASurement<mg>:STATistics:HISTogram:AUTOscale` on page 1293

Offset
Sets the center value of the histogram on the x-axis if "Auto scale" is off. The offset is the measurement result in the middle of the histogram.

Remote command:
MEASurement<mg>:STATistics:HISTogram:HORizontal:OFFSet on page 1293

Scale
Sets the horizontal scale of the histogram if "Auto scale" is off.

Remote command:
MEASurement<mg>:STATistics:HISTogram:HORizontal:SCALe on page 1294

Analysis of histograms on measurement results

To view the histogram in more detail, use the zoom.

You can export the histogram data to file, one histogram per file. See Section 13.5, "Histogram data export", on page 490.

For remote transfer of histogram data, use EXPort:HMEasurement<m>:DATA:HEADer? and EXPort:HMEasurement<m>:DATA[:VALues]?.

11 Spectrum analysis

The MXO 5 provides an easy way to set up a spectrum analysis. The spectrum settings are independent of the time domain settings but the time and frequency domains are time-correlated.

You can analyze spectrum traces in various ways:

- Use peak lists.
- Use zoom.
- Perform cursor measurements.
- Export the spectrum data to files.
- Retrieve and transmit spectrum data for further analysis using remote commands.

11.1 Fundamentals of spectrum analysis

During spectrum analysis, a signal in the time domain is converted to a spectrum of frequencies. As a result, either the magnitude or the phase of the determined frequencies can be displayed. Spectrum analysis can be restricted to an extract of the original time base, and the results display can be restricted to a specified frequency range.

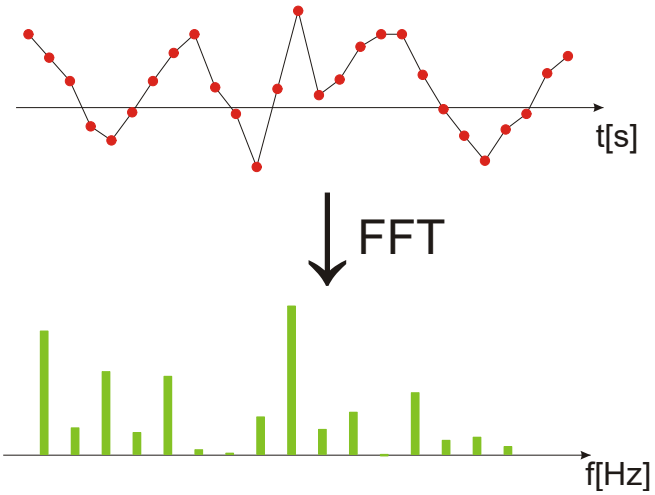

Frames in FFT

By default, one FFT per acqusition is calculated. The MXO 5 can calculate multiple FFTs per acquisition by dividing one record length into several *frames*. Thus, the MXO 5 can visualize how the frequency content of a signal changes over time which helps to detect intermittent or sporadic signal details. Furthermore, the MXO 5 allows consecutive frames to overlap. This is especially useful in conjunction with window functions since it enables a gap-free frequency analysis of the signal.

The overlapping factor can be set freely. The higher the overlap factor, the more frames are used. This leads to more individual results and improves detection of transient signal effects. However, it also extends the duration of the calculation. The

size of the frame depends on the number of input signal values (record length), the overlap factor, and the number of samples used for FFT calculation.

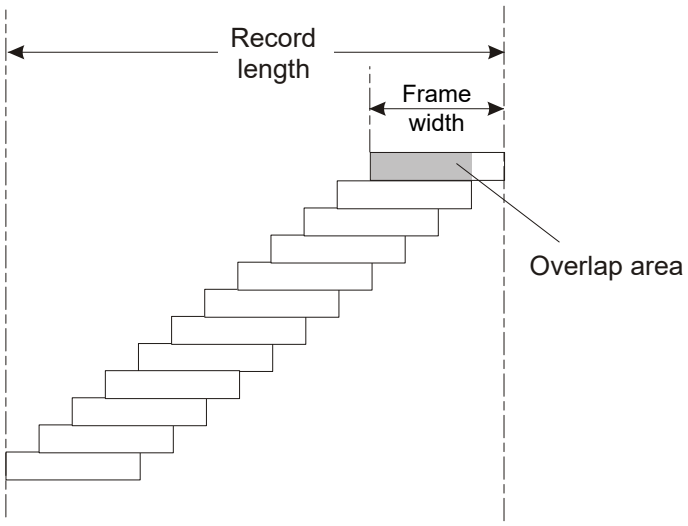

Window functions

Each frame is multiplied with a specific window function after sampling in the time domain. Windowing helps minimize the discontinuities at the end of the measured signal interval and thus reduces the effect of spectral leakage, increasing the frequency resolution.

There are several window functions that can be used in FFT analysis. Each of the window functions has specific characteristics, including some advantages and some trade-offs. Consider these characteristics carefully to find the optimum solution for the measurement task.

For details, see "Window type" on page 332.

Gating functions

You can restrict the time base of the input signal for which spectrum analysis is to be performed. You can define start and stop times for the time base extract.

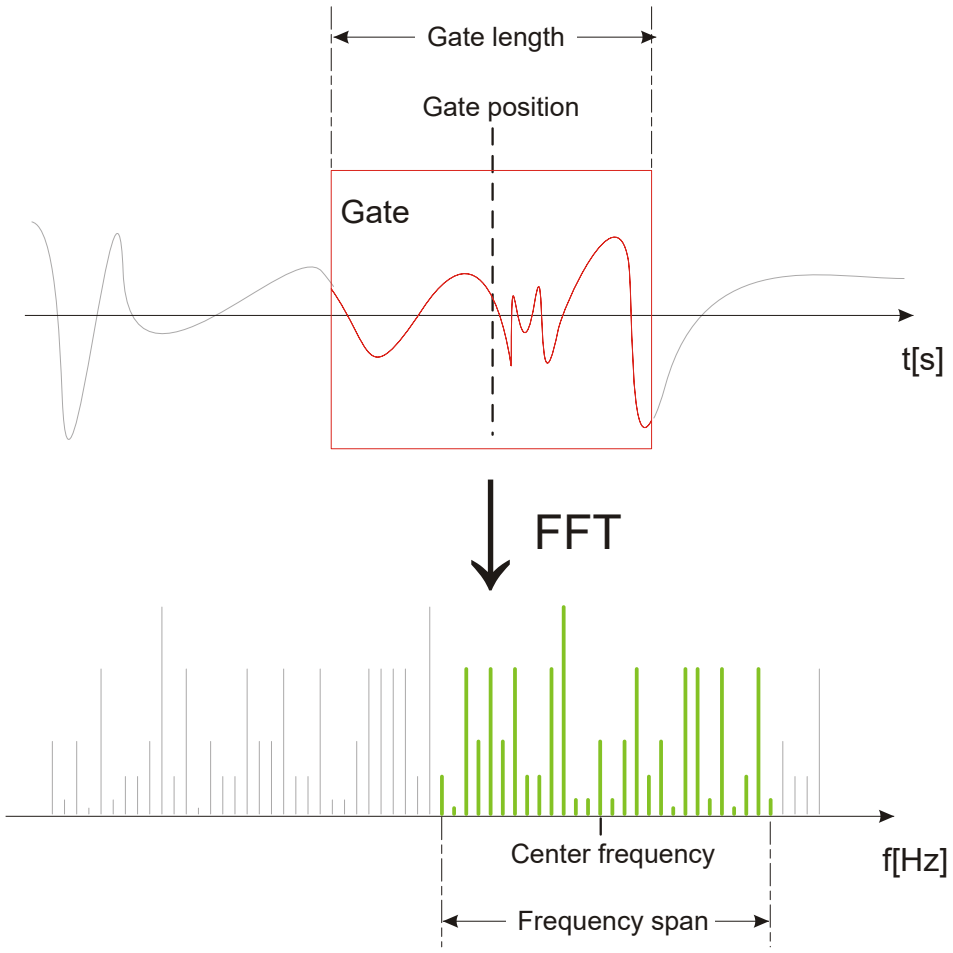

Restricting the result range

You can restrict the results of the spectrum analysis to a specified frequency range. The frequency range can be defined in two ways:

- Define a center frequency and frequency span
- Define start and stop frequencies

Dependencies between spectrum parameters

Spectrum analysis in the MXO 5 is highly configurable. Several parameters, including the resolution bandwidth, frequency span and center frequency, can be defined according to your requirements. Note, however, that several parameters are correlated and not all can be configured independently of the others.

The **resolution bandwidth** defines the minimum frequency separation at which the individual components of a spectrum can be distinguished. Small values result in high precision, as the distance between two distinguishable frequencies is small. Higher values decrease the precision, but increase measurement speed.

The minimum achievable RBW depends on the integration time which is equivalent to the number of samples available for calculation. If a higher spectral resolution is

required, the number of samples must be increased by using a higher sample rate or longer record length. To simplify operation, some parameters are coupled and automatically calculated, such as record length and RBW.

The **frequency span** and **center frequency** define the start and stop frequency of the spectral diagram. By default, a suitable frequency range according to the resolution bandwidth is selected, in respect to performance and precision. Span and RBW settings are coupled, so that the parameters can be adjusted automatically as necessary.

With a **Span/RBW ratio** of 100 and a screen resolution of 1000 pixels, each frequency in the spectrum is displayed by 10 pixels. A span/RBW ratio of 1000 provides the highest resolution. For full flexibility, the span/RBW coupling can also be disabled. Note, however, that a higher span/RBW ratio (i.e. low RBW values and large frequency spans) result in large amounts of data and extend the duration of the calculation.

11.2 Configuring spectrum waveforms

During spectrum analysis, a signal in the time domain is converted to a spectrum of frequencies. A basic spectrum waveform can be displayed quickly. By defining additional parameters, the waveform can be configured in more detail.

To display a basic spectrum waveform

1. Press the [FFT] key.

   The "Setup" tab of the "Spectrum" dialog box opens.

2. Set the "Source" to the input signal.

3. Enable "Display".

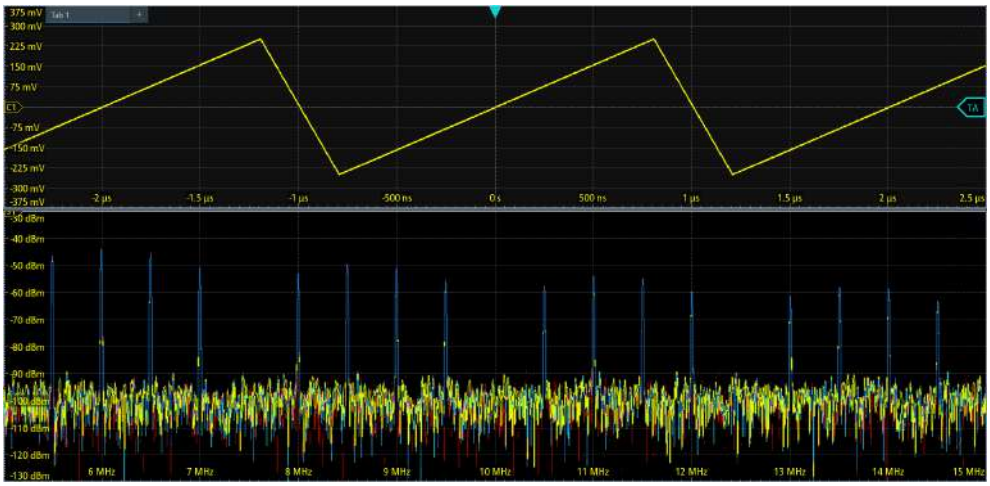

4. If necessary, edit the spectrum waveform parameters as described in the following procedures.

To configure the spectrum

By default, a suitable frequency range for the expected horizontal values according to the resolution bandwidth is selected, in respect to performance and precision. Span and RBW settings are coupled. If a more precise evaluation is required, for example for postprocessing in a different application, disable the coupling and change the frequency ranges and resolution bandwidth values as required.

1. Press the [FFT] key.

   The "Setup" tab of the "Spectrum" dialog box opens.

2. In the "Setup" tab, specify the frequency range you want to display using one of the following methods:
   - Select "CF span". Enter a "Center" and a "Span" that define the spectrum.
   - Select "Start Stop". Enter a "Start" and "Stop" frequencies that define the spectrum.
   - Tap the "Full span" button to display the complete spectrum resulting from the FFT analysis.

3. Define the resolution bandwidth for the spectrum result.
   The resolution bandwidth defines how precise the results are, i.e. how close together the individual frequencies can be. Small values result in high precision, as the distance between two distinguishable frequencies is small. Higher values decrease the precision, but increase performance.

   You can define the RBW manually, or couple it to other settings. Do one of the following:
   - To couple the RBW to the span, enable "Auto RBW". Define the "Span/RBW" ratio, the smaller the ratio, the higher the RBW becomes to display the same frequency span.
   - Disable "Auto RBW". Enter the "RBW" manually.

4. Tap "Advanced".

5. Select the most suitable "Window type" for your source data. Window functions are multiplied with the input values and thus can improve the spectrum display. For details, see "Window type" on page 332.

To restrict the input values (gating)

You can restrict the time range for which the FFT is calculated, resulting in a restricted spectrum.

1. Open "Menu" > "Spectrum" > "Gate" tab.

2. Enter the "Start" and the "Stop" times that define the gate area.

3. Set the "Position" and the "Width".

   The spectrum waveform displays the spectrum for the specified time span.

11.3 Spectrum setup

Access: "Menu" > "Spectrum" > "Setup" tab.

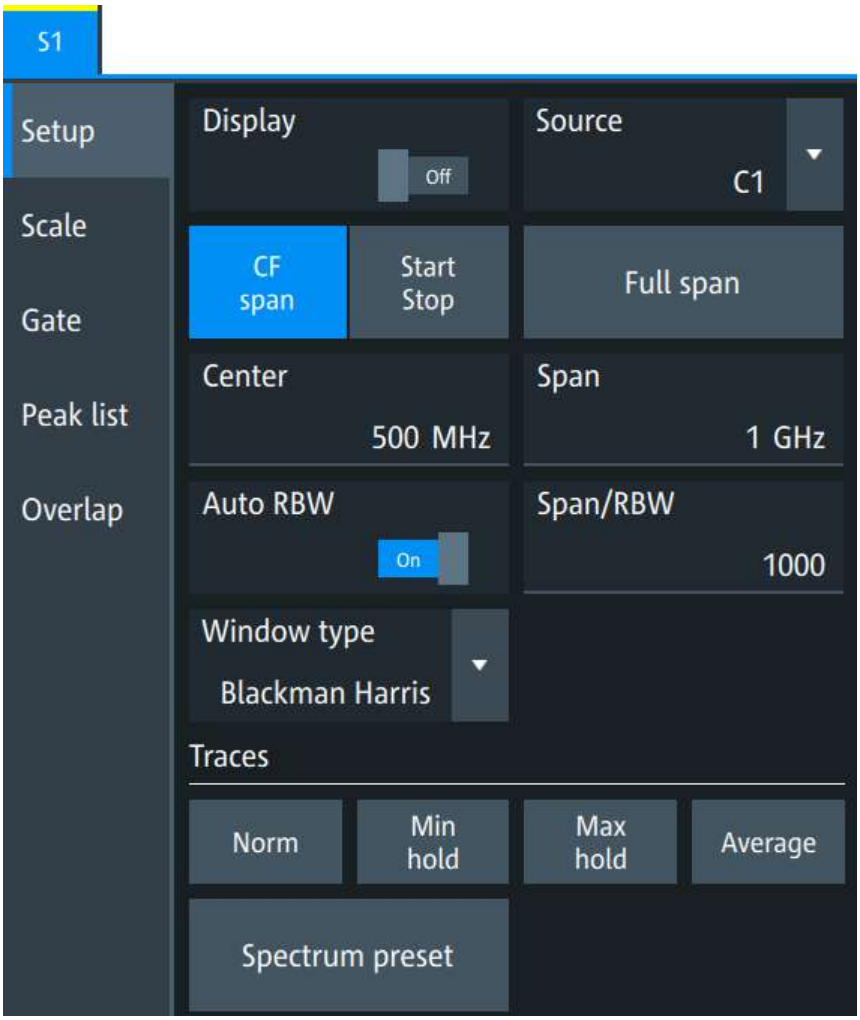

In this tab, you define the settings for the spectrum window. The display can be restricted to the results for a certain time base extract and to a specified frequency range.

The settings in this dialog are greyed out and cannot be changed, if "Coupling" is enabled in the "Scale" tab.

Display
Enables the spectrum.

Remote command:
`CALCulate:SPECtrum<sp>:STATe` on page 1316

Source
Selects the source for the spectrum.

Remote command:
CALCulate:SPECtrum<sp>:SOURce on page 1316

Full span
Displays the full frequency span.

CF span, Start Stop
Selects if the frequency span is defined through a "Center"/"Span" pair or through the "Start"/"Stop".

Center
Defines the position of the displayed frequency range, which is (Center - Span/2) to (Center + Span/2). The width of the range is defined using the frequency span setting.

Remote command:
CALCulate:SPECtrum<sp>:FREQuency:CENTer on page 1312

Span
The span is specified in Hertz and defines the width of the displayed frequency range, which is (Center - Span/2) to (Center + Span/2). The position of the span is defined using the "Center" setting.

Remote command:
CALCulate:SPECtrum<sp>:FREQuency:SPAN on page 1313

Start
Defines the start frequency of the displayed frequency span.

Remote command:
CALCulate:SPECtrum<sp>:FREQuency:STARt on page 1313

Stop
Sets the stop frequency of the displayed frequency span.

Remote command:
CALCulate:SPECtrum<sp>:FREQuency:STOP on page 1313

Auto RBW
Couples the frequency span to the "RBW" setting.

If span and RBW values are coupled, changing the span also changes the RBW.

Remote command:
CALCulate:SPECtrum<sp>:FREQuency:BANDwidth[:RESolution]:AUTO on page 1311

Span/RBW
Defines the coupling ratio for Span/RBW.

This setting is only available if "Auto RBW" is enabled.

Remote command:
CALCulate:SPECtrum<sp>:FREQuency:BANDwidth[:RESolution]:RATio on page 1311

RBW
Defines the resolution bandwidth. Note that the resolution bandwidth is correlated with the span, record length and acquisition time. If a constant record length is to be used, the RBW can be adapted if the required number of samples cannot be acquired.

Remote command:
`CALCulate:SPECtrum<sp>:FREQuency:BANDwidth[:RESolution][:VALue]` on page 1312

Window type
Selects the window type. Windowing helps minimize the discontinuities at the end of the measured signal interval and thus reduces the effect of spectral leakage, increasing the frequency resolution.

Various different window functions are provided in the MXO 5 to suit different input signals. Each of the window functions has specific characteristics, including some advantages and some trade-offs. Consider these characteristics carefully, to find the optimum solution for the measurement task.

Window type	Frequency resolution	Magnitude resolution	Measurement recommendation
Rectangular	Best	Worst	Separation of two tones with almost equal amplitudes and a small frequency distance
Hamming Hann	Good	Poor	Frequency response measurements, sine waves, periodic signals and narrow-band noise
Blackman Harris (default)	Good	Good	Mainly for signals with single frequencies to detect harmonics Accurate single-tone measurements Best compromise of frequency and magnitude resolutions
Gaussian	Good	Good	Weak signals and short duration
Flattop2	Poor	Best	Accurate single-tone measurements
Kaiser Bessel	Poor	Good	Separation of two tones with differing amplitudes and a small frequency distance

Remote command:
`CALCulate:SPECtrum<sp>:FREQuency:WINDow:TYPE` on page 1314

Traces
Spectrum analysis can only be performed on a maximum number of values at once. If more values must be calculated, the input signal is divided into segments, each of which is calculated separately. The segments need not to be disjunct. In this case, the arithmetic mode defines how the final result is calculated from the individual results.

The following methods are available:

"Norm" The data of only one segment is considered. In effect, no arithmetics are processed.

"Min hold" Determines the minimum result for each input value from the data of the current acquisition and the acquisitions before.

"Max hold" Determines the maximum result for each input value from the data of the current acquisition and the acquisitions before.

"Average" The average is calculated over the number of segments set with "Average count".

Remote command:
`CALCulate:SPECtrum<sp>:WAVeform:AVERage:ENABle` on page 1318
`CALCulate:SPECtrum<sp>:WAVeform:AVERage:COUNt` on page 1317
`CALCulate:SPECtrum<sp>:WAVeform:MAXimum:ENABle` on page 1318
`CALCulate:SPECtrum<sp>:WAVeform:MINimum:ENABle` on page 1318
`CALCulate:SPECtrum<sp>:WAVeform:NORMal[:ENABle]` on page 1318

Spectrum preset
Presets the spectrum measurement.

Remote command:
`CALCulate:SPECtrum<sp>:PRESet` on page 1315

11.4 Spectrum scale

Access: "Menu" > "Spectrum" > "Scale".

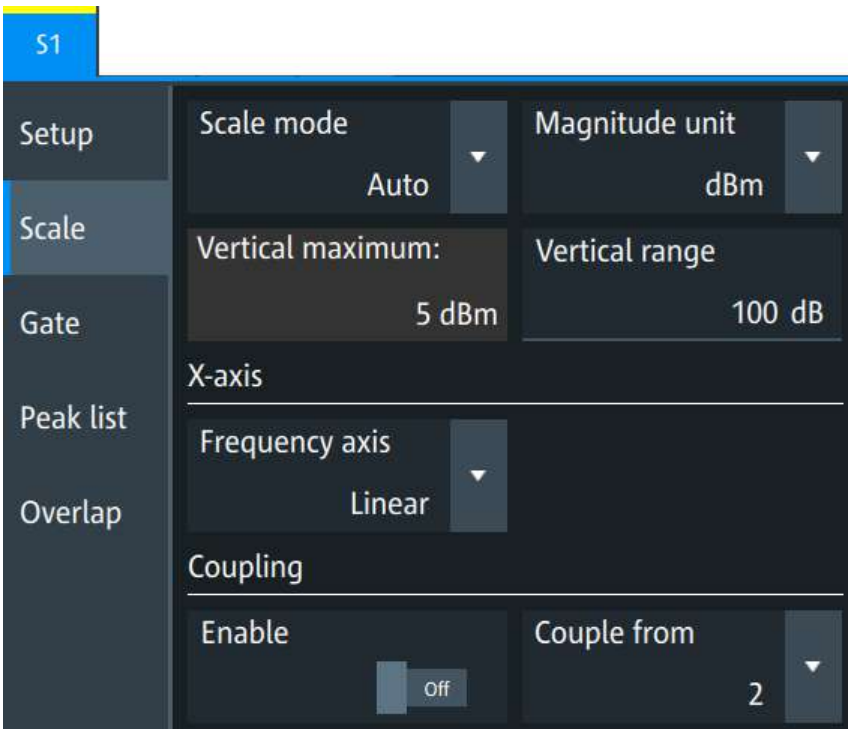

Scale mode
By default, the vertical scale is adapted to the current measurement results automatically to provide an optimal display. However, if necessary, you can define scaling values manually to suit your requirements.

Note: When you change the scaling values manually using the [Scale] rotary knob, the scale mode is set to "Manual" temporarily.

"Manual" Enter the required values for "Vertical maximum" and "Vertical range".

"Auto" "Vertical maximum" is read-only.

Remote command:
`CALCulate:SPECtrum<sp>:COUPling:MODE` on page 1310

Magnitude unit
Sets the unit for the y-axis.

The display values are calculated for the termination impedance that is set in "Vertical" > "Other" tab > "Impedance".

Remote command:
`CALCulate:SPECtrum<sp>:MAGNitude:SCALe` on page 1315

Vertical maximum
Sets the maximum displayed value on the vertical scale.

Remote command:
`CALCulate:SPECtrum<sp>:MAGNitude:LEVel` on page 1315

Vertical range
Sets the range of the spectrum values to be displayed.

Remote command:
`CALCulate:SPECtrum<sp>:MAGNitude:RANGe` on page 1315

Frequency axis
Defines the scaling method for the frequency axis (x-axis) of the spectrogram.

Available are logarithmic and linear scaling.

Remote command:
`CALCulate:SPECtrum<sp>:FREQuency:SCALe` on page 1312

Coupling: Enable, Couple from
If the coupling is enabled, the settings of the selected "Couple from" spectrum are used in the "Setup" of the current spectrum. Enable "Enable", then select "Couple from".

Remote command:
`CALCulate:SPECtrum<sp>:COUPling[:ENABle]` on page 1310
`CALCulate:SPECtrum<sp>:COUPling:FROM` on page 1310

11.5 Spectrum gate

Access: "Menu" > "Spectrum" > "Gate"

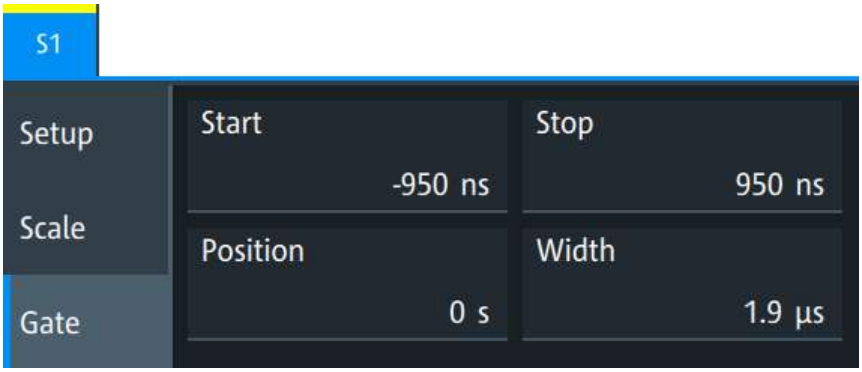

Spectrum gating restrict the spectrum analysis to a user-defined region of the captured time domain signal.

Start
Sets the starting value for the gate.

Remote command:
`CALCulate:SPECtrum<sp>:GATE:STARt` on page 1319

Stop
Sets the end value for the gate.

Remote command:
`CALCulate:SPECtrum<sp>:GATE:STOP` on page 1320

Position
Sets the position of the displayed frequency range.

The width of the gate is defined using the "Width" setting.

Remote command:
`CALCulate:SPECtrum<sp>:GATE:POSition` on page 1319

Width
Defines the width of the displayed gate.

The position of the span is defined using the "Position" setting.

Remote command:
`CALCulate:SPECtrum<sp>:GATE:WIDTh` on page 1320

11.6 Spectrum peak list

A peak list measurement detects all peaks above a user-definable threshold and optionally indicates the peaks in the spectrum diagram.

Access: "Menu" > "Spectrum" > "Peak list".

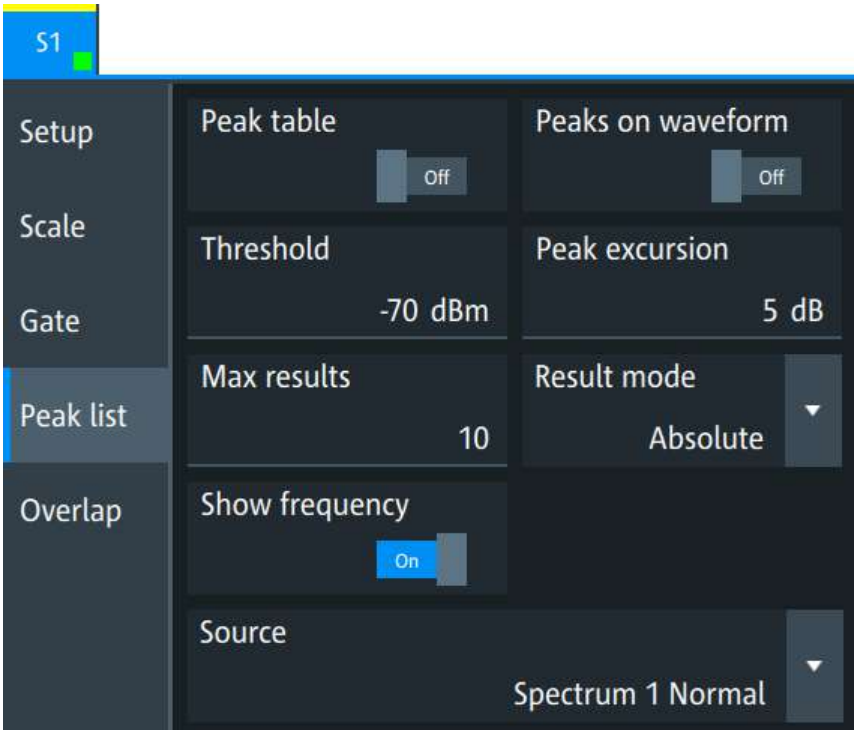

In the peak list dialog, you can define various criteria for a peak search. The peaks can be indicated in the frequency diagram by peak boxes, and the measured peak frequencies and magnitudes are listed in the peak list table.

The number of determined peaks can be defined. You can sort the results by frequency or power value, and the peak labels are adjusted accordingly.

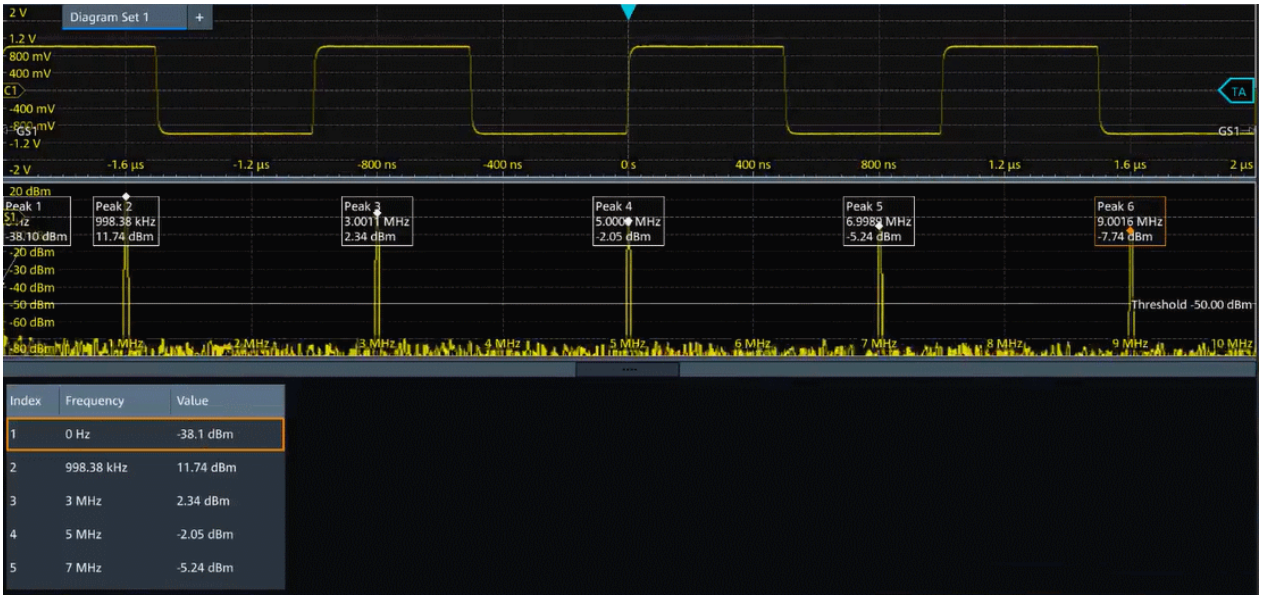

Also, you can adjust some of the display settings, see Section 5.3.5, "Peak list", on page 107.

To analyze the peaks in a spectrum, you can use cursors on the spectrum waveform and peak search functions. For details, see Section 10.1.3.3, "Peak search tab", on page 272.

The results in the peak table can be saved to file. See Section 13.6, "Results", on page 494.

Remote commands query peak results and to change the results display:

- `CALCulate:SPECtrum<sp>:PLISt:RESult[:VALue]?` on page 1322
- `CALCulate:SPECtrum<sp>:PLISt:SORT:COLumn` on page 1323
- `CALCulate:SPECtrum<sp>:PLISt:SORT:ORDer` on page 1323
- `CALCulate:SPECtrum<sp>:PLISt:LABel:INVert` on page 1324

Peak table
Enables the display of the peak table.

Remote command:
`CALCulate:SPECtrum<sp>:PLISt[:STATe]` on page 1321

Peak on waveform
Displays a box with a description for each detected peak in the spectrum, including the magnitude. If "Show frequency" is enabled, the frequency values are also displayed.

If this option is disabled, the peaks are marked on the diagram only with a point marker.

"Peak on waveform" > "Off"	"Peak on waveform" > "On"
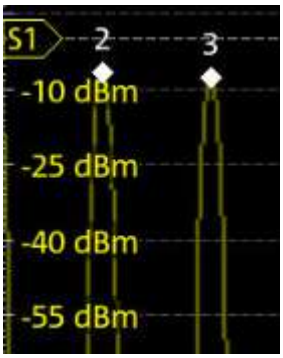	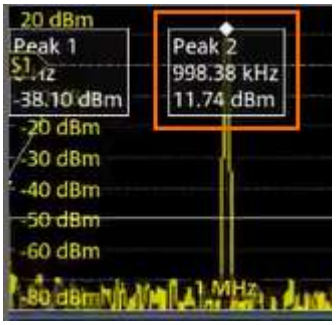

Remote command:
`CALCulate:SPECtrum<sp>:PLISt:SPOW` on page 1322

Threshold
Sets an absolute threshold as an additional condition for the peak search. Only peaks that exceed the threshold are detected.

This setting is only available for spectrum waveforms. It is valid for cursor measurements, spectrum measurements and peak search.

Remote command:
`CALCulate:SPECtrum<sp>:THReshold` on page 1317

Peak excursion
Defines a minimum level value by which the waveform must drop left and right of the local maximum to be listed as a peak. Enter a peak excursion value to omit close by peaks and list just the highest peak.

This setting is only available for spectrum waveforms. It is valid for cursor measurements, spectrum measurements and peak search.

Example:

In the figure below, 2 peaks are shown, that rise above the defined "Threshold". Peak 1 fulfills the defined "Peak excursion" value and is counted as a peak. Peak 2 does not fulfill the defined "Peak excursion" value on the right and is not counted as a peak.

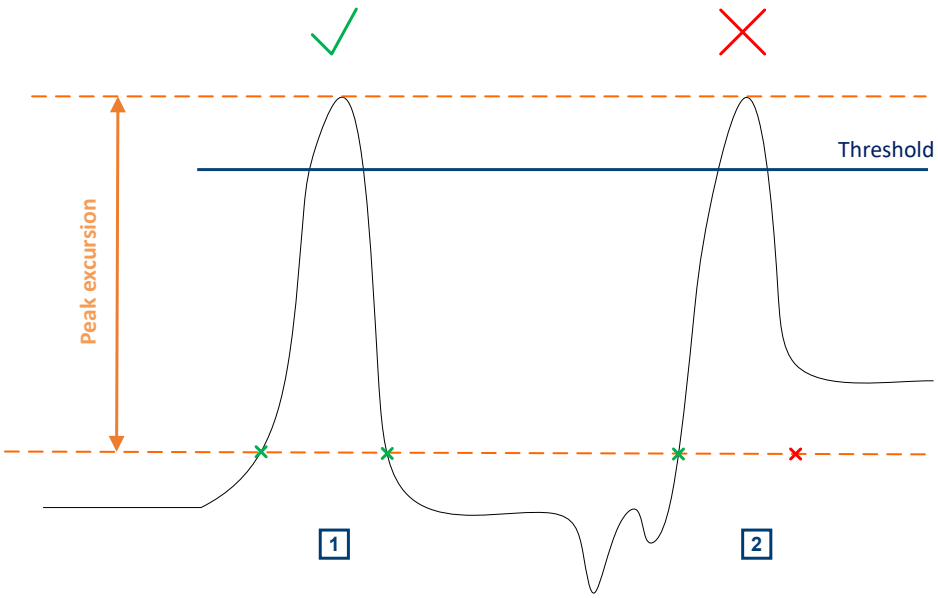

Remote command:
`CALCulate:SPECtrum<sp>:PEXCursion` on page 1317
`CURSor<cu>:PEXCursion` on page 1308

Max results
Sets the maximum number of measurement results that are listed in the result table.

Remote command:
`CALCulate:SPECtrum<sp>:PLISt:MAXCount` on page 1321

Result mode
Selects how the measurement results are displayed.

"Absolute" The peaks are shown in absolute value, dBm.

"Relative" The level of the carrier is shown in absolute value dBm. The values of the peaks are shown relatively to the carrier in dBc.

Remote command:
CALCulate:SPECtrum<sp>:PLISt:MODE on page 1321

Show frequency
Includes the frequency of the detected peak in the diagram labels.

Remote command:
CALCulate:SPECtrum<sp>:PLISt:LABel:FREQuency[:STATe] on page 1323

Source
Selects the source of the peak table. You can select one of the traces that is enabled with Traces.

Remote command:
CALCulate:SPECtrum<sp>:PLISt:SOURce on page 1322

11.7 Spectrum overlap

Access: "Menu" > "Spectrum" > "Setup" tab.

For an description of the basic principles of FFt frames and overlapping, see "Frames in FFT" on page 325.

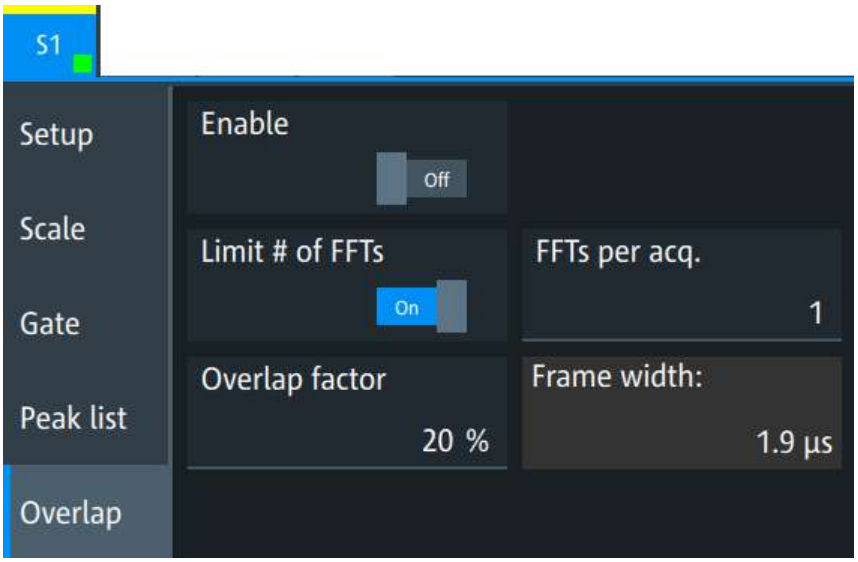

Enable
Activates the use of frames and overlap to create the FFT spectrum.

Remote command:
CALCulate:SPECtrum<sp>:OVERlap:ENABle on page 1325

Limit # of FFTs
Limits the number of FFTs that are done per acquisition.

If limitation is off, the firmware sets the number of FFTs automatically to the maximum number that fit in the width of the overview window. It is possible, that some data at the left and the right of the display does not fit in the frames. The gate is set automatically and cannot be changed.

If limitation is active, you can set the number of frames ("FFTs per acq." on page 340). You can change the gate, which changes the frame width, too.

Remote command:
`CALCulate:SPECtrum<sp>:OVERlap:FCOunt:LIMit:ENABle` on page 1326

FFTs per acq.
Sets the number of frames to be used for FFT with active limitation. The frame width remains unchanged, and the resulting gate width is *frame width * FFTs per acqu*.

Remote command:
`CALCulate:SPECtrum<sp>:OVERlap:FCOunt:VALue` on page 1326
`CALCulate:SPECtrum<sp>:OVERlap:FCOunt:ADJusted?` on page 1326

Overlap factor
Defines the minimum factor by which two neighboring frames overlap. Depending on the settings, the system adjusts the value upward.

The higher the overlap factor, the more frames are used. This leads to more detailed results and improves detection of transient signal effects. However, it also extends the duration of the calculation.

Remote command:
`CALCulate:SPECtrum<sp>:OVERlap:FACTor:VALue` on page 1325
`CALCulate:SPECtrum<sp>:OVERlap:FACTor:ADJusted?` on page 1325

Frame width
Shows the current frame width.

Increasing the RBW increases the frame width, and vice versa. With active limitation of the frame number, changing the gate results in adjustment of the frame width.

Remote command:
`CALCulate:SPECtrum<sp>:OVERlap:FWIDth?` on page 1327

12 Applications

All available applications are provided in the "Apps" dialog.

► To open an application, press the [Apps] key.

Some applications are described in other sections. See:

- Section 9.4, "Reference waveforms", on page 249
- Section 9.5, "Waveform histograms", on page 258
- Section 16, "Waveform generator (option R&S MXO5-B6)", on page 994
- Section 13.9, "File browser dialog", on page 505
- Section 14, "Protocol analysis", on page 507
- "Add scope": Section 17.2, "ScopeSync", on page 1013

Also the "Demo" is available in the "Apps" dialog. It is for demonstration purposes of the functionalities of MXO 5.

12.1 Mask testing

12.1.1 About mask testing

Masks are used to determine whether the signal remains within specified limits, e.g. to uncover signal anomalies or test compliance and stability of digital signals. The limits are specified as "mask", which is laid over the input signal in the display. Thus you can easily detect where the signal violates the mask.

Mask testing with MXO 5 is hardware accelerated. It is the industry's fastest mask test with hardly any impact on the acquisition rate, thus mask violations are detected fast and reliably.

With MXO 5, you can define your own masks easily. Specific actions can be executed when mask violations occur. For error analysis, you can stop the acquisition on a failed test and use the history to look at the previous waveforms.

Mask test

A mask test consists of:

- Mask definition.
- Waveform to be tested.
- Actions to be taken on violation or successful completion.

Mask definition

A mask can be created in several ways:

- The individual mask points are defined, either on the touchscreen or as numerical values. This mask type is called *polygon*. A polygon can have several segments.
  For details, see Section 12.1.3, "Mask definition: polygon", on page 346.
- The mask is derived from an existing waveform. This mask type is called *auto mask*.
  For details, see Section 12.1.4, "Mask definition: auto mask", on page 348.

Polygon masks

A polygon mask can have one or more segments. Each segment has a predefined shape: rectangle, square, diamond, hexagon or octagon. You can change the shape by moving the edge points on the screen or change the numerical values. You can also add and remove single edge points.

A mask segment can have only one range in y direction at a certain time point. If a shape is not valid, the invalid point is marked red, and an attention symbol is shown at the segment name.

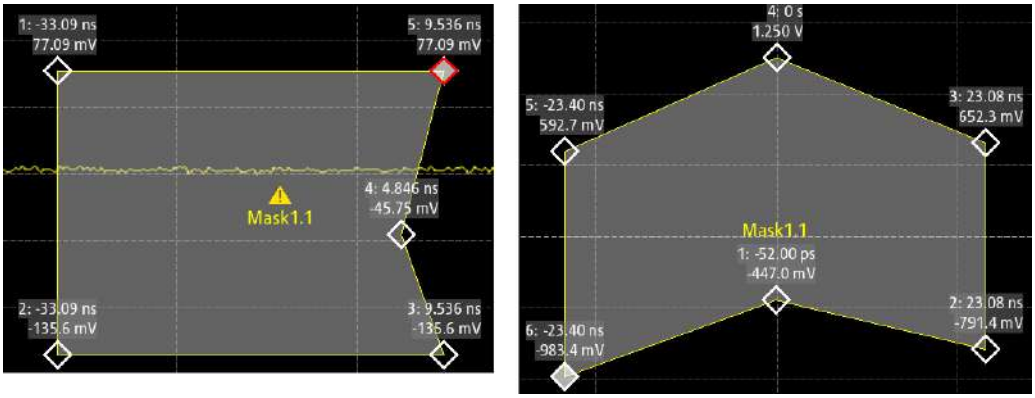

Figure 12-1: Invalid mask segment (left) and valid mask segment (right)

To check the validity in remote control, use `MTESt<m>:SEGMent<n>:VALid?` and `MTESt<m>:SEGMent<n>:POINt<o>:VALid?`.

12.1.1.1 Results of a mask test

A mask test shows the following test results:

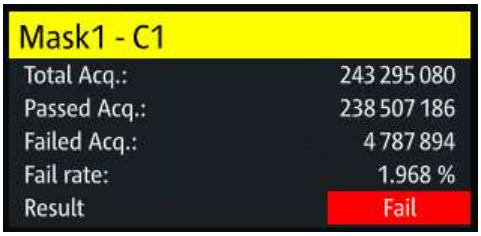

Total acq.
Number of tested acquisitions.

Remote command:
`MTESt<m>:RESult:COUNt:WAVeforms?` on page 1340

Passed acq.
Number of acquisitions that passed the test.

Remote command:
`MTESt<m>:RESult:COUNt:PWAVeforms?` on page 1340

Failed acq.
Number of failed acquisitions.

Remote command:
`MTESt<m>:RESult:COUNt:FWAVeforms?` on page 1340

Fail rate
Ratio of failed acquisitions to the number of tested acquisitions.

Remote command:
`MTESt<m>:RESult:FRATe?` on page 1340

Result
A test has failed if at least one acquisition violated the mask.

Remote command:
`MTESt<m>:RESult[:RESult]?` on page 1341

12.1.2 Mask test setup: general settings

Access: "Menu" > "Apps" > "General" tab > "Masks" > "Setup" tab

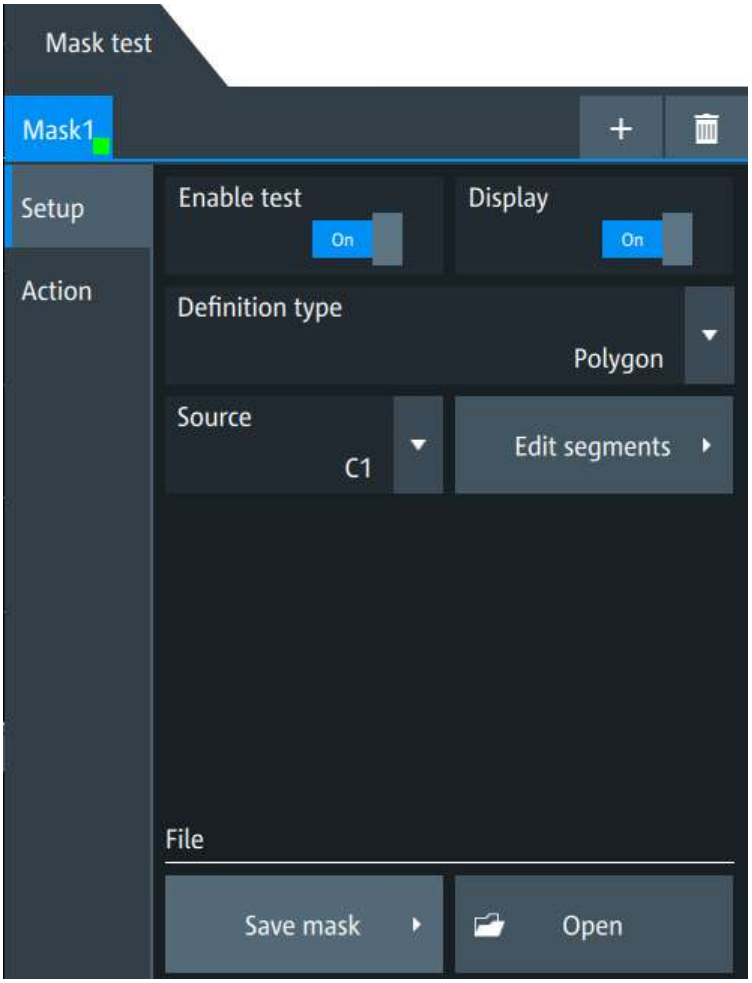

Add mask
Adds a mask test and opens the subtab to configure the new test.

Remote command:
`MTESt<m>:ADD` on page 1328

Enable test
Activates or deactivates the mask test.

If the acquisition is running, the test starts immediately. Otherwise, the test starts when acquisition is started. The testing is stopped when acquisition is stopped, or if a stop action is configured.

Remote command:
`MTESt<m>:STATe` on page 1330

Display
Displays all mask segments of the selected mask in the diagrams, or hides them.

Remote command:
`MTESt<m>:VISible` on page 1330

Definition type
Selects the mask type.

- Polygon: define mask segments by setting their corner points. See Section 12.1.3, "Mask definition: polygon", on page 346.
- Auto mask: define the mask based on an active waveform. See Section 12.1.4, "Mask definition: auto mask", on page 348.

Remote command:
None, each mask type has its own commands for definition.

Source
Selects the waveform to be tested against the mask. For auto mask definition, it is also the waveform from which the mask is created.

All analog channel waveforms, math waveforms, XY-plots and norm traces of spectrums can be tested.

Remote command:
`MTESt<m>:SOURce` on page 1330

Edit segments
Opens a dialog to define the mask, depending on the selected "Definition type" on page 345.

Save mask
Opens a dialog to define the storage location and filename, and save the mask.

"<Folder>"	Opens a file explorer where you can select the directory where the file is saved.
"File name base"	Sets a name for the file, without extension. The name is extended with a time stamp when the file is saved. Thus, multiple "Save" actions are possible without changing the filename.
"File extension"	The format of the mask file is always `.xml`.
"Save"	Saves the file in the defined folder using the "File name base". If the specified file already exists, it is overwritten with the new data.
"Save As"	Opens a file explorer where you select the folder, the file type, enter the filename and save the file.

Remote command:
`MTESt<m>:IMEXport:NAME` on page 1329
`MTESt<m>:IMEXport:SAVE` on page 1329

Open
Opens a file explorer to select a previously stored mask file. The selected mask is loaded and used for test.

Remote command:
`MTESt<m>:IMEXport:NAME` on page 1329
`MTESt<m>:IMEXport:OPEN` on page 1329

12.1.3 Mask definition: polygon

"Menu" > "Apps" > "General" tab > "Masks" > "Setup" tab > select "Definition type" = "Polygon" > "Edit segments"

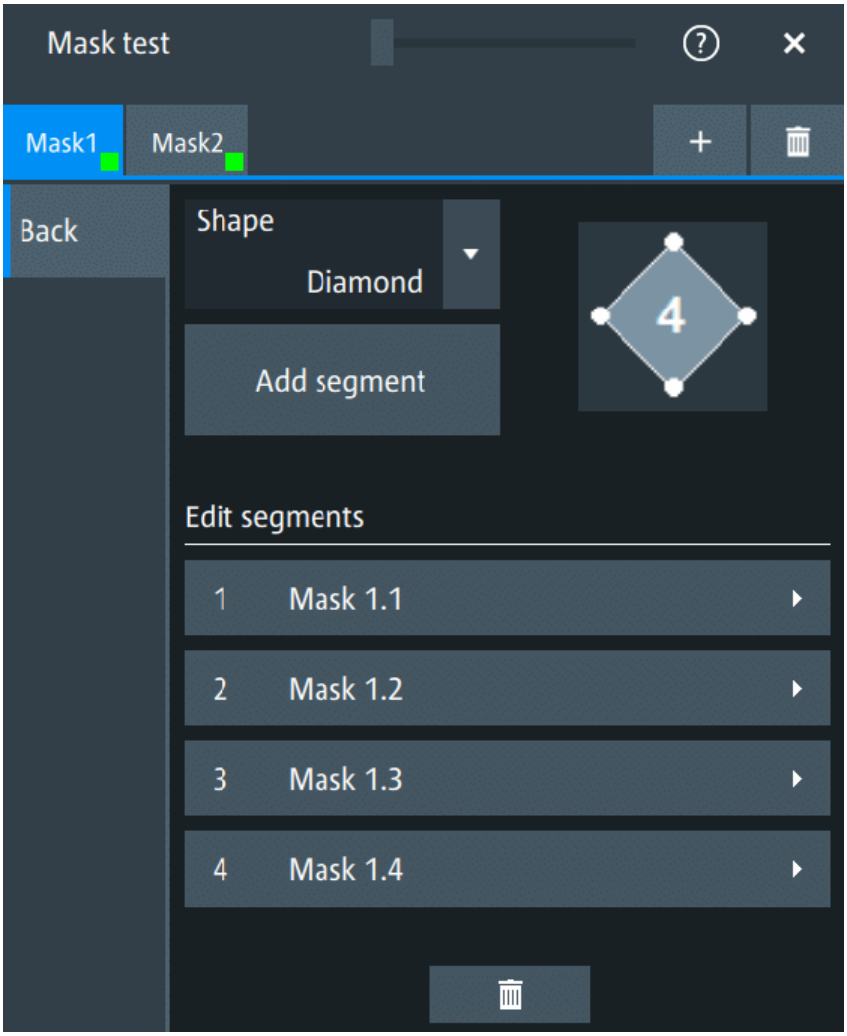

Shape
Selects the shape of the user-defined mask: rectangle, diamond, hexagon, octagon.

Add segment
Adds a new segment with the selected shape to the mask.

Remote command:
`MTESt<m>:SEGMent<n>:ADD` on page 1331

Edit segments
Dialog to edit the mask segment. For each segment, you define the coordinates of the corner points. You can add and remove points and define the shape as needed.

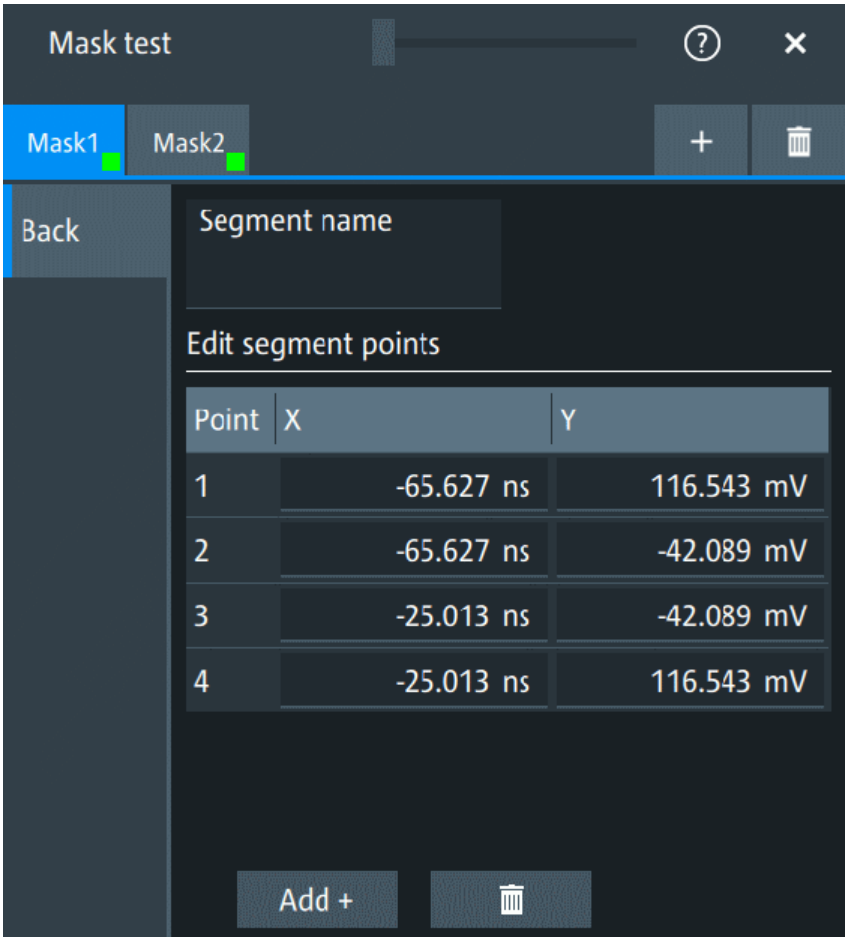

Point, X, Y ← Edit segments
The table shows the horizontal and vertical positions of the corner points. You can change each value.

Remote command:
`MTESt<m>:SEGMent<n>:POINt<o>:X` on page 1333
`MTESt<m>:SEGMent<n>:POINt<o>:Y` on page 1333
`POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:X` on page 1417
`POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:Y` on page 1418

Add + ← Edit segments
Appends a new point to the segment. You cannot change the order of the points.

Remote command:
`MTESt<m>:SEGMent<n>:POINt<o>:ADD` on page 1332
`MTESt<m>:SEGMent<n>:POINt<o>:COUNt?` on page 1332

Segment name ← Edit segments
Enter a name for the selected mask segment.

Delete, Delete all
switches to the delete mode. You can delete single segments or single points by selecting the delete icon in the table row. You can also delete all segments or points with "Delete all". To leave the delete mode, tap the blue delete icon.

Remote command:
`MTESt<m>:SEGMent<n>:POINt<o>:REMove` on page 1332
`MTESt<m>:SEGMent<n>:REMove` on page 1334

12.1.4 Mask definition: auto mask

"Menu" > "Apps" > "General" tab > "Masks" > "Setup" tab > select "Definition type" = "Auto mask" > "Edit segments"

An auto mask, also known as waveform mask, is created from an existing waveform. The waveform envelope builds the upper and lower limit line of the mask, and the limits are moved by a given value from the original waveform. The result is a tolerance tube around the waveform that is used as mask.

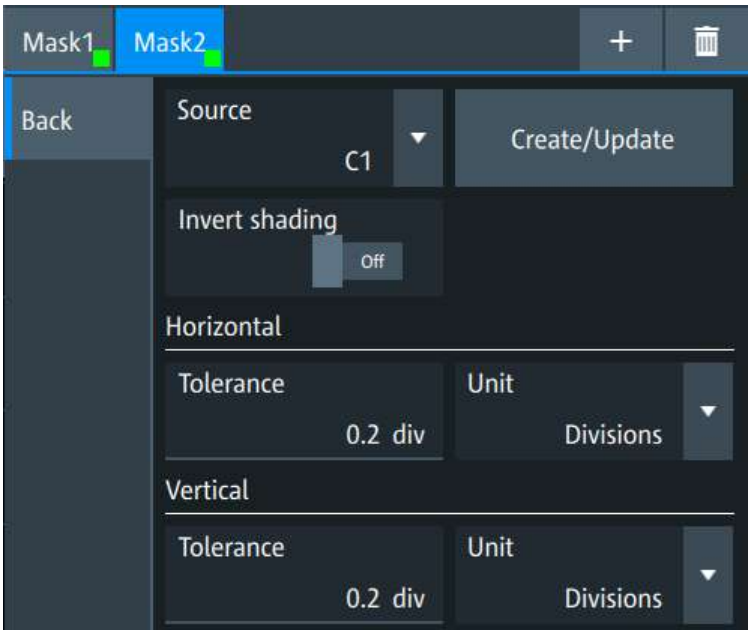

Source
See "Source" on page 345.

Create/Update
Creates or updates the upper and lower mask limit from the envelope of the selected "Source" waveform by copying the waveform data.

Remote command:
`MTESt<m>:AUTomask:UPDate` on page 1335

Invert shading
If enabled, the area inside the mask is highlighted. If disabled, the area outside the mask limits is highlighted.

Tolerance (Horizontal)
Sets the width of the mask in horizontal direction. The value is added to the left and the right of the x-values of the copied source waveform. The overall mask width is twice the specified horizontal tolerance. Depending on the selected "Unit" on page 349, you can enter the tolerance in divisions or in the unit of the waveform's x-axis.

Remote command:
`MTESt<m>:AUTomask:XTOLerance:DIVisions` on page 1335
`MTESt<m>:AUTomask:XTOLerance:PHYSical` on page 1335

Tolerance (Vertical)
Sets the height of the mask in vertical direction. The value is added to and subtracted from y-values of the copied source waveform. The overall mask height is twice the specified vertical tolerance. Depending on the selected "Unit" on page 349, you can enter the tolerance in divisions or in the unit of the waveform's y-axis.

Remote command:
`MTESt<m>:AUTomask:YTOLerance:DIVisions` on page 1336
`MTESt<m>:AUTomask:YTOLerance:PHYSical` on page 1336

Unit
Set the unit of the mask tolerance in horizontal and vertical direction: divisions or in the unit of the corresponding axis.

Remote command:
`MTESt<m>:AUTomask:XTUNit` on page 1336
`MTESt<m>:AUTomask:YTUNit` on page 1336

12.1.5 Actions on mask test results

Access: "Menu" > "Apps" > "General" tab > "Masks" > "Action" tab

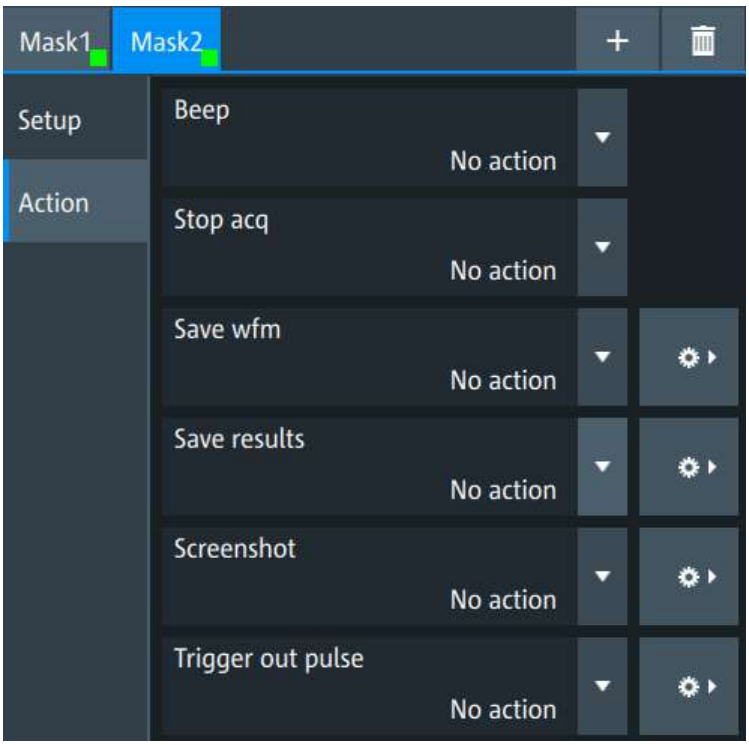

The action settings define what happens when an acquisition passes the mask test successfully, or when it hits the mask. All available actions can be initiated at the same time.

Beep
Generates a beep sound.

Remote command:
`MTESt<m>:ONViolation:BEEP` on page 1337
`POWer<m>:SOA:MTESt<n>:ONViolation:BEEP` on page 1419

Stop acq
Stops the acquisition on completion or violation.

Remote command:
`MTESt<m>:ONViolation:STOP` on page 1338
`POWer<m>:SOA:MTESt<n>:ONViolation:STOP` on page 1419

Save wfm
Saves the waveform data to a file according to the folder, filename and extension settings in the "Menu" > "Save/recall" > "Save" > "Waveform" dialog.

To select the waveforms and adjust the file path, tap the settings icon .

See also Section 13.4.2, "Saving waveforms", on page 479.

Remote command:
`MTESt<m>:ONViolation:WFMSave` on page 1339
`POWer<m>:SOA:MTESt<n>:ONViolation:WFMSave` on page 1420

Save results
Saves the results to a file according to the settings in "Menu" > "Save/recall" > "Save" > "Results".

To select the waveforms and adjust the file path, tap the settings icon.

See also Section 13.6, "Results", on page 494.

Remote command:
`MTESt<m>:ONViolation:SRESults` on page 1338

Screenshot
Saves a screenshot according to the settings in the "Menu" > "Save/recall" > "Save" > "Screenshot" dialog.

To adjust the screenshot settings, tap the settings icon.

See also Section 13.8, "Screenshots", on page 500.

Remote command:
`MTESt<m>:ONViolation:SCReenshot` on page 1338
`POWer<m>:SOA:MTESt<n>:ONViolation:SCReenshot` on page 1419

Trigger out pulse
Selects, if a pulse is provided to the [Trigger Out] connector on the rear panel. The trigger-out signal is used to synchronize the measurements of other instruments.

To adjust the outgoing signal, tap the settings icon.

Remote command:
`MTESt<m>:ONViolation:TRIGgerout` on page 1339
`POWer<m>:SOA:MTESt<n>:ONViolation:TRIGgerout` on page 1420

12.1.6 Working with masks

This section explains step by step how mask tests are configured. For the explanation of the individual settings, see Section 12.1.2, "Mask test setup: general settings", on page 343.

12.1.6.1 Working with masks using the toolbar

To create a polygon mask graphically using the toolbar

1. Select the "Add mask" icon on the toolbar. If the icon is not visible, configure the toolbar as described in Section 4.4.2, "Configuring the toolbar", on page 67.

2. In the "Add mask" overlay menu, select the "Definition type" of the mask: "Polygon".

3. In the overlay menu, select the channel that you want to test against the mask.
4. In the overlay menu, the "Add mask" function is selected. Draw the diagonal of the rectangle on the screen.
5. Now, the "Add segment" function is selected in the overlay menu. Draw another segment on the screen.
6. If you need another mask, select "Add mask". Draw the first segment of the new mask.
7. To finish the mask definition, close the overlay menu.

   The mask test is enabled by default. If the acquisition is running, the mask test starts automatically and immediately. Otherwise, start the acquisition to start the test.

To modify a polygon mask using the toolbar

You already have created a mask and want to change its shape and add segments.

1. Select the mask segment in the diagram.

   The segment is marked and the overlay menu opens. One of the points is selected by default, and its coordinates are shown.

2. In the diagram, you can change the shape of the mask segment:
   - To move the segment, tap in the segment, hold and move it.
   - To move an edge, tap and hold the edge and move it.
   - To move a point, tap and hold the point and move it.
3. The overlay menu provides more functions.
   To add a point to the selected segment:
   a) Select "Add point" in the overlay menu.
   b) Tap outside the segment, hold and move the point to the required position.
4. To delete a segment or point:
   a) Select "Delete" in the overlay menu.

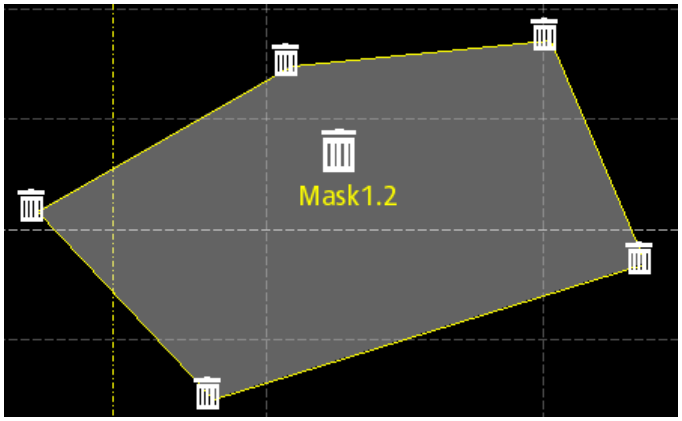

b) To delete a point, tap its delete icon.
c) To delete the segment, tap the "Delete" icon inside the segment.

5. To enter the exact coordinates of a point:
   a) Select the mask segment and the point in the diagram.
   b) In the overlay menu, change the X- and Y-values.
6. To change the waveform to be tested, select "Source" in the overlay menu.

To create an auto mask using the toolbar

1. Select the "Add mask" icon on the toolbar. If the icon is not visible, configure the toolbar as described in Section 4.4.2, "Configuring the toolbar", on page 67.

2. In the "Add mask" overlay menu, select the "Definition type" of the mask: "Auto mask".
3. In the overlay menu, select the channel that you want to use for mask definition.
4. In the overlay menu, select "Copy".
   The mask is created with default settings, and the selected source is tested against the mask immediately.
5. To change the mask tube, select "Setup" in the overlay menu.

12.1.6.2 Working with masks using the dialog

1. Open the "Mask test" dialog: "Menu" > "Apps" > "General" tab > "Masks" > "Setup" tab.
   If there is already at least one defined mask, tap its result table to open the dialog.
2. Select "Delete mask" to create the first mask. To create more masks, use the + icon.
3. Select the "Source", the waveform to be tested.
4. Select "Edit segments".
5. Select the "Shape" of the new segment.
6. Select "Add segment".
   The new segment is listed in the dialog and shown in the diagram.
7. Under "Edit segments", select the segment.
8. Change the X- and Y-values as needed.
9. To name the segment, select "Segment name". Enter the name.
10. To add more points, use "Add +".

11. To delete points:
    a) Select .
    b) To delete one point, select the delete icon in its table row.
    c) To delete all points, select "Delete all"
    d) To leave the delete mode, tap the blue delete icon.
12. Select "Back" twice to finish the segment setup.
13. In the "Setup" tab, enable the test if it is off.
14. If the acquisition is running, the mask test starts automatically and immediately. Otherwise, start the acquisition to start the test.

12.1.6.3 Setting up a mask test

In addition to the mask definition, you can define the actions to be taken if a test has failed or completed successfully.

1. Open the "Mask test" dialog: "Menu" > "Apps" > "General" tab > "Masks".
2. Select the "Action" tab.
3. For each action, select when the action will be executed:
   - No action
   - On successful completion
   - On violation of the mask
4. For the actions "Save wfm" and "Trigger out pulse", tap the icon and configure the settings.

12.1.6.4 Running a mask test

You can perform continuous testing with "Run / stop" or test a specified number of acquisitions with "Run single". If the test is enabled in the "Setup" tab, the test starts when the acquisition starts. The test runs until the acquisition is stopped.

12.1.6.5 Saving and loading masks

Mask definitions are remained until they are changed or deleted, or a preset is performed. If you want to keep a mask definition, you can save and reload it.

To save a mask

1. Open "Menu" > "Apps" > "General" tab > "Masks" > "Setup" tab.
2. Select "Save mask".
3. Select "Save as".
4. In the file browser, select the directory and enter the filename. The format of the mask file is always `.xml`.

5. Select "Save". If the specified file already exists, it is overwritten with the new data.

To load a mask

1. In the "Masks" >"Setup" tab, select "Open".
2. In the file browser, select the mask file.
3. Select "Open".

12.1.6.6 Mask testing on history waveforms

In the same way as for running acquisitions, you can set up and perform the mask testing on history waveforms.

1. Perform and finish the acquisition.
2. Define the mask, and enable the test. See Section 12.1.6.1, "Working with masks using the toolbar", on page 351 and Section 12.1.6.2, "Working with masks using the dialog", on page 353.
3. Set up the test actions. See Section 12.1.6.3, "Setting up a mask test", on page 354.
4. Select "Menu" > "Acquisition" > "History".
5. Activate "Show history".
6. Select "Play".

12.2 Frequency response and impedance analyses (options R&S MXO5-K36/K337)

Frequency response analysis

The frequency response analysis (FRA) option lets you perform low-frequency response analysis on your oscilloscope. It characterizes the frequency response of various electronic devices, including passive filters and amplifier circuits. For switching power supplies, it measures the control loop response (CLR) and power supply rejection ratio (PSRR).

For more basic information, see Understanding Bode plots.

Impedance analysis

With the impedance analysis option, you can measure the impedance of, for example, power distribution networks (PDN) over frequency. The analysis helps to improve the power integrity, reduce EMI, characterize components, and much more.

General notes for both options

Both options use the oscilloscope's built-in waveform generator (option R&S MXO5-B6) to create stimulus signals ranging from 10 mHz to 100 MHz. The stimulus signal and the output signal of the DUT are measured at each test frequency. The oscilloscope calculates the gain, phase and impedance and plots the resulting curves in the plot diagram (Bode plot).

Seeing both time and frequency domain signals in parallel, you can monitor if the injected signal causes distortion that leads to errors in the measurement.

The setup of both options is very similar. They use the same measurement mode and dialog. Most settings are common for both options. Restrictions to one of the options are mentioned in the descriptions.

12.2.1 Results and plot of analysis

FRA window

The FRA window has several sections. They are mainly the same for frequency response analysis and impedance analysis. Frequency response analysis delivers the results for gain and phase, and impedance analysis the impedance. Margin values are only available for frequency response analysis.

Figure 12-2: Display of frequency response analysis

1 = Toolbar
2 = Progress bar
3 = Plot results table
4 = Marker value table
5 = Margin value table
6 = Exit application
7 = Inactive waveforms
8 = Active waveforms and plots
9 = Controls
10 = Plot diagram, gain: blue color; phase: red color; amplitude: green color; reference: white color
11 = Channel diagram

Figure 12-3: Display of impedance analysis (shunt through measurement): same sections as for frequency response analysis, except for margin value table

12.2.1.1 Progress bar

Displays the current status of the measurement: how many points have already been displayed and the total set number of points.

12.2.1.2 Plot diagram

The FRA plot diagram has the frequency presented on the x-axis. The gain or impedance (blue color waveform in the image) and phase (red color waveform) scales are on the y-axis. The gain plot represents the ratio between input and output. The phase plot shows the phase shift between input and output.

For better visibility and distinguishability, FRA waveforms and their reference waveforms have their own color category in "Settings" > "Appearance" > "Colors" > "Cate-

gory". You can change the color assignment and assign another color or a color table to FRA waveforms. See Section 5.3.1, "Colors", on page 100 for details.

12.2.1.3 Plot results table

In the plot results table for frequency response analysis, all sample points are displayed with their values for the frequency, gain, phase and amplitude. The plot results table for impedance analysis lists the sample points with frequncy, impedance and amplitude values.

If you select a sample in the table, the respective points in the FRA plot are highlighted by a white vertical helper line on the gain and the phase curve.

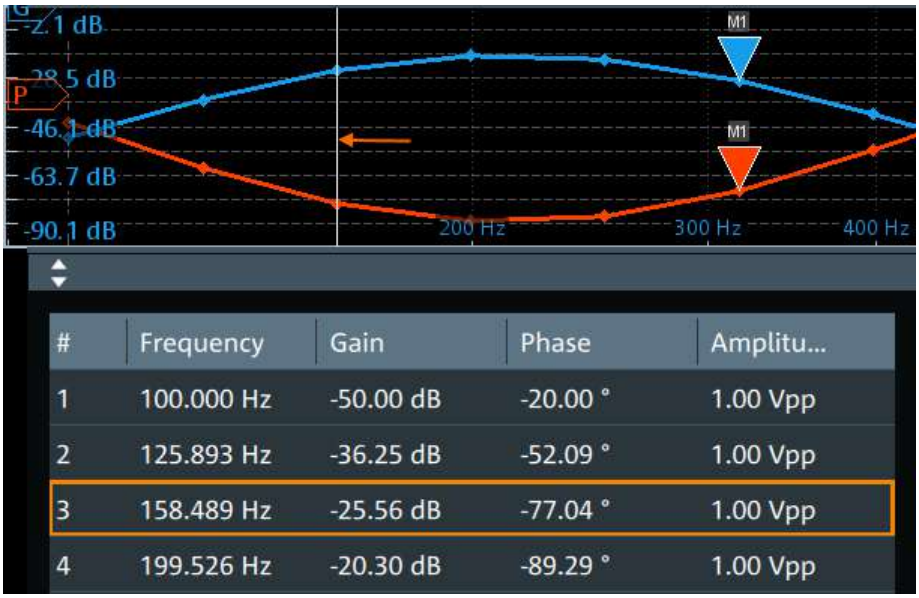

#	Frequency	Gain	Phase	Amplitu...
1	100.000 Hz	-50.00 dB	-20.00 °	1.00 Vpp
2	125.893 Hz	-36.25 dB	-52.09 °	1.00 Vpp
3	158.489 Hz	-25.56 dB	-77.04 °	1.00 Vpp
4	199.526 Hz	-20.30 dB	-89.29 °	1.00 Vpp

12.2.1.4 Marker value table

There are two markers available for the plot, which visualize the points of the margin measurement in frequency response analysis. They are highlighted on the plot diagram by a white line and the marker number 1 or 2. You can move the markers as needed.

In the marker table you can see the frequency, phase and gain (or impedance) values for both markers.

Remote commands:

- `FRANalysis:MARKer<m>:FREQuency` on page 1357
- `FRANalysis:MARKer<m>:GAIN?` on page 1357
- `FRANalysis:MARKer<m>:PHASe?` on page 1357

12.2.1.5 Margin value table

The margin value displays the values of gain margin and the phase margin and their frequencies. Higher margin values are an indicator for higher stability of the system.

- Gain margin is measured at the frequency where the phase shift equals -180°. Gain margin indicates the distance from the measured gain to a gain of 0 dB.
- Phase margin is measured at the frequency where the gain equals 0 dB (also known as crossover frequency). Phase margin indicates the distance from the measured phase to a phase shift of -180°.

The margin value table is only available for frequency response analysis.

Remote commands:

- `FRANalysis:MARGin:STATe` on page 1356
- `FRANalysis:MARGin:GAIN:FREQuency?` on page 1356
- `FRANalysis:MARGin:GAIN:VALue?` on page 1356
- `FRANalysis:MARGin:PHASe:FREQuency?` on page 1356
- `FRANalysis:MARGin:PHASe:VALue?` on page 1356

12.2.1.6 Vertical position and size of the curves

To set the position and the vertical scaling of the gain, phase, amplitude and impedance waveforms:

► Select the waveform and use the vertical [Scale] and [Position] (upper knob) knobs.
Or: Use the settings in the "Scale" tab.

The remote commands for setting the position and scales of the are described in Section 18.17.2.4, "Diagram settings", on page 1351.

12.2.2 Using frequency response and impedance analysis

Connecting the test setup

To avoid measurement uncertainties, make sure that the cables connecting the input and the output of your DUT to the oscilloscope are of similar length.

Starting the analysis

1. Press the [Apps] key.
2. In the "General" tab, tap "FRA" or "Impedance".

   The FRA window opens. Only the settings relevant for the FRA setup are included in the "Menu". The menu provides access to the following dialogs: "Setup", "Vertical", "Horizontal", "Settings", "Save/recall".

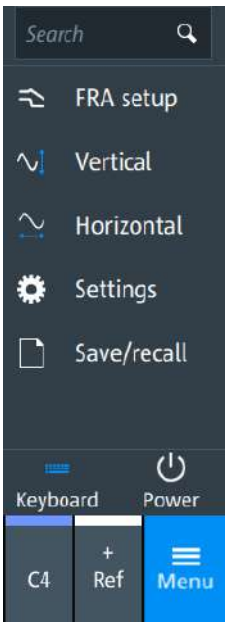

Closing the FRA window

► Tap the "Exit FRA" button at the bottom-right corner of the display.

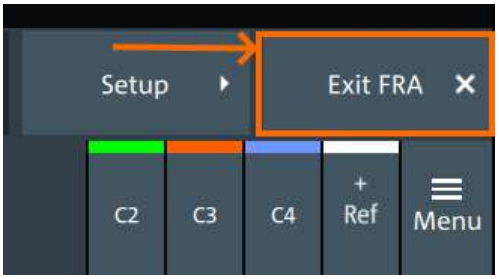

12.2.3 Dependencies of the measurement setup

When performing the analysis, consider the following dependencies of vertical parameters.

- Coupling:
  - For frequencies smaller than 10 Hz, the "Coupling" on page 141 is set to DC.
  - For frequencies higher than 10 Hz, you can select a Coupling manually. The default value is AC.
- The bandwidth value is changed to a higher value, if the selected bandwidth is smaller than double the stop frequency.
- If the bandwidth of the connected probe is lower than the "Stop" frequency, a warning is shown.

12.2.4 Settings for frequency response and impedance analysis

The following sections describe the settings that you can define for the frequency response analysis and impedance analysis.

12.2.4.1 Setup

Access: [Apps] > "General" > "FRA" or "Impedance" > "Setup".

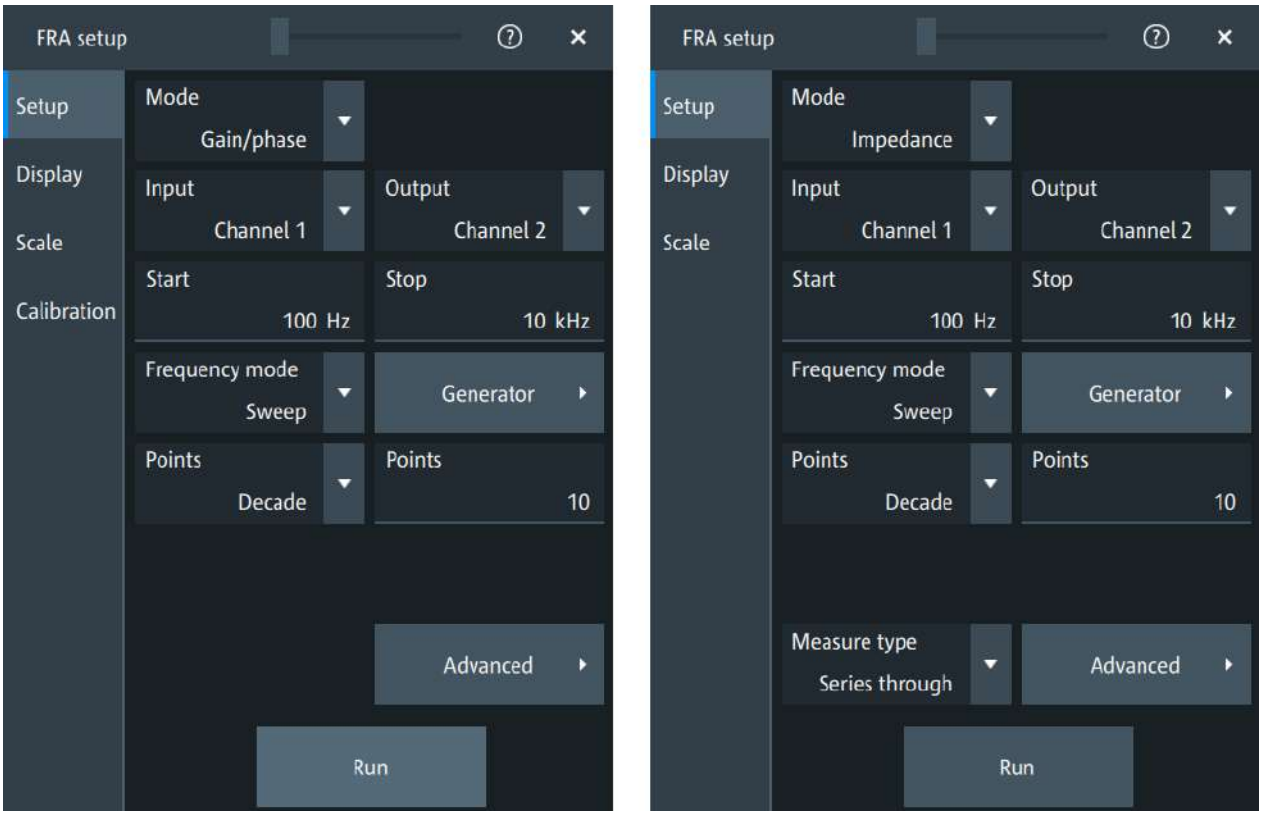

The "Setup" tab provides the analysis settings and access to the generator setup and advanced settings.

Mode
Selects the application mode.

- "Gain/phase": Frequency response analysis (option R&S MXO5-K36)
- "Impedance": Impedance analysis (option R&S MXO5-K337)

The mode is set according to your selection in the "Apps" menu. If you have obtained both options, you can change the analysis mode directly in the "Setup" dialog.

Remote command:
`FRANalysis:MODE` on page 1346

Input
Sets the channel for the input signal of the DUT.

Remote command:
FRANalysis:INPut[:SOURce] on page 1344

Output
Sets the channel for the output signal of the DUT.

Remote command:
FRANalysis:OUTPut[:SOURce] on page 1346

Start, Stop
Set the start and stop frequency of the sweep.

Remote command:
FRANalysis:FREQuency:STARt on page 1343
FRANalysis:FREQuency:STOP on page 1343

Frequency mode
Selects between single frequency and sweep analysis.

"Sweep"	Set the start and stop frequency, the points measurement mode and the number of points.
"Single"	Set the signal frequency in "Start", and the number of points. The points define the scale of the horizontal axis.

Remote command:
FRANalysis:FREQuency:MODE on page 1343

Generator
See Section 12.2.4.2, "Generator settings", on page 363.

Points
Selects if the number of points is measured as total or per decade and sets the number of points.

Remote command:
FRANalysis:POINts:TOTal on page 1347
FRANalysis:POINts:MODE on page 1347
FRANalysis:POINts:LOGarithmic on page 1347

Measure type
Selects the measurement method for the impedance analysis. Select the measurement method according to the impedance magnitude of your DUT.

"Shunt through"	The shunt through method can measure very low impedance.
"Series through"	The series-through method is most effective when measuring high impedance values: the 10% accuracy range is about 5 Ω to 20 kΩ or roughly one decade higher than the reflection method.
"Voltage current"	This setup is very flexible and especially suitable to measure input impedance and output impedance of active circuits, such as DC/DC converter.

Remote command:
FRANalysis:IMPedance[:MODE] on page 1344

Run
Starts the frequency response analysis.

Remote command:
FRANalysis:STATe on page 1348

Repeat
Repeats the measurement, using the same parameters.

Only available in the FRA control menu.

Remote command:
FRANalysis:REPeat on page 1348

12.2.4.2 Generator settings

Access: [Apps] > "General" > "FRA" > "Setup" > "Generator".

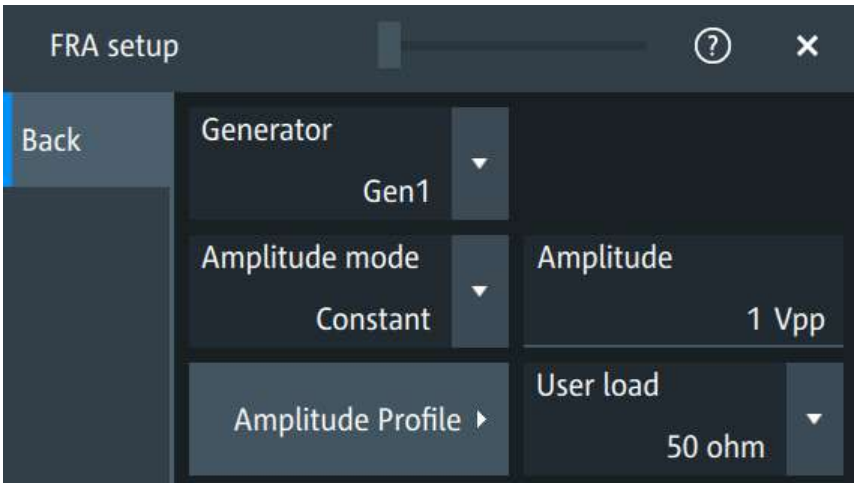

The dialog provides the settings for the generator.

Generator
Selects the built-in generator to start a frequency sweep for a defined frequency range.

"Both" is only available for impedance analysis. The generators are synchronized and deliver the same signal. Thus, you do not need a splitter in the measurement setup.

Remote command:
FRANalysis:GENerator[:CHANnel] on page 1349

Amplitude mode
Selects, if the amplitude is a constant value ("Amplitude") or is defined as an amplitude profile.

If the amplitude profile is selected, a green-colored waveform of the amplitudes for the different frequencies is displayed in the analysis plot, and scale settings for this waveform are available.

Remote command:
FRANalysis:AMPLitude:MODE on page 1348
FRANalysis:AMPLitude:ENABle on page 1352

Amplitude
Sets a fixed amplitude for the generated signal.

Remote command:
FRANalysis:GENerator:AMPLitude on page 1349

Amplitude profile
Opens a dialog to set the amplitude profile. See Section 12.2.4.3, "Amplitude profile", on page 364.

You can define specific amplitudes for different frequencies. The amplitude profile is useful when testing sensitive circuits, where the amplitude gets too high. In this case, distortion can occur.

User load
Selects the generator voltage display for 50Ω or high impedance load.

Remote command:
FRANalysis:GENerator:LOAD on page 1349

12.2.4.3 Amplitude profile

Access: [Apps] > "General" > "FRA" > "Setup" > "Generator" > "Amplitude profile".

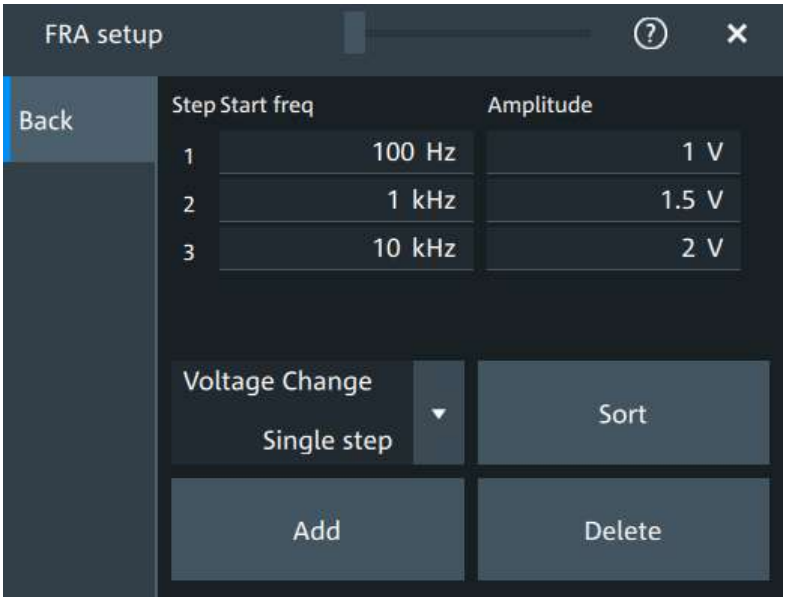

Opens a dialog to set the amplitude profile. You can then define different amplitudes for different frequency, and also the number of points (steps) in the profile. The amplitude profile is useful when testing sensitive circuits, where the amplitude gets too high. In this case distortion can occur.

Step start freq, Amplitude
Set the frequency and amplitude values for the selected step.

Remote command:
`FRANalysis:AMPLitude:PROFile:POINt<m>:AMPLitude` on page 1350
`FRANalysis:AMPLitude:PROFile:POINt<m>:FREQuency` on page 1350

Voltage change
Selects if the voltage change is done as a single step or as a ramp.

Remote command:
`FRANalysis:AMPLitude:PROFile:MODE` on page 1350

Add
Adds a new step to the amplitude profile.

Remote command:
`FRANalysis:AMPLitude:PROFile:APOint` on page 1350
`FRANalysis:AMPLitude:PROFile:COUNt` on page 1350

Sort
Sorts the steps in the amplitude table by frequency, starting with the lowest frequency.

Remote command:
`FRANalysis:AMPLitude:PROFile:SORT` on page 1351

Delete
If enabled, a delete icon appears next to each step in the amplitude profile table. Tap the icon to delete the step.

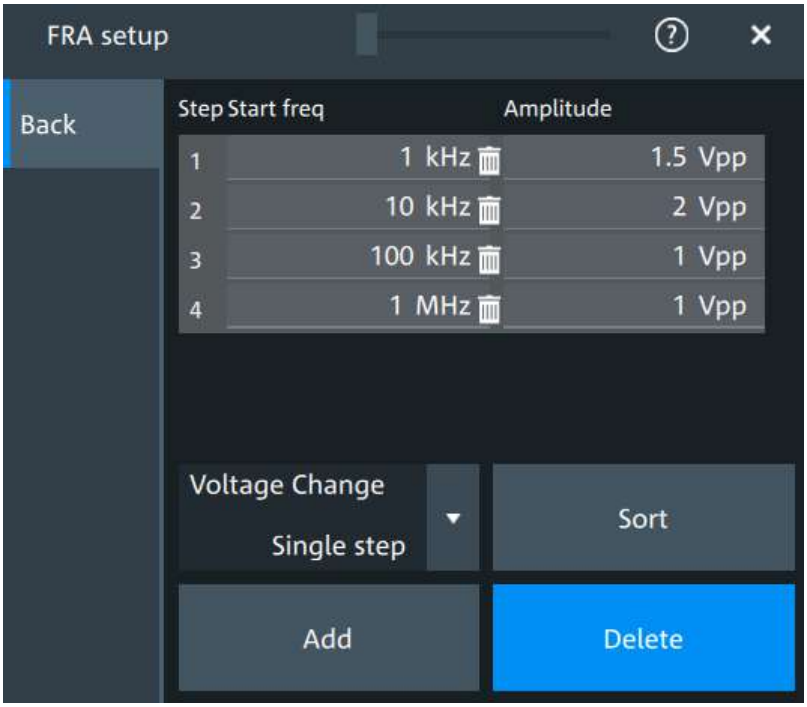

Remote command:
`FRANalysis:AMPLitude:PROFile:POINt<m>:REMove` on page 1351

12.2.4.4 Advanced

Access: [Apps] > "General" > "FRA" > "Setup" > "Advanced".

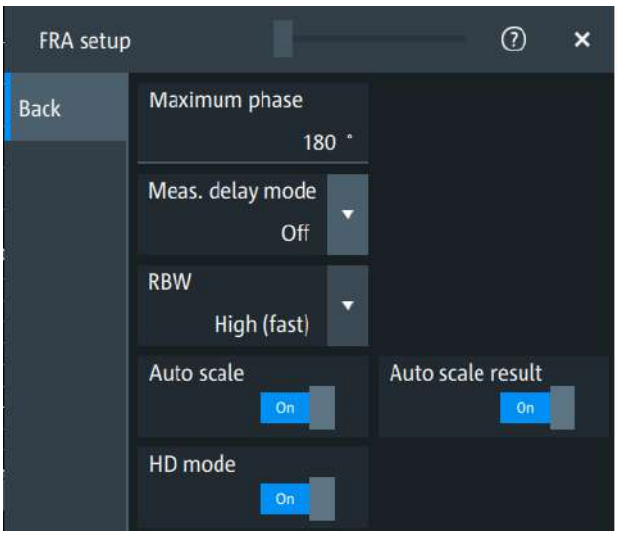

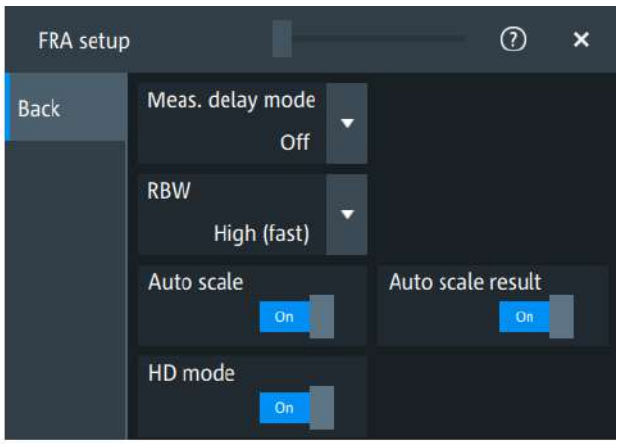

Maximum phase
Sets the upper boundary of the vertical phase window.

The lower boundary is given by "Maximum phase" - 360°.

By default, the "Maximum phase" is set to 180° for a phase window ranging from -180° to 180° accordingly.

Only available for frequency response analysis.

Remote command:
FRANalysis:PHASe:MAXimum on page 1346

Meas. delay mode, Delay time, Delay period
Selects the type of delay that the system waits before measuring the next point of the plot. Delay is helpful in systems that need more time to adapt to the new frequency, for example if filters with significant time group delays are present. You can select a time delay and set the "Delay time", or a period delay and set the "Delay period".

Remote command:
FRANalysis:MEASurement:DELay:STATe on page 1344
FRANalysis:MEASurement:DELay:MODE on page 1344
FRANalysis:MEASurement:DELay[:TIME] on page 1345
FRANalysis:MEASurement:DELay:PERiod[:NUMBer] on page 1345

RBW
Sets the resolution bandwidth, which determines the number of measurements that are used for creating the plot.

"High (fast)" A high RBW value is useful for obtaining a general understanding of a system's behavior over a wide frequency range. The accuracy of the measurement is not as good, but the measurement is completed fast.

"Medium" A medium RBW value is a compromise between the measurement time and measurement accuracy.

"Low (slow)" A low RBW value allows for a more detailed analysis of the system. Since more data needs to be collected, the measurement time can increase significantly.

Remote command:
FRANalysis:MEASurement:RBW on page 1346

Auto scale
If enabled, the vertical scaling of input and output channel is done automatically for every new measurement frequency point.

That guarantees a non-disturbed signal and a maximum of measurement resolution.

For Coupling = "DC", the channel offset is also changed to compensate the signal offset.

The function is disabled if calibration is active.

Remote command:
FRANalysis:AUToscale on page 1342

Auto scale result
If enabled, the scaling of the plot diagram is adjusted when new measurement results are determined. Thus, all values are included in the plot.

Remote command:
FRANalysis:AUToscale:RESult[:ENABle] on page 1342

HD mode
Disables the HD mode, which is active by default. In particular, disable the HD mode if you analyze switching peaks.

The frequency in HD mode must be at least 3 times the current frequency. The bandwidth filter of the channel is adjusted automatically to the generator frequency.

Remote command:
`FRANalysis:HDEFinition[:ENABle]` on page 1343

12.2.4.5 Display

Access: [Apps] > "General" > "FRA" > "Display".

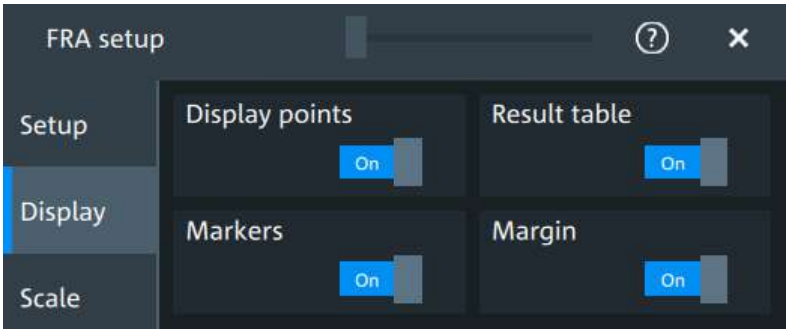

In this dialog, you can select which elements are displayed in the FRA diagram.

Display points
Enables the display of the measurement points for the frequency response analysis.

Remote command:
`FRANalysis:MEASurement:POINt[:DISPlay]` on page 1345

Result table
Enables the display of the result table for the FRA.

Remote command:
`FRANalysis:RESult:STATe` on page 1359

Markers
Activates the display of the marker table and the markers in the plot.

See also: Section 12.2.1.4, "Marker value table", on page 358.

Remote command:
`FRANalysis:MARKer<m>:STATe` on page 1359

Margin
Enables the display of the margin table for the frequency response analysis.

Available only for frequency response analysis. See also: Section 12.2.1.5, "Margin value table", on page 359.

Remote command:
`FRANalysis:MARGin:STATe` on page 1356

12.2.4.6 Scale

Access: [Apps] > "General" > "FRA" > "Scale".

The settings are different for frequency response analysis and impedance analysis.

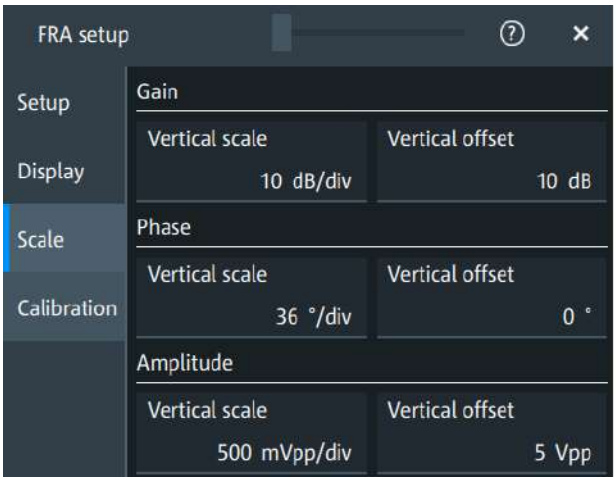

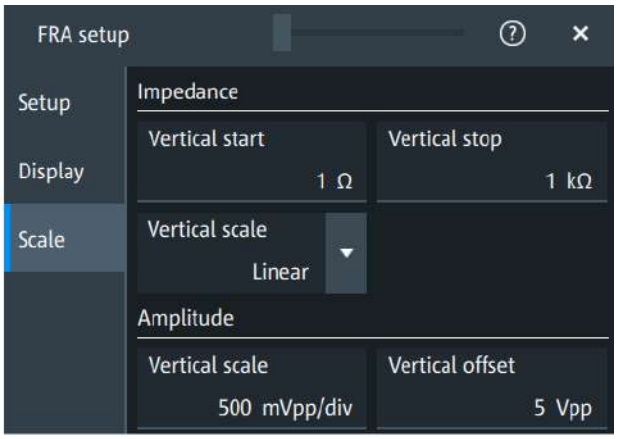

Vertical scale
Sets the scale of the y-axis in the function diagram for gain, phase and amplitude.

Remote command:
`FRANalysis:PHASe:SCALe` on page 1354
`FRANalysis:GAIN:SCALe` on page 1353

Vertical offset
Sets a voltage offset to adjust the vertical position on the screen for gain, phase and amplitude.

Remote command:
`FRANalysis:PHASe:OFFSet` on page 1354
`FRANalysis:GAIN:OFFSet` on page 1352

Vertical start, Vertical stop
Set the lower and upper value of the vertical scale for the impedance trace.

Remote command:
`FRANalysis:IMPedance:STARt` on page 1353
`FRANalysis:IMPedance:STOP` on page 1353

Vertical scale
Sets the scale mode for the impedance trace: linear or logarithmic.

Remote command:
`FRANalysis:IMPedance:SCALe` on page 1353

12.2.4.7 Calibration

Calibration is used to compensate the electrical parameter of probes, cables, connectors or fixtures.

Access: [Apps] > "General" > "FRA" > "Calibration".

Calibration is only available for frequency response analysis.

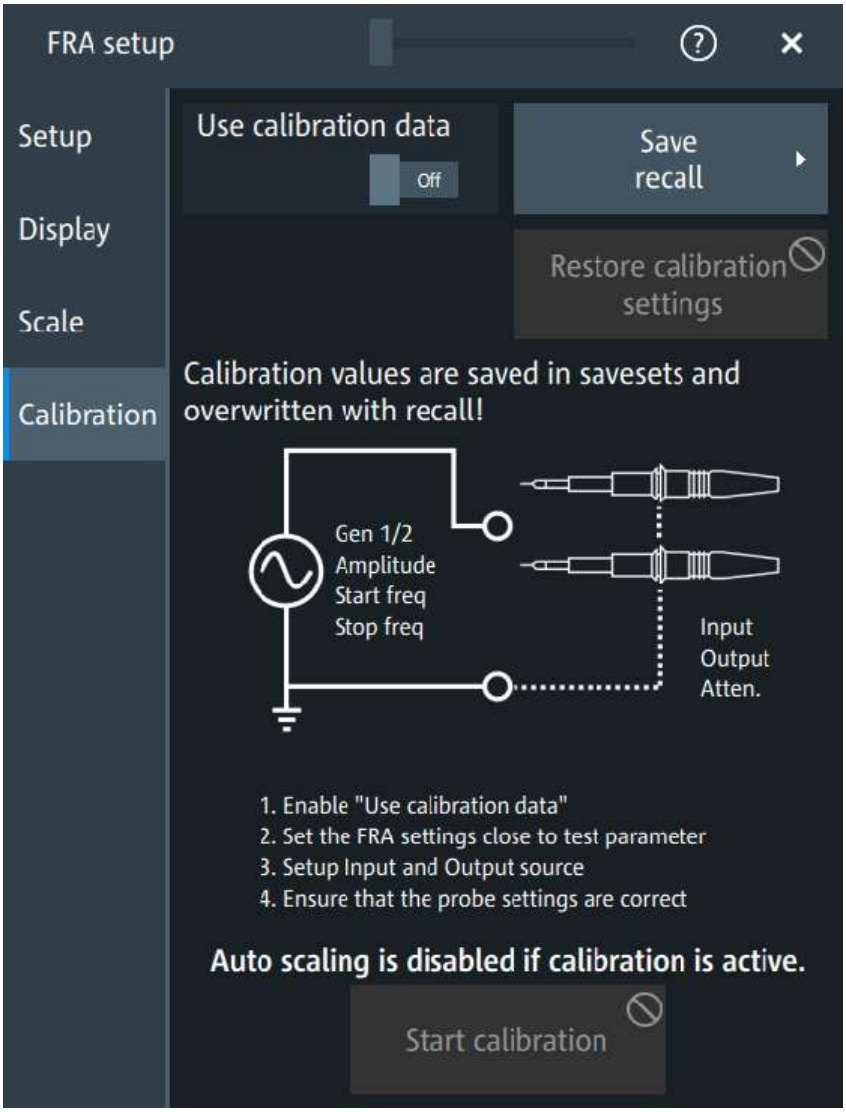

Test setup considerations

Example of a calibration test setup shows an example of a test setup, where the input probe is connected to [C1] and the output probe is connected to [C2]. The input is also connected to the waveform generator.

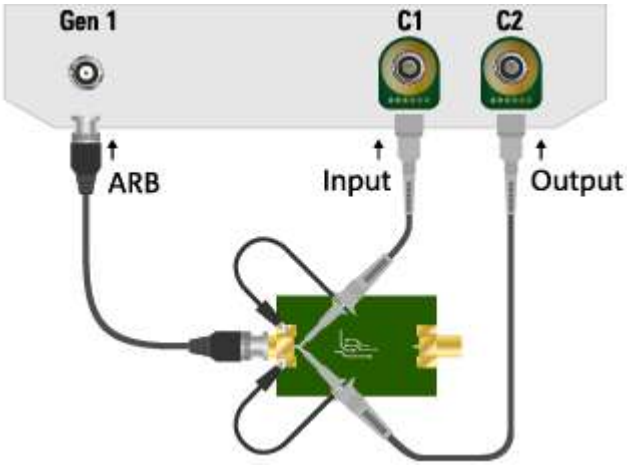

Figure 12-4: Example of a calibration test setup

Input = [C1], [Gen1]
Output = [C2]

Consider also the following:

- Calibration for FRA is only possible with probes connected to the input and output channels.
- For best FRA calibration results, shorten the DUT and place the probe tips as near as possible to each other.
- If there is a fixture for the DUT, include it in the calibration setup.
- If the DUT needs a termination, conduct it with an external termination directly on the DUT output or input.

Calibration state

Once the calibration is started, a label is shown in the toolbar.

The calibration label displays the status of the calibration. The following states are available:

- "Valid": calibration values are used
- "Invalid": device settings changed
- "Running": a calibration cycle is running
- "None": not performed or no data

Settings influencing calibration

Calibration is only valid for the settings that are active during its execution. If one of the following settings is changed, the calibration becomes "Invalid":

- "Input" and "Output" channel
- "Channel coupling" and "Bandwidth"
- "Channel scaling"

- "Generator"
- "User load"
- "Amplitude mode"
- "Amplitude profile"
- "Amplitude profile" > "Voltage change"
- "Start" frequency
- "Stop" frequency
- "Points" mode and total points
- "Meas. delay mode"
- "Delay time"
- "RBW"

If calibration is active, "Auto scale" is disabled.

To perform a calibration

1. Enable "Use calibration data".
2. Set the FRA settings close to the test parameters.
3. Select the Input and Output source.
4. Ensure that the probe settings are correct.

The following settings are available for the calibration:

Use calibration data
If enabled, the user calibration data is used for the frequency response analysis.

Remote command:
`FRANalysis:CALibration:STATe` on page 1355

Save/recall
Opens the "Save/recall" dialog. You can save the instrument setting in a saveset, and load an existing saveset. For details, see Section 13.3, "General and measurement settings: savesets", on page 470.

The saveset includes the calibration data. If you load a saveset, the current calibration values are overwritten.

Restore calibration settings
Restores the FRA settings to the values that were selected during the calibration process. Restore allows you to repeat measurements with a valid calibration state. See also "Settings influencing calibration" on page 371.

To keep and restore calibration settings in remote control, set up and calibrate the frequency analysis, and save the instrument settings in a saveset. When you load this saveset later, the calibration data is restored together with the instrument settings.

Start calibration
Starts the calibration. The button is only enabled if there is a valid test setup.

The state of the calibration process is displayed in the calibration label in the toolbar.

After a calibration is performed successfully, the calibration values are saved automatically.

Remote command:
`FRANalysis:CALibration:CALibration` on page 1355
`FRANalysis:CALibration:RESult?` on page 1355

12.2.5 Saving analysis results

Access: "Menu" > "Save/recall" > "Results".

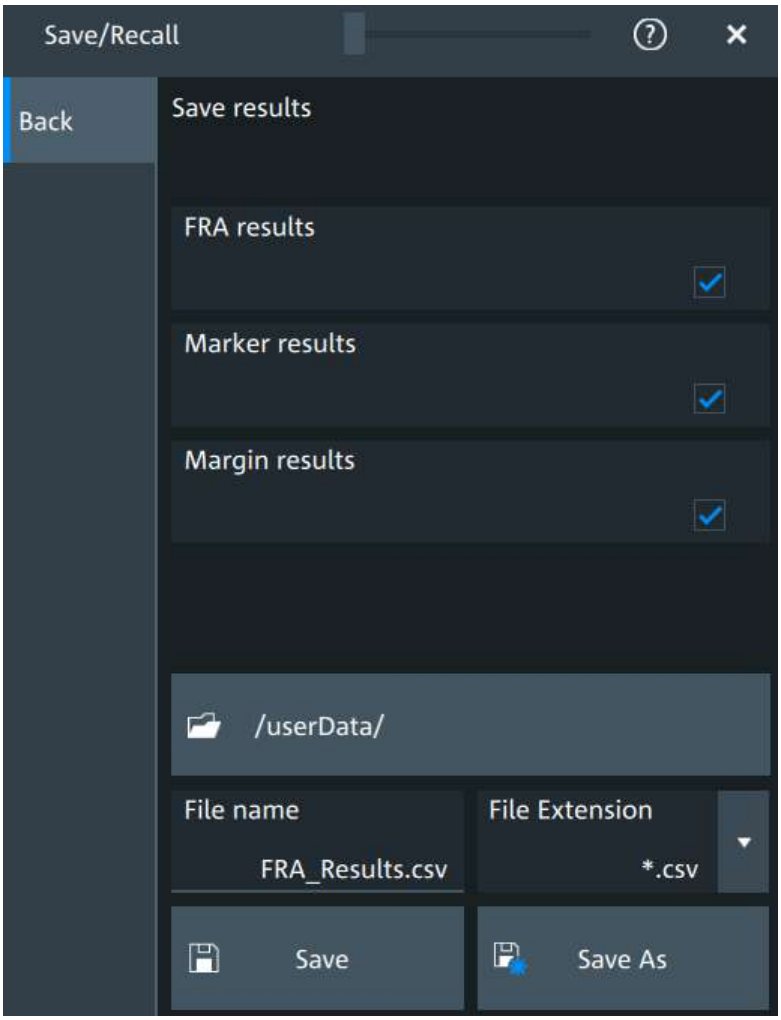

FRA results
In this dialog, you can select which result values you want to include in your FRA export results file.

The following options are available:
- "FRA results": includes the frequency, gain, phase and amplitude
- "Marker results": includes the marker frequency and gain

- "Margin results": includes the margin gain and phase

Remote command:
`EXPort:RESult:SELect:FRA:MARGin` on page 1364
`EXPort:RESult:SELect:FRA:MARKer` on page 1364
`EXPort:RESult:SELect:FRA:RESult` on page 1364

12.2.6 Reference waveforms of FRA curves

To compare the results of frequency resonse analysis and analyze differences between them, you can use up to 4 specific reference waveforms. These references can be created from gain and phase curves, and from other references. The type of the source waveform is included in the reference waveform data.

You can save an unlimited number of reference waveforms and load them for further use. Markers are also set on these reference waveforms.

The display of a reference waveform is independent from the display of the source waveform; you can move, stretch and compress the curve vertically. A loaded reference waveform is restored when you leave the FRA mode and enter it again with no preset inbetween. Reference waveforms are aligned horizontally to the actual start and stop position in the waveform diagram.

When a FRA reference waveform is selected, you can change scale and position using the knobs on the front panel.

12.2.6.1 Reference waveform setup

Access: perform a frequency response analysis and display resulting waveforms > select the "+ Ref" signal activator > "Setup" > select reference waveform

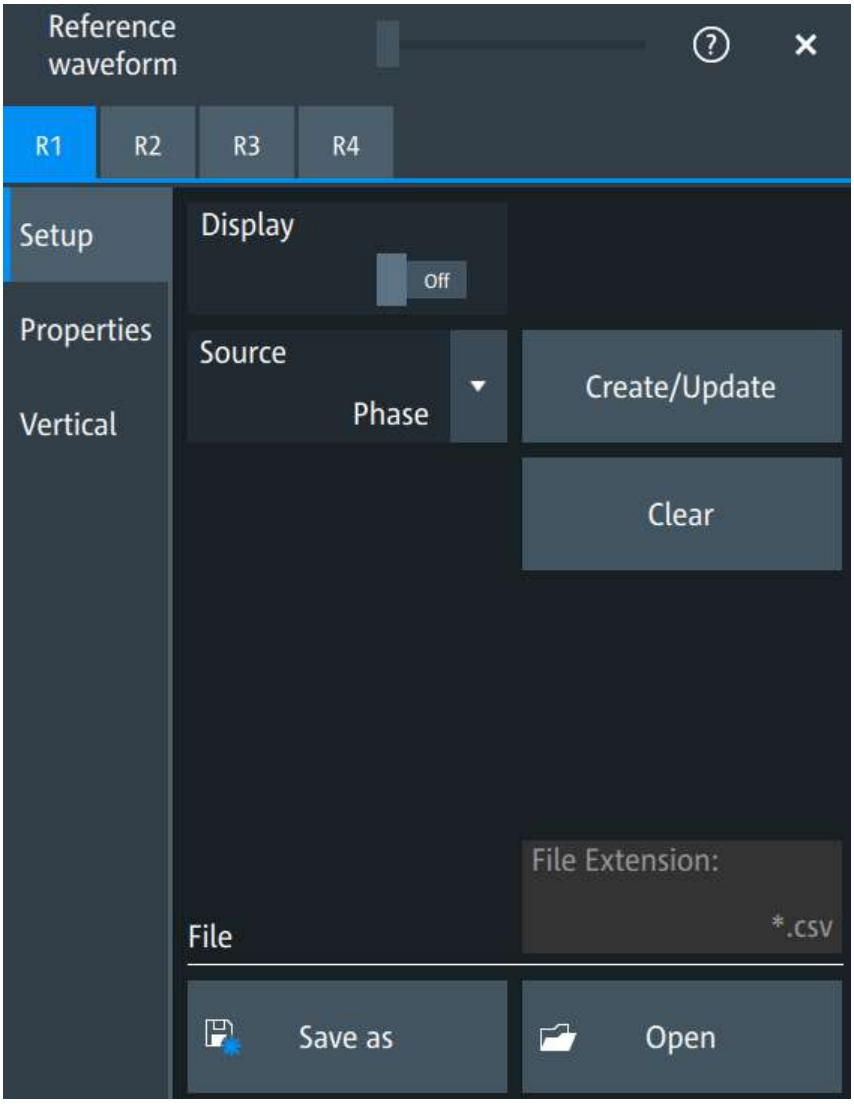

In the "Setup" tab, you select the source of the reference waveform and create the reference.

Display
Enables the display of the reference waveform in the diagram. Before you can display it, create the reference waveform.

Remote command:
`FRANalysis:REFCurve<rc>:ENABle` on page 1360

Source
Selects the source waveform of the reference from the existing frequency response waveforms, e.g. gain, phase or an other reference.

Remote command:
`FRANalysis:REFCurve<rc>:SOURce` on page 1362

Create/Update
Copies the selected source waveform with all its settings to the memory of the reference waveform. If there is a previously defined reference waveform in this memory, it is updated by the current source waveform.

A progress bar informs you about the process.

Remote command:
`FRANalysis:REFCurve<rc>:UPDate` on page 1363

Clear
Deletes the selected reference waveform. It disappears from the display, and its memory is deleted.

Remote command:
`FRANalysis:REFCurve<rc>:CLEar` on page 1360

File extension
Shows the file format. Currently, only CSV files are supported.

Save as
Opens a file explorer where you select the folder, enter the filename and save the file. The complete reference waveform is stored in a CSV file and can be reloaded later.

A progress bar informs you about the process.

Remote command:
`FRANalysis:REFCurve<rc>:NAME` on page 1361
`FRANalysis:REFCurve<rc>:SAVE` on page 1362

Open
Opens a file selection dialog box and loads the selected reference file.

Remote command:
`FRANalysis:REFCurve<rc>:OPEN` on page 1361

12.2.6.2 Reference waveform properties

Access: perform a frequency response analysis and display resulting waveforms > select the "+ Ref" signal activator > "Properties" tab > select reference waveform

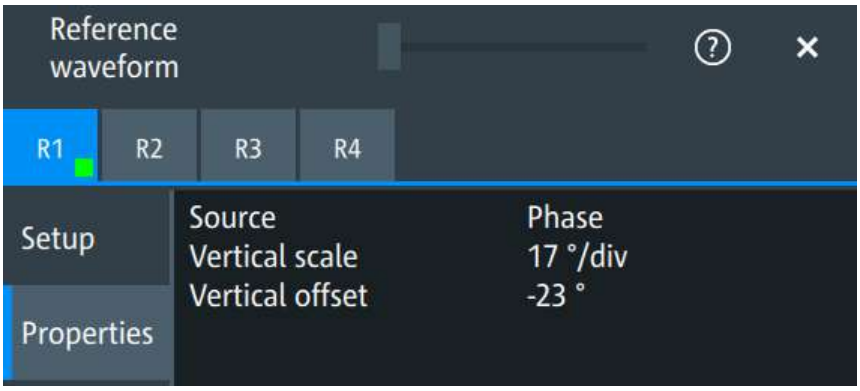

A FRA reference waveform can be vertically scaled and positioned in the diagram. The "Properties" tab shows the original settings of the reference waveform, which are stored together with the waveform data.

The following settings are displayed:

- Type of the source waveform
- Vertical scale and offset that are defined in the "Scale" tab (Section 12.2.4.6, "Scale", on page 369)

12.2.6.3 Vertical settings for reference waveforms

Access: perform a frequency response analysis and display resulting waveforms > select the "+ Ref" signal activator > "Vertical" tab > select reference waveform

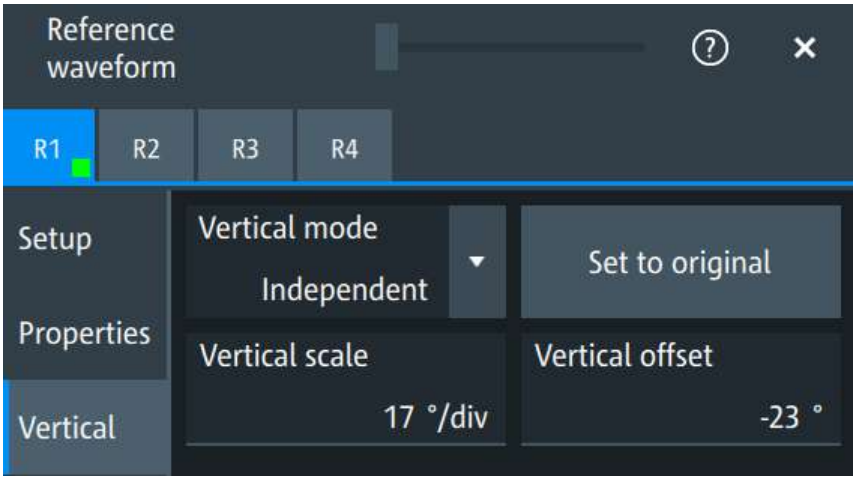

Vertical mode
Selects the type of vertical settings:

"Coupled to source" Vertical position and scale of the source are used.

"Independent" Scaling and position can be set specific to the reference waveform.

Remote command:
`FRANalysis:REFCurve<rc>:VMODe` on page 1363

Set to original
Available, if "Vertical mode" = "Independent".

Restores the original vertical settings of the reference waveform.

Remote command:
`FRANalysis:REFCurve<rc>:TOORiginal` on page 1362

Vertical scale
Available, if "Vertical mode" = "Independent".

Sets the vertical scale, which defines the displayed amplitude of the selected waveform.

The unit of the reference is the same as the unit of the source waveform.

Remote command:
`FRANalysis:REFCurve<rc>:SCALe` on page 1362

Vertical offset
The vertical offset moves the reference waveform vertically. Enter a value with the unit of the waveform.

Remote command:
`FRANalysis:REFCurve<rc>:OFFSet` on page 1361

12.2.7 Example of impedance analysis

The following screenshots show a series through measurement of a lowpass filter that has its maximum attenuation near 5 MHz. The logarithmic scale is used for the impedance curve.

Figure 12-5: Initial impedance measurement

Figure 12-6: Reference waveform was created from the impedance curve

Figure 12-7: New impedance measurement around 5 MHz to analyze the peak, with the reference waveform of the previous measurement

12.3 Power analysis (option R&S MXO5-K31)

With the MXO 5 and option R&S MXO5-K31, you can perform power analysis measurements.

For best measurement results, we recommended setting channel Bandwidth = 20 MHz.
If using the HD mode, we recommended setting Bandwidth = 100 MHz.

12.3.1 Power analysis initial settings

In the main "Power analysis" dialog, you select the required power measurements, align the channels and set the offset compensation to get correct measurements.

12.3.1.1 Select power measurements

In the "Analysis" tab, you select the power analysis measurements.

You can add up to 6 power analysis measurements, including several instances of the same measurement.

From here, you can access the settings for the enabled power analysis measurements.

To add a new power measurement

1. Select "Menu" > "Apps" > "General" tab > "Power".
2. In the "Analysis" tab, select "+ Add".

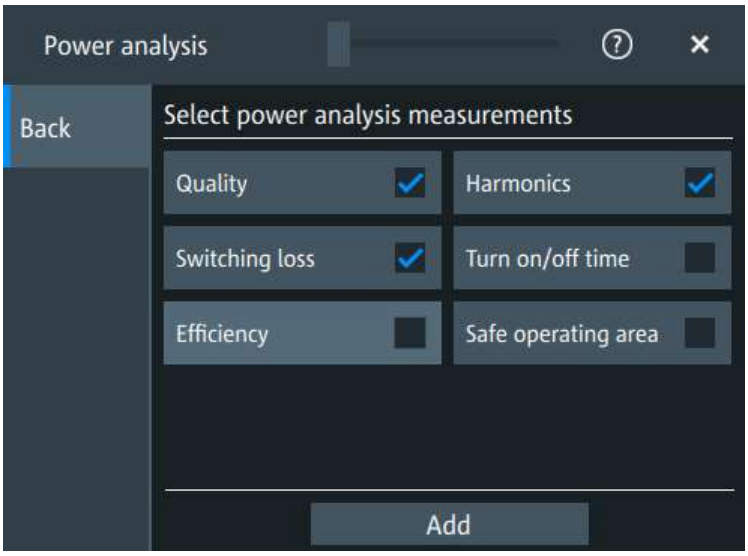

3. Select a power measurement on the list to enable it.
4. Select "+ Add" to add the selected measurements.

All selected measurements are enabled.

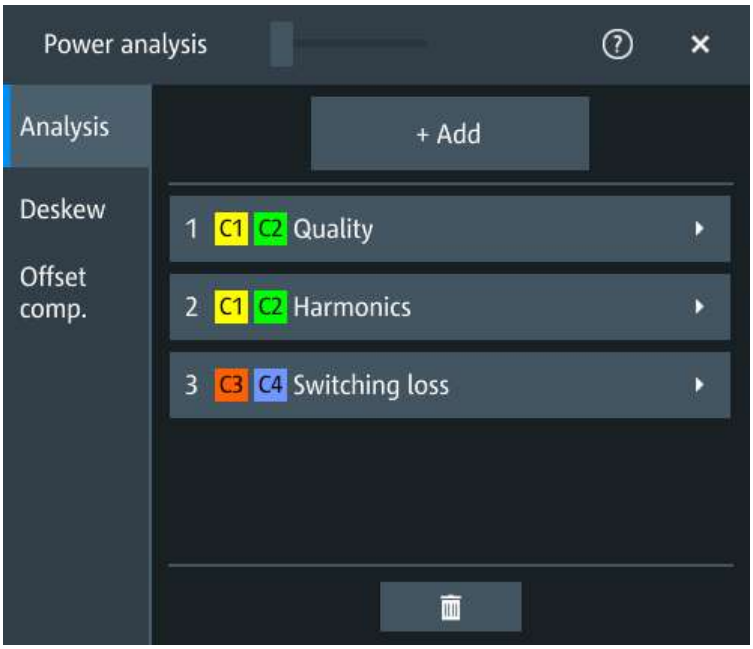

To delete a measurement

1. Select the "Menu" > "Apps" > "General" tab > "Power", to open the power measurement dialog.
2. In the "Analysis" tab, select .

   A delete icon appears in the selection button of each measurement.

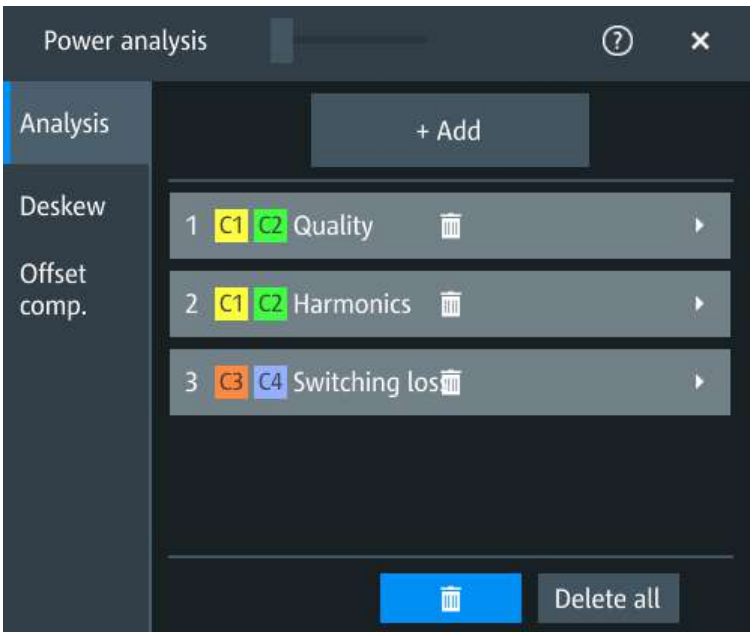

3. Select the power measurement that you want to delete. Alternatively, select "Delete All" to delete all measurements.

+ Add
Opens a dialog to select the power analysis measurements. See "To add a new power measurement" on page 380.

Remote command:
`POWer<m>[:ENABle]` on page 1367
`POWer<m>:TYPE` on page 1367

12.3.1.2 Deskew

In the dialog box you can perform a deskew of your current and voltage probes.

Required equipment:

- R&S RT-ZF20 power deskew fixture
- Rohde & Schwarz voltage probe
- Rohde & Schwarz current probe

Deskew settings

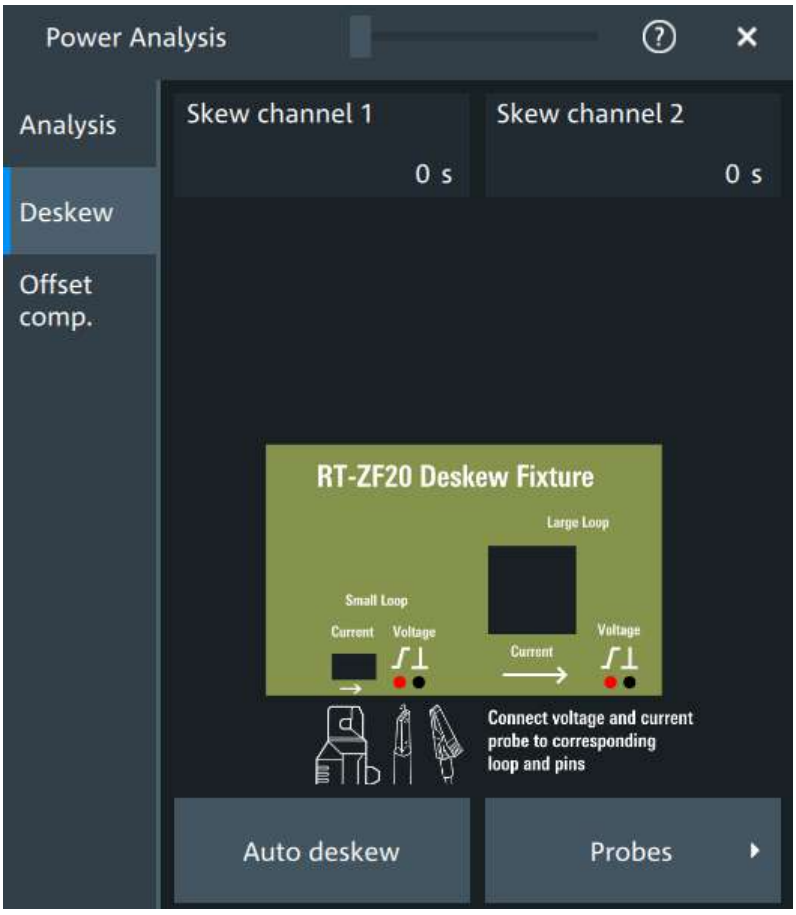

Skew channel
Sets user-defined skew settings for the channel connected to the current probe.

Alternatively, you can start an "Auto deskew".

Remote command:
CHANnel<ch>:SKEW:TIME on page 1113

Auto deskew
Starts an auto deskew. It is used to determine the trigger and scaling properties.

For an auto deskew, only Rohde & Schwarz probes are supported.

Make sure that the probes are configured correctly before you start the deskewing.

After the deskew, the result values are written in the "Skew" value of the corresponding channel.

If there are more than two active channels, you can perform automatic deskew step by step and exchange the probes connected fixture between the steps.

Remote command:
POWer<m>:ASKew[:EXECute] on page 1368

Probes
Opens the vertical setup dialog, where you find the probe settings.

12.3.1.3 Offset compensation

The offset compensation adjustments are applied to all 3-phase power analysis measurements.

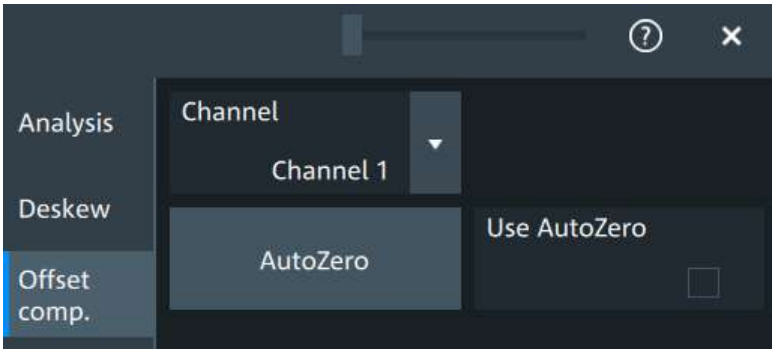

Channel
Select the channel for the offset compensation.

Remote command:
PROBe<ch>:SETup:OFFSet:ZADJust on page 1132

AutoZero, Use AutoZero
Voltage probes can have a zero error. The zero error is the voltage appearing at the probe output when nothing is connected to the probe. If a zero error occurs, it results in an external offset and the waveform is not displayed around 0 V.

To correct the zero error of voltage probes, short the signal pin and the ground pin together. Then select "AutoZero". While the alignment is running, the instrument switches to DC coupling to display the waveform correctly.

To correct the zero error, enable "Use AutoZero".

"AutoZero" uses the current scale and attenuation settings during alignment. If you change these settings, e.g. the vertical scale, repeat "AutoZero".

If a current probe is connected, the function demagnetizes the probe's sensor head and sets the waveform to zero position.

Remote command:
`PROBe<ch>:SETup:OFFSet:AZERo` on page 1119
`PROBe<ch>:SETup:OFFSet:USEautozero` on page 1119

12.3.2 Power quality

In an electric circuit power is a measure for the rate of flow of energy at a certain point of the circuit. The active power of a circuit is the portion of energy that is transferred in one direction over a complete cycle of the AC waveform. The active power is the energy that can be used for work. In AC circuits, however, inductive and capacitive elements can store energy temporarily. This portion of the power flow known as reactive power is then returned to the source without doing any work.

The power quality analysis measurements include the active power, the reactive power, the apparent power and the power factor. The crest factors and the phase angle between the current and voltage are also measured. These properties describe the power transfer in the system and allow you to characterize the power quality of the system.

Required probes:

- Differential voltage probe
- Current probe

12.3.2.1 Configuring power quality

For details of the configuration settings, see Section 12.3.1.1, "Select power measurements", on page 380.

1. Add a new power quality measurement as described in "To add a new power measurement" on page 380.
2. Connect the differential voltage probe and the current probe to the oscilloscope.
3. Deskew the probes as described in Section 12.3.1.2, "Deskew", on page 382.
4. Connect the probes to the DUT:

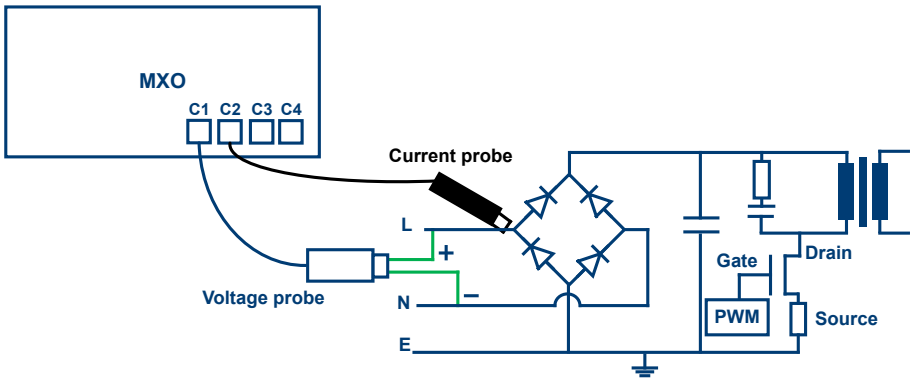

a) Connect the positive (+) signal socket of the differential voltage probe to the line of the AC input.
b) Connect the negative (-) signal socket of the differential voltage probe to the neutral of the AC input.
c) Connect the current probe to the line of the AC input.

5. In the "Analysis" tab, tap the "Quality" measurement.

   The "Quality" setup dialog opens.

6. Select the correct channels for the "Voltage" and the "Current" probes.

7. Set the "Fund. frequency" according to your signal.

8. If necessary, enable "Statistics".

   On the screen, you can see the measurement waveforms of the current, the voltage and the power. Also, the result table with numeric measurement results is shown. For details, see Section 12.3.2.7, "Power quality results", on page 389.

12.3.2.2 Power quality settings

Access: "Menu" > "Apps" > "Power" > "+ Add" > "Quality" > select "Quality" > "Setup".

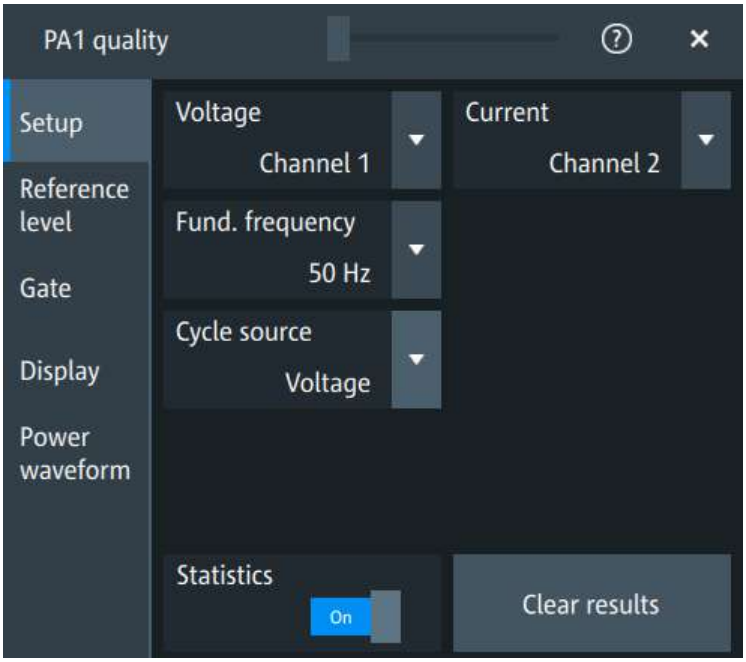

In the "Setup" tab, you configure the power quality measurement: select the sources, the fundamental frequency, and enable statistics.

Voltage
Selects the voltage source waveform. Analog channels and math waveforms can be used.

Remote command:
`POWer<m>:QUALity:SOURce[:VOLTage]` on page 1370

Current
Selects the current source waveform. Analog channels and math waveforms can be used.

Remote command:
`POWer<m>:QUALity:SOURce:CURRent` on page 1370

Fund. frequency
Selects the input frequency of the source signal.

Remote command:
`POWer<m>:QUALity:FREQuency[:VALue]` on page 1370
`POWer<m>:QUALity:FREQuency:USER` on page 1371

Cycle source
Selects the source of the period measurement. This period is the reference for related measurements and calculations.

Remote command:
`POWer<m>:QUALity:SOURce:CYCLe` on page 1370

Statistics
Activates or deactivates the statistical evaluation for the selected power measurement. If statistics are enabled, the following results are calculated:

Label	Description
Current	Current value
Max	Maximum value
Min	Minimum value
Mean	Average
RMS	Root mean square
σ (S-dev)	Standard deviation
Event count	Number of measured events
Wave count	Number of waveforms (acquisitions)

Remote command:
`POWer<m>:QUALity:STATistics[:ENABle]` on page 1368
`POWer<m>:QUALity:STATistics:WFMCount?` on page 1369
`POWer<m>:SWITching:STATistics:ENABle` on page 1368
`POWer<m>:SWITching:STATistics:WFMCount?` on page 1369
`POWer<m>:EFFiciency:STATistics[:ENABle]` on page 1368
`POWer<m>:EFFiciency:STATistics:WFMCount?` on page 1369

Clear results
Resets the statistical results for the respective power measurements, and starts a new statistical evaluation if the acquisition is running.

Remote command:
`POWer<m>:QUALity:STATistics:RESet` on page 1369
`POWer<m>:SWITching:STATistics:RESet` on page 1369
`POWer<m>:EFFiciency:STATistics:RESet` on page 1369

12.3.2.3 Power quality display

Access: "Menu" > "Apps" > "Power" > "+ Add" > "Quality" > select "Quality" > "Display".

In this dialog, you select the power quality analysis measurements that you want to display. For more details on the different measurements, see Section 12.3.2.7, "Power quality results", on page 389.

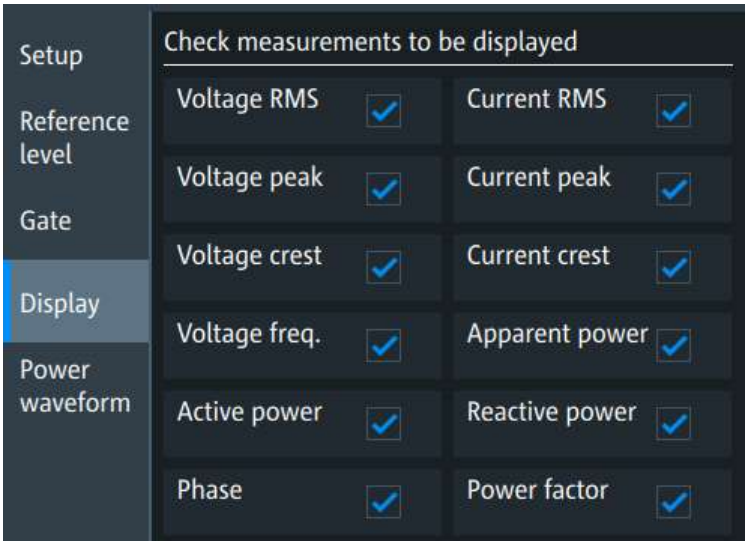

Remote commands

- `POWer<m>:QUALity:DISPlay:CURRent:CREStfactor` on page 1371
- `POWer<m>:QUALity:DISPlay:CURRent:PEAK` on page 1372
- `POWer<m>:QUALity:DISPlay:CURRent:RMS` on page 1372
- `POWer<m>:QUALity:DISPlay:POWer:ACTive` on page 1372
- `POWer<m>:QUALity:DISPlay:POWer:APParent` on page 1372
- `POWer<m>:QUALity:DISPlay:POWer:PFACtor` on page 1373
- `POWer<m>:QUALity:DISPlay:POWer:PHASe` on page 1373
- `POWer<m>:QUALity:DISPlay:POWer:REACtive` on page 1373
- `POWer<m>:QUALity:DISPlay:VOLTage:CREStfactor` on page 1373
- `POWer<m>:QUALity:DISPlay:VOLTage:FREQuency` on page 1374
- `POWer<m>:QUALity:DISPlay:VOLTage:PEAK` on page 1374
- `POWer<m>:QUALity:DISPlay:VOLTage:RMS` on page 1374

12.3.2.4 Reference level

See Section 12.3.8.1, "Reference level", on page 421.

12.3.2.5 Gate

See Section 12.3.8.2, "Gate settings for power measurements", on page 425.

12.3.2.6 Power waveform

For a description of the power waveform scaling, see Section 12.3.8.3, "Power waveform", on page 426.

12.3.2.7 Power quality results

The results of power quality measurements are provided in two ways:

- The diagram shows the graphical presentation of:
  - The voltage waveform
  - The current waveform
  - The power waveform, which is the product of the current and voltage waveforms.
- The result table displays the numeric measurement results:

Voltage and current results

The voltage and current results are defined as follows:

Result	Description
Current RMS, voltage RMS	Square root of the mean of the square of the current or voltage averaged over N cycles
Voltage frequency	Frequency of the signal
Current cycle crest factor, voltage cycle crest factor	Peak value / RMS value

Power results

The power in a system is described by several physical quantities:

Result	Unit	Formula	Description
Apparent power, |S|	VA	$\|S\| = V_{RMS} \bullet I_{RMS}$	|S| is the magnitude of the vector sum of active and reactive power (the complex power S).
Reactive power, Q	VAR (Volt-Ampere reactive)	$Q = \|S\| \sin\varphi$	Power flow that is temporally stored in a system because of the inductive and capacitive elements. For the individual phase values, Q<0 indicates a capacitive load, Q>0 indicates an inductive load. The total reactive power is always positive.
Power factor, P_{Factor}	-	$P_{Factor} = P / \|S\|$	Measure of the system efficiency. The value varies between -1 and 1.
Active power, P	W	$P = V_{INSTANTENEOUS} \bullet I_{INSTANTENEOUS}$	Real power that can be converted into work. The result can be positive or negative. Positive values indicate active power consumption. Negative values indicate active power generation.
Phase, φ	°	$\varphi = acos\ (P_{Factor})$	Phase angle between the current and the voltage sine waves. φ<0 indicates a capacitive load, φ>0 indicates an inductive load. The total phase angle has the same sign convention as Q.

Remote commands: "Power quality results" on page 1374.

12.3.3 Power harmonics

Current harmonics appear in an electric power system due to nonlinear electric loads. The harmonics can be ejected back into the AC line and disturb other equipment on the grid. To avoid this disturbance, there are often standards of compliance that consumer or industry end-products must meet.

The "Harmonics" analysis tests the devices according to the precompliance standards EN 61000-3-2, MIL-STD-1399 and RTCA DO-160.

Required probes:

- Differential voltage probe
- Current probe

12.3.3.1 Configuring power harmonics

For details of the configuration settings, see Section 12.3.3.2, "Power harmonic settings", on page 392.

1. Add a new power quality measurement as described in Section 12.3.1.1, "Select power measurements", on page 380.
2. Connect the differential voltage probe and the current probe to the oscilloscope.
3. Deskew the probes as described in Section 12.3.1.2, "Deskew", on page 382.
4. Connect the probes to the DUT:

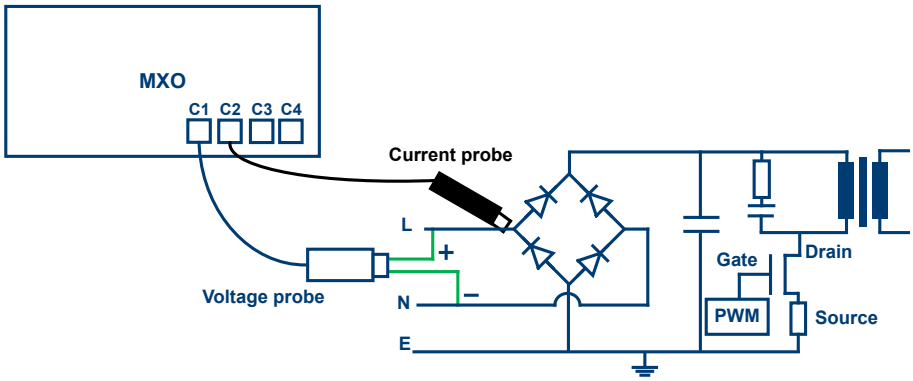

   a) Connect the positive (+) signal socket of the differential voltage probe to the line of the AC input.
   b) Connect the negative (-) signal socket of the differential voltage probe to the neutral of the AC input.
   c) Connect the current probe to the line of the AC input.
5. In the "Analysis" tab, tap the "Harmonics" measurement.

   The "Harmonics" setup dialog opens.
6. Select the correct channels for the "Voltage" and the "Current" probes.
7. Select the "Standard".
8. Select the "Fund. frequency" according to your signal.

   On the screen, you can see the measurement of the current, the voltage and the power. Also there is a table giving information about important measurement parameters. For details, see Section 12.3.3.6, "Power harmonic results", on page 396.

12.3.3.2 Power harmonic settings

In this tab, you configure the current harmonic measurement parameters and display settings.

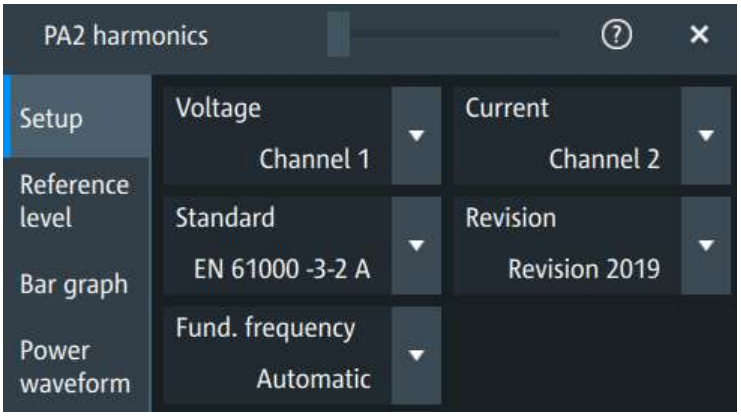

Figure 12-8: Power harmonic setup for EN 61000-3-2 A / EN 61000-3-2 B

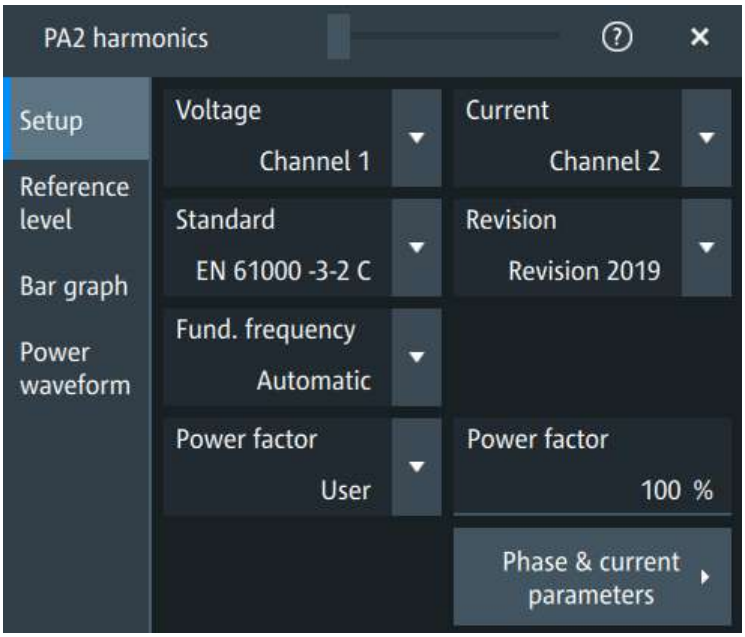

Figure 12-9: Power harmonic setup for EN 61000-3-2 C

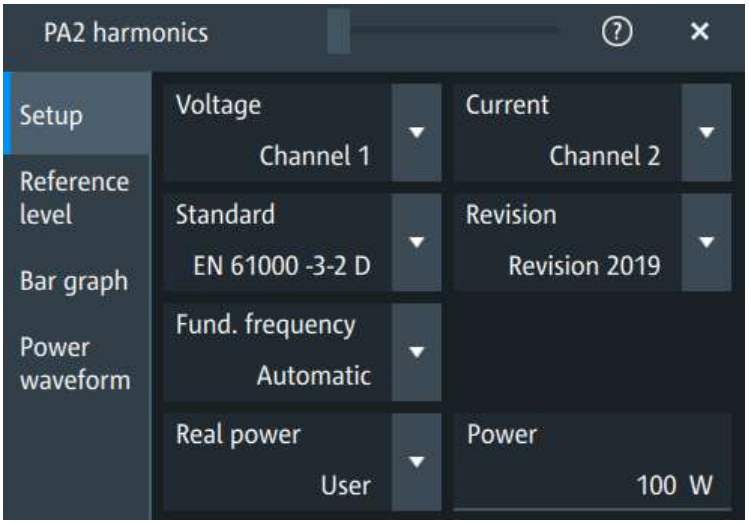

Figure 12-10: Power harmonic setup for EN 61000-3-2 D

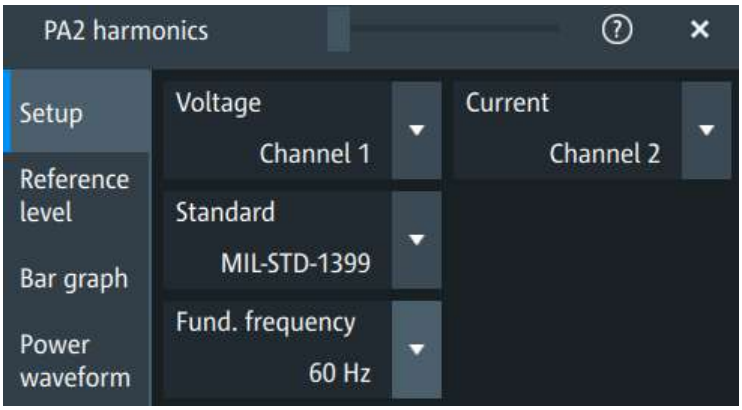

Figure 12-11: Power harmonic setup for MIL-STD-1399/ RTCA DO-160

Voltage
Selects the voltage source waveform. Analog channels and math waveforms can be used.

Remote command:
`POWer<m>:HARMonics:SOURce[:VOLTage]` on page 1383

Current
Selects the current source waveform. Analog channels and math waveforms can be used.

Remote command:
`POWer<m>:HARMonics:SOURce:CURRent` on page 1382

Standard
Select the standard in use.

For EN 61000-3-2 you can also select which "Revision" of the standard is used, "Revision 2011" or "Revision 2019".

Table 12-1: Current harmonic precompliance standards

Standard	Application
EN 61000-3-2 Class A	Balanced 3-phase equipment, household appliances (excluding equipment identified as class D), tools (excluding portable tools), dimmers for incandescent lamps, audio equipment
EN 61000-3-2 Class B	Portable tools, not professional arc welding equipment
EN 61000-3-2 Class C[1)]	Lighting equipment
EN 61000-3-2 Class D	PC, PC monitors, radio, or TV receivers with an input power less than or equal to 600W
MIL-STD-1399	Military shipboard user equipment
RTCA DO-160	Environmental tests of avionics hardware
[1)] The EN 61000-3-2 defines different limits for EN 61000-3-2 Class C equipment with an input power smaller or equal than 25W either. The limits that are implemented in the MXO 5 firmware comply with the limits of table 3 (column two) of the EN 61000-3-2 standard.	

Remote command:
`POWer<m>:HARMonics:STANdard` on page 1383
`POWer<m>:HARMonics:REVision` on page 1383

Fund. frequency
Selects the frequency of the input signal. The available frequencies depend on the selected Standard.

Remote command:
`POWer<m>:HARMonics:FREQuency:EN` on page 1384
`POWer<m>:HARMonics:FREQuency:MIL` on page 1384
`POWer<m>:HARMonics:FREQuency:RTCA` on page 1384

Power factor
Available only for "Standard" = EN 61000-3-2 Class C.

Selects if the power factor is defined automatically, or a user-defined value ("Power factor") is used.

Remote command:
`POWer<m>:HARMonics:PFACtor[:MODE]` on page 1387
`POWer<m>:HARMonics:PFACtor:USER` on page 1386

Phase & current parameters
Shows a graphical explanation of the relative phase angle and current parameters for "Standard" = EN 61000-3-2 Class C.

Real power, Power
Available only for "Standard" = EN 61000-3-2 Class D.

Selects if the real power is defined automatically, or a user-defined value ("Power") is used.

Remote command:
POWer<m>:HARMonics:RPOWer[:MODE] on page 1386
POWer<m>:HARMonics:RPOWer:USER on page 1386

12.3.3.3 Reference level

See Section 12.3.8.1, "Reference level", on page 421.

12.3.3.4 Bar graph

In this tab you can configure the bar graph display.

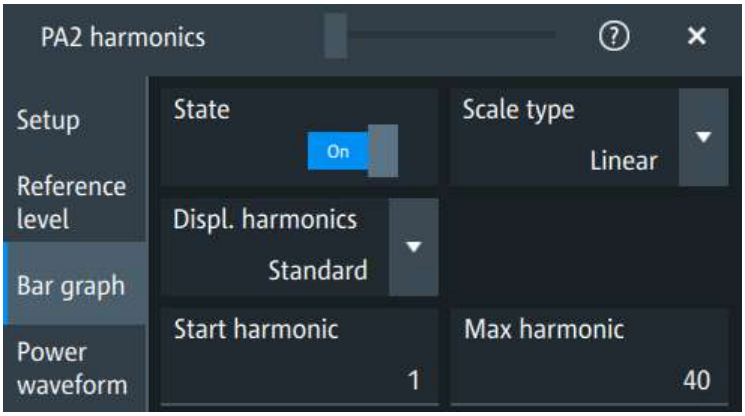

State
Shows the bar graph in the diagram.

Scale type
Selects a logarithmic or linear scale for the display for the harmonics bar graph.

Remote command:
POWer<m>:HARMonics:DISPlay:BARGraph:VERTical:SCALe:TYPE
on page 1385

Displ. harmonics
Selects which harmonics are displayed in the bar graph: all, odd even or depending on the standard definition.

Remote command:
POWer<m>:HARMonics:DISPlay:HARMonics[:DISPlay] on page 1385

Start harmonic, Max harmonic
Set the first and last harmonic to be shown in the bar graph.

Remote command:
POWer<m>:HARMonics:DISPlay:HARMonics:STARt[:VALue] on page 1385
POWer<m>:HARMonics:DISPlay:HARMonics:STOP[:VALue] on page 1385

12.3.3.5 Power waveform

A power waveform is available if "Standard" is set to EN 61000-3-2 Class C or EN 61000-3-2 Class D.

For a description of the power waveform scaling, see Section 12.3.8.3, "Power waveform", on page 426.

12.3.3.6 Power harmonic results

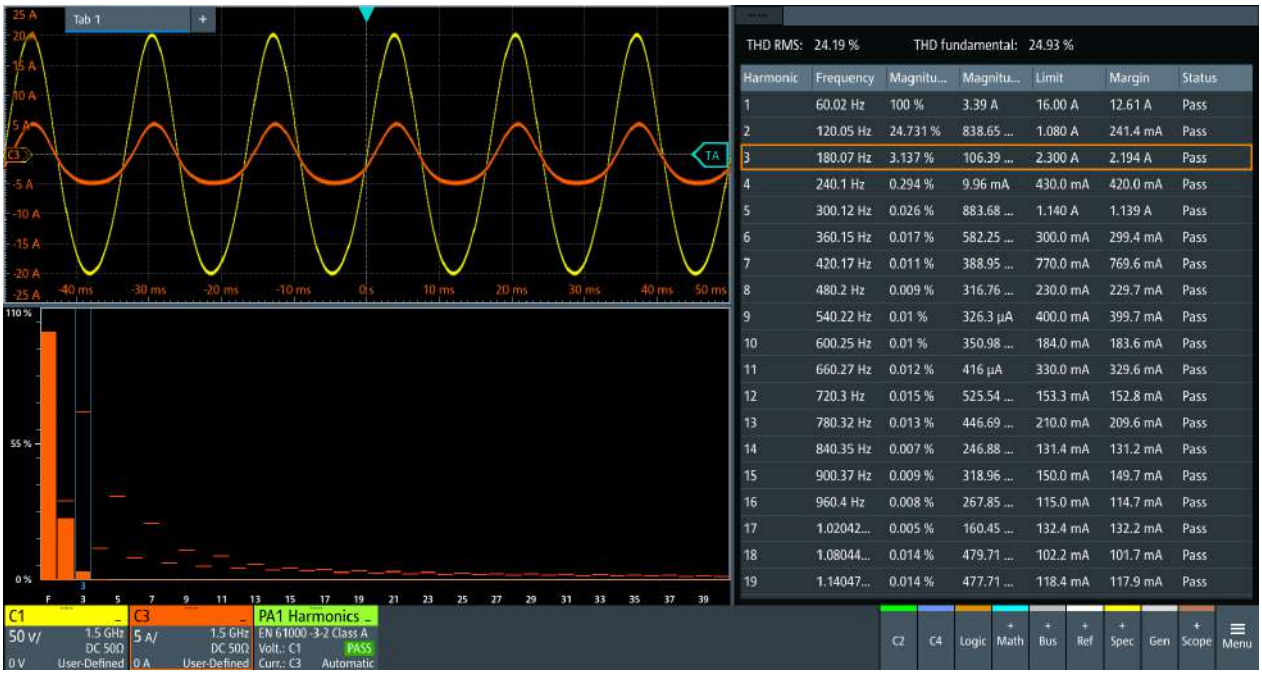

The results of the harmonic measurements are provided in two ways:

- The diagram shows the graphical presentation of the voltage waveform, the current waveform and the power waveform.
- The results are a bar chart and a table with the numerical measurement results. The number of displayed harmonics depends on the standard definition. When you tap on a harmonic in the bar chart, the corresponding row in the result table is highlighted.

The current harmonic results displayed in the result table are defined as follows:

Result table	Bar chart match	Description
THD RMS	-	Total harmonic distortion relative to the RMS amplitude
THD fundamental	-	Total harmonic distortion relative to the fundamental
Harmonic index	Value of the x-axis	The harmonic order
Frequency	-	The frequency value of the signal

Result table	Bar chart match	Description
Magnitude (%)	Value of the y-axis	The present value of the current harmonic
Magnitude (RMS)		The measured RMS value of the magnitude
Limit	Dark orange line	The maxim allowed value according to the selected standard
Margin		Sets the upper limit for the display of the Y scale.
Status	Bar for magnitude below limit has the color of the channel (pass) Bar for magnitude outside limit is orange (fail)	Displays, if the harmonics is within the defined limit (pass) or not (fail).

12.3.4 Switching loss

The switching loss analysis measures the power and energy losses of a switching device. The losses occur during the switching phases and the conduction phase of the switching transistor.

Required probes:

- Differential voltage probe
- Current probe

Phases of the switching cycle

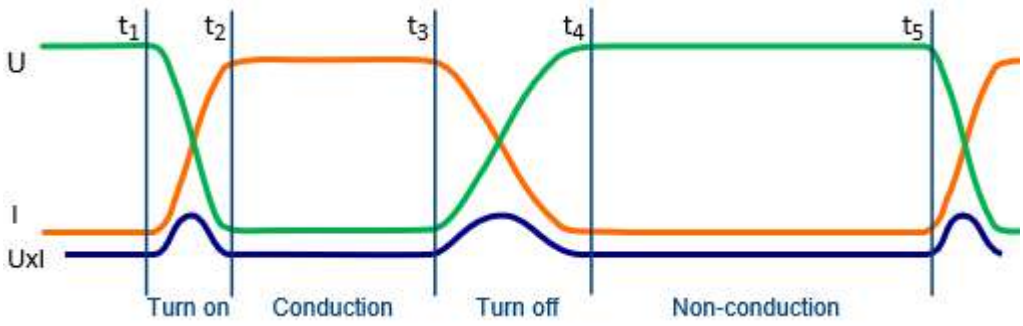

Phase	Definition Points	Description
Turn on	The area between "t_1" and "t_2"	The time after switching on the device, during which the current rises until it reaches the saturation current level.
Conduction	The area between "t_2" and "t_3"	The time during which the voltage is at the transistors saturated minimum and the current flows.

Phase	Definition Points	Description
Turn off	The area between "t_3" and "t_4"	The time during which after a short delay the voltage rises until it reaches its final value.
Non conduction	The area between "t_4" and "t_5"	The time when the current does not flow. The losses during this period should be theoretically zero.

12.3.4.1 Configuring switching loss measurements

For details of the configuration settings, see Section 12.3.4.2, "Switching loss setup", on page 399.

1. Add a switching loss measurement as described in Section 12.3.1.1, "Select power measurements", on page 380.
2. Connect the differential voltage probe and the current probe to the oscilloscope.
3. Deskew the probes as described in Section 12.3.1.2, "Deskew", on page 382.
4. Connect the probes to the DUT:

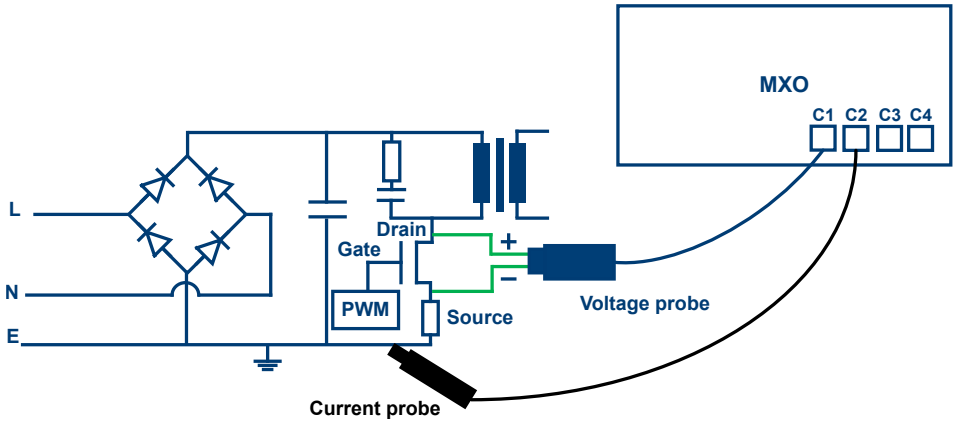

   a) Connect the positive (+) signal socket of the differential voltage probe to the drain of the transistor.
   b) Connect the negative (-) signal socket of the differential voltage probe to the source of the transistor.
   c) Connect the current probe to the source of the transistor.
5. Measure the time points of the switching cycle, for example, using cursor measurements.
6. In the signal bar, tap twice the signal icon of the switching loss power measurement to open its settings dialog.
7. Select the correct channels for the "Voltage" and the "Current" probes.
8. Set the "Unit" for the trace: power or energy.

9. Set the "T<n> position" values.
10. Enable statistics.
11. Select the "Display" tab.
12. Select the measurements that you want to see. You can also change the color of the partial measurements.
13. Select the "Power waveform" tab.
14. Adjust the scale and offset of the resulting trace if necessary.

    On the screen, you can see the measurement waveforms of the current, the voltage and the power. Also, the result table with numeric measurement results is shown. For details, see Section 12.3.4.5, "Switching loss results", on page 402.

12.3.4.2 Switching loss setup

Access: "Menu" > "Apps" > "Power" > "+ Add" > "Switching loss" > select "Switching loss" > "Setup".

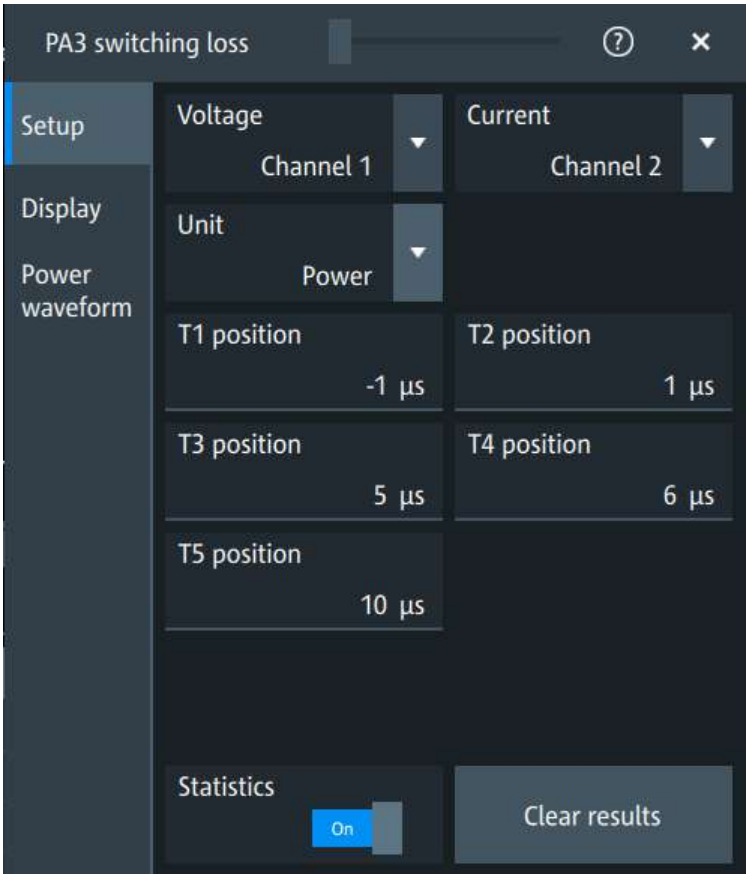

In the "Setup" tab, you configure the switching loss measurement: select the sources, the time points of the switching loss cycle, and if you want to measure either power or energy.

Voltage
Selects the voltage source waveform. Analog channels and math waveforms can be used.

Remote command:
POWer<m>:SWITching:SOURce[:VOLTage] on page 1392

Current
Selects the current source waveform. Analog channels and math waveforms can be used.

Remote command:
POWer<m>:SWITching:SOURce:CURRent on page 1391

Unit
Selects the measurement type: power or energy.

Remote command:
POWer<m>:SWITching:DISPlay:TYPE on page 1392

T<n> position
T1 to T5 define the time points in the switching cycle. You can use cursor measurements to get the time values.

- T1: Start of the turn-on area, and start of the total switching cycle.
- T2: End of the turn-on area, and start of the conduction area.
- T3: End of the conduction area, and start of the turn-off area.
- T4: End of the turn-off area, and start of the non-conduction area.
- T5: End of non-conduction area, and end of the total switching cycle.

See "Phases of the switching cycle" on page 397.

Remote command:
POWer<m>:SWITching:REGion:TOTal[:STARt] on page 1392 (T1)
POWer<m>:SWITching:REGion:TON[:STARt] on page 1392 (T1)
POWer<m>:SWITching:REGion:TON:STOP on page 1392 (T2)
POWer<m>:SWITching:REGion:CONDuction[:STARt] on page 1392 (T2)
POWer<m>:SWITching:REGion:CONDuction:STOP on page 1393 (T3)
POWer<m>:SWITching:REGion:TOFF[:STARt] on page 1393 (T3)
POWer<m>:SWITching:REGion:TOFF:STOP on page 1393 (T4)
POWer<m>:SWITching:REGion:NCONduction[:STARt] on page 1393 (T4)
POWer<m>:SWITching:REGion:NCONduction:STOP on page 1394 (T5)
POWer<m>:SWITching:REGion:TOTal:STOP on page 1394 (T5)

Statistics, Clear results
See "Statistics" on page 387 and "Clear results" on page 387.

12.3.4.3 Switching loss display

Access: "Menu" > "Apps" > "Power" > "+ Add" > "Switching loss" > select "Switching loss" > "Display".

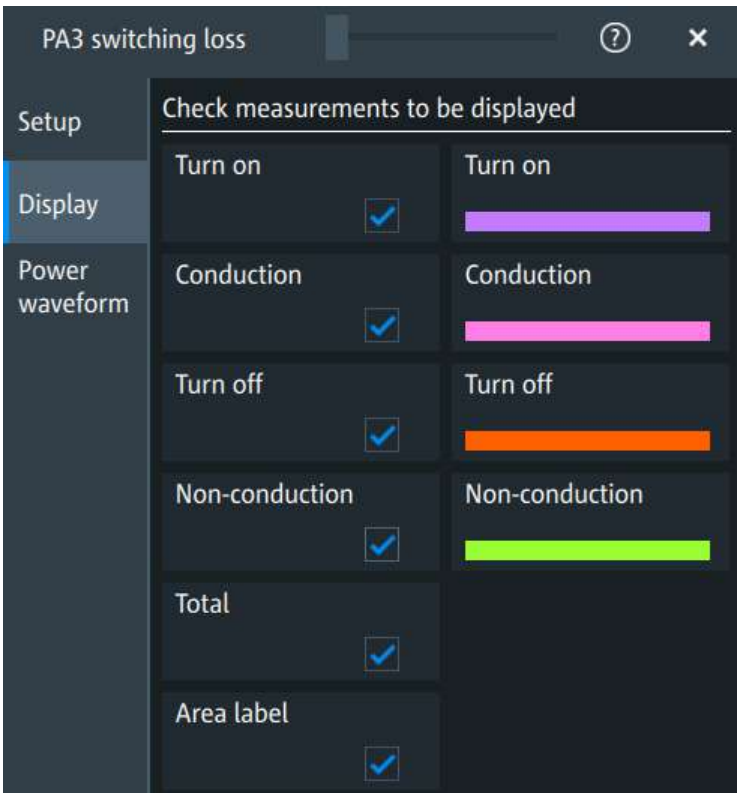

In the "Display" dialog, you select which measurements are performed. The results are displayed in the result table. You can change the colors of the cycle areas in the diagram.

Turn on
Enables the measurements of the turn-on area, and selects the display color.

Remote command:
`POWer<m>:SWITching:DISPlay:TON[:ENABle]` on page 1394
`POWer<m>:SWITching:DISPlay:TON:COLor` on page 1395

Conduction
Enables the measurements of the conduction area, and selects the display color.

Remote command:
`POWer<m>:SWITching:DISPlay:CONDuction[:ENABle]` on page 1394
`POWer<m>:SWITching:DISPlay:CONDuction:COLor` on page 1395

Turn off
Enables the measurements of the turn-off area, and selects the display color.

Remote command:
`POWer<m>:SWITching:DISPlay:TOFF[:ENABle]` on page 1394
`POWer<m>:SWITching:DISPlay:TOFF:COLor` on page 1395

Non-conduction
Enables the measurements of the non-conduction area, and selects the display color.

Remote command:
POWer<m>:SWITching:DISPlay:NCONduction[:ENABle] on page 1394
POWer<m>:SWITching:DISPlay:NCONduction:COLor on page 1395

Total
Enables the measurements of the total switching cycle.

Remote command:
POWer<m>:SWITching:DISPlay:TOTal[:ENABle] on page 1395

Area label
Displays the names of the switching cycle areas.

Remote command:
POWer<m>:SWITching:DISPlay:LABel[:ENABle] on page 1395

12.3.4.4 Power waveform

For a description of the power waveform display and scaling, see Section 12.3.8.3, "Power waveform", on page 426.

12.3.4.5 Switching loss results

The results of switching loss measurements are:

- Voltage waveform
- Current waveform
- Power waveform, which is the product of the current and voltage waveforms.
- Numeric measurement results of the selected measurement type (power or energy). The results are given for each phase of the switching cycle.

See "Phases of the switching cycle" on page 397 for an explanation of the switching cycle.

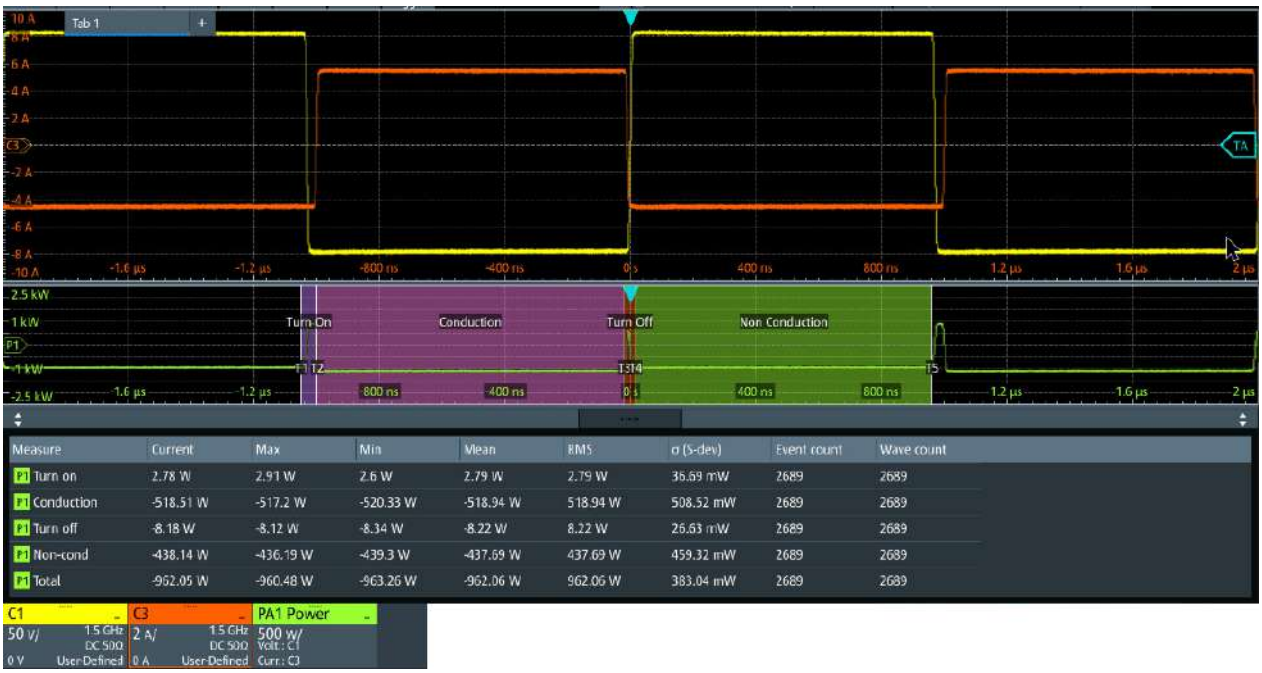

Remote commands are described in "Switching loss results" on page 1396.

12.3.5 Turn on/off time

The turn-on/off time analysis measures the time that a power supply takes to reach a certain output threshold when turned on or turned off. The output thresholds are usually a percentage of the steady state output level: 90% for turn-on, and 10% for turn-off time.

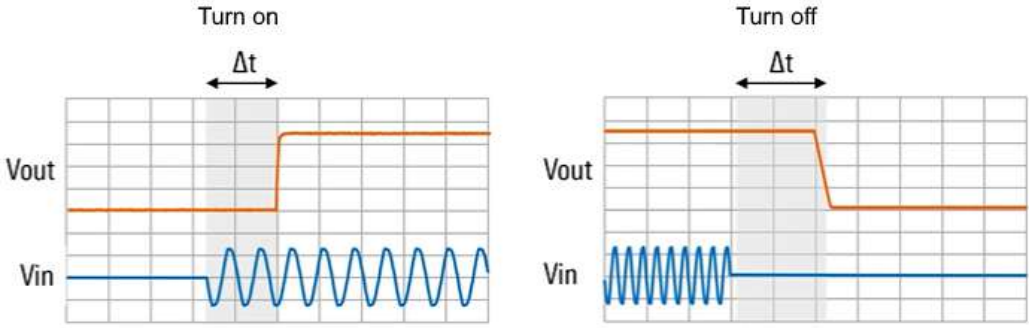

Required probes:

- AC input: differential voltage probe
- DC input: passive or differential voltage probe
- DC output: passive or differential voltage probe
  You can measure several outputs in parallel. The maximum number of output connections depends on the number of channels on the instrument: 3 outputs (4-channel instrument) or 7 outputs (8-channel instrument).

12.3.5.1 Configuring turn on/off time measurements

For details of the configuration settings, see Section 12.3.5.2, "Turn on/off setup", on page 405.

1. Add a turn on/off time measurement as described in Section 12.3.1.1, "Select power measurements", on page 380.
2. Connect all voltage probes to the oscilloscope.
3. Connect the probes to the DUT:

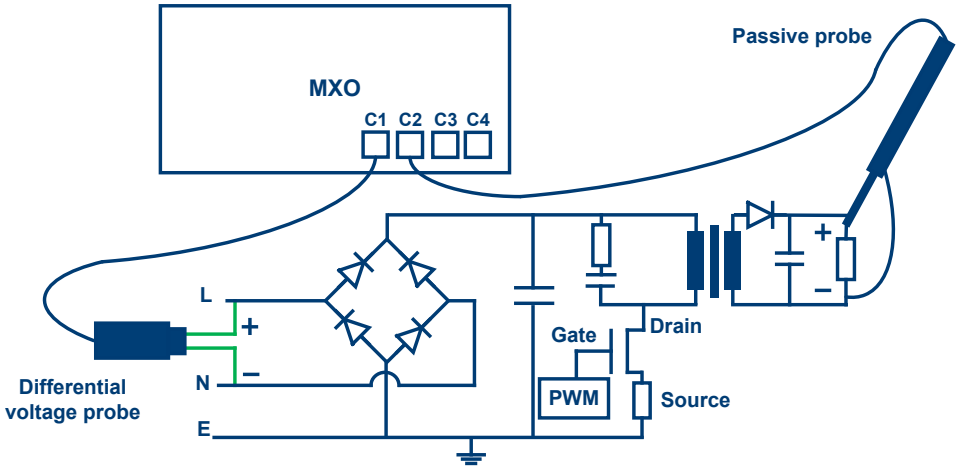

Figure 12-12: Connection with AC input

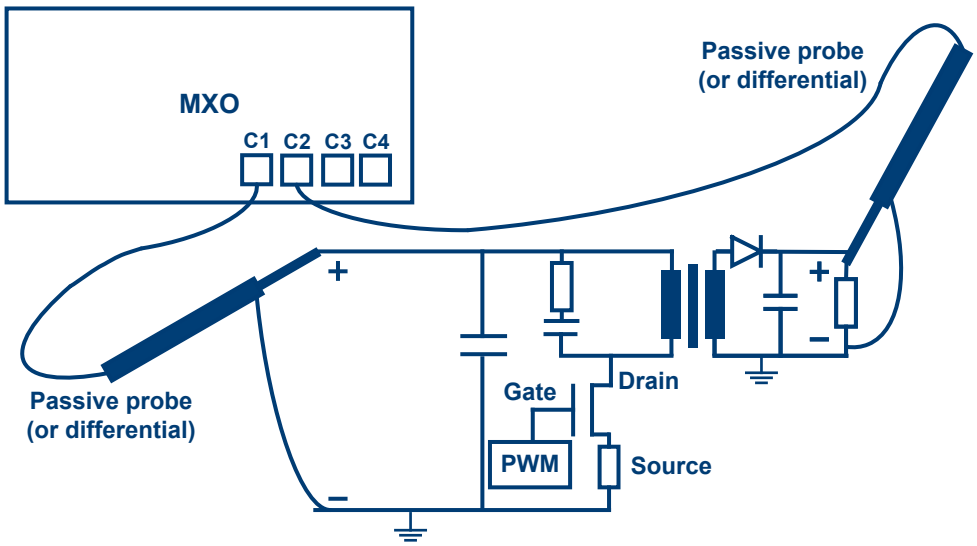

Figure 12-13: Connection with DC input

a) AC input:
Connect the positive (+) signal socket of the differential voltage probe to the line (L) of the AC input.
Connect the negative (-) signal socket of the differential voltage probe to the neutral (N) of the AC input.
b) DC input:
Connect the passive or differential voltage probe to the DC input of the power supply.
c) Outputs:
Connect the passive or differential voltage probes to the DC outputs of the power supply.

4. In the "Analysis" tab, tap the "Turn on/off time" measurement.
5. Configure the input settings:
   a) Select the correct channel for the "Input source".
   b) Select the "Mode" (turn on or turn off) and the "Input type" (AC or DC).
   c) Enter the threshold. The measurement starts when the input signal crosses this threshold.
6. Use the + to add the required number of outputs
7. Configure the outputs. For each output:
   a) Select the correct channel for the "Output source".
   b) Enter the threshold. The measurement stops when the output signal crosses this threshold.
   c) Enable the output signal to see the waveform and the results.
8. Select the "Display" tab.
9. Select the outputs for which you want to see the result lines.

   On the screen, you can see the waveforms of the input and the outputs. Also, the result table with numeric measurement results is shown. For details, see Section 12.3.5.4, "Turn on/off results", on page 408.

12.3.5.2 Turn on/off setup

Access: "Menu" > "Apps" > "Power" > "+ Add" > "Turn on/off time" > select "Turn on/off time" > "Setup".

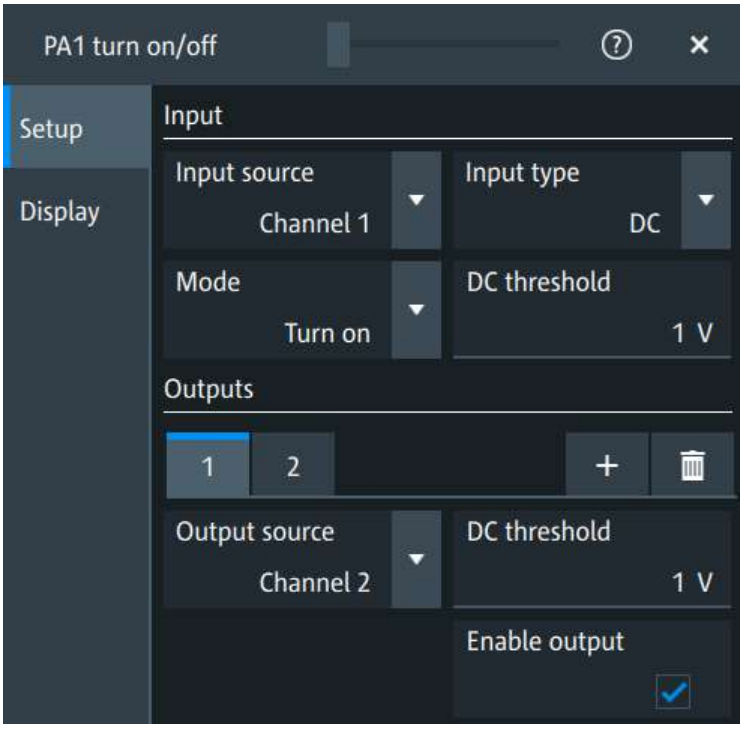

In the "Setup" tab, you configure the turn-on/off time measurement: select the sources, the thresholds, and the measurement.

Input source
Selects the channel of the input signal. Analog channels and math waveforms can be used.

Remote command:
`POWer<m>:ONOFf:INPut[:SOURce]` on page 1403

Input type
Selects whether the input signal is AC or CD.

Remote command:
`POWer<m>:ONOFf:INPut:TYPE` on page 1402

Mode
Selects the turn-on or turn-off measurement.

Remote command:
`POWer<m>:ONOFf[:TYPE]` on page 1404

DC threshold
Sets the threshold for the DC input signal.

The time starts when the first edge exceeds a positive threshold value, or falls below a negative threshold value.

Remote command:
`POWer<m>:ONOFf:INPut:DC:ABSolute[:VALue]` on page 1402

AC threshold
Sets the threshold for the AC input signal. You set the absolute value, the instrument uses the positive and negative values of the given absolute value.

The time starts when the signal crosses either the positive threshold value, or the negative value - the first crossing point is considered.

Remote command:
`POWer<m>:ONOFf:INPut:AC:ABSolute[:VALue]` on page 1402

Output source
Selects the channel of the output signal. Analog channels except for the input channel and math waveforms can be used.

You can set up several outputs in parallel. The maximum number of output connections depends on the number of channels on the instrument.

Remote command:
`POWer<m>:ONOFf:OUTPut<n>[:SOURce]` on page 1404

DC threshold
Sets the threshold for the selected output signal.

When the output signal crosses this threshold, the turn-on time ends, or the turn-off time starts.

Remote command:
`POWer<m>:ONOFf:OUTPut<n>:DC:ABSolute[:VALue]` on page 1403

Enable output
Activates the selected output line.

Remote command:
`POWer<m>:ONOFf:OUTPut<n>:DISPlay:RESult[:ENABle]` on page 1403

12.3.5.3 Turn on/off display

For better understanding, you can display result lines for each output separately.

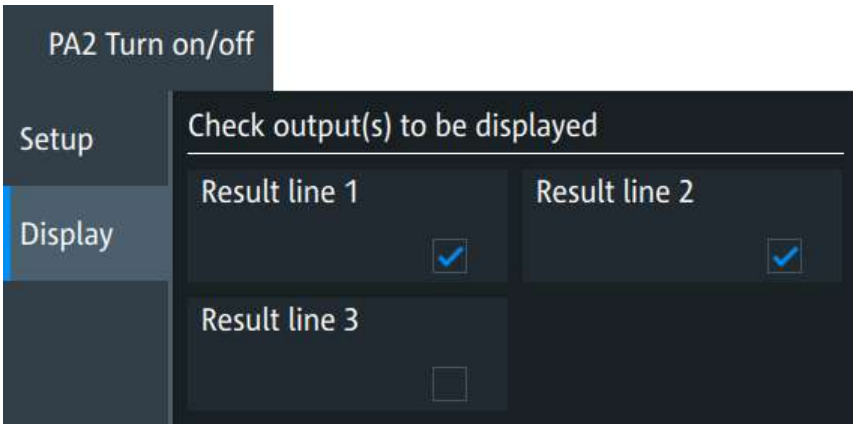

Result line <n>
Enables the display of result lines and threshold for the selected output. Result lines are only visible if the threshold is within the signal amplitude. Start and stop time are displayed with vertical dashed lines.

Remote command:
`POWer<m>:ONOFf:OUTPut<n>:DISPlay:RLINe[:ENABle]` on page 1404

12.3.5.4 Turn on/off results

The results of turn-on/off time measurements are:

- Input waveform
- Output waveforms
- Measured values of turn-on or turn-off time for each input-output pair.

You can visualize the measured points on the waveform, see Section 12.3.5.3, "Turn on/off display", on page 407.

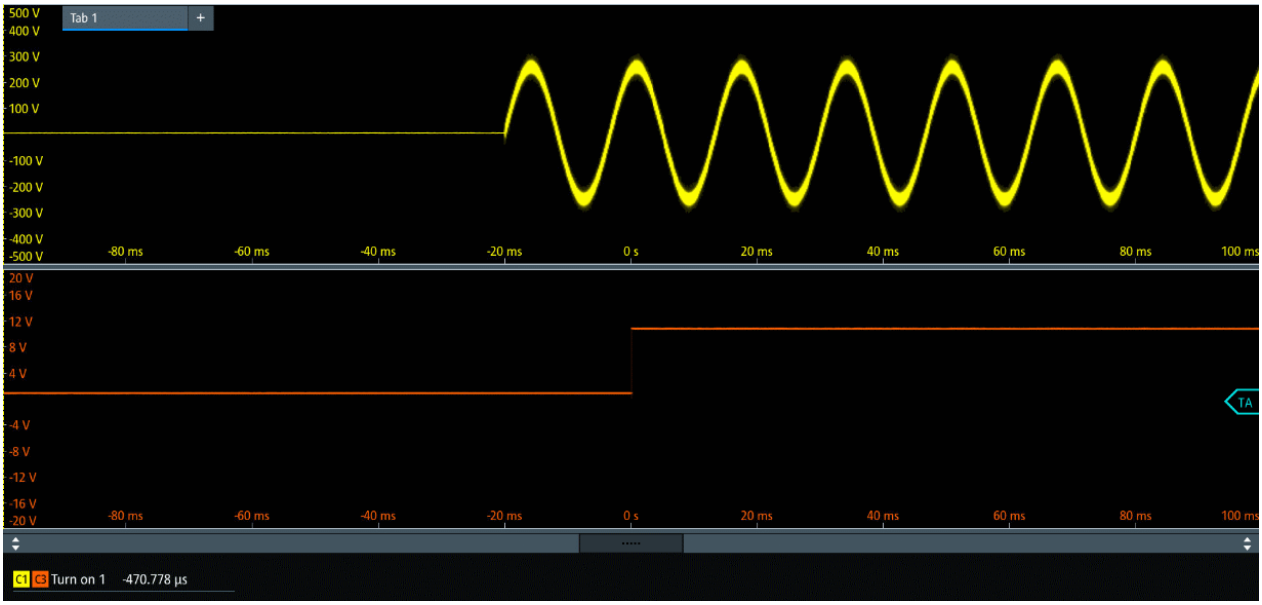

Remote commands are described in "Turn on/off results" on page 1405.

12.3.6 Power efficiency

Power efficiency analysis assesses how effectively a device converts input power into useful output power. It measures the input voltage and current and the output voltage and current, calculates the input and the output power, and the ratio of output power to input power. This ratio percentage is the power efficiency.

Required probes:

- Input: current probe and differential voltage probe
- Output: current probe and differential voltage probe

If your MXO oscilloscope has more than 4 channels, you can measure several outputs in parallel and obtain the total power and efficiency of the DUT. The maximum number of output lines is *Number of channels / 2 - 1*.

12.3.6.1 Configuring power efficiency measurements

For details of the configuration settings, see Section 12.3.6.2, "Power efficiency setup", on page 410.

1. Add a power efficiency measurement as described in Section 12.3.1.1, "Select power measurements", on page 380.
2. Connect the differential voltage probes and the current probes to the oscilloscope.
3. Deskew the probes as described in Section 12.3.1.2, "Deskew", on page 382.
4. Connect the probes to the DUT:

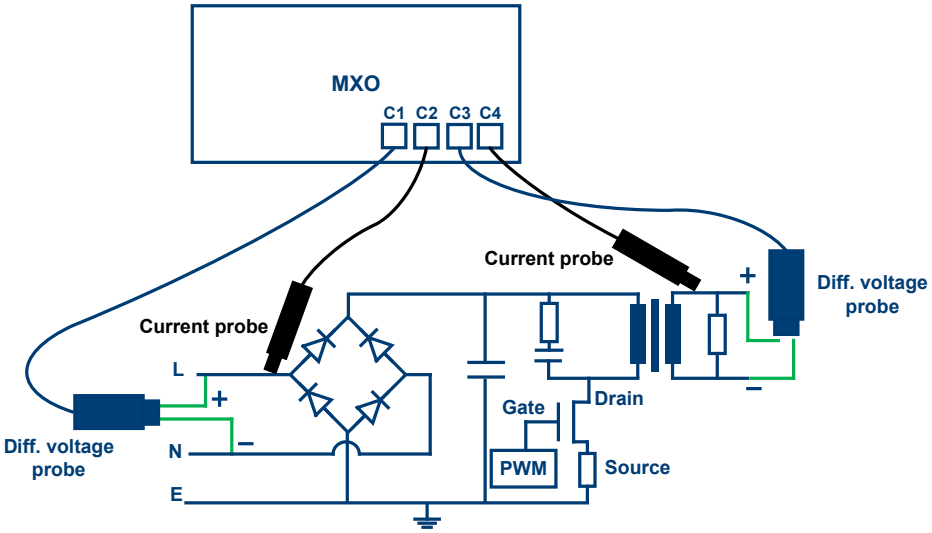

   a) Connect the positive (+) signal socket of the differential voltage probe to the line of the input.
   b) Connect the negative (-) signal socket of the differential voltage probe to the neutral of the input.
   c) Connect the current probe to the line of the input.
   d) Connect a differential voltage probe and a current probe to each output to be measured.
5. In the signal bar, tap twice the signal icon of the efficiency measurement to open its settings dialog.
6. Select the correct channels for the "Voltage" and the "Current" probes of the input and the output.
7. Selects the type of the current flow for input and output: AC or DC: "Input type" and "Output type".

8. Enable statistics.
9. Select the "Display" tab.
10. Select the measurements that you want to see.
11. Select the "Power waveform" tab.
12. Adjust the scale and offset of the resulting waveforms if necessary.

    On the screen, you can see the selected measurement waveforms of the input power and the output power. If your instrument has more than 4 channels and the DUT several outputs, you can see all output power waveforms and the total power if selected. Also, the result table with numeric measurement results is shown. For details, see Section 12.3.6.7, "Efficiency results", on page 414.

12.3.6.2 Power efficiency setup

Access: "Menu" > "Apps" > "Power" > "+ Add" > "Efficiency" > select "Efficiency" > "Setup".

Figure 12-14: Efficieny measurement setup of an 4-channel instrument

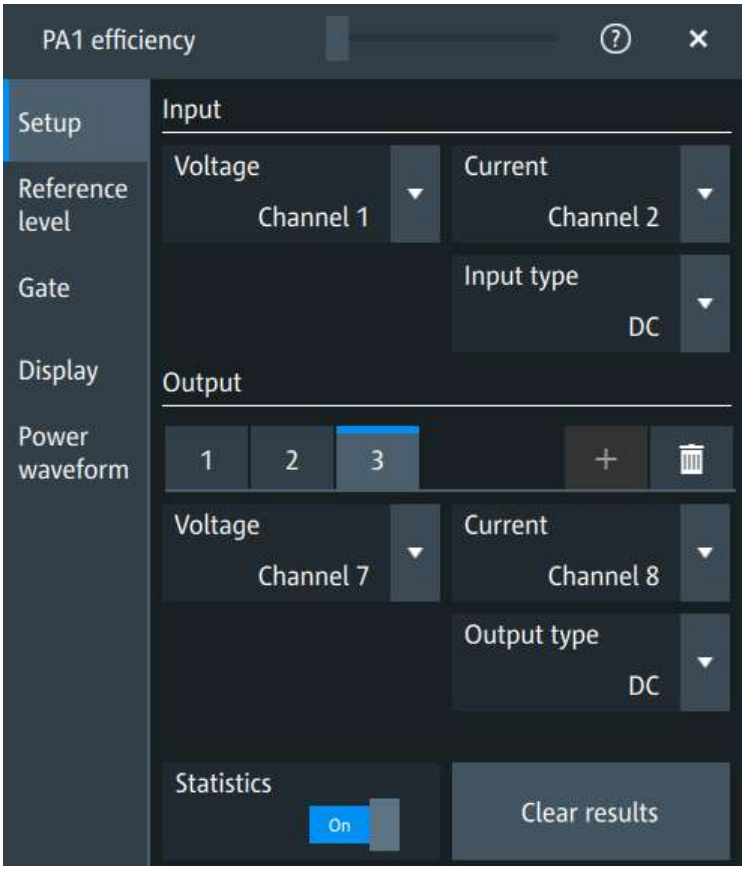

Figure 12-15: Efficieny measurement setup of an 8-channel instrument

In the "Setup" tab, you configure the efficiency measurement: select the sources for input and outputs and select whether they are AC or CD. Using several outputs requires more than 4 input channels. You also enable statistics here.

Voltage (Input)
Selects the voltage source waveform of the input line. Analog channels and math waveforms can be used.

Remote command:
`POWer<m>:EFFiciency:INPut<n>:VOLTage[:SOURce]` on page 1406

Current (Input)
Selects the current source waveform of the input line. Analog channels and math waveforms can be used.

Remote command:
`POWer<m>:EFFiciency:INPut<n>:CURRent[:SOURce]` on page 1405

Input type
Selects the type of the current flow: AC or DC.

Remote command:
`POWer<m>:EFFiciency:INPut<n>[:TYPE]` on page 1406

Voltage (Output)
Selects the voltage source waveform of the selected output line. Analog channels and math waveforms can be used.

Using several outputs requires more than 4 input channels.

Remote command:
`POWer<m>:EFFiciency:OUTPut<n>:VOLTage[:SOURce]` on page 1407

Current (Output)
Selects the current source waveform of the selected output line. Analog channels and math waveforms can be used.

Using several outputs requires more than 4 input channels.

Remote command:
`POWer<m>:EFFiciency:OUTPut<n>:CURRent[:SOURce]` on page 1407

Output type
Selects the type of the current flow: AC or DC.

Using several outputs requires more than 4 input channels.

Remote command:
`POWer<m>:EFFiciency:OUTPut<n>[:TYPE]` on page 1407

Statistics, Clear results
See "Statistics" on page 387 and "Clear results" on page 387.

12.3.6.3 Reference level

See Section 12.3.8.1, "Reference level", on page 421.

Separate reference level settings are available for input and output. The reference levels take effect only for the AC input and output types.

12.3.6.4 Gate

See Section 12.3.8.2, "Gate settings for power measurements", on page 425.

12.3.6.5 Power efficiency display

In this dialog, you select the power efficiency measurements that you want to display. For more details on the different measurements, see Section 12.3.6.7, "Efficiency results", on page 414.

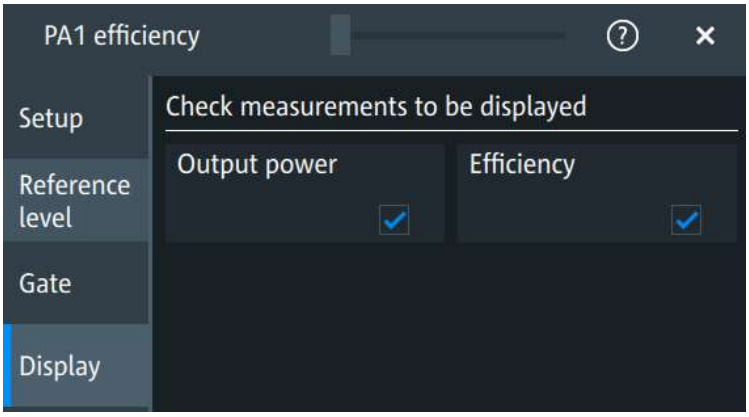

Figure 12-16: Display settings of an 4-channel instrument

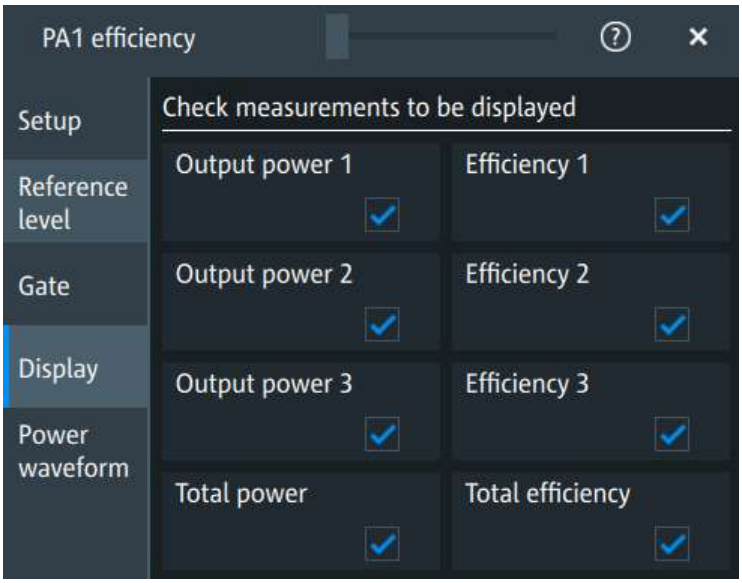

Figure 12-17: Display settings of an 8-channel instrument

Remote commands:

- `POWer<m>:EFFiciency:DISPlay:RESult:OUTPut<n>:EFFiciency[:ENABle]` on page 1408
- `POWer<m>:EFFiciency:DISPlay:RESult:OUTPut<n>:POWer[:ENABle]` on page 1408
- `POWer<m>:EFFiciency:DISPlay:RESult:TOTal<n>:EFFiciency[:ENABle]` on page 1408
- `POWer<m>:EFFiciency:DISPlay:RESult:TOTal<n>:OPOWer[:ENABle]` on page 1408

12.3.6.6 Power waveform

You can enable and scale the input, output and total waveforms individually.

Figure 12-18: Waveform settings of an 4-channel instrument

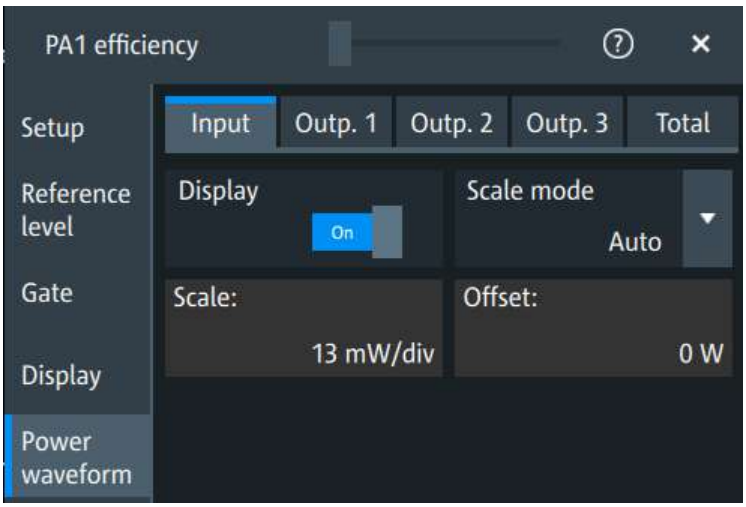

Figure 12-19: Waveform settings of an 8-channel instrument

For a description of the power waveform display and scaling, see Section 12.3.8.3, "Power waveform", on page 426.

12.3.6.7 Efficiency results

The results of efficiency measurements are:

- Input current and voltage waveforms
- Output current and voltage waveforms
- Input power waveform, which is the product of the input current and input voltage waveforms.
- Output power waveforms, which are the products of the corresponding output current and output voltage waveforms.
  Using several outputs requires more than 4 input channels.
- Total power waveform, which is the sum of the output power values.

Total power requires more than 4 input channels.

- Numeric measurement results of input power, output power, total power and efficiencies. The total efficiency is the ratio of input power to the sum of output power values.

If the input or output type is set to AC, the period is measured on the AC voltage source. If one of these measurements fails, the efficiency result is invalid.

If statistics are enabled, every period for an AC source is analyzed. Without statistics, only the first period is analyzed.

Remote commands are described in section "Efficiency results" on page 1409.

12.3.7 Safe operating area (SOA)

The safe operating area (SOA) analysis is defined by the voltage and current conditions over which a power semiconductor device is expected to operate without self-damage. The safe operating area analysis provides a diagram of the safe operating conditions of your DUT.

In parallel to the time domain diagram, an XY-plot is created, with voltage points on the x-axis, while current is shown on the y-axis. The XY-plot is tested against a mask, which represents the safe operating area.

Required probes:

- Differential voltage probe
- Current probe

12.3.7.1 Configuring SOA measurements

For details of the configuration settings, see Section 12.3.7.2, "SOA setup", on page 416 and Section 12.3.7.3, "SOA masks", on page 418.

1. Add a SOA measurement as described in Section 12.3.1.1, "Select power measurements", on page 380.
2. Connect the differential voltage probes and the current probes to the oscilloscope.
3. Deskew the probes as described in Section 12.3.1.2, "Deskew", on page 382.
4. Connect the probes to the DUT:

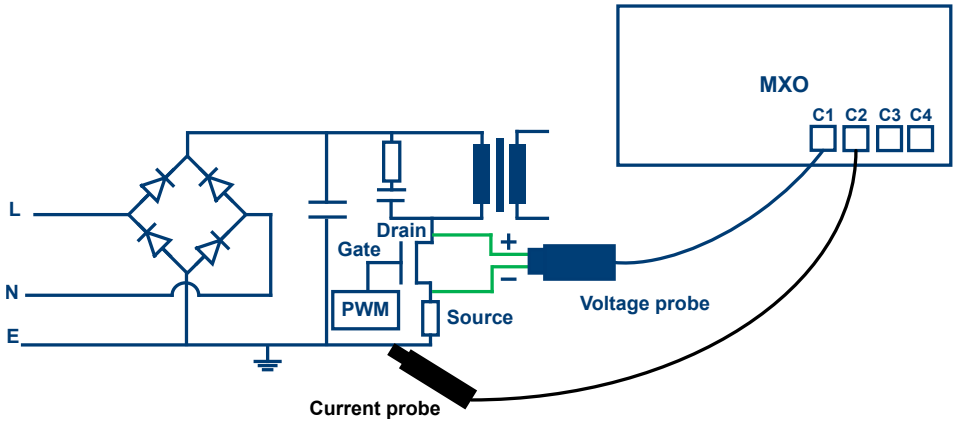

a) Connect the positive (+) signal socket of the differential voltage probe to the drain of the transistor.
b) Connect the negative (-) signal socket of the differential voltage probe to the source of the transistor.
c) Connect the current probe to the source of the transistor.

5. In the signal bar, tap twice the signal icon of the SOA measurement to open its settings dialog.
6. Select the correct channels for the "Voltage" and the "Current" probes.
7. If a SOA mask is already available, select "Open" and load the mask.
8. If no mask is available, select "Edit segments". Create the mask segments, either under "Predefined" or "Limit".

   Both segment types can be combined in one mask. For more information on predefined masks, see also Section 12.1.5, "Actions on mask test results", on page 349.
9. "Save mask" if you want to keep it for further tests.
10. Select the "Action" tab.
11. Select the actions to be initiated on mask violation or successful completion of the test. You can select several actions.
12. Run the acquisitions.

    On the screen, you can see the voltage and current waveforms and the XY-diagram with the mask. Also, the result table with numeric measurement results and the test status is shown. For details, see Section 12.3.7.5, "SOA results", on page 420.

12.3.7.2 SOA setup

Access: "Menu" > "Apps" > "Power" > "+ Add" > "SOA" > select "SOA" > "Setup".

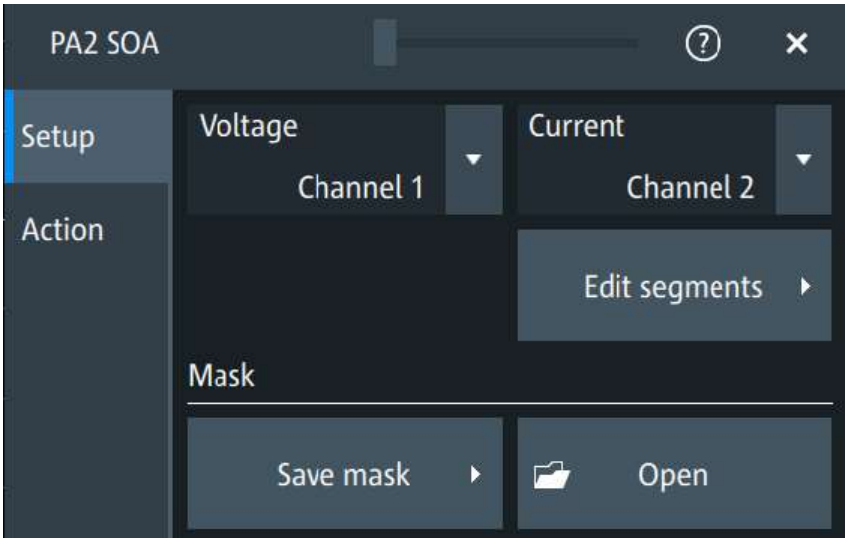

In the "Setup" tab, you configure the SOA measurement: select the sources, load and save the mask, and start creating a mask.

Voltage
Selects the voltage source waveform. Analog channels and math waveforms can be used.

In the SOA diagram, voltage points are plotted on the x-axis.

Remote command:
`POWer<m>:SOA:SOURce:VOLTage` on page 1413

Current
Selects the current source waveform. Analog channels and math waveforms can be used.

In the SOA diagram, current is plotted on the y-axis.

Remote command:
`POWer<m>:SOA:SOURce:CURRent` on page 1413

Edit segments
Opens a dialog to create and configure the SOA mask. See Section 12.3.7.3, "SOA masks", on page 418.

Save mask
Define the storage location and filename, and save the mask.

"<Folder>"	Opens a file explorer where you can select the directory where the file is saved.
"File name base"	Sets a name for the file, without extension. The name is extended with a time stamp when the file is saved. Thus, multiple "Save" actions are possible without changing the filename.
"File extension"	The format of the mask file is always `.xml`.

"Save" Saves the file in the defined folder using the "File name base". If the specified file already exists, it is overwritten with the new data.

"Save As" Opens a file explorer where you select the folder, the file type, enter the filename and save the file.

Remote command:
POWer<m>:SOA:MTESt<n>:IMEXport:NAME on page 1412
POWer<m>:SOA:MTESt<n>:IMEXport:SAVE on page 1413

Open
Opens a file explorer to select a previously stored mask file. The selected mask is loaded.

Remote command:
POWer<m>:SOA:MTESt<n>:IMEXport:NAME on page 1412
POWer<m>:SOA:MTESt<n>:IMEXport:OPEN on page 1412

12.3.7.3 SOA masks

Access: "Menu" > "Apps" > "Power" > "+ Add" > "SOA" > select "SOA" > "Setup" > "Edit segments".

You can define and edit 1 mask with up to 4 segments.

Predefined
To create a predefined mask, you select the shape of a mask segment, add it and then edit the positions of the corner points.

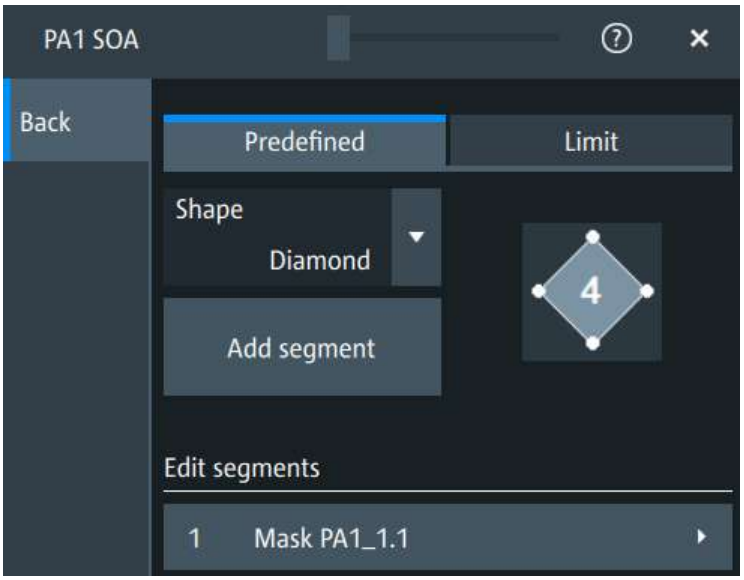

Shape ← Predefined
Selects the shape of the SOA mask: rectangle, diamond, hexagon, octagon.

Add segment ← Predefined
Adds a new segment with the selected shape to the mask. To adjust the size and position of the mask segment, select the segment and configure it. The procedure is the same as in the mask test application. See "Add segment" on page 346 and "Edit segments" on page 346.

Remote command:
POWer<m>:SOA:MTESt<n>:SEGMent<o>:ADD on page 1415
POWer<m>:SOA:MTESt<n>:SEGMent<o>:COUNt? on page 1415
POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:ADD on page 1416
POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:COUNt? on page 1416
POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:REMove on page 1417
POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:VALid? on page 1417
POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:X on page 1417
POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:Y on page 1418
POWer<m>:SOA:MTESt<n>:SEGMent<o>:REMove on page 1418

Limit
You can use the values I_{max}, V_{max} and P_{max} from the transistor specification to calculate a mask. I_{max}, V_{max} and P_{max} must be positive values. The result is a mask segment in the first quadrant of the XY-diagram. You can change the generated segment like other segments: move, add and remove points.

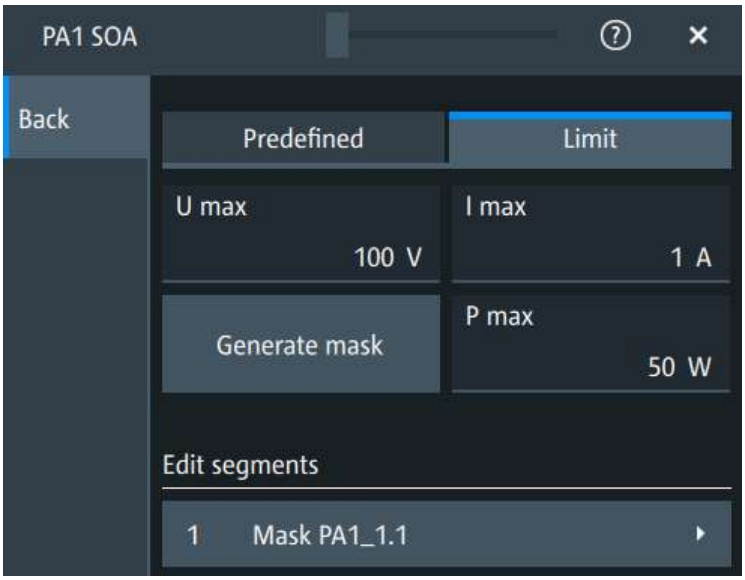

U max ← Limit
Sets the maximum voltage for the mask. The value must be positive.

Remote command:
POWer<m>:SOA:LIMit:VMAX on page 1415

I max ← Limit
Sets the maximum current for the mask. The value must be positive.

Remote command:
POWer<m>:SOA:LIMit:IMAX on page 1414

P max ← Limit
Sets the maximum power for the mask. The value must be positive.

Remote command:
`POWer<m>:SOA:LIMit:PMAX` on page 1414

Generate mask ← Limit
Generates a mask using the given maximum values. The result is a mask segment in the first quadrant of the XY-diagram.

Remote command:
`POWer<m>:SOA:LIMit:APPLy` on page 1414

12.3.7.4 SOA actions

The safe operating analysis uses the same actions as the general mask test. For details, see Section 12.1.5, "Actions on mask test results", on page 349.

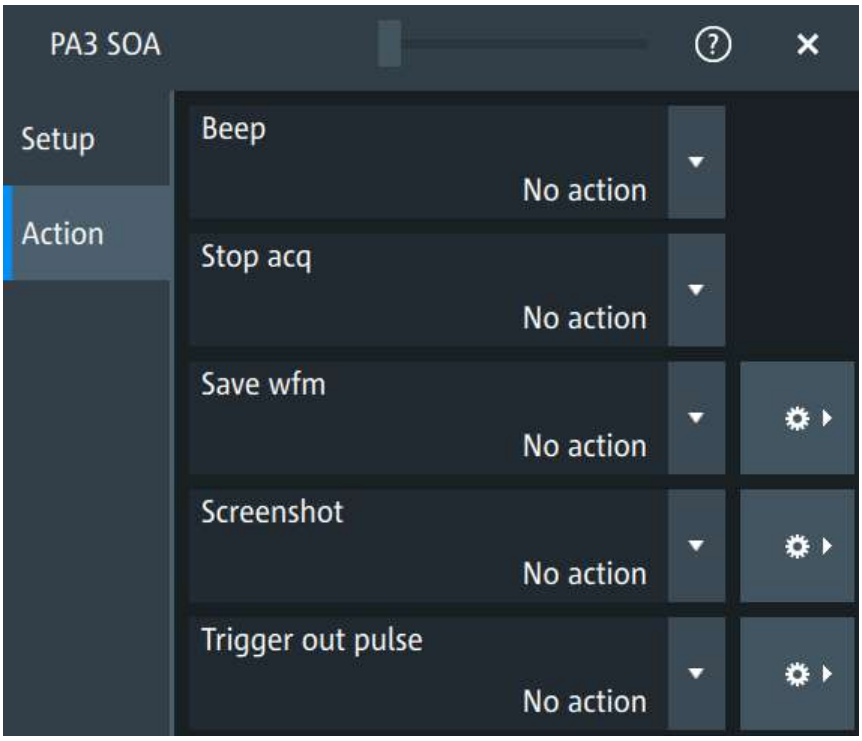

12.3.7.5 SOA results

The results of safe operating area measurements are provided in the following ways:

- Voltage source waveform and current source waveform in the diagram
- A logarithmic or linear XY-diagram of the voltage (x-axis) and current (y-axis) waveforms. This XY-diagram is a graphical representation of the power handling capability of the DUT under various conditions.
- If a power waveform in the XY diagram violates a mask, the violation is marked.
- The result table provides the numeric results of the SOA mask test.

Table 12-2: Results of the SOA test

Result	Description
Total acq.	Number of tested acquisitions (waveforms)
Passed acq.	Number of acquisitions that have passed the mask test, i.e. they are within the defined safe operating area mask
Failed acq.	Number of acquisitions that have failed the mask test, i.e. they are out of the defined safe operating area mask
Fail rate	Ratio of failed acquisitions to the number of tested acquisitions in %
Result	Summary test status: Pass or Fail

Remote commands are described in "SOA results" on page 1421.

12.3.8 Common functions for power measurements

12.3.8.1 Reference level

Some power analysis measurements require reference levels to obtain the measurement points. Power analysis uses its own reference level set, which is independent from other measurements and is used for all power measurements.

To ensure that the correct value for the period is used for the measurements, the period is determined on a voltage channel first. This period value is then applied wherever it is required to the current waveform and to the power (Math) waveform.

In power efficiency measurements, separate reference level settings are available for input and outputs. The reference levels take effect only for the AC input and output types.

Figure 12-20: Relative reference level

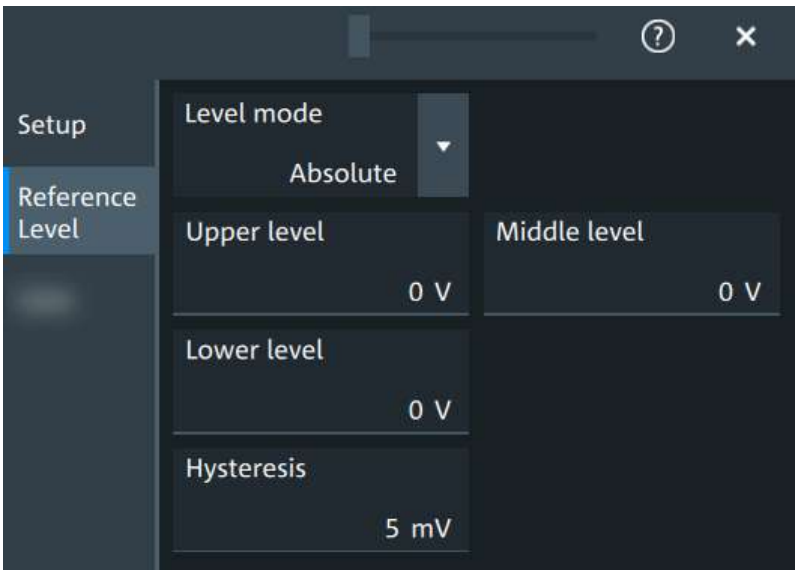

Figure 12-21: Absolute reference level

Level mode
Defines if the reference level is set in absolute or relative values.

Remote command:
`POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:LMODe` on page 1428
`POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:LMODe` on page 1428
`POWer<m>:HARMonics:REFLevel<rl>:LMODe` on page 1428
`POWer<m>:QUALity:REFLevel<rl>:LMODe` on page 1428
`P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:LMODe` on page 1470
`P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:LMODe` on page 1470
`P3PHase<m>:HARMonics:REFLevel<rl>:LMODe` on page 1470
`P3PHase<m>:QUALity:REFLevel<rl>:LMODe` on page 1470

Absolute Level mode
In the absolute mode, the reference values are set as voltages, in absolute values.

Upper level, Middle level, Lower level ← Absolute Level mode
Sets the low, middle and upper reference signal levels.

Remote command:
`POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:LLEVel` on page 1426
`POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:MLEVel` on page 1427
`POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:ULEVel` on page 1427
`POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:LLEVel` on page 1426
`POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:MLEVel` on page 1427

POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:ULEVel on page 1427
POWer<m>:HARMonics:REFLevel<rl>:ABSolute:LLEVel on page 1426
POWer<m>:HARMonics:REFLevel<rl>:ABSolute:MLEVel on page 1427
POWer<m>:HARMonics:REFLevel<rl>:ABSolute:ULEVel on page 1427
POWer<m>:QUALity:REFLevel<rl>:ABSolute:LLEVel on page 1426
POWer<m>:QUALity:REFLevel<rl>:ABSolute:MLEVel on page 1427
POWer<m>:QUALity:REFLevel<rl>:ABSolute:ULEVel on page 1427
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:LLEVel on page 1469
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:MLEVel on page 1470
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:ULEVel on page 1470
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:LLEVel on page 1469
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:MLEVel on page 1470
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:ULEVel on page 1470
P3PHase<m>:HARMonics:REFLevel<rl>:ABSolute:LLEVel on page 1469
P3PHase<m>:HARMonics:REFLevel<rl>:ABSolute:MLEVel on page 1470
P3PHase<m>:HARMonics:REFLevel<rl>:ABSolute:ULEVel on page 1470
P3PHase<m>:QUALity:REFLevel<rl>:ABSolute:LLEVel on page 1469
P3PHase<m>:QUALity:REFLevel<rl>:ABSolute:MLEVel on page 1470
P3PHase<m>:QUALity:REFLevel<rl>:ABSolute:ULEVel on page 1470

Relative Level mode
In the relative mode, the reference values are set as percentages of the signal amplitude.

Relative levels ← Relative Level mode
Selects the lower, middle and upper reference levels, defined as percentages of the signal amplitude.

Available relative levels:

- 5/50/95
- 10/50/90
- 20/50/80
- User defined: Enter "Upper level", "Middle level", and "Lower level".

For example, for "5/50/95" the levels are set to the following values:

- Lower level = 5% of the signal amplitude
- Middle level = 50% of the signal amplitude
- Upper level = 95% of the signal amplitude

Remote command:
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:MODE on page 1429
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:MODE on page 1429
POWer<m>:HARMonics:REFLevel<rl>:RELative:MODE on page 1430
POWer<m>:QUALity:REFLevel<rl>:RELative:MODE on page 1430
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:MODE on page 1472
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:MODE on page 1472
P3PHase<m>:HARMonics:REFLevel<rl>:RELative:MODE on page 1472
P3PHase<m>:QUALity:REFLevel<rl>:RELative:MODE on page 1472

Upper level, Middle level,Lower level ← Relative Level mode
Define the reference levels in percent, if "Level mode" is set to "User-defined".

Remote command:
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:LOWer on page 1428
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:MIDDle on page 1429
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:UPPer on page 1430
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:LOWer on page 1428
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:MIDDle on page 1429
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:UPPer on page 1430
POWer<m>:HARMonics:REFLevel<rl>:RELative:LOWer on page 1429
POWer<m>:HARMonics:REFLevel<rl>:RELative:MIDDle on page 1429
POWer<m>:HARMonics:REFLevel<rl>:RELative:UPPer on page 1430
POWer<m>:QUALity:REFLevel<rl>:RELative:LOWer on page 1429
POWer<m>:QUALity:REFLevel<rl>:RELative:MIDDle on page 1429
POWer<m>:QUALity:REFLevel<rl>:RELative:UPPer on page 1430
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:LOWer on page 1471
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:MIDDle on page 1472
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:UPPer on page 1473
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:LOWer on page 1471
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:MIDDle on page 1472
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:UPPer on page 1473
P3PHase<m>:HARMonics:REFLevel<rl>:RELative:LOWer on page 1471

P3PHase<m>:HARMonics:REFLevel<rl>:RELative:MIDDle on page 1472
P3PHase<m>:HARMonics:REFLevel<rl>:RELative:UPPer on page 1473
P3PHase<m>:QUALity:REFLevel<rl>:RELative:LOWer on page 1471
P3PHase<m>:QUALity:REFLevel<rl>:RELative:MIDDle on page 1472
P3PHase<m>:QUALity:REFLevel<rl>:RELative:UPPer on page 1473

Hysteresis
Defines a hysteresis for the middle reference level. A rise or fall from the middle reference value that does not exceed the hysteresis is rejected as noise.

Remote command:
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:HYSTeresis on page 1426
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:HYSTeresis on page 1428
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:HYSTeresis on page 1426
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:HYSTeresis on page 1428
POWer<m>:HARMonics:REFLevel<rl>:ABSolute:HYSTeresis on page 1426
POWer<m>:HARMonics:REFLevel<rl>:RELative:HYSTeresis on page 1428
POWer<m>:QUALity:REFLevel<rl>:ABSolute:HYSTeresis on page 1426
POWer<m>:QUALity:REFLevel<rl>:RELative:HYSTeresis on page 1428
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:HYSTeresis on page 1469
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:HYSTeresis on page 1471
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:HYSTeresis on page 1469
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:HYSTeresis on page 1471
P3PHase<m>:HARMonics:REFLevel<rl>:ABSolute:HYSTeresis on page 1469
P3PHase<m>:HARMonics:REFLevel<rl>:RELative:HYSTeresis on page 1471
P3PHase<m>:QUALity:REFLevel<rl>:ABSolute:HYSTeresis on page 1469
P3PHase<m>:QUALity:REFLevel<rl>:RELative:HYSTeresis on page 1471

12.3.8.2 Gate settings for power measurements

Access: Select power measurement > "Gate".

You can limit the some power measurement to a user-defined range of the waveform. In the "Gate" tab, you select the gate to be used for the selected power analysis. If no gate has been defined before, or the correct gate is missing, select "Gate setup" and configure the gate. See Section 8.2, "Gate setup", on page 218 for details.

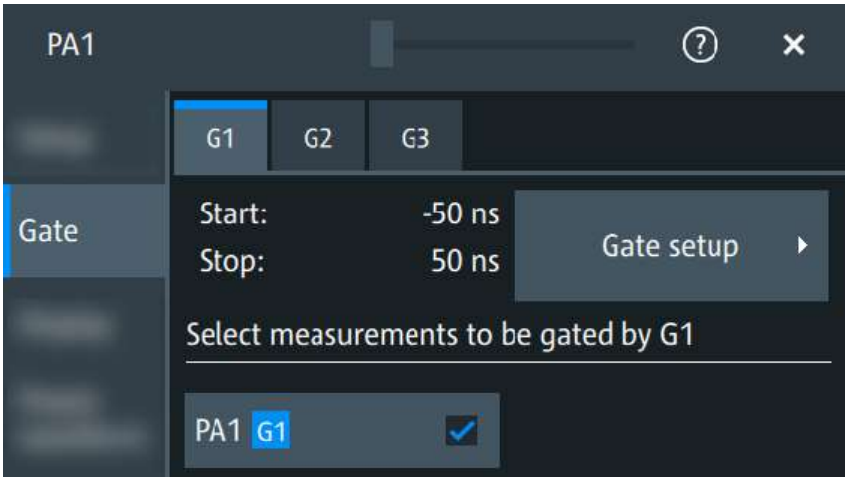

Remote commands:

- `POWer<m>:EFFiciency:GATE` on page 1408
- `POWer<m>:QUALity:GATE` on page 1371
- `P3PHase<m>:EFFiciency:GATE` on page 1464
- `P3PHase<m>:QUALity:GATE` on page 1464

12.3.8.3 Power waveform

Some power analysis measurements create a power waveform as one of the measurement results.

In the "Power waveform" dialog, you can change the scaling of the power waveform.

Display
Displays or hides the power waveform.

Remote command:
`POWer<m>:EFFiciency:DISPlay:WAVeform:INPut<n>:POWer[:ENABle]`
on page 1423
`POWer<m>:EFFiciency:DISPlay:WAVeform:OUTPut<n>:POWer[:ENABle]`
on page 1423
`POWer<m>:EFFiciency:DISPlay:WAVeform:TOTal<n>:OPOWer[:ENABle]`
on page 1423

POWer<m>:HARMonics:DISPlay:POWer:WAVeform:ENABle on page 1423
POWer<m>:QUALity:DISPlay:POWer:WAVeform:ENABle on page 1423
POWer<m>:SWITching:DISPlay:POWer:WAVeform[:ENABle] on page 1423

Scale mode
Selects the scaling mode for display of the resulting waveform. By default, the instrument selects the most appropriate scale. In "Manual" mode, you can change the vertical scale and offset.

Remote command:
POWer<m>:EFFiciency:INPut<n>:POWer:VERTical:SCALe:MODE on page 1424
POWer<m>:EFFiciency:OUTPut<n>:POWer:VERTical:SCALe:MODE on page 1424
POWer<m>:EFFiciency:TOTal<n>:OPOWer:VERTical:SCALe:MODE on page 1424
POWer<m>:HARMonics:POWer:VERTical:SCALe:MODE on page 1424
POWer<m>:QUALity:POWer:VERTical:SCALe:MODE on page 1424
POWer<m>:SWITching:POWer:VERTical:SCALe:MODE on page 1424

Scale
Sets the vertical scale of the resulting power waveform if "Scale mode" is set to "Manual".

Remote command:
POWer<m>:EFFiciency:INPut<n>:POWer:VERTical:SCALe[:VALue] on page 1424
POWer<m>:EFFiciency:OUTPut<n>:POWer:VERTical:SCALe[:VALue] on page 1424
POWer<m>:EFFiciency:TOTal<n>:OPOWer:VERTical:SCALe[:VALue] on page 1424
POWer<m>:HARMonics:POWer:VERTical:SCALe[:VALue] on page 1424
POWer<m>:QUALity:POWer:VERTical:SCALe[:VALue] on page 1424
POWer<m>:SWITching:POWer:VERTical:SCALe[:VALue] on page 1424

Offset
Sets the offset of the resulting power waveform if "Scale mode" is set to "Manual".

Remote command:
POWer<m>:EFFiciency:INPut<n>:POWer:VERTical:OFFSet on page 1423
POWer<m>:EFFiciency:OUTPut<n>:POWer:VERTical:OFFSet on page 1423
POWer<m>:EFFiciency:TOTal<n>:OPOWer:VERTical:OFFSet on page 1423
POWer<m>:HARMonics:POWer:VERTical:OFFSet on page 1423
POWer<m>:QUALity:POWer:VERTical:OFFSet on page 1423
POWer<m>:SWITching:POWer:VERTical:OFFSet on page 1423

12.4 3-phase power analysis (option R&S MXO5-K333)

With the MXO 5 and option R&S MXO5-K333, you can perform 3-phase measurements.

For best measurement results, we recommended setting channel Bandwidth = 20 MHz.

If using the HD mode, we recommended setting Bandwidth = 100 MHz.

12.4.1 3-phase power analysis initial settings

In the main "3-phase" dialog, you select the required power measurements, align the channels and set the offset compensation to get correct measurements.

12.4.1.1 Select 3-phase measurements

In the "Analysis" tab, you select the 3-phase measurements.

You can add up to 6 3-phase measurements, including several instances of the same measurement.

From here, you can access the settings for the enabled 3-phase measurements.

To add a new 3-phase measurement

1. Select the "Menu" > "Apps" > "General" tab > "3-phase".
2. In the "Analysis" tab, select "+ Add".

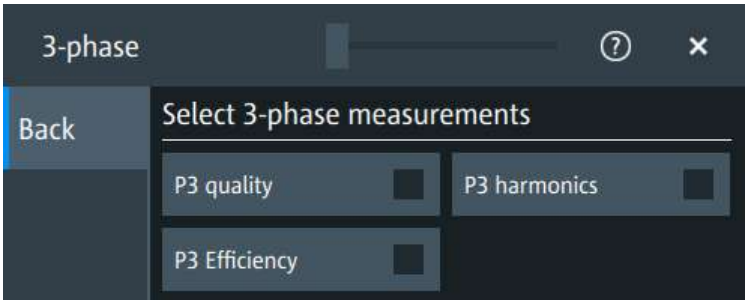

3. Select a 3-phase measurement on the list to enable it.
4. Select "+ Add" to add the selected measurements.

   All selected measurements are enabled.

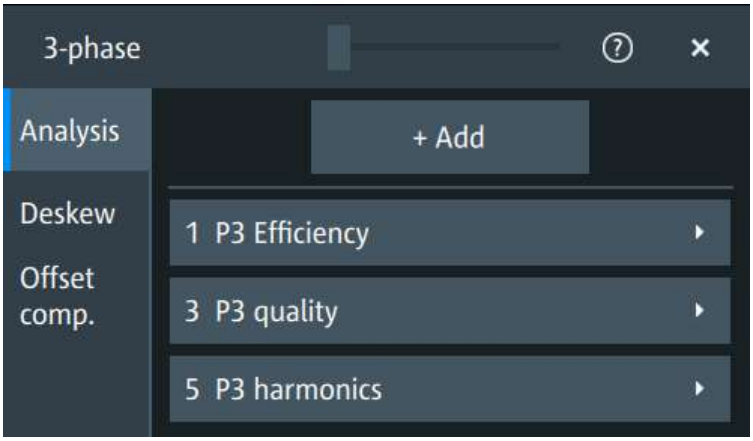

To delete a 3-phase measurement

1. Select the "Menu" > "Apps" > "General" tab > "3-phase", to open the 3-phase measurement dialog.
2. In the "Analysis" tab, select .

   A delete icon appears next to each measurement.

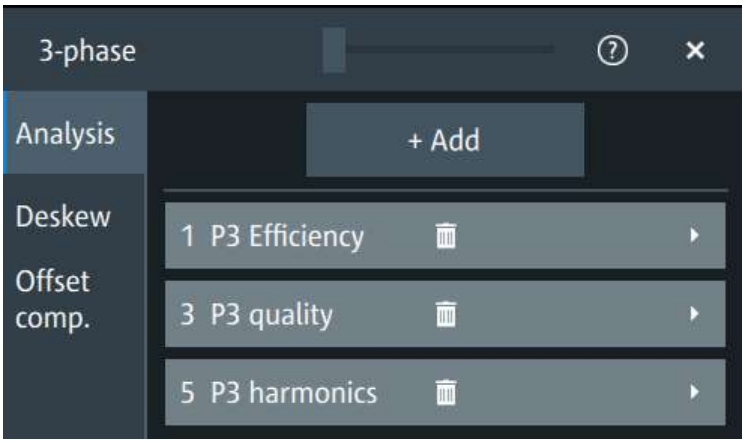

3. Select the power measurement that you want to delete. Alternatively, select "Delete All" to delete all measurements.

+ Add
Opens a dialog to select the 3-phase measurements. See "To add a new 3-phase measurement" on page 428.

Remote command:
`P3PHase<m>[:ENABle]` on page 1433
`P3PHase<m>:TYPE` on page 1433

12.4.1.2 Deskew

See Section 12.3.1.2, "Deskew", on page 382.

12.4.1.3 Offset compensation

See Section 12.3.1.3, "Offset compensation", on page 383.

12.4.2 Common functions for 3-phase power measurements

12.4.2.1 3-phase power sources

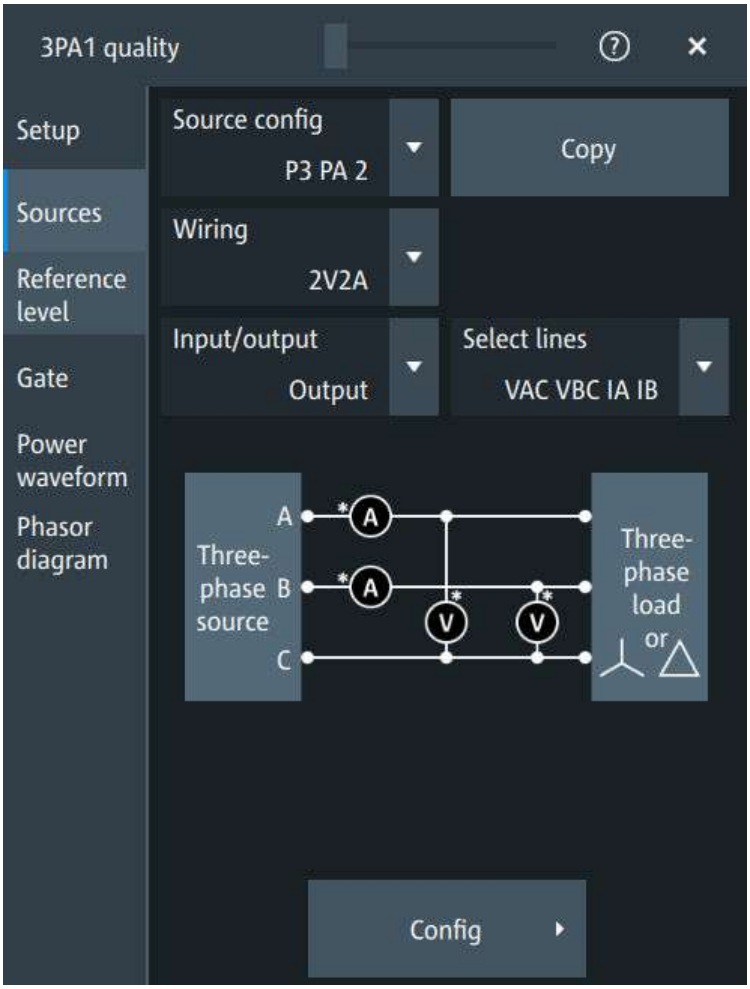

Figure 12-22: 3-phase source configuration for the quality and harmonics measurements

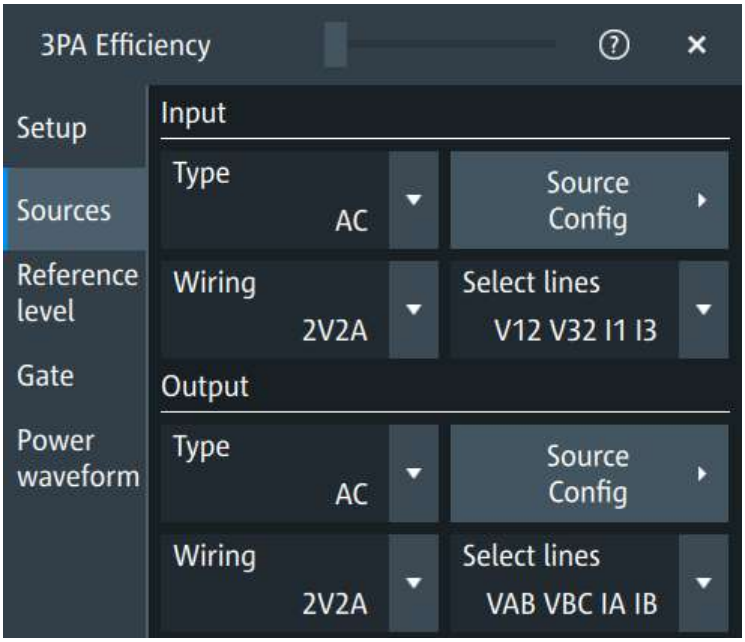

Figure 12-23: 3-phase source configuration for the efficiency measurement

Source config
Select a source configuration previously defined for another 3-phase power measurement. Only available for the quality and harmonics measurements.

Copy
Copies the selected source configuration to the current configuration. Only available for the quality and harmonics measurements.

Type
Selects the type of the current flow for the input and output channel: AC or DC. Only available for the efficiency measurement.

Remote command:
`P3PHase<m>:EFFiciency:INPut<n>:TYPE` on page 1461
`P3PHase<m>:EFFiciency:OUTPut<n>:TYPE` on page 1461

Wiring
Configures how you connect the probes to the three-phase device. For quality and harmonics measurements, this setting also shows the corresponding connection diagram for correct setup.

- "1V1A": Measures one line-to-line voltage and its corresponding phase current; the instrument assumes a single-phase system.
- "2V2A": Measures two line-to-line voltages and two phase currents; the third voltage and current are derived and the full three-phase power is computed.
- "3V3A": Measures the voltages and currents of all three phases directly
- "3VN3A": The voltages are measured against the neutral line and the currents in the individual phases.

Remote command:
P3PHase<m>:EFFiciency:INPut<n>:SOURce:WIRing on page 1461
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:WIRing on page 1461
P3PHase<m>:HARMonics:SOURce:WIRing on page 1461
P3PHase<m>:QUALity:SOURce:WIRing on page 1461

Input/output
Configures whether the oscilloscope is configured to receive signals (input) for analysis, or to generate signals output) as a source for testing. Only available for the quality and harmonics measurements.

Remote command:
P3PHase<m>:HARMonics:SOURce:INOut on page 1461
P3PHase<m>:QUALity:SOURce:INOut on page 1461

Select lines
Select the configuration for your probe setup. The visualization is adapted accordingly. This setting is only available for "Wiring"="2V2A".

Remote command:
P3PHase<m>:EFFiciency:INPut<n>:SOURce:LINes:W2V2a on page 1462
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:LINes:W2V2a on page 1462
P3PHase<m>:HARMonics:SOURce:LINes:W2V2a on page 1462
P3PHase<m>:QUALity:SOURce:LINes:W2V2a on page 1462

Config
Opens the "Source config" dialog.

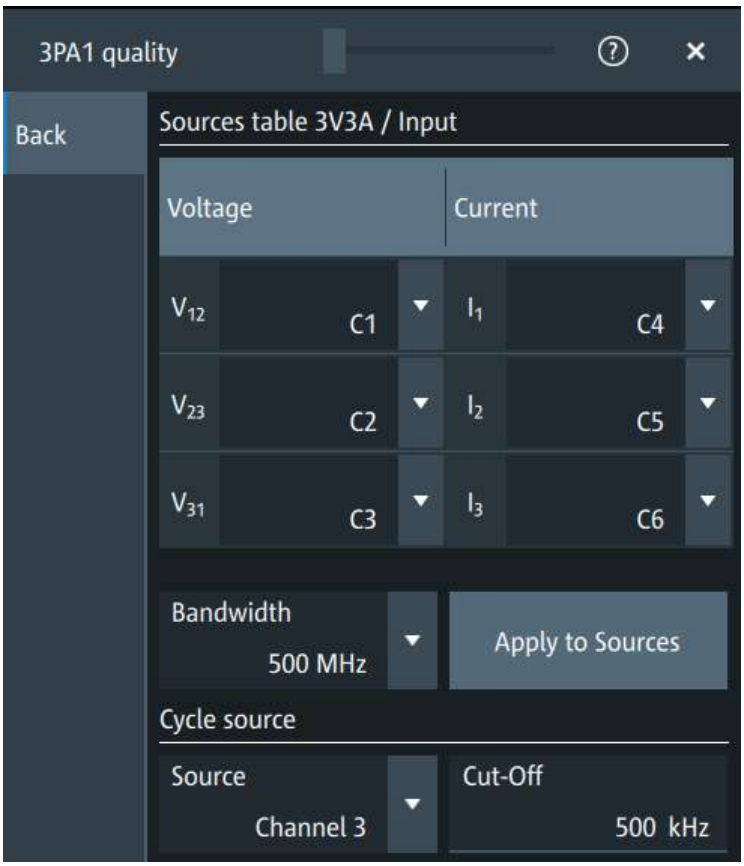

Voltage ← Config
Selects the voltage source waveform. Analog channels and math waveforms can be used.

Remote command:
`P3PHase<m>:EFFiciency:INPut<n>:SOURce:VOLTage:W1V1a` on page 1463
`P3PHase<m>:EFFiciency:INPut<n>:SOURce:VOLTage:W2V2a` on page 1463
`P3PHase<m>:EFFiciency:INPut<n>:SOURce:VOLTage:W3V3a` on page 1463
`P3PHase<m>:EFFiciency:INPut<n>:SOURce:VOLTage:W3VN3a` on page 1463
`P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:VOLTage:W1V1a` on page 1463
`P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:VOLTage:W2V2a` on page 1463
`P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:VOLTage:W3V3a` on page 1463
`P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:VOLTage:W3VN3a` on page 1463
`P3PHase<m>:HARMonics:SOURce:VOLTage:W2V2a` on page 1463
`P3PHase<m>:HARMonics:SOURce:VOLTage:W3V3a` on page 1463
`P3PHase<m>:HARMonics:SOURce:VOLTage:W3VN3a` on page 1463
`P3PHase<m>:QUALity:SOURce:VOLTage:W2V2a` on page 1463
`P3PHase<m>:QUALity:SOURce:VOLTage:W3V3a` on page 1463
`P3PHase<m>:QUALity:SOURce:VOLTage:W3VN3a` on page 1463

Current ← Config
Selects the current source waveform. Analog channels and math waveforms can be used.

Remote command:
P3PHase<m>:EFFiciency:INPut<n>:SOURce:CURRent:W1V1a on page 1462
P3PHase<m>:EFFiciency:INPut<n>:SOURce:CURRent:W2V2a on page 1462
P3PHase<m>:EFFiciency:INPut<n>:SOURce:CURRent:W3V3a on page 1462
P3PHase<m>:EFFiciency:INPut<n>:SOURce:CURRent:W3VN3a on page 1462
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:CURRent:W1V1a on page 1462
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:CURRent:W2V2a on page 1462
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:CURRent:W3V3a on page 1462
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:CURRent:W3VN3a on page 1462
P3PHase<m>:HARMonics:SOURce:CURRent:W2V2a on page 1462
P3PHase<m>:HARMonics:SOURce:CURRent:W3V3a on page 1462
P3PHase<m>:HARMonics:SOURce:CURRent:W3VN3a on page 1462
P3PHase<m>:QUALity:SOURce:CURRent:W2V2a on page 1462
P3PHase<m>:QUALity:SOURce:CURRent:W3V3a on page 1462
P3PHase<m>:QUALity:SOURce:CURRent:W3VN3a on page 1462

Bandwidth ← Config
If a warning message appears indicating differing bandwidths on the input channels, verify and adjust the bandwidth settings to match across all channels.

Apply to Sources ← Config
Applies the configured bandwidth setting to all sources.

Source ← Config
Selects the channel (voltage source) to serve as the timing reference for data calculations across all sources when the periods are not aligned on the x-axis.

Remote command:
P3PHase<m>:EFFiciency:INPut<n>:SOURce:CYCLe:SOURce on page 1463
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:CYCLe:SOURce on page 1463
P3PHase<m>:HARMonics:SOURce:CYCLe[:SOURce] on page 1463
P3PHase<m>:QUALity:SOURce:CYCLe[:SOURce] on page 1463

Cut-off ← Config
Configures a bandwidth limitation. The adjustable filter frequency is linked to the sample rate. To access a wider range of frequencies not achievable with the current configuration, configure the sample rate in "Menu" > "Acquisition".

Remote command:
P3PHase<m>:EFFiciency:INPut<n>:SOURce:CYCLe:FILTer on page 1464
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:CYCLe:FILTer on page 1464
P3PHase<m>:HARMonics:SOURce:CYCLe:FILTer on page 1464
P3PHase<m>:QUALity:SOURce:CYCLe:FILTer on page 1464

12.4.2.2 3-phase power waveform

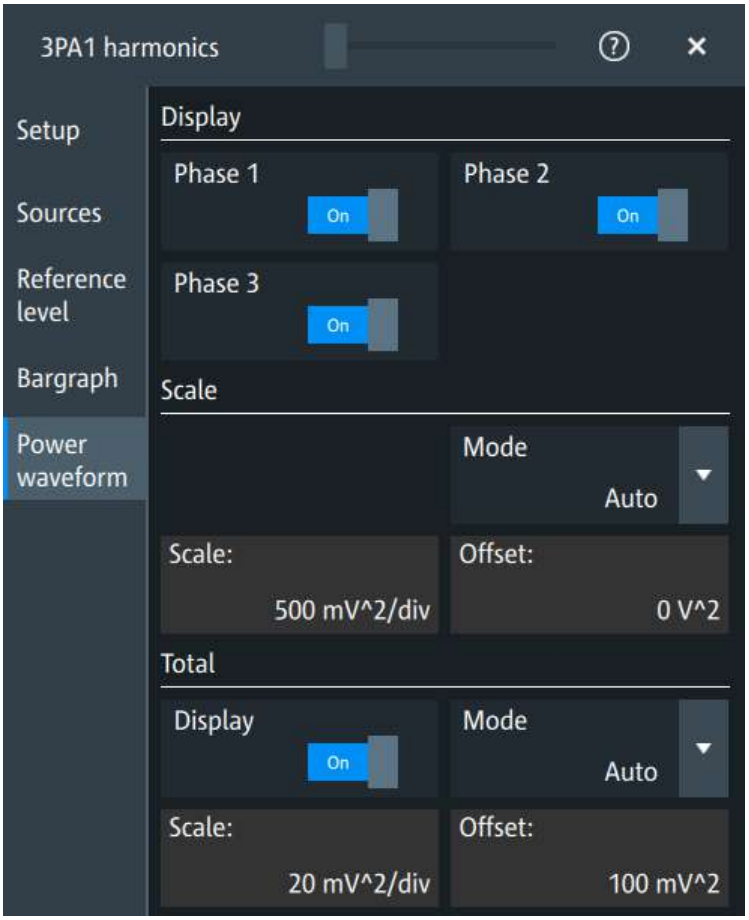

In the "Power waveform" dialog, you can change the display and scaling of the power waveform of the single and total phases.

Display individual phases
Displays or hides the power waveform of the individual phases.

For harmonics analysis, a power waveform is available if "Standard" is set to EN 61000-3-2 Class C or EN 61000-3-2 Class D.

Remote command:
`P3PHase<m>:QUALity:DISPlay:POWer<n>:WAVeform[:ENABle]` on page 1465
`P3PHase<m>:HARMonics:DISPlay:POWer<n>:WAVeform[:ENABle]` on page 1465

Scale individual phases
Configures the scaling of the individual phases.

Mode ← Scale individual phases
Selects the scaling mode for display of the resulting waveform. By default, the instrument selects the most appropriate scale. In "Manual" mode, you can change the vertical scale and offset.

Remote command:
P3PHase<m>:QUALity:POWer<n>:VERTical:SCALe:MODE on page 1466
P3PHase<m>:HARMonics:POWer<n>:VERTical:SCALe:MODE on page 1466

Scale ← Scale individual phases
Sets the vertical scale of the resulting power waveform if "Mode" is set to "Manual".

Remote command:
P3PHase<m>:QUALity:POWer<n>:VERTical:SCALe[:VALue] on page 1467
P3PHase<m>:HARMonics:POWer<n>:VERTical:SCALe[:VALue] on page 1467

Offset ← Scale individual phases
Sets the offset of the resulting power waveform if "Mode" is set to "Manual".

Remote command:
P3PHase<m>:QUALity:POWer<n>:VERTical:OFFSet on page 1465
P3PHase<m>:HARMonics:TOTal:POWer:VERTical:OFFSet on page 1466

Total phase
Configures the display and the scaling of the total phase.

Display ← Total phase
Enables the display of the total phase.

Remote command:
P3PHase<m>:EFFiciency:DISPlay:WAVeform:INPut:TOTal:POWer[:ENABle] on page 1465
P3PHase<m>:EFFiciency:DISPlay:WAVeform:OUTPut:TOTal:POWer[:ENABle] on page 1465
P3PHase<m>:QUALity:DISPlay:TOTal:POWer:WAVeform[:ENABle] on page 1465
P3PHase<m>:HARMonics:DISPlay:TOTal:POWer:WAVeform[:ENABle] on page 1465

Mode ← Total phase
Selects the scaling mode for display of the resulting waveform. By default, the instrument selects the most appropriate scale. In "Manual" mode, you can change the vertical scale and offset.

Remote command:
P3PHase<m>:EFFiciency:INPut<n>:TOTal:POWer:VERTical:SCALe:MODE on page 1467
P3PHase<m>:EFFiciency:OUTPut<n>:TOTal:POWer:VERTical:SCALe:MODE on page 1467
P3PHase<m>:QUALity:TOTal:POWer:VERTical:SCALe:MODE on page 1467
P3PHase<m>:HARMonics:TOTal:POWer:VERTical:SCALe:MODE on page 1467

Scale ← Total phase
Sets the vertical scale of the resulting power waveform if "Mode" is set to "Manual".

Remote command:
P3PHase<m>:EFFiciency:INPut<n>:TOTal:POWer:VERTical:SCALe[:VALue] on page 1467
P3PHase<m>:EFFiciency:OUTPut<n>:TOTal:POWer:VERTical:SCALe[:VALue] on page 1467
P3PHase<m>:QUALity:TOTal:POWer:VERTical:SCALe[:VALue] on page 1467
P3PHase<m>:HARMonics:TOTal:POWer:VERTical:SCALe[:VALue] on page 1467

Offset ← Total phase
Sets the offset of the resulting power waveform if "Mode" is set to "Manual".

Remote command:
P3PHase<m>:EFFiciency:INPut<n>:TOTal:POWer:VERTical:OFFSet on page 1466
P3PHase<m>:EFFiciency:OUTPut<n>:TOTal:POWer:VERTical:OFFSet on page 1466
P3PHase<m>:QUALity:TOTal:POWer:VERTical:OFFSet on page 1466
P3PHase<m>:HARMonics:TOTal:POWer:VERTical:OFFSet on page 1466

12.4.3 3-phase power quality

Expanding on single-phase power quality principles, three-phase systems require dedicated analysis due to inherent phase shifts and potential imbalances. See also Section 12.3.2, "Power quality", on page 384. While active, reactive, and apparent powers remain key metrics, three-phase assessment focuses on inter-phase relationships.

The power quality analysis measurement provides per-phase data ("C1"-"C6") alongside total system values ("V", "A"), see Section 12.4.3.8, "3-phase power quality results", on page 441. Evaluating these metrics for each phase helps identify imbalances or anomalies. Optimal systems exhibit minimal inter-phase variations and low harmonic distortion.

Required probes:

- 3x differential voltage probes (one for each phase)
- 3x current probes (one for each phase)

Use the ScopeSync functionality if the selected configuration requires additional channels. See also Section 17.2, "ScopeSync", on page 1013.

12.4.3.1 Configuring 3-phase power quality

For details of the configuration settings, see:

- Section 12.4.3.2, "3-phase power quality setup", on page 438.
- Section 12.4.3.3, "3-phase power sources", on page 439

1. Add a new power quality measurement as described in Section 12.4.1, "3-phase power analysis initial settings", on page 428.

2. Connect the differential voltage and the current probes to the oscilloscope.
3. Deskew the probes as described in Section 12.3.1.2, "Deskew", on page 382.
4. In the "Analysis" tab, select the "P3 quality" measurement.

   The "P3 quality" setup dialog opens.
5. Select the "Fund. frequency" according to your signal.
6. Set a "User Frequency" to set the horizontal timebase.
7. Select the "Sources" tab.
8. Select the "Wiring" and if necessary "Select lines" to configure how your probes are connected to the three-phase device.
9. Select if you have an "Input/output" setup.
10. Select "Config".
11. Assign the correct channels for the "Voltage" and the "Current" probes.
12. Select the required "Bandwidth" for signal acquisition. Select "Apply to Sources" to apply the configured bandwidth setting to all sources.
13. Select "Back".
14. Connect the probes to the DUT according to the visualization of the setup. For example a "3V3A" wiring:

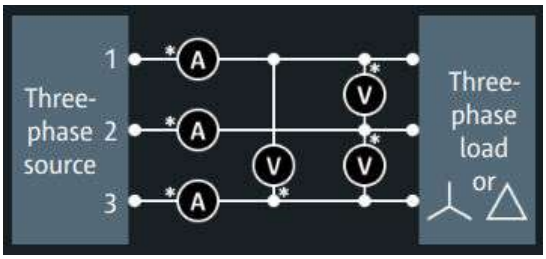

   On the screen, you can see the measurement waveforms of the current, the voltage and the power. Also, the result table with numeric measurement results is shown. For details, see Section 12.4.3.8, "3-phase power quality results", on page 441.

12.4.3.2 3-phase power quality setup

Access: "Menu" > "Apps" > "3-phase" > "+ Add" > "P3 quality" > select "P3 quality" > "Setup".

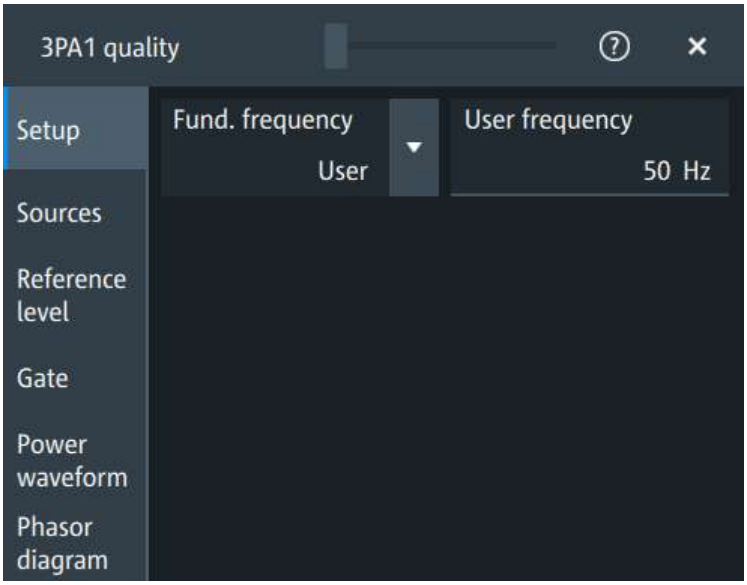

In the "Setup" tab, you configure the frequencies.

Fund. frequency
Selects the input frequency of the source signal.

- "50 Hz": Standard power grid frequency in Europe, Asia, and parts of Africa
- "60 Hz": Standard power grid frequency in North America and parts of South America
- "400 Hz": Used in aerospace and submarine applications and some industrial equipment
- "User": Custom fundamental frequency value
- "Automatic": Automatic detection of the fundamental frequency of the input signal

Remote command:
`P3PHase<m>:QUALity:FREQuency[:VALue]` on page 1434

User Frequency
Sets the horizontal timebase to control the time scale of the waveform display.

Remote command:
`P3PHase<m>:QUALity:FREQuency:USER` on page 1434

12.4.3.3 3-phase power sources

See Section 12.4.2.1, "3-phase power sources", on page 430.

12.4.3.4 3-phase power reference level

See Section 12.3.8.1, "Reference level", on page 421.

12.4.3.5 3-phase power gate

See Section 12.3.8.2, "Gate settings for power measurements", on page 425.

12.4.3.6 3-phase power waveform

For a description of the power waveform scaling, see Section 12.4.2.2, "3-phase power waveform", on page 435.

12.4.3.7 3-phase phasor diagram

Access: "Menu" > "Apps" > "3-phase" > "+ Add" > "P3 quality" > select "P3 quality" > "Phasor diagram".

In the "Phasor diagram" tab, you configure the display of the phasor diagram.

State
Displays or hides the phasor diagram.

Remote command:
`P3PHase<m>:QUALity:PHASor[:ENABle]` on page 1435

Voltage range, Current range
Configures the voltage and current ranges of the phasor diagram.

Offset ← Voltage range, Current range
Sets the inner point of the phasor diagram.

Remote command:
P3PHase<m>:QUALity:PHASor:VOLTage:OFFSet on page 1435
P3PHase<m>:QUALity:PHASor:CURRent:OFFSet on page 1435

Maximum ← Voltage range, Current range
Sets the outer circumference of the phasor diagram.

Remote command:
P3PHase<m>:QUALity:PHASor:VOLTage:MAXimum on page 1435
P3PHase<m>:QUALity:PHASor:CURRent:MAXimum on page 1435

Fit to Screen
The instrument selects the most appropriate scale for the voltage and current phasors.

Remote command:
P3PHase<m>:QUALity:PHASor:FSCReen on page 1436

12.4.3.8 3-phase power quality results

Figure 12-24: 3-phase power quality measurement of a symmetrical inductive load with balanced phase voltages, currents, and power values.

Figure 12-25: 3-phase power quality measurement with one phase in the third quadrant, showing negative active power and negative reactive power.

The operating condition of each phase can be interpreted with the four-quadrant analysis of active power and reactive power. Positive active power indicates power consumption, while negative active power indicates power generation. Positive reactive power indicates inductive behavior, while negative reactive power indicates capacitive behavior. The quadrant therefore identifies whether a phase operates as a consumer or source and whether the reactive component is inductive or capacitive.

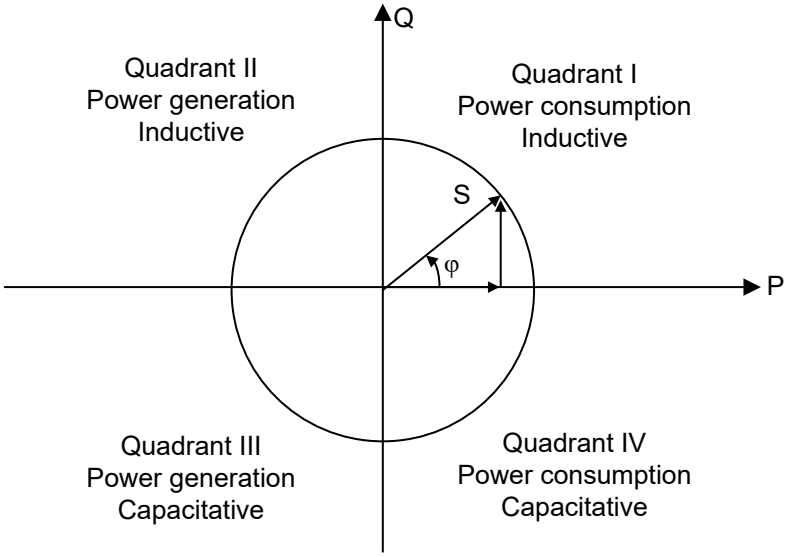

The results of power quality measurements are provided as follows:

- The waveform diagram shows the graphical presentation of:
  - The voltage waveform of the individual and total phases
  - The current waveform of the individual and total phases
  - The power waveform of the individual and total phases, The power waveform is the product of the current and voltage waveforms.
    See also Section 12.4.2.2, "3-phase power waveform", on page 435.
- Results are visualized in a phasor diagram, which graphically displays the magnitude and phase angles of each phase voltage and current. In a balanced 3-phase system, the phase voltages are typically spaced by 120 degrees, and the phase currents are also typically spaced by 120 degrees.
  See also Section 12.4.3.7, "3-phase phasor diagram", on page 440.
- The result table displays the numeric measurement results. The total power values are the sum of the individual phase power values:

Result table	Description
Cycle source	Channel (voltage) used as the timing reference for all measurements.
Cycle source frequency	Nominal (rated) system frequency, e.g., 50 Hz or 60 Hz.
Input, output	Selected lines in the source configuration
Current RMS, voltage RMS ("CRMS")	Square root of the mean of the square of the current or voltage. Represents the effective value of the AC waveform.
Current cycle crest factor, voltage cycle crest factor ("CCrest")	Ratio of the peak (maximum absolute value) to the RMS value of the waveform. Indicates the level of waveform distortion.
Current maximum, voltage maximum	Highest measured value of the current or voltage
Active power (P)	Real power that can be converted into work. The result can be positive or negative. Positive values indicate active power consumption. Negative values indicate active power generation.
Reactive power (Q)	Power flow that is temporally stored in a system because of the inductive and capacitive elements. For the individual phase values, Q<0 indicates a capacitive load, Q>0 indicates an inductive load. The total reactive power is always positive because of $Q_{TOT} = \sqrt{(S_{TOT}^2 - P_{TOT}^2)}$.
Apparent power (S)	Magnitude of the vector sum of active and reactive power
Power factor	Measure of the system efficiency. The value varies between -1 and 1. Positive values indicate active power consumption. Negative values indicate active power generation.
Phase (φ)	Phase differences between the current and the voltage sine waves of the different phases. For the individual phase values, φ<0 indicates a capacitive load, φ>0 indicates an inductive load. The total phase angle has the same sign convention as Q_{TOT}.

Remote commands: "3-phase power quality results" on page 1440.

12.4.4 3-phase power harmonics

Harmonic currents generated by nonlinear loads in 3-phase systems can impact power quality by affecting other equipment on the grid, see Section 12.3.3, "Power harmonics", on page 390. Unlike single-phase systems, harmonics in a 3-phase environment can exist with different phase angles and magnitudes on each line, requiring analysis of both individual harmonic components and their relationships to each other. To ensure power quality and prevent interference, industry and regulatory bodies have established compliance standards for end-products.

The power harmonics analysis tests the devices according to the precompliance standard EN 61000-3-2.

Required probes:

- 3x differential voltage probes (one for each phase)
- 3x current probes (one for each phase + optionally a neutral current probe)

Use the ScopeSync functionality if the selected configuration requires additional channels. See also Section 17.2, "ScopeSync", on page 1013.

12.4.4.1 Configuring 3-phase power harmonics

For details of the configuration settings, see:

- Section 12.4.4.2, "3-phase power harmonics setup", on page 445
- Section 12.4.4.3, "3-phase power sources", on page 447

1. Add a new power quality measurement as described in Section 12.4.1, "3-phase power analysis initial settings", on page 428.
2. Connect the differential voltage and the current probes to the oscilloscope.
3. Deskew the probes as described in Section 12.3.1.2, "Deskew", on page 382.
4. In the "Analysis" tab, select the "P3 harmonics" measurement.

   The "P3 harmonics" setup dialog opens.
5. Select the "Standard".
6. Select the "Fund. frequency" according to your signal.
7. Select the "Sources" tab.
8. Select the "Wiring" and if necessary "Select lines" to configure how your probes are connected to the three-phase device.
9. Select if you have an"Input/output" setup.
10. Select "Config".
11. Assign the correct channels for the "Voltage" and the "Current" probes.
12. Select the desired "Bandwidth" for signal acquisition. Select "Apply to Sources" to apply the configured bandwidth setting to all sources.

13. Select "Back".
14. Connect the probes to the DUT according to the visualization of the setup. For example a "3V3A" wiring:

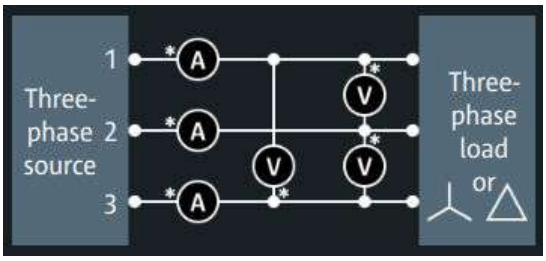

On the screen, you can see the measurement waveforms of the current, the voltage and the power. Also, the result table with numeric measurement results is shown. For details, see Section 12.4.4.7, "3-phase power harmonic results", on page 449.

12.4.4.2 3-phase power harmonics setup

Access: "Menu" > "Apps" > "3-phase" > "+ Add" > "P3 harmonics" > select "P3 harmonics" > "Setup".

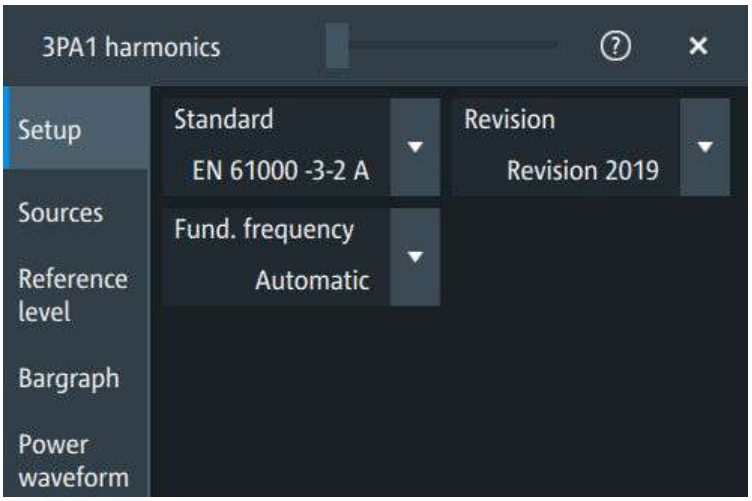

Figure 12-26: 3-phase power harmonic setup for EN 61000-3-2 A / EN 61000-3-2 B

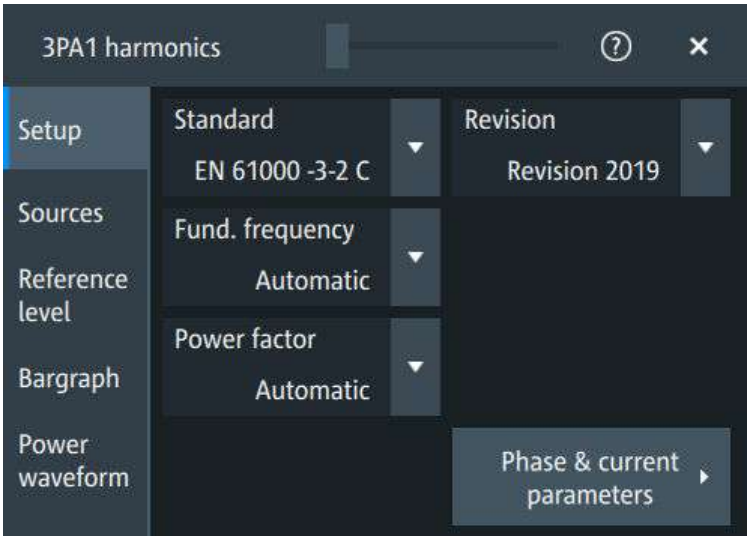

Figure 12-27: 3-phase power harmonic setup for EN 61000-3-2 C

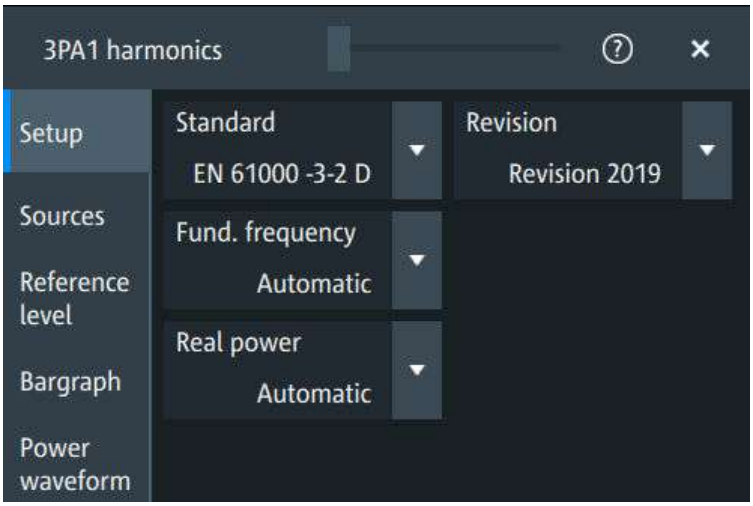

Figure 12-28: 3-phase power harmonic setup for EN 61000-3-2 D

Standard, Revision

Select the standard in use, including which "Revision" of the standard is used, "Revision 2011" or "Revision 2019".

Table 12-3: Current harmonic precompliance standards

Standard	Application
EN 61000-3-2 Class A	Balanced 3-phase equipment, household appliances (excluding equipment identified as class D), tools (excluding portable tools), dimmers for incandescent lamps, audio equipment
EN 61000-3-2 Class B	Portable tools, not professional arc welding equipment
EN 61000-3-2 Class C[1)]	Lighting equipment
EN 61000-3-2 Class D	PC, PC monitors, radio, or TV receivers with an input power less than or equal to 600W

Standard	Application
MIL-STD-1399	Military shipboard user equipment
[1] The EN 61000-3-2 defines different limits for EN 61000-3-2 Class C equipment with an input power smaller or equal than 25W either. The limits that are implemented in the MXO 5 firmware comply with the limits of table 3 (column 2) of the EN 61000-3-2 standard.	

Remote command:
`P3PHase<m>:HARMonics:STANdard` on page 1448
`P3PHase<m>:HARMonics:REVision` on page 1449

Fund. frequency
Selects the frequency of the input signal. The available frequencies depend on the selected Standard, Revision.

Remote command:
`P3PHase<m>:HARMonics:FREQuency:EN` on page 1449
`P3PHase<m>:HARMonics:FREQuency:MIL` on page 1449

Power factor
Available only for "Standard" = EN 61000-3-2 Class C.

Selects if the power factor is defined automatically, or a user-defined value ("Power factor") is used.

Remote command:
`P3PHase<m>:HARMonics:PFACtor:MODE` on page 1450
`P3PHase<m>:HARMonics:PFACtor:USER` on page 1450

Phase & current parameters
Shows a graphical explanation of the relative phase angle and current parameters.

Real power, Power
Available only for "Standard" = EN 61000-3-2 Class D.

Selects if the real power is defined automatically, or a user-defined value ("Power") is used.

Remote command:
`P3PHase<m>:HARMonics:RPOWer:MODE` on page 1450
`P3PHase<m>:HARMonics:RPOWer:USER` on page 1451

12.4.4.3 3-phase power sources

See Section 12.4.2.1, "3-phase power sources", on page 430.

12.4.4.4 3-phase power reference level

See Section 12.3.8.1, "Reference level", on page 421.

12.4.4.5 3-phase power bar graph

Access: "Menu" > "Apps" > "3-phase" > "+ Add" > "P3 harmonics" > select "P3 harmonics" > "Bargraph".

In this tab you can configure the scale for the bar graph display.

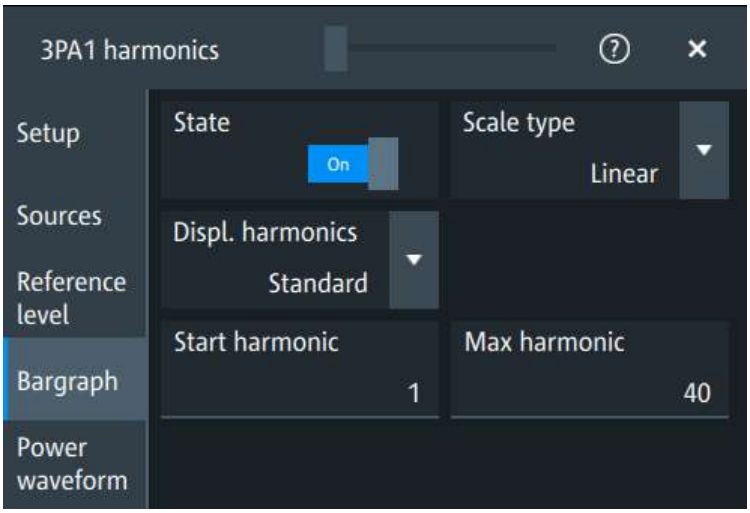

State
Displays or hides the bar graph.

Remote command:
`P3PHase<m>:HARMonics:DISPlay:BARGraph[:ENABle]` on page 1451

Scale type
Selects a logarithmic or linear scale for the display for the harmonics bar graph.

Remote command:
`P3PHase<m>:HARMonics:DISPlay:BARGraph:VERTical:SCALe:TYPE` on page 1452

Displ. harmonics
Selects which harmonics are displayed in the bar graph: all, odd even or depending on the standard definition.

Remote command:
`P3PHase<m>:HARMonics:DISPlay:HARMonics[:DISPlay]` on page 1451

Start harmonic
Sets the start frequency of a bar graph display. At least three bars are displayed.

Remote command:
`P3PHase<m>:HARMonics:DISPlay:HARMonics:STARt[:VALue]` on page 1452

Max harmonic
Sets the stop frequency of the bar graph display. The maximum value is defined by standard and fundamental frequency.

Remote command:
`P3PHase<m>:HARMonics:DISPlay:HARMonics:STOP[:VALue]` on page 1452

12.4.4.6 3-phase power waveform

For a description of the power waveform scaling, see Section 12.4.2.2, "3-phase power waveform", on page 435.

12.4.4.7 3-phase power harmonic results

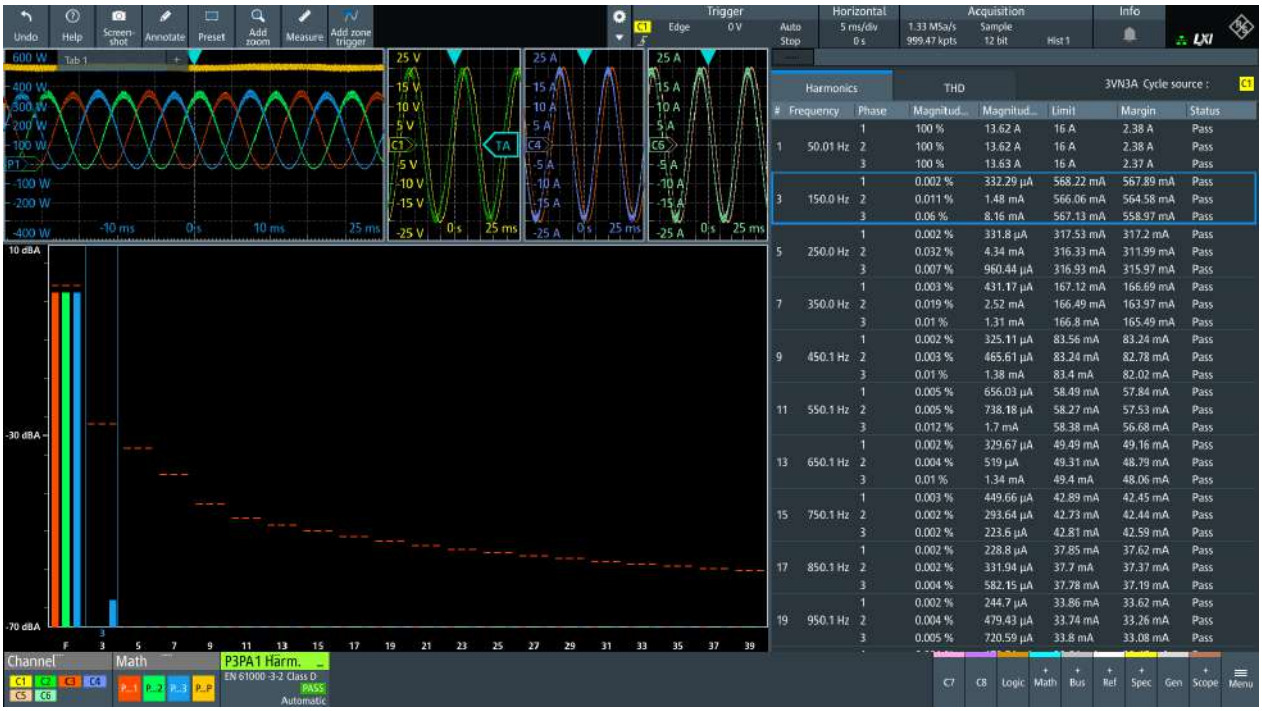

The results of the harmonic measurements are provided as follows:

- The waveform diagram shows the graphical presentation of:
  - The voltage waveform of the individual and total phases
  - The current waveform of the individual and total phases
  - The power waveform of the individual and total phases. The power waveform is the product of the current and voltage waveforms.
    See also Section 12.4.2.2, "3-phase power waveform", on page 435.
- The results are visualized in a bar graph. The number of displayed harmonics depends on the standard definition. When you select a harmonic in the bar chart, the corresponding row in the result table is highlighted.
  See also Section 12.4.4.5, "3-phase power bar graph", on page 448.
- The result table displays the numeric measurement results:

Result table	Description
THD RMS	Total harmonic distortion (THD) relative to the RMS amplitude
THD fundamental	Total harmonic distortion relative to the fundamental
Harmonic index	Harmonic order. Represents the multiple of the fundamental frequency. Value of the x-axis in the bar graph
Frequency	Nominal frequency of the power system.
Phase	Phase differences between the current and the voltage sine waves of the different phases.
Magnitude (%)	Present value of the current harmonic expressed as a percentage of the fundamental component. Value of the y-axis in the bar graph
Magnitude (RMS)	Measured RMS value of the harmonic component.
Limit	Maximum allowed value according to the selected standard. Visually represented by a dark orange line in the bar graph.
Margin	Sets the upper limit for the display of the Y scale.
Status	Displays whether the harmonic's magnitude is within the limit (pass - green bar) or exceeds the limit (fail - orange bar).

Remote commands: "3-phase power harmonics results" on page 1453.

12.4.5 3-phase power efficiency

In a standard 3-phase drive setup, a single-phase AC or DC supply is converted into a 3-phase PWM output by a microcontroller-driven inverter. Real-time feedback such as speed, torque, or position is continuously read and used to modulate the inverter's switching pattern for precise motor control.

The 3-phase efficiency analysis determines how efficiently a 3-phase device converts total input power into total useful output power. The method is identical to the single-phase analysis, but the results from the three phases are summed to obtain the overall input, output and efficiency of the device. See also Section 12.3.6, "Power efficiency", on page 408.

Required probes for an example "1V-1A" input to a "2V-2A" output configuration:

- 3x differential voltage probes
- 3x current probes

Use the ScopeSync functionality if the selected configuration requires additional channels. See also Section 17.2, "ScopeSync", on page 1013.

12.4.5.1 Configuring 3-phase power efficiency

For details of the configuration settings, see:

- Section 12.4.5.2, "3-phase power efficiency setup", on page 452.
- Section 12.4.2.1, "3-phase power sources", on page 430

1. Add a power efficiency measurement as described in Section 12.4.1, "3-phase power analysis initial settings", on page 428.
2. Connect the differential voltage probes and the current probes to the oscilloscope.
3. Deskew the probes as described in Section 12.3.1.2, "Deskew", on page 382.
4. Connect the probes to the DUT. Figure 12-29 shows an exemplary configuration. Adjust your settings based on your connections to the DUT.

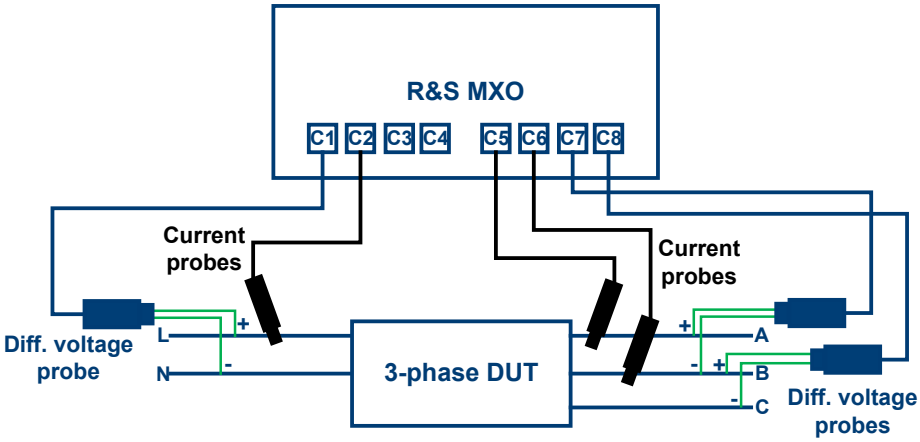

Figure 12-29: Example for a 1V-1A input to a 2V-2A output wiring with selected lines VAB VBC IA IB

5. In the "Analysis" tab, select the "P3 efficiency" measurement.

   The "P3 efficiency" setup dialog opens.
6. If necessary, enable "Statistics".
7. Select the "Sources" tab.
8. Select the "Type" of the current flow for input and output: AC or DC.
9. Select the "Wiring" and "Select lines" to configure how your probes are connected to the three-phase device.
10. Select "Config" for input and output.
11. Assign the correct channels for the "Voltage" and the "Current" probes.
12. Select the required "Bandwidth" for signal acquisition. Select "Apply to Sources" to apply the configured bandwidth setting to all sources.
13. Select "Back".
14. Select the "Power waveform" tab.

15. Adjust the scale and offset of the resulting waveforms if necessary.

    On the screen, you can see the measurement waveforms of the current, the voltage and the power. Also, the result table with numeric measurement results is shown. For details, see Section 12.4.5.7, "3-phase power efficiency results", on page 454.

12.4.5.2 3-phase power efficiency setup

Access: "Menu" > "Apps" > "3-phase" > "+ Add" > "P3 quality" > select "P3 efficiency" > "Setup".

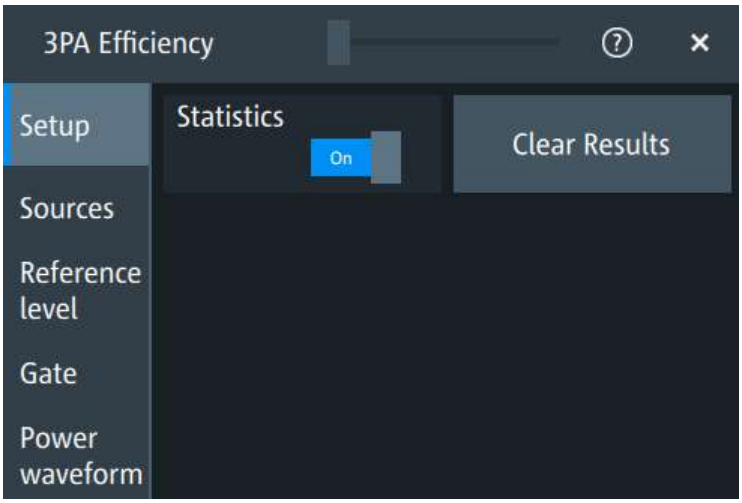

Statistics
Activates or deactivates the statistical evaluation for the selected 3-phase measurement. If statistics are enabled, the following results are calculated:

Label	Description
Current	Current value
Max	Maximum value
Min	Minimum value
Mean	Average
RMS	Root mean square
σ (S-dev)	Standard deviation
Event count	Number of measured events
Wave count	Number of waveforms (acquisitions)

Remote command:
`P3PHase<m>:EFFiciency:STATistic:ENABle` on page 1456
`P3PHase<m>:EFFiciency:STATistic:WFMCount?` on page 1456

Clear results
Resets the statistical results for the respective 3-phase measurement, and starts a new statistical evaluation if the acquisition is running.

Remote command:
`P3PHase<m>:EFFiciency:STATistic:RESet` on page 1456

12.4.5.3 3-phase power sources

See Section 12.4.2.1, "3-phase power sources", on page 430.

Separate source settings are available for input and output.

12.4.5.4 3-phase power reference level

See Section 12.3.8.1, "Reference level", on page 421.

Separate reference level settings are available for input and output. The reference levels take effect only for the AC input and output types.

12.4.5.5 3-phase power gate

See Section 12.3.8.2, "Gate settings for power measurements", on page 425.

12.4.5.6 3-phase power waveform

For a description of the power waveform scaling, see Section 12.4.2.2, "3-phase power waveform", on page 435.

Separate power waveform settings are available for input and output.

12.4.5.7 3-phase power efficiency results

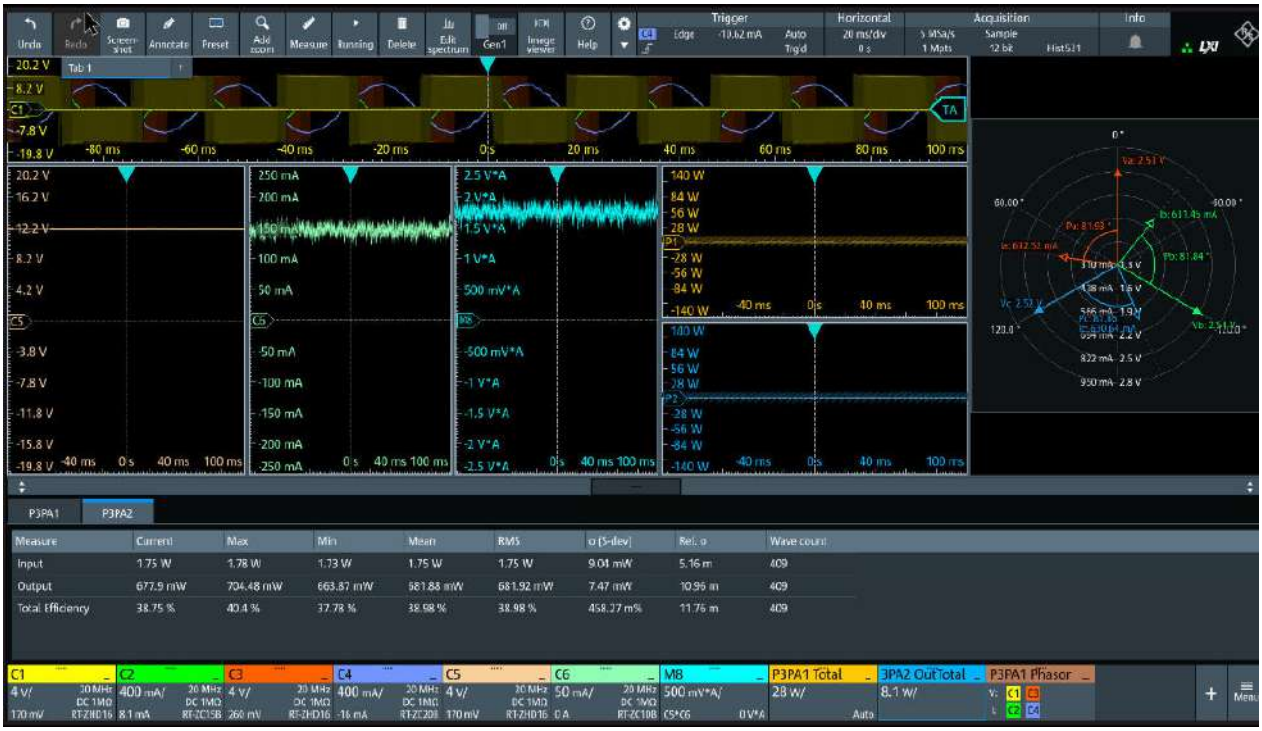

The results of power efficiency measurements are provided as follows:

- The waveform diagram shows the graphical presentation for the input and output of:
  - The voltage and current waveforms of the individual and total phases.
  - The power waveform of the total phase. The power waveform is the product of the current and voltage waveforms.
    See also Section 12.4.2.2, "3-phase power waveform", on page 435.
- The result table displays the numeric measurement results of input power, output power and total efficiency. The total efficiency is the ratio of input power to output power.

Remote commands: "3-phase power efficiency results" on page 1456.

12.5 Digital voltmeter

The software-based voltmeter features AC RMS, DC and DC RMS voltage measurements on a specific analog channel.

12.5.1 Using the digital voltmeter

To start a digital voltmeter measurement

1. Tap the "Menu" > "Apps" > "General" tab > "DVM", to open the digital voltmeter measurement dialog.

2. Select the channel for your measurement.
3. Select a "Filter bandwidth" from the list.
4. Set a "Measurement time".
5. Tap on a measurement to enable it. Available are "DC", "DC RMS", "AC RMS".

   The measurement results of all enabled measurements are displayed in the result table.

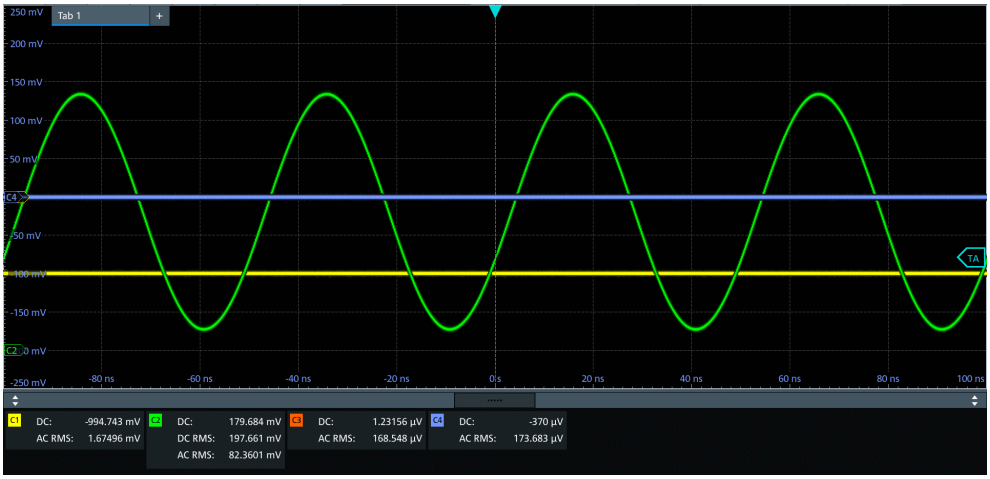

12.5.2 Settings of the digital voltmeter

Access: "Menu" > "Apps" > "General" tab > "DVM".

C<n>
Selects the channel which is measured by the digital voltmeter.

Filter bandwidth
Selects the filter bandwidth.

Remote command:
`METer:BANDwidth` on page 1476

Measurement time
Sets the measurement time. The time begins in the moment that a measurement is enabled.

Remote command:
`METer:MTIMe` on page 1478

Measurements
Enables the voltmeter measurements. When a measurement is enabled, the voltmeter is turned on automatically.

"DC" Enables the DC voltage measurement.

"DC RMS" Enables the DC RMS voltage measurement.

"AC RMS" Enables the AC RMS voltage measurement.

Remote command:
`METer:DVMeter<m>:ACRMs:ENABle` on page 1477
`METer:DVMeter<m>:ACRMs:RESult?` on page 1477
`METer:DVMeter<m>:DC:ENABle` on page 1477
`METer:DVMeter<m>:DC:RESult?` on page 1477

METer:DVMeter<m>:DCRMs:ENABle on page 1478
METer:DVMeter<m>:DCRMs:RESult? on page 1478

All on, All off
Enables/disables all voltmeter measurements.

12.6 XY-plot

XY-plots combine the voltage levels of two waveforms in one diagram. They use the voltage level of a second waveform as the x-axis, rather than a time base. This allows you to perform phase shift measurements, for example. You can display up to four different XY-plots.

You can analyse XY-plots, for example, with cursor and automatic measurements, zone trigger and mask test. Available analysis methods depend on the selected sources of the XY-plot.

12.6.1 Settings for XY-plots

Access: "Menu" > "Apps" > "General" tab > "XY"

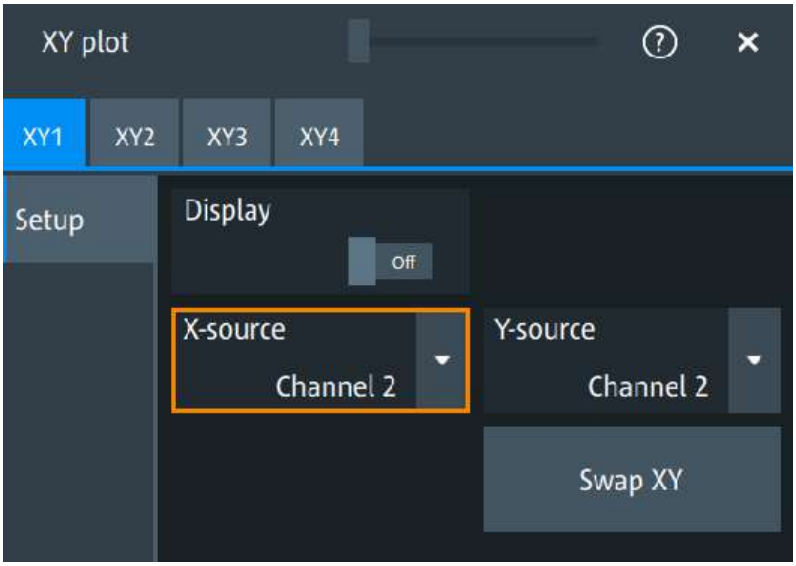

You can display up to four different XY-plots that use the voltage level of a waveform as the x-axis, rather than a time base.

Make sure to select the tab of the required XY-plot.

Display
If activated, the XY-waveform is active and shown in a diagram, or it is minimized in a signal icon.

Remote command:
XY<m>[:STATe] on page 1479

X-source, Y-source
Define the signal sources that supply the x-values and y-values of the XY-diagram.

Select from the active waveforms:

- Analog channel waveform
- Reference waveform
- Math waveform
- Track waveform (mask test and zone trigger on the resulting XY-plot is not possible)

Remote command:
XY<m>:XSOurce on page 1480
XY<m>:YSOurce on page 1479

Swap XY
Replaces the source of the x-axis with the source of the y-axis and vice versa.

Remote command:
XY<m>:SWAP on page 1479

12.6.2 Displaying an XY-diagram

To set up an XY-plot

1. Select "Menu" > "Apps".
2. In the > "General" tab, tap "XY".
3. In the "X-source" field, define the signal source that supplies the x-values of the XY-diagram.
4. In the "Y-source" field, define the signal source that supplies the y values of the XY-diagram.
5. Enable the "Display".
6. To switch the x- and y-values quickly, tap the "Swap XY" button.

12.7 Eye analysis (option R&S MXO5-K136)

The main application of eye diagrams is the analysis of signal integrity and signal quality. In particular, eye diagram analysis is used for serial communication standards, for both high-speed serial protocols (e.g. USB) and low-speed serial protocols (e.g. CAN).

12.7.1 Calculation and display of eye diagrams

The MXO 5 can generate eye diagrams. To build the eyes, the oscilloscope acquires a long waveform containing many bits. The instrument uses a timing reference (clock signal or CDR) to cut the waveform into slices of 1-bit length, and superimposes the individual slices. The superimposed slices of consecutive bits build the eye. The timing reference defines the position of the individual data bits on the time axis, and so it provides the necessary timing marks to align and superimpose the waveform slices.

The method combines consecutive bits in the eye diagram and does not miss any bit of the acquisition. Eye generation also offers time control over the waveform slices contributing to the eye diagram. For example, you can select the bits contributing to the eye using a gate.

You can define up to 8 eye diagrams and configure them independently. Each eye has its own signal icon. You can move and minimize eye diagrams like any waveform diagram and analyze all eye diagrams in parallel.

The analysis functions for eye diagrams are described in Section 12.7.3, "Analysis of eye diagrams", on page 466.

12.7.2 Eye diagram setup

The configuration of an eye diagram consists of the selection and setup of the input source and timing reference. You can also adjust display settings and restrict the slices that contribute to the eye generation.

You can define up to 8 eye diagrams and configure them independently.

12.7.2.1 Basic setup

Access: "Menu" > "Apps" > "General" tab > "Eye Analysis" > "Setup" tab

In the "Setup" tab, you configure the source, the reference levels, the timing reference and other eye definition settings.

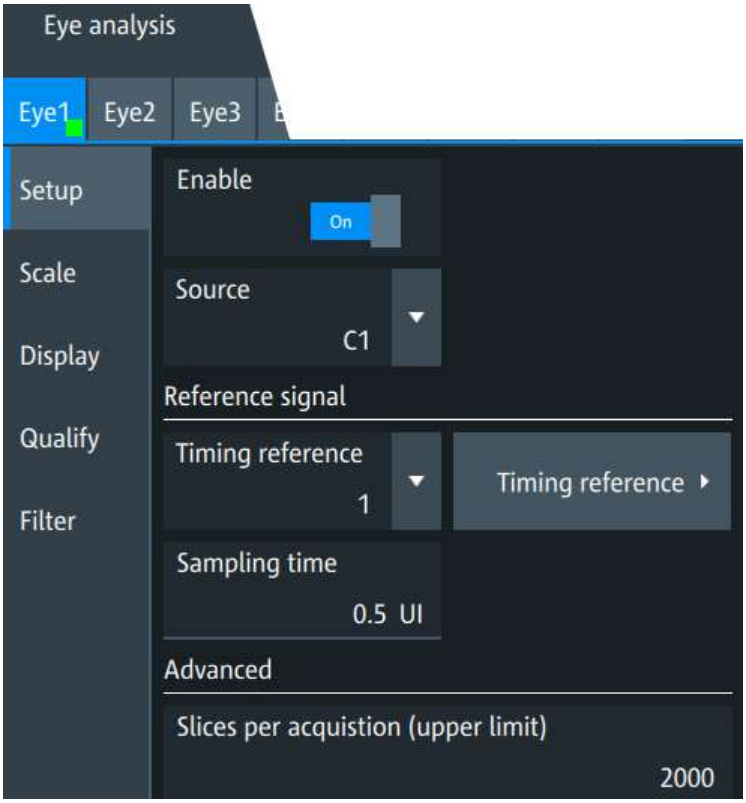

Enable
Activates or deactivates the eye diagram.

Remote command:
`EYE<e>:STATe` on page 1483

Source
Selects the waveform from which the eye diagram is generated. You can select analog channels, reference and math waveforms. For analog channels, peak detect, envelope, and average waveforms are not supported.

If the source waveform is minimized or hidden, no measurement results for the eye diagram are shown.

Remote command:
`EYE<e>:SOURce` on page 1482

Timing reference
Selects the timing reference, which defines the reference signal and the method that are used to obtain the timing information required to slice the data source waveform.

Remote command:
`EYE<e>:TREFerence` on page 1483

Timing reference
Opens the "Timing reference" tab, where you can configure the timing definitions using an explicit clock or clock data recovery. See Section 8.3, "Timing reference", on page 219 for details.

Sampling time
Sets a sampling time for the clock signal, an offset for the clock edge in relation to the bit start. A unit interval typically corresponds to a bit in the input data signal. The clock edge sets the beginning of the unit interval. The sampling time is a number between 0 and 1. Value 0 sets the clock edge to the beginning of the bit period; value 0.5 sets the clock edge to the middle of the bit period.

Remote command:
`EYE<e>:SAMTime` on page 1482

Slices per acquisition
Sets the number of waveform slices for a single acquisition.

Remote command:
`EYE<e>:MSLices` on page 1482

12.7.2.2 Scale settings

Access: "Menu" > "Apps" > "General" tab > "Eye Analysis" > "Scale" tab

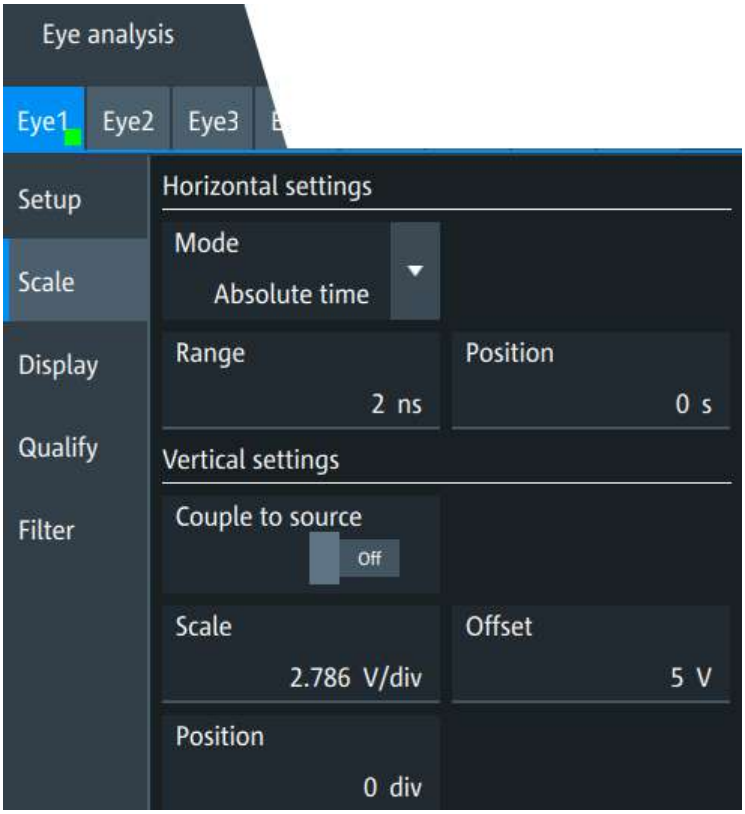

Mode
Sets the method to define the horizontal scale of the eye diagram: as absolute time, or in unit intervals. You can use a unit interval, if the nominal frequency of the clock signal is known.

Indirectly, the horizontal scale determines the size of one waveform slice. The waveform slice must be fully contained in the waveform acquisition to contribute to the eye diagram.

The time units value effects the following parameters:
- The units of the "Eye diagram".
- The position of cursor lines in the eye diagram.
- The X-position of segment points in mask tests on eye.

Remote command:
EYE<e>:HORizontal:UNIT on page 1485

Range
Sets the time range that is covered by the eye diagram in absolute time values or unit intervals.

Remote command:
EYE<e>:HORizontal:ABSolute:RANGe on page 1484
EYE<e>:HORizontal:UINTerval:RANGe on page 1484

Position
Defines the position of the zero point in the diagram, in seconds or unit intervals. The zero point is the alignment point on which the slice timestamps are superimposed.

Remote command:
EYE<e>:HORizontal:ABSolute:POSition on page 1484
EYE<e>:HORizontal:UINTerval:POSition on page 1484

Couple to source
If enabled, the vertical position and scale of the source are used.

Remote command:
EYE<e>:VERTical:COUPle on page 1485

Scale
Defines the vertical scale in Volts per division if the vertical settings are independent of the source settings. Increasing the scale compresses the display of the eye.

Remote command:
EYE<e>:VERTical:SCALe on page 1486

Offset
Sets the offset voltage of the eye if the vertical settings are independent of the source settings.

Remote command:
EYE<e>:VERTical:OFFSet on page 1485

Position
Moves the selected eye up or down in the diagram if the vertical settings are independent of the source settings.

Remote command:
EYE<e>:VERTical:POSition on page 1486

12.7.2.3 Display settings

Access: "Menu" > "Apps" > "General" tab > "Eye Analysis" > "Display" tab

Each eye diagram has its specific persistence settings, independent of the general waveform persistence.

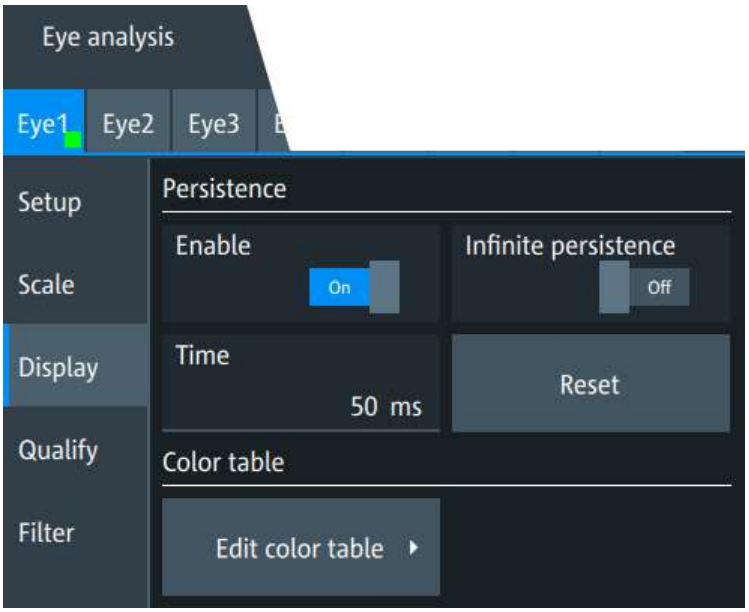

Enable
If enabled, each new data point in the diagram area remains on the screen for the duration that is defined using Time, or as long as Infinite persistence is selected.

If disabled, the waveform points are displayed only for the current acquisition.

Remote command:
`EYE<e>:DISPlay:PERSistence:STATe` on page 1481

Infinite persistence
If infinite persistence is enabled, each new waveform point remains on the screen until this option is disabled, or the display is reset. Use infinite persistence to display rare events in the signal.

Remote command:
`EYE<e>:DISPlay:PERSistence:INFinite` on page 1480

Time
Sets the time how long the eye points remain on the display.

Remote command:
`EYE<e>:DISPlay:PERSistence:TIME` on page 1481

Reset
Resets the display, removing all waveform points.

Remote command:
`EYE<e>:DISPlay:PERSistence:RESet` on page 1481

Edit color table
Like any other waveform, you can show the eye waveform in solid color, or apply a color table.

For a description of the color table settings, see Section 5.3.1, "Colors", on page 100.

12.7.2.4 Qualify settings

Access: "Menu" > "Apps" > "General" tab > "Eye Analysis" > "Qualify" tab

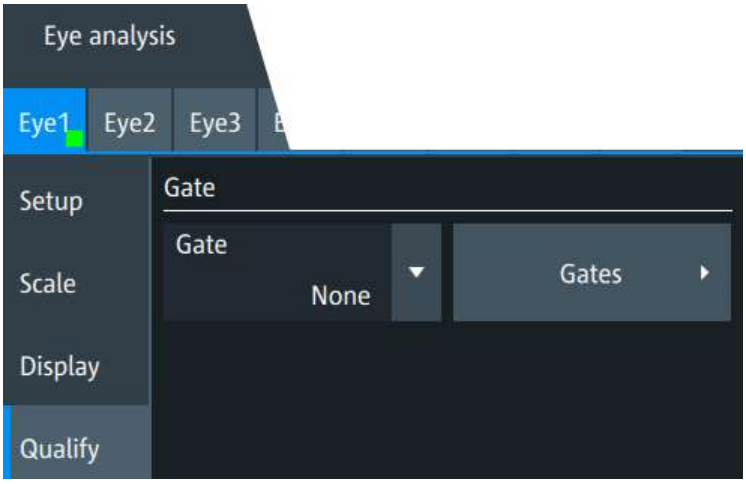

Gate
Selects the gate, which restricts the contributing slices in horizontal direction. Only the timestamps within the defined horizontal interval qualify for eye generation.

Remote command:
`EYE<e>:QUALify:GATE` on page 1482

Gates
Opens the "Gate" dialog, where you can configure the gates. See Section 8.2, "Gate setup", on page 218 for details.

12.7.2.5 Filter settings

Access: "Menu" > "Apps" > "General" tab > "Eye Analysis" > "Filter" tab

In the "Filter" tab, you can set up an additional filter for the eye analysis. The filter selects waveform slices for eye generation dependent on the bit status.

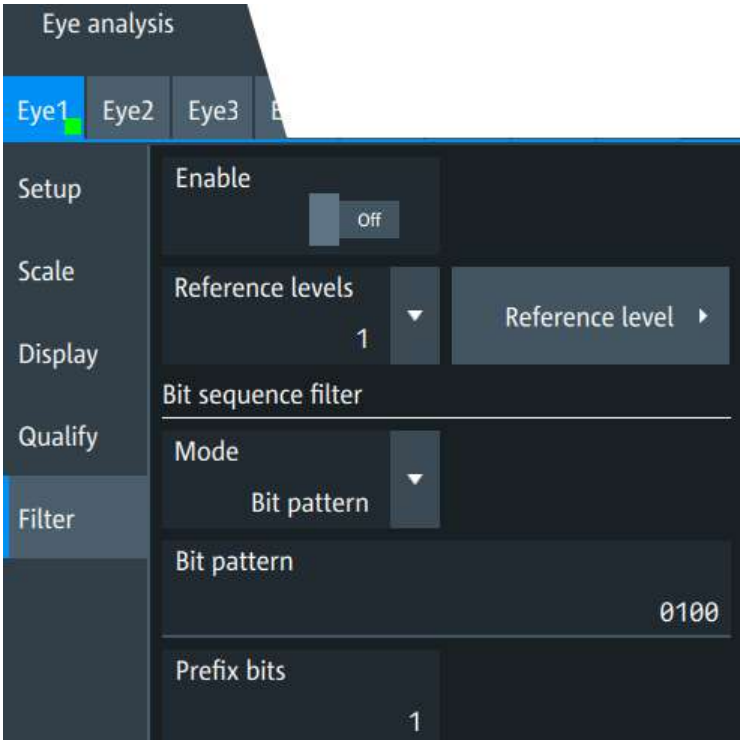

Make sure to select the correct eye diagram subtab before you adjust the settings.

Enable
Applies the filter settings.

Remote command:
`EYE<e>:FILTer:STATe` on page 1488

Reference levels
Selects the reference level set that is used by the filter to obtain the bits.

Remote command:
`EYE<e>:FILTer:RFLSet` on page 1488

Reference level
Opens the "Reference level" dialog, where you can configure the reference level sets. See Section 8.1, "Reference level setup", on page 215 for details.

Mode
Selects which bits contribute to the eye generation.

"Transition bits"	Only bits after a signal transition contribute (0 to 1, or 1 to 0).
"Non-transition bits"	Only bits without a preceding signal transition contribute (0 to 0, or 1 to 1).
"Bit pattern"	Only bits contribute that match the defined pattern around the center eye. Use the bit pattern, for example, to measure the effect of data-dependent jitter on the eye diagram.

Remote command:
EYE<e>:FILTer:BPATtern:MODE on page 1487

Bit pattern
Defines the bit pattern if "Mode" = "Bit pattern". You can define the length of the bit pattern, select the format, and enter the pattern.

Remote command:
EYE<e>:FILTer:BPATtern:SEQuence on page 1487

Prefix bits
Sets the number of prefix bits, which are the bits before the center eye (reference bit). Changing the number of prefix bits shifts the pattern to the left or to the right.

Remote command:
EYE<e>:FILTer:BPATtern:NPRBits on page 1487

12.7.3 Analysis of eye diagrams

To analyze eye diagrams, you can use the following functions of the MXO 5:

- **Zoom**
  You can zoom into eye diagrams using the zoom functions.
  For details, see Section 9.1, "Zoom", on page 226.
- **Cursor measurements**
  Cursors can be used on eye diagrams in the usual way. "Envelope 1", "Envelope 2" and "Track waveform" are not supported.
  For details, see Section 10.1, "Cursor measurements", on page 264.
- **Mask testing**
  You can test the created signal eye against a mask. Using this mask test, you can test data signals against eye shapes that are required in the standards. You can select and modify the shape of the eye and enter the position of the corner points.
  For details, see Section 12.1, "Mask testing", on page 341.

13 Data and file management

This section describes how to manage general and measurement settings, waveform data, measurement results, and screenshots.

13.1 Accessing, retrieving and handling data

Depending on the origin and content, this description distinguishes between the following data types:

- Operational data
- Non-operational data

Operational data (data for intended use)

The MXO 5 uses and creates this data because of its intended use and according to the settings and configuration you have made. Thus, this data makes up most of the data that the MXO 5 creates, such as user files that contain user-defined configurations or data, like instrument settings or measurement data.

You can access, retrieve and delete user files, see Section 13.2, "Save/recall dialog", on page 468.

Non-operational data (usage data)

The MXO 5 creates this data during and through its use. Such data is collected e.g. for troubleshooting, to help our customer support center find solutions quickly.

The MXO 5 does not generate this data continuously and in real-time; this data is saved on the product. You can store the data on a remote server, for example via a network connection.

The MXO 5 generates the following data:

- User and authentication data
- Security and access control
- Network and communication data
- Software and firmware update data
- Diagnostic and troubleshooting data
- Environmental conditions
- Hardware component metadata.

Only when you create a service report, this data is stored in a ZIP file, see Section 19.4, "Information for technical support", on page 2326. The ZIP file contains files in TXT, XML, LOG, and CSV format, as well as binary database formats for the diagnostic and troubleshooting data. The volume of the non-operational data depends on the usage of the product and typically amounts to about 20 MB.

For additional information on the different memory types of your product and on how to protect sensitive data, see Section 19.5, "Data security", on page 2327.

13.2 Save/recall dialog

The "Save/recall" dialog provides functions for saving and restoring data.

Access to save settings and data: "Menu" > "Save/recall" > "Save" tab.

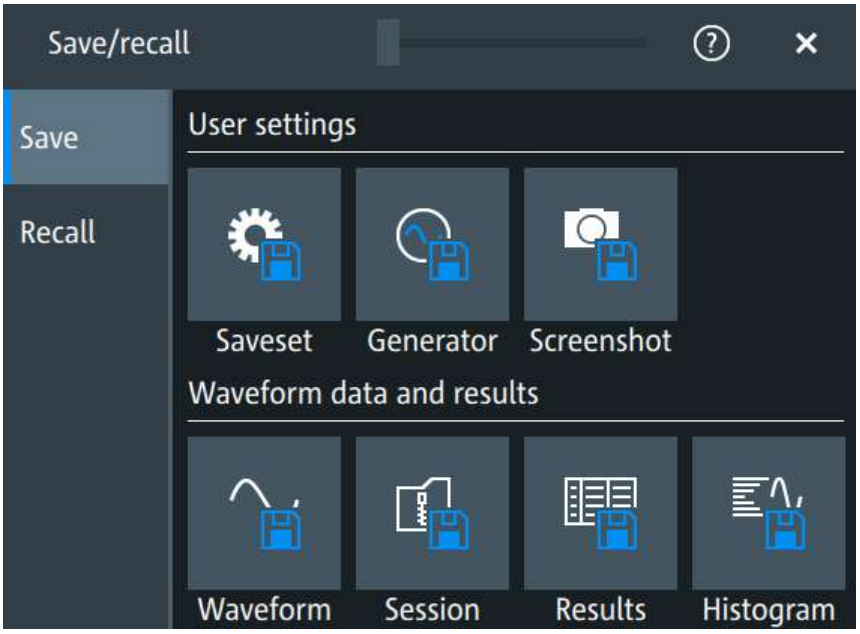

Figure 13-1: Save tab

Access to load settings and data: "Menu" > "Save/recall" > "Recall" tab.

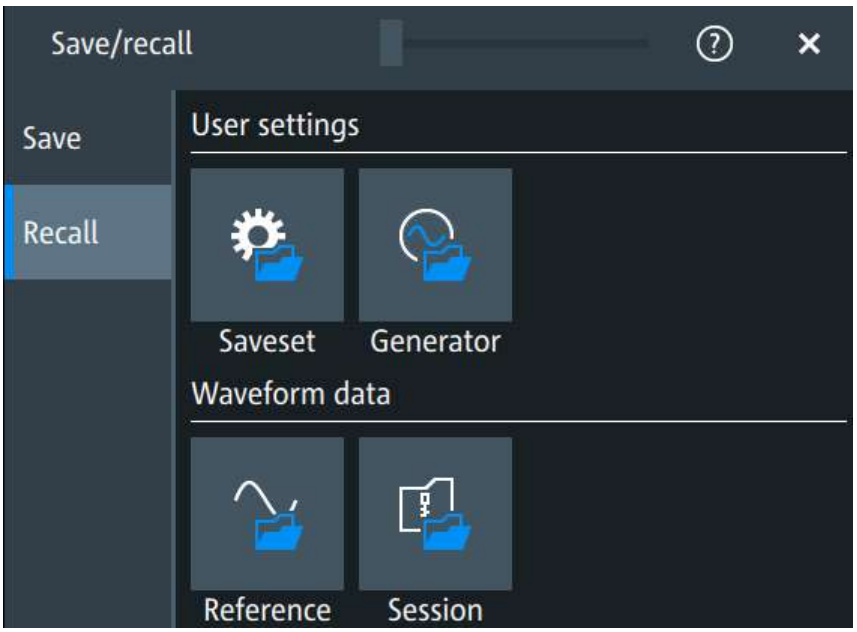

Figure 13-2: Recall tab

Using the "Save/recall" dialog, you can store or load various data to files for further usage, analysis and reporting:

- General settings: Section 13.3, "General and measurement settings: savesets", on page 470
- Waveforms: Section 13.4, "Waveform data", on page 474
- Reference waveforms: Section 13.4, "Waveform data", on page 474 and Section 9.4, "Reference waveforms", on page 249
- Histograms: Section 13.5, "Histogram data export", on page 490
- Measurement results: Section 13.6, "Results", on page 494
- Sessions: Section 13.7, "Sessions", on page 497
- Screenshots: Section 13.8, "Screenshots", on page 500
- Decode results of serial buses: Section 14.1.8, "Export", on page 528

The [Camera] key can be configured to save or set up screenshots.

Storage locations

You can store data locally, or to a USB flash drive. For local storage, the path is always `/home/storage/userData`. The path has subdirectories to organize the data. For storage on USB flash drive, the default path is `/run/media/usb/<MyDriveName>/`. On both storage media, you can create directories to organize the data. You can also copy, paste and delete data.

On USB flash drives, the following file systems are supported: FAT32, FAT16, exFAT and NTFS.

The operating system differentiates between relative and absolute paths.
A relative path starts with your current directory and does not start with a `/`, e.g. `userData`.
An absolute path defines the location from the root directory, e.g. `/home/storage/userData`.

13.3 General and measurement settings: savesets

To repeat measurements at different times or perform similar measurements with different test data, you can save the used settings and load them again later. Furthermore, you can refer to the settings of a particular measurement when analyzing the results. Optionally, the current toolbar and dialog configuration can be included into the saveset.

Access: "Menu" > "Save/recall" > "Save" tab > "Saveset".

If you often save and load settings, try the following shortcuts:

- The "Save setup" toolbar icon saves the current settings to a file according to the settings in "Save/recall" > "Save".
- The "Recall" toolbar icon opens the dialog to select and load a setup.
- You can assign a saveset to the [Preset] key and the "Preset" function on the toolbar.
  See Section 5.6, "Preset setup", on page 112.

13.3.1 Using savesets

Savesets contain the complete general and measurement configuration. You can save an unlimited number of setting files.

To save settings to a saveset file

1. Open "Menu" > "Save/recall".
2. In the "Save" tab, tap the "Saveset" button.
   The save "Saveset" dialog opens.

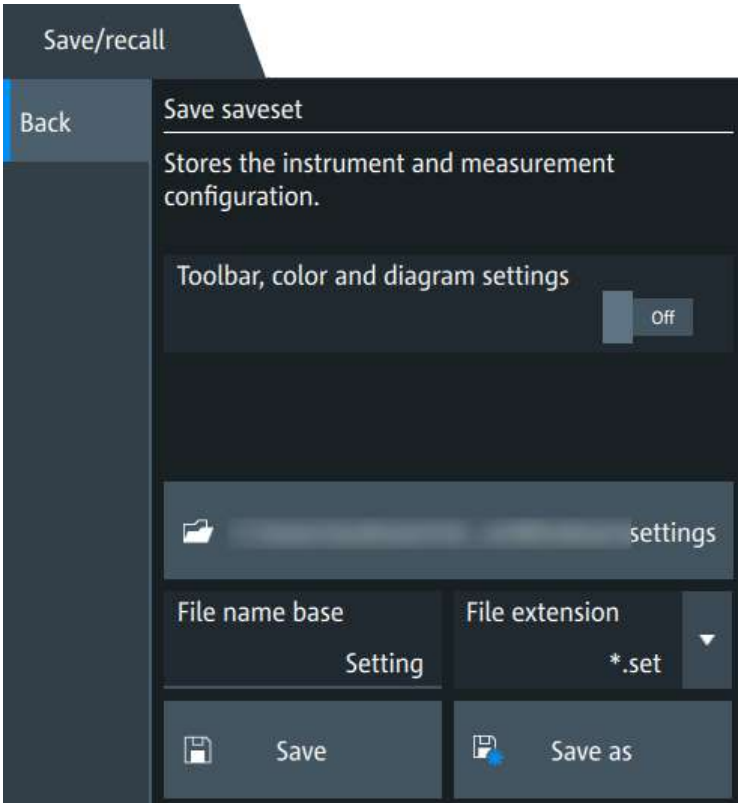

Figure 13-3: Save saveset dialog

3. If needed, enable "Toolbar, color and diagram settings".
4. Check the path on the "<Folder>" button. If the path does not fit, tap the button. Navigate to the folder, where you want to save the settings file.
5. Tap "Save to file".
   Alternatively, select "Save As" and select the destination folder and file name in the file selection dialog.

   The current settings are saved to the selected file.

To load settings from a saveset file

1. Open "Menu" > "Save/recall".
2. In the "Recall" tab, press the "Saveset" button.

   The recall "Saveset" dialog opens.

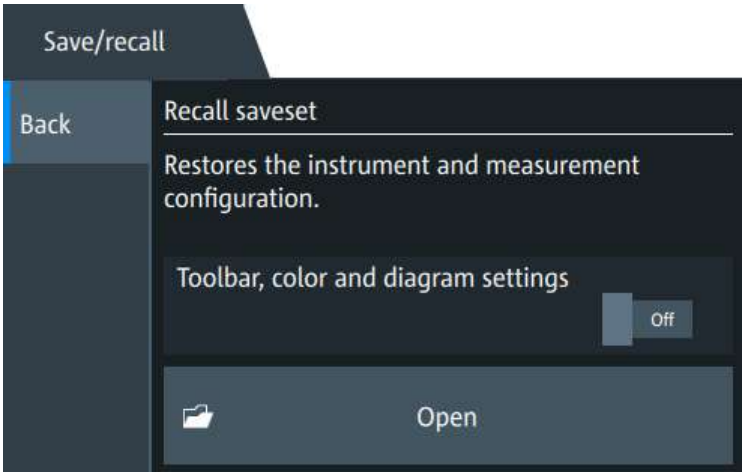

Figure 13-4: Recall saveset dialog

3. Tap "Open".
4. Navigate to the required saveset.

   The saved settings are loaded to the MXO 5.

Remote commands:

- `SAVeset:CONFig:UPReferences` on page 1239
- `MMEMory:SAV` on page 1237
- `MMEMory:RCL` on page 1238

13.3.2 Waveform generator saveset

Generator savesets store the instruments generator configuration.

To save settings to a saveset file

1. Open "Menu" > "Save/recall".
2. In the "Save" tab, press the "Generator" button.
   The save "Gen saveset" dialog opens.

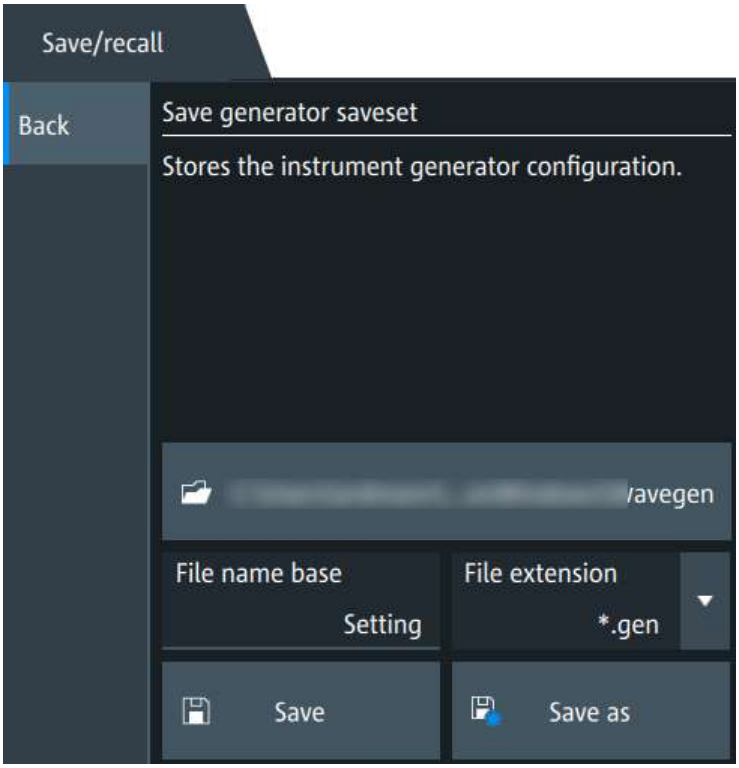

Figure 13-5: Save generator saveset dialog

3. Tap "Browse"

   The current settings are saved to the selected file.

To load settings from a saveset file

1. Open "Menu" > "Save/recall".
2. In the "Recall" tab, press the "Generator" button.

   The recall "Gen saveset" dialog opens.

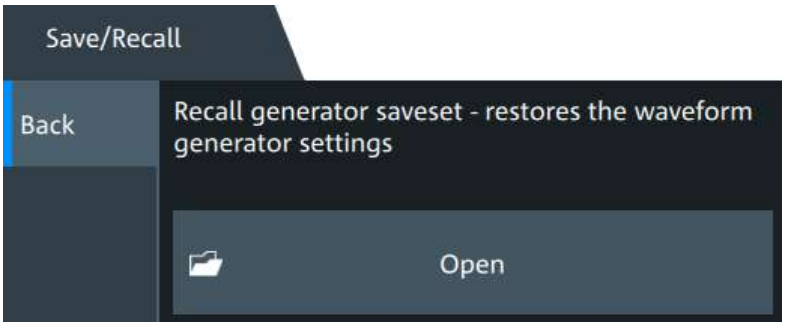

Figure 13-6: Recall generator saveset dialog

3. Tap "Open".

4. Navigate to the saveset.

   The saved settings are loaded to the MXO 5.

Remote commands:

- `GENerator:SAV` on page 1239
- `GENerator:RCL` on page 1239

13.4 Waveform data

You can save waveform data to files, and reload the data of REF files as reference waveforms.

13.4.1 Save waveforms: settings

Access: "Menu" > "Save/recall" > "Save" tab > "Waveform".

In this dialog, you define the storage settings for waveform data.

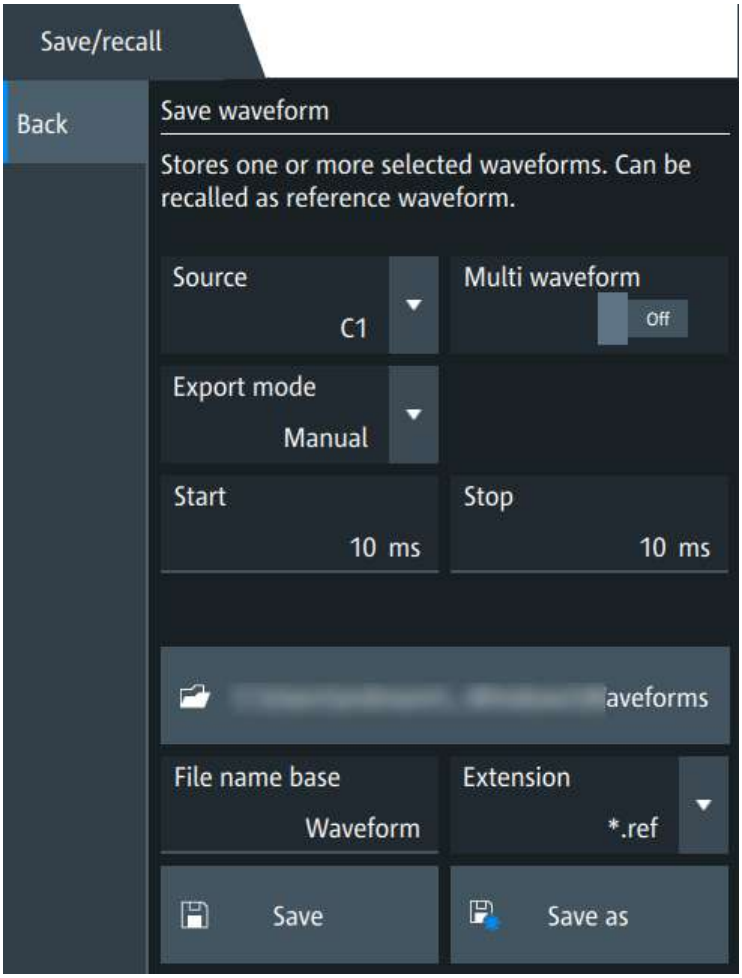

Figure 13-7: Save a single waveform

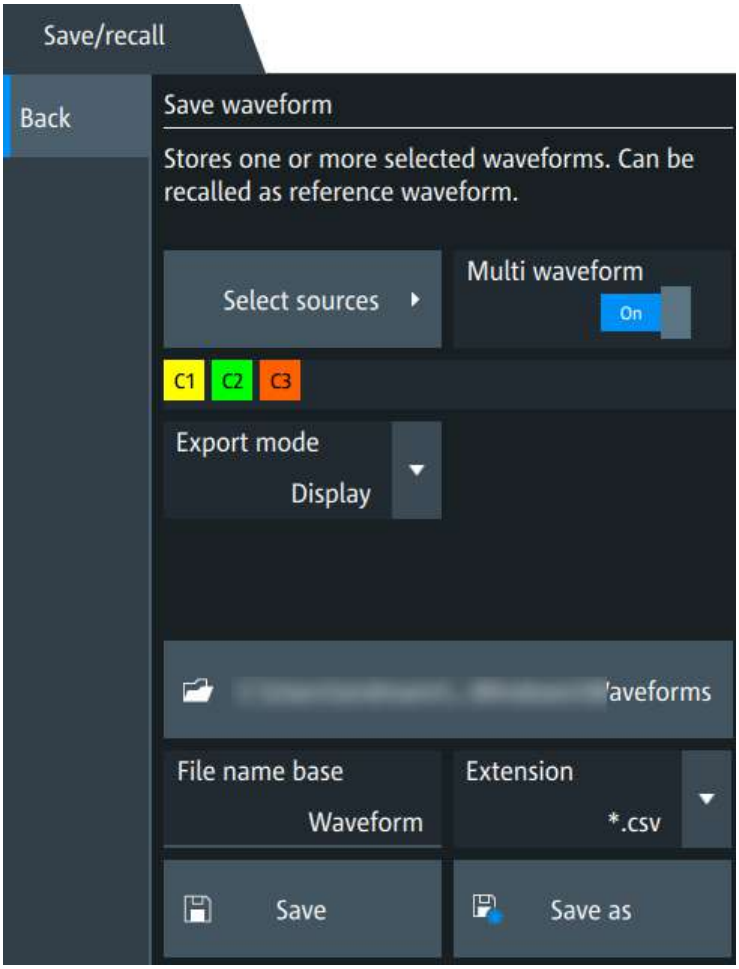

Figure 13-8: Save multiple waveforms

Source
Selects the waveform to be exported with single waveform export. The list shows all active waveforms that are available for export.

Analog and digital channels, math and reference waveforms, tracks and spectrum traces can be exported.

Remote command:
`EXPort:WAVeform:SOURce` on page 1243

Multi waveform
If set to "On", you can export several waveforms at once. Use Select sources to define the waveforms for data export. The following export formats are supported:

- REF files: One REF file per waveform is created. All REF files are combined in a ZIP file.
- HDF5 files: All data are written in one `.h5` file.
- CSV files: Multiple analog channels can be saved in one CSV file. Other waveform types are not supported.

For details, see Section 13.4.3, "Waveform export files", on page 481.

Select sources
The selection dialog provides all active waveforms. You can select or deselect all available waveforms at once with "All on" or "All off" on top of the dialog. You can also select or deselect all waveforms of a waveform group, using the button to the right of the group.

Analog and digital channels, math and reference waveforms, tracks and spectrum traces can be exported. Note that in CSV files, only multiple analog channels can be saved.

Remote command:
`EXPort:WAVeform:SOURce` on page 1243

Export mode
Defines the part of the waveform record that has to be stored.

"Display"	Saves the waveform data that is displayed in the diagram.
"All data"	Saves the complete waveform record.
"Cursor"	Saves the data between the cursor lines if at least one cursor measurement is defined for the source waveform. If several cursor sets are defined, select the "Cursor set" to be used for export.
"Gate"	Saves the data included in the measurement gate if a gated measurement is defined for the source waveform. Select the "Gate" to be used for export.
"Manual"	Saves the data between user-defined "Start" and "Stop" values.

Remote command:
`EXPort:WAVeform:SCOPe` on page 1242
`EXPort:WAVeform:CURSorset` on page 1241

EXPort:WAVeform:GATE on page 1241
EXPort:WAVeform:STARt on page 1244
EXPort:WAVeform:STOP on page 1245

Save settings
You define the details of the filename, extension and directory, and save the file.

A progress bar informs you about the process.

<Folder> ← Save settings
Opens a file explorer where you can select the directory where the file is saved.

The setting is used for automatic saving actions, for example, saving on trigger or mask violation. It has **no** effect on EXPort:WAVeform:SAVE.

Remote command:
EXPort:WAVeform:AUTonaming:PATH on page 1240

File name base ← Save settings
Sets a name for the file, without extension. The name is extended with a time stamp when the file is saved. Thus, multiple "Save" actions are possible without changing the filename.

The setting is used for automatic saving actions, for example, saving on trigger or mask violation. It has **no** effect on EXPort:WAVeform:SAVE.

Remote command:
EXPort:WAVeform:AUTonaming:NAME on page 1240

File extension ← Save settings
Selects the format of the exported file.

You can select between "*.csv" (Excel format), "*.ref" (Reference Waveform Format) and "*.h5" (HDF5 format). REF files can be reloaded as reference waveforms. See: Section 13.4.3, "Waveform export files", on page 481. If you have selected multiple waveforms other than analog channels, CSV is not available.

The setting is used for automatic saving actions, for example, saving on trigger or mask violation. It has **no** effect on EXPort:WAVeform:SAVE.

Remote command:
EXPort:WAVeform:AUTonaming:TYPE on page 1241

Save ← Save settings
Saves the file in the defined folder using the "File name base". If the specified file already exists, it is overwritten with the new data.

Save As ← Save settings
Opens a file explorer where you select the folder, the file type, enter the filename and save the file.

Remote command:
EXPort:WAVeform:NAME on page 1241
EXPort:WAVeform:SAVE on page 1242

13.4.2 Saving waveforms

To save a single waveform

1. Open "Menu" > "Save/recall".
2. On the "Save" tab, tap "Waveform".

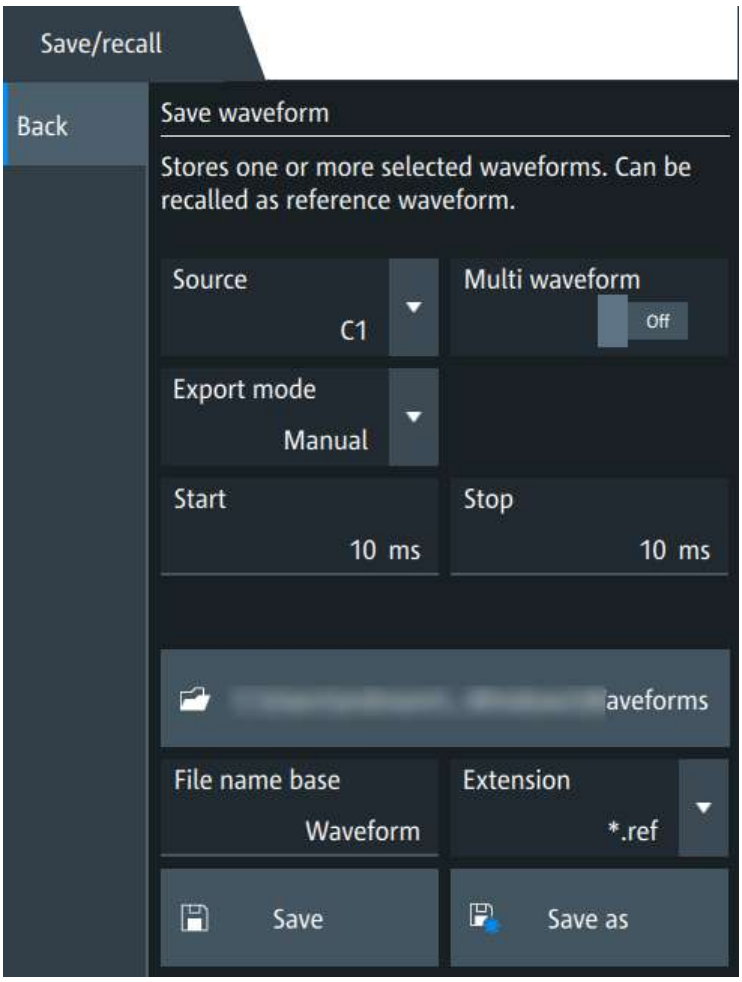

Figure 13-9: Save waveform dialog

3. Select the "Source".
4. Select the "Export mode" to define the exported part of the waveform.
5. If necessary, define the cursor, gate or start/stop values for the data.
6. Select the format of the export file: "File extension".
7. Set the "File name base".
8. Tap "Save" or "Save As".

   The selected waveform is saved to the specified file. A progress bar informs you about the saving process.

To save multiple waveforms

1. Open "Menu" > "Save/recall".
2. In the "Save" tab, tap "Waveform".
3. Enable "Multi waveform"

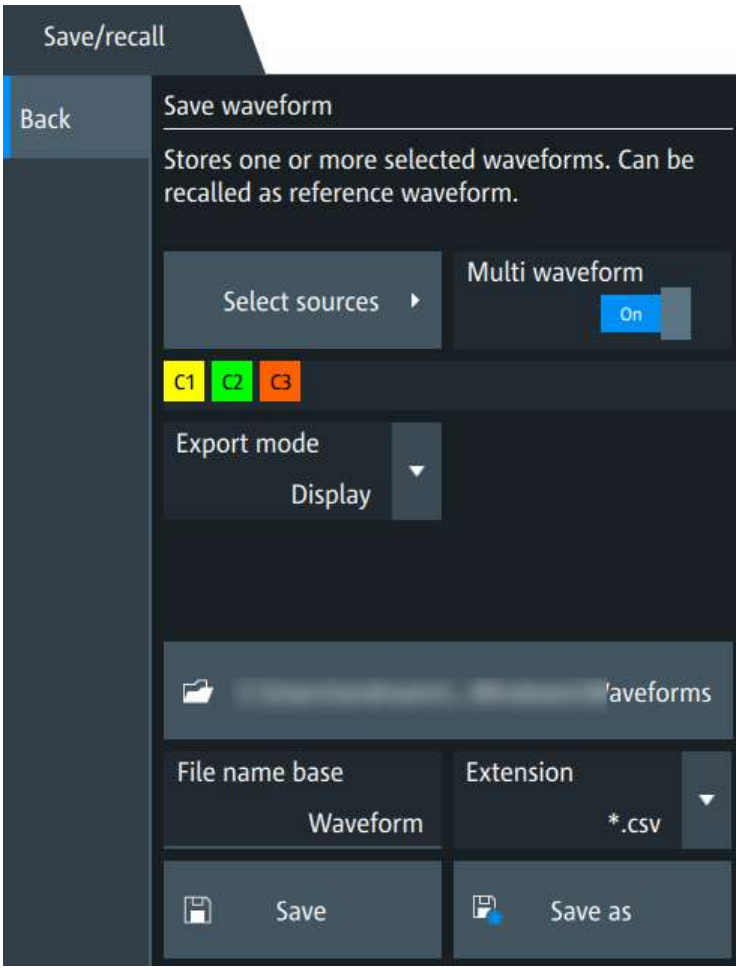

Figure 13-10: Save multiple waveforms dialog

4. Tap "Select sources".
5. Select the waveforms for export.

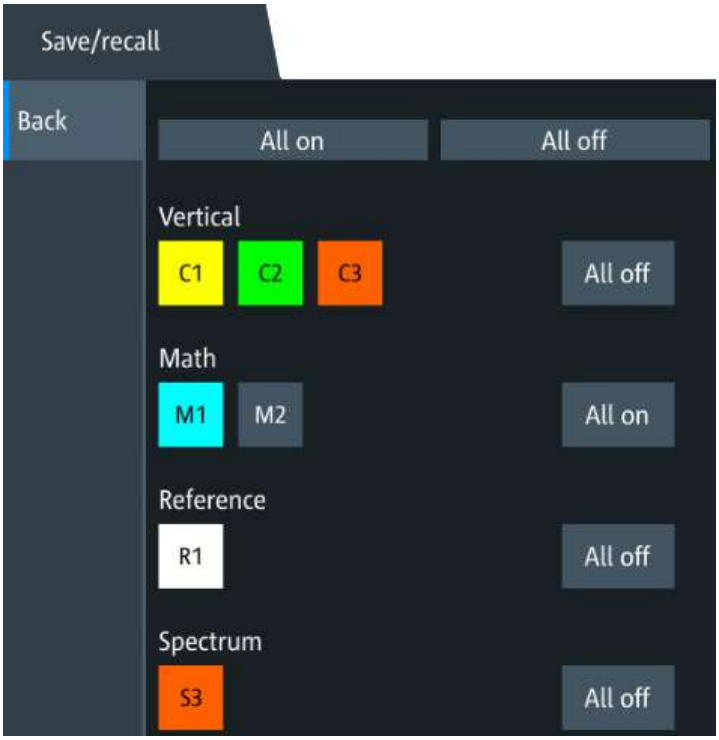

6. Tap "Back".
7. Select the "Export mode" to define the exported part of the waveform.
8. If necessary, define the cursor, gate or start/stop values for the data.
9. Select the format of the export file: "File extension".
10. Set the "File name base".
11. Tap "Save" or "Save As".

    The selected waveforms are saved to the specified file. A progress bar informs you about the saving process.

13.4.3 Waveform export files

You can store the waveform data in several formats:

- CSV (comma-separated values): ASCII-based format, easy access with Excel or text tools. See Section 13.4.3.1, "CSV files", on page 481.
- REF (reference waveform): binary data with XML header, can be reloaded as reference waveforms. See Section 13.4.3.2, "REF files", on page 485.
- HDF5 (`.h5`): binary container format for external processing of waveform data.

13.4.3.1 CSV files

A CSV file is a comma-separated values (CSV) text file, the waveform is stored in a table. The values are separated by commas.

You can convert the comma-separated text to columns. If you convert the data, take care of the correct number conversion, depending on the tool in use.

Content of waveform files

Header and data are written into one file. The first lines of the file contain header data, for example, time scale, vertical scale, vertical and horizontal positions. Header data is required to interpret the waveform data, and to analyze the data values of the data file.

Below the header, the waveform data follows. For each sample, one line is written. The first value is the X-value (time or frequency), the next is the Y-value in the unit indicated in the header data. For envelope or peak detect waveforms, two Y-values (minimum and maximum) are written for each sample.

	A	B	C	D	E	F
1	Model,MXO54					
2	SerialNumber,101416					
3	,					
4	SourceType,CHANNEL_TRACE					
5	SignalSource,Ch1Wfm1					
6	Resolution,2e-10					
7	RecordLength,1000					
8	HWRecordLength,1000					
9	HorizontalPosition,0					
10	TraceArithmetics,SINGLE					
11	BaseUnit,LEVEL_V					
12	BaseUnitRelative,OFF					
13	Impedance,50					
14	UserTermination,1M_OHM					
15	XStart,-1.0000000000000001e-07					
16	XStop,1.0000000000000001e-07					
17	TimebaseScale,2e-08					

37	TIME,C1
38	-1e-07,0.0031761544099682382
39	-9.98e-08,0.002565355484974346
40	-9.9599999999999999e-08,0.000977278279990227
41	-9.939999999999999e-08,0.0008551184949914487
42	-9.919999999999999e-08,0.00036647935499633513
43	-9.899999999999999e-08,-0.0010994380649890054
44	-9.879999999999998e-08,-0.0018323967749816759
45	-9.859999999999998e-08,-0.0020767163449792324
46	-9.839999999999998e-08,-0.002321035914976789
47	-9.819999999999998e-08,-0.001954556559980454
48	-9.799999999999998e-08,-0.0008551184949914487

Figure 13-11: CSV file of a time waveform, opened in Excel

	A	B	C	D	E
1	Model,MXO54				
2	SerialNumber,101416				
3	,				
4	SourceType,SPECTRUM				
5	SignalSource,SPECTRUM1_NORMAL				
6	BaseUnit,LEVEL_V				
7	BaseUnitRelative,OFF				
8	Impedance,50				
9	UserTermination,1M_OHM				
10	VerticalPosition,0				
11	VerticalScale,10				
12	VerticalOffset,-45				
13	BaseYStart,0				
14	BaseYStop,0				
15	ViewUnit,LEVEL_DBM				
16	ViewUnitRelative,OFF				
17	ViewReferenceLevel,0				
18	NumericFormat,DECIMAL				
19	CenterFreq,1000000000.0000001				
20	FreqSpan,2000000000				

33	FREQUENCY,SPECNORM1
34	-213623.27970552444,-49.02157013180808
35	549316.1734194754,-49.769556105402145
36	1312255.6265444753,-53.96493039074978
37	2075195.079669475,-61.57760265043916
38	2838134.532794475,-70.19729413316635
39	3601073.985919475,-73.24404760765583
40	4364013.439044475,-75.68197528968501
41	5126952.892169475,-91.81643862397064

Figure 13-12: CSV file of a spectrum waveform, opened in Excel

If you export multiple analog channels at once, one column per channel is written. For envelope or peak detect waveforms, two values per channel are written.

1	Model	MXO54C						
2	SerialNumber	100864						
3								
4	SourceType	CHANNEL_TRACE		CHANNEL_TRACE		CHANNEL_TRACE		CHANNEL_TRACE
5	SignalSource	Ch1Wfm1		Ch2Wfm1		Ch3Wfm1		Ch4Wfm1
6	Resolution	2.00E-10		2.00E-10		2.00E-10		2.00E-10
7	RecordLength	1000		1000		1000		1000
8	HWRecordLength	1000		1000		1000		1000
9	HorizontalPosition	0		0		0		0
10	TraceArithmetics	ENVELOPE		ENVELOPE		ENVELOPE		ENVELOPE
11	BaseUnit	LEVEL_V		LEVEL_V		LEVEL_V		LEVEL_V
12	BaseUnitRelative	OFF		OFF		OFF		OFF
13	Impedance	50		50		50		50
14	UserTermination	1M_OHM		1M_OHM		1M_OHM		1M_OHM
15	XStart	-1.00E-07		-1.00E-07		-1.00E-07		-1.00E-07
16	XStop	1.00E-07		1.00E-07		1.00E-07		1.00E-07

	TIME	C1 MAX	C1 MIN	C2 MAX	C2 MIN	C3 MAX	C3 MIN	C4 MAX	C4 MIN
37									
38	-1.00E-07	0.00586367	-0.006352309	0.002565355	-0.005130711	0.003786953	-0.005008551	0.003542634	-0.004275592
39	-9.98E-08	0.008551185	-0.003664794	0.002687515	-0.005252871	0.003542634	-0.004642072	0.003664794	-0.003909113
40	-9.96E-08	0.010750061	-0.000732959	0.003053995	-0.005008551	0.003176154	-0.00561935	0.003420474	-0.004275592
41	-9.94E-08	0.013804056	0.001588077	0.002931835	-0.005252871	0.003298314	-0.005375031	0.003786953	-0.004031273
42	-9.92E-08	0.016247251	0.004519912	0.003053995	-0.005130711	0.003053995	-0.005008551	0.003786953	-0.004764232
43	-9.90E-08	0.019179086	0.007451747	0.002565355	-0.005130711	0.003420474	-0.004764232	0.003909113	-0.004397752
44	-9.88E-08	0.021133643	0.010017102	0.002687515	-0.005130711	0.002931835	-0.004764232	0.004519912	-0.004397752
45	-9.86E-08	0.023576839	0.012582458	0.003420474	-0.004886391	0.003664794	-0.004397752	0.004275592	-0.004519912
46	-9.84E-08	0.025897874	0.015392133	0.003053995	-0.005130711	0.003664794	-0.004397752	0.004153433	-0.004031273

Figure 13-13: CSV file of four analog channels, envelope acquisition mode, opened in Excel and converted to columns

Header data

The header lines contain the following properties, depending on the type of the exported waveform (time or frequency):

Table 13-1: Header file properties in CSV files

Value	Description	Time	Frequency
Model	Model of the instrument	X	X
SerialNumber	Serial number of the instrument	X	X
SourceType	Type of the exported waveform	X	X
SignalSource	Source of the exported waveform	X	X
Resolution	Time between two samples *Resolution = 1 / Sample Rate*	X	
RecordLength	Number of samples in a waveform record of one acquisition	X	
HWRecordLength	Equivalent to the RecordLength	X	
HorizontalPosition	Horizontal position of the waveform in divisions	X	
TraceArithmetics	Arithmetic of the waveform: off, envelope, or average	X	
BaseUnit	Base unit of a mathematic waveform, for example, linear unit	X	X
BaseUnitRelative	Base unit, if a relative unit (e.g. dB) is enabled	X	X
Impedance	Input impedance, used for power calculation	X	X
UserTermination	User-defined load impedance connected to the probe	X	X
XStart	Horizontal start value of the waveform (time or frequency), as defined in the export settings	X	
XStop	Horizontal stop value of the waveform (time or frequency), as defined in the export settings	X	
TimebaseScale	Horizontal scale in seconds per division	X	
ReferencePoint	Position of the zero point in % of the screen	X	
VerticalPosition	Vertical position of the waveform in divisions	X	X
VerticalScale	Vertical scale of the waveform	X	X
VerticalOffset	Vertical offset of the waveform in Volts, or other unit	X	X
BaseYStart	Vertical start value of the waveform	X	X
BaseYStop	Vertical stop value of the waveform	X	X
ViewUnit	User-selected unit of a waveform, for example, logarithmic unit for a spectrum.	X	X
ViewUnitRelative	Indication of a relative unit. It is true if the ViewUnit implies a reference level, for example dB.	X	X
ViewReferenceLevel	Reference level for a relative unit. The value is only valid if the unit is relative (ViewUnitRelative = ON).	X	X
NumericFormat	Number format of bus values and digital channel data (bit pattern format)	X	X
EnhancementMode	Method to increase the sample rate if the required sample rate is higher than the ADC sample rate.	X	

Value	Description	Time	Frequency
InterpolationMode	Interpolation method. The value is relevant when the enhancement mode is interpolated time.	X	
CenterFreq	Center frequency of the spectrum		X
FreqSpan	Frequency span of the spectrum		X
ResolutionBW	Resolution bandwidth of the spectrum		X
FrequencyStart	Start frequency of the spectrum		X
FrequencyStop	Stop frequency of the spectrum		X
WindowType	Window used for the spectrum computation		X
GateRBWCoupling	Indication whether the record length or the resolution bandwidth is a constant for the spectrum computation		X
XAxisMode	Indicates a linear or logarithmic x-axis		X
HorizontalDivisionCount	Number of horizontal divisions	X	X
VerticalDivisionCount	Number of vertical divisions	X	X
FirmwareVersion	Firmware version that is installed on the MXO 5	X	X
DecimationMode	Method to reduce the number of data samples to achieve the required sample rate: Sample, peak detect, HiRes, RMS	X	

13.4.3.2 REF files

The REF format is a specific format, which allows you to reload the waveform data as a reference waveform. The data is saved in a zipped file that contains two files per waveform. One file is a binary file (BIN file) and contains the waveform data values. The second file is an XML file and contains the header data in several data groups. Header data is required to reload the waveform from data, or to analyze the data values of the data file.

```
<?xml version="1.0" encoding="UTF-8"?>
<Group Name="SignalExportBase">
  <Group Name="SignalAttributes">
    <Prop Name="SourceType" Value="CHANNEL_TRACE" UserValue="NONE" />
    <Prop Name="SignalSource" Value="Ch1Wfm1" />
    <Prop Name="Resolution" Value="2.0000000000000001e-10" />
    <Prop Name="RecordLength" Value="1000" />
    <Prop Name="HWRecordLength" Value="1000" />
    <Prop Name="HorizontalPosition" Value="0" />
    <Prop Name="TraceArithmetics" Value="SINGLE" UserValue="SINGLE" />
    <Prop Name="BaseUnit" Value="LEVEL_V" UserValue="LEVEL_V" />
    <Prop Name="BaseUnitRelative" Value="OFF" UserValue="OFF" />
                    ⋮
    <Group Name="PostProcessingBufferSampleCounts">
      <Prop Name="DeltaPreSamples" Value="25" />
      <Prop Name="PreSamples" Value="500" />
      <Prop Name="PostSamples" Value="500" />
      <Prop Name="DeltaPostSamples" Value="29" />
    </Group>
  </Group>
</Group>
```

Figure 13-14: Header file in XML format, part of the REF file container

Table 13-2: Header file properties in REF files

Value	Description
SignalAttributes Same values as in CSV files, except for Model and SerialNumber. See Table 13-1.	
SignalAttributesPostProcessing	
SignalFormat	Format of the data values in the BIN file: INT8BIT, INT16BIT, INT32BIT, FLOAT, DOUBLE
Origin	WFM_EXPORT: export of one acquisition or export of multiple acquisitions
ByteOrder	Byte order of the values in the BIN file ● LSB first: little endian, least significant byte first ● MSB first: big endian, most significant byte first
NumberOfWaveforms	Number of waveforms. always = 1
TimestampState	OFF
Timestamp	Absolute time of the waveform recording in ISO 8601 format
DecimationMode	Method to reduce the number of data samples to achieve the required sample rate
IsMinMax	If ON, then min and max values are saved for each sample. For envelope and peak detect waveforms.
IsComplex	If ON, then two values are saved for each sample (I and Q value).
TriggerOffsetToPostSampleInSeconds	Offset between the exact trigger position and the first sample after the trigger
SignalRecordLength	Number of samples in the BIN file. If the signal is a spectrum, the value indicates the number of FFT bins. The value can differ from RecordLength and HWRecordLength because the data file has additional samples before and after the record to consider interpolation and other waveform parameters and their dependencies.

Value	Description
SignalXStart	Time of the first sample in the acquired data. Different from XStart because the data file has additional samples before and after the record, and if only part of the data is exported.
SignalXStop	Time of the last sample in the data acquired. Different from XStop because the data file has additional samples before and after the record, and if only part of the data is exported.
AdjustedResolutionBW	Actual resolution bandwidth of a spectrum waveform. Only valid if the exported waveform is a spectrum.
NoiseBandwidth	Noise bandwidth of a spectrum waveform, required for power calculation. Only valid if the exported waveform is a spectrum.
ValuesPerSample	Number of y-values saved at each sampling time. The value is usually 1. The value is 2, if min and max values are saved for each sample, for example, for envelope waveforms.
NofQuantisationLevels	Number of quantization levels of y values
TOADone	If ON, then TriggerOffsetToPostSampleInSeconds is compensated.
SignalResolution	Time between two samples in this waveform. The value can differ from Resolution if the source is, for example, a spectrum. The value is determined automatically considering the waveform parameters and their dependencies. If the signal is a spectrum, the value indicates the frequency range of FFT bins.
HorizontalDomain	Domain of the x-axis (time or frequency)
PostProcessingVerticalAxisAttributes	
Range	Range of the signal in y-direction
Offset	Center of the y-range
Resolution	Resolution of the y-axis
IsLogarithmic	Indicates if the y-axis is logarithmic (ON or OFF)
PostProcessingSampleFormatAttributes	
ValueStorage	Interpretation of the data: is integer or float (floating point data)
ValueInterpretation	Indicates if the data is saved as binary ADC values (BINARY), or physical values (PHYSICAL)
SampleBitSize	Value size in bit, as used in processing
ValueBitSize	Value size of ADC data in bit
LsbExtensionBits	Number of bits the ADC value is shifted to the left in the CPU sample size
AdcValueBitSize	Number of bits of the ADC that was used to sample the signal. It does not include any additionally gained bits due to high definition mode.
IsSigned	Signed values (ON) or unsigned values (OFF)

Value	Description
PostProcessingBufferSampleCounts	
[DeltaPreSamples | PreSamples || PostSamples | DeltaPostSamples]	Indicates the distribution of the samples. || marks the trigger time. The sum of PreSamples and PostSamples matches the requested record length. DeltaSamples are additional samples that are needed for computation but they are not measured or displayed.

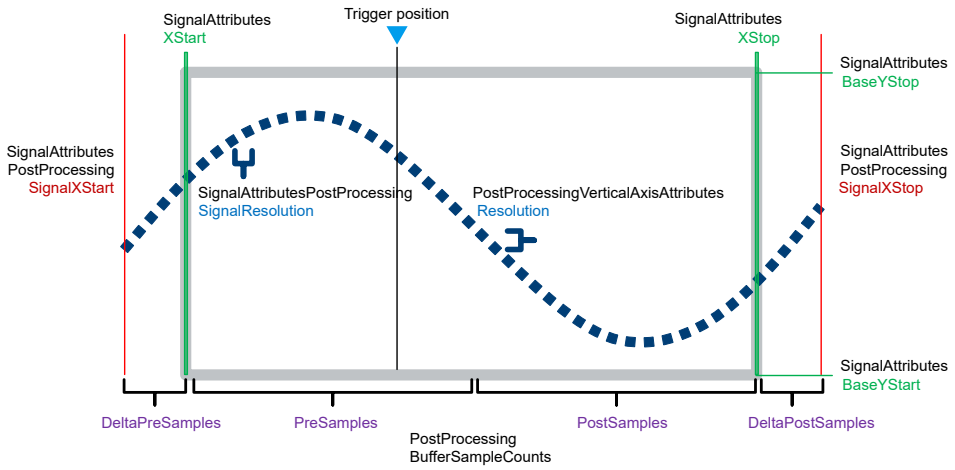

Figure 13-15: Main header properties at the waveform

Note: FractionalBits was removed in FW version 1.3.x. Reference waveforms created with older FW versions are compatible and can be reloaded.

13.4.3.3 HDF5 files

An HDF5 (`.h5`) file is a container format that contains attributes and waveform data. The format can be read by different programming languages with existing libraries. HDF5 stores binary data, thus the file size is smaller than CSV files.

Use the HDF5 format to export data from the MXO 5 and analyze the waveforms with external software.

You can save one or more waveforms in one HDF5 file.

The HDF5 file consists of several groups in a hierarchical structure. The data samples are float32 values of the physical values. No conversion is needed. For envelope and peak detect waveforms, two Y-values are written for each sample ("min" and "max").

Table 13-3: Contents and structure of the HDF5 file

Group	Subgroup	Attribute, example values, data	Description
/FileType			Type of the HDF5 file.
		Rohde&Schwarz: "MXO"	Instrument family.
		Version: "1.0"	Version of the HDF5 format.

Group	Subgroup	Attribute, example values, data	Description
/Frame			Export information.
		DateTime: "<ISO time stamp>"	Date and time of the file export.
		FirmwareVersion: "2.5.0.60"	Version of the instrument firmware.
		Model: "MXO44"	Instrument model.
		SerialNumber: "100000"	Serial number of the exporting instrument.
/Waveforms			Attributes and data.
	/Waveforms/C1		One subgroup for each waveform.
		Count: 1	Number of acquisitions, always = 1.
		NumPoints: 1000	Number of exported samples (record length of the exported waveform).
		XInc: 2e-10	Resolution, the time between two samples.
		XOrg: -1.0e-7	Horizontal start value of the waveform, time of the first sample.
		XUnit: "Time"	Unit of the horizontal axis (Time, Frequency).
		YUnit: "V"	Unit of the vertical axis.
		/Waveforms/C1/C1 Additional Info	Subgroup with further information. See "Additional info (/Waveforms/C1/C1 Additional Info)" on page 489.
		DataSet(/Waveforms/C1/C1 Data)	Data values.
		DateTime: "<ISO time stamp>"	Date and time of the trigger of this acquisition.
		TriggerOffsetToPostSampleInSeconds: 1.1e-12	Offset between the trigger time and the first sample after the trigger, in seconds.
		DataSet(/Waveforms/C1/C1 PreData)	Additional samples before the samples in DataSet, are used to settle the filters.
		DataSet(/Waveforms/C1/C1 PostData)	Additional samples after the samples in DataSet, are used to settle the filters.
	/Waveforms/C2	Analogous to /Waveforms/C1	
	/Waveforms/C3	Analogous to /Waveforms/C1	

Additional info (/Waveforms/C1/C1 Additional Info)

The `/Waveforms/C1/C1 Additional Info` group provides additional information on the waveform, which is not essential to interpret the waveform data. Most of this information is also available in the header of CSV or REF files.

Field	Description	Identical to CSV	Identical to REF
DecimationMode	Method to reduce the number of data samples to achieve the required sample rate.	X	
EnhancementMode	Method to increase the sample rate if the required sample rate is higher than the ADC sample rate.	X	
HorizontalPosition	Horizontal position of the waveform in divisions.	X	
Impedance	Input impedance, used for power calculation.	X	
InterpolationMode	Interpolation method. The value is relevant when the enhancement mode is interpolated time.	X	
Label	Channel label, currently empty.		
NofQuantisationLevels	Number of quantization levels of y values.		X
ReferencePoint	Position of the zero point in % of the screen.	X	
SignalSource	Source of the exported waveform.	X	
SourceType	Type of the exported waveform.		X
TOADone	If ON, then TriggerOffsetToPostSampleInSeconds is compensated.	X	
TimebaseScale	Horizontal scale in seconds per division.	X	
TraceArithmetics	Arithmetic of the waveform: off, envelope, or average.	X	
UserTermination	User-defined load impedance connected to the probe.	X	
VerticalOffset	Vertical offset of the waveform in Volts, or other unit.	X	
VerticalPosition	Vertical position of the waveform in divisions.	X	
VerticalScale	Vertical scale of the waveform.	X	
XDispOrigin	X value on the left border of the screen.		
XDispRange	X value range that is shown on the screen.		
YDispOrigin	Y value of the bottom border of the screen.		
YDispRange	Y value range that is shown on the screen.		
YInc	Value of the quantization level of the Y values.		

13.5 Histogram data export

You can export the data of waveform histograms and histograms on measurement results to file.

13.5.1 Files with waveform histograms

The data of one histogram is saved to one CSV file. The file content starts with header data followed by normalized or absolute histogram values.

The header has the following information:

- Name of the histogram
- Source waveform of the histogram
- Histogram mode: vertical or horizontal
- Normalization on or off
  - On: Data values are float values that represent the ratio of samples in a given bin to the sum of all samples. The sum of all normalized values is 1.
  - Off: Data values are integer values that represent the number of samples in a given bin.
- Histogram range: start and end values.
  - Vertical histograms: the values are given in the unit of the vertical axis
  - Horizontal histograms: the unit is s.

Example of file content

Table 13-4: Content of histogram CSV file

Normalization on	Normalization off	Number of the data row for value calculation
HistogramName,Hist1	HistogramName,Hist1	
HistogramSource,Ch1Wfm1	HistogramSource,Ch1Wfm1	
HistogramType,VERTICAL	HistogramType,VERTICAL	
Normalization,OFF	Normalization,ON	
HistogramStart,-0.25024431956999754	HistogramStart,-0.25024431956999754	
HistogramEnd,0.25012215978499874	HistogramEnd,0.25012215978499874	
,	,	
,	,	
,	,	
DATA	DATA	
0	0	1
0	0	2
100	0.1	3
800	0.8	4
100	0.1	5
0	0	6
0	0	7
0	0	8

13.5.2 Files with histograms on measurement results

The data of one histogram is saved to one CSV file. The file content starts with header data followed by normalized or absolute histogram values.

The header has the following information:

- Index of the measurement
- Measurement type
- Measurement source
- Normalization on or off
  - On: Data values are float values that represent the ratio of samples in a given bin to the sum of all samples. The sum of all normalized values is 1.
  - Off: Data values are integer values that represent the number of samples in a given bin.
- Histogram range: start and end values in the measurement unit

Example of file content

Table 13-5: Content of histogram CSV file

Normalization on	Normalization off	Number of the data row for value calculation
MeasurementIndex,1	MeasurementIndex,1	
MeasurementType,AMPLITUDE	MeasurementType,AMPLITUDE	
MeasurementSource,C1	MeasurementSource,C1	
Normalization,OFF	Normalization,ON	
HistogramStart,-0.25024431956999754	HistogramStart,-0.25024431956999754	
HistogramEnd,0.25012215978499874	HistogramEnd,0.25012215978499874	
,	,	
,	,	
,	,	
DATA	DATA	
0	0	1
3	0.003	2
100	0.1	3
700	0.7	4
...	...	5...

The bins that correspond to the clipping values are excluded in the histogram export. The limits of the histogram correspond to XRangeStart and XRangeEnd.

13.5.3 Data conversion

Using the header data, you can calculate the waveform value to which a histogram value belongs. The calculation is valid for vertical and horizontal histograms.

A histogram bin covers a domain of this width:

BinWidth = (HistogramStart - HistogramEnd) / NumberOfHistogramBins

BinIndex is the index of the histogram bin of interest, starting with 1. It is the number of the DATA row in the CSV file.

The center value corresponding to a histogram bin is:

*Value = (HistogramStart - HistogramEnd) * (BinIndex - 0.5) / NumberOfHistogramBins + HistogramStart*

The domain covered by the histogram bin is: *Value +/- 0.5 * BinWidth*.

For the example in Table 13-4, the voltage value that corresponds to the histogram value 800 or 0.8 (histogram bin number 4) is:

*(0.25 - (-0.25)) * (4 - 0.5) / 8 - 0.25 = -0.03125 V*

The bin width in this example is *(0.25 - (-0.25)) / 8 = 0.0625 V*.

The 4th bin with value 800 covers a voltage domain of

*-0.03125 + 0.5 * 0.0625 = 0 V* to *-0.03125 - 0.5 * 0.0625 = -0.0625 V*

13.5.4 Settings for histogram export

Access: "Menu" > "Save/recall" > "Save" tab > "Histogram".

The settings in the dialog are identical for all histogram types.

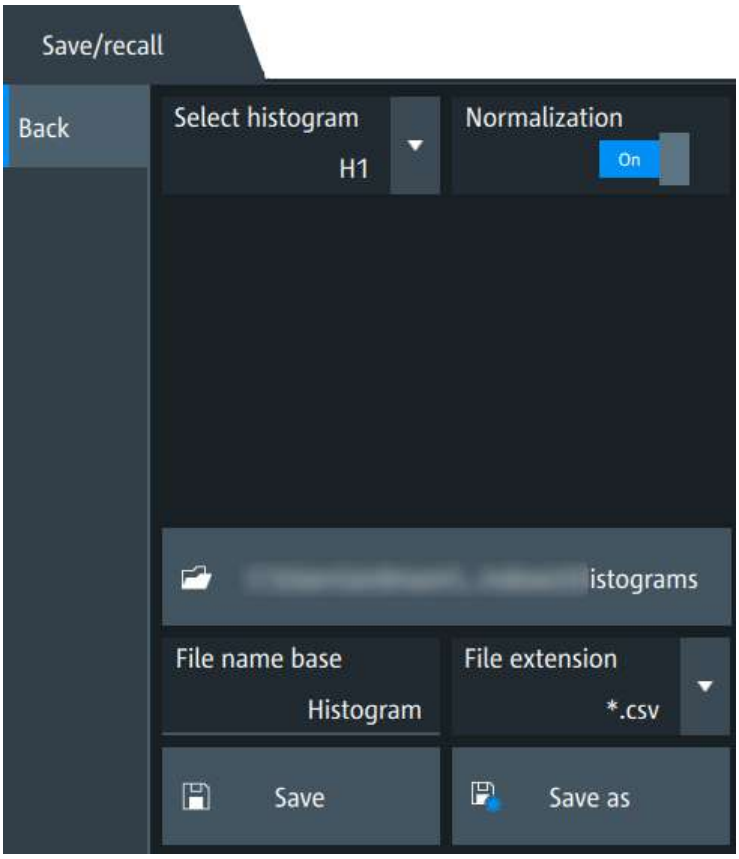

Select histogram
Select the histogram that you want to save. All active waveform histograms and histograms on measurement results are listed.

Normalization
If normalization is off, the number of samples in a given bin is exported as integer values. With normalization, the ratio of samples in a given bin to the sum of all samples is exported as float value. The sum of all normalized values is 1.

Remote command:
`EXPort:HISTogram<m>:NORMalize` on page 1245
`EXPort:HMEasurement<m>:NORMalize` on page 1245

Save settings
Define the filename and storage location, and start the saving process.

"<Folder>"	Opens a file explorer where you can select the directory where the file is saved.
"File name base"	Sets a name for the file, without extension. The name is extended with a time stamp when the file is saved. Thus, multiple "Save" actions are possible without changing the filename.
"File extension"	The format of the histogram file is always `.csv`.
"Save"	Saves the file in the defined folder using the "File name base". If the specified file already exists, it is overwritten with the new data.
"Save As"	Opens a file explorer where you select the folder, the file type, enter the filename and save the file.

A progress bar informs you about the process.

Remote command:
`EXPort:HISTogram<m>:NAME` on page 1245
`EXPort:HISTogram<m>:SAVE` on page 1246
`EXPort:HMEasurement<m>:NAME` on page 1245
`EXPort:HMEasurement<m>:SAVE` on page 1246

13.6 Results

You can save measurement results manually to a file, and automatically on trigger event or mask violation.

13.6.1 Save results: settings

Access: "Menu" > "Save/recall" > "Save" tab > "Results".

In this dialog, you define the storage settings for measurement results.

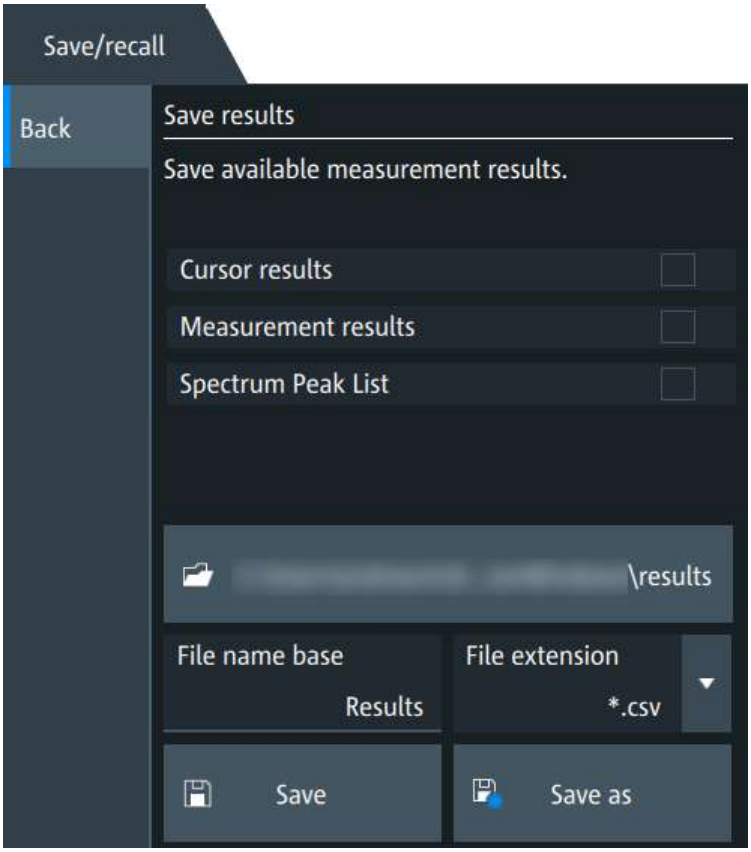

Save results name
Select the result tables to be saved: "Cursor results", "Measurement results", "Spectrum peak list". Only active result tables can be selected.

Remote command:
`EXPort:RESult:SELect:CURSor` on page 1249
`EXPort:RESult:SELect:MEASurement` on page 1249
`EXPort:RESult:SELect:PLISt` on page 1250

Save settings
You define the details of the filename, extension and directory, and save the file.

A progress bar informs you about the process.

<Folder> ← Save settings
Opens a file explorer where you can select the directory where the file is saved.

The setting is used for automatic saving actions, for example, saving on trigger or mask violation. It has **no** effect on `EXPort:RESult:SAVE`.

Remote command:
`EXPort:RESult:AUTonaming:PATH` on page 1248

File name base ← Save settings
Sets a name for the file, without extension. The name is extended with a time stamp when the file is saved. Thus, multiple "Save" actions are possible without changing the filename.

The setting is used for automatic saving actions, for example, saving on trigger or mask violation. It has **no** effect on `EXPort:RESult:SAVE`.

Remote command:
`EXPort:RESult:AUTonaming:NAME` on page 1248

File extension ← Save settings
Selects the format of the exported file. Result files have always the CSV format.

The setting is used for automatic saving actions, for example, saving on trigger or mask violation. It has **no** effect on `EXPort:RESult:SAVE`.

Remote command:
`EXPort:RESult:AUTonaming:TYPE` on page 1249

Save ← Save settings
Saves the file in the defined folder using the "File name base". If the specified file already exists, it is overwritten with the new data.

Save As ← Save settings
Opens a file explorer where you select the folder, the file type, enter the filename and save the file.

Remote command:
`EXPort:RESult:NAME` on page 1249
`EXPort:RESult:SAVE` on page 1249

13.6.2 Saving results

1. Open "Menu" > "Save/recall".
2. In the "Save" tab, press the "Results" button.
   The "Results" dialog opens.
3. Select the results to be saved. The "Save results" results list shows all result tables that are currently open.
4. Select the target folder. Enter a "File name base" and select "Save".
   Alternatively, select "Save As" and define the target directory and filename in the file selection dialog.

   All selected results are written into one file.

13.7 Sessions

Sessions store the general and measurement settings and the data of active channel waveforms and reference waveforms together in a ZIP file. The user-specific display settings for the toolbar, waveform colors and diagrams can also be included.

13.7.1 Save a session

Access: "Menu" > "Save/recall" > "Save" tab > "Session"

The session file includes active channel and reference waveforms and the current measurement setup. Before saving the session, consider where you want to use the session data.

- In R&S ScopeStudio, included waveforms and settings can be recalled. If both analog and digital channels are active, only digital channels are saved in the session file and can be loaded. Sessions with only digital waveforms can be saved and loaded.
- When recalling on an MXO oscilloscope, channel waveforms are not imported. Therefore, if you want to recall the session on an instrument, save channel waveforms as references and change the sources of analysis functions to these references before saving the session.

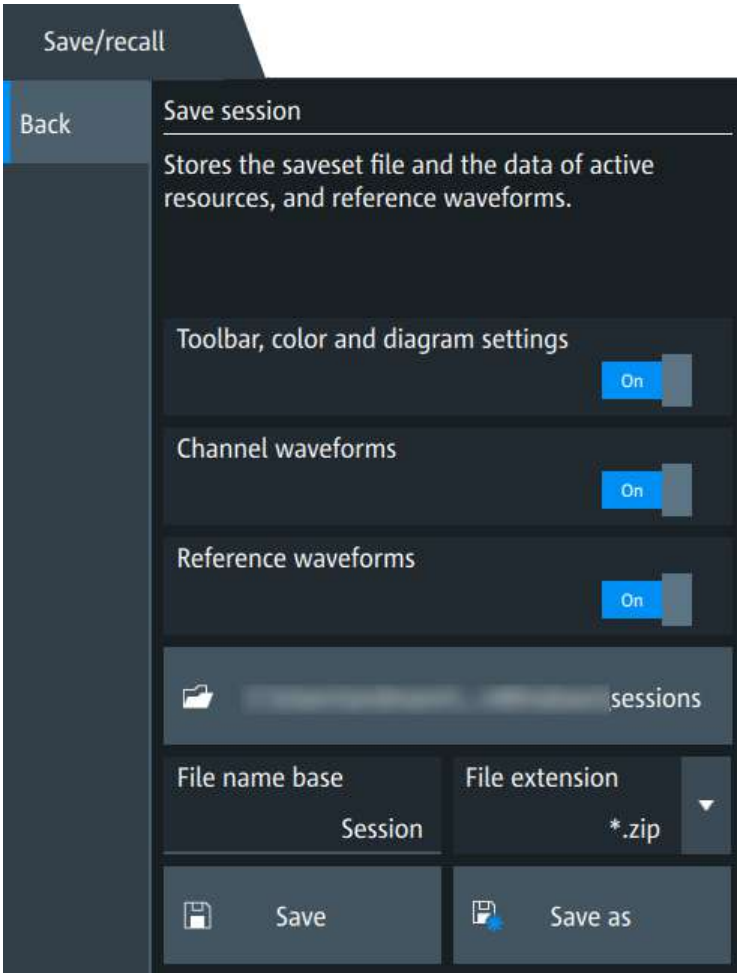

Figure 13-16: Save session dialog

Toolbar, color and diagram settings
If selected, the user-specific display settings for the toolbar, waveform colors and diagram settings are included in the session file.

Remote command:
`SESSion:USERpref` on page 1248

Channel waveforms
Select if you want to include channel waveform data in the session file.

Remote command:
`SESSion:SAVE:CHANnel` on page 1247

Reference waveforms
Select if you want to include reference waveform data in the session file.

Remote command:
`SESSion:SAVE:REFerence` on page 1247

Save settings
Defines the filename and storage location.

"<Folder>"	Opens a file explorer where you can select the directory where the file is saved.
"File name base"	Sets a name for the file, without extension. The name is extended with a time stamp when the file is saved. Thus, multiple "Save" actions are possible without changing the filename.
"File extension"	The format of the session file is always `.zip`.
"Save"	Saves the file in the defined folder using the "File name base". If the specified file already exists, it is overwritten with the new data.
"Save As"	Opens a file explorer where you select the folder, the file type, enter the filename and save the file.

A progress bar informs you about the process.

Remote command:
`SESSion:SAVE[:EXECute]` on page 1247
`SESSion:SAVE:ABORt` on page 1247

13.7.2 Load a session

Access: "Menu" > "Save/recall" > "Recall" tab > "Session"

When you recall a session, the settings and the reference waveforms (if included in the session file) are restored. You can also restore some user-specific display settings: toolbar, waveform colors, and diagram settings. Channel waveforms are not imported even if they are included in the session file. Therefore, save channel waveforms as references and change the sources of analysis functions to these references before saving the session.

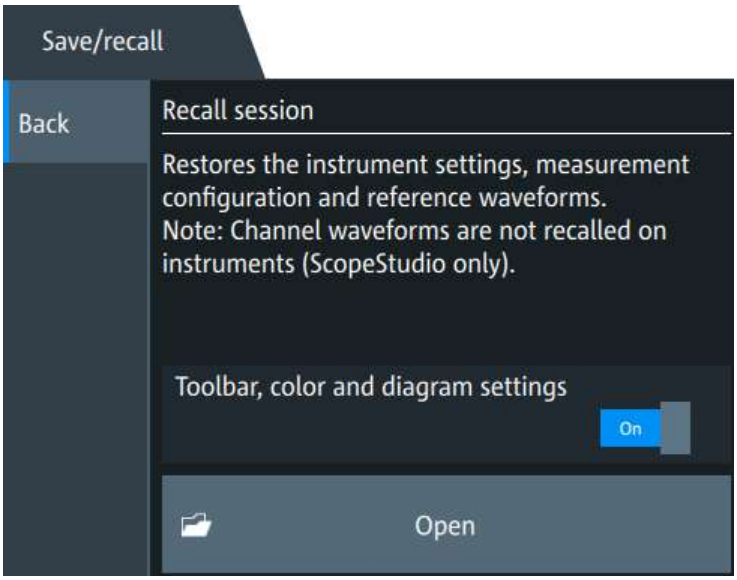

Figure 13-17: Recall session dialog

Toolbar, color and diagram settings
If selected, the user-specific display settings for the toolbar, waveform colors and diagram settings are included in the session file.

Remote command:
`SESSion:USERpref` on page 1248

Open
Opens the file browser dialog. Select the required session file and tap "Open".

Remote command:
`SESSion:LOAD[:EXECute]` on page 1246

13.8 Screenshots

To store the graphical results of the measurement, you can save a screenshot of the graphic area. To document current settings, the open dialog box can be included in the screenshot.

If you often save screenshots, try the following shortcuts:

- The "Screenshot" toolbar icon saves the current display to a file according to the settings in "Menu" > "Save/recall" > "Save" tab > "Screenshot".
- You can configure the [Camera] key to save screenshots by a single keypress. See also "Camera hardkey action" on page 111.

If a USB flash drive is connected, the default path of the user data directory is set to the USB flash drive. Thus, you save data to USB flash drive automatically, and you can change the directory in the file explorer at any time.

Screenshots on a computer using the Web interface

If the MXO 5 is connected to a LAN, you can create and save screenshots of the instrument's display on a computer. See Section 17.3.2.3, "Web control", on page 1031.

Meta information in screenshots

The metadata of the screenshot also contains instrument information. In PNG and JPEG files, meta information is saved as EXIF information and can be read, for example, using the ExifTool.

Example:

Reading meta information using the ExifTool.

Command: `# exif C:\Screenshot_2020-07-14_0_110551.png`

Result:

```
ExifTool Version Number         : 10.20
File Name                       : Screenshot_2016-07-14_0_110551.png
Directory                       : C:/
File Size                       : 37 kB
File Modification Date/Time     : 2020:07:14 11:05:51+02:00
File Access Date/Time           : 2020:07:14 11:05:51+02:00
File Creation Date/Time         : 2020:07:14 11:05:51+02:00
...
Instrument Firmware Version     : 3.30.0.46
Instrument Material Number      : 1329.7002k44
Instrument Serial Number        : 123456
Image Size                      : 1280x800
Megapixels                      : 1.0
```

13.8.1 Screenshot settings

Access: "Menu" > "Save/recall" > "Save" tab > "Screenshot"

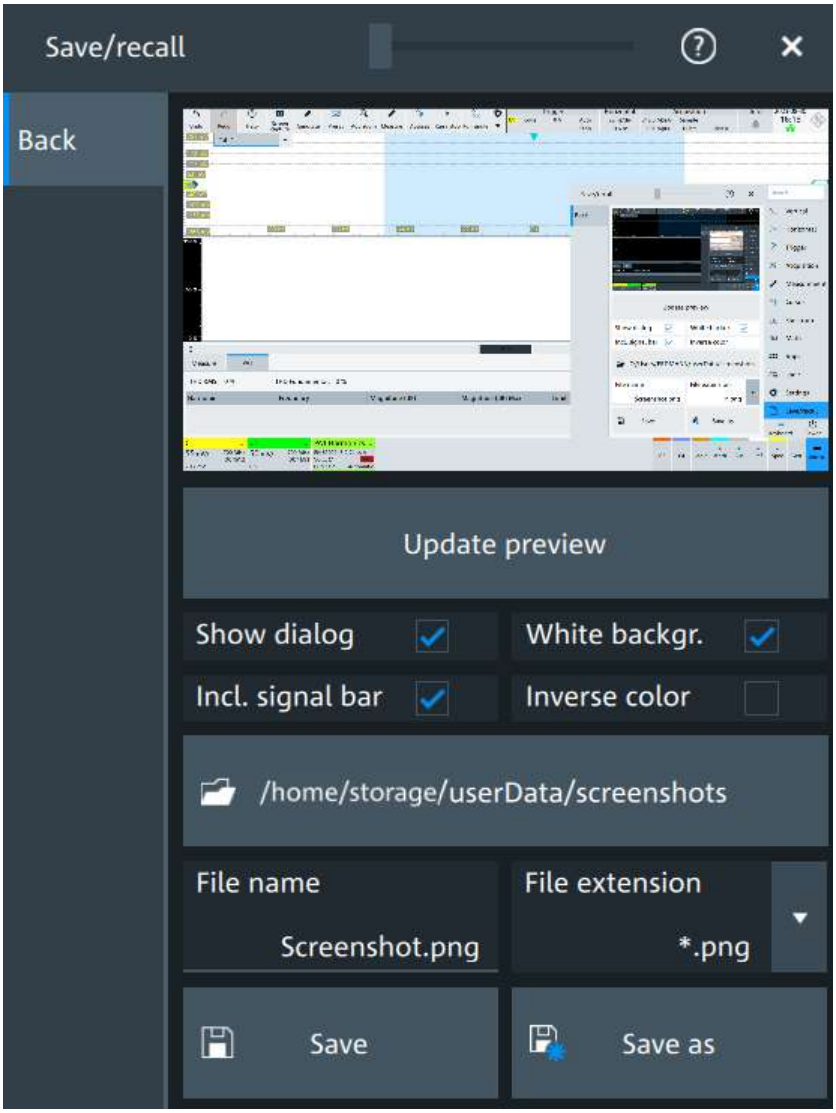

In the "Screenshot" dialog box, you configure the image to be saved or included in a report. You select the storage location for screenshot files. The image is created when you open the dialog box, and can be updated at any time.

You can also edit the colors of the image before saving it, and include an open dialog box or the sidebar in the image.

Preview 503
Update 503
Show setup dialog 503
White background 503
Include signal bar 503
Inverse color 503
Save settings 503
└ <Folder> 504
└ File name base 504

└ File extension....504
└ Save....504
└ Save As....504

Preview
Shows a preview of the screenshot. The image is created when the dialog box opens.

Update
Updates the preview of the screenshot with the current display view, e.g. after changes to the settings have been made, or an additional channel has been activated.

Show setup dialog
If enabled, the currently open dialog box is included in the screenshot.

Remote command:
`HCOPy:SSD` on page 1253

White background
Inverts the background color, so you can picture waveforms with normal waveform colors on white background.

If both "White background" and "Inverse color" are enabled, the background is inverted twice, and it appears black.

"White background"	"Inverse color"	Background	Waveform and results
On	Off	White	Screen colors
Off	On	White	Inverted colors
On	On	Black	Inverted colors
Off	Off	Black	Screen colors

Remote command:
`HCOPy:WBKG` on page 1253

Include signal bar
If enabled, the screenshot shows the signal bar below the diagram area.

Remote command:
`HCOPy:ISBA` on page 1252

Inverse color
Inverts the colors of the output, i.e. a dark waveform is shown on a white background.

Remote command:
`HCOPy:DEVice<m>:INVerse` on page 1251

Save settings
You define the details of the filename, extension and directory, and save the screenshot.

A progress bar informs you about the process.

<Folder> ← Save settings
Opens a file explorer where you can select the directory where the file is saved.

The setting is used for automatic saving actions, for example, saving on trigger or mask violation.

Remote command:
`HCOPy:DESTination<m>` on page 1250

File name base ← Save settings
Sets a name for the file, without extension. The name is extended with a time stamp when the file is saved. Thus, multiple "Save" actions are possible without changing the filename.

The setting is used for automatic saving actions, for example, saving on trigger or mask violation.

Remote command:
`MMEMory:NAME` on page 1251

File extension ← Save settings
Selects the format of the exported file.

You can save the screenshot as `*.jpg` or `*.png` file.

The setting is used for automatic saving actions, for example, saving on trigger or mask violation.

Remote command:
`HCOPy:DEVice<m>:LANGuage` on page 1251

Save ← Save settings
Saves the file in the defined folder using the "File name base". If the specified file already exists, it is overwritten with the new data.

Remote command:
`HCOPy:IMMediate<m>:NEXT` on page 1252
`HCOPy:IMMediate<m>` on page 1252

Save As ← Save settings
Opens a file explorer where you select the folder, the file type, enter the filename and save the file.

13.8.2 Configuring and saving screenshots

You can select which elements are shown in the screenshot, invert the colors and the background color. A preview of the current image is shown for reference.

1. Open the "Menu" > "Save/recall" > "Save" tab > "Screenshot".
2. To enhance the images for later print on white paper, enable "White background" or "Inverse color". If you print this image later on a monochrome printer, you get a grayscaled picture. The contrast of the gray lines depends on waveform colors and the printer used.

3. To change the directory, tap "<Folder>", and configure the path.

   The symbols of often used target folders are listed on the left of the file explorer. By default, screenshots are saved in the `/home/storage/userData/ScreenShots` directory.

4. Select the "File extension".

5. Tap "Save".

   The file is saved with an automatic name in the specified folder.

6. To save further screenshots, use one of the following ways:

   - Configure the [Camera] key. Press the key to save a screenshot.
     See also Camera hardkey action.
   - Add the "Screenshot" icon to the toolbar. Tap the icon to save an image.
     See Section 4.4.2, "Configuring the toolbar", on page 67.
   - Tap "Save" in the "Screenshot" dialog. The filename contains a number, which is automatically counted up.
   - To save the image with a dedicated filename or to another directory, tap "Save As" in the "Screenshot" dialog.
     Select the path, enter a filename, and tap "Save".

13.8.3 Image viewer

You can look at the saved screenshots directly, without transferring them to a computer or using a dedicated software.

1. Add the "Image viewer" icon to the toolbar.

2. To view the saved screenshots, select the icon.

   You can scroll the images, browse in other folders, and use the "Auto play" function for viewing.

13.9 File browser dialog

The file browser dialog provides a file explorer from which you can select a file to load or to save data to. You can also manage your files in this dialog.

Access: "Menu" > "Apps" > "File browser".

Path
Navigate the path elements to change the current folder. The default folder is defined in Section 5.8.1, "Autonaming", on page 120.

You can save the data in a local folder, to an external storage device (usually a USB flash drive), or to a folder on a connected network drive. The path list provides all available drives and folders.

On the left, shortcut icons provide access to often used folders.

Toolbar
The toolbar on the top provides various functions for file management.

"Filter"	Displays only the files and folders that match the current search term.
"Delete"	Deletes the selected file or folder.
"New folder"	Creates new folder in the current directory.
"Rename"	Renames the selected file.
"Find"	Searches for files within the current folder.
"Copy"	Copies the selected file.
"Paste"	Pastes the file.

File name
The file name to be loaded or stored to. Tap the file name, or tap the keyboard icon to enter the file name using the online keyboard.

The default file name for new files is defined in the "Autonaming" tab, see Section 5.8.1, "Autonaming", on page 120.

File type
The file extension of the file to be loaded or stored to.

Save, Select
Selects the specified file for the open or save operation and closes the dialog box.

Cancel
Closes the dialog box without selecting a file.

14 Protocol analysis

Using the serial protocol options for the MXO 5, you can analyze various serial protocols.

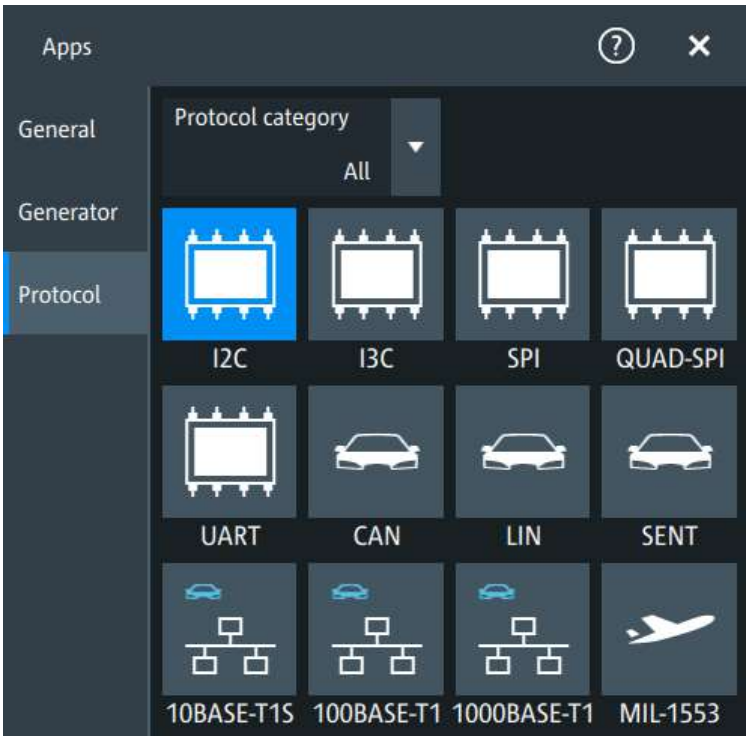

- Basics of protocol analysis....508
- SPI bus (IC electronics, option R&S MXO5-K510).... 533
- QUAD-SPI bus (IC electronics, option R&S MXO5-K510)....552
- OCTO-SPI bus (IC electronics, option R&S MXO5-K510)....568
- I²C (IC electronics, option R&S MXO5-K510).... 584
- I3C (IC electronics, option R&S MXO5-K550).... 609
- D-PHY (option R&S MXO5-K580)....629
- UART (IC electronics, option R&S MXO5-K510).... 650
- NRZ clocked & unclocked (option R&S MXO5-K510)....671
- Manchester (option R&S MXO5-K510)....693
- 8b/10b (option R&S MXO5-K510)....714
- CAN (automotive electronics, option R&S MXO5-K520).... 732
- LIN (automotive electronics, option R&S MXO5-K520).... 762
- SENT (automotive electronics, option R&S MXO5-K520).... 782
- ARINC 429 (aerospace electronics, option R&S MXO5-K530)....805
- SpaceWire (aerospace communications, option R&S MXO5-K530).... 822
- MIL-1553 (aerospace electronics, option R&S MXO5-K530)....839
- SPMI (mobile electronics, option R&S MXO5-K550).... 852
- RFFE (mobile electronics, option R&S MXO5-K550)....870
- 10BASE-T1S (automotive Ethernet, option R&S MXO5-K560).... 890
- 100BASE-T1 (automotive Ethernet, option R&S MXO5-K560)....909

- 1000BASE-T1 (automotive Ethernet, option R&S MXO5-K560)..... 926
- USB 1.1 (option R&S MXO5-K570)..... 945
- USB 2.0 (option R&S MXO5-K570)..... 968

14.1 Basics of protocol analysis

With the MXO 5 oscilloscope, you can decode selected protocols.

With dual-path protocol analysis, you can set the instrument sample rate for the waveform path and the oscilloscope automatically uses another internal decoupled sample rate for the decoding path. Even with very slow sample rates, the protocol data is correctly decoded.

With the MXO 5, you can use deep memory to capture more packets. The oscilloscope can capture long time periods where the cause and result are distanced in time. Over the entire capture, signal detail is time-correlated with packet content for fast debug.

Before you can analyze a serial signal, the bus has to be configured according to the protocol and specifics of the signal. The configuration contains:

- Assignment of the data and clock lines to the input channels
- Logical thresholds
- Protocol-specific settings

Serial data can be analyzed in several ways:

- Triggering: You can trigger on various events that are typical for the selected protocol type, for example, on start and stop of messages, or on specified data patterns in the message.
  Triggering on a trigger event sequence is not supported, and holdoff settings are not available.
- Protocol decoding: The digitized signal data is displayed on the screen together with the decoded content of the messages in readable form, and the decode results are listed in a table.

14.1.1 Setup - general settings

For all protocols, configuration starts with the selection of the serial bus and the protocol.

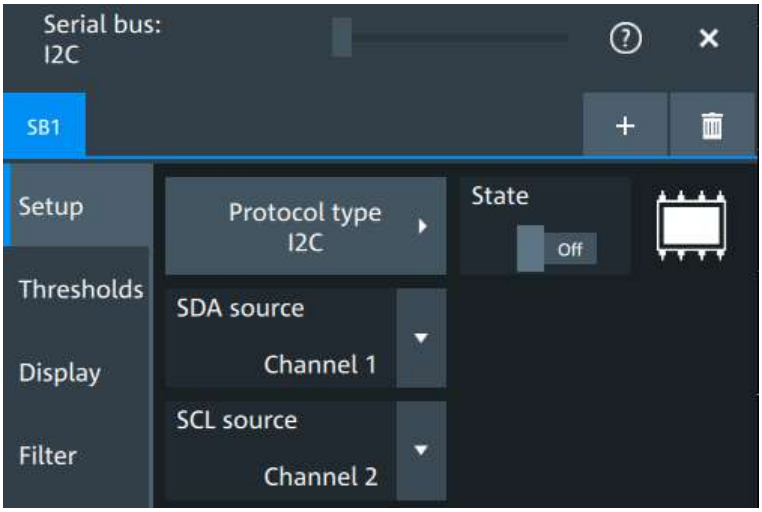

Configuration settings are protocol-specific. They are described in the related sections.

Make sure that the tab of the correct serial bus is selected.

SB1 /SB2 /SB3 /SB4
Select the correct bus tab before you enter the settings.

Add serial bus, Delete serial bus
Use the icons on the upper right to add a new bus, or to delete the selected serial bus.

Remote command:
`SBUS<sb>:RMSBus` on page 1492 (delete)

Protocol type
Selects the protocol type to be decoded.

Remote command:
`SBUS<sb>:TYPE` on page 1489

State
Enables the decoding of the selected bus. The signal icon of the bus appears on the signal bar.

Remote command:
`SBUS<sb>[:STATe]` on page 1489

14.1.2 Thresholds

In the "Thresholds" tab, you can set values for the threshold and hysteresis of the signal.

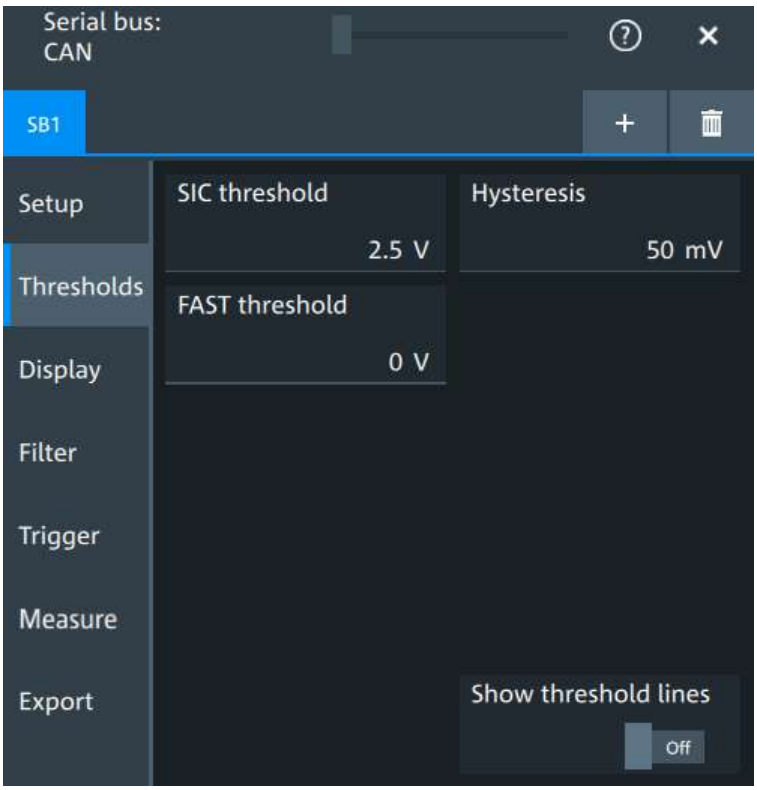

Show threshold lines
Enables the display of the threshold lines in the diagram.

The label of the threshold line is set according to the signal that it is referring to. It is displayed in the color of the signal channel.

Example:

When you enable "Show threshold lines", the threshold lines are shown on the display, and also the hysteresis ranges are shown for a few seconds. Afterwards only the threshold lines are visible. When you click the diagram near or on a threshold line, its hysteresis is shown again briefly.

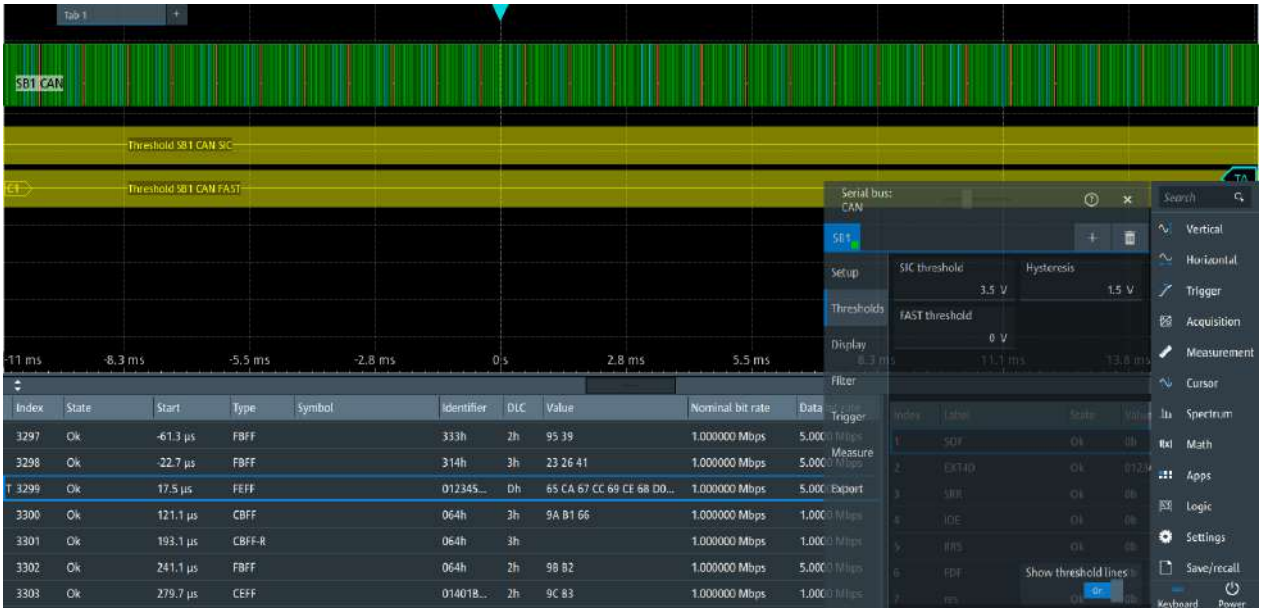

Figure 14-1: Threshold lines, shortly after enabling Show threshold lines

Remote command:
`SBUS<sb>:THReshold` on page 1492

14.1.3 Display

The following subsections describe the display settings and its zoom-coupling features.

- Display settings 511
- Display synchronization 513

14.1.3.1 Display settings

For all protocols, you can select how to display the decoded signal and its results table along with the waveform diagram.

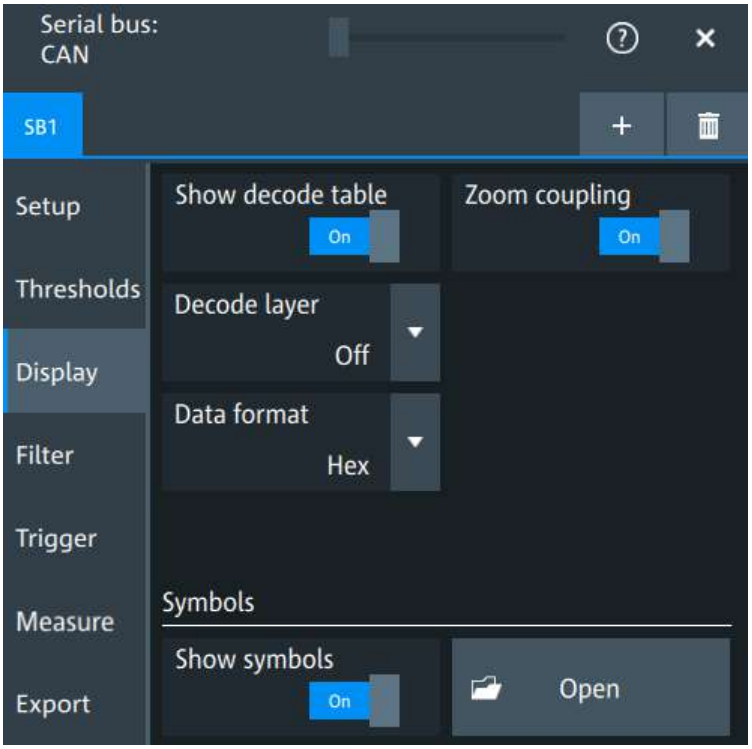

Show decode table
Opens a table with decoded data of the serial signal. The function requires the option for the analyzed protocol.

Decode results are protocol-specific.

Remote command:
`SBUS<sb>:RESult` on page 1491

Decode layer
Selects the decode layer.

Decoding is performed in several steps, and the results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display.

The available values are protocol-specific. For example:

"Off"	Disables the display of the decode layer.
"Edges"	Enables the display of all edges.
"Bits"	Enables the display of all bits.
"Words"	Enables the display of all words.

Data format
Sets the data format for the values displayed in the decode table and in the combs of the decoded signal.

Available formats are: hex, octal, binary, ASCii, signed, unsigned.

For more information on the available formats, see Section 14.1.10, "Bit pattern editor", on page 531.

Remote command:
SBUS<sb>:FORMat on page 1491

Zoom coupling
Available only, if Show decode table is enabled. If you enable "Zoom coupling", the software synchronizes the decode zoom window with the result tables, as described in Section 14.1.3.2, "Display synchronization", on page 513.

Remote command:
SBUS<sb>:ZCOupling on page 1492

Symbols
Symbol lists are protocol-specific and not available for all protocols. Symbols are described in the respective configuration section of the protocol. For finding symbols in the decode table, enable ""Show symbols"". See also Section 14.1.3.2, "Display synchronization", on page 513.

The RC commands for this function are also protocol-specific, for example in the I²C protocol: SBUS<sb>:I2C:SYMBols enables symbols, and SBUS<sb>:I2C:NEWList loads the symbols translation file.

14.1.3.2 Display synchronization

This section describes the synchronization (or coupling) of the following components in the display:

- The waveform diagram and its zoom window
- Decode results table with decoded frames
- Frame details table with fields of selected frame

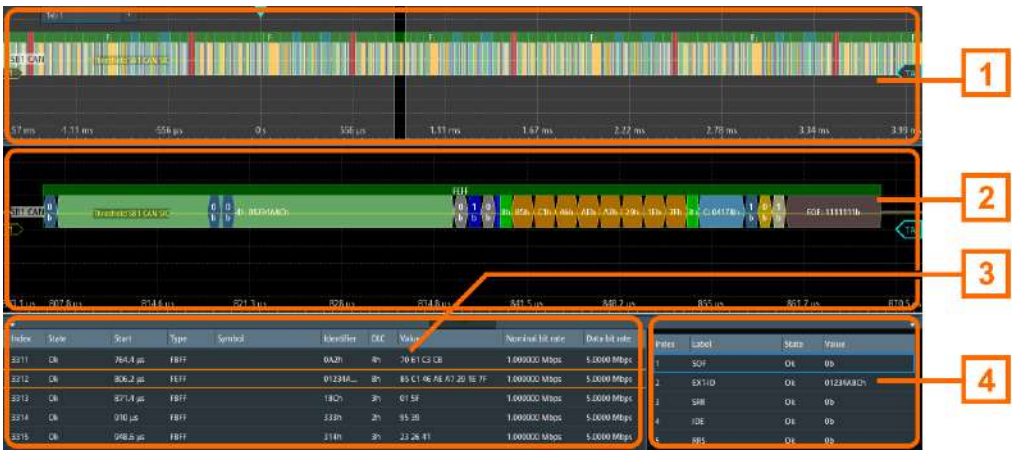

Figure 14-2: Main components in the decoded results display, here for the CAN protocol

1 = Waveform diagram, it shows an overview of some part of the acquisition, or even all of it
2 = Zoom window, it shows the zoom area selected in the waveform diagram
3 = Decode results table, it lists all frames of the acquisition
4 = Frame details table, it lists all fields of the frame selected in the results table

Prerequisites for synchronizing displayed results:

- State is enabled in the "Setup" tab.
- Show decode table is enabled in the "Display" tab.
- Zoom coupling is enabled in the "Display" tab.
- Decoded results are available.
  The dialog shows the results for frames in the results table and for fields in the details table.

When you select a row in one of the tables, hence a decoded frame or field, the software automatically synchronizes the zoom window to display this frame or field on the screen with a margin at each side. For details of the synchronization and margin, see Figure 14-3 and Figure 14-4. The software also synchronizes the waveform diagram with the zoom window.

When you move the zoom window to the left or right, the software updates the results table to highlight the window's center frame, without resizing.

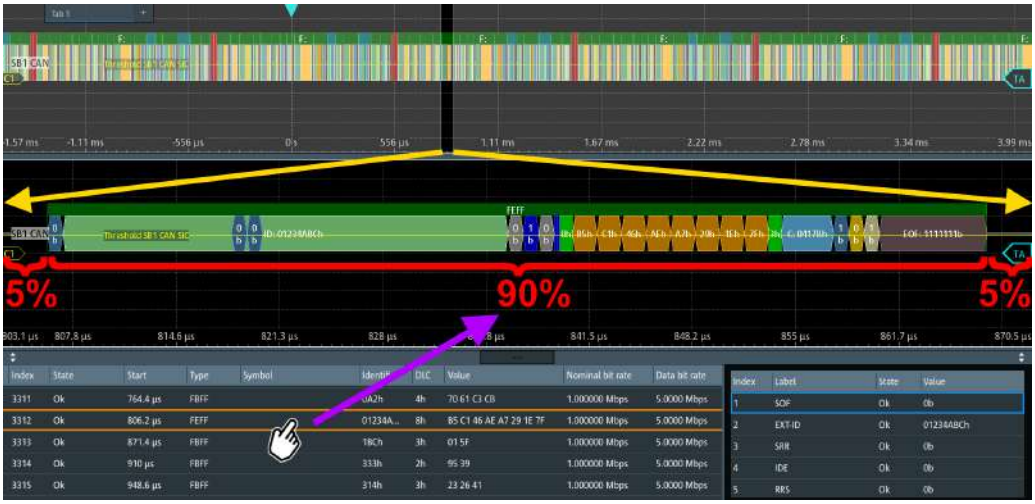

Figure 14-3: Zoom coupling of selected frame (left table)

Pink arrow = Selected frame covers 90% of the zoom window's width (red scale), centered on the screen
Yellow arrows = Zoom segment, automatically selected in the diagram, covers the full zoom window's width

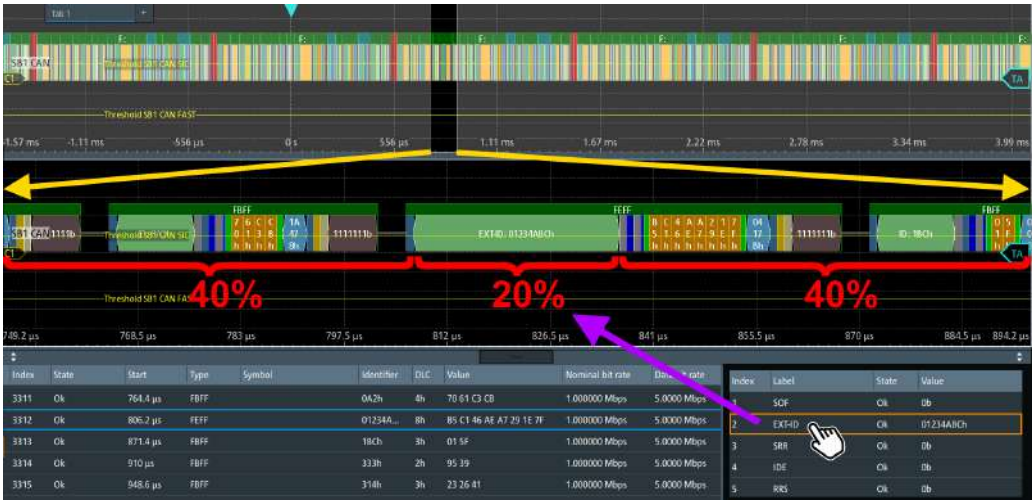

Figure 14-4: Zoom coupling of selected field (right table)

Pink arrow = Selected field covers 20% of the zoom window's width (red scale), centered on the screen
Yellow arrows = Zoom segment, automatically selected in the diagram, covers the full zoom window's width

14.1.4 Filter

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

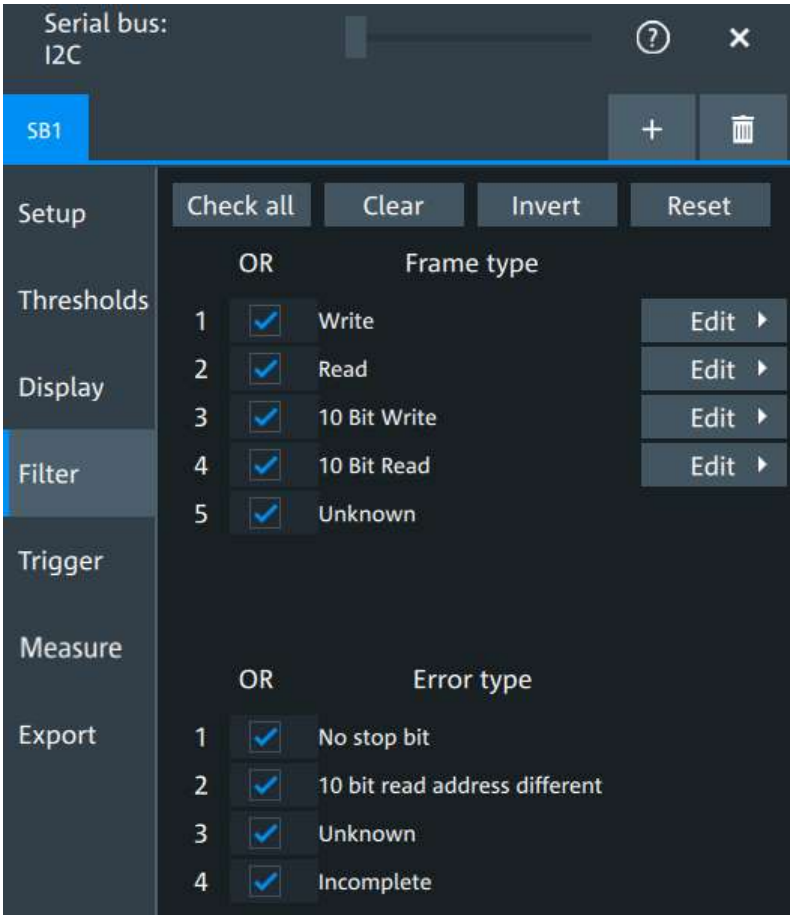

The settings are protocol-specific and are described in the corresponding protocol section.

14.1.5 Format

The format tab allows you to configure certain aspects of how the decoding results are translated and visualized. The defined formats are applied by the filter, the software trigger, and the measurements.

The format configuration differs depending on the protocol.

- Format for custom protocols 516
- Format for QUAD-SPI and OCTO-SPI 519
- Format for all other protocols 521

14.1.5.1 Format for custom protocols

For the custom protocols NRZ-(un)clocked, Manchester, 8b/10b, the format tab fully specifies how frames and their fields are identified and created during the decoding. The decoder reads the incoming raw bitstream, applies the custom frame list defined in the tab, and instantiates frames and their fields according to the field definitions. You

can also use functions to calculate new values based on the data fields, for example see also "Numeric format" on page 707.

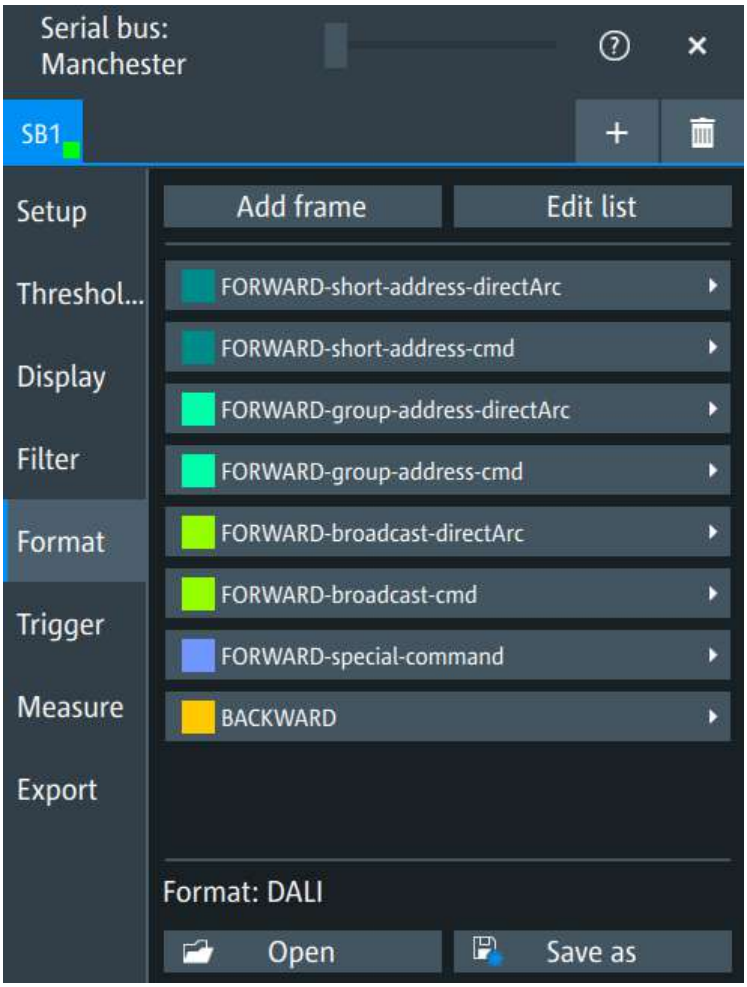

Each frame format occupies one line in the frame list. The frame identification is executed top down in the frame list.

Describing a frame format requires assigning it a name and specifying field descriptions, which must be sequential and complete. No gaps are allowed, because the field descriptions are used to calculate the start position of the next frame.

A frame is identified when all user-defined conditions of the field descriptions are met. These conditions can be regarded as related by the Boolean `AND` operator.

A condition can also locate a synchronization pattern, specified by the equal operator in the field. For example, if you define a "Preamble" field with the condition *=FFFFFFFF*, the decoder scans the data for this pattern, and then synchronizes to it.

If no frame format is suitable to identify an incoming frame, by default such a "missed" frame is reproduced as "Undescribed Bits" in the honeycomb display. These bits are not shown in the results table.

If you have not defined an "equal" operator for any field of a frame format, you can use this description to positively identify each kind of frame. Hence, it "catches" every

frame, even if there are other frame formats to follow in the frame list. Therefore, if you use a "catch all" frame format, we recommend to place it at the end of the frame list, otherwise it overwrites any subsequent frame format. However, instead of using a "catch all" frame format, consider using the default "Undescribed Bits" display mentioned above.

It is in your responsibility to define unambiguous formats for each frame type.

If you do not want to start from scratch, you can load a predefined format table via "Menu" > "Apps" > "Protocol" tab > select "DALI" or "MDIO". You can always configure additional formats with the following procedure.

To configure formats for custom protocols

1. Navigate to "Menu" > "Apps" > "Protocol" tab > select a custom protocol > "Format".
2. Select "Add frame".

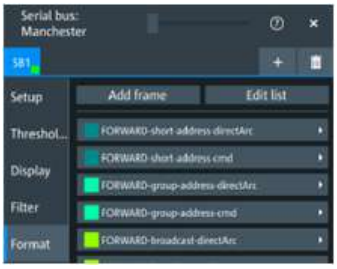

3. Specify the frame details: Name and color.

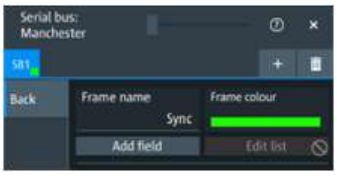

4. Select "Add field".
5. Specify the field details: Name, color and display features.

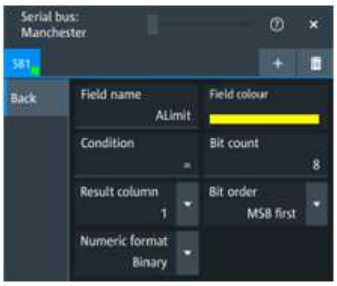

6. Add a "Condition".

   Note: The fields must be sequential and complete. No gaps are allowed, because the field definitions are used to calculate the start position of the next frame.

7. Select "Back".
8. Repeat the previous steps to add and define more fields.
9. Select "Back".

   The "Decode results" table, filter and trigger tabs display the new fields instead of the original fields.

14.1.5.2 Format for QUAD-SPI and OCTO-SPI

For QUAD-SPI and OCTO SPI, the format tab provides a customizable list of opcode and the formatting of the opcode data.

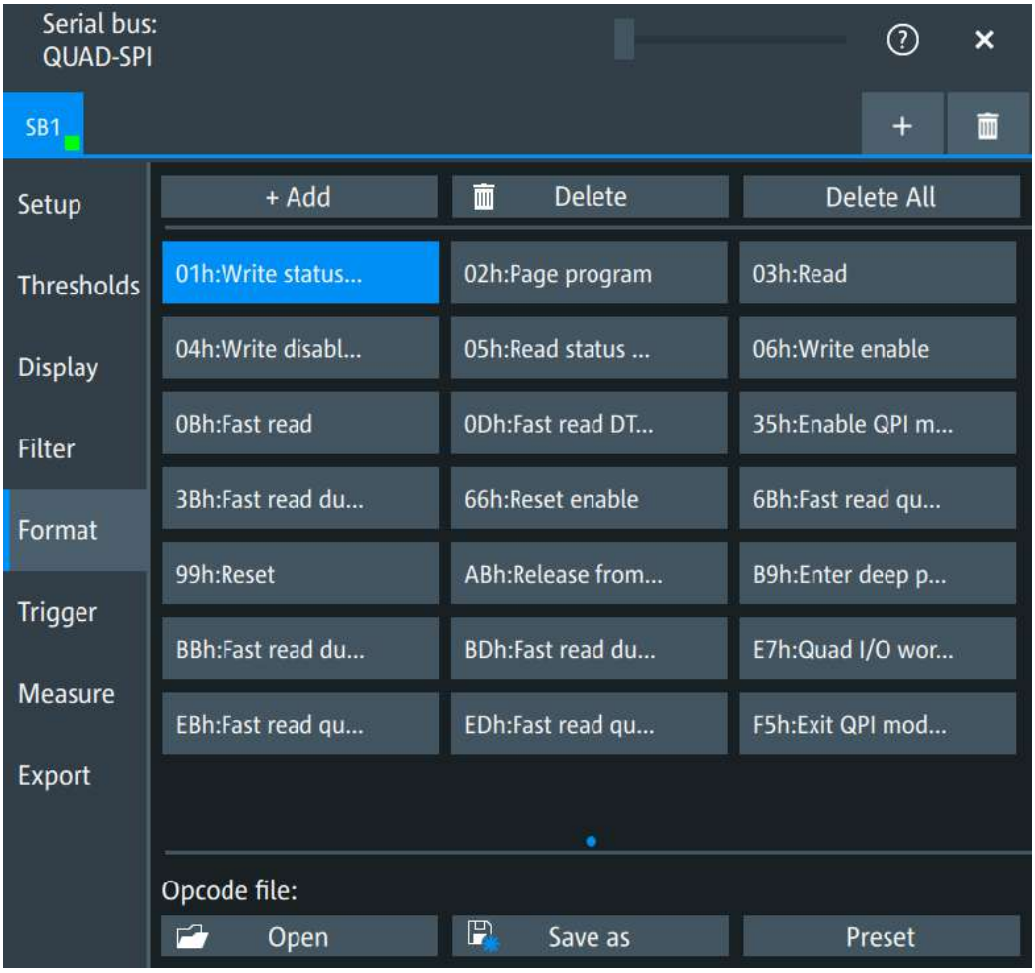

Opcode is a specific command byte sent from the microcontroller to the QUAD-SPI or OCTO-SPI device to initiate a particular action, such as reading, writing or erasing data. The opcodes vary by device manufacturer and memory model.

Opcode files are in JSON format, and contain frame formats for each hexadecimal opcode value.

The following is an example from a JSON file:

```
{
   "Firmware Version": "2.2.0.0",
   "Description": "Rohde Schwarz Inc. oscilloscope Quadspi Opcode data",
   "Opcode Version": 1,
   "Opcodes": {
    "0x05,RDSR1": [
        {
            "name": "data",
            "bytes": 0,
            "ddr": false,
            "lanes": 1
        }
    ],
    "0x07,RDSR2": [
        {
            "name": "data",
            "bytes": 0,
            "ddr": false,
            "lanes": 1
        }
    ],
    "0x35,RDCR1": [
        {
            "name": "data",
            "bytes": 0,
            "ddr": false,
            "lanes": 1
        }
    ],
    "0x0D,DDRFAST READ": [
        {
            "name": "address",
            "bytes": 3,
            "ddr": true,
            "lanes": 1
        },
        {
            "name": "data",
            "bytes": 0,
            "ddr": true,
            "lanes": 1
        }
    ]
    }
}
```

14.1.5.3 Format for all other protocols

For protocols that are not custom protocols, the protocol decoder identifies frames and their fields in the bit stream. With the format tab, you can identify specific data fields in the decoded frames and further characterize it by redefining them to new fields of user-defined properties, such as name, color, length, and format. You can also use functions to calculate new values based on the data fields, for example see also "Numeric format" on page 544.

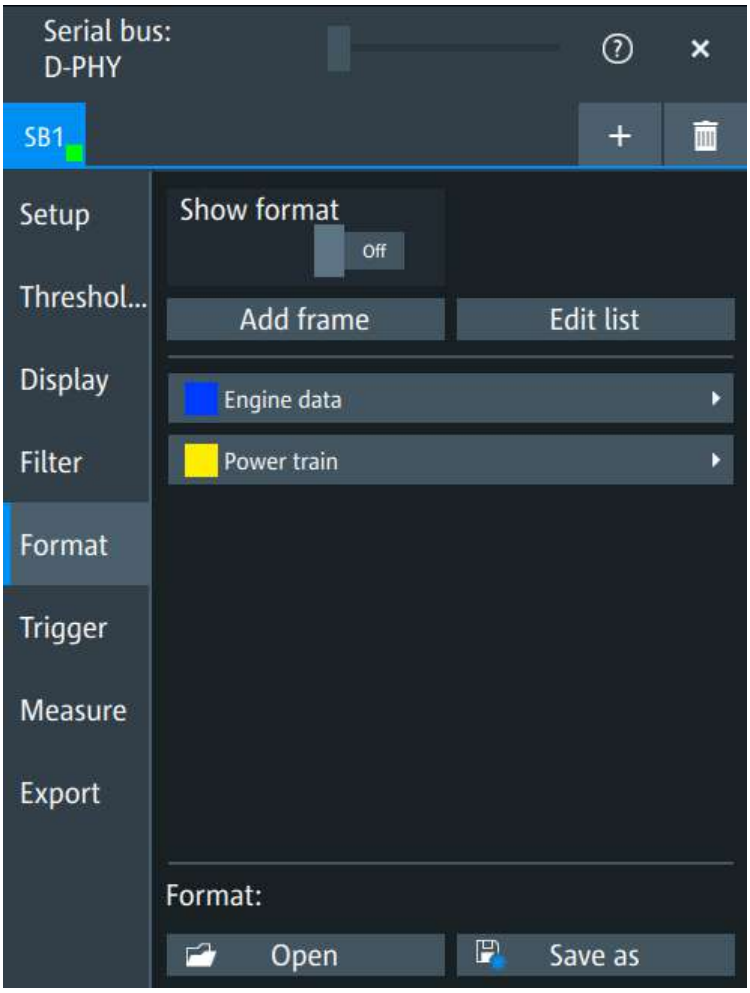

Each frame format occupies one line in the frame list. The frame identification is executed top down in the frame list.

The following applies for the field descriptions:

- Define individual bit start positions and lengths; any gaps in the bit order are automatically filled with “undescribed” fields.
- Bits do not need to be consecutive, but must not be overlapping.
- The upper boarder of a field (bit start position + length) must not exceed the total payload length.

To configure formats for protocols like CAN, SENT

Every change in the format configuration triggers a re-decode. We recommend pre-defining the frame formats before loading the files and starting the acquisition.

1. Navigate to "Menu" > "Apps" > "Protocol" tab > select a higher layer protocol > "Format".
2. Select "Add frame".

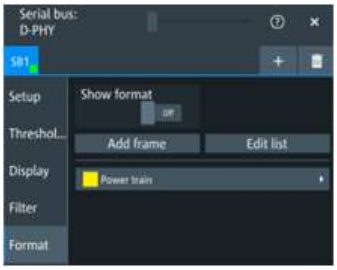

3. Specify the frame details: Name, color, frame type.

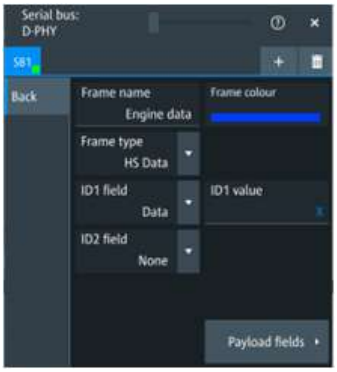

4. Select an "ID<n> field".
5. Add a condition "ID<n> value" to the respective "ID<n> field".
6. Add fields to interpret the payload (optional):
   a) Select "Payload fields".
   b) Select "Add field".

c) Specify the field details: Name, color and display features.

Note: Gaps in the bit order are filled as "Undescribed" fields and not shown in the honey-comb view.

7. Select "Back".
8. Repeat the previous steps to add and define more fields.
9. Select "Back".
10. Enable "Show format" to turn on the format display.

    The "Decode results" table, filter and trigger tabs display the new fields instead of the original payload fields.

14.1.6 Trigger

The "Trigger" tab provides functionality to quickly set up protocol triggers and navigates to the "Trigger" dialogs for further settings.

A trigger is a function that determines when the instrument starts capturing a signal. There are two primary types of triggers on the MXO 5, depending on the selected protocol: software trigger and hardware trigger.

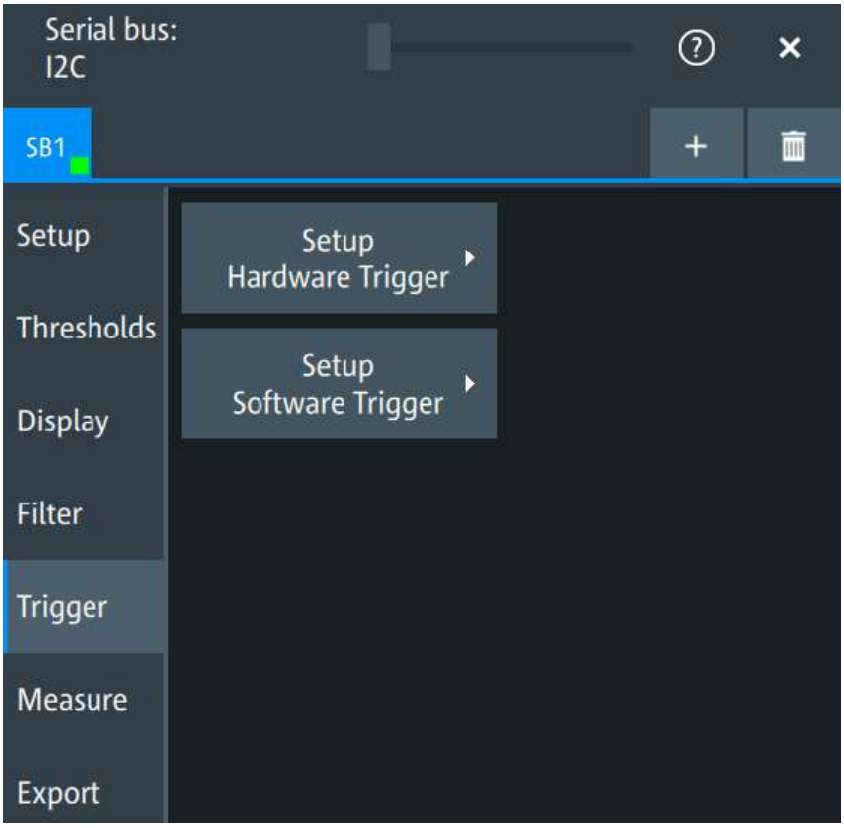

14.1.6.1 Hardware trigger

A hardware trigger is a trigger that is generated by the oscilloscope's hardware circuitry.

The protocol hardware trigger is available only for the few protocols that support it (listed below). A single click of the "Setup Hardware Trigger" button in the protocol dialog is equivalent with the following actions in the "Trigger" dialog:

1. "Trigger on" > "Single event".
2. "Source" > selects the active serial bus, for example "Serial bus 1".
3. "Type" > selects the most simple protocol-specific trigger type:
   - I²C: "Start"
   - SPI: "Start of frame"
   - UART: "Start bit"
   - LIN: "Start of frame"
   - CAN: "Start of frame"

   This action also executes the "Type" command and resets the trigger settings.

   Optionally proceed with the trigger settings in the "Trigger" dialog.

14.1.6.2 Software trigger

The protocol software trigger is a sequence "A → Serial bus" of events. Hence, it consists of two subsequent events: A-trigger and a serial bus trigger.

Loss of settings

If you have already configured the SW trigger, do not click "Software Trigger" in the protocol dialog, because it overwrites your settings. Instead, use the "Trigger" dialog.

For an initial configuration, a single click of the "Software Trigger" button is equivalent with the following actions in the "Trigger" dialog:

1. "Trigger on" > "Sequence".
2. "Trigger sequence" > "A → Serial bus"
3. Configures the 1st event:
   a) Sets the "1st event" ("A trigger") to a protocol-specific trigger that is most suited for this protocol, for example "Edge".
   b) Sets the "Level" to the threshold level defined in the protocol dialog.
   c) Sets other parameters, depending on the event type and protocol requirements, for example "Slope" for "Edge", or "Time" for "Timeout".
4. Configures the software trigger:
   Preselects recommended frame types and error types, which you can change later.

After the A-trigger conditions have been met, the serial bus trigger with independent conditions is enabled. The oscilloscope waits until one or a specified number of serial bus trigger conditions occur. The serial bus trigger can only cause the trigger event if it occurs after the A-trigger.

All trigger sequences require that analog input channels C<n> are set as trigger sources for all events. The oscilloscope checks all trigger settings for compatibility and adjusts them if they do not fit.

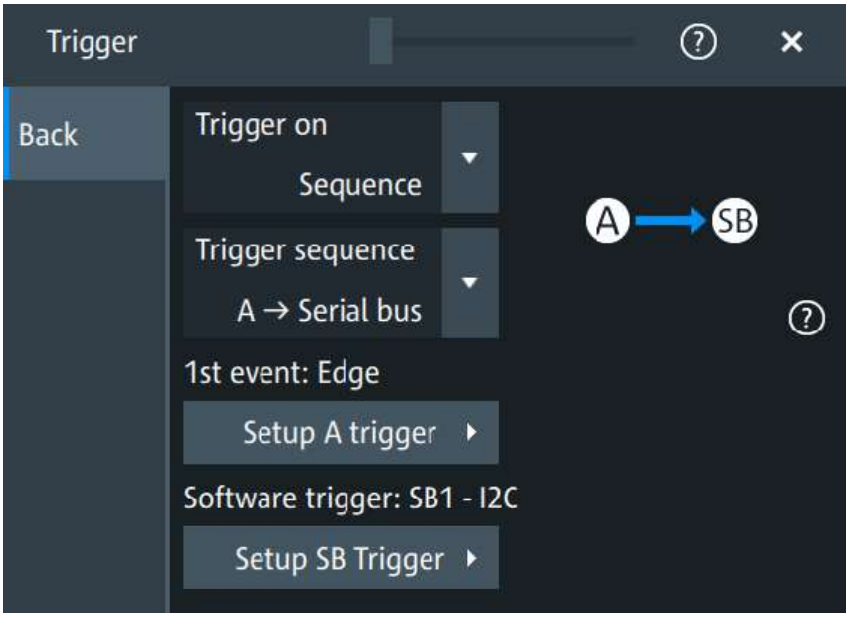

To indicate the 1st (main, general) trigger position in the captured signal, the top of the display shows a triangular trigger marker (1 in Figure 14-5). If you enable displaying the results table (see "Show decode table" on page 512), the triggered frame is marked in the table by the letter "T" left of the frame index (2 in Figure 14-5):

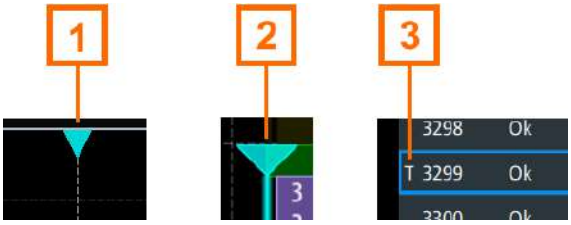

Figure 14-5: Trigger markers

1 = Triangular main trigger marker at the top of the waveform display, indicates the position of the single trigger or the position of the 1st trigger event of a trigger sequence
2 = Triangular secondary trigger marker with bold line in the zoom diagram of the decoded signal, indicates the 2nd event trigger position, hence the software trigger
3 = Letter "T" marks the 2nd event trigger position (the triggered frame) in the decode results table

The following scenarios are possible:

- 1st case, triggering on a *single event* while the source is a serial bus:
  - The main trigger marker indicates the single event trigger position.
  - There is no secondary trigger marker in the decoded signal diagram.
  - The "T" trigger marker in the protocol decode results table corresponds to the main trigger marker.

  This scenario uses the hardware trigger, which is not available for all protocols.
- 2nd case, triggering on a *single event* while the source is *not* a serial bus:
  - The main trigger marker indicates the single event trigger position.
  - There is no secondary trigger marker in the decoded signal diagram.

  - There is no "T" trigger marker in the protocol decode results table.
- 3rd case, triggering on a *sequence* of "Trigger A" and "serial bus event":
  - The main trigger marker indicates the 1st event trigger position.
  - The secondary trigger marker indicates the 2nd event trigger position (software trigger).
  - The "T" trigger marker in the protocol decode results table corresponds to the 2nd event trigger position (software trigger).

Figure 14-6 shows an example of these markers.

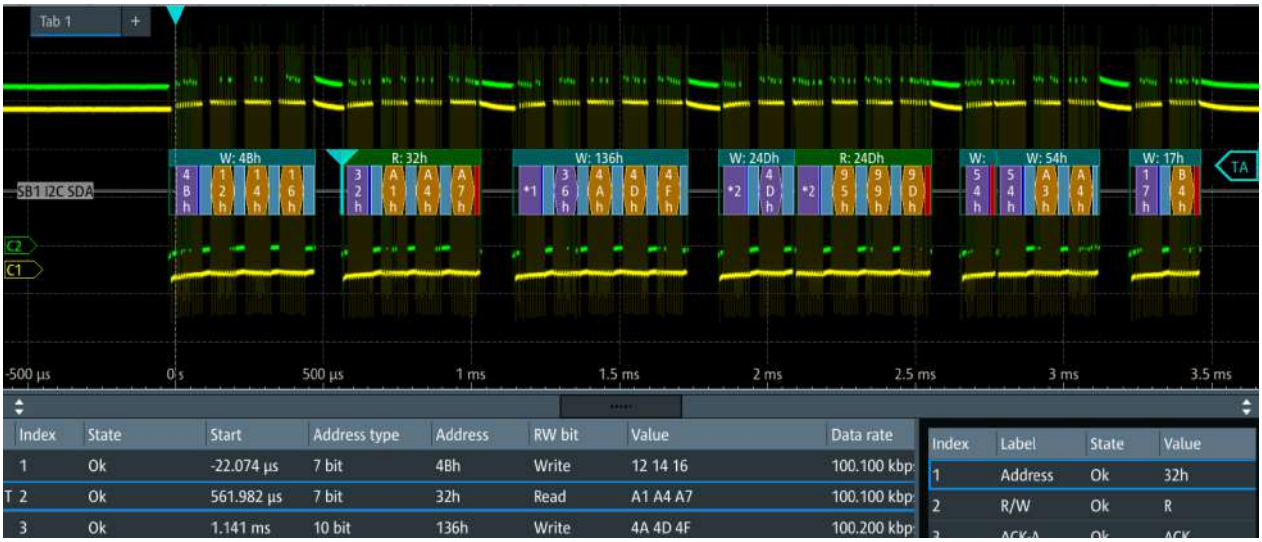

Figure 14-6: Example of sequence trigger in I2C signal with "Trigger A" (interval > 1 ms) and software trigger (first "Read" frame)

See also "Source" on page 169.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all" Enables the filter for all available frames and error types.

"Clear" Disables the filter for all available frames and error types.

"Invert" Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types.

Remote command:
The remote control commands for these functions are protocol-specific. Refer to the descriptions of the software trigger setup for each individual protocol.

14.1.7 Measure

The "Setup Measurement" button opens the dialog for automatic measurements in the "Protocol" category for the selected serial bus.

See Section 10.2.8, "Protocol measurements (option R&S MXO5-K500)", on page 309.

14.1.8 Export

In the "Export results" tab, you can export the results and all details of the selected protocol.

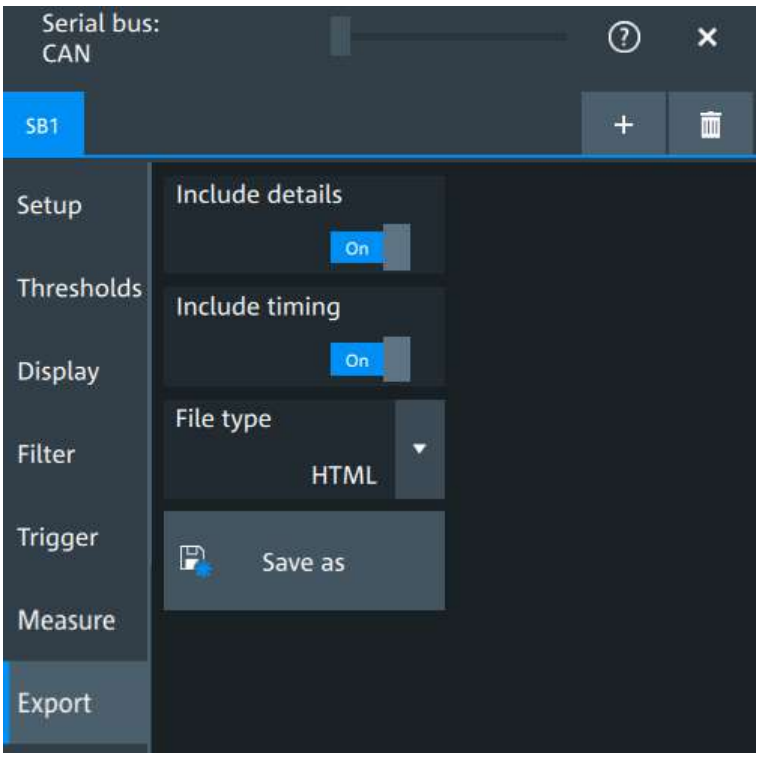

Include details
If enabled, includes the detailed results for all frames in the export result file.

Remote command:
`SBUS<sb>:EXPResult:DETail` on page 1493

Include timing
If enabled, includes the frame timing in the export result file.

Remote command:
`SBUS<sb>:EXPResult:TIME` on page 1493

File type
Selects the file format.

"HTML"	Saves the results as a webpage in hypertext markup language for display in a browser.
"CSV"	Saves the results as comma-separated values in a "`.csv`" file.
"XML"	Saves the results in a file compatible with an extended markup language.

"Python" Saves the results in a Python-compatible ".py" file format.

Remote command:
SBUS<sb>:EXPResult:EXTension on page 1494

Save as
Opens a dialog box where you can select a filename and a path for the export results file.

Remote command:
SBUS<sb>:EXPResult:SAVE on page 1493
SBUS<sb>:EXPResult:PATH on page 1494

14.1.9 Performing protocol analysis

This section explains step by step how to configure and decode a protocol bus.

14.1.9.1 Configuring protocol signals

For configuration, assign the lines to the input channels, and define the active states and the logical thresholds.

1. Select the "+ Bus" activator in the bottom-right corner.

2. Select the bus tab that you want to configure, for example "SB1".
3. Select the "Protocol type" button. Select the protocol, for example "CAN".
4. Select "State" to enable the decoding.

   A CAN shortcut appears at the bottom-left corner. Select the shortcut for quick access to the respective protocol dialog settings.

5. Verify that all signals are visible on the screen. If a line is missing, adjust the vertical and/or horizontal scaling.
6. Configure the protocol specific details. They are described in the related sections.
7. Set the logical thresholds:
   a) Select the "Thresholds" tab.
   b) For each wire, set the threshold value.
   c) If necessary, set the hysteresis value for the wires.

d) Optionally, select "Show threshold lines".

14.1.9.2 Hardware triggering

A hardware trigger is available for the following protocols:

- CAN
- SPI
- I²C
- LIN
- UART

Prerequisites: A configured protocol signal. See Section 14.1.9.1, "Configuring protocol signals", on page 529.

1. Open "Menu" > "Trigger".
2. Set "Trigger on" to "Single event".
3. Ensure that the "Source" is set to the configured serial bus, e.g. "Serial bus 1".
4. Select the "Type".
5. If available, select "Set details" to define additional settings for more complex trigger types.

   The following figures illustrate examples for protocol-specific trigger configurations.

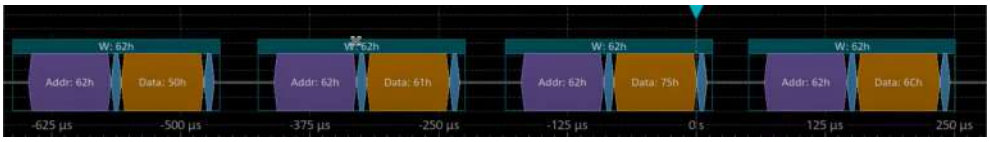

Figure 14-7: I²C signal with trigger on Type=Data, Data=0x75 and Position=1

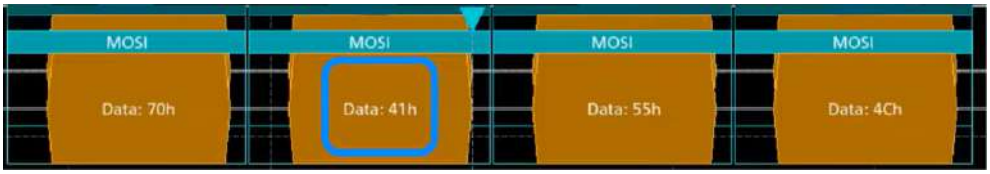

Figure 14-8: SPI signal with trigger on Type= MOSI, Data pattern = 0x41.

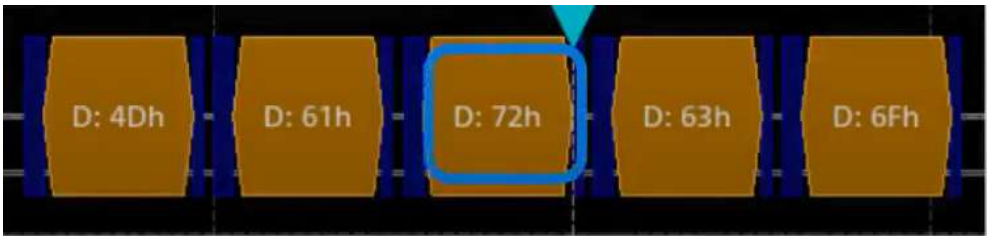

Figure 14-9: UART signal with trigger on Type= Tx, Data =0x72 and Position=3

14.1.9.3 Decoding protocol signals

When the configuration of the serial bus is complete, the signal can be decoded:

1. Open the "Serial Bus" dialog for the respective bus.
2. In the "Setup" tab, enable "State".
3. In the "Display" tab, enable "Show decode table".

For a description of the display settings, see also Section 14.1.3.1, "Display settings", on page 511.

For a description of how to synchronize the displayed results, see Section 14.1.3.2, "Display synchronization", on page 513.

The instrument captures and decodes the signal according to the standard definition and the configuration settings.

The color-coding of the various protocol sections and errors simplifies the interpretation of the visual display. The decode information condenses or expands, depending on the horizontal scale. Various data formats are available to show the result values.

14.1.9.4 Exporting decode results

Once a decode has been completed, you can generate an export of all decode results.

Prerequisites: A bus is configured for the 8b/10b protocol and decoded.

1. Select the protocol shortcut.
2. Select the "Export" tab.
3. If necessary, enable "Include details".
4. If necessary, enable "Include timing".
5. Select the "File type".
6. Select "Save as".
7. Enter a filename. Select "Save".

   An export file is saved in the "User data" directory.

14.1.10 Bit pattern editor

If you want to enter a specified address or data pattern, the pattern editor helps you to enter the pattern in various formats - decimal, hexadecimal, octal, binary and ASCII.

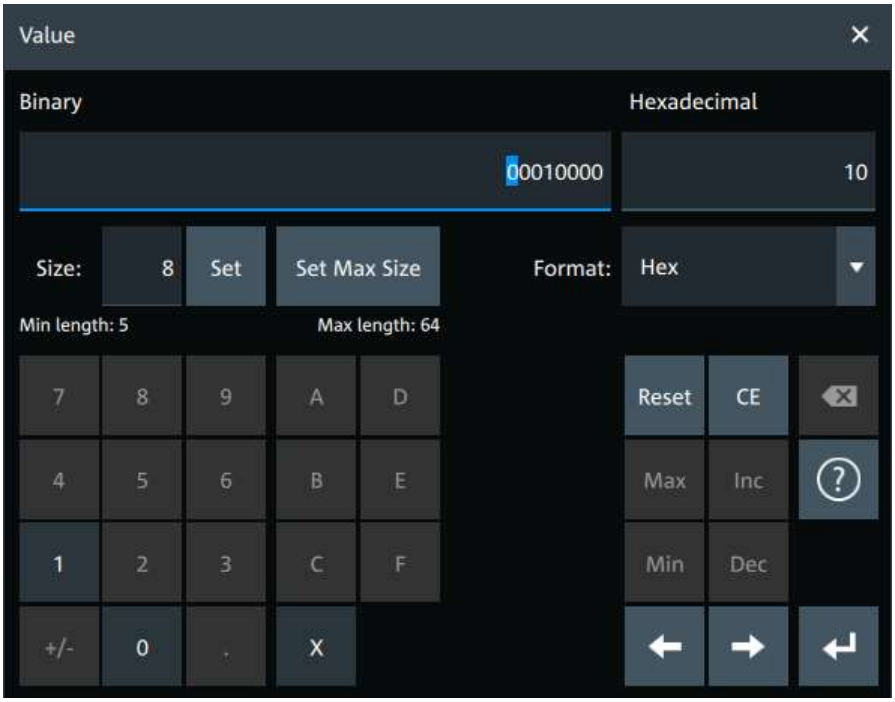

The editor at the top displays the pattern in two columns. The left column always shows binary data. For the right column, you can select the "Format". The default depends on the data specifics. You can edit data in the left or right column. The keypad adapts itself to the column format and only keys appropriate to the format are enabled.

The data is grouped and converted in bit groups. The size of a bit group depends on the address or data specifics and is set by the instrument. Groups are automatically separated by blanks. The maximum size of a bit group is 64 bit, the most common group size is 1 byte.

Format-specific information

- Binary: 0, 1 and X (do not care) is allowed.
- Octal: Each digit represents 3 bit.
- Hex: most common format in the right column.
- ASCII: In the ASCII column, "X" is the character X. The binary X (do not care) is not allowed. If an X is included in the binary value in the left column, the ASCII column displays "§" to indicate that the value is not defined.
- Unsigned: Decimal data format without a sign for positive or negative numbers. 3 digits are grouped, and the next group is separated by a comma, e.g. 653,848.
- Signed: Decimal format with a sign for positive or negative numbers. 3 digits are grouped, where the first bit represents the sign. You can use the 2's complement format. After a group of 3 digits the next group is separated by a comma, e.g. -653,848.

14.2 SPI bus (IC electronics, option R&S MXO5-K510)

The Serial Peripheral Interface SPI is used for communication with slow peripheral devices, in particular, for transmission of data streams.

For basic information on SPI, you can also refer to a video, available on the Rohde & Schwarz YouTube channel: Understanding SPI.

Requirements

For performing SPI decode measurements, you need the following:

- MXO 5 with 4 channels. The channels can be a combination of the following:
  - Analog channels (C1-C4)
  - Logic channels (D0-D15) (requires option R&S MXO5-B1)
- Option R&S MXO5-K510

- About the SPI protocol 533
- SPI configuration 534
- SPI filter 538
- SPI format configuration 540
- SPI hardware trigger 546
- SPI software trigger 547
- Measure 550
- SPI decode results 550

14.2.1 About the SPI protocol

A 4-channel instrument is required for full support of the SPI protocol, or the MSO option R&S MXO5-B1.

The Serial Peripheral Interface SPI is used for communication with slow peripheral devices, in particular, for transmission of data streams.

The main characteristics of SPI are:

- Main-subnode communication
- No device addressing. The sub is accessed by a chip select, or sub select line.
- No acknowledgment mechanism to confirm receipt of data
- Duplex capability

Most SPI buses have four lines, two data and two control lines:

- Clock line to all subs (SCLK)
- Sub select or Chip select line (SS or CS)
- Main data output, sub data input (MOSI or SDI)
- Main data input, sub data output (MISO or SDO)

When the main generates a clock and selects a sub device, data can be transferred in either or both directions simultaneously.

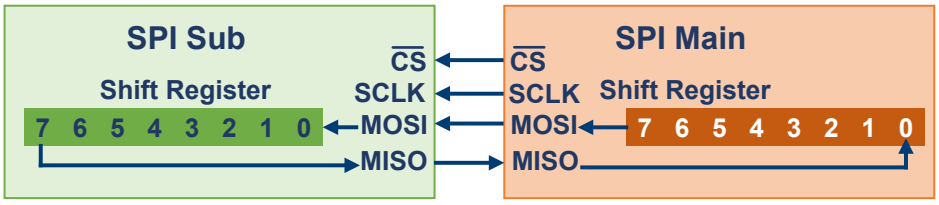

Figure 14-10: Simple configuration of SPI bus

The data bits of a message are grouped by the following criteria:

- A word contains several successive bits. The word length is defined in the protocol configuration.
- A frame contains several successive words, at least one word.

Supported frame types

- MISO: Main data output, sub data input
- MOSI: Main data input, sub data output
- MISOMOSI: Combined view of both SPI data directions

14.2.2 SPI configuration

14.2.2.1 SPI configuration settings

Access: "Menu" > "Apps" > "Protocol" tab > "SPI" > "Setup".

Make sure that the tab of the correct serial bus is selected.

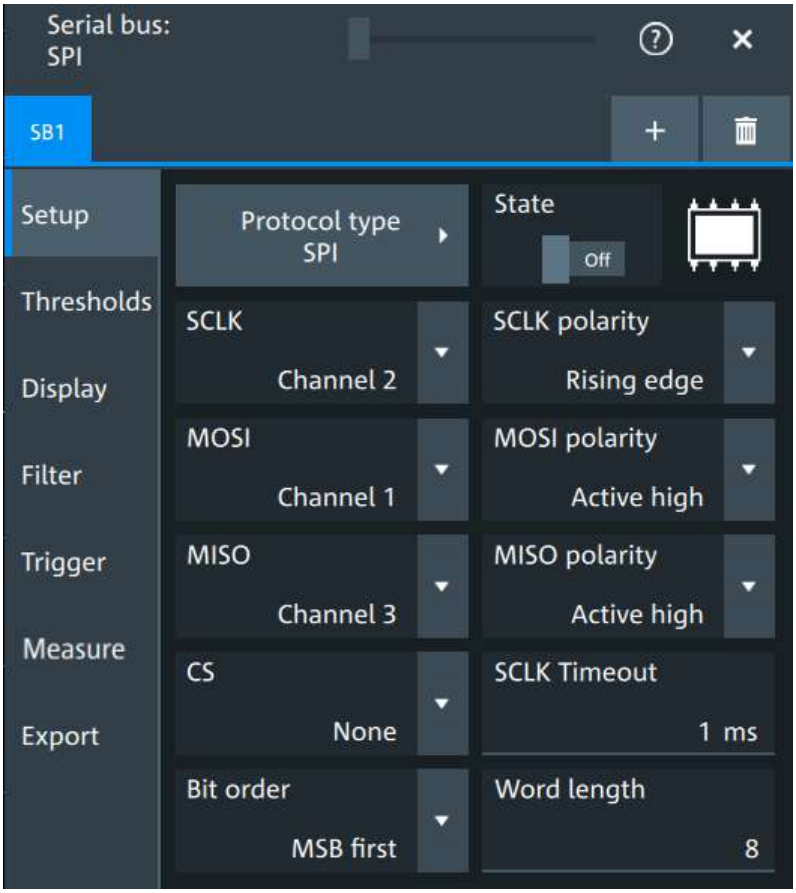

Protocol type
Selects the protocol type to be decoded.

Remote command:
`SBUS<sb>:TYPE` on page 1489

State
Enables the decoding of the selected bus. The signal icon of the bus appears on the signal bar.

Remote command:
`SBUS<sb>[:STATe]` on page 1489

SCLK,MOSI,MISO,CS
Sets the input channel for the respective line:

- SCLK: clock line
- MOSI line
- MISO line
- CS: chip select

Alternatively, digital channels can be used if MSO option R&S MXO5-B1 is installed. Digital and analog channels cannot be used at the same time.

For triggering on a serial bus, analog or digital channel sources are required.

Remote command:
SBUS<sb>:SPI:MISO:SOURce on page 1497
SBUS<sb>:SPI:MOSI:SOURce on page 1499
SBUS<sb>:SPI:SCLK:SOURce on page 1499
SBUS<sb>:SPI:CSELect:SOURce on page 1496

Clock polarity
Two settings define the clock mode: the clock polarity and the clock phase. Together, they determine the edges of the clock signal on which the data are driven and sampled.

A main/subnode pair must use the same parameter pair values to communicate. The clock phase defines the slope. It selects if data is stored with the rising or falling slope of the clock. The slope marks the begin of a new bit.

Polarity: MOSI, MISO, CS
Selects if the transmitted signal for the respective line is active high (high = 1) or active low (low = 1).

For triggering on a serial bus, analog or digital channel sources are required.

Remote command:
SBUS<sb>:SPI:MISO:POLarity on page 1497
SBUS<sb>:SPI:MOSI:POLarity on page 1498
SBUS<sb>:SPI:CSELect:POLarity on page 1496

Bit order
Selects the bit order, which determines if the data of the messages starts with MSB (most significant bit) or LSB (least significant bit).

Remote command:
SBUS<sb>:SPI:BORDer on page 1495

Word length
Sets the word length (or symbol size), which is the number of bits in a message. The maximum word length is 32 bit.

Remote command:
SBUS<sb>:SPI:WSIZe on page 1500

Timeout
Sets the minimum clock idle time if a timeout on the clock line SCLK is used as limiter between two frames.

This setting is only available, for "CS" = "None".

Remote command:
SBUS<sb>:SPI:TIMeout on page 1500

14.2.2.2 Threshold settings

Access: "Menu" > "Apps" > "Protocol" tab > "SPI" > "Thresholds".

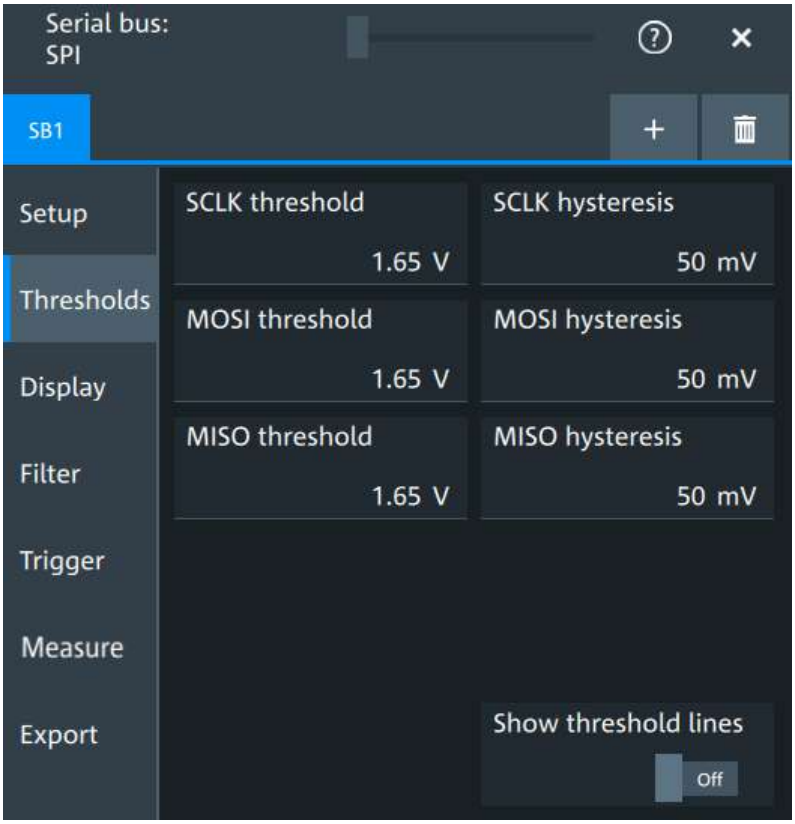

Threshold
Sets the threshold for the SCLK, MOSI and MISO channels. Enter the value directly in the fields.

Additional to the threshold, you can also set a hysteresis.

If the signal value on the line is higher than the threshold, the signal state is high. Otherwise, the signal state is considered low if the signal value is below the threshold.

The interpretation of high and low is defined by the "Polarity: MOSI, MISO, CS" on page 536.

Remote command:
`SBUS<sb>:SPI:MISO:HYSTeresis` on page 1497
`SBUS<sb>:SPI:MOSI:HYSTeresis` on page 1498
`SBUS<sb>:SPI:SCLK:HYSTeresis` on page 1499
`SBUS<sb>:SPI:CSELect:HYSTeresis` on page 1496
`SBUS<sb>:SPI:MISO:THReshold` on page 1498
`SBUS<sb>:SPI:MOSI:THReshold` on page 1499
`SBUS<sb>:SPI:SCLK:THReshold` on page 1500
`SBUS<sb>:SPI:CSELect:THReshold` on page 1497

Show threshold lines
If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also Show threshold lines.

Remote command:
SBUS<sb>:THReshold on page 1492

14.2.2.3 Display settings

For details about the display settings, see Section 14.1.3.1, "Display settings", on page 511.

14.2.3 SPI filter

Access: "Menu" > "Apps" > "Protocol" tab > "SPI" > "Filter" tab

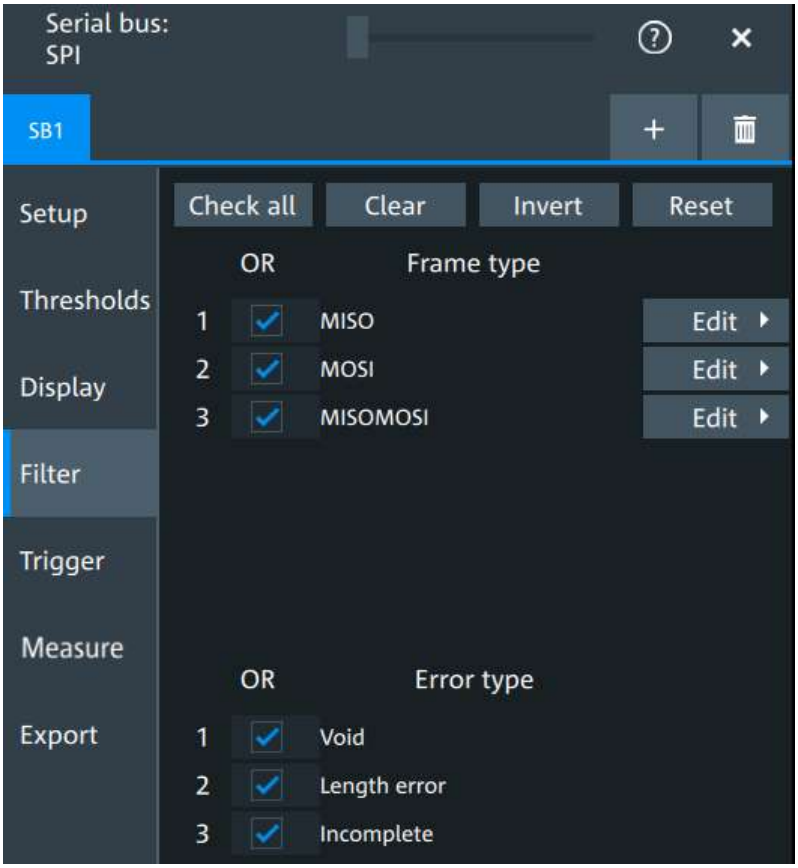

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all" Enables the filter for all available frames and error types.

"Clear" Disables the filter for all available frames and error types.

"Invert" Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types.

Remote command:
SBUS<sb>:SPI:FILTer:CHKall on page 1502
SBUS<sb>:SPI:FILTer:CLR on page 1503
SBUS<sb>:SPI:FILTer:INVert on page 1503
SBUS<sb>:SPI:FILTer:RST on page 1503

Frame type
Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.

For selected frame types, you can also specify conditions for the value of the fields in the "Edit" dialog.

The available frames are "MOSI", "MISO" and "MOSI/MISO".

Remote command:
SBUS<sb>:SPI:FILTer:FRAMe<fr>:ENABle on page 1505
SBUS<sb>:SPI:FILTer:FRENable on page 1505

Edit
Opens a dialog to define the details of the selected frame.

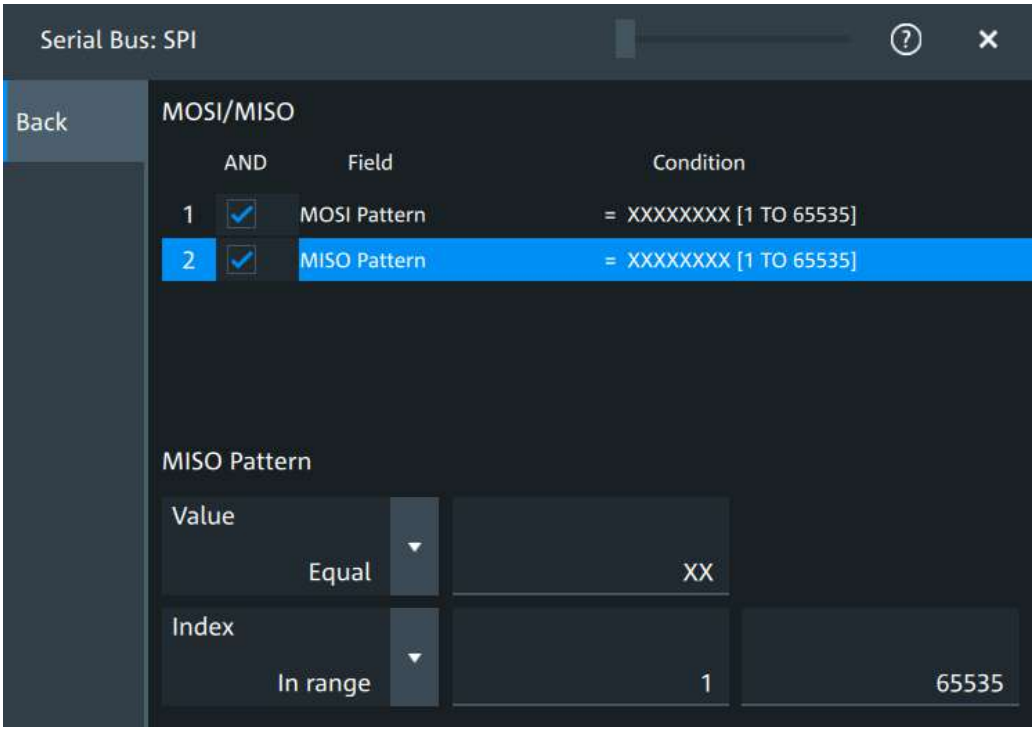

"Field" Enables the field type that you want to filter on for the selected frame. The available fields are "MOSI Pattern" and "MISO Pattern".

Remote command:
SBUS<sb>:SPI:FILTer:FIENable on page 1505
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:ENABle on page 1505

"Condition" Displays the value condition for the selected field.

Remote command:
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:BIT
on page 1503

"Data" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:DMAX
on page 1504
SBUS<sb>:SPI:FILTer:DMAX on page 1504
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:DMIN
on page 1504
SBUS<sb>:SPI:FILTer:DMIN on page 1504
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:DOPerator
on page 1504
SBUS<sb>:SPI:FILTer:DOPerator on page 1504

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:IMAX
on page 1506
SBUS<sb>:SPI:FILTer:IMAX on page 1506
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:IMIN
on page 1506
SBUS<sb>:SPI:FILTer:IMIN on page 1506
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:IOPerator
on page 1507
SBUS<sb>:SPI:FILTer:IOPerator on page 1507

Edit
Opens a dialog to define the details of the selected frame.

Error type
Enables filtering on the selected error type.

Available error types are "Void", "Length error" and "Incomplete".

Remote command:
SBUS<sb>:SPI:FILTer:ERRor<n>:ENABle on page 1505

14.2.4 SPI format configuration

Access: "Menu" > "Apps" > "Protocol" tab > "SPI" > "Format".

See Section 14.1.5, "Format", on page 516.

Show format
Enables the format configuration and displays the frame formats in the honey-comb view and results. If enabled, the frame formats are also selectable for triggering and filtering.

Remote command:
`SBUS<sb>:SPI:FORMat:SELect` on page 1508

Add frame
Creates a frame format and adds it to the end of the frame list. A dialog opens to specify the frame details. The number of frame formats is limited to 100.

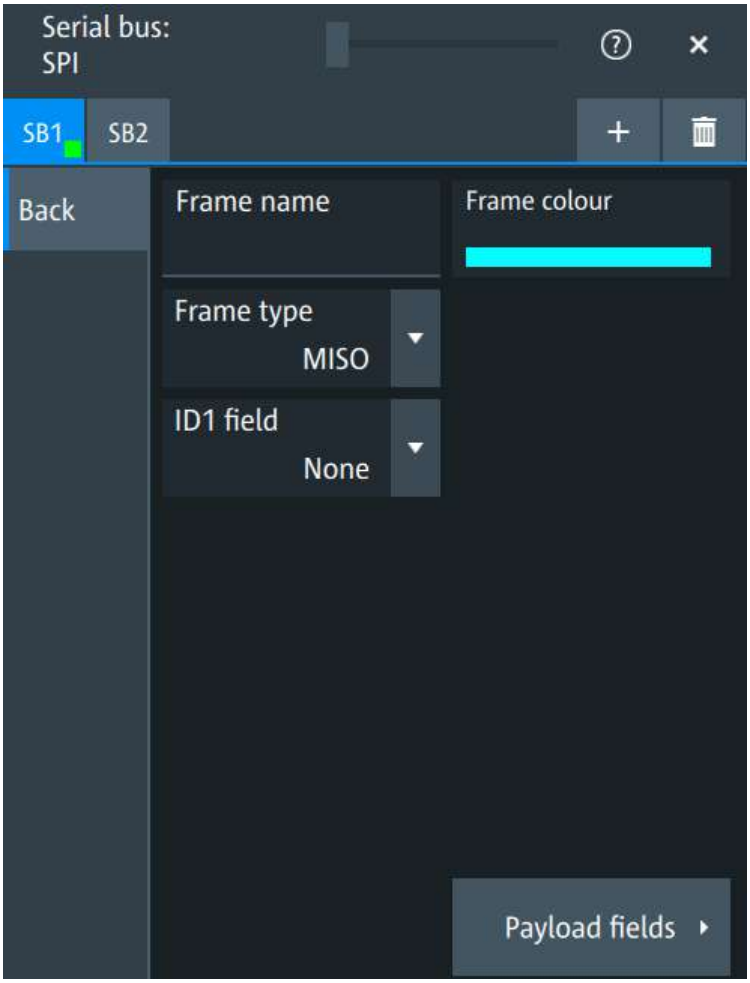

Remote command:
`SBUS<sb>:SPI:FORMat:ADDFrame` on page 1508

Edit list
Enables editing the frame list. If enabled, you can delete a frame format by clicking its "Delete" icon. In a list with several entries, you can move frame formats up or down by clicking the arrow buttons. To exit the editing mode, click "Edit list" again.

Remote command:
SBUS<sb>:SPI:FORMat:CLR on page 1509
SBUS<sb>:SPI:FORMat:FCOunt? on page 1509

Open
Opens a dialog for loading an existing list of frame formats in XML file format.

Remote command:
SBUS<sb>:SPI:FORMat:LOAD on page 1508

Save as
Opens a dialog for saving your current list of frame formats to an XML file. Saved frame formats can support efficient and convenient working.

Remote command:
SBUS<sb>:SPI:FORMat:SAVE on page 1508

Frame name
Specifies an arbitrary name to label the currently selected frame format. Ideally, use speaking names according to the specifications of the applicable protocol standard. Frame names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:SPI:FORMat:FRAMe<fr>:NAME on page 1510

Frame color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:SPI:FORMat:FRAMe<fr>:COLor on page 1510

Frame type
Select an original frame type.

Remote command:
SBUS<sb>:SPI:FORMat:FRAMe<fr>:TYPE on page 1510

ID<n> field
Select the first to third identifying field types.

Remote command:
SBUS<sb>:SPI:FORMat:FRAMe<fr>:ID1Field on page 1511
SBUS<sb>:SPI:FORMat:FRAMe<fr>:ID2Field on page 1511
SBUS<sb>:SPI:FORMat:FRAMe<fr>:ID3Field on page 1511

ID<n> value
Select the value of the corresponding field type.

Remote command:
SBUS<sb>:SPI:FORMat:FRAMe<fr>:ID1Value on page 1511
SBUS<sb>:SPI:FORMat:FRAMe<fr>:ID2Value on page 1511
SBUS<sb>:SPI:FORMat:FRAMe<fr>:ID3Value on page 1511

Payload fields
Opens the payload field configuration dialog. The format configuration of payload fields is optional and replaces the payload data of the identified frame.

Add field
Creates a new field description for the currently selected frame format and adds it to the end of the field list with color, bit position (order of transmission) and name. Brackets indicate how often bits will be repeated, [] indicates that this is an open array.

A dialog opens to specify the field details. The number of field descriptions is limited to 100.

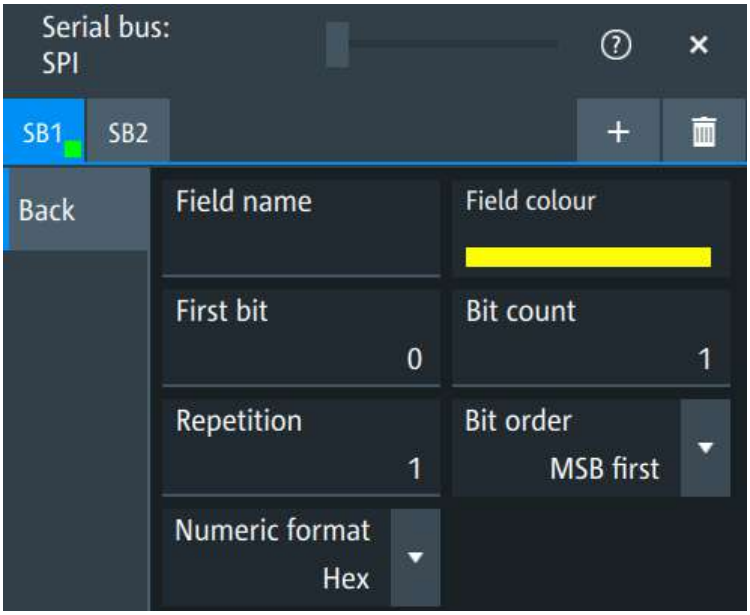

Remote command:
SBUS<sb>:SPI:FORMat:FRAMe<fr>:ADDField on page 1509

Field name
Specifies an arbitrary name for the currently selected field description. Ideally, use speaking names.

Field names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:NAME on page 1511

Field color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:COLor on page 1511

First bit
In order of transmission, sets the first bit of this field in the payload.

Remote command:
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:FSTBit on page 1512

Bit count
Sets the number of bits in the selected field, i.e., the field's length. Selecting the value opens a keypad showing allowed minimum and maximum values. You can set "Min", "Max", "Reset" or adjust with the "Inc" or "Dec" buttons by 1 or 10 (step size dependent). Use "CE" to restore the value used before the keypad opened.

If the "Condition" pattern length does not match the "Bit count":
- Too long, it is truncated.
- Too short, it is left-padded with 0.

Both truncation and padding happen on the left side of the condition and follow the configured "Bit order".

Examples for "Condition" "=100"):
- "Bit order" is "MSB":
  - Bit count = 2: truncated. Result: =00
  - Bit count = 4: padded. Result: =0100
- "Bit order" is LSB first (equivalent MSB-first representation is =001):
  - Bit count = 2: truncated. Result: =00 (LSB first), =00 (MSB first)
  - Bit count = 4: padded. Result: =0100 (LSB first), =0010 (MSB first)

Remote command:
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:BITCount on page 1512

Repetition
Defines the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Remote command:
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:REPetition on page 1513

Bit order
Selects, in which order the bits of a field's "Condition" value are evaluated:

- "LSB first": little endian, least significant bit first
- "MSB first": big endian, most significant bit first

Remote command:
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:BITorder on page 1513

Numeric format
Selects how the "Condition" value is interpreted:

- Symbolic: Assigns a symbolic translation on the data fields. Only available for custom protocols.
- Value list: Assigns a custom name to each hexadecimal value; any value without an assigned value is shown as "Undefined".
- A*X+B: Assigns a linear function on the data fields.
- For details on the other numeric formats, see "Format-specific information" on page 532.

The following rules apply:

- If the condition contains at least one of "H", "h", "L", "l", "X", "x", and all other characters are only "1" and/or "0", the value is always treated as binary, regardless of the selected numeric format.
- "x" and "X" are wildcards and are supported only in binary format or when the string is auto-interpreted as binary per the rule above.
  Examples for format set to "HEX":
  – "=1HL111000": valid (read as binary)
  – "=0x10101": valid (read as binary; "x" acts as wildcard, not a hex prefix)
  – "=1010": valid (read as HEX, with a total of 16 bits)
  – "=0x5A": valid (read as HEX "5A", because "0x" is a valid hex prefix; entering 5A alone is recommended)
  – "=5X12": invalid
  – "=1H33": invalid

Remote command:
`SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:FORMat` on page 1513

Add value
Creates a new hexagonal value for customization.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:ADDValue` on page 1514

Value
Defines the hexagonal value to convert it into a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue` on page 1515

Label
Defines the label to convert the corresponding hexagonal value to a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel` on page 1515

Unit
Defines a unit for the linear function.

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
`SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:UNIT` on page 1515

Parameter A,B
Defines the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:PARA on page 1516
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:PARB on page 1516

14.2.5 SPI hardware trigger

Access: "Menu" > "Apps" > "Protocol" tab > "SPI" > "Trigger" tab > "Setup Hardware Trigger"

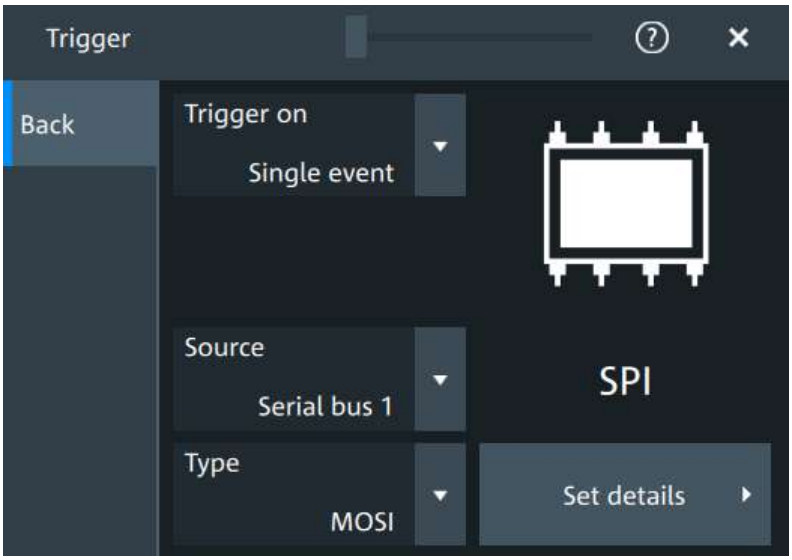

Type
Selects the trigger type for SPI analysis.

Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

"Start of frame"	Sets the trigger to the beginning of the frame.
"End of frame"	Sets the trigger to the end of the frame.
"MOSI"	Sets the trigger to a specified data pattern expected on the MOSI line. Available, if there is a channel assigned to the "MOSI" line in the "Setup" tab.
"MISO"	Sets the trigger to a specified data pattern expected on the MISO line. Available, if there is a channel assigned to the "MISO" line in the "Setup" tab.

Remote command:
TRIGger:SBHW:SPI:TYPE on page 1516

Data conditions
The trigger on MOSI and MISO patterns is defined in the same way:

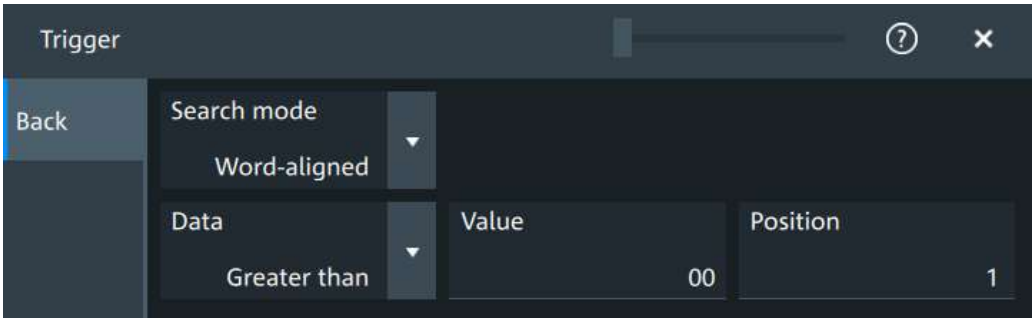

Search mode ← Data conditions
Defines how the specified data pattern is searched.

"Bit-aligned" Bit-by-bit: the pattern can start at any position in the message.

"Word-aligned" The pattern is matched only at word boundaries.

Remote command:
`TRIGger:SBHW:SPI:PALignment` on page 1517

Data ← Data conditions
Selects the operator condition for the data pattern and sets the data pattern.

Remote command:
`TRIGger:SBHW:SPI:FCONdition` on page 1517
`TRIGger:SBHW:SPI:DMINpattern` on page 1518

Position ← Data conditions
Sets the number of bits or words to be ignored before the first bit or word of interest.

Remote command:
`TRIGger:SBHW:SPI:DPOSition` on page 1517

14.2.6 SPI software trigger

14.2.6.1 Setup A trigger

Before setting up the software trigger for the protocols, a trigger A event needs to be set up.

14.2.6.2 Software trigger settings

Access: "Menu" > "Apps" > "Protocol" tab > "SPI" > "Trigger" tab > "Setup Software Trigger" > "Setup SB Trigger".

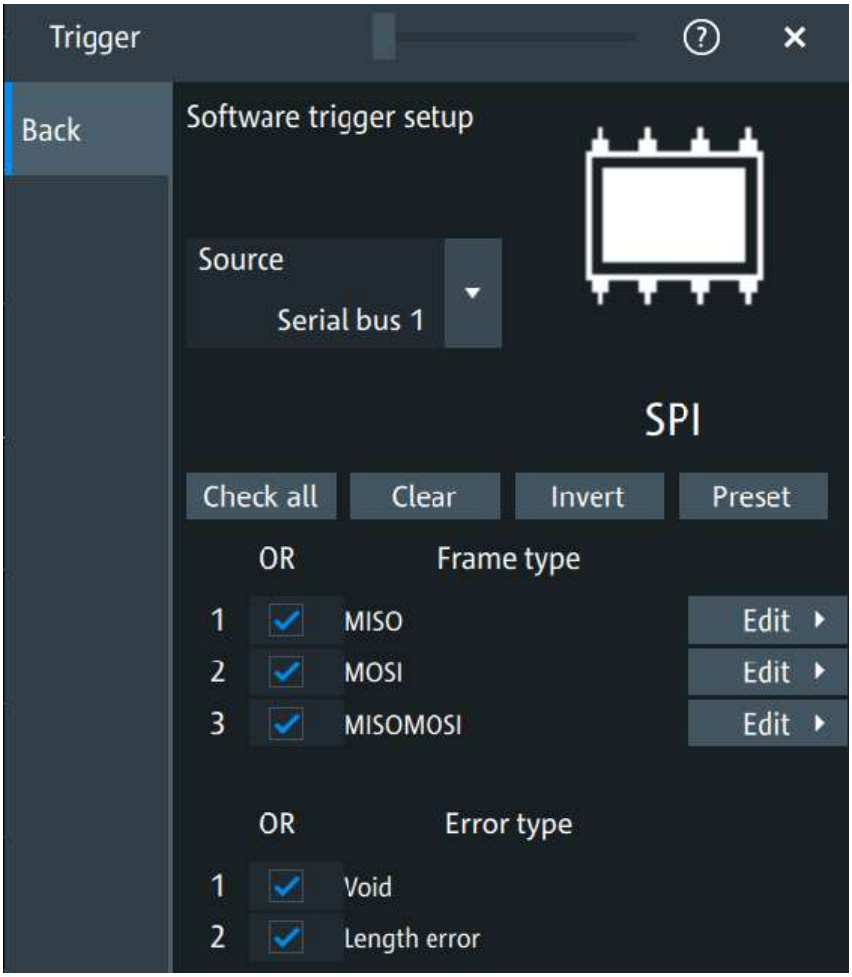

In the "Software Trigger" tab, you can define the settings to trigger on the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to trigger on.

"Check all" Enables the software trigger for all available frames and error types.

"Clear" Disables the software trigger for all available frames and error types.

"Invert" Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types for the software trigger.

Remote command:
`TRIGger:SBSW:SPI:CHKall` on page 1519
`TRIGger:SBSW:SPI:CLR` on page 1519
`TRIGger:SBSW:SPI:INVert` on page 1519
`TRIGger:SBSW:SPI:RST` on page 1519

Frame type
Selects the frame type that you want to trigger on. You can trigger on all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

The following frames are available: "MISO", "MOSI" and "MISO/MOSI".

Remote command:
`TRIGger:SBSW:SPI:FRENable` on page 1519
`TRIGger:SBSW:SPI:FRAMe<fr>:ENABle` on page 1519

Edit
Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

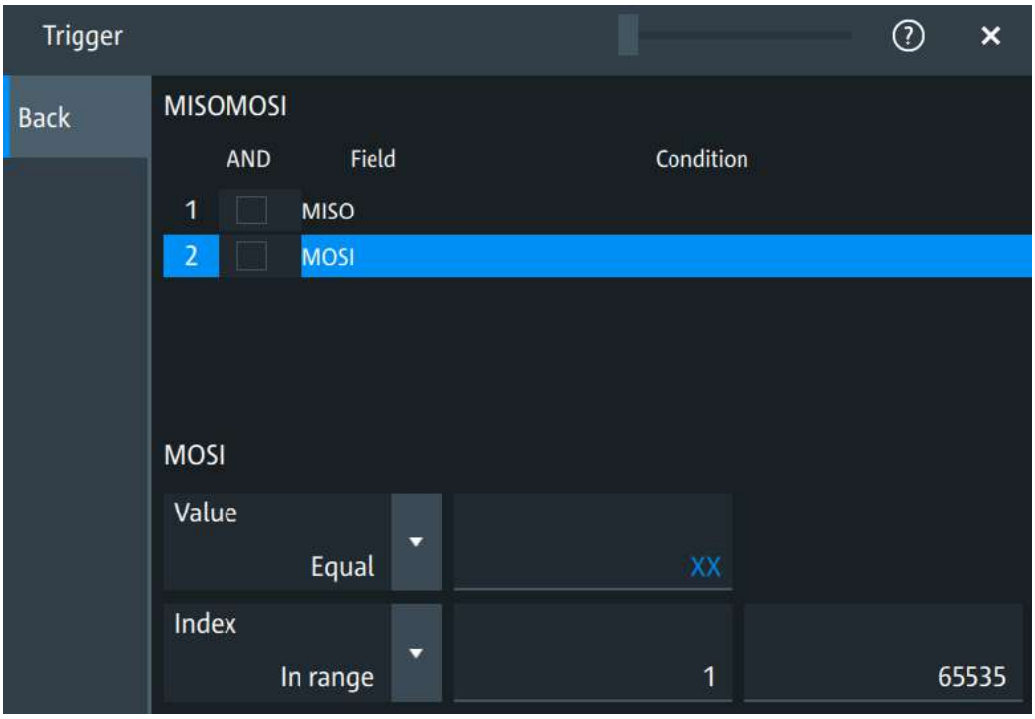

"Field" Enables the field type that you want to trigger on for the selected frame.
The following fields are available: "MOSI" and "MISO".

Remote command:
`TRIGger:SBSW:SPI:FIENable` on page 1521
`TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:ENABle` on page 1521

"Condition" Displays the value condition for the selected field.

Remote command:
`TRIGger:SBSW:SPI:BIT` on page 1520
`TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:BIT` on page 1520

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
TRIGger:SBSW:SPI:DMAX on page 1520
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:DMAX on page 1520
TRIGger:SBSW:SPI:DMIN on page 1520
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:DMIN on page 1520
TRIGger:SBSW:SPI:DOPerator on page 1521
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:DOPerator on page 1521

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
TRIGger:SBSW:SPI:IMAX on page 1522
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:IMAX on page 1522
TRIGger:SBSW:SPI:IMIN on page 1522
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:IMIN on page 1522
TRIGger:SBSW:SPI:IOPerator on page 1522
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:IOPerator on page 1522

Error type
Enables triggering on the selected error type.

The following error types are available: "Void" and "Length error".

Remote command:
TRIGger:SBSW:SPI:ERENable on page 1523
TRIGger:SBSW:SPI:ERRor<m>:ENABle on page 1523

14.2.7 Measure

The "Setup Measurement" button opens the dialog for automatic measurements in the "Protocol" category for the selected serial bus.

See Section 10.2.8.2, "Settings for protocol measurements", on page 311.

14.2.8 SPI decode results

To enable the decoding, see Section 14.1.9.3, "Decoding protocol signals", on page 531.

For more information on decoding SPI, you can also refer to the video, available on the Rohde & Schwarz YouTube channel: Decoding SPI with MXO Series Oscilloscopes.

Decode results table

The "Decode results" table contains information about all decoded frames.

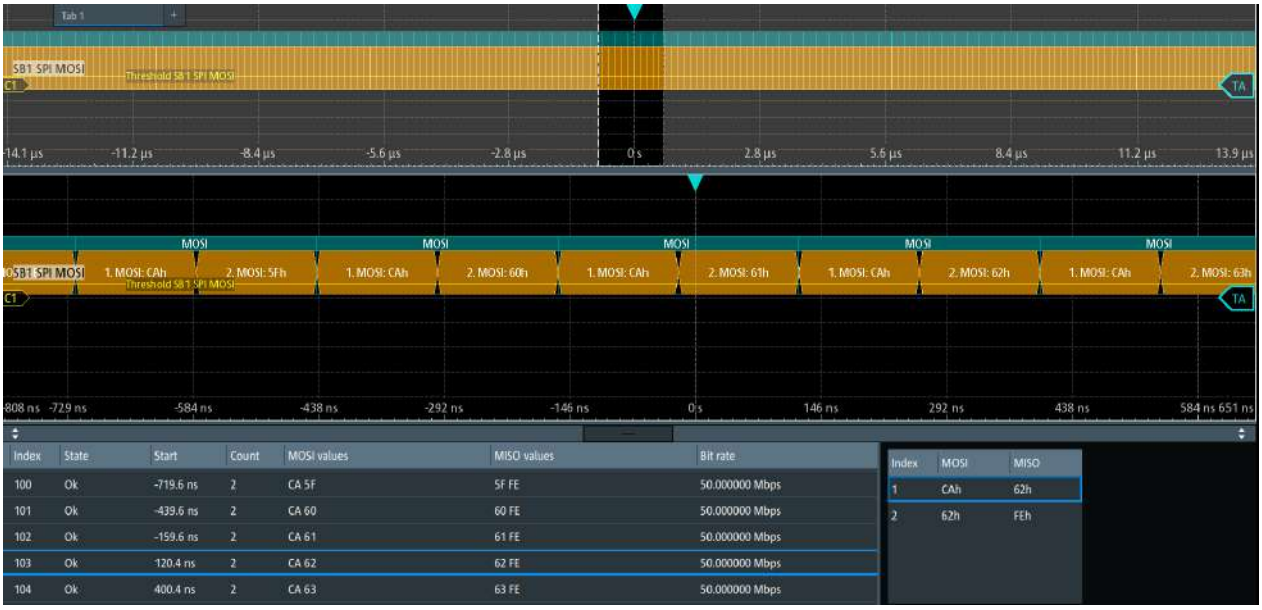

Figure 14-11: Decoded SPI signal

The decode results table contains information about all decoded frames.

Table 14-1: Content of the decode results table

Column	Description
Index	Index of the decoded frame
State	Overall state of the frame
Start	Times of frame start
Count	Number of words in the frame
MOSI values	Value of the MOSI data words. Select the data format in the "Display" tab.
MISO values	Value of the MISO data words. Select the data format in the "Display" tab.
Bit rate	Value of the bit rate

When you select a frame in the decode results table, its field content is shown in the details table to the right.

Table 14-2: Content of the frame details table

Column	Description
Index	Index of the field
MOSI	Values of the MOSI fields
MISO	Values of the MISO fields

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- SBUS<sb>:FORMat on page 1491

Remote commands

Remote commands to retrieve decode results are described in Section 18.18.2.6, "Decode results", on page 1524.

To query the MOSI and MISO values, use the remote command SBUS<sb>:SPI:FRAMe<fr>:DATA?.

You can also export the decode results. For details see Section 14.1.9.4, "Exporting decode results", on page 531.

Example SPI export file

```
Index,Start,Stop,State,Count,BitRate
1,-2.9e-05,-2.872e-05,'OK',2,50000000
2,-2.844e-05,-2.83e-05,'OK',1,50000000
3,-2.816e-05,-2.788e-05,'OK',2,50000000
4,-2.76e-05,-2.746e-05,'VOID',0,---

Details frame 1
Index,Start Time,Stop Time,MOSI Values,MISO Values
1,-2.9e-05,-2.886e-05,AFh,---
2,-2.886e-05,-2.872e-05,FEh,---

Details frame 2
Index,Start Time,Stop Time,MOSI Values,MISO Values
1,-2.844e-05,-2.83e-05,---,34h

Details frame 3
Index,Start Time,Stop Time,MOSI Values,MISO Values
1,-2.816e-05,-2.802e-05,CAh,F0h
2,-2.802e-05,-2.788e-05,05h,0Dh
```

14.3 QUAD-SPI bus (IC electronics, option R&S MXO5-K510)

QUAD-SPI also known as QSPI is a protocol that extends the standard SPI by using four data lanes instead of one. This protocol enables a faster data transfer.

Requirements

For performing QUAD-SPI decode measurements, you need the following:

- MXO 5 with 4 channels. The channels can be a combination of the following:
  - Analog channels (C1-C4)
  - Logic channels (D0-D15) (requires option R&S MXO5-B1)

- Option R&S MXO5-K510

- About the QUAD-SPI protocol....553
- QUAD-SPI configuration....553
- QUAD SPI filter....556
- QUAD-SPI format configuration....559
- QUAD SPI software trigger....563
- Measure....566
- QUAD-SPI decode results....566

14.3.1 About the QUAD-SPI protocol

Quad Serial Peripheral Interface is an extension of the standard Serial Peripheral Interface (SPI). It enhances the data transfer capabilities by utilizing four data lines instead of the single data line used in traditional SPI. This expansion significantly increases the data throughput, making it ideal for applications requiring rapid data exchange, such as memory devices, display controllers, and sensors.

Key features

Key features of QSPI are:

- **Increased data throughput**: By using four data lines (IO0, IO1, IO2, IO3), QSPI can achieve higher data transfer rates compared to standard SPI. This makes it suitable for high-speed applications.
- **Enhanced flexibility**: QSPI supports various modes of operation, including single, dual, and quad modes, allowing for flexible communication tailored to specific needs.
- **Memory mapping**: one of the standout features of QSPI is its ability to map external flash memory directly into the memory space of a microcontroller, enabling efficient and seamless data access.

Communication Lines

QSPI uses 6 primary lines:

- SCLK (serial clock): generates the clock signal
- CS (chip select): selects the device for communication
- IO0-IO3 (data lines): four lines for data transfer.

14.3.2 QUAD-SPI configuration

14.3.2.1 QUAD-SPI configuration settings

Access: "Menu" > "Apps" > "Protocol" tab > "QUAD-SPI" > "Setup".

Make sure that the tab of the correct serial bus is selected.

Protocol type
Selects the protocol type to be decoded.

Remote command:
SBUS<sb>:TYPE on page 1489

State
Enables the decoding of the selected bus. The signal icon of the bus appears on the signal bar.

Remote command:
SBUS<sb>[:STATe] on page 1489

CS, SCLK, IO n
Sets the input channel for the respective line:

- CS: chip select
- SCLK: clock line
- IO0, IO1, IO2, IO3, IO4: data lines

Remote command:
SBUS<sb>:QSPI:CSEL:SOURce on page 1530
SBUS<sb>:QSPI:IOONe:SOURce on page 1532
SBUS<sb>:QSPI:IOTHree:SOURce on page 1533
SBUS<sb>:QSPI:IOTWo:SOURce on page 1535
SBUS<sb>:QSPI:IOZero:SOURce on page 1537
SBUS<sb>:QSPI:SCLK:SOURce on page 1538

SCLK SDR Polarity
Selects if the transmitted signal for the respective line is rising or falling.

Remote command:
SBUS<sb>:QSPI:SCLK:POLarity on page 1537

Polarity: CS, IO<n>
Selects if the transmitted signal for the respective line is active high (high = 1) or active low (low = 1).

Remote command:
SBUS<sb>:QSPI:CSEL:POLarity on page 1530
SBUS<sb>:QSPI:IOONe:POLarity on page 1531
SBUS<sb>:QSPI:IOTHree:POLarity on page 1533
SBUS<sb>:QSPI:IOTWo:POLarity on page 1534
SBUS<sb>:QSPI:IOZero:POLarity on page 1536

Instruction
Selects the instruction mode that defines how many lanes are used to transmit data.

"Single" Only one data line is used, IO0.

"Dual" Two lines are used for data transmission IO0 and IO1. This mode doubles the data rate compared to a single mode, as it can send or receive 2 bits per clock cycle.

"Quad" Four lines are used for data transmission IO0, IO1, IO2 and IO3. This mode provides the highest data transfer rate. This mode quadruples the data transfer rate compared to a single mode, as it can send or receive 4 bits per clock cycle.

Remote command:
`SBUS<sb>:QSPI:INSTruction` on page 1531

14.3.2.2 Threshold settings

Access: "Menu" > "Apps" > "Protocol" tab > "QUAD-SPI" > "Thresholds".

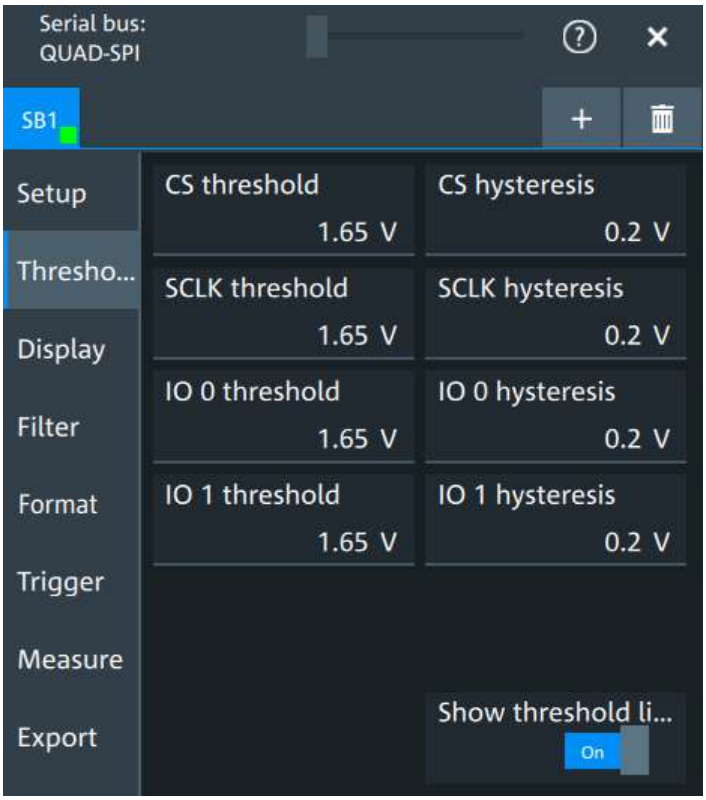

CS/SCLK/IO<n> threshold
Set the threshold for each signal channel. Enter the value directly in the fields.

Remote command:
`SBUS<sb>:QSPI:CSEL:THReshold` on page 1530
`SBUS<sb>:QSPI:IOONe:THReshold` on page 1532
`SBUS<sb>:QSPI:IOTWo:THReshold` on page 1535
`SBUS<sb>:QSPI:IOTHree:THReshold` on page 1534
`SBUS<sb>:QSPI:IOZero:THReshold` on page 1537
`SBUS<sb>:QSPI:SCLK:THReshold` on page 1538

CS/SCLK/IO<n> hysteresis
Set the hysteresis for each signal channel. Enter the value directly in the fields.

Remote command:
SBUS<sb>:QSPI:CSEL:HYSTeresis on page 1529
SBUS<sb>:QSPI:IOONe:HYSTeresis on page 1531
SBUS<sb>:QSPI:IOTWo:HYSTeresis on page 1534
SBUS<sb>:QSPI:IOTHree:HYSTeresis on page 1532
SBUS<sb>:QSPI:IOZero:HYSTeresis on page 1536
SBUS<sb>:QSPI:SCLK:HYSTeresis on page 1537

Show threshold lines
If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also Show threshold lines.

Remote command:
SBUS<sb>:THReshold on page 1492

14.3.2.3 Display settings

For details about the display settings, see Section 14.1.3.1, "Display settings", on page 511.

Decode layer
Selects the decode layer.

Decoding is performed in several steps, and the results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display.

"Off"	Disables the display of the decode layer.
"Edges"	Enables the display of all edges for each lane.
"Bits"	Enables the display of all bits for each lane.
"Merged bits"	Enables the display of the bits merged across multiple lanes.
"Words"	Enables the display of all words.

14.3.3 QUAD SPI filter

Access: "Menu" > "Apps" > "Protocol" tab > "QUAD-SPI" > "Filter" tab

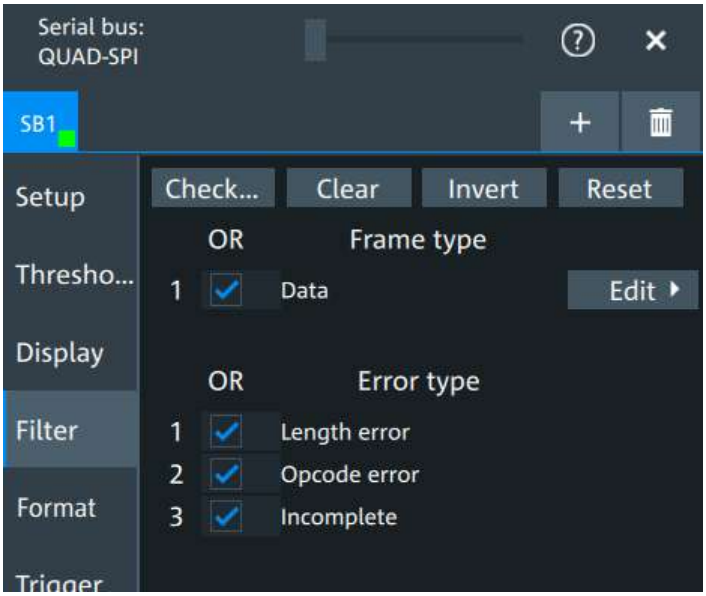

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all" Enables the filter for all available frames and error types.

"Clear" Disables the filter for all available frames and error types.

"Invert" Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types.

Remote command:
`SBUS<sb>:QSPI:FILTer:CHKall` on page 1539
`SBUS<sb>:QSPI:FILTer:CLR` on page 1539
`SBUS<sb>:QSPI:FILTer:INVert` on page 1539
`SBUS<sb>:QSPI:FILTer:RST` on page 1540

Frame type
Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.

For selected frame types, you can also specify conditions for the value of the fields in the "Edit" dialog.

The available frame types are the opcodes and an "Undescribed", to support custom coding.

If you have created own opcodes, they also appear in this list.

See Section 14.1.5, "Format", on page 516.

Edit
Opens a dialog to define the details of the selected frame.

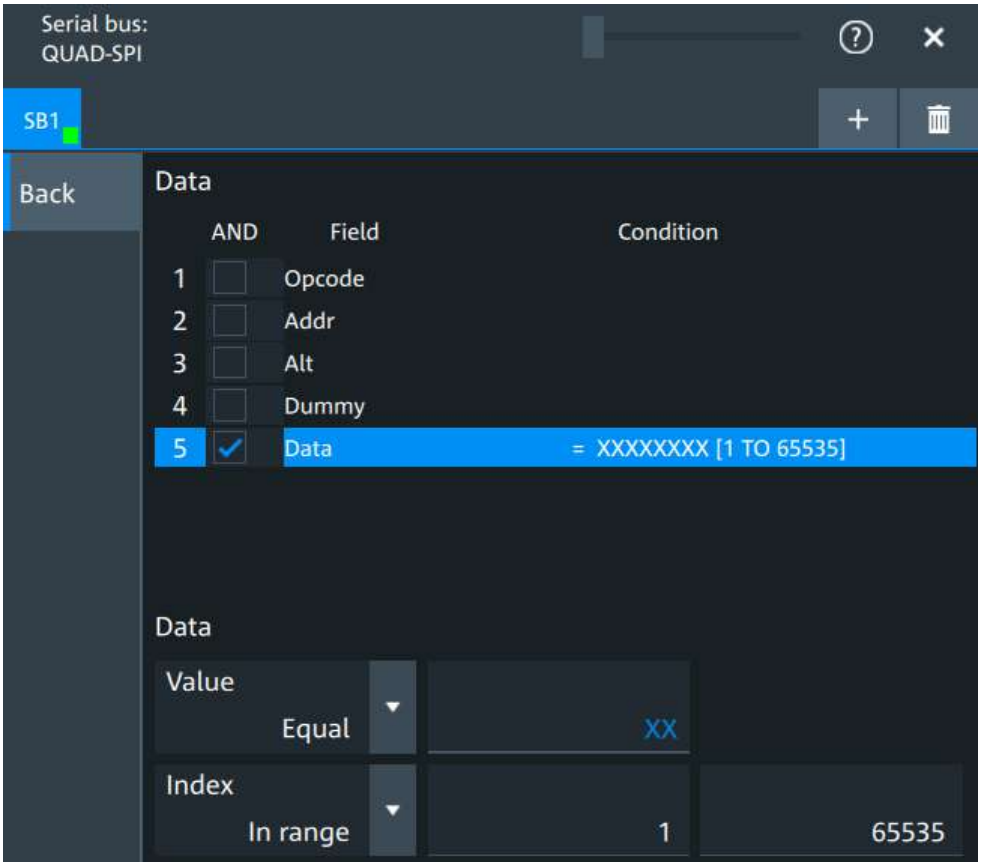

"Field" Enables the field type that you want to filter on for the selected frame.

Depending on the frame type, the available fields are:

- "Opcode"
- "Addr"
- "Alt"
- "Dummy"
- "Data"

Remote command:
`SBUS<sb>:QSPI:FILTer:FIENable` on page 1543
`SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:ENABle` on page 1543

"Condition" Displays the value condition for the selected field.

Remote command:
`SBUS<sb>:QSPI:FILTer:BIT` on page 1540
`SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:BIT` on page 1540

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
SBUS<sb>:QSPI:FILTer:DMAX on page 1540
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:DMAX on page 1540
SBUS<sb>:QSPI:FILTer:DMIN on page 1541
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:DMIN on page 1541
SBUS<sb>:QSPI:FILTer:DOPerator on page 1541
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:DOPerator on page 1541

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
SBUS<sb>:QSPI:FILTer:IMAX on page 1541
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:IMAX on page 1541
SBUS<sb>:QSPI:FILTer:IMIN on page 1542
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:IMIN on page 1542
SBUS<sb>:QSPI:FILTer:IOPerator on page 1542
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:IOPerator on page 1542

Error type
Enables filtering on the selected error type.

Available error types are "Length error", "Opcode error", "Incomplete".

Remote command:
SBUS<sb>:QSPI:FILTer:ERENable on page 1543
SBUS<sb>:QSPI:FILTer:ERRor<n>:ENABle on page 1543

14.3.4 QUAD-SPI format configuration

Access: "Menu" > "Apps" > "Protocol" tab > "QUAD-SPI" > "Format".

See Section 14.1.5, "Format", on page 516.

Add
Adds a new item to the opcode list.

Remote command:
SBUS<sb>:QSPI:OPCode:APPend on page 1544

Delete
Deletes the currently selected opcode from the list.

Remote command:
SBUS<sb>:QSPI:OPCode:DELete on page 1544

Delete all
Deletes all defined opcodes from the list.

Remote command:
SBUS<sb>:QSPI:OPCode:DALL on page 1544

Open, Save as
Opens a dialog box where you can select a filename and a path for the export results file.

Remote command:
SBUS<sb>:QSPI:LDOPcode on page 1545
SBUS<sb>:QSPI:SVOP on page 1548

Preset
Resets the opcode fields to the predefined values.

Remote command:
SBUS<sb>:QSPI:OPCode:RESet on page 1545

Opcode settings

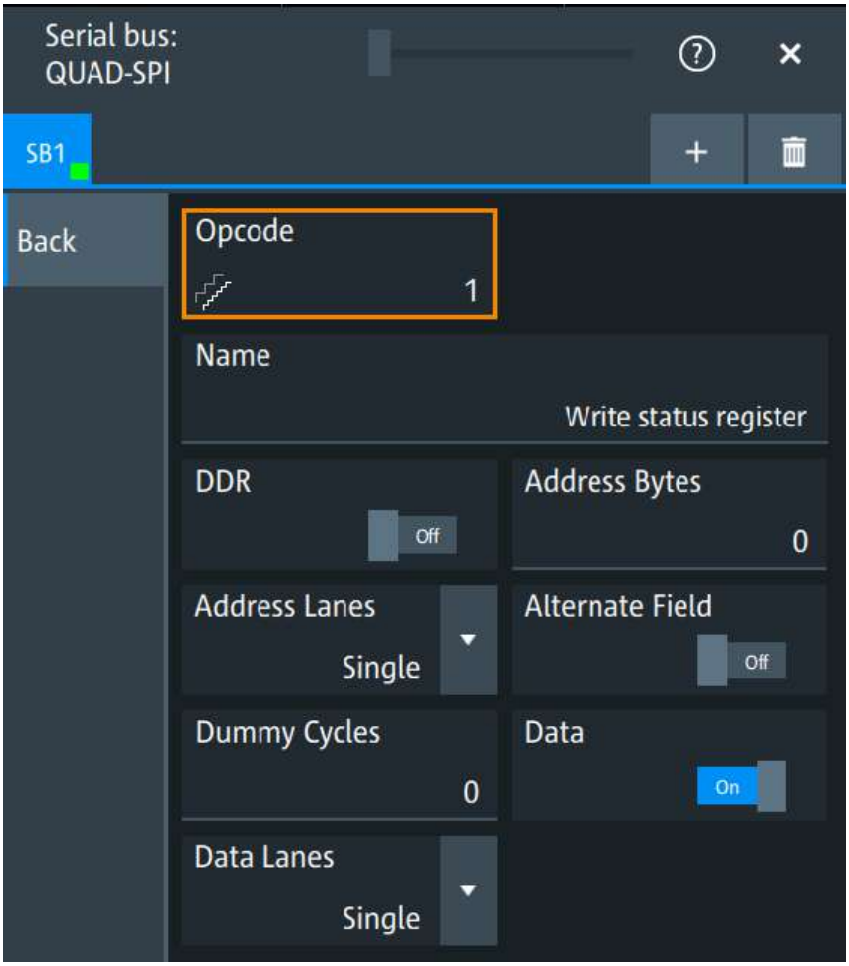

You can define the following settings for each opcode separately:

Opcode ← Opcode settings
Sets the opcode value.

Remote command:
`SBUS<sb>:QSPI:OPCode:ITEM<n>:CODE` on page 1546

Name ← Opcode settings
Sets the name for the opcode.

Remote command:
`SBUS<sb>:QSPI:OPCode:ITEM<n>:NAME` on page 1548

DDR ← Opcode settings
If enabled, the data is transferred on both the rising and falling edges of the clock signal. This method effectively doubles the data transfer rate compared to a single data rate (SDR), which transfers data only on one clock edge.

Remote command:
`SBUS<sb>:QSPI:OPCode:ITEM<n>:DDR` on page 1547

Address Bytes ← Opcode settings
Sets the address byte. It specifies the location in the flash memory where the operation (e.g., read, write) is performed.

Remote command:
SBUS<sb>:QSPI:OPCode:ITEM<n>:ADBYtes on page 1545

Address Lanes ← Opcode settings
Selects how many lines or lanes are used to send the address bytes to the flash memory.

"Single" Address is sent over one serial line.

"Dual" Address is sent over two lines.

"Quad" Address is sent over four lines.

Remote command:
SBUS<sb>:QSPI:OPCode:ITEM<n>:ADLanes on page 1546

Alternative Field ← Opcode settings
Enable, if an "Alt" field is available. The alternative field can be implemented according to the preferences of the manufacturer of the device under test, for example a flash memory device.

Remote command:
SBUS<sb>:QSPI:OPCode:ITEM<n>:ALT on page 1546

Dummy Cycles ← Opcode settings
Sets the number of dummy cycles. Dummy cycles are clock cycles inserted after the address or other command sequences but before data transfer begins. These cycles allow the flash memory device additional time to perform internal operations or latch onto the correct data to ensure accurate read or write operations.

Remote command:
SBUS<sb>:QSPI:OPCode:ITEM<n>:DMCYcles on page 1547

Data ← Opcode settings
Enable, if data is being transferred in the opcode operation.

Remote command:
SBUS<sb>:QSPI:OPCode:ITEM<n>:DATA on page 1547

Data Lanes ← Opcode settings
Selects how many lanes are used for the data transfer.

The data lanes refer to the physical connections through which data is transmitted between the main (typically a microcontroller) and the secondary (typically a flash memory device).

"Single" Data is sent over one serial line.

"Dual" Data is sent over two lines.

"Quad" Data is sent over four lines.

Remote command:
SBUS<sb>:QSPI:OPCode:ITEM<n>:DTLanes on page 1548

14.3.5 QUAD SPI software trigger

14.3.5.1 Setup A trigger

Before setting up the software trigger for the protocols, a trigger A event needs to be set up.

14.3.5.2 Software trigger settings

Access: "Menu" > "Apps" > "Protocol" tab > "QUAD-SPI" > "Trigger" tab > "Setup Software Trigger"

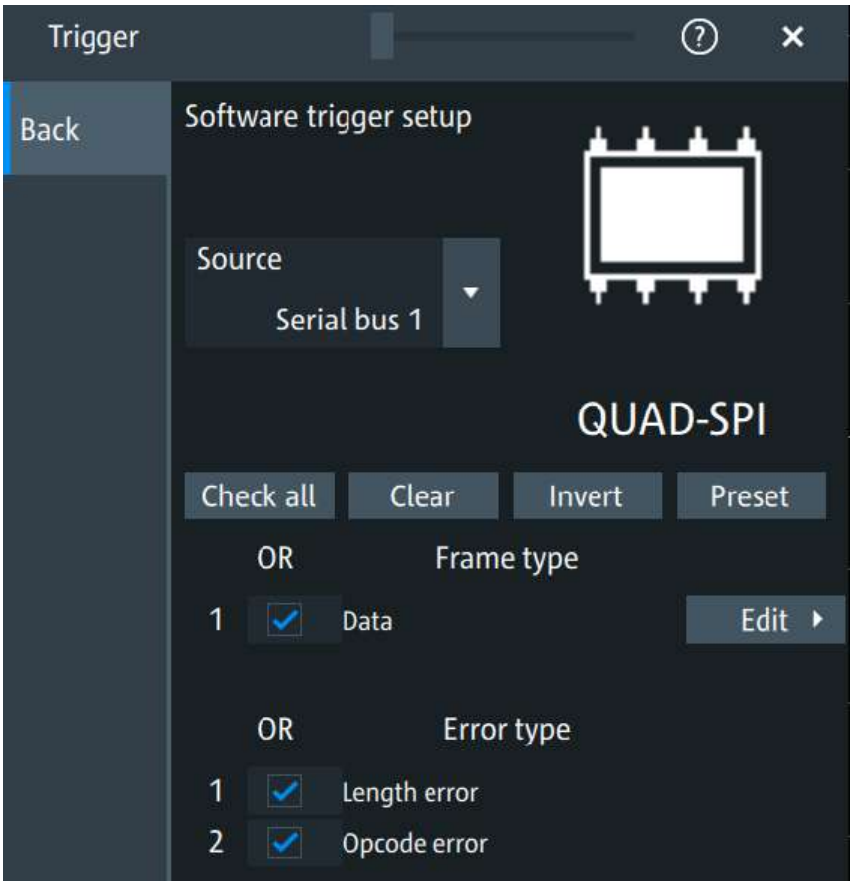

In the "Software Trigger" tab, you can define the settings to trigger on the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to trigger on.

"Check all" Enables the software trigger for all available frames and error types.

"Clear" Disables the software trigger for all available frames and error types.

"Invert" Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types for the software trigger.

Remote command:
`TRIGger:SBSW:QSPI:CHKall` on page 1549
`TRIGger:SBSW:QSPI:CLR` on page 1550
`TRIGger:SBSW:QSPI:INVert` on page 1550
`TRIGger:SBSW:QSPI:RST` on page 1550

Frame type
Selects the frame type that you want to trigger on. You can trigger on all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

The available frame is "Data".

Remote command:
`TRIGger:SBSW:QSPI:FRENable` on page 1550
`TRIGger:SBSW:QSPI:FRAMe<fr>:ENABle` on page 1550

Edit
Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

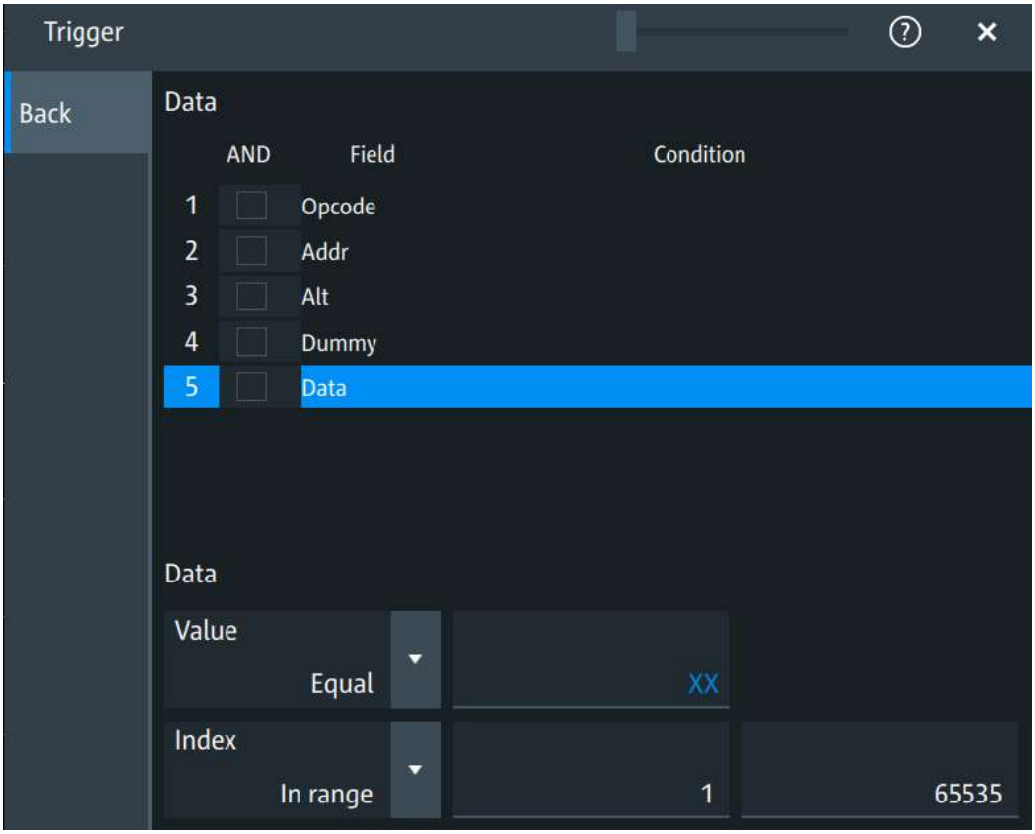

"Field" Enables the field type that you want to trigger on for the selected frame.
The following fields are available: "Opcode", "Addr", "Alt", "Dummy" and "Data".

Remote command:
`TRIGger:SBSW:QSPI:FIENable` on page 1552
`TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:ENABle` on page 1552

"Condition" Displays the value condition for the selected field.

Remote command:
`TRIGger:SBSW:QSPI:BIT` on page 1551
`TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:BIT` on page 1551

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
`TRIGger:SBSW:QSPI:DMAX` on page 1551
`TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:DMAX` on page 1551
`TRIGger:SBSW:QSPI:DMIN` on page 1551
`TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:DMIN` on page 1551
`TRIGger:SBSW:QSPI:DOPerator` on page 1552
`TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:DOPerator` on page 1552

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
TRIGger:SBSW:QSPI:IMAX on page 1552
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:IMAX on page 1552
TRIGger:SBSW:QSPI:IMIN on page 1553
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:IMIN on page 1553
TRIGger:SBSW:QSPI:IOPerator on page 1553
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:IOPerator on page 1553

Error type
Enables triggering on the selected error type.

The following error types are available: "Length error" and "Opcode error".

Remote command:
TRIGger:SBSW:QSPI:ERENable on page 1554
TRIGger:SBSW:QSPI:ERRor<m>:ENABle on page 1554

14.3.6 Measure

The "Setup Measurement" button opens the dialog for automatic measurements in the "Protocol" category for the selected serial bus.

See Section 10.2.8.2, "Settings for protocol measurements", on page 311.

14.3.7 QUAD-SPI decode results

To enable the decoding, see Section 14.1.9.3, "Decoding protocol signals", on page 531.

Decode results table

The "Decode results" table contains information about all decoded frames.

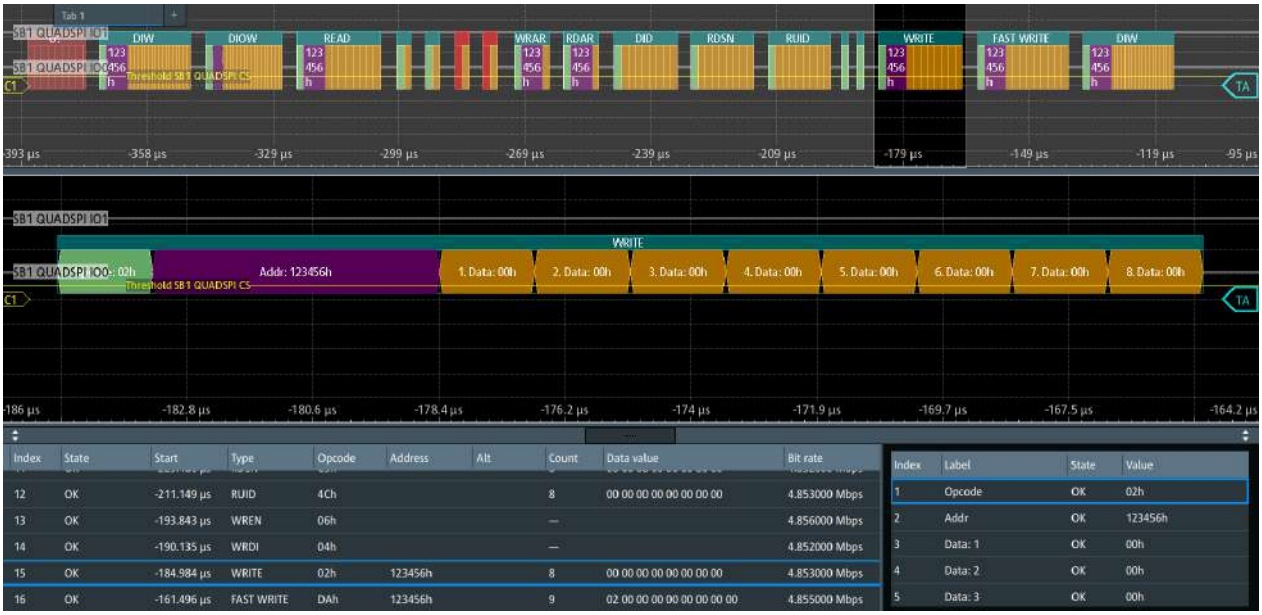

Figure 14-12: Decoded QUAD-SPI signal

The decode results table contains information about all decoded frames.

Table 14-3: Content of the decode results table

Column	Description
Index	Index of the decoded frame
State	Overall state of the frame
Start	Times of frame start
Opcode	Operation code value
Address	Address value
Alt	Value of the alternate byte
Count	Number of words in the frame
Data value	Value of the data frame. Select the data format in the "Display" tab.
Bit rate	Value of the bit rate

When you select a frame in the decode results table, its field content is shown in the details table to the right.

Table 14-4: Content of the frame details table

Column	Description
Index	Number of the decoded field
Label	Name of the field
State	State of the field
Value	Value of the field

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 1491

Remote commands

Remote commands to retrieve decode results are described in Section 18.18.3.5, "Decode results", on page 1555.

You can also export the decode results. For details see Section 14.1.9.4, "Exporting decode results", on page 531.

Example QUAD-SPI export file

```
Index,Start,Stop,State,Opcode,Address,Alt,Count,Bit rate
1,-7.04e-05,-5.28e-05,'OK',0Ah,12345678h,0Ch,4,5000000
2,-5.28e-05,-3.52e-05,'OK',0Ah,12345678h,0Ch,4,5000000
3,-3.52e-05,-1.76e-05,'OK',0Ah,12345678h,0Ch,4,5000000
4,-1.76e-05,0,'OK',0Ah,12345678h,0Ch,4,5000000

Details frame 1
Index,Data
1,52h
2,53h
3,54h
4,55h

Details frame 2
Index,Data
1,56h
2,57h
3,58h
4,59h
```

14.4 OCTO-SPI bus (IC electronics, option R&S MXO5-K510)

Requirements

For performing OCTO-SPI decode measurements, you need the following:

- MXO 5 with 8 channels. The channels can be a combination of the following:
  - Analog channels (C1-C8)
  - Logic channels (D0-D15) (requires option R&S MXO5-B1)

- Option R&S MXO5-K510

- About the OCTO-SPI protocol....569
- OCTO-SPI configuration....570
- OCTO SPI filter....574
- OCTO-SPI format configuration....576
- OCTO SPI software trigger....580
- Measure....582
- OCTO-SPI decode results....583

14.4.1 About the OCTO-SPI protocol

Octal Serial Peripheral Interface (Octo-SPI or OSPI) is an extension of the classic Serial Peripheral Interface (SPI) protocol that employs eight bidirectional data lines (IO0-IO7) instead of the single MOSI/MISO pair used in conventional SPI. By transferring up to 8 bits per clock edge or 16 bits when dual-data-rate (DDR) is enabled, OSPI can deliver throughput that is roughly twice that of QUAD-SPI while still using the same basic command-address-data transaction format.

Key features

Key features of OSPI are:

- **Very high data throughput**: Up to several gigabits per second, depending on clock frequency (often 100 to 200 MHz) and DDR operation.
- **Enhanced Flexibility**: Devices can be addressed in single-, dual-, quad-, or octal-mode, allowing to start with a simple 1-bit interface and later switch to 8-bit for maximum speed.
- **Memory Mapping**: external OSPI flash can be mapped directly into the microcontroller's address space, enabling execute-in-place (XIP) code and fast random reads without CPU-managed byte-wise transfers.
- **Extended address space**: OSPI controllers typically support 24-, 32-, or even 40-bit address fields, making it suitable for very large flash devices.
- **Optional dual-data-rate (DDR)**: Sampling on both clock edges doubles the effective bit rate without increasing the pin count.

Communication Lines

OSPI uses up to 11 primary lines:

- CK (clock line): Generates the clock signal.
- CS (chip select line): Selects the device for communication.
- IO0-IO7 (data lines): Eight bidirectional I/O pins that carry command, address, and data bits.
- DS (data strobe): Optional line that marks the valid data edge when DDR is used.

14.4.2 OCTO-SPI configuration

14.4.2.1 OCTO-SPI configuration settings

Access: "Menu" > "Apps" > "Protocol" tab > "OCTO-SPI" > "Setup".

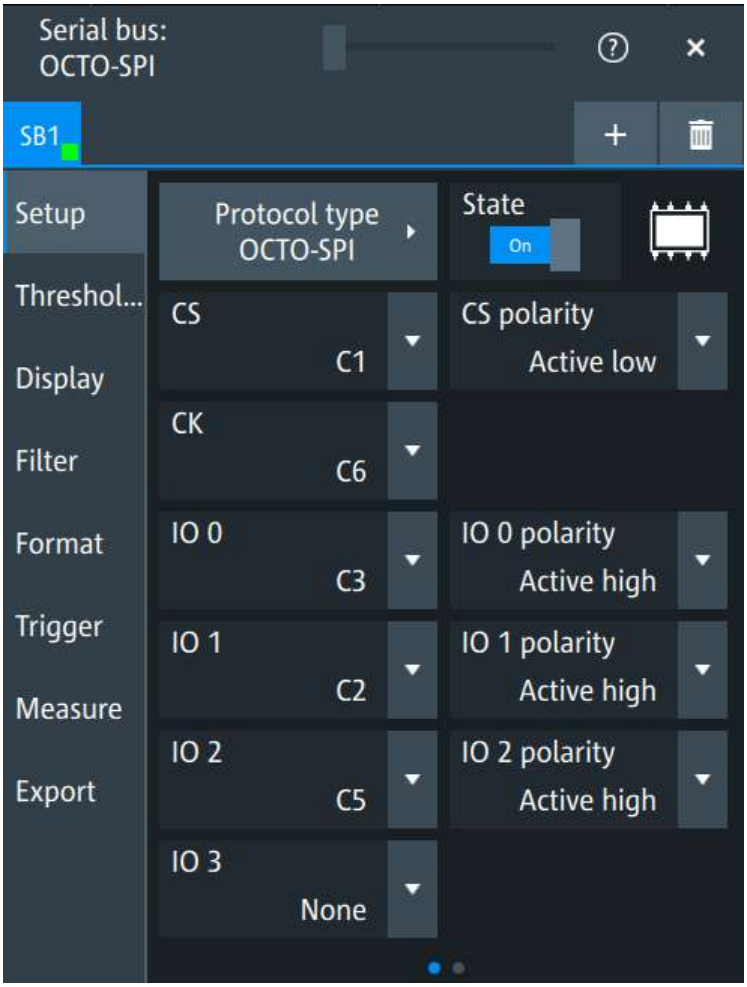

Make sure that the tab of the correct serial bus is selected.

Protocol type
Selects the protocol type to be decoded.

Remote command:
`SBUS<sb>:TYPE` on page 1489

State
Enables the decoding of the selected bus. The signal icon of the bus appears on the signal bar.

Remote command:
SBUS<sb>[:STATe] on page 1489

CS, SCLK, IO n
Sets the input channel for the respective line:

- CS: chip select
- CK: clock line
- IO0-IO7: data lines
- DS: data strobe line (optional, for DDR)

Remote command:
SBUS<sb>:OSPI:CSEL:SOURce on page 1563
SBUS<sb>:OSPI:CK:SOURce on page 1564
SBUS<sb>:OSPI:IOZero:SOURce on page 1566
SBUS<sb>:OSPI:IOONe:SOURce on page 1566
SBUS<sb>:OSPI:IOTWo:SOURce on page 1566
SBUS<sb>:OSPI:IOTHree:SOURce on page 1566
SBUS<sb>:OSPI:IOFR:SOURce on page 1566
SBUS<sb>:OSPI:IOFV:SOURce on page 1566
SBUS<sb>:OSPI:IOSX:SOURce on page 1566
SBUS<sb>:OSPI:IOSV:SOURce on page 1566
SBUS<sb>:OSPI:DS:SOURce on page 1567

Polarity: CS, IO<n>
Selects if the transmitted signal for the respective line is active high (high = 1) or active low (low = 1).

Remote command:
SBUS<sb>:OSPI:CSEL:POLarity on page 1562
SBUS<sb>:OSPI:IOZero:POLarity on page 1565
SBUS<sb>:OSPI:IOONe:POLarity on page 1565
SBUS<sb>:OSPI:IOTWo:POLarity on page 1565
SBUS<sb>:OSPI:IOTHree:POLarity on page 1565
SBUS<sb>:OSPI:IOFR:POLarity on page 1565
SBUS<sb>:OSPI:IOFV:POLarity on page 1565
SBUS<sb>:OSPI:IOSX:POLarity on page 1565
SBUS<sb>:OSPI:IOSV:POLarity on page 1565

Instruction
Selects the instruction mode that defines how many lines are used to transmit data.

"1S", "2S", "4S", "8S"	Defines the number of lines in single data rate mode, i.e. 8S = “8-line-Single-Data-Rate” (octal-SDR)
"1D", "2D", "4D", "8D"	Defines the number of lines in dual data rate mode, i.e. 4D = “4-line-Dual-Data-Rate” (quad-DDR)

Remote command:
SBUS<sb>:OSPI:MODE on page 1563

14.4.2.2 Threshold settings

Access: "Menu" > "Apps" > "Protocol" tab > "OCTO-SPI" > "Thresholds".

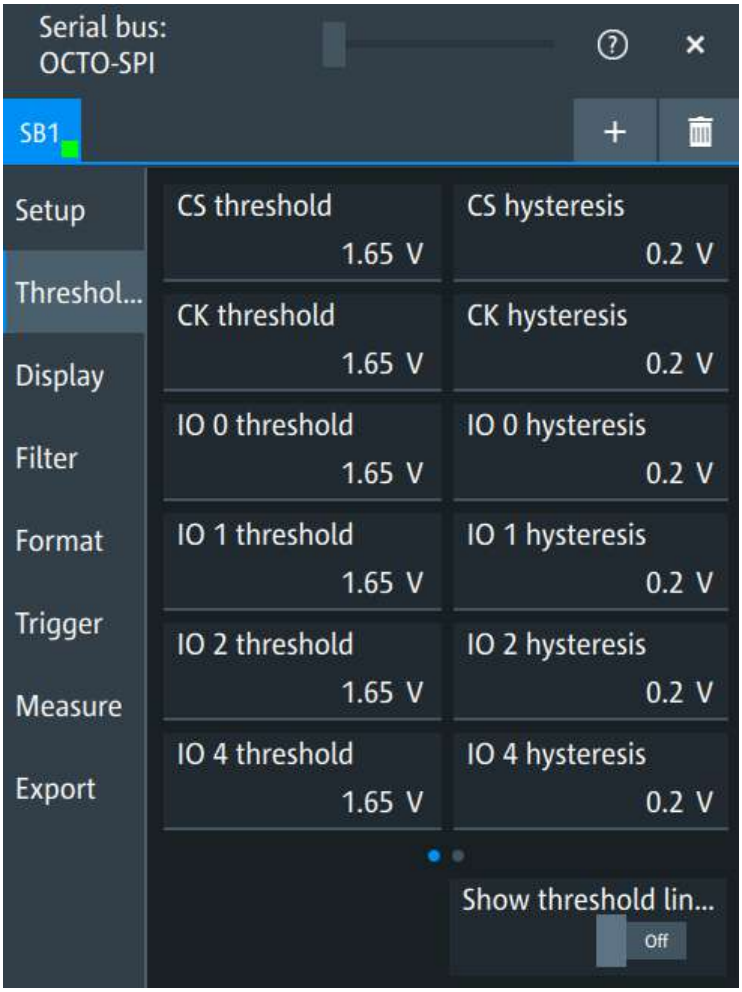

CS/CK/IO<n>/DS threshold
Set the threshold for each signal channel. Enter the value directly in the fields.

Remote command:
`SBUS<sb>:OSPI:CSEL:THReshold` on page 1563
`SBUS<sb>:OSPI:CK:THReshold` on page 1564
`SBUS<sb>:OSPI:IOZero:THReshold` on page 1566
`SBUS<sb>:OSPI:IOONe:THReshold` on page 1566
`SBUS<sb>:OSPI:IOTWo:THReshold` on page 1566
`SBUS<sb>:OSPI:IOTHree:THReshold` on page 1566
`SBUS<sb>:OSPI:IOFR:THReshold` on page 1566
`SBUS<sb>:OSPI:IOFV:THReshold` on page 1566
`SBUS<sb>:OSPI:IOSX:THReshold` on page 1566
`SBUS<sb>:OSPI:IOSV:THReshold` on page 1566
`SBUS<sb>:OSPI:DS:THReshold` on page 1567

CS/CK/IO<n>/DS hysteresis
Set the hysteresis for each signal channel. Enter the value directly in the fields.

Remote command:
SBUS<sb>:OSPI:CSEL:HYSTeresis on page 1562
SBUS<sb>:OSPI:CK:HYSTeresis on page 1563
SBUS<sb>:OSPI:IOZero:HYSTeresis on page 1564
SBUS<sb>:OSPI:IOONe:HYSTeresis on page 1564
SBUS<sb>:OSPI:IOTWo:HYSTeresis on page 1564
SBUS<sb>:OSPI:IOTHree:HYSTeresis on page 1564
SBUS<sb>:OSPI:IOFR:HYSTeresis on page 1564
SBUS<sb>:OSPI:IOFV:HYSTeresis on page 1564
SBUS<sb>:OSPI:IOSX:HYSTeresis on page 1564
SBUS<sb>:OSPI:IOSV:HYSTeresis on page 1564
SBUS<sb>:OSPI:DS:HYSTeresis on page 1567

Show threshold lines
If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also Show threshold lines.

Remote command:
SBUS<sb>:THReshold on page 1492

14.4.2.3 Display settings

For details about the display settings, see Section 14.1.3.1, "Display settings", on page 511.

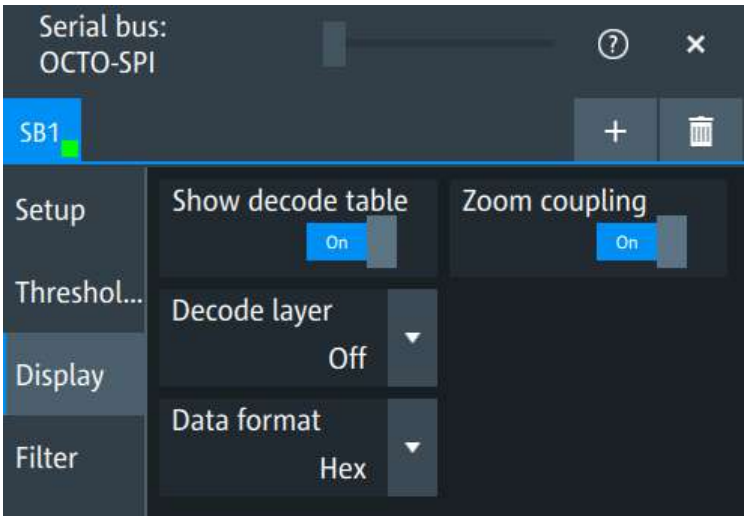

Decode layer
Selects the decode layer.

Decoding is performed in several steps, and the results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display.

"Off"	Disables the display of the decode layer.
"Edges"	Enables the display of all edges for each line.
"Bits"	Enables the display of all bits for each line.
"Merged bits"	Enables the display of the bits merged across multiple lines.
"Words"	Enables the display of all words.

14.4.3 OCTO SPI filter

Access: "Menu" > "Apps" > "Protocol" tab > "OCTO-SPI" > "Filter" tab

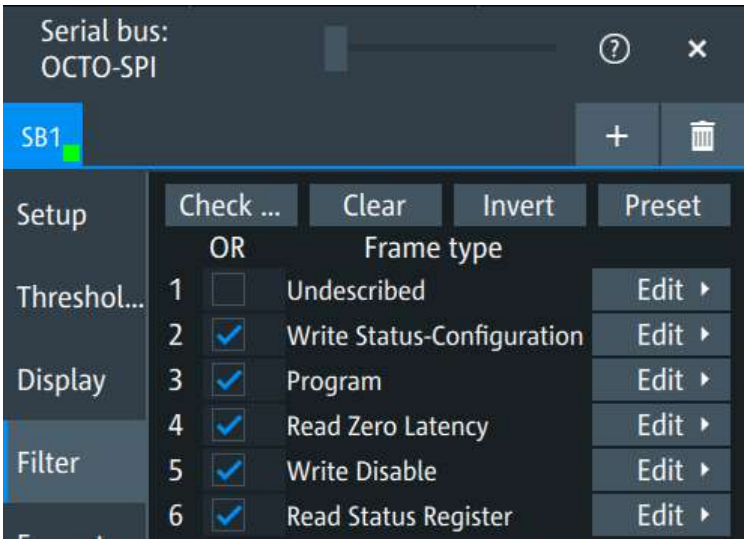

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all"	Enables the filter for all available frames and error types.
"Clear"	Disables the filter for all available frames and error types.
"Invert"	Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.
"Preset"	Presets the state of the selected frames and error types.

Remote command:
`SBUS<sb>:OSPI:FILTer:CHKall` on page 1568
`SBUS<sb>:OSPI:FILTer:CLR` on page 1569
`SBUS<sb>:OSPI:FILTer:INVert` on page 1569
`SBUS<sb>:OSPI:FILTer:RST` on page 1569

Frame type
Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.

For selected frame types, you can also specify conditions for the value of the fields in the "Edit" dialog.

The available frame types are the opcodes and an "Undescribed", to support custom coding.

If you have created own opcodes, they also appear in this list.

See Section 14.1.5, "Format", on page 516.

Edit
Opens a dialog to define the details of the selected frame.

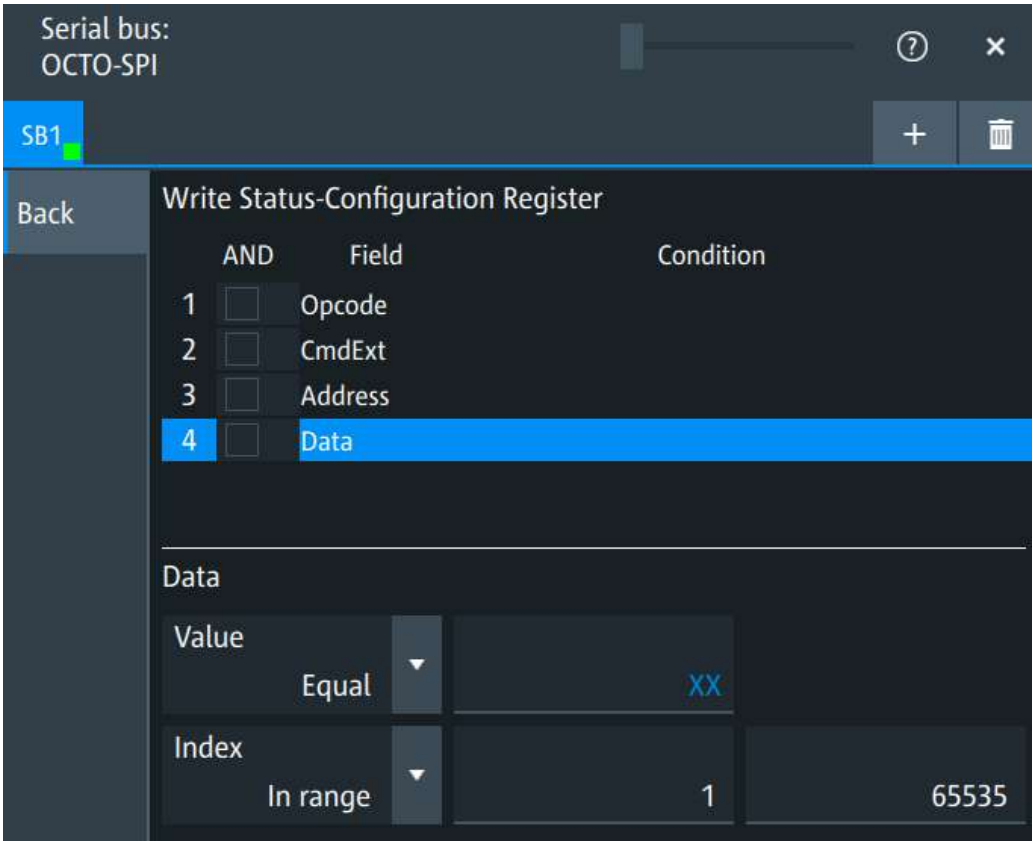

"Field" Enables the field type that you want to filter on for the selected frame.

Depending on the frame type, the available fields are:

- "Opcode"
- "Addr"
- "CmdExt"
- "Data"

Remote command:
`SBUS<sb>:OSPI:FILTer:FIENable` on page 1572
`SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:ENABle` on page 1572

"Condition" Displays the value condition for the selected field.

Remote command:
SBUS<sb>:OSPI:FILTer:BIT on page 1569
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:BIT on page 1569

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
SBUS<sb>:OSPI:FILTer:DMAX on page 1570
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:DMAX on page 1570
SBUS<sb>:OSPI:FILTer:DMIN on page 1570
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:DMIN on page 1570
SBUS<sb>:OSPI:FILTer:DOPerator on page 1570
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:DOPerator on page 1570

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
SBUS<sb>:OSPI:FILTer:IMAX on page 1571
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:IMAX on page 1571
SBUS<sb>:OSPI:FILTer:IMIN on page 1571
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:IMIN on page 1571
SBUS<sb>:OSPI:FILTer:IOPerator on page 1572
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:IOPerator on page 1572

Error type
Enables filtering on the selected error type.

Available error types are "Length error", "Opcode error", "Incomplete".

Remote command:
SBUS<sb>:OSPI:FILTer:ERENable on page 1572
SBUS<sb>:OSPI:FILTer:ERRor<n>:ENABle on page 1572

14.4.4 OCTO-SPI format configuration

Access: "Menu" > "Apps" > "Protocol" tab > "OCTO-SPI" > "Format".

See Section 14.1.5, "Format", on page 516.

Add
Adds a new item to the opcode list.

Remote command:
SBUS<sb>:OSPI:OPCode:APPend on page 1573

Delete
Deletes the currently selected opcode from the list.

Remote command:
SBUS<sb>:OSPI:OPCode:DELete on page 1574

Delete all
Deletes all defined opcodes from the list.

Remote command:
SBUS<sb>:OSPI:OPCode:DALL on page 1574

Open, Save as
Opens a dialog box where you can select a filename and a path for the export results file.

Remote command:
SBUS<sb>:OSPI:LDOPcode on page 1574
SBUS<sb>:OSPI:SVOP on page 1575

Preset
Resets the opcode fields to the predefined values.

Remote command:
SBUS<sb>:OSPI:OPCode:RESet on page 1574

Opcode settings

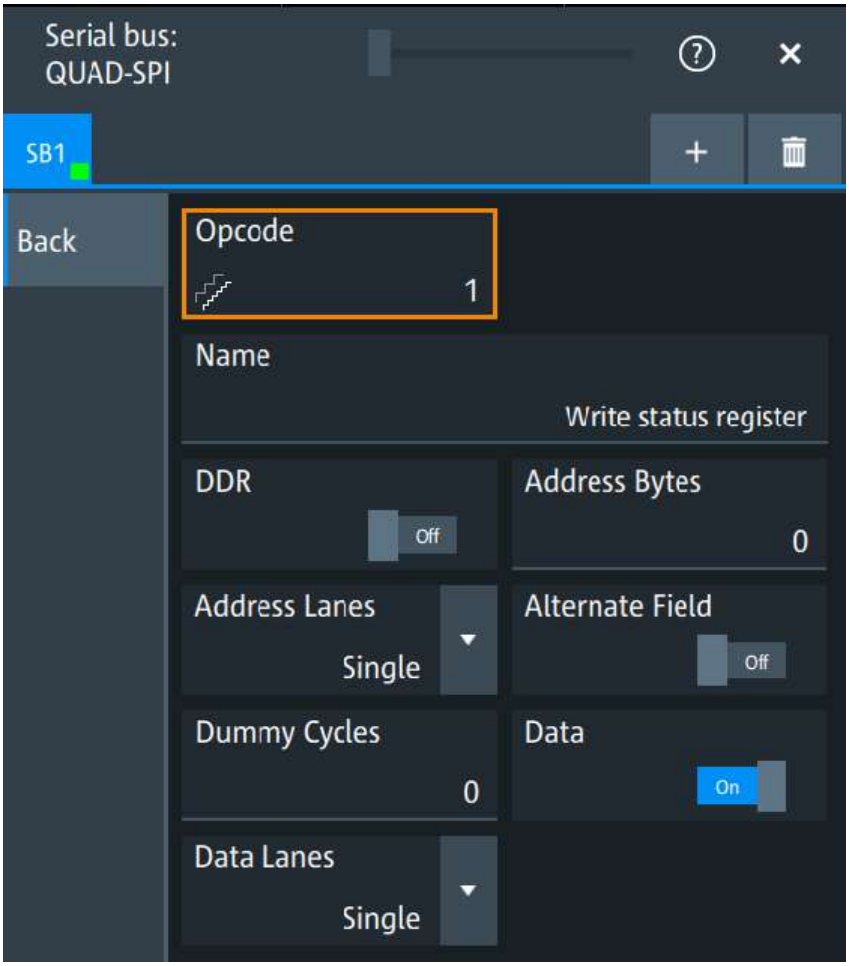

You can define the following settings for each opcode separately:

Command ← Opcode settings
Sets the opcode value.

Remote command:
`SBUS<sb>:OSPI:OPCode:ITEM<n>:CODE` on page 1575

Name ← Opcode settings
Sets the name for the opcode.

Remote command:
`SBUS<sb>:OSPI:OPCode:ITEM<n>:NAME` on page 1575

Command extension ← Opcode settings
If enabled, an extra extension byte is sent immediately after the command opcode.

Remote command:
`SBUS<sb>:OSPI:OPCode:ITEM<n>:CMMode` on page 1576

Cmd. ext.mode ← Opcode settings
Selects how many lines are used for sending the command extension byte.

"1S", "2S", "4S", "8S" Number of lines in single data rate mode, i.e. 8S = “8-line-Single-Data-Rate” (octal-SDR)

"1D", "2D", "4D", "8D" Number of lines in dual data rate mode, i.e. 4D = “4-line-Dual-Data-Rate” (quad-DDR)

Remote command:
`SBUS<sb>:OSPI:OPCode:ITEM<n>:CMEXtension` on page 1576

Address Bytes ← Opcode settings
Sets the address byte. It specifies the location in the flash memory where the operation (e.g., read, write) is performed.

Remote command:
`SBUS<sb>:OSPI:OPCode:ITEM<n>:ADBYtes` on page 1576

Address mode ← Opcode settings
Selects how many lines are used to send the address bytes to the flash memory.

"1S", "2S", "4S", "8S" Number of lines in single data rate mode, i.e. 8S = “8-line-Single-Data-Rate” (octal-SDR)

"1D", "2D", "4D", "8D" Number of lines in dual data rate mode, i.e. 4D = “4-line-Dual-Data-Rate” (quad-DDR)

Remote command:
`SBUS<sb>:OSPI:OPCode:ITEM<n>:ADMode` on page 1577

Latency Cycles ← Opcode settings
Sets the number of latency cycles. Latency cycles are clock cycles inserted after the address or other command sequences but before data transfer begins. These cycles allow the flash memory device additional time to perform internal operations or latch onto the correct data to ensure accurate read or write operations.

Remote command:
`SBUS<sb>:OSPI:OPCode:ITEM<n>:LACYcles` on page 1577

Data type ← Opcode settings
Determines the direction of the data flow for the payload after the command and address are sent.

"Read data" Controller is requesting information from the device.

"Write data" Controller is sending information to the device.

"No data" Controller sends a command and sometimes an address, but no actual payload is transferred.

Remote command:
`SBUS<sb>:OSPI:OPCode:ITEM<n>:DTTYpe` on page 1578

Data mode ← Opcode settings
Selects how many lines are used for the data transfer.

The data lines refer to the physical connections through which data is transmitted between the main (typically a microcontroller) and the secondary (typically a flash memory device).

"1S", "2S", "4S", "8S" Number of lines in single data rate mode, i.e. 8S = “8-line-Single-Data-Rate” (octal-SDR)

"1D", "2D", "4D", "8D" Number of lines in dual data rate mode, i.e. 4D = “4-line-Dual-Data-Rate” (quad-DDR)

Remote command:
`SBUS<sb>:OSPI:OPCode:ITEM<n>:DTMode` on page 1578

14.4.5 OCTO SPI software trigger

14.4.5.1 Setup A trigger

Before setting up the software trigger for the protocols, a trigger A event needs to be set up.

14.4.5.2 Software trigger settings

Access: "Menu" > "Apps" > "Protocol" tab > "OCTO-SPI" > "Trigger" tab > "Setup Software Trigger"

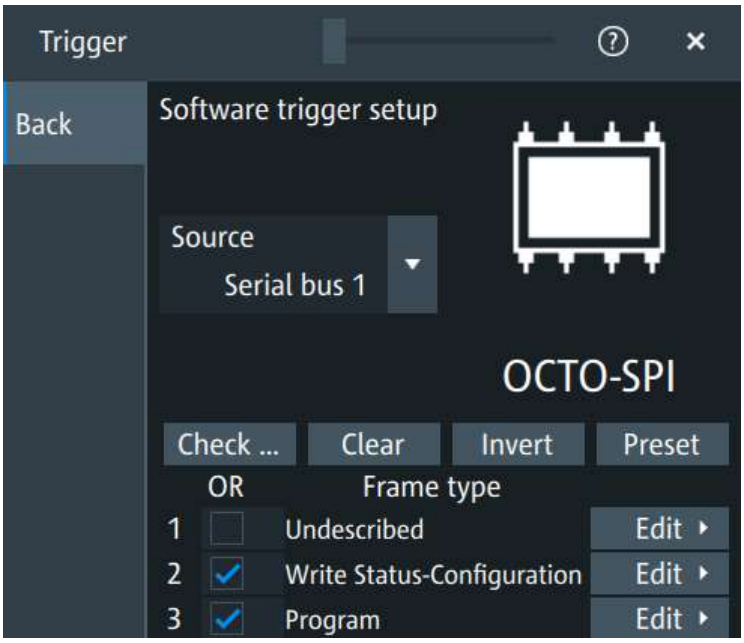

In the "Software Trigger" tab, you can define the settings to trigger on the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to trigger on.

"Check all" Enables the software trigger for all available frames and error types.

"Clear" Disables the software trigger for all available frames and error types.

"Invert" Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types for the software trigger.

Remote command:
`TRIGger:SBSW:OSPI:CHKall` on page 1579
`TRIGger:SBSW:OSPI:CLR` on page 1579
`TRIGger:SBSW:OSPI:INVert` on page 1579
`TRIGger:SBSW:OSPI:RST` on page 1580

Frame type
Selects the frame type that you want to trigger on. You can trigger on all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

The available frame is "Data".

Remote command:
`TRIGger:SBSW:OSPI:FRENable` on page 1580
`TRIGger:SBSW:OSPI:FRAMe<fr>:ENABle` on page 1580

Edit
Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

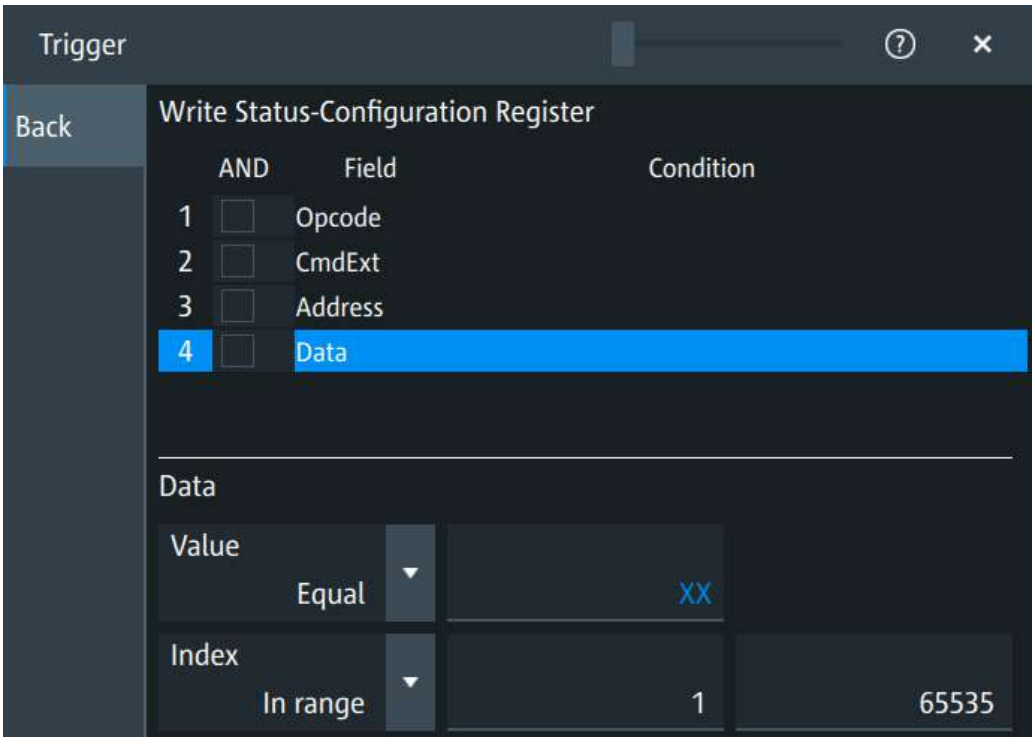

"Field" Enables the field type that you want to trigger on for the selected frame.
The following fields are available: "Opcode", "Addr", "Alt", "Dummy" and "Data".

Remote command:
`TRIGger:SBSW:OSPI:FIENable` on page 1582
`TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:ENABle` on page 1582

"Condition" Displays the value condition for the selected field.

Remote command:
`TRIGger:SBSW:OSPI:BIT` on page 1580
`TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:BIT` on page 1580

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
`TRIGger:SBSW:OSPI:DMAX` on page 1581
`TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:DMAX` on page 1581
`TRIGger:SBSW:OSPI:DMIN` on page 1581
`TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:DMIN` on page 1581
`TRIGger:SBSW:OSPI:DOPerator` on page 1581
`TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:DOPerator` on page 1581

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
`TRIGger:SBSW:OSPI:IMAX` on page 1582
`TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:IMAX` on page 1582
`TRIGger:SBSW:OSPI:IMIN` on page 1583
`TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:IMIN` on page 1583
`TRIGger:SBSW:OSPI:IOPerator` on page 1583
`TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:IOPerator` on page 1583

Error type
Enables triggering on the selected error type.

The following error types are available: "Length error" and "Opcode error".

Remote command:
`TRIGger:SBSW:OSPI:ERENable` on page 1583
`TRIGger:SBSW:OSPI:ERRor<m>:ENABle` on page 1583

14.4.6 Measure

The "Setup Measurement" button opens the dialog for automatic measurements in the "Protocol" category for the selected serial bus.

See Section 10.2.8.2, "Settings for protocol measurements", on page 311.

14.4.7 OCTO-SPI decode results

To enable the decoding, see Section 14.1.9.3, "Decoding protocol signals", on page 531.

Decode results table

The "Decode results" table contains information about all decoded frames.

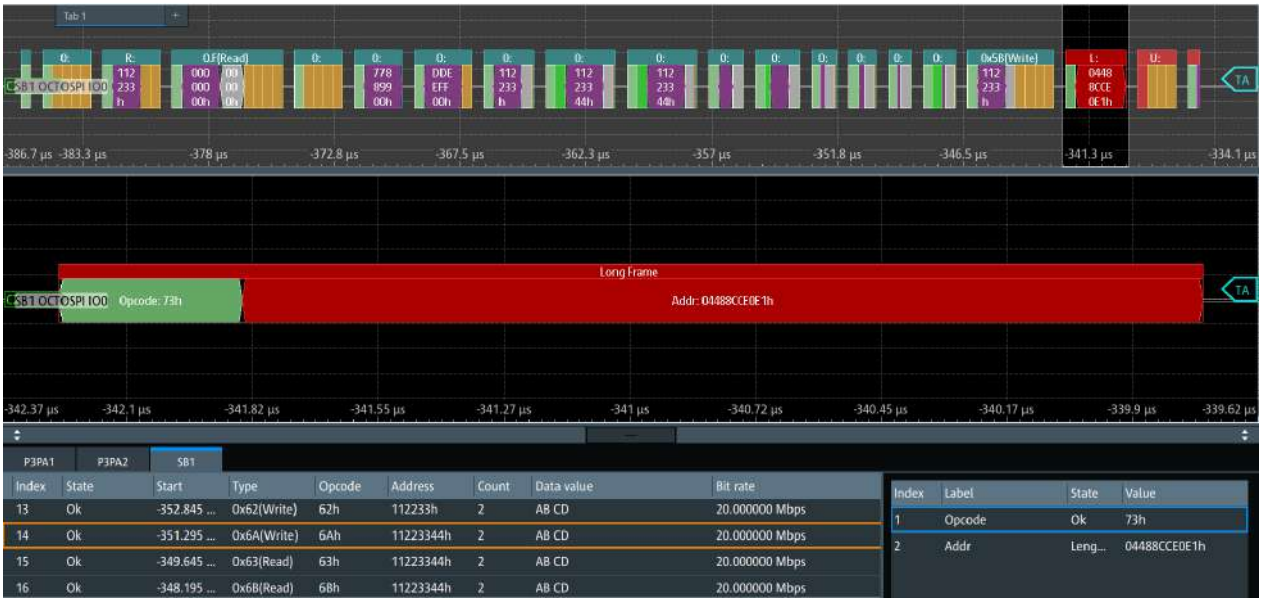

Figure 14-13: Decoded OCTO-SPI signal

The decode results table contains information about all decoded frames.

Table 14-5: Content of the decode results table

Column	Description
Index	Index of the decoded frame
State	Overall state of the frame
Start	Time of frame start
Type	Frame type
Opcode	Operation code value
Address	Address value
Count	Number of words in the frame
Data value	Value of the data frame. Select the data format in the "Display" tab.
Bit rate	Value of the bit rate

When you select a frame in the decode results table, its field content is shown in the details table to the right.

Table 14-6: Content of the frame details table

Column	Description
Index	Number of the decoded field
Label	Name of the field
State	State of the field
Value	Value of the field

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 1491

Remote commands

Remote commands to retrieve decode results are described in Section 18.18.4.5, "Decode results", on page 1584.

You can also export the decode results. For details see Section 14.1.9.4, "Exporting decode results", on page 531.

Example OCTO-SPI export file

```
Index,Start,Stop,State,Type,Command,CommandExt,Address,Count,Bit rate
1,-0.000385847,-0.000385447,'OK','0.A',00h,---,---,---,20000000
2,-0.000384947,-0.000382945,'OK','0.B(Read)',FFh,---,---,4,20000000
3,-0.000382448,-0.00038004,'OK','Read Zero Latency',03h,---,112233h,2,20000000
4,-0.000379547,-0.000374945,'OK','0.F(Read)',01h,---,00000000h,4,20000000


Details frame 2
Index,Label,State,Value
1,'Data: 1','OK',01h
2,'Data: 2','OK',02h
3,'Data: 3','OK',03h
4,'Data: 4','OK',04h
```

14.5 I²C (IC electronics, option R&S MXO5-K510)

The Inter-Integrated Circuit is a simple, low-bandwidth, low-speed protocol used for communication between on-board devices, for example, in LCD and LED drivers, RAM, EEPROM, and others.

For basic information on I²C, you can also refer to a video, available on the Rohde & Schwarz YouTube channel: Understanding I2C.

Requirements

For performing I²C decode measurements, you need the following:

- MXO 5 with 2 available channels. The channels can be a combination of the following:
  - Analog channels (C1-C4)
  - Logic channels (D0-D15) (requires option R&S MXO5-B1)
- Option R&S MXO5-K510

- About the I²C protocol 585
- I²C configuration 587
- I²C filter 591
- I2C format configuration 594
- I²C hardware trigger 599
- I²C software trigger 603
- Measure 606
- I²C decode results 607

14.5.1 About the I²C protocol

This section provides an overview of protocol characteristics, data format, address types and trigger possibilities. For detailed information, read the "I2C-bus specification and user manual" available on the NXP manuals webpage at http://www.nxp.com/.

I²C characteristics

The main characteristics of I²C are:

- Two-wire design: serial clock (SCL) and serial data (SDA) lines
- Controller/ target communication: the controller generates the clock and addresses the targets. Targets receive the address and the clock. Both controller and targets can transmit and receive data.
- Addressing scheme: each target device is addressable by a unique address. Multiple target devices can be linked together and can be addressed by the same controller.
- Read/write bit: specifies if the controller reads (=1) or writes (=0) the data.
- Acknowledge: takes place after every byte. The receiver of the address or data sends the acknowledge bit to the transmitter.

The MXO 5 supports all operating speed modes: high-speed, fast mode plus, fast mode, and standard mode.

Data transfer

The format of a simple I²C message (frame) with 7-bit addressing consists of the following parts:

- Start condition: a falling slope on SDA while SCL is high
- 7-bit address of the target device that is either written to or read from
- R/W bit: specifies if the data is written to or read from the target
- ACKnowledge bits: is issued by the receiver of the previous byte if the transfer was successful
  Exception: At read access, the controller terminates the data transmission with a NACK bit after the last byte.
- Data: several data bytes with an ACK bit after every byte
- Stop condition: a rising slope on SDA while SCL is high

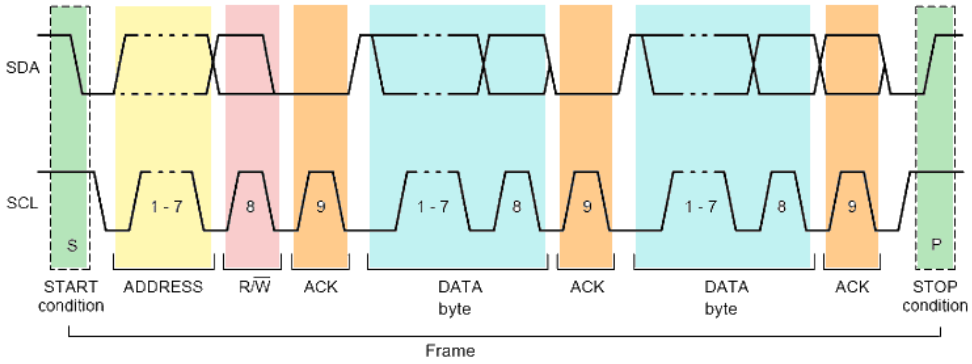

Figure 14-14: I2C write access with a 7-bit address

Address types: 7-bit and 10-bit

Target addresses can be 7 bits or 10 bits long. A 7-bit address requires 1 byte, 7 bits for the address followed by the R/W bit.

A 10-bit address for write access requires 2 bytes: the first byte starts with the reserved sequence 11110, followed by the two MSB of the address and the write bit. The second byte contains the remaining 8 LSB of the address. The target acknowledges each address byte.

Figure 14-15: 10-bit address, write access

A 10-bit address for read access requires 3 bytes. The first 2 bytes are identical to the write access address. The third byte repeats the address bits of the first byte and sets the read bit.



Figure 14-16: 10-bit address, read access

Trigger

The MXO 5 can trigger on various parts of I²C messages. You must connect the data and clock lines to the input channels; triggering on math and reference waveforms is not possible.

You can trigger on:

- Start or stop condition
- Repeated start condition
- Transfer direction (read or write)
- Bytes with missing acknowledge bit
- Specific data pattern in the message

14.5.2 I²C configuration

14.5.2.1 I²C configuration settings

Access: "Menu" > "Apps" > "Protocol" tab > "I2C" > "Setup".

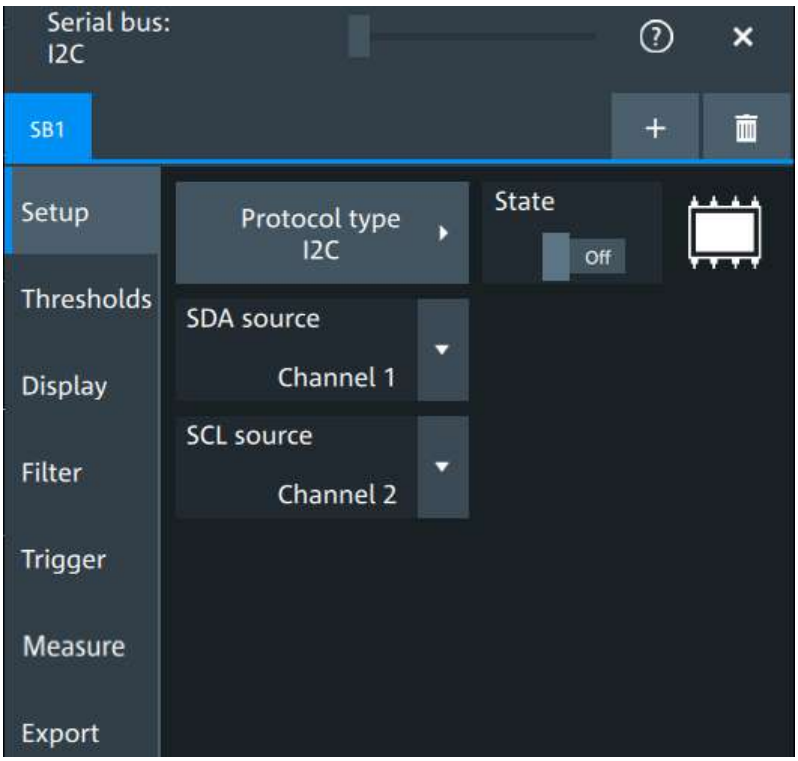

Make sure that the tab of the correct serial bus is selected.

Protocol type
Selects the protocol type to be decoded.

Remote command:
`SBUS<sb>:TYPE` on page 1489

State
Enables the decoding of the selected bus. The signal icon of the bus appears on the signal bar.

Remote command:
`SBUS<sb>[:STATe]` on page 1489

SDA source
Sets the source channel to which the data line is connected.

Remote command:
`SBUS<sb>:I2C:SDA:SOURce` on page 1593

SCL source
Selects the source channel to which the clock line is connected.

Remote command:
`SBUS<sb>:I2C:SCL:SOURce` on page 1592

14.5.2.2 Threshold settings

Access: "Menu" > "Apps" > "Protocol" tab > "I2C" > "Thresholds".

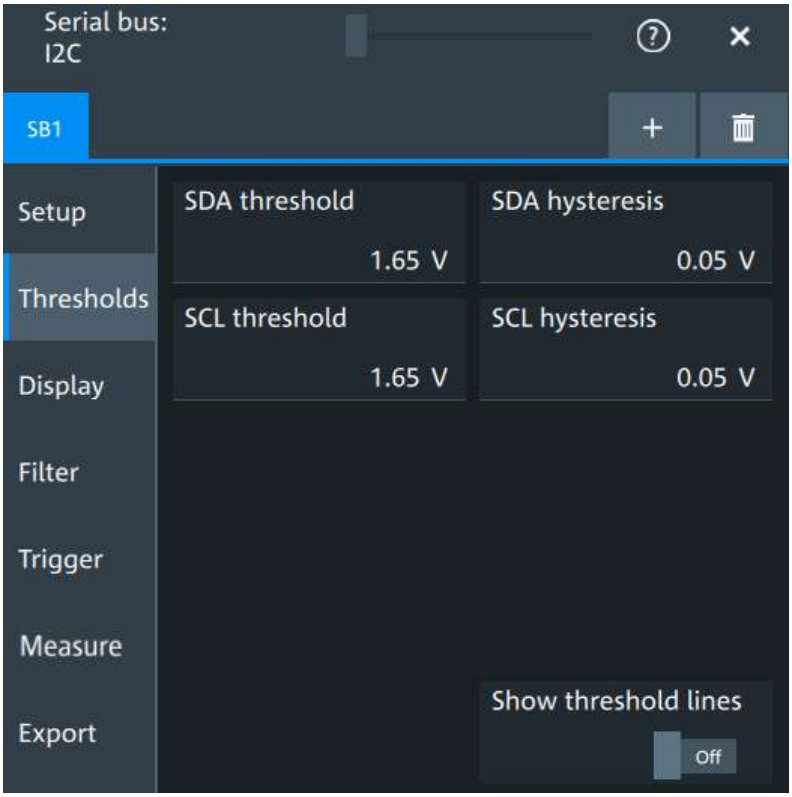

SDA/SCL threshold, SDA/SCL hysteresis
Set the threshold for the SDA and SCL channels. Enter the value directly in the fields.

Additional to the threshold, you can also set a hysteresis for each channel.

Remote command:
`SBUS<sb>:I2C:SCL:THReshold` on page 1592
`SBUS<sb>:I2C:SDA:THReshold` on page 1593
`SBUS<sb>:I2C:SCL:HYSTeresis` on page 1592
`SBUS<sb>:I2C:SDA:HYSTeresis` on page 1592

Show threshold lines
If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also Show threshold lines.

Remote command:
`SBUS<sb>:THReshold` on page 1492

14.5.2.3 Display settings

For details about the display settings, see Section 14.1.3.1, "Display settings", on page 511.

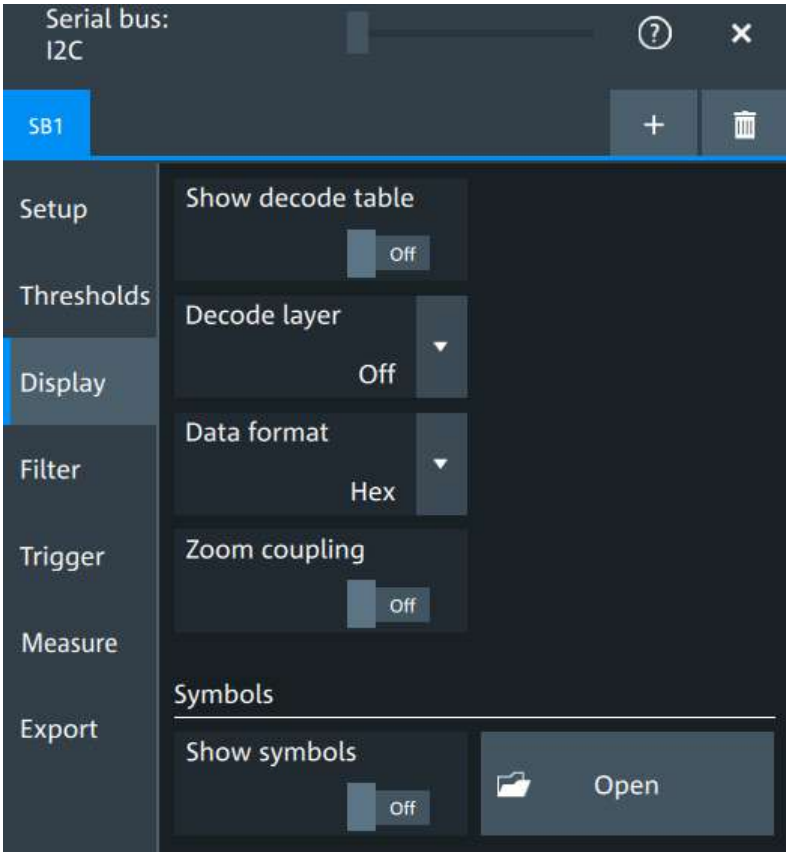

Decode layer
Selects the decode layer.

Decoding is performed in several steps, and the results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display.

See "Decode layer" on page 512.

Data format
See "Data format" on page 512.

Zoom coupling
See "Zoom coupling" on page 513.

Show symbols
Symbol lists are protocol-specific. Label lists for I2C are available in CSV format.

For details, see I²C symbols.

Remote command:
`SBUS<sb>:I2C:SYMBols` on page 1594
`SBUS<sb>:I2C:NEWList` on page 1594

14.5.2.4 I²C symbols

For the I²C protocol, you can upload symbol lists containing IDs and a symbolic name for each node. You can load a file in one of the supported formats. Symbol lists for I²C are available in CSV format.

An I²C label file contains three values for each address:

- Address type, 7-bit or 10-bit long
- Address value
- Symbolic label: name of the address, specifying its function in the bus network.

Example: I²C CSV file

```
# ------------------------------------------------------------------------
@FILE_VERSION  = 1.00
@PROTOCOL_NAME = i2c
# ------------------------------------------------------------------------
# Labels for I2C protocol
#   Column order: Identifier type, Identifier value, Label
# ------------------------------------------------------------------------
7,0x1E,Voltage
7,38h,Pressure
7,2Ah,Temperature
7,16h,Speed
7,118,Acceleration
7,07h,HighSpeed_Master_0x3
7,51h,EEPROM
10,3A2h,DeviceSetup
10,1A3h,GatewayStatus
10,06Eh,LeftSensor
# ------------------------------------------------------------------------
```

14.5.3 I²C filter

Access: "Menu" > "Apps" > "Protocol" tab > "I2C" > "Filter" tab

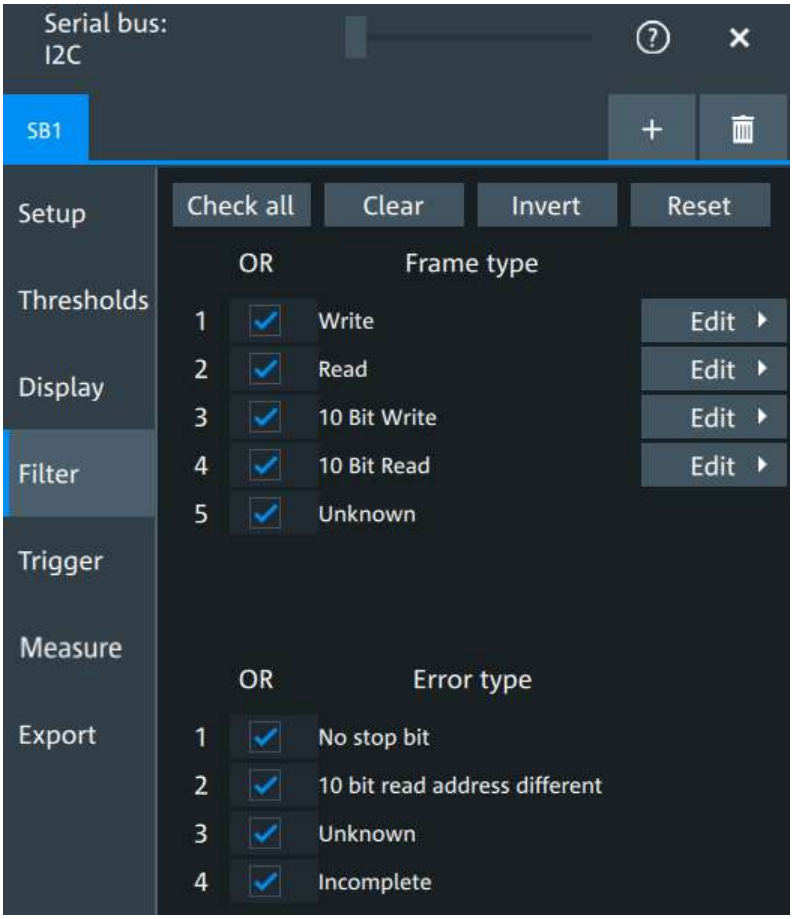

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all" Enables the filter for all available frames and error types.

"Clear" Disables the filter for all available frames and error types.

"Invert" Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types.

Remote command:
`SBUS<sb>:I2C:FILTer:CHKall` on page 1595
`SBUS<sb>:I2C:FILTer:CLR` on page 1595
`SBUS<sb>:I2C:FILTer:INVert` on page 1596
`SBUS<sb>:I2C:FILTer:RST` on page 1596

Frame type
Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.

For selected frame types, you can also specify conditions for the value of the fields in the "Edit" dialog.

Remote command:
SBUS<sb>:I2C:FILTer:FRENable on page 1596
SBUS<sb>:I2C:FILTer:FRAMe<fr>:ENABle on page 1596

Edit
Opens a dialog to define the details of the selected frame.

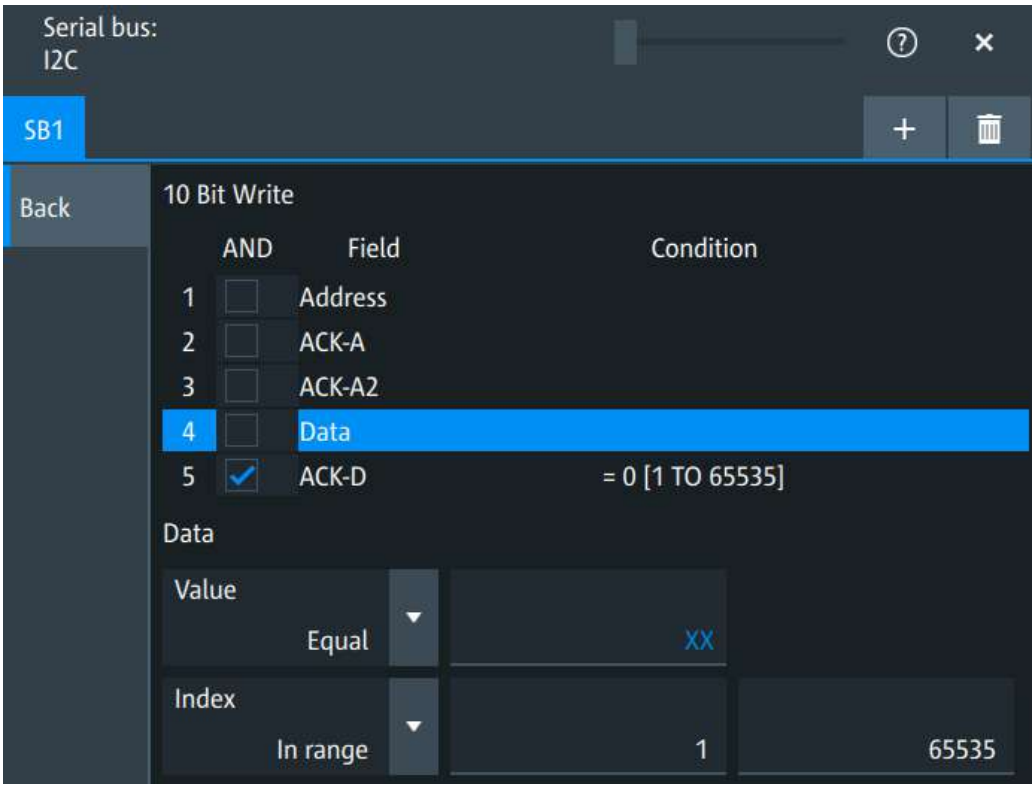

"Field" Enables the field type that you want to filter on for the selected frame. The available fields are "Address", "R/W", "ACK_A", "ACK_A2", "Data", and "ACK_D".

Remote command:
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:ENABle on page 1599
SBUS<sb>:I2C:FILTer:FIENable on page 1599

"Condition" Displays the value condition for the selected field.

Remote command:
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:BIT on page 1599

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:DMAX on page 1596
SBUS<sb>:I2C:FILTer:DMAX on page 1596
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:DMIN on page 1597
SBUS<sb>:I2C:FILTer:DMIN on page 1597
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:DOPerator on page 1597
SBUS<sb>:I2C:FILTer:DOPerator on page 1597

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:IMAX on page 1598
SBUS<sb>:I2C:FILTer:IMAX on page 1598
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:IMIN on page 1598
SBUS<sb>:I2C:FILTer:IMIN on page 1598
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:IOPerator on page 1599
SBUS<sb>:I2C:FILTer:IOPerator on page 1599

Error type
Enables filtering on the selected error type.

Remote command:
SBUS<sb>:I2C:FILTer:ERENable on page 1598
SBUS<sb>:I2C:FILTer:ERRor<n>:ENABle on page 1598

14.5.4 I2C format configuration

Access: "Menu" > "Apps" > "Protocol" tab > "I2C" > "Format".

See Section 14.1.5, "Format", on page 516.

Show format
Enables the format configuration and displays the frame formats in the honey-comb view and results. If enabled, the frame formats are also selectable for triggering and filtering.

Remote command:
SBUS<sb>:I2C:FORMat:SELect on page 1601

Add frame
Creates a frame format and adds it to the end of the frame list. A dialog opens to specify the frame details. The number of frame formats is limited to 100.

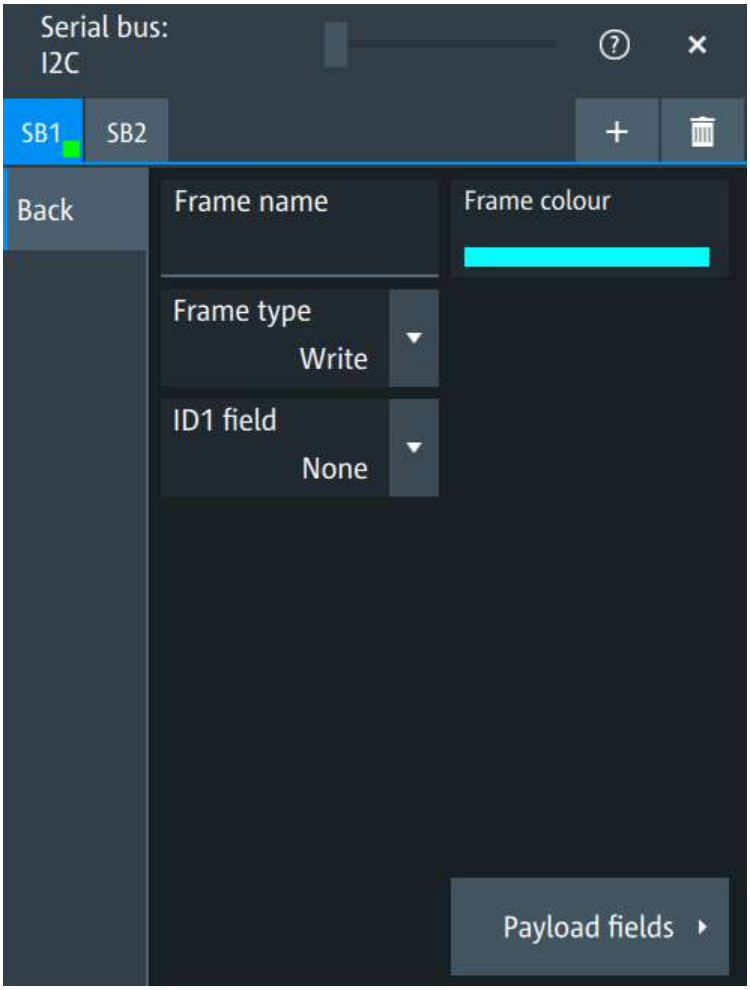

Remote command:
SBUS<sb>:I2C:FORMat:ADDFrame on page 1601

Edit list
Enables editing the frame list. If enabled, you can delete a frame format by clicking its "Delete" icon. In a list with several entries, you can move frame formats up or down by clicking the arrow buttons. To exit the editing mode, click "Edit list" again.

Remote command:
SBUS<sb>:I2C:FORMat:CLR on page 1602
SBUS<sb>:I2C:FORMat:FCOunt? on page 1602

Open
Opens a dialog for loading an existing list of frame formats in XML file format.

Remote command:
SBUS<sb>:I2C:FORMat:LOAD on page 1601

Save as
Opens a dialog for saving your current list of frame formats to an XML file. Saved frame formats can support efficient and convenient working.

Remote command:
SBUS<sb>:I2C:FORMat:SAVE on page 1601

Frame name
Specifies an arbitrary name to label the currently selected frame format. Ideally, use speaking names according to the specifications of the applicable protocol standard. Frame names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:I2C:FORMat:FRAMe<fr>:NAME on page 1603

Frame color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:I2C:FORMat:FRAMe<fr>:COLor on page 1603

Frame type
Select an original frame type.

Remote command:
SBUS<sb>:I2C:FORMat:FRAMe<fr>:TYPE on page 1603

ID<n> field
Select the first to third identifying field types.

Remote command:
SBUS<sb>:I2C:FORMat:FRAMe<fr>:ID1Field on page 1603
SBUS<sb>:I2C:FORMat:FRAMe<fr>:ID2Field on page 1603
SBUS<sb>:I2C:FORMat:FRAMe<fr>:ID3Field on page 1603

ID<n> value
Select the value of the corresponding field type.

Remote command:
SBUS<sb>:I2C:FORMat:FRAMe<fr>:ID1Value on page 1604
SBUS<sb>:I2C:FORMat:FRAMe<fr>:ID2Value on page 1604
SBUS<sb>:I2C:FORMat:FRAMe<fr>:ID3Value on page 1604

Payload fields
Opens the payload field configuration dialog. The format configuration of payload fields is optional and replaces the payload data of the identified frame.

Add field
Creates a new field description for the currently selected frame format and adds it to the end of the field list with color, bit position (order of transmission) and name. Brackets indicate how often bits will be repeated, [] indicates that this is an open array.

A dialog opens to specify the field details. The number of field descriptions is limited to 100.

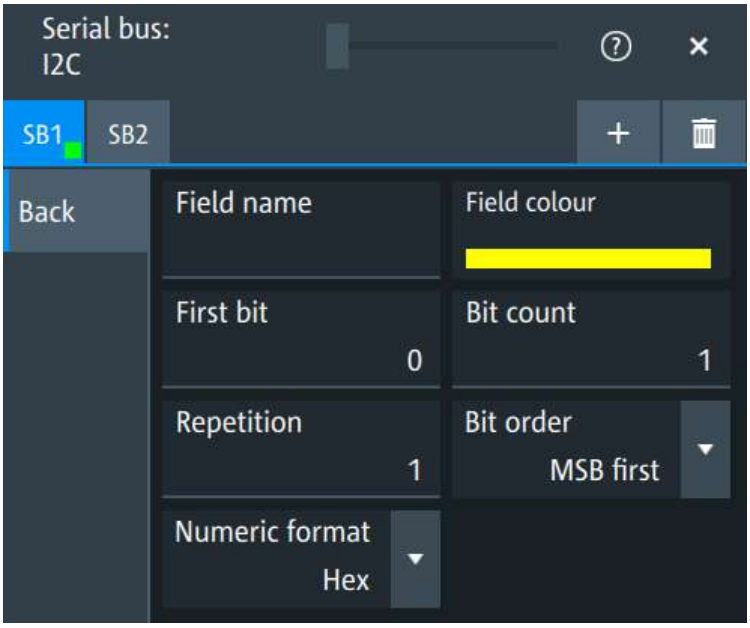

Remote command:
SBUS<sb>:I2C:FORMat:FRAMe<fr>:ADDField on page 1602

Field name
Specifies an arbitrary name for the currently selected field description. Ideally, use speaking names.

Field names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:NAME on page 1604

Field color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:COLor on page 1604

First bit
In order of transmission, sets the first bit of this field in the payload.

Remote command:
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:FSTBit on page 1605

Bit count
Sets the number of bits in the selected field, i.e., the field's length. Selecting the value opens a keypad showing allowed minimum and maximum values. You can set "Min", "Max", "Reset" or adjust with the "Inc" or "Dec" buttons by 1 or 10 (step size dependent). Use "CE" to restore the value used before the keypad opened.

If the "Condition" pattern length does not match the "Bit count":
- Too long, it is truncated.

- Too short, it is left-padded with 0.

Both truncation and padding happen on the left side of the condition and follow the configured "Bit order".

Examples for "Condition" "=100"):
- "Bit order" is "MSB":
  – Bit count = 2: truncated. Result: =00
  – Bit count = 4: padded. Result: =0100
- "Bit order" is LSB first (equivalent MSB-first representation is =001):
  – Bit count = 2: truncated. Result: =00 (LSB first), =00 (MSB first)
  – Bit count = 4: padded. Result: =0100 (LSB first), =0010 (MSB first)

Remote command:
`SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:BITCount` on page 1605

Repetition
Defines the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Remote command:
`SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:REPetition` on page 1605

Bit order
Selects, in which order the bits of a field's "Condition" value are evaluated:

- "LSB first": little endian, least significant bit first
- "MSB first": big endian, most significant bit first

Remote command:
`SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:BITorder` on page 1606

Numeric format
Selects how the "Condition" value is interpreted:

- Symbolic: Assigns a symbolic translation on the data fields. Only available for custom protocols.
- Value list: Assigns a custom name to each hexadecimal value; any value without an assigned value is shown as "Undefined".
- A*X+B: Assigns a linear function on the data fields.
- For details on the other numeric formats, see "Format-specific information" on page 532.

The following rules apply:
- If the condition contains at least one of "H", "h", "L", "l", "X", "x", and all other characters are only "1" and/or "0", the value is always treated as binary, regardless of the selected numeric format.
- "x" and "X" are wildcards and are supported only in binary format or when the string is auto-interpreted as binary per the rule above.
  Examples for format set to "HEX":
  – "=1HL111000": valid (read as binary)
  – "=0x10101": valid (read as binary; "x" acts as wildcard, not a hex prefix)
  – "=1010": valid (read as HEX, with a total of 16 bits)
  – "=0x5A": valid (read as HEX "5A", because "0x" is a valid hex prefix; entering 5A alone is recommended)

– "=5X12": invalid
– "=1H33": invalid

Remote command:
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:FORMat on page 1606

Add value
Creates a new hexagonal value for customization.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:ADDValue on page 1607

Value
Defines the hexagonal value to convert it into a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue on page 1607

Label
Defines the label to convert the corresponding hexagonal value to a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel on page 1608

Unit
Defines a unit for the linear function.

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:UNIT on page 1608

Parameter A,B
Defines the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:PARA on page 1609
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:PARB on page 1609

14.5.5 I²C hardware trigger

Access: "Menu" > "Apps" > "Protocol" tab > "I2C" > "Trigger" tab > "Setup Hardware Trigger"

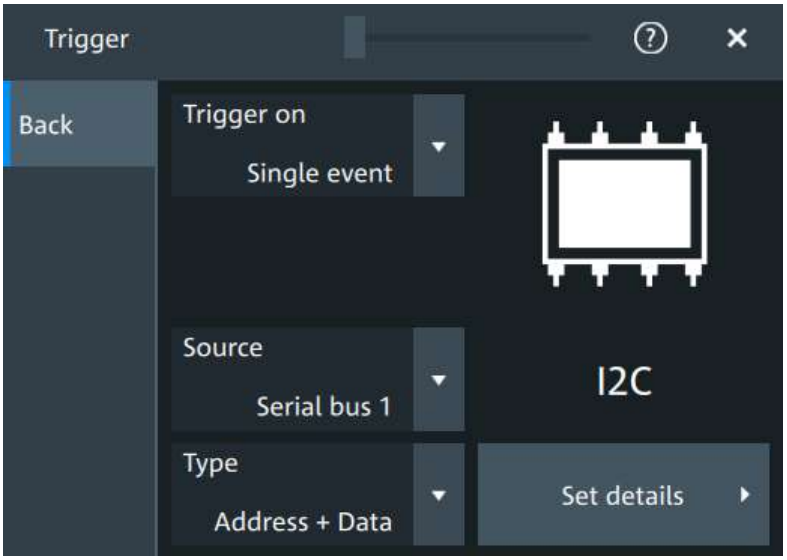

Type
Selects the trigger type for I²C analysis.

Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

Remote command:
`TRIGger:SBHW:I2C:TYPE` on page 1609

Start ← Type
Sets the trigger to the start of the message. The start condition is a falling edge on SDA while SCL is high. The trigger instant is the falling edge of the SDA line.

You can change the SDA and SCL lines here if necessary.

Repeated start ← Type
Sets the trigger to a repeated start - when the start condition occurs without previous stop condition. Repeated start conditions occur when a controller exchanges multiple messages with a target device without releasing the bus.

Stop ← Type
Sets the trigger to the end of the message. The stop condition is a rising slope on SDA while SCL is high.

No Ack ← Type
Missing acknowledge bit: the instrument triggers if the data line remains HIGH during the clock pulse following a transmitted byte.

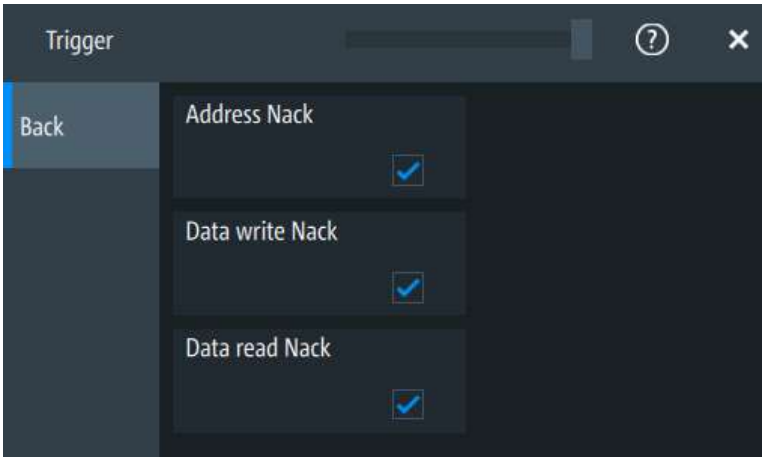

Address ← Type
Sets the trigger to one specific address condition or a combination of address conditions. The trigger time is the falling clock edge of the acknowledge bit after the address.

Data ← Type
Sets the trigger to one specific data condition or a combination of address conditions.

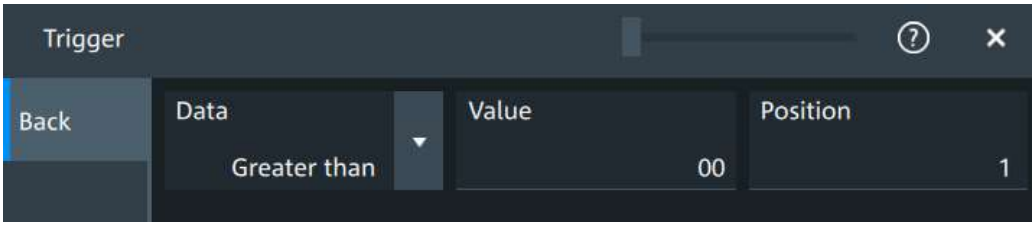

Address and data ← Type
Sets the trigger to a combination of address and data condition.

No Ack conditions
Selects which missing acknowledge bits is detected if the trigger type is set to "No Ack".

"Address Nack"
No secondary recognizes the address.

"Data write Nack"
The addressed secondary does not accept the data.

"Data read Nack"
Marks the end of the read process when the primary reads data from the secondary. This Nack is sent according to the protocol definition, it is not an error.

Remote command:
`TRIGger:SBHW:I2C:ADNack` on page 1611
`TRIGger:SBHW:I2C:DWNack` on page 1613
`TRIGger:SBHW:I2C:DRNack` on page 1612

Address type
Sets the address length to be triggered on: 7 bit or 10 bit.

Remote command:
`TRIGger:SBHW:I2C:AMODe` on page 1611

R/W bit
Toggles the trigger condition between read and write access of the primary. Select "Either" if the transfer direction is not relevant for the trigger condition.

Remote command:
`TRIGger:SBHW:I2C:ACCess` on page 1610

Address
The trigger address setup consists of a comparison condition and one or two address patterns.

Defines the bit pattern of the secondary device address. The length of the entry is adjusted to the selected address type.

"Condition" Sets the comparison condition to a specific value or a range.

"From" Specifies the value or sets the start value of a range.

"To" Sets the maximum value of a range for "Condition" = "In range"/"Out of range".

Remote command:
`TRIGger:SBHW:I2C:ADDRess` on page 1611
`TRIGger:SBHW:I2C:ADDTo` on page 1611

Data
Specifies the trigger conditions for the data bit pattern.

"Condition" Sets the comparison condition to a specific value or a range.

"Value" Specifies the value or sets the start value of a range.
Enter the bytes in msb first bit order. The maximum pattern length is 64 bit. Waveform data is compared with the pattern byte-by-byte.

Remote command:
`TRIGger:SBHW:I2C:DCONdition` on page 1612
`TRIGger:SBHW:I2C:DMIN` on page 1612

Position
Sets the number of data bytes to be skipped after the address.

Remote command:
`TRIGger:SBHW:I2C:DPOSition` on page 1612

14.5.6 I²C software trigger

14.5.6.1 Setup A trigger

Before setting up the software trigger for the protocols, a trigger A event needs to be set up.

14.5.6.2 Software trigger settings

Access: "Menu" > "Apps" > "Protocol" tab > "I2C" > "Trigger" tab > "Setup Software Trigger" > "Setup SB Trigger"

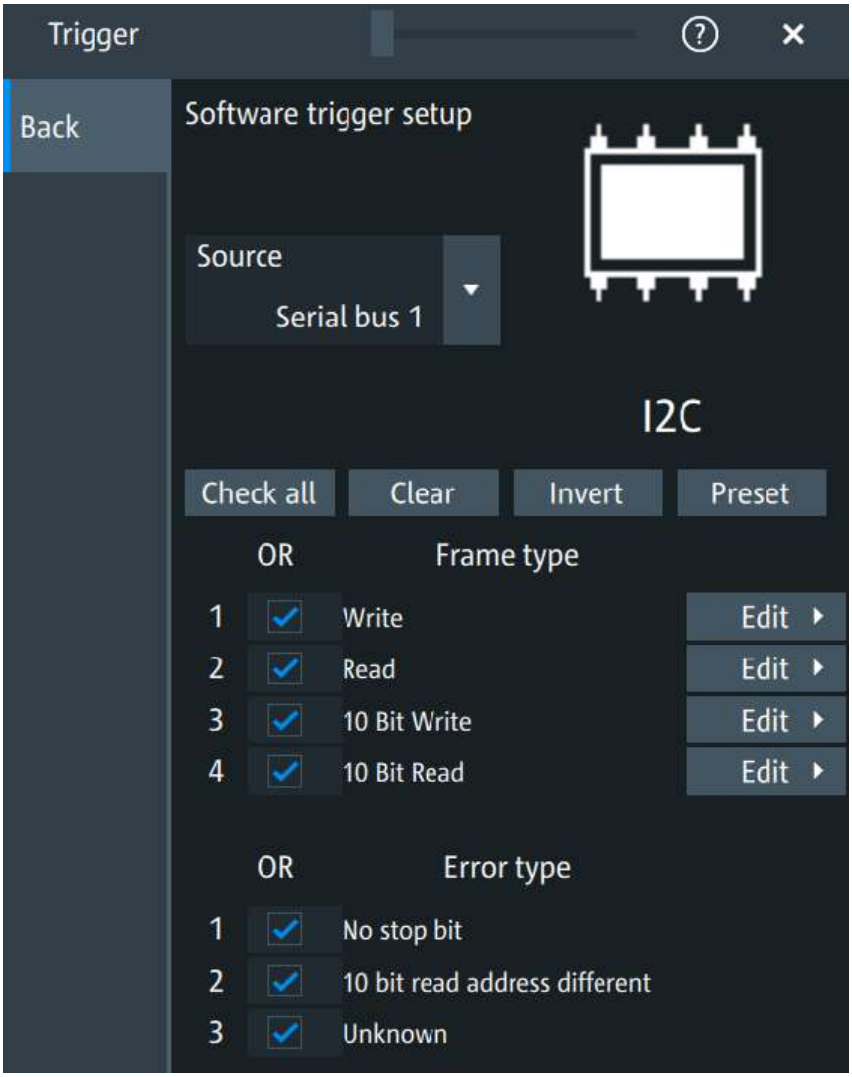

In the "Software Trigger" tab, you can define the settings to trigger on the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to trigger on.

"Check all" Enables the software trigger for all available frames and error types.

"Clear" Disables the software trigger for all available frames and error types.

"Invert" Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types for the software trigger.

Remote command:
`TRIGger:SBSW:I2C:CHKall` on page 1614
`TRIGger:SBSW:I2C:CLR` on page 1614

TRIGger:SBSW:I2C:INVert on page 1614
TRIGger:SBSW:I2C:RST on page 1614

Frame type
Selects the frame type that you want to trigger on. You can trigger on all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

The following frames are available: "Write", "Read", "10 Bit Write", "10 Bit Read".

Remote command:
TRIGger:SBSW:I2C:FRENable on page 1614
TRIGger:SBSW:I2C:FRAMe<fr>:ENABle on page 1614

Edit
Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

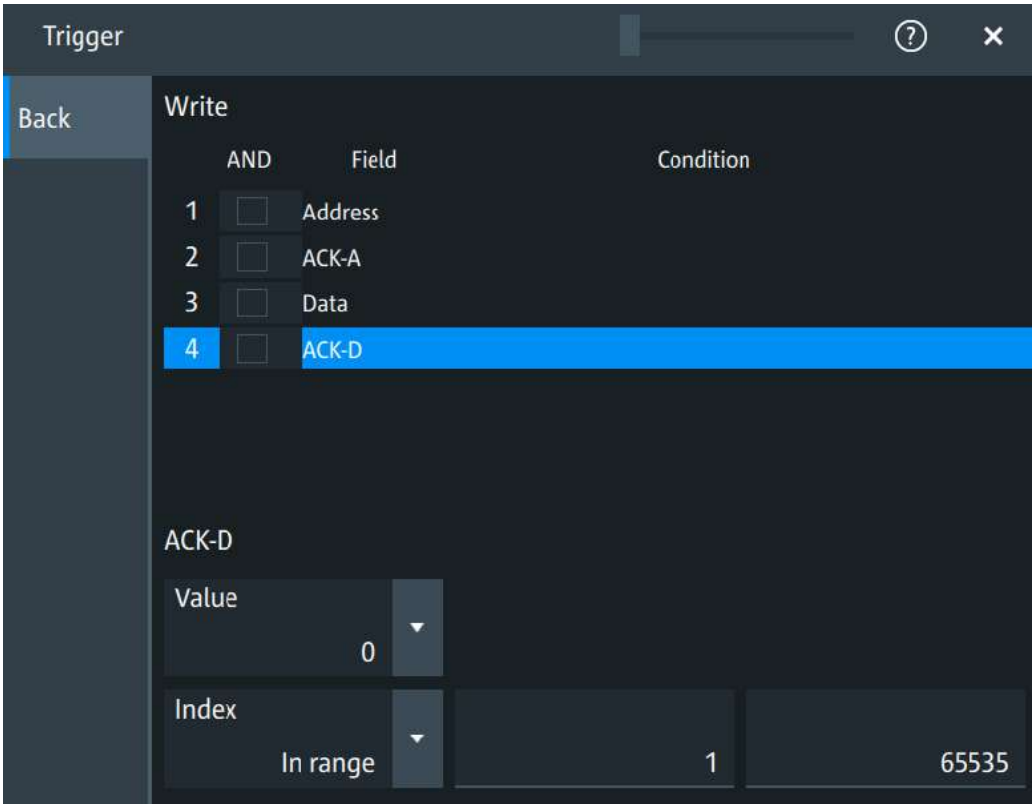

"Field" Enables the field type that you want to trigger on for the selected frame.
The available fields are "Address", "ACK-A", "ACK-A2", "Data", "ACK-D".

Remote command:
TRIGger:SBSW:I2C:FIENable on page 1616
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:ENABle on page 1616

"Condition" Displays the value condition for the selected field.

Remote command:
TRIGger:SBSW:I2C:BIT on page 1615
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:BIT on page 1615

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
TRIGger:SBSW:I2C:DMAX on page 1615
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:DMAX on page 1615
TRIGger:SBSW:I2C:DMIN on page 1615
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:DMIN on page 1615
TRIGger:SBSW:I2C:DOPerator on page 1616
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:DOPerator on page 1616

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
TRIGger:SBSW:I2C:IMAX on page 1617
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:IMAX on page 1617
TRIGger:SBSW:I2C:IMIN on page 1617
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:IMIN on page 1617
TRIGger:SBSW:I2C:IOPerator on page 1617
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:IOPerator on page 1617

Error type
Enables triggering on the selected error type.

Remote command:
TRIGger:SBSW:I2C:ERENable on page 1618
TRIGger:SBSW:I2C:ERRor<m>:ENABle on page 1618

14.5.7 Measure

The "Setup Measurement" button opens the dialog for automatic measurements in the "Protocol" category for the selected serial bus.

See Section 10.2.8.2, "Settings for protocol measurements", on page 311.

14.5.8 I²C decode results

To enable the decoding, see Section 14.1.9.3, "Decoding protocol signals", on page 531.

For more information on decoding I3C, you can also refer to the video, available on the Rohde & Schwarz YouTube channel: Decoding I2C with MXO Series Oscilloscope.

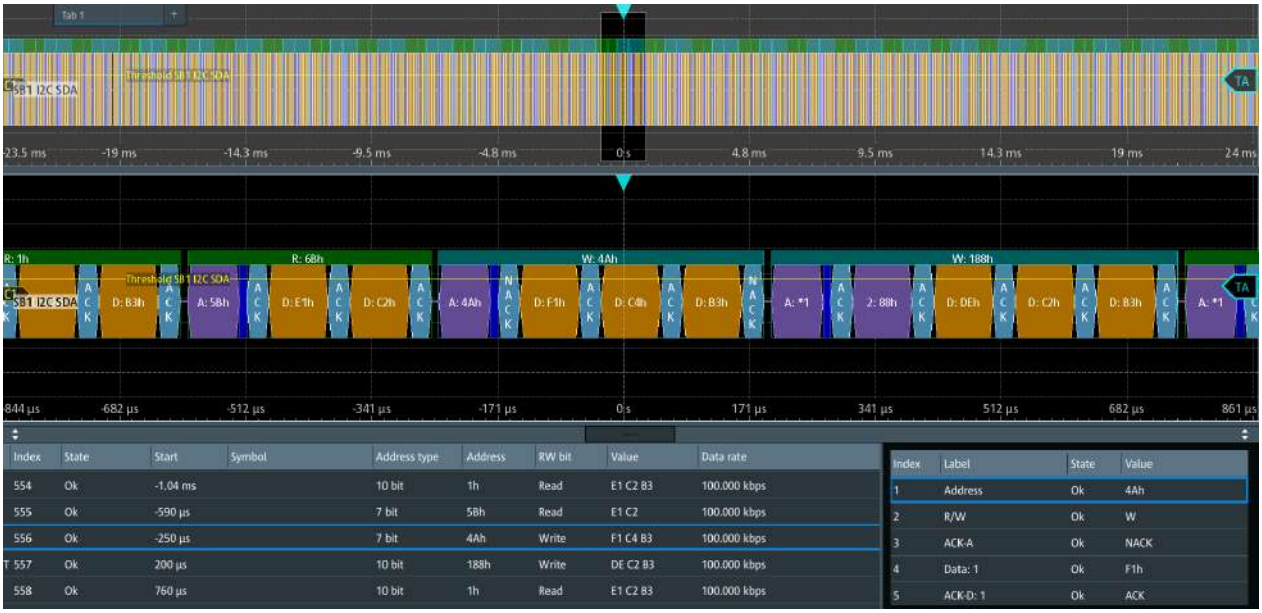

Figure 14-17: Decoded I2C signal

The decode results table contains information about all decoded frames.

Table 14-7: Content of the decode results table

Column	Description
Index	Index of the decoded frame
State	Overall state of the frame. "Insuffcient waveform length" indicates that the frame is not completely contained in the acquisition. Change the horizontal scale, or move the reference point to the left to get a longer acquisition.
Start	Time of frame start
Symbol	Symbolic label of the frame. Available only, if "Show symbols" is enabled in the "Display" tab and a symbols list is loaded.
Address type	Address length, 7 bit or 10 bit
Address	Hexadecimal value of the address
RW bit	Value of the read/write bit
Value	The actual data payload values. Select the data format in the "Display" tab.
Data rate	Value of the data rate

When you select a frame in the decode results table, its field content is shown in the details table to the right.

Table 14-8: Content of the frame details table

Item	Description
Index	Number of the decoded field
Label	Label (name) of each word of the data field
State	State of each word of the data field, for example "OK" or "Incomplete"
Value	Value of each word of the data field

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 1491

Remote commands

Remote commands to retrieve decode results are described in Section 18.18.5.6, "Decode results", on page 1619.

You can also export the decode results. For details see Section 14.1.9.4, "Exporting decode results", on page 531.

Example of an I²C export file

```
Index,Start,Stop,State,Address type,Address value,R/W bit,Bit rate
1,-0.25,-0.24945,'OK','BIT10',188h,'WRIT',100000
2,-0.24944,-0.249,'OK','BIT10',1h,'READ',100000
3,-0.24899,-0.24866,'OK','BIT7',5Bh,'READ',100000
4,-0.24865,-0.24821,'OK','BIT7',4Ah,'WRIT',100000
5,-0.2482,-0.24765,'OK','BIT10',188h,'WRIT',100000
6,-0.24764,-0.2472,'OK','BIT10',1h,'READ',100000

Details frame 1
Index,Formatted data,Ack bit start,Ack bit
1,DEh,-0.2497,'ACK'
2,C2h,-0.24959,'ACK'
3,B3h,-0.24948,'ACK'

Details frame 2
Index,Formatted data,Ack bit start,Ack bit
1,E1h,-0.24925,'ACK'
2,C2h,-0.24914,'ACK'
3,B3h,-0.24903,'ACK'

Details frame 3
Index,Formatted data,Ack bit start,Ack bit
```

```
1,E1h,-0.2488,'ACK'
2,C2h,-0.24869,'ACK'

Details frame 4
Index,Formatted data,Ack bit start,Ack bit
1,F1h,-0.24846,'ACK'
2,C4h,-0.24835,'ACK'
3,B3h,-0.24824,'NACK'

Details frame 5
Index,Formatted data,Ack bit start,Ack bit
1,DEh,-0.2479,'ACK'
2,C2h,-0.24779,'ACK'
3,B3h,-0.24768,'ACK'
```

14.6 I3C (IC electronics, option R&S MXO5-K550)

The Improved Inter-Integrated Circuit (I3C) is a low-speed MIPI protocol used for communication between chips and signaling patterns by a 2-wire serial data bus.

Requirements

For performing I3C decode measurements, you need the following:

- MXO 5 with 2 available channels. The channels can be a combination of the following:
  - Analog channels (C1-C4)
  - Logic channels (D0-D15) (requires option R&S MXO5-B1)
- Option R&S MXO5-K550

- About the I3C protocol 609
- I3C configuration 611
- I3C filter 615
- I3C format configuration 618
- I3C software trigger 624
- Measure 626
- I3C decode results 626

14.6.1 About the I3C protocol

This section provides an overview of protocol characteristics, data format, address types and trigger possibilities. For detailed information, read the "MIPI I3C and I3C Basic" specifications, available at www.mipi.org/groups/I3C.

I3C characteristics

The Improved Inter-Integrated Circuit (I3C) protocol is a high-speed, low-power, and low-latency interface standard. Typical applications are mobile devices, IoT devices and automotive systems, for example. It incorporates the capabilities of I²C and SPI, while offering several advantages over these protocols.

The main characteristics of I3C are:

- Significantly lower energy consumption and higher data rate than I²C, but backward compatible with it.
- 2-wire operation with a serial clock line (SCL) and a serial data line (SDA) simplifies data exchange at low pin count and reduced signal paths.
- Supports multiple devices on the same bus, enabling a multi-drop topology.
- Optional messaging modes (HDR-DDR or HDR ternary) with high data rate up to 33.33 Mbit/s.
- In-band interrupt support without requiring a separate interrupt line.
- Hot-join support for dynamic device attachment and detachment.
- Synchronous timing support and asynchronous time stamping.
- Broadcast transactions allow sending commands or data to all devices on the bus simultaneously.

The MXO 5 supports all operating speed modes: legacy I²C modes (see I²C characteristics), SDR standard mode, DDR mode and ternary mode.

Data transfer

An I3C transaction consists of the following phases:

- **Start condition**: The controlling device sends a start condition to initiate the transaction.
- **Device addressing**: The controlling device sends the address of the responding device to select the target device.
- **Command**: The controlling device sends a command to the responding device, specifying the operation to be performed (e.g., read or write).
- **Data transfer**: The responding device responds with the requested data or sends data to the controlling device.
- **Stop condition**: The controlling device sends a stop condition to terminate the transaction.

The address format is the same as in I²C: 7 bits of address, 1 bit of RnW, and 1 bit of ACK/NACK. See Section 14.5.1, "About the I²C protocol", on page 585.

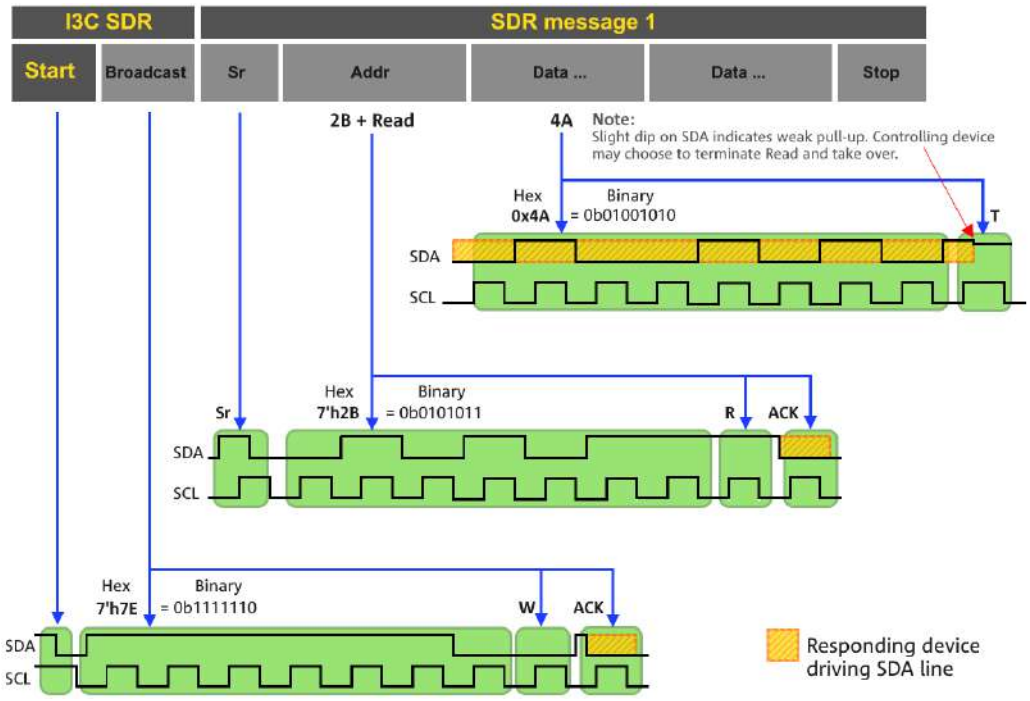

Figure 14-18: Example of using I3C coding SDR

Trigger

The MXO 5 can trigger on various parts of I3C messages. You must connect the data and clock lines to the input channels. Triggering on math and reference waveforms is not possible.

You can trigger on:

- Start or stop condition
- Repeated start condition
- Transfer direction (read or write)
- Bytes with missing acknowledge bit
- Specific target address or address range
- Specific data pattern in the message

14.6.2 I3C configuration

14.6.2.1 I3C configuration settings

Access: "Menu" > "Apps" > "Protocol" tab > "I3C" > "Setup".

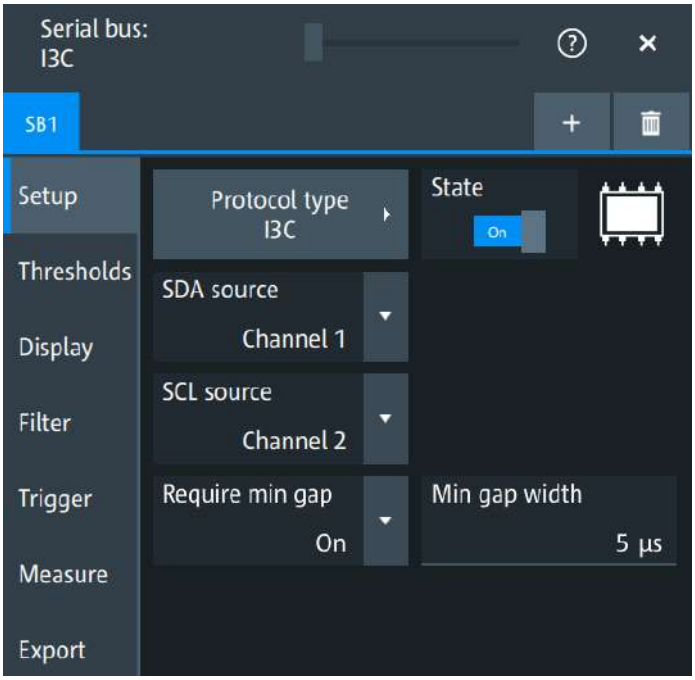

Make sure that the tab of the correct serial bus is selected.

Protocol type
Selects the protocol type to be decoded.

Remote command:
`SBUS<sb>:TYPE` on page 1489

State
Enables the decoding of the selected bus. The signal icon of the bus appears on the signal bar.

Remote command:
`SBUS<sb>[:STATe]` on page 1489

SDA source
Sets the source channel to which the data line is connected.

Remote command:
`SBUS<sb>:I3C:SDA:SOURce` on page 1628

SCL source
Selects the source channel to which the clock line is connected.

Remote command:
`SBUS<sb>:I3C:SCL:SOURce` on page 1628

Require min gap
If enabled, the application requires a minimum gap on the left-hand side of the screen before the 1st decoded frame. Enabling this feature can prevent errors due to truncation of an HDR-type frame.

Remote command:
`SBUS<sb>:I3C:MINGap:SELect` on page 1629

Min gap width
Specifies the minimum gap width in units of time of the Require min gap, if enabled.

Remote command:
`SBUS<sb>:I3C:MINGap:WIDTh` on page 1629

14.6.2.2 Threshold settings

Access: "Menu" > "Apps" > "Protocol" tab > "I2C" > "Thresholds".

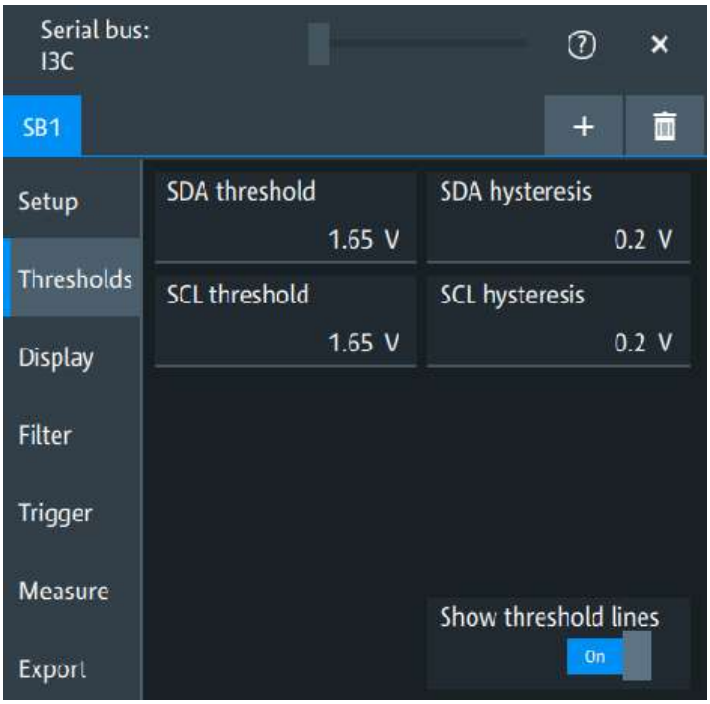

SDA/SCL threshold, SDA/SCL hysteresis
Set the threshold for the SDA and SCL channels. Enter the value directly in the fields.

Additional to the threshold, you can also set a hysteresis for each channel.

Remote command:
`SBUS<sb>:I3C:SCL:THReshold` on page 1628
`SBUS<sb>:I3C:SDA:THReshold` on page 1629
`SBUS<sb>:I3C:SCL:HYSTeresis` on page 1627
`SBUS<sb>:I3C:SDA:HYSTeresis` on page 1628

Show threshold lines
If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also Show threshold lines.

Remote command:
SBUS<sb>:THReshold on page 1492

14.6.2.3 Display settings

For details about the display settings, see Section 14.1.3.1, "Display settings", on page 511.

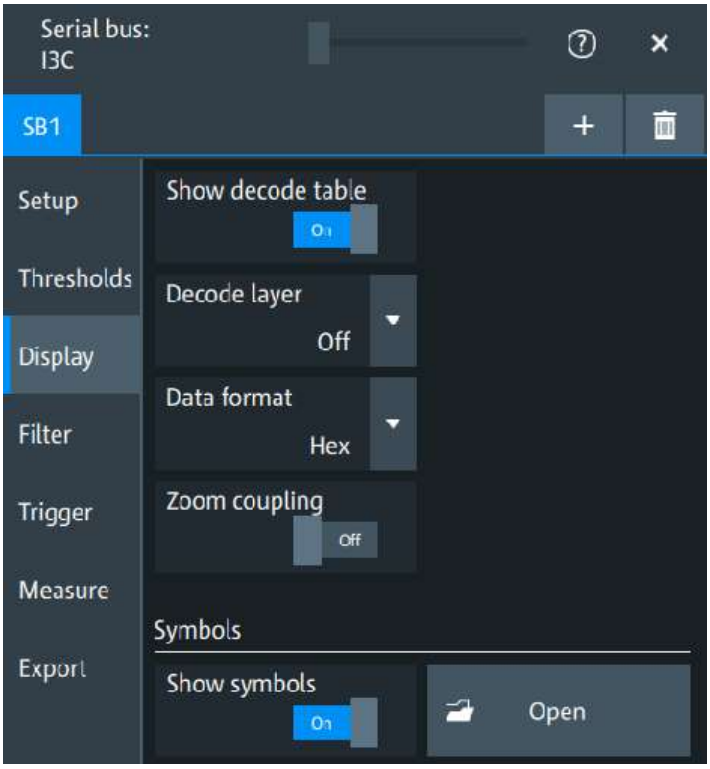

Decode layer
Selects the decode layer.

Decoding is performed in several steps, and the results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display.

See "Decode layer" on page 512.

Data format
See "Data format" on page 512.

Zoom coupling
See "Zoom coupling" on page 513.

Show symbols
Symbol lists are protocol-specific. Label lists for I3C are available in CSV format.

For details, see I3C symbols.

Remote command:
SBUS<sb>:I3C:SYMBols on page 1630
SBUS<sb>:I3C:NEWList on page 1630

14.6.2.4 I3C symbols

For the I3C protocol, you can upload symbol lists containing IDs and a symbolic name for each node. You can load a file in one of the supported formats. Symbol lists for I3C are available in CSV format.

For each address, an I3C label file contains three values (or optionally two values, see "Address type" on page 615):

- Address type, 7-bit or 10-bit long
- Address value
- Symbolic label: name of the address, specifying its function in the bus network.

Example: I3C CSV file

```
# ------------------------------------------------------------------------------
@FILE_VERSION  = 1.00
@PROTOCOL_NAME = i3c
# ------------------------------------------------------------------------------
# Labels for I3C protocol
#   Column order: Identifier type, Identifier value, Label
# ------------------------------------------------------------------------------
7,0x1E,Voltage
7,38h,Pressure
7,2Ah,Temperature
7,16h,Speed
7,118,Acceleration
7,07h,HighSpeed_Master_0x3
7,51h,EEPROM
10,3A2h,DeviceSetup
10,1A3h,GatewayStatus
10,06Eh,LeftSensor
# ------------------------------------------------------------------------------
```

Address type

You can omit the address type, because I3C addresses are always 7-bit. Hence, the firmware also supports lines with only two entries: address value and symbolic label. For example, instead of "`7,0x1E,Voltage`", also "`0x1E,Voltage`" is valid.

14.6.3 I3C filter

Access: "Menu" > "Apps" > "Protocol" tab > "I3C" > "Filter" tab

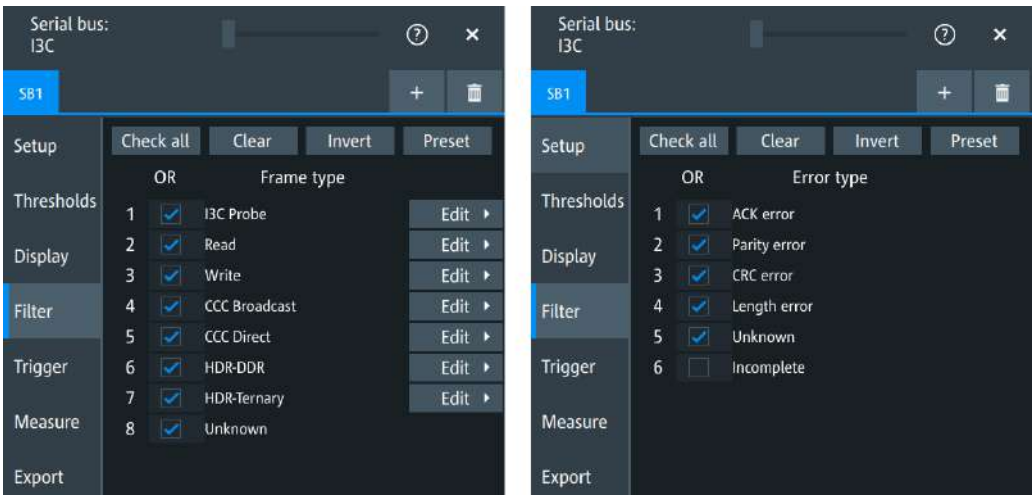

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all" Enables the filter for all available frames and error types.

"Clear" Disables the filter for all available frames and error types.

"Invert" Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types.

Remote command:
`SBUS<sb>:I3C:FILTer:CHKall` on page 1631
`SBUS<sb>:I3C:FILTer:CLR` on page 1632
`SBUS<sb>:I3C:FILTer:INVert` on page 1632
`SBUS<sb>:I3C:FILTer:RST` on page 1632

Frame type
Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.

For selected frame types, you can also specify conditions for the value of the fields in the "Edit" dialog.

Remote command:
`SBUS<sb>:I3C:FILTer:FRENable` on page 1632
`SBUS<sb>:I3C:FILTer:FRAMe<fr>:ENABle` on page 1632

Edit
Opens a dialog to define the details of the selected frame.

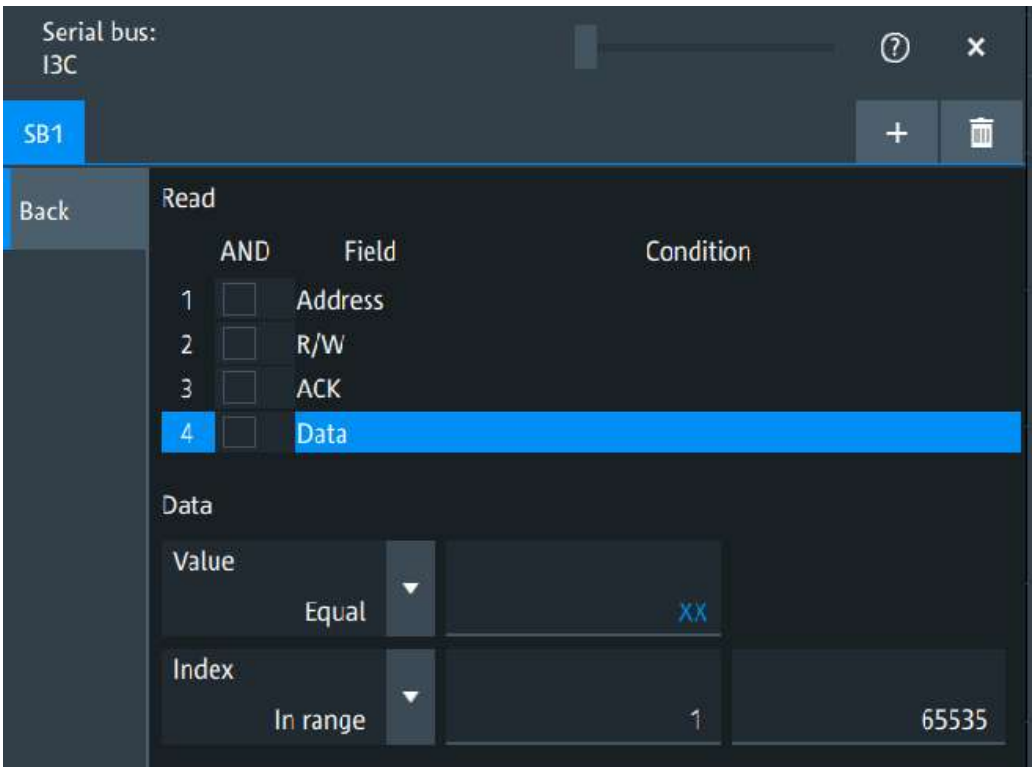

"Field" Enables the field type that you want to filter on for the selected frame. The available fields are "ACK", "Address", "CCC", "Command", "CRC", "Data", "Def Byte", "P", "R/W" and "Reserved".

Remote command:
`SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:ENABle` on page 1636
`SBUS<sb>:I3C:FILTer:FIENable` on page 1636

"Condition" Displays the value condition for the selected field.

Remote command:
`SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:BIT` on page 1636

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
`SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:DMAX` on page 1633
`SBUS<sb>:I3C:FILTer:DMAX` on page 1633
`SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:DMIN` on page 1633
`SBUS<sb>:I3C:FILTer:DMIN` on page 1633
`SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:DOPerator` on page 1634
`SBUS<sb>:I3C:FILTer:DOPerator` on page 1634

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:IMAX on page 1634
SBUS<sb>:I3C:FILTer:IMAX on page 1634
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:IMIN on page 1635
SBUS<sb>:I3C:FILTer:IMIN on page 1635
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:IOPerator on page 1635
SBUS<sb>:I3C:FILTer:IOPerator on page 1635

Error type
Enables filtering on the selected error type.

Remote command:
SBUS<sb>:I3C:FILTer:ERENable on page 1634
SBUS<sb>:I3C:FILTer:ERRor<n>:ENABle on page 1634

14.6.4 I3C format configuration

Access: "Menu" > "Apps" > "Protocol" tab > "I3C" > "Format".

See Section 14.1.5, "Format", on page 516.

Show format
Enables the format configuration and displays the frame formats in the honey-comb view and results. If enabled, the frame formats are also selectable for triggering and filtering.

Remote command:
SBUS<sb>:I3C:FORMat:SELect on page 1637

Add frame
Creates a frame format and adds it to the end of the frame list. A dialog opens to specify the frame details. The number of frame formats is limited to 100.

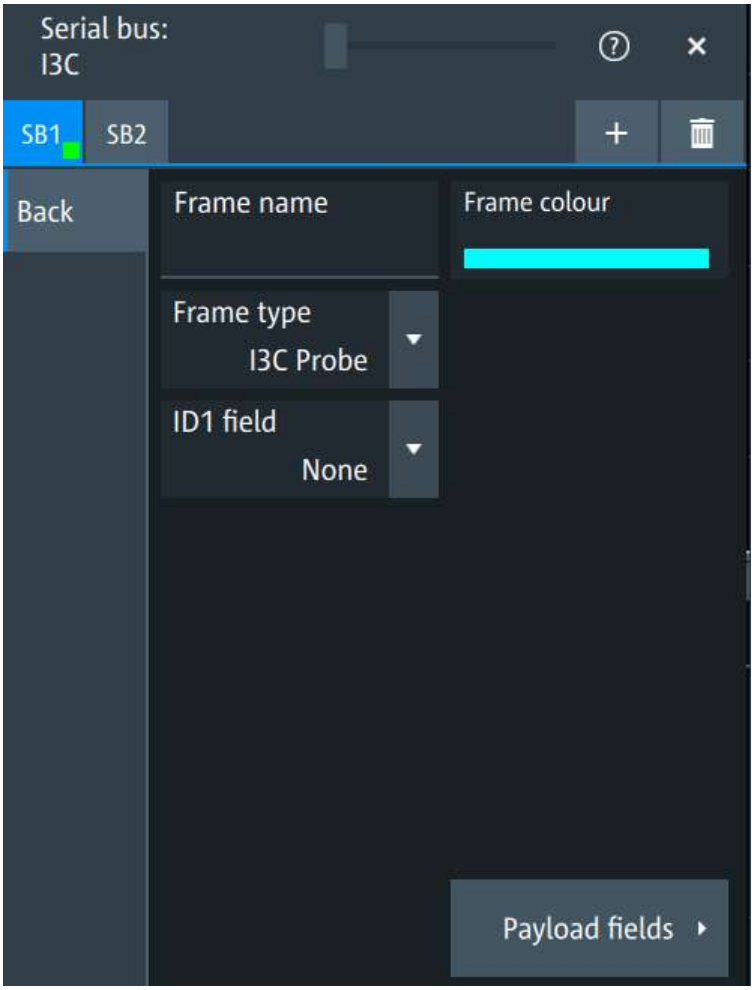

Remote command:
SBUS<sb>:I3C:FORMat:ADDFrame on page 1637

Edit list
Enables editing the frame list. If enabled, you can delete a frame format by clicking its "Delete" icon. In a list with several entries, you can move frame formats up or down by clicking the arrow buttons. To exit the editing mode, click "Edit list" again.

Remote command:
SBUS<sb>:I3C:FORMat:CLR on page 1638
SBUS<sb>:I3C:FORMat:FCOunt? on page 1638

Open
Opens a dialog for loading an existing list of frame formats in XML file format.

Remote command:
SBUS<sb>:I3C:FORMat:LOAD on page 1637

Save as
Opens a dialog for saving your current list of frame formats to an XML file. Saved frame formats can support efficient and convenient working.

Remote command:
SBUS<sb>:I3C:FORMat:SAVE on page 1638

Frame name
Specifies an arbitrary name to label the currently selected frame format. Ideally, use speaking names according to the specifications of the applicable protocol standard. Frame names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:I3C:FORMat:FRAMe<fr>:NAME on page 1639

Frame color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:I3C:FORMat:FRAMe<fr>:COLor on page 1639

Frame type
Select an original frame type.

Remote command:
SBUS<sb>:I3C:FORMat:FRAMe<fr>:TYPE on page 1640

ID<n> field
Select the first to third identifying field types.

Remote command:
SBUS<sb>:I3C:FORMat:FRAMe<fr>:ID1Field on page 1640
SBUS<sb>:I3C:FORMat:FRAMe<fr>:ID2Field on page 1640
SBUS<sb>:I3C:FORMat:FRAMe<fr>:ID3Field on page 1640

ID<n> value
Select the value of the corresponding field type.

Remote command:
SBUS<sb>:I3C:FORMat:FRAMe<fr>:ID1Value on page 1640
SBUS<sb>:I3C:FORMat:FRAMe<fr>:ID2Value on page 1640
SBUS<sb>:I3C:FORMat:FRAMe<fr>:ID3Value on page 1640

Payload fields
Opens the payload field configuration dialog. The format configuration of payload fields is optional and replaces the payload data of the identified frame.

Add field
Creates a new field description for the currently selected frame format and adds it to the end of the field list with color, bit position (order of transmission) and name. Brackets indicate how often bits will be repeated, [] indicates that this is an open array.

A dialog opens to specify the field details. The number of field descriptions is limited to 100.

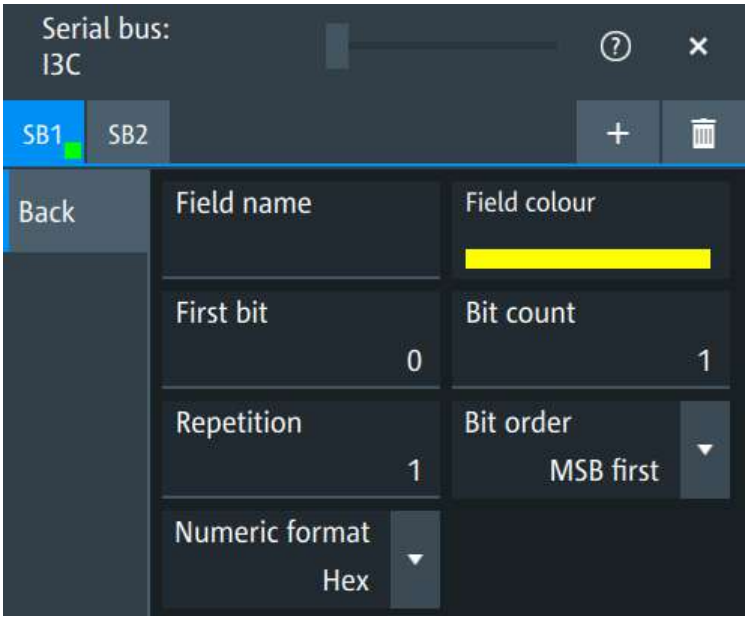

Remote command:
SBUS<sb>:I3C:FORMat:FRAMe<fr>:ADDField on page 1638

Field name
Specifies an arbitrary name for the currently selected field description. Ideally, use speaking names.

Field names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:NAME on page 1641

Field color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:COLor on page 1641

First bit
In order of transmission, sets the first bit of this field in the payload.

Remote command:
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:FSTBit on page 1641

Bit count
Sets the number of bits in the selected field, i.e., the field's length. Selecting the value opens a keypad showing allowed minimum and maximum values. You can set "Min", "Max", "Reset" or adjust with the "Inc" or "Dec" buttons by 1 or 10 (step size dependent). Use "CE" to restore the value used before the keypad opened.

If the "Condition" pattern length does not match the "Bit count":
- Too long, it is truncated.

- Too short, it is left-padded with 0.

Both truncation and padding happen on the left side of the condition and follow the configured "Bit order".

Examples for "Condition" "=100"):
- "Bit order" is "MSB":
  – Bit count = 2: truncated. Result: =00
  – Bit count = 4: padded. Result: =0100
- "Bit order" is LSB first (equivalent MSB-first representation is =001):
  – Bit count = 2: truncated. Result: =00 (LSB first), =00 (MSB first)
  – Bit count = 4: padded. Result: =0100 (LSB first), =0010 (MSB first)

Remote command:
`SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:BITCount` on page 1642

Repetition
Defines the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Remote command:
`SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:REPetition` on page 1642

Bit order
Selects, in which order the bits of a field's "Condition" value are evaluated:

- "LSB first": little endian, least significant bit first
- "MSB first": big endian, most significant bit first

Remote command:
`SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:BITorder` on page 1642

Numeric format
Selects how the "Condition" value is interpreted:

- Symbolic: Assigns a symbolic translation on the data fields. Only available for custom protocols.
- Value list: Assigns a custom name to each hexadecimal value; any value without an assigned value is shown as "Undefined".
- A*X+B: Assigns a linear function on the data fields.
- For details on the other numeric formats, see "Format-specific information" on page 532.

The following rules apply:
- If the condition contains at least one of "H", "h", "L", "l", "X", "x", and all other characters are only "1" and/or "0", the value is always treated as binary, regardless of the selected numeric format.
- "x" and "X" are wildcards and are supported only in binary format or when the string is auto-interpreted as binary per the rule above.
  Examples for format set to "HEX":
  – "=1HL111000": valid (read as binary)
  – "=0x10101": valid (read as binary; "x" acts as wildcard, not a hex prefix)
  – "=1010": valid (read as HEX, with a total of 16 bits)
  – "=0x5A": valid (read as HEX "5A", because "0x" is a valid hex prefix; entering 5A alone is recommended)

– "=5X12": invalid
– "=1H33": invalid

Remote command:
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:FORMat on page 1643

Add value
Creates a new hexagonal value for customization.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:ADDValue on page 1643

Value
Defines the hexagonal value to convert it into a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue on page 1644

Label
Defines the label to convert the corresponding hexagonal value to a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel on page 1644

Unit
Defines a unit for the linear function.

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:UNIT on page 1645

Parameter A,B
Defines the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:PARA on page 1645
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:PARB on page 1645

14.6.5 I3C software trigger

14.6.5.1 Setup A trigger

Before setting up the software trigger for the protocols, a trigger A event needs to be set up.

14.6.5.2 Software trigger settings

Access: "Menu" > "Apps" > "Protocol" tab > "I3C" > "Trigger" tab > "Setup SB Trigger"

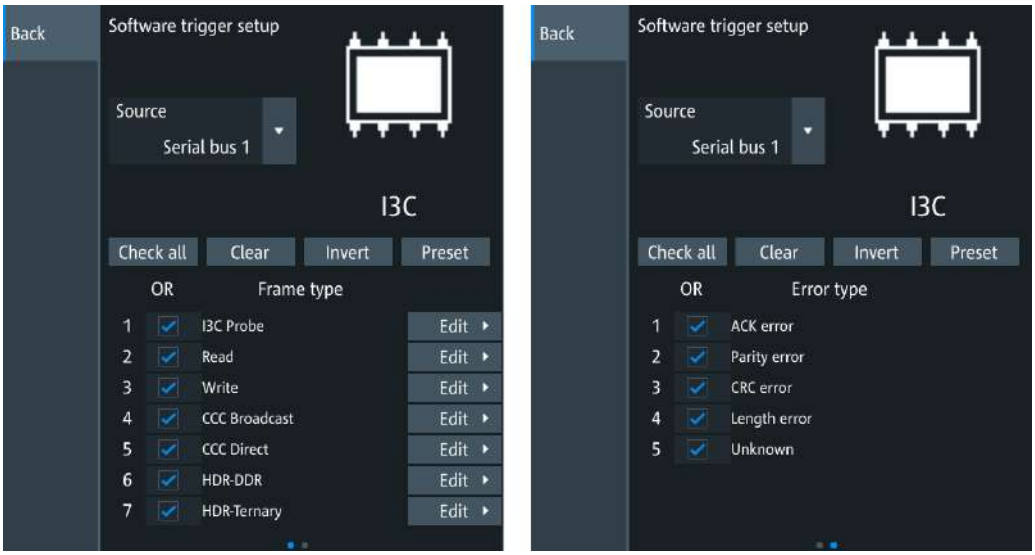

In the "Software Trigger" tab, you can define the settings to trigger on the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to trigger on.

"Check all" Enables the software trigger for all available frames and error types.

"Clear" Disables the software trigger for all available frames and error types.

"Invert" Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types for the software trigger.

Remote command:
`TRIGger:SBSW:I3C:CHKall` on page 1646
`TRIGger:SBSW:I3C:CLR` on page 1646
`TRIGger:SBSW:I3C:INVert` on page 1647
`TRIGger:SBSW:I3C:RST` on page 1647

Frame type
Selects the frame type that you want to trigger on. You can trigger on all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

The following frames are available: "CCC Broadcast", "CCC Direct", "HDR-DDR", "HDR-Ternary", "I3C Probe", "Read" and "Write".

Remote command:
`TRIGger:SBSW:I3C:FRENable` on page 1647
`TRIGger:SBSW:I3C:FRAMe<fr>:ENABle` on page 1647

Edit
Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

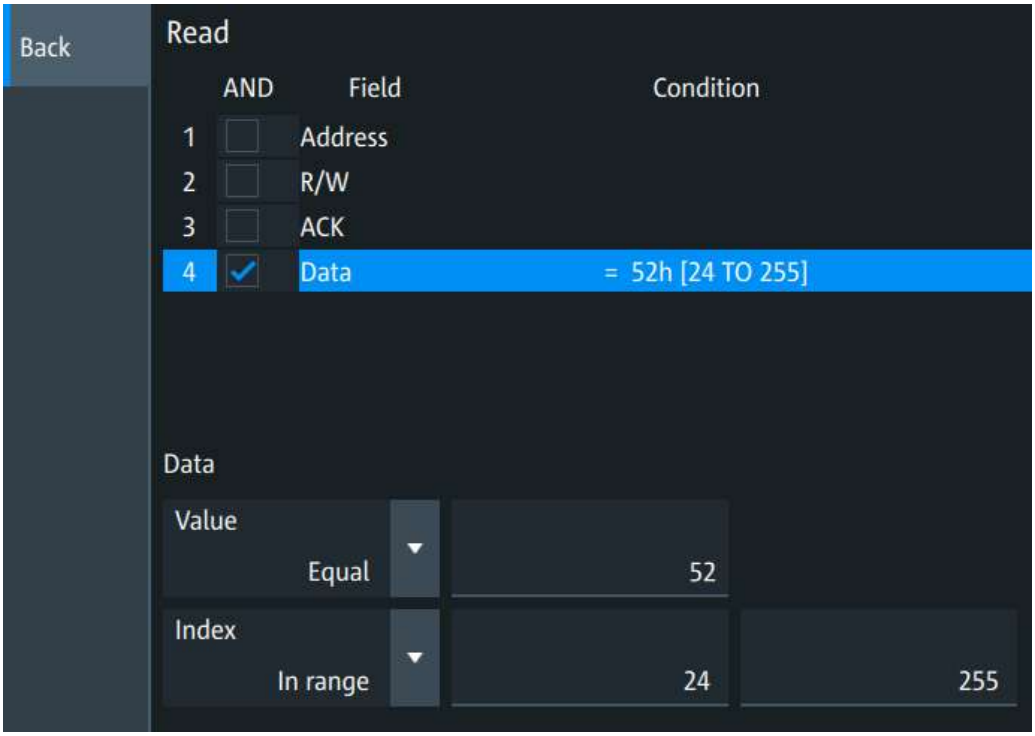

"Field" Enables the field type that you want to trigger on for the selected frame.
The available fields are "ACK", "Address", "CCC", "Command", "CRC", "Data", "Def Byte", "P", "R/W" and "Reserved".

Remote command:
`TRIGger:SBSW:I3C:FIENable` on page 1649
`TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:ENABle` on page 1649

"Condition" Displays the value condition for the selected field.

Remote command:
TRIGger:SBSW:I3C:BIT on page 1647
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:BIT on page 1647

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
TRIGger:SBSW:I3C:DMAX on page 1648
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:DMAX on page 1648
TRIGger:SBSW:I3C:DMIN on page 1648
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:DMIN on page 1648
TRIGger:SBSW:I3C:DOPerator on page 1648
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:DOPerator on page 1648

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
TRIGger:SBSW:I3C:IMAX on page 1649
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:IMAX on page 1649
TRIGger:SBSW:I3C:IMIN on page 1650
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:IMIN on page 1650
TRIGger:SBSW:I3C:IOPerator on page 1650
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:IOPerator on page 1650

Error type
Enables triggering on the selected error type.

Remote command:
TRIGger:SBSW:I3C:ERENable on page 1650
TRIGger:SBSW:I3C:ERRor<m>:ENABle on page 1650

14.6.6 Measure

The "Setup Measurement" button opens the dialog for automatic measurements in the "Protocol" category for the selected serial bus.

See Section 10.2.8.2, "Settings for protocol measurements", on page 311.

14.6.7 I3C decode results

To enable the decoding, see Section 14.1.9.3, "Decoding protocol signals", on page 531.

For more information on decoding I3C, you can also refer to the video, available on the Rohde & Schwarz YouTube channel: Decoding I2C with MXO Series Oscilloscope.

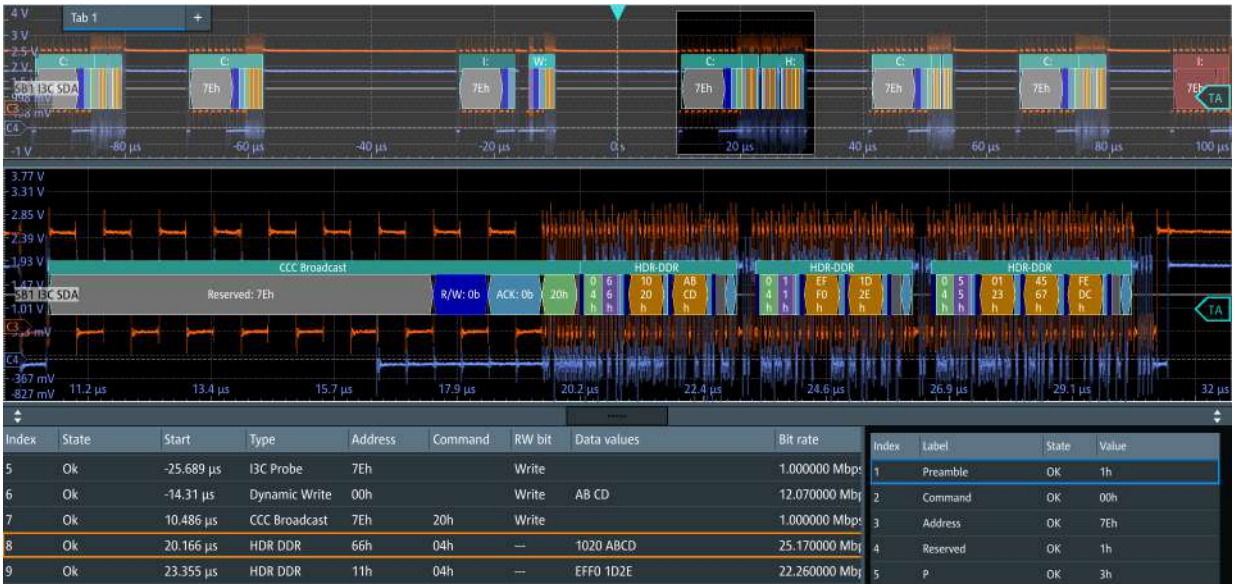

Figure 14-19: Decoded I3C signal

Purple = Address byte
Blue = R/W bit
Cyan = ACK bit
Red = NACK bit
Gold = Data byte
Turquoise = Write frame
Green = Read frame
Crimson red = Incomplete frame

The decode results table contains information about all decoded frames.

Table 14-9: Content of the decode results table

Column	Description
Index	Index of the decoded frame
State	Overall state of the frame. "Incomplete" indicates that the frame is not completely contained in the acquisition. Change the horizontal scale, or move the reference point to the left to get a longer acquisition.
Start	Time of frame start
Type	Frame type
Symbol	Symbolic label of the frame. Available only, if "Show symbols" is enabled in the "Display" tab and a symbols list is loaded.
Address	Value of the address field of the frame, if available
Command	Value of the command field of the frame, if available
RW bit	Value of the read/write bit
Data values	The actual data payload values. Select the data format in the "Display" tab.
Bit rate	Calculated bit rate for this frame

When you select a frame in the decode results table, its field content is shown in the details table to the right.

Table 14-10: Content of the frame details table

Item	Description
Index	Number of the decoded field
Label	Label (name) of each word of the data field
State	State of each word of the data field, for example "OK" or "Incomplete"
Value	Value of each word of the data field

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 1491

Remote commands

Remote commands to retrieve decode results are described in Section 18.18.6.5, "Decode results", on page 1651.

You can also export the decode results. For details see Section 14.1.9.4, "Exporting decode results", on page 531.

Example of an I3C export file

```
Index,Start,Stop,State,Type,Address,Command,RWBit,CRC,Bit-rate
1,-4.38003e-05,-3.19206e-05,'OK','BRDC',7Eh,00h,'WRIT',---,1000000
2,3.45864e-08,8.9946e-06,'OK','PROB',7Eh,---,'WRIT',---,1000000
3,1.14144e-05,1.54345e-05,'OK','WRIT',00h,---,'WRIT',---,12070000
4,3.62096e-05,4.58891e-05,'OK','BRDC',7Eh,20h,'WRIT',---,1000000
5,4.58891e-05,4.87292e-05,'OK','HDDR',66h,04h,---,05h,25170000
6,4.9079e-05,5.19291e-05,'OK','HDDR',11h,04h,---,1Fh,22270000
7,5.2279e-05,5.59291e-05,'OK','HDDR',55h,04h,---,1Bh,22280000

Details frame 1
Index,Label,State,Value
1,'Data: 1','OK',12h
2,'Data: 2','OK',34h
3,'Data: 3','OK',56h

Details frame 3
Index,Label,State,Value
1,'Data: 1','OK',ABh
2,'Data: 2','OK',CDh

Details frame 5
Index,Label,State,Value
```

```
1,'Data: 1','OK',1020h
2,'Data: 2','OK',ABCDh

Details frame 6
Index,Label,State,Value
1,'Data: 1','OK',EFF0h
2,'Data: 2','OK',1D2Eh

Details frame 7
Index,Label,State,Value
1,'Data: 1','OK',0123h
2,'Data: 2','OK',4567h
3,'Data: 3','OK',FEDCh
```

14.7 D-PHY (option R&S MXO5-K580)

The D-PHY is a specification developed by the Mobile Industry Processor Interface (MIPI) alliance as a standard for the communication of high-speed components, like cameras and displays, within mobile devices.

- D-PHY basics 629
- D-PHY configuration 630
- D-PHY filter 635
- D-PHY format configuration 638
- D-PHY software trigger 644
- D-PHY decode results 647

14.7.1 D-PHY basics

A D-PHY interface consists of one clock lane and up to four data lanes. The D-PHY data lanes have three operational modes:

- A high speed mode (HS): differential signal with a data rate of 80 Mbps to 1.5 GHz. This mode is used for the transmission of large volumes of information.
- A low power mode (LP): single-ended signal with a data rate < 10 Mbps. This mode is used for conserving power.
- An alternate low power mode (ALP): single-ended signal with a data rate < 10 Mbps. This mode is an alternative to LP and used for control commands and low-bandwidth data transmission.

D-PHY provides a framework for other protocols such as the Display Serial Interface (DSI) and Camera Serial Interface (CSI-2).

Supported frame types

- HS data: HS payload frame that carries user data on the HS channel.
- HS skew calibration: Calibration burst used to measure and correct timing skew between the transmitter and receiver on the HS channel.

- HS alternate calibration: Backup/calibration burst (alternative pattern) employed when the primary HS skew calibration fails or is unavailable.
- LP HS request: LP mode command that asks the remote node to switch into or acknowledge the HS mode.
- Escape mode: Special framing mode that allows the transmission of control symbols or error handling sequences that are otherwise interpreted as data.
- Turnaround: Short frame that signals the end of a transmission burst and grants the medium to the opposite direction (TX → RX).
- ALP control burst: Signaling sequence that carries control information in alternate low power mode.
- Long packet: Packet type defined at the higher-level protocols, CSI-2 and DSI, and not at the D-PHY layer. Its data field contains an arbitrary number of bytes.
- Short packet: Packet type defined at the higher-level protocols, CSI-2 and DSI, and not at the D-PHY layer. Its data field contains one byte.

14.7.2 D-PHY configuration

14.7.2.1 D-PHY configuration settings

Access: "Menu" > "Apps" > "Protocol" tab > "D-PHY" > "Setup".

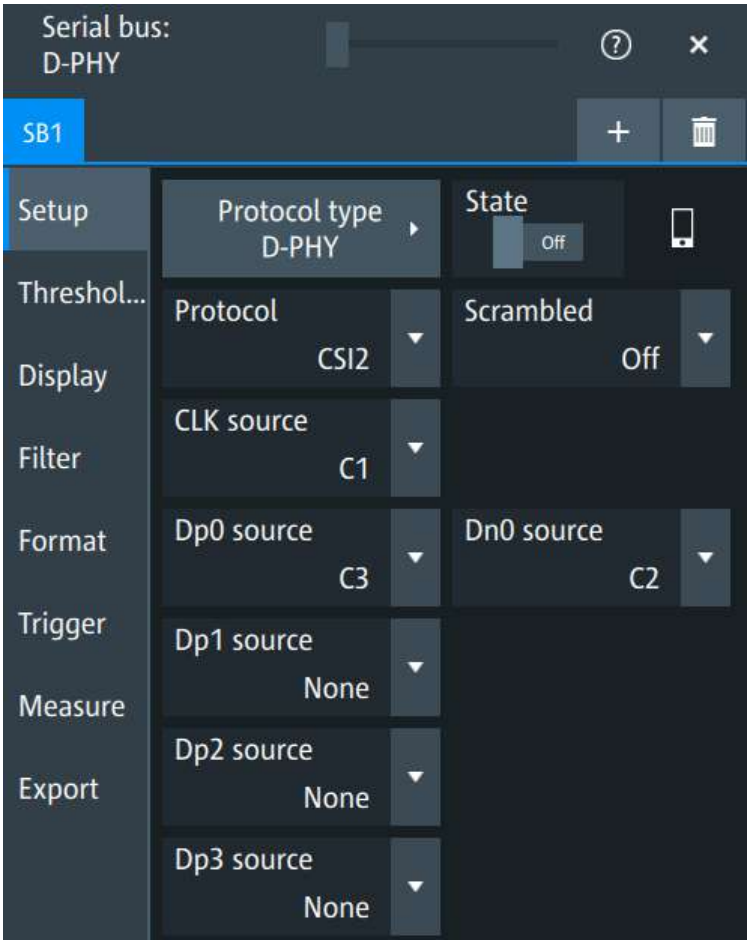

Make sure that the tab of the correct serial bus is selected.

Protocol type
Selects the protocol type to be decoded.

Remote command:
`SBUS<sb>:TYPE` on page 1489

State
Enables the decoding of the selected bus. The signal icon of the bus appears on the signal bar.

Remote command:
`SBUS<sb>[:STATe]` on page 1489

Protocol
Select which MIPI-based protocol is used.

- "DPHY": Raw MIPI D-PHY signalling, no higher-level framing.
- "CSI2": MIPI Camera Serial Interface2, D-PHY transport together with the standard CSI-2 packet format for image-sensor data.

- "DSI": MIPI Display Serial Interface, D-PHY transport together with the DSI command/video packet format for driving displays.

Remote command:
SBUS<sb>:DPHY:MODE on page 1661

Scrambled
Enables data scrambling that randomises the high-speed line bit-stream

This setting is only available, for "Protocol" = "CSI2" or "DSI".

Remote command:
SBUS<sb>:DPHY:SCRambled on page 1661

CLK source
Sets the source of the clock line.

Remote command:
SBUS<sb>:DPHY:CLK:SOURce on page 1662

Dp0, Dn0 source
Selects the source of the low-power data lines.

Remote command:
SBUS<sb>:DPHY:DPZero:SOURce on page 1663
SBUS<sb>:DPHY:DNZero:SOURce on page 1663

DP<n> source
Selects the source of the high-speed data lines.

Remote command:
SBUS<sb>:DPHY:DPONe:SOURce on page 1665
SBUS<sb>:DPHY:DPTWo:SOURce on page 1665
SBUS<sb>:DPHY:DPTHree:SOURce on page 1665

14.7.2.2 Threshold settings

Access: "Menu" > "Apps" > "Protocol" tab > "SPMI" > "Thresholds".

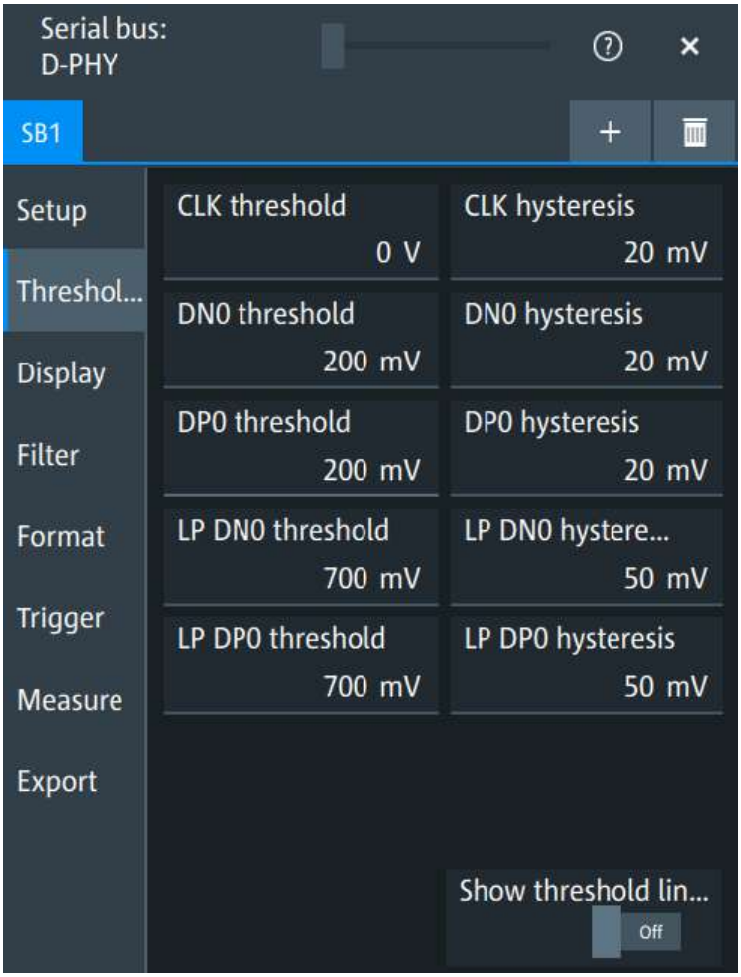

CLK threshold, CLK hysteresis
Sets the threshold for the clock line. Enter the value directly in the fields.

Additional to the threshold, you can also set a hysteresis.

Remote command:
`SBUS<sb>:DPHY:CLK:THReshold` on page 1662
`SBUS<sb>:DPHY:CLK:HYSTeresis` on page 1662

Dp0, Dn0 threshold, Dp0, Dn0 hysteresis
Sets the threshold for the low-power data lines. Enter the value directly in the fields.

Additional to the threshold, you can also set a hysteresis.

Remote command:
`SBUS<sb>:DPHY:DPZero:THReshold` on page 1663
`SBUS<sb>:DPHY:DPZero:HYSTeresis` on page 1664
`SBUS<sb>:DPHY:DNZero:THReshold` on page 1663
`SBUS<sb>:DPHY:DNZero:HYSTeresis` on page 1664

LP Dp0, LP Dn0 threshold, LP Dp0, LP Dn0 hysteresis
Sets the threshold for the LP transitions. Enter the value directly in the fields.

Additional to the threshold, you can also set a hysteresis.

Remote command:
SBUS<sb>:DPHY:DPZero:LPTHreshold on page 1664
SBUS<sb>:DPHY:DPZero:LPHYsteresis on page 1665
SBUS<sb>:DPHY:DNZero:LPTHreshold on page 1664
SBUS<sb>:DPHY:DNZero:LPHYsteresis on page 1665

DP<n> threshold, DP<n> hysteresis
Sets the threshold for the for the digitization of high-speed data lines. Enter the value directly in the fields.

Additional to the threshold, you can also set a hysteresis.

Remote command:
SBUS<sb>:DPHY:DPONe:THReshold on page 1665
SBUS<sb>:DPHY:DPONe:HYSTeresis on page 1666
SBUS<sb>:DPHY:DPTWo:THReshold on page 1665
SBUS<sb>:DPHY:DPTWo:HYSTeresis on page 1666
SBUS<sb>:DPHY:DPTHree:THReshold on page 1665
SBUS<sb>:DPHY:DPTHree:HYSTeresis on page 1666

Show threshold lines
If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also Show threshold lines.

Remote command:
SBUS<sb>:THReshold on page 1492

14.7.2.3 Display settings

For details about the display settings, see Section 14.1.3.1, "Display settings", on page 511.

Decode layer
Selects the decode layer.

Decoding is performed in several steps, and the results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display.

See "Decode layer" on page 512.

"HS edges"	High-speed edges of each lane, showing the transitions in high-speed mode.
"HS bits"	High-speed bits of each lane.
"HS bytes"	High-speed bytes of each lane.
"HS merged"	Bytes that are combined/split into words.
"LP edges"	Low-power transition edges from the single-ended DP0 and DN0 signals.
"LP states"	Low-power states LP00, LP01, LP10, LP11 of DP0 and DN0.

"LP bits" Low-power bits of each lane.

14.7.3 D-PHY filter

Access: "Menu" > "Apps" > "Protocol" tab > "D-PHY" > "Filter" tab

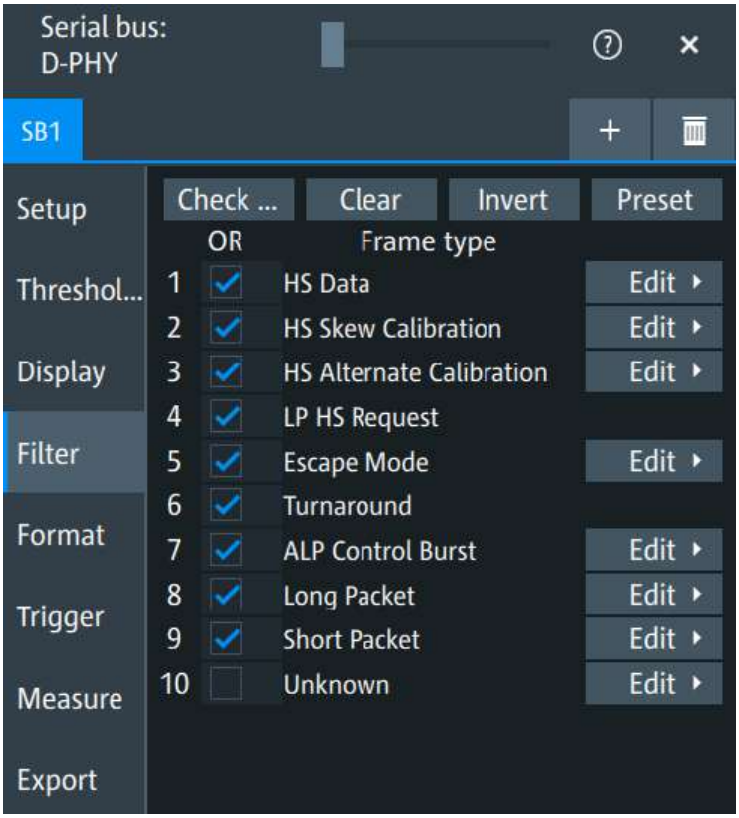

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all" Enables the filter for all available frames and error types.

"Clear" Disables the filter for all available frames and error types.

"Invert" Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types.

Remote command:
`SBUS<sb>:DPHY:FILTer:CHKall` on page 1667
`SBUS<sb>:DPHY:FILTer:CLR` on page 1667
`SBUS<sb>:DPHY:FILTer:INVert` on page 1668
`SBUS<sb>:DPHY:FILTer:RST` on page 1668

Frame type
Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.

For selected frame types, you can also specify conditions for the value of the fields in the "Edit" dialog.

As soon as you create frame formats, those types also appear in this list.

Remote command:
`SBUS<sb>:DPHY:FILTer:FRAMe<fr>:ENABle` on page 1670
`SBUS<sb>:DPHY:FILTer:FRENable` on page 1670

Edit
Opens a dialog to define the details of the selected frame.

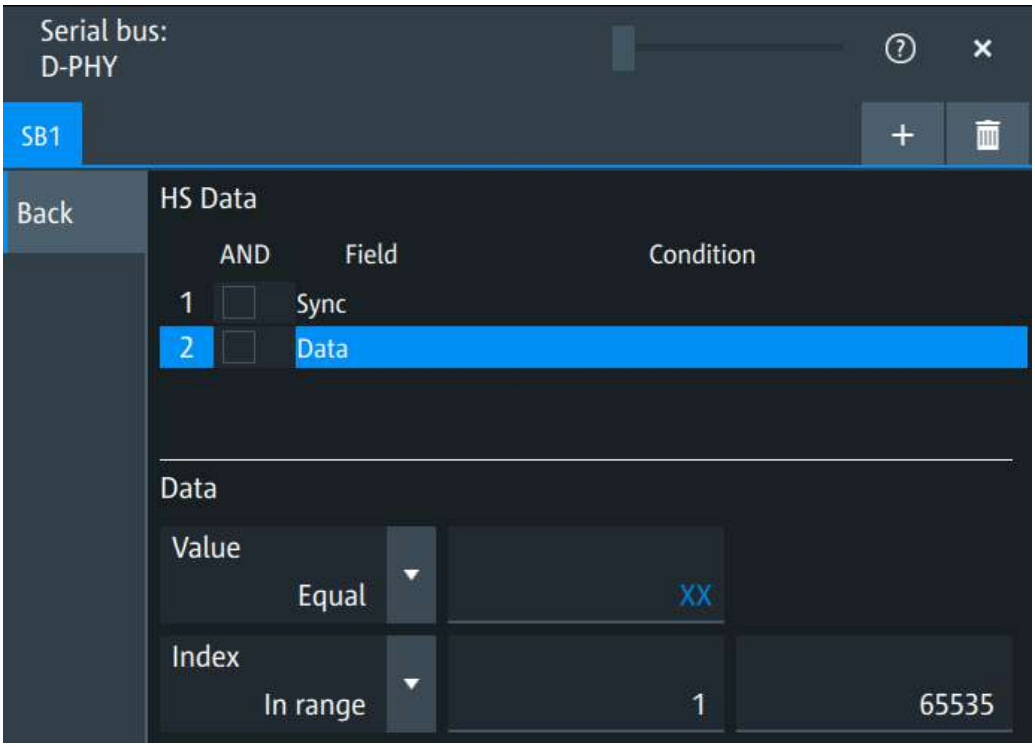

"Field" Enables the field type that you want to filter on for the selected frame.

As soon as you create field formats, those types also appear in this list.
The available fields depend on the selected frame type.

Remote command:
`SBUS<sb>:DPHY:FILTer:FIENable` on page 1670
`SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:ENABle` on page 1670

"Condition" Displays the value condition for the selected field.

Remote command:
SBUS<sb>:DPHY:FILTer:BIT on page 1668
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:BIT on page 1668

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
SBUS<sb>:DPHY:FILTer:DMAX on page 1669SBUS<sb>:SPMI:FILTer:DMAX on page 2052
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:DMAX on page 1669
SBUS<sb>:DPHY:FILTer:DMIN on page 1669
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:DMIN on page 1669
SBUS<sb>:DPHY:FILTer:DOPerator on page 1670
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:DOPerator on page 1670

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
SBUS<sb>:DPHY:FILTer:IMAX on page 1671
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:IMAX on page 1671
SBUS<sb>:DPHY:FILTer:IMIN on page 1671
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:IMIN on page 1671
SBUS<sb>:DPHY:FILTer:IOPerator on page 1672
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:IOPerator on page 1672

Error type
Enables filtering on the selected error type.

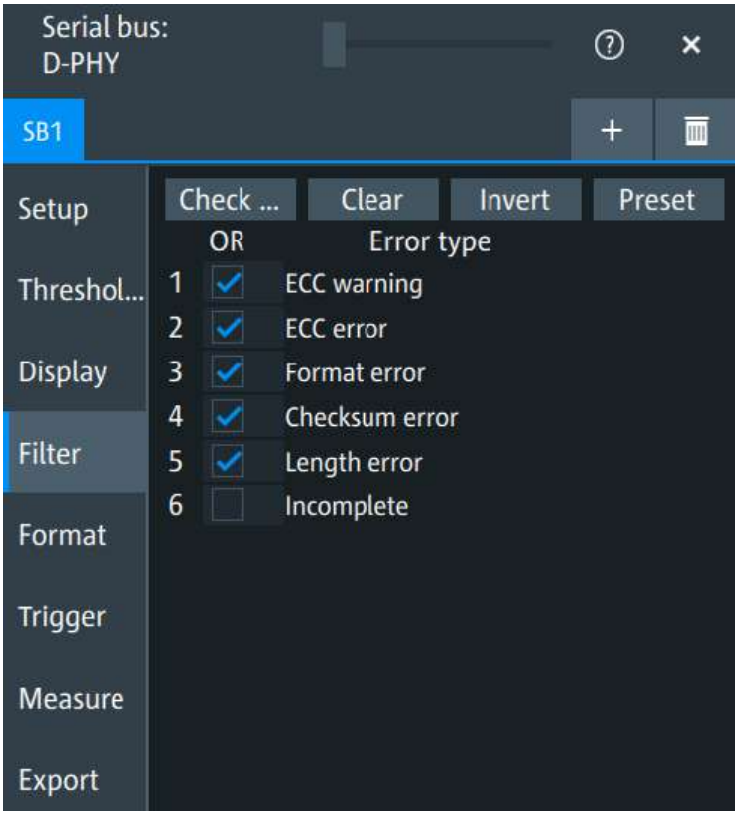

Remote command:
SBUS<sb>:DPHY:FILTer:ERRor<n>:ENABle on page 1669
SBUS<sb>:DPHY:FILTer:ERENable on page 1669

14.7.4 D-PHY format configuration

Access: "Menu" > "Apps" > "Protocol" tab > "D-PHY" > "Format".

See Section 14.1.5, "Format", on page 516.

Show format
Enables the format configuration and displays the frame formats in the honey-comb view and results. If enabled, the frame formats are also selectable for triggering and filtering.

Remote command:
SBUS<sb>:DPHY:FORMat:SELect on page 1673

Add frame
Creates a frame format and adds it to the end of the frame list. A dialog opens to specify the frame details. The number of frame formats is limited to 100.

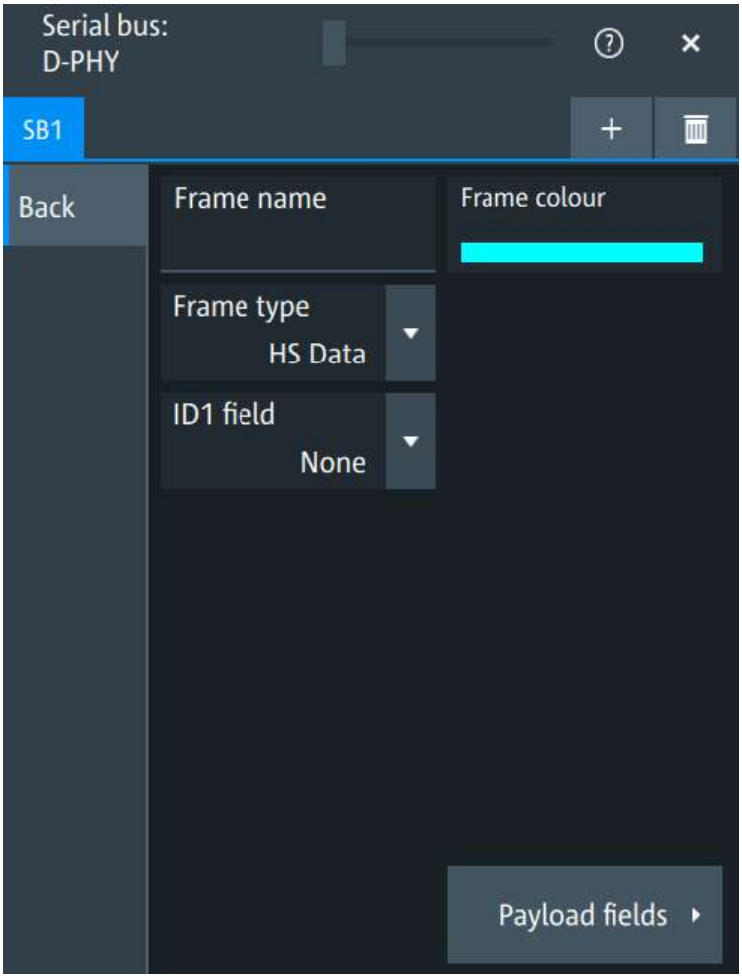

Remote command:
SBUS<sb>:DPHY:FORMat:ADDFrame on page 1673

Edit list
Enables editing the frame list. If enabled, you can delete a frame format by clicking its "Delete" icon. In a list with several entries, you can move frame formats up or down by clicking the arrow buttons. To exit the editing mode, click "Edit list" again.

Remote command:
SBUS<sb>:DPHY:FORMat:CLR on page 1674
SBUS<sb>:DPHY:FORMat:FCOunt? on page 1674

Open
Opens a dialog for loading an existing list of frame formats in XML file format.

Remote command:
SBUS<sb>:DPHY:FORMat:LOAD on page 1673

Save as
Opens a dialog for saving your current list of frame formats to an XML file. Saved frame formats can support efficient and convenient working.

Remote command:
SBUS<sb>:DPHY:FORMat:SAVE on page 1673

Frame name
Specifies an arbitrary name to label the currently selected frame format. Ideally, use speaking names according to the specifications of the applicable protocol standard. Frame names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:NAME on page 1675

Frame color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:COLor on page 1675

Frame type
Select an original frame type.

Remote command:
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:TYPE on page 1675

ID<n> field
Select the first to third identifying field types.

Remote command:
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ID1Field on page 1676
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ID2Field on page 1676
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ID3Field on page 1676

ID<n> value
Select the value of the corresponding field type.

Remote command:
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ID1Value on page 1676
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ID2Value on page 1676
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ID3Value on page 1676

Payload fields
Opens the payload field configuration dialog. The format configuration of payload fields is optional and replaces the payload data of the identified frame.

Add field
Creates a new field description for the currently selected frame format and adds it to the end of the field list with color, bit position (order of transmission) and name. Brackets indicate how often bits will be repeated, [] indicates that this is an open array.

A dialog opens to specify the field details. The number of field descriptions is limited to 100.

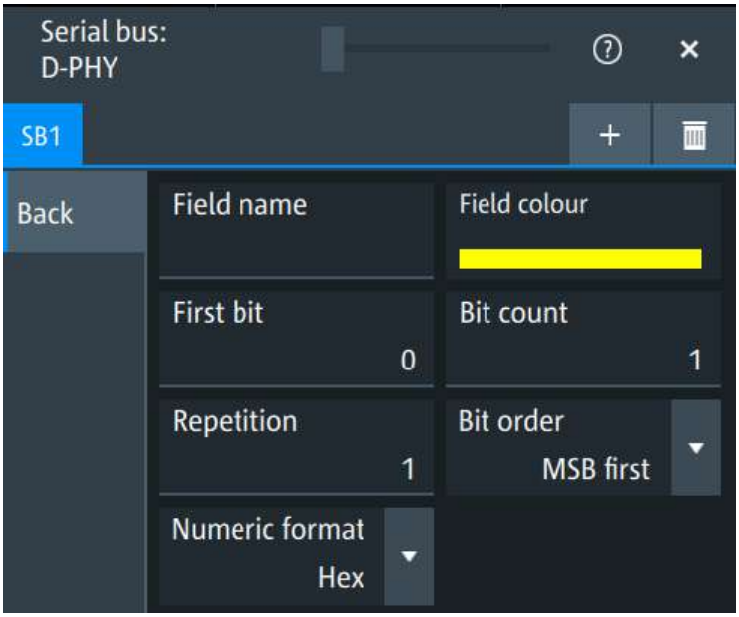

Remote command:
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ADDField on page 1674

Field name
Specifies an arbitrary name for the currently selected field description. Ideally, use speaking names.

Field names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:NAME on page 1676

Field color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:COLor on page 1676

First bit
In order of transmission, sets the first bit of this field in the payload.

Remote command:
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:FSTBit on page 1677

Bit count
Sets the number of bits in the selected field, i.e., the field's length. Selecting the value opens a keypad showing allowed minimum and maximum values. You can set "Min", "Max", "Reset" or adjust with the "Inc" or "Dec" buttons by 1 or 10 (step size dependent). Use "CE" to restore the value used before the keypad opened.

If the "Condition" pattern length does not match the "Bit count":
- Too long, it is truncated.

- Too short, it is left-padded with 0.

Both truncation and padding happen on the left side of the condition and follow the configured "Bit order".

Examples for "Condition" "=100"):
- "Bit order" is "MSB":
  – Bit count = 2: truncated. Result: =00
  – Bit count = 4: padded. Result: =0100
- "Bit order" is LSB first (equivalent MSB-first representation is =001):
  – Bit count = 2: truncated. Result: =00 (LSB first), =00 (MSB first)
  – Bit count = 4: padded. Result: =0100 (LSB first), =0010 (MSB first)

Remote command:
`SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:BITCount` on page 1677

Repetition
Defines the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Remote command:
`SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:REPetition` on page 1678

Bit order
Selects, in which order the bits of a field's "Condition" value are evaluated:

- "LSB first": little endian, least significant bit first
- "MSB first": big endian, most significant bit first

Remote command:
`SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:BITorder` on page 1678

Numeric format
Selects how the "Condition" value is interpreted:

- Symbolic: Assigns a symbolic translation on the data fields. Only available for custom protocols.
- Value list: Assigns a custom name to each hexadecimal value; any value without an assigned value is shown as "Undefined".
- A*X+B: Assigns a linear function on the data fields.
- For details on the other numeric formats, see "Format-specific information" on page 532.

The following rules apply:
- If the condition contains at least one of "H", "h", "L", "l", "X", "x", and all other characters are only "1" and/or "0", the value is always treated as binary, regardless of the selected numeric format.
- "x" and "X" are wildcards and are supported only in binary format or when the string is auto-interpreted as binary per the rule above.
  Examples for format set to "HEX":
  – "=1HL111000": valid (read as binary)
  – "=0x10101": valid (read as binary; "x" acts as wildcard, not a hex prefix)
  – "=1010": valid (read as HEX, with a total of 16 bits)
  – "=0x5A": valid (read as HEX "5A", because "0x" is a valid hex prefix; entering 5A alone is recommended)

– "=5X12": invalid
– "=1H33": invalid

Remote command:
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:FORMat on page 1678

Add value
Creates a new hexagonal value for customization.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:ADDValue on page 1679

Value
Defines the hexagonal value to convert it into a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue on page 1680

Label
Defines the label to convert the corresponding hexagonal value to a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel on page 1680

Unit
Defines a unit for the linear function.

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:UNIT on page 1680

Parameter A,B
Defines the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:PARA on page 1681
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:PARB on page 1681

14.7.5 D-PHY software trigger

14.7.5.1 Setup A trigger

Before setting up the software trigger for the protocols, a trigger A event needs to be set up.

14.7.5.2 Software trigger settings

Access: "Menu" > "Apps" > "Protocol" tab > "D-PHY" > "Trigger" tab > "Setup Software Trigger" > "Setup SB Trigger".

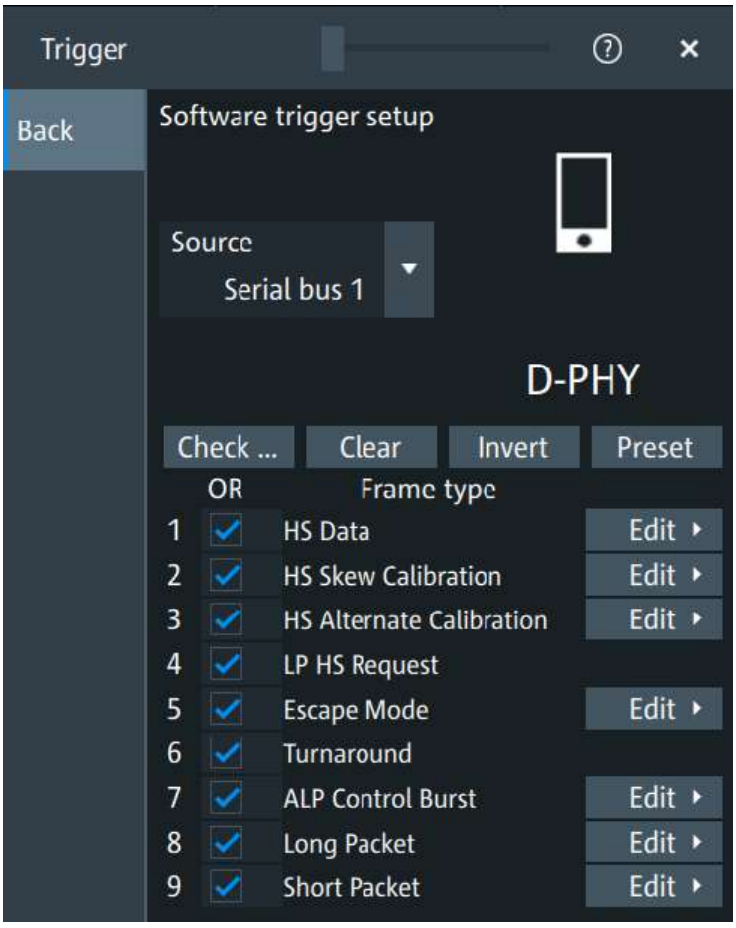

In the "Software Trigger" tab, you can define the settings to trigger on the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to trigger on.

"Check all" Enables the software trigger for all available frames and error types.

"Clear" Disables the software trigger for all available frames and error types.

"Invert" Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types for the software trigger.

Remote command:
`TRIGger:SBSW:DPHY:CHKall` on page 1682
`TRIGger:SBSW:DPHY:CLR` on page 1682
`TRIGger:SBSW:DPHY:INVert` on page 1682
`TRIGger:SBSW:DPHY:RST` on page 1683

Frame type
Selects the frame type that you want to trigger on. You can trigger on all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

As soon as you create frame formats, those types also appear in this list.

Remote command:
`TRIGger:SBSW:DPHY:FRENable` on page 1683
`TRIGger:SBSW:DPHY:FRAMe<fr>:ENABle` on page 1683

Edit
Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

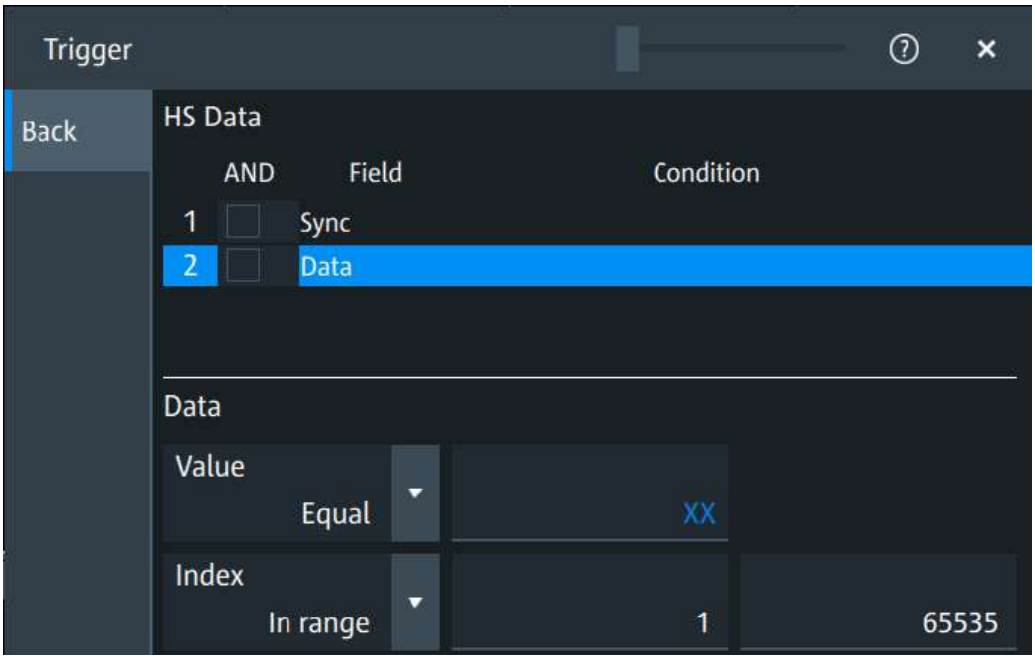

"Field" Enables the field type that you want to trigger on for the selected frame.

As soon as you create field formats, those types also appear in this list.

Remote command:
TRIGger:SBSW:DPHY:FIENable on page 1685
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:ENABle on page 1685

"Condition" Displays the value condition for the selected field.

Remote command:
TRIGger:SBSW:DPHY:BIT on page 1683
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:BIT on page 1683

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
TRIGger:SBSW:DPHY:DMAX on page 1684
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:DMAX on page 1684
TRIGger:SBSW:DPHY:DMIN on page 1684
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:DMIN on page 1684
TRIGger:SBSW:DPHY:DOPerator on page 1684
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:DOPerator on page 1684

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
TRIGger:SBSW:DPHY:IMAX on page 1685
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:IMAX on page 1685
TRIGger:SBSW:DPHY:IMIN on page 1686
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:IMIN on page 1686
TRIGger:SBSW:DPHY:IOPerator on page 1686
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:IOPerator on page 1686

Error type
Enables triggering on the selected error type.

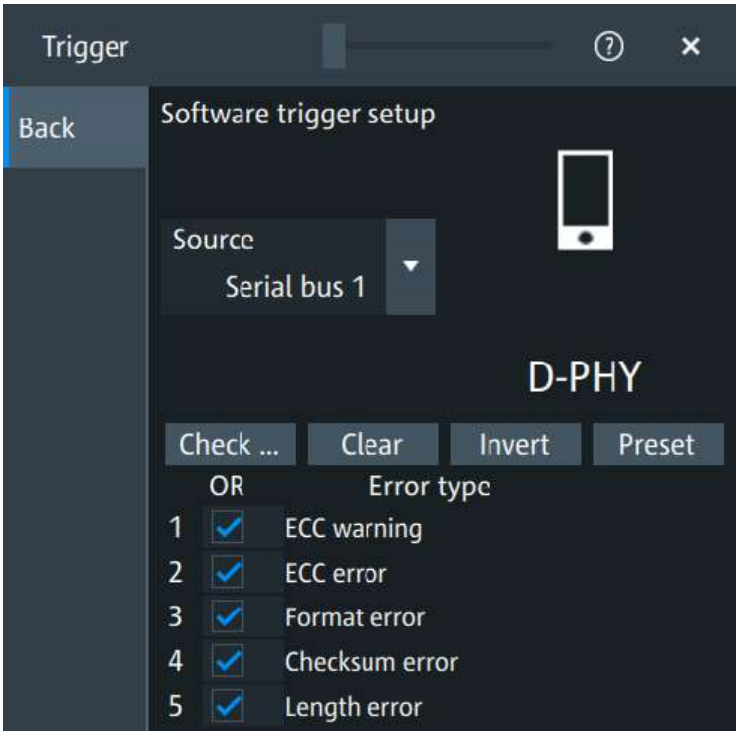

Remote command:
`TRIGger:SBSW:DPHY:ERENable` on page 1686
`TRIGger:SBSW:DPHY:ERRor<m>:ENABle` on page 1686

14.7.6 D-PHY decode results

To enable the decoding, see Section 14.1.9.3, "Decoding protocol signals", on page 531.

Decode results table

The "Decode results" table contains information about all decoded frames.

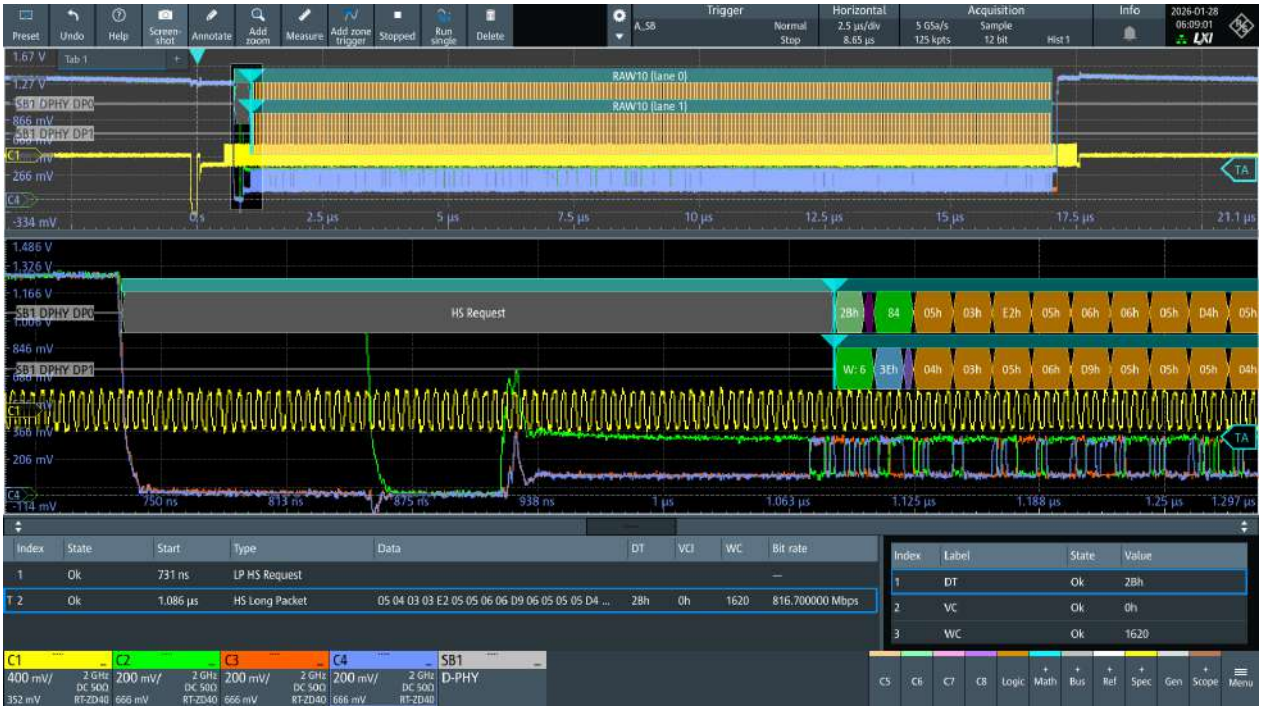

Figure 14-20: Decoded DPHY signal

The decode results table contains information about all decoded frames.

Table 14-11: Content of the decode results table

Column	Description
Index	Index of the decoded frame
State	Overall state of the frame
Start	Start time of the frame
Type	Frame types, see "Supported frame types" on page 629. For configured frame formats, the "Format" tab controls the format of each field. See Section 14.7.4, "D-PHY format configuration", on page 638.
DT	Data type
VCI	Virtual channel
WC	Word count
ECC	Error correction code
CRC	Cyclic redundancy check
Bit rate	Bit rate of the frame

When you select a frame in the decode results table, its field content is shown in the details table to the right.

Table 14-12: Content of the frame details table

Column	Description
Index	Number of the decoded field
Label	Name of the field
State	State of the field
Value	Value of the field

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 1491

Remote commands

Remote commands to retrieve decode results are described in Section 18.18.7.5, "Decode results", on page 1687.

You can also export the decode results. For details see Section 14.1.9.4, "Exporting decode results", on page 531.

Example D-PHY export file

```
Index,Start,Stop,State,Type,DT,VCI,WC,ECC,CRC,Bit-rate
1,4.82e-08,2.688e-06,'OK','LPES',---,---,---,---,---,18870000
2,2.936e-06,2.9937e-06,'OK','LPHS',---,---,---,---,---,---
3,2.9937e-06,3.0095e-06,'OK','HS_SP',00h,5h,---,08h,---,2025000000
4,3.384e-06,3.5136e-06,'OK','LPHS',---,---,---,---,---,---
5,3.5136e-06,3.5296e-06,'OK','HS_SP',08h,0h,---,10h,---,2000000000
6,3.9042e-06,3.9536e-06,'OK','LPHS',---,---,---,---,---,---
7,3.9536e-06,4.0497e-06,'OK','HSSC',---,---,---,---,---,998900000
8,4.424e-06,4.4736e-06,'OK','LPHS',---,---,---,---,---,---
9,4.4736e-06,4.5297e-06,'OK','HSSC',---,---,---,---,---,998200000
10,4.9042e-06,4.9535e-06,'OK','LPHS',---,---,---,---,---,---
11,4.9535e-06,5.0017e-06,'OK','HSAC',---,---,---,---,---,995800000
12,5.376e-06,5.4335e-06,'OK','LPHS',---,---,---,---,---,---
13,5.4335e-06,5.46965e-06,'OK','HS_LP',38h,5h,3,25h,DDADh,1993000000
14,5.648e-06,5.7682e-06,'OK','LPTA',---,---,---,---,---,---
15,5.9922e-06,6.0496e-06,'OK','LPHS',---,---,---,---,---,---
16,6.0496e-06,6.10965e-06,'OK','HS_LP',13h,5h,9,0Bh,EB66h,2000000000
17,6.464e-06,6.5217e-06,'OK','LPHS',---,---,---,---,---,---
18,6.5217e-06,6.5576e-06,'OK','HS_LP',38h,5h,3,25h,3F6Eh,2007000000
19,6.736e-06,6.8562e-06,'OK','LPTA',---,---,---,---,---,---
20,7.104e-06,7.1617e-06,'OK','LPHS',---,---,---,---,---,---
21,7.1617e-06,7.1777e-06,'OK','HS_SP',04h,0h,---,13h,---,2000000000
22,7.376e-06,7.8562e-06,'OK','LPES',---,---,---,---,---,20830000
23,8.1202e-06,8.7202e-06,'OK','LPES',---,---,---,---,---,15870000
24,9.04e-06,9.0977e-06,'OK','LPHS',---,---,---,---,---,---
```

```
25,9.0977e-06,9.14165e-06,'OK','HS_LP',2Bh,0h,5,2Eh,7426h,2000000000
26,9.3442e-06,9.8242e-06,'OK','LPES',---,---,---,---,---,20830000

Details frame 1
Index,Label,State,Value
1,'Data: 1','OK',01h
2,'Data: 2','OK',02h
3,'Data: 3','OK',03h
4,'Data: 4','OK',05h
5,'Data: 5','OK',06h
```

14.8 UART (IC electronics, option R&S MXO5-K510)

The Universal Asynchronous Receiver/Transmitter UART converts a word of data into serial data, and vice versa. It is the base of many serial protocols such as RS-232.

For basic information on UART, you can also refer to a video, available on the Rohde & Schwarz YouTube channel: Understanding UART.

Requirements

For performing UART decode measurements, you need the following:

- MXO 5 with 2 available channels. The channels can be a combination of the following:
  - Analog channels (C1-C4)
  - Logic channels (D0-D15) (requires option R&S MXO5-B1)
- Two probes
- Option R&S MXO5-K510

- About the UART / RS-232 interface 650
- UART configuration 651
- UART filter 655
- UART format configuration 657
- UART hardware trigger 663
- UART software trigger 664
- Measure 666
- UART decode results 667
- Performing UART decoding 668

14.8.1 About the UART / RS-232 interface

The UART uses only one line, or two lines for transmitter and receiver.

Data transfer

The data is transmitted in words, also referred to as symbols or characters. Each word consists of a start bit, several data bits, an optional parity bit, and one or more stop bits. Several words can form a package, or frame. The end of a package is marked with a reserved word or by a pause between two words.



Figure 14-21: Bit order in a UART word (symbol)

- The start bit is a logic 0.
- The stop bits and the idle state are always logic 1.

The UART protocol has no clock for synchronization. The receiver synchronizes by the start and stop bits, and the bit rate that must be known to the receiver.

Trigger

The MXO 5 can trigger on specified parts of UART serial signals:

- Start bit
- Packet start
- Parity errors, and breaks
- Stop errors
- A serial pattern at any or a specified position

14.8.2 UART configuration

14.8.2.1 UART configuration settings

Access: "Menu" > "Apps" > "Protocol" tab > "UART / RS232" > "Setup".

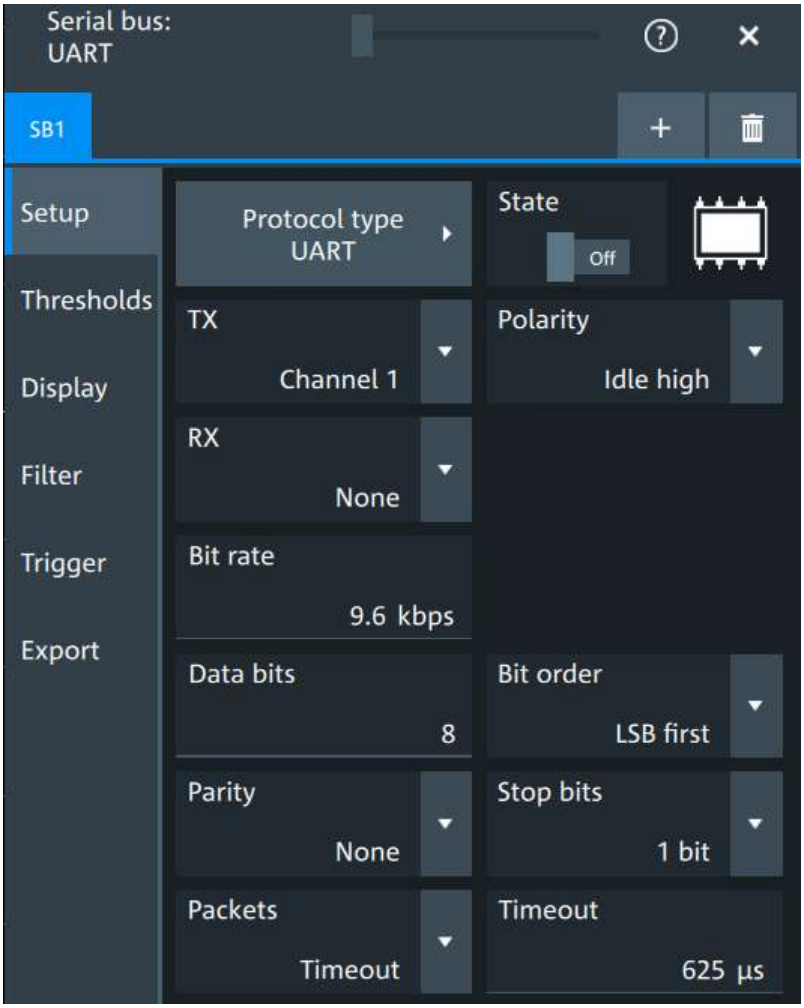

Protocol type
Selects the protocol type to be decoded.

Remote command:
SBUS<sb>:TYPE on page 1489

State
Enables the decoding of the selected bus. The signal icon of the bus appears on the signal bar.

Remote command:
SBUS<sb>[:STATe] on page 1489

Source: Tx, Rx
Select the input channels for the transmitter and receiver signals.

Do not combine a reference waveform with a channel or math waveform because the time correlation of these waveforms can differ.

Remote command:
SBUS<sb>:UART:TX:SOURce on page 1700
SBUS<sb>:UART:RX:SOURce on page 1698

Bit order
Selects the bit order, which determines if the data of the messages starts with MSB (most significant bit) or LSB (least significant bit).

Remote command:
SBUS<sb>:UART:BORDer on page 1696

Polarity
Defines the logic levels of the bus. The idle state corresponds to a logic 1. The start bit corresponds to a logic 0. "Idle high" (high=1) is used, for example, for control signals, while "Idle low" (low=1) is defined for data lines (RS-232).

Remote command:
SBUS<sb>:UART:POLarity on page 1697

Bit rate
Sets the number of transmitted bits per second.

Remote command:
SBUS<sb>:UART:BITRate on page 1696

Stop bits
Sets the number of stop bits: 1 or 1.5 or 2 stop bits are possible.

Remote command:
SBUS<sb>:UART:SBIT on page 1699

Data bits
Sets the number of data bits of a word in a range from 5 bits to 8 bits. If no parity bit is used, then 9 data bits are possible.

Remote command:
SBUS<sb>:UART:SSIZe on page 1699

Parity
Defines the optional parity bit that is used for error detection.

"None"	No parity bit is used.
"Odd"	The parity bit is set to "1" if the number of data bits set to "1" is even.
"Even"	The parity bit is set to "1" if the number of data bits set to "1" is odd.
"Mark"	The parity bit is always a logic 1.
"Space"	The parity bit is always a logic 0.
"Don't care"	The parity is ignored.

Remote command:
SBUS<sb>:UART:PARity on page 1697

Packets
Allows you to define packets of several words in the data stream.

"None"	Packets are not considered.

"Timeout" Defines a timeout between a stop bit and the next start bit. Enter the minimum time that marks the end of a packet.
A new packet starts with the first start bit after the timeout.

Remote command:
SBUS<sb>:UART:PACKets on page 1697
SBUS<sb>:UART:TOUT on page 1699

14.8.2.2 Threshold settings

Access: "Menu" > "Apps" > "Protocol" tab > "UART / RS232" > "Thresholds".

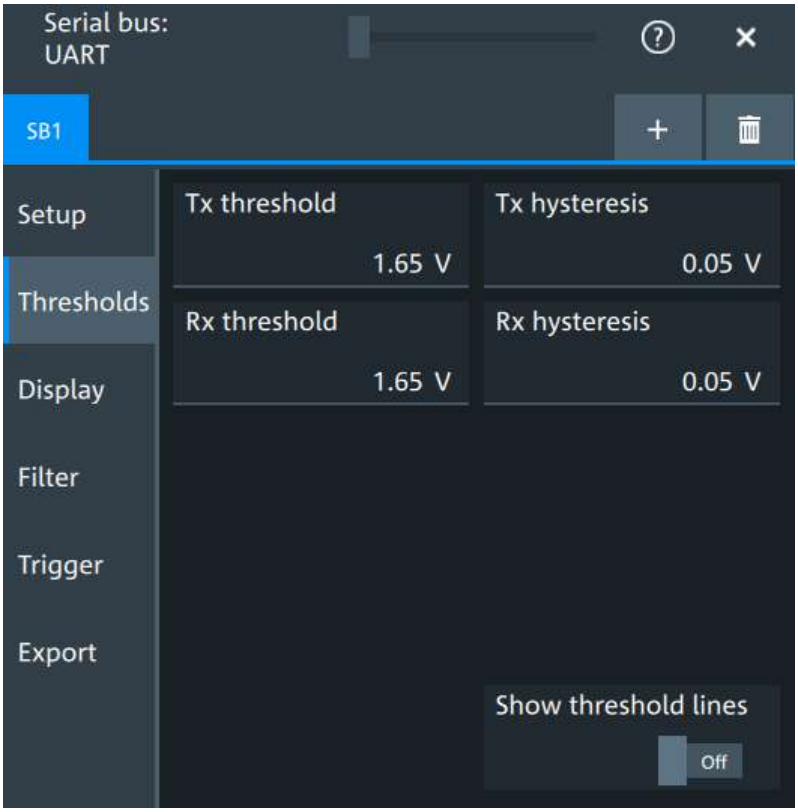

Threshold
Sets the threshold for the TX and RX channels. Enter the value directly in the fields.

Additional to the threshold, you can also set a hysteresis.

Remote command:
SBUS<sb>:UART:RX:HYSTeresis on page 1698
SBUS<sb>:UART:RX:THReshold on page 1698
SBUS<sb>:UART:TX:HYSTeresis on page 1699
SBUS<sb>:UART:TX:THReshold on page 1700

Show threshold lines
If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also Show threshold lines.

Remote command:
SBUS<sb>:THReshold on page 1492

14.8.2.3 Display settings

For details about the display settings, see Section 14.1.3.1, "Display settings", on page 511.

14.8.3 UART filter

Access:"Menu" > "Apps" > "Protocol" tab >"UART / RS232" > "Filter" tab

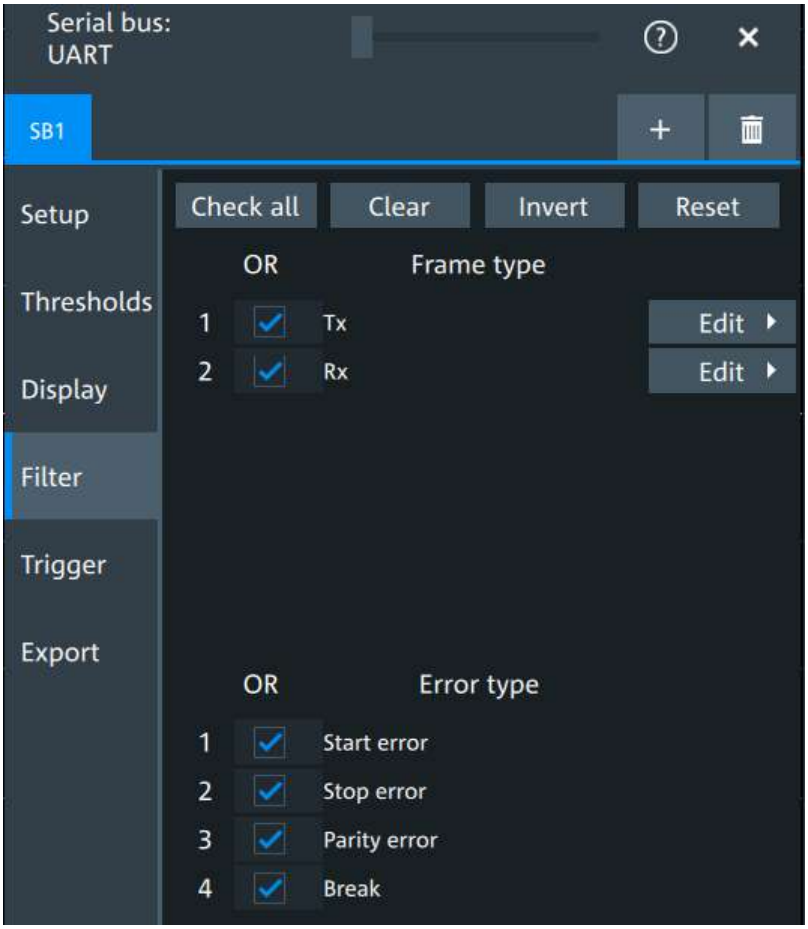

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all" Enables the filter for all available frames and error types.

"Clear" Disables the filter for all available frames and error types.

"Invert" Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types.

Remote command:
`SBUS<sb>:UART:FILTer:CHKall` on page 1702
`SBUS<sb>:UART:FILTer:CLR` on page 1702
`SBUS<sb>:UART:FILTer:INVert` on page 1702
`SBUS<sb>:UART:FILTer:RST` on page 1703

Frame type
Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.

For selected frame types, you can also specify conditions for the value of the fields in the "Edit" dialog.

The available frames are "Tx", "Rx".

Remote command:
`SBUS<sb>:UART:FILTer:FRAMe<fr>:ENABle` on page 1706
`SBUS<sb>:UART:FILTer:FRENable` on page 1706

Edit
Opens a dialog to define the details of the selected frame.

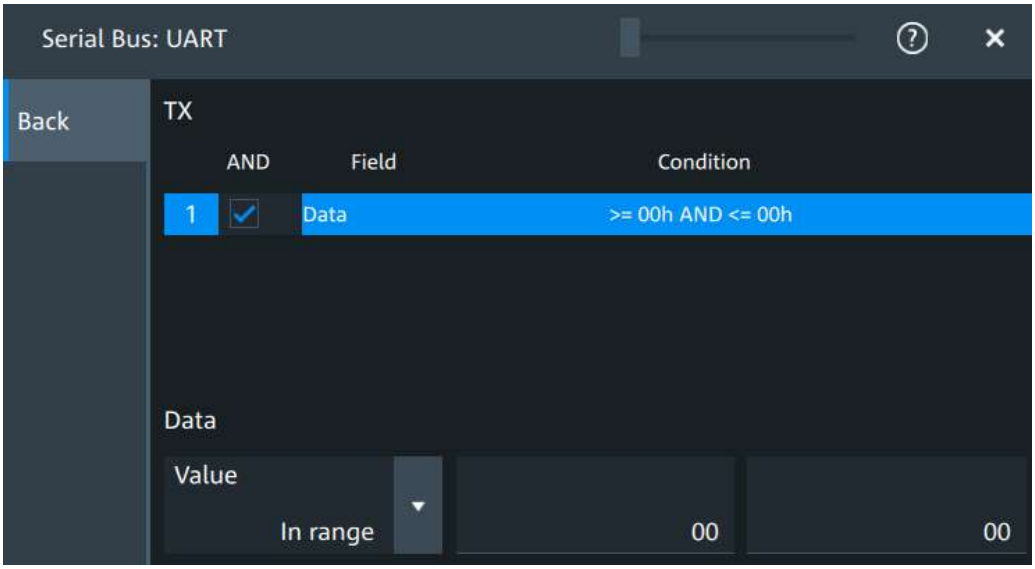

"Field" Enables the field type that you want to filter on for the selected frame. The available field is "Data".

Remote command:
`SBUS<sb>:UART:FILTer:FIENable` on page 1706
`SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:ENABle` on page 1706

"Condition" Displays the value condition for the selected field.

Remote command:
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:BIT
on page 1706

"Data" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:DMAX
on page 1705
SBUS<sb>:UART:FILTer:DMAX on page 1705
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:DMIN
on page 1705
SBUS<sb>:UART:FILTer:DMIN on page 1705
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:DOPerator
on page 1704
SBUS<sb>:UART:FILTer:DOPerator on page 1704

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:IMAX
on page 1703
SBUS<sb>:UART:FILTer:IMAX on page 1703
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:IMIN
on page 1703
SBUS<sb>:UART:FILTer:IMIN on page 1703
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:IOPerator
on page 1704
SBUS<sb>:UART:FILTer:IOPerator on page 1704

Error type
Enables filtering on the selected error type.

Available error types are "Start error", "Stop error", "Parrity error", "Break".

Remote command:
SBUS<sb>:UART:FILTer:ERRor<n>:ENABle on page 1704

14.8.4 UART format configuration

Access: "Menu" > "Apps" > "Protocol" tab > "UART / RS232" > "Format".

See Section 14.1.5, "Format", on page 516.

Show format
Enables the format configuration and displays the frame formats in the honey-comb view and results. If enabled, the frame formats are also selectable for triggering and filtering.

Remote command:
SBUS<sb>:UART:FORMat:SELect on page 1707

Add frame
Creates a frame format and adds it to the end of the frame list. A dialog opens to specify the frame details. The number of frame formats is limited to 100.

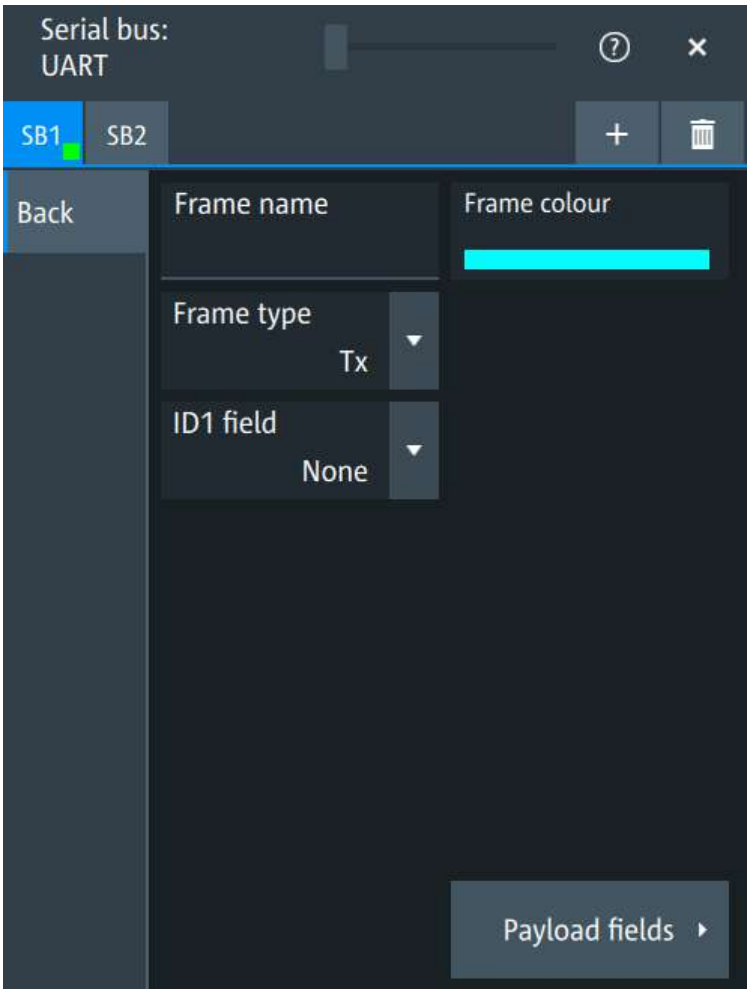

Remote command:
SBUS<sb>:UART:FORMat:ADDFrame on page 1708

Edit list
Enables editing the frame list. If enabled, you can delete a frame format by clicking its "Delete" icon. In a list with several entries, you can move frame formats up or down by clicking the arrow buttons. To exit the editing mode, click "Edit list" again.

Remote command:
SBUS<sb>:UART:FORMat:CLR on page 1708
SBUS<sb>:UART:FORMat:FCOunt? on page 1709

Open
Opens a dialog for loading an existing list of frame formats in XML file format.

Remote command:
SBUS<sb>:UART:FORMat:LOAD on page 1708

Save as
Opens a dialog for saving your current list of frame formats to an XML file. Saved frame formats can support efficient and convenient working.

Remote command:
SBUS<sb>:UART:FORMat:SAVE on page 1708

Frame name
Specifies an arbitrary name to label the currently selected frame format. Ideally, use speaking names according to the specifications of the applicable protocol standard. Frame names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:UART:FORMat:FRAMe<fr>:NAME on page 1709

Frame color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:UART:FORMat:FRAMe<fr>:COLor on page 1710

Frame type
Select an original frame type.

Remote command:
SBUS<sb>:UART:FORMat:FRAMe<fr>:TYPE on page 1710

ID<n> field
Select the first to third identifying field types.

Remote command:
SBUS<sb>:UART:FORMat:FRAMe<fr>:ID1Field on page 1710
SBUS<sb>:UART:FORMat:FRAMe<fr>:ID2Field on page 1710
SBUS<sb>:UART:FORMat:FRAMe<fr>:ID3Field on page 1710

ID<n> value
Select the value of the corresponding field type.

Remote command:
SBUS<sb>:UART:FORMat:FRAMe<fr>:ID1Value on page 1711
SBUS<sb>:UART:FORMat:FRAMe<fr>:ID2Value on page 1711
SBUS<sb>:UART:FORMat:FRAMe<fr>:ID3Value on page 1711

Payload fields
Opens the payload field configuration dialog. The format configuration of payload fields is optional and replaces the payload data of the identified frame.

Add field
Creates a new field description for the currently selected frame format and adds it to the end of the field list with color, bit position (order of transmission) and name. Brackets indicate how often bits will be repeated, [] indicates that this is an open array.

A dialog opens to specify the field details. The number of field descriptions is limited to 100.

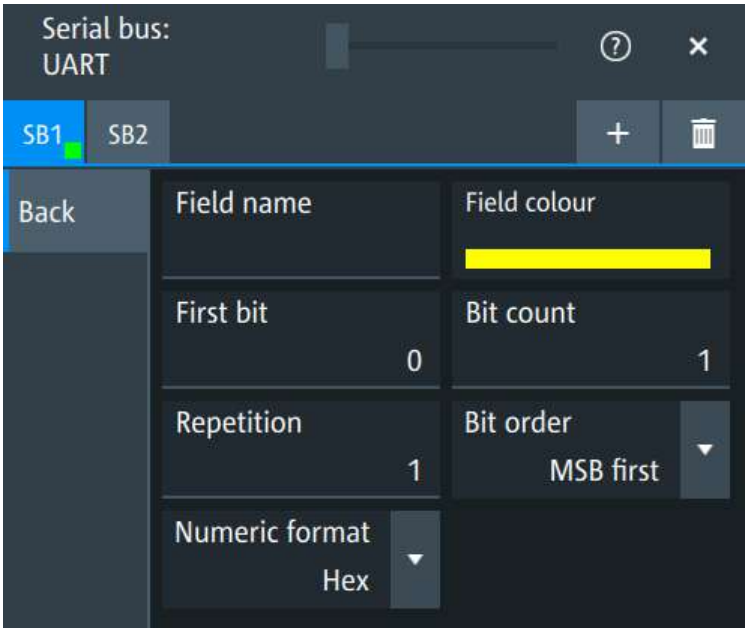

Remote command:
SBUS<sb>:UART:FORMat:FRAMe<fr>:ADDField on page 1709

Field name
Specifies an arbitrary name for the currently selected field description. Ideally, use speaking names.

Field names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:NAME on page 1711

Field color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:COLor on page 1711

First bit
In order of transmission, sets the first bit of this field in the payload.

Remote command:
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:FSTBit on page 1712

Bit count
Sets the number of bits in the selected field, i.e., the field's length. Selecting the value opens a keypad showing allowed minimum and maximum values. You can set "Min", "Max", "Reset" or adjust with the "Inc" or "Dec" buttons by 1 or 10 (step size dependent). Use "CE" to restore the value used before the keypad opened.

If the "Condition" pattern length does not match the "Bit count":
- Too long, it is truncated.
- Too short, it is left-padded with 0.

Both truncation and padding happen on the left side of the condition and follow the configured "Bit order".

Examples for "Condition" "=100"):
- "Bit order" is "MSB":
  - Bit count = 2: truncated. Result: =00
  - Bit count = 4: padded. Result: =0100
- "Bit order" is LSB first (equivalent MSB-first representation is =001):
  - Bit count = 2: truncated. Result: =00 (LSB first), =00 (MSB first)
  - Bit count = 4: padded. Result: =0100 (LSB first), =0010 (MSB first)

Remote command:
`SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:BITCount` on page 1712

Repetition
Defines the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Remote command:
`SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:REPetition` on page 1712

Bit order
Selects, in which order the bits of a field's "Condition" value are evaluated:

- "LSB first": little endian, least significant bit first
- "MSB first": big endian, most significant bit first

Remote command:
`SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:BITorder` on page 1713

Numeric format
Selects how the "Condition" value is interpreted:

- Symbolic: Assigns a symbolic translation on the data fields. Only available for custom protocols.
- Value list: Assigns a custom name to each hexadecimal value; any value without an assigned value is shown as "Undefined".
- A*X+B: Assigns a linear function on the data fields.
- For details on the other numeric formats, see "Format-specific information" on page 532.

The following rules apply:
- If the condition contains at least one of "H", "h", "L", "l", "X", "x", and all other characters are only "1" and/or "0", the value is always treated as binary, regardless of the selected numeric format.

- "x" and "X" are wildcards and are supported only in binary format or when the string is auto-interpreted as binary per the rule above.
  Examples for format set to "HEX":
  – "=1HL111000": valid (read as binary)
  – "=0x10101": valid (read as binary; "x" acts as wildcard, not a hex prefix)
  – "=1010": valid (read as HEX, with a total of 16 bits)
  – "=0x5A": valid (read as HEX "5A", because "0x" is a valid hex prefix; entering 5A alone is recommended)
  – "=5X12": invalid
  – "=1H33": invalid

Remote command:
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:FORMat on page 1713

Add value
Creates a new hexagonal value for customization.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:ADDValue on page 1714

Value
Defines the hexagonal value to convert it into a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue on page 1714

Label
Defines the label to convert the corresponding hexagonal value to a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel on page 1714

Unit
Defines a unit for the linear function.

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:UNIT on page 1715

Parameter A,B
Defines the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:PARA on page 1715
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:PARB on page 1715

14.8.5 UART hardware trigger

Access: "Menu" > "Apps" > "Protocol" tab > "UART / RS232" > "Trigger" tab > "Setup Hardware Trigger"

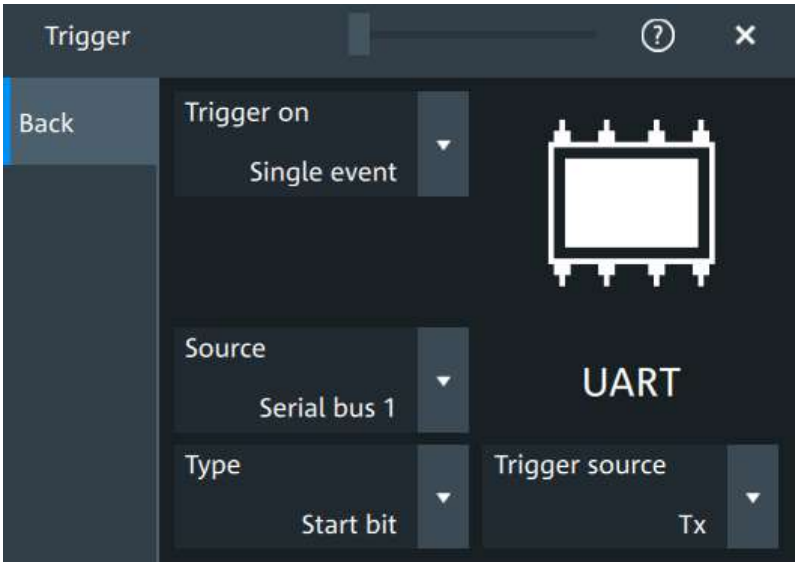

Data conditions
Specify the data conditions if the trigger type is set to "Data".

Data ← Data conditions
Selects the operator for the "Data" pattern.

Remote command:
`TRIGger:SBHW:UART:FCONdition` on page 1716

Value ← Data conditions
Specifies the data pattern to be found on the specified trigger source. Enter the words in MSB first bit order.

Remote command:
`TRIGger:SBHW:UART:DATA` on page 1716

Position ← Data conditions
Sets the number of words before the first word of interest. These offset words are ignored.

The setting is available if packet detection is enabled in the protocol configuration.

Remote command:
`TRIGger:SBHW:UART:DPOSition` on page 1716

14.8.6 UART software trigger

14.8.6.1 Setup A trigger

Before setting up the software trigger for the protocols, a trigger A event needs to be set up.

14.8.6.2 Software trigger settings

Access: "Menu" > "Apps" > "Protocol" tab > "UART / RS232" > "Trigger" tab > "Setup Software Trigger" > "Setup SB Trigger".

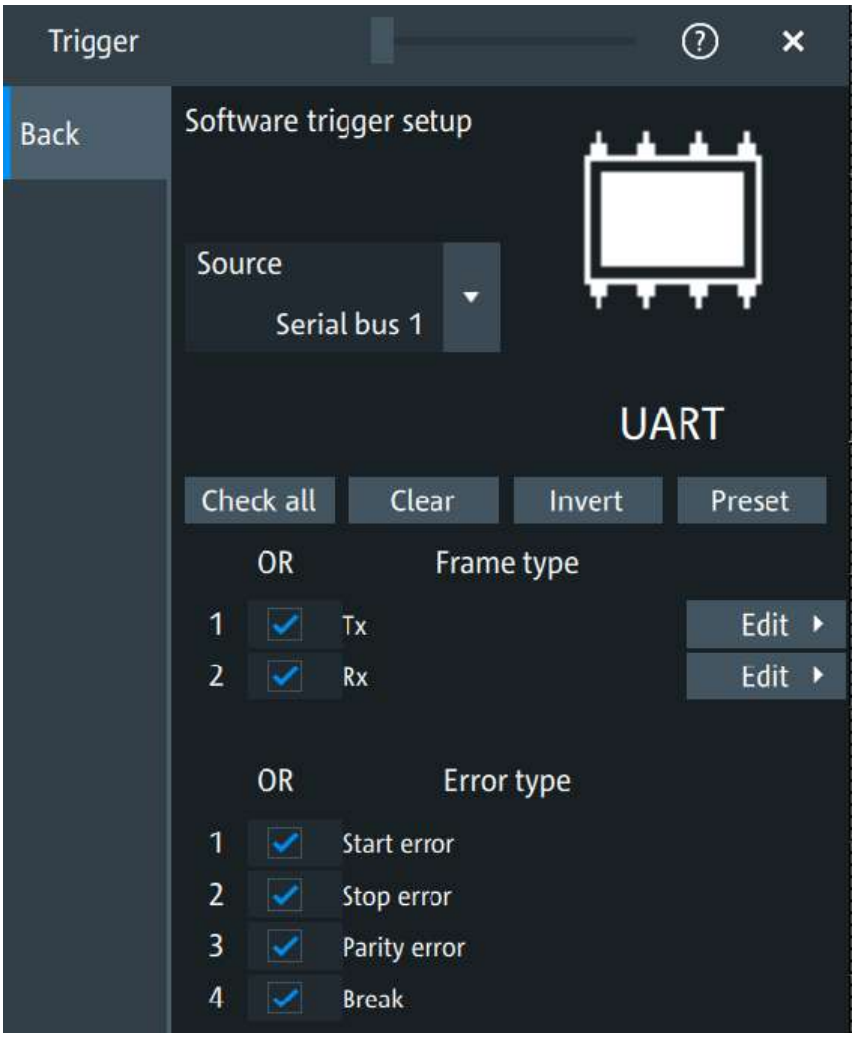

In the "Software Trigger" tab, you can define the settings to trigger on the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to trigger on.

"Check all"	Enables the software trigger for all available frames and error types.
"Clear"	Disables the software trigger for all available frames and error types.
"Invert"	Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.
"Preset"	Presets the state of the selected frames and error types for the software trigger.

Remote command:
`TRIGger:SBSW:UART:CHKall` on page 1718
`TRIGger:SBSW:UART:CLR` on page 1718
`TRIGger:SBSW:UART:INVert` on page 1718
`TRIGger:SBSW:UART:RST` on page 1719

Frame type
Selects the frame type that you want to trigger on. You can trigger on all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

The following frames are available: "Tx" and "Rx".

Remote command:
`TRIGger:SBSW:UART:FRAMe<fr>:ENABle` on page 1719
`TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:ENABle` on page 1721

Edit
Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

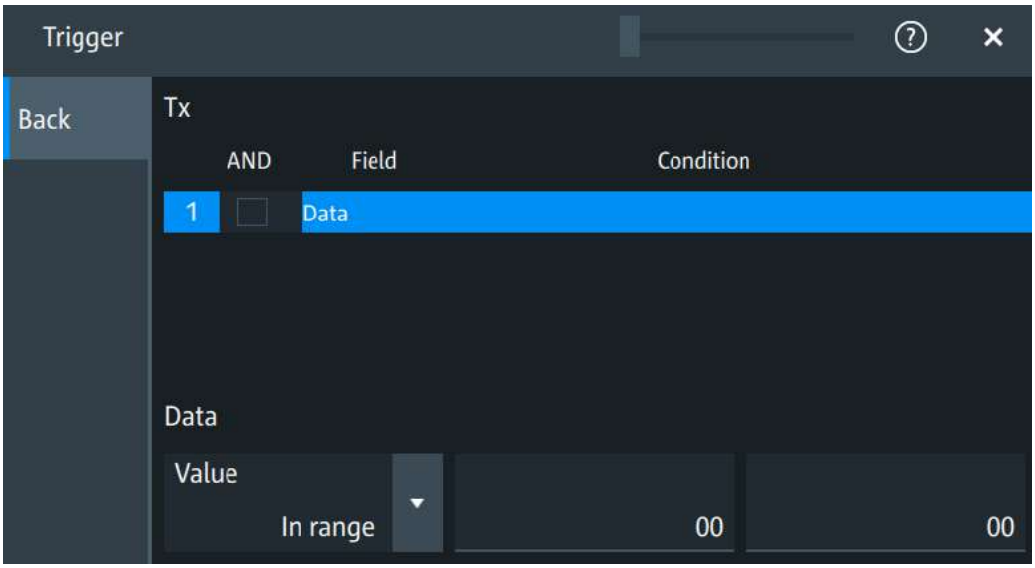

"Field" Enables the field type that you want to trigger on for the selected frame.
The available field is "Data".

Remote command:
TRIGger:SBSW:UART:FIENable on page 1721
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:ENABle on page 1721

"Condition" Displays the value condition for the selected field.

Remote command:
TRIGger:SBSW:UART:BIT on page 1719
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:BIT on page 1719

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
TRIGger:SBSW:UART:DMAX on page 1720
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:DMAX on page 1720
TRIGger:SBSW:UART:DMIN on page 1720
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:DMIN on page 1720
TRIGger:SBSW:UART:DOPerator on page 1720
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:DOPerator on page 1720

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
TRIGger:SBSW:UART:IMAX on page 1721
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:IMAX on page 1721
TRIGger:SBSW:UART:IMIN on page 1722
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:IMIN on page 1722
TRIGger:SBSW:UART:IOPerator on page 1722
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:IOPerator on page 1722

Error type
Enables triggering on the selected error type.

The following error types are available: "Start error", "Stop error", "Parity error", "Break".

Remote command:
TRIGger:SBSW:UART:ERENable on page 1722
TRIGger:SBSW:UART:ERRor<m>:ENABle on page 1722

14.8.7 Measure

The "Setup Measurement" button opens the dialog for automatic measurements in the "Protocol" category for the selected serial bus.

See Section 10.2.8.2, "Settings for protocol measurements", on page 311.

14.8.8 UART decode results

To enable the decoding, see Section 14.1.9.3, "Decoding protocol signals", on page 531.

For more information on decoding UART, you can also refer to the video, available on the Rohde & Schwarz YouTube channel: Decoding UART with MXO Series Oscilloscopes.

Figure 14-22: Decoded UART signal

The decode results table contains information about all decoded frames.

Table 14-13: Content of the decode results table

Column	Description
Index	Number of the decoded frames
State	Decoding state of the word. "Insuffcient waveform length" indicates that the word is not completely contained in the acquisition. Change the horizontal scale, or move the reference point to the left to get a longer acquisition.
Start	Time of the word start (start bit)
Stop	Time of the word stop (stop bit)
Tx value	Value of the Tx word. Select the data format in the "Display" tab.
Rx value	Value of the Rx word. Select the data format in the "Display" tab.
Data rate	Value of the data rate

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 1491

Remote commands

Remote commands to retrieve decode results are described in Section 18.18.8.6, "Decode results", on page 1723.

You can also export the decode results. For details see Section 14.1.9.4, "Exporting decode results", on page 531.

Example UART export file

```
Index,Start,Stop,Source,State,Tx value,Rx value,Bit rate
1,-0.0629961,-0.0629531,'TX','OK',33h,---,256000
2,-0.0629453,-0.0629023,'RX','OK',---,F5h,256000
3,-0.0628945,-0.0628516,'TX','STER',C8h,---,256000
4,-0.0628438,-0.0628008,'RX','SPER',---,28h,256000
5,-0.062793,-0.06275,'TX','PRER',A8h,---,256000
```

14.8.9 Performing UART decoding

This section explains step by step how to configure and decode the UART bus.

For more information on decoding UART, you can also refer to the video, available on the Rohde & Schwarz YouTube channel: Decoding UART with MXO Series Oscilloscopes.

14.8.9.1 Configuring UART signals

For configuration, assign the lines to the input channels, and define the active states and the logical thresholds.

For details on configuration settings, see UART configuration.

1. Tap the "+ Bus" activator in the bottom right of the screen.

2. Select the tab of the bus that you want to set up, for example "SB1".
3. Tap the "Protocol type" button. Select the protocol: "UART".
4. Tap on "State" to enable the decoding.

An SPI shortcut appears at the bottom left of the screen. Tap on the shortcut for a quick access to the "UART / RS232" dialog settings.

5. Select the correct channels for each active line: "Tx" and "Rx".
6. Set the "Bit rate".
7. Set the "Data bits". Typical value is 7 or 8.
8. Set the "Stop bits". Typical value is 1.
9. Set the "Parity" to "None", "Odd" or "Even".
10. Set "Bit order" to "MSB" or "LSB first".
11. Set the "Packets".
12. Set the "Timeout".
13. Set the "Polarity" to "Idle high" or "Idle low".
14. Check that the signals are on the screen.
    If not try adjusting the vertical and horizontal settings.

15. Set the logical thresholds:
    a) Tap the "Thresholds" tab.
    b) For each line, set the threshold value. A typical value is 2.5 V.
    c) If necessary, set the hysteresis value for the wires.
    d) Optionally, tap on "Show threshold lines".

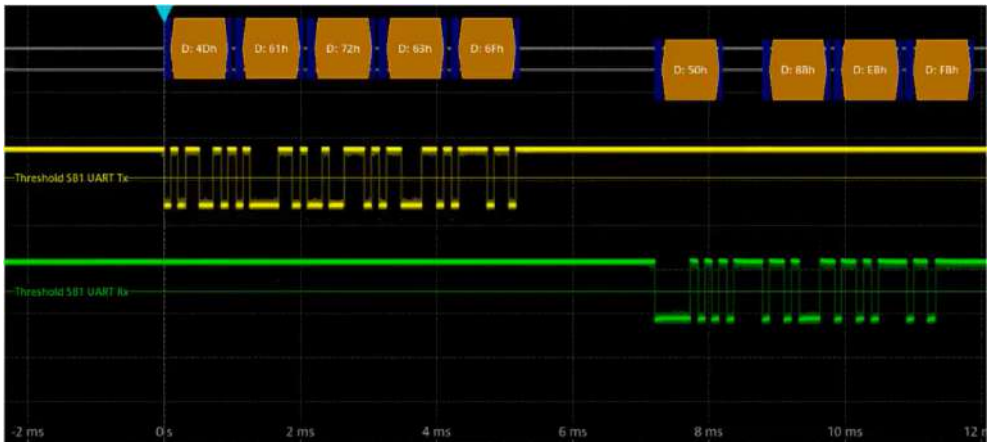

14.8.9.2 Exporting decode results

Once a decode has been completed, you can generate an export of all decode results.

Prerequisites: A bus is configured for the UART and decoded.

1. Tap on the "UART / RS232" shortcut.
2. Tap on the "Export" tab.
3. If necessary, enable "Include details".
4. If necessary, enable "Include timing".
5. Select the "File type".

   An export file is saved in the selected directory.

The UART export files contain the following fields:

- Index
- Start
- Stop
- Source
- State
- TX value
- RX value
- Bit rate

Example UART export file

```
Index,Start,Stop,Source,State,Tx value,Rx value,Bit rate
1,-0.0629961,-0.0629531,'TX','OK',33h,---,256000
2,-0.0629453,-0.0629023,'RX','OK',---,F5h,256000
3,-0.0628945,-0.0628516,'TX','STER',C8h,---,256000
4,-0.0628438,-0.0628008,'RX','SPER',---,28h,256000
5,-0.062793,-0.06275,'TX','PRER',A8h,---,256000
```

14.9 NRZ clocked & unclocked (option R&S MXO5-K510)

NRZ is a communication protocol for triggering at data rates up to 50 Mbit/s. It is suited for fast eye-diagram mask testing.

The NRZ protocol can either be **clocked** or **unclocked**. NRZ unclocked signals require a user-defined bit rate and gap time setting for triggering and decoding.

- NRZ basics 671
- NRZ configuration 671
- NRZ filter 675
- NRZ format configuration 679
- NRZ software trigger 686
- Measure 690
- NRZ decode results 690

14.9.1 NRZ basics

In this line coding scheme, NRZ stands for "non-return-to-zero": The logical 1 is represented by a high voltage level, and the logical 0 is represented by a low voltage level:

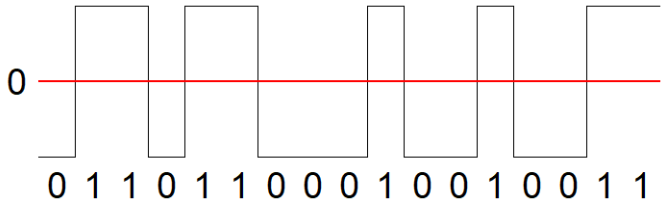

The voltage remains at the same level for the entire bit period, without returning to a zero voltage level between bits. The voltage level changes only when the data bit changes.

Therefore, NRZ is an efficient protocol for high-speed serial data transmission. Its simplicity and low overhead make it a good choice for applications where data integrity and reliability are critical. It requires only half the bandwidth of the related Manchester code, which uses phase-shift keying.

14.9.2 NRZ configuration

14.9.2.1 NRZ configuration settings

Access:

- "Menu" > "Apps" > "Protocol" tab > "NRZ Clocked" > "Setup".
- "Menu" > "Apps" > "Protocol" tab > "NRZ Unclocked" > "Setup".

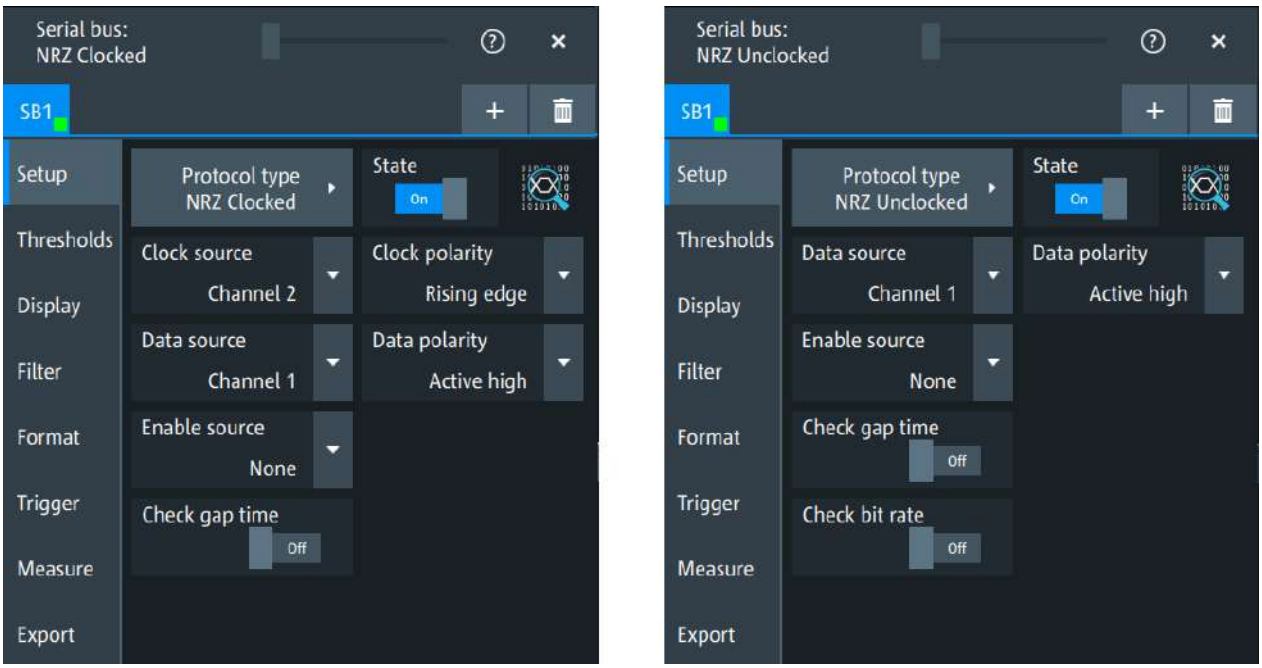

Figure 14-23: Setup dialog, left: clocked version, right: unclocked version of NRZ

Data source
Selects the source for the data signal.

Remote command:
`SBUS<sb>:NRZC:DATA:SOURce` on page 1729
`SBUS<sb>:NRZU:DATA:SOURce` on page 1758

Clock source
Available only for "NRZ Clocked".

Selects the source for the clock signal.

Remote command:
`SBUS<sb>:NRZC:CLK:SOURce` on page 1729

Data polarity
Selects the polarity for the data signal.

Remote command:
`SBUS<sb>:NRZC:DATA:POLarity` on page 1730
`SBUS<sb>:NRZU:DATA:POLarity` on page 1759

Clock polarity
Available only for "NRZ Clocked".

Selects the polarity for the clock signal.

Remote command:
`SBUS<sb>:NRZC:CLK:POLarity` on page 1729

Enable source
Selects the source of the enable signal.

If you select any source other than "None", the "Enable polarity" becomes available, which selects the polarity of the enable signal.

Remote command:
SBUS<sb>:NRZC:ENABle:SOURce on page 1730
SBUS<sb>:NRZC:ENABle:POLarity on page 1730
SBUS<sb>:NRZU:ENABle:SOURce on page 1759
SBUS<sb>:NRZU:ENABle:POLarity on page 1759

Check gap time
Enables the detection of the minimum idle time between two frames during decoding. Also enables setting the "Min gap time". If you set it, the decoder considers any longer idle time a gap.

Remote command:
SBUS<sb>:NRZC:MINGap:SELect on page 1731
SBUS<sb>:NRZU:MINGap:SELect on page 1760
SBUS<sb>:NRZC:MINGap:WIDTh on page 1731
SBUS<sb>:NRZU:MINGap:WIDTh on page 1760

Check bit rate
Available only for "NRZ Unclocked".

Enables setting the "Bit rate".
- If you define a bit rate, it is used for triggering and decoding.
- If you disable this option, the decoder calculates the bit rate.

Remote command:
SBUS<sb>:NRZU:BITRate:SELect on page 1761
SBUS<sb>:NRZU:BITRate:WIDTh on page 1761

14.9.2.2 Thresholds

Access:
- "Menu" > "Apps" > "Protocol" tab > "NRZ Clocked" > "Thresholds"
- "Menu" > "Apps" > "Protocol" tab > "NRZ Unclocked" > "Thresholds"

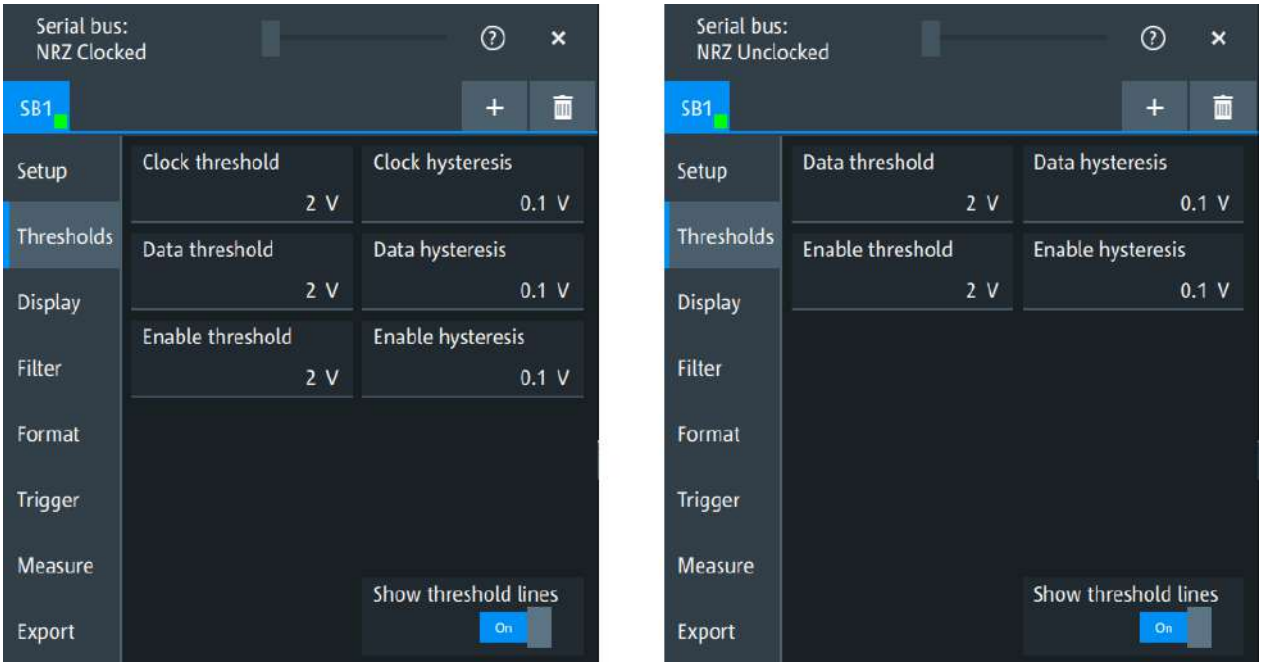

Figure 14-24: Thresholds dialog, left: clocked version, right: unclocked version of NRZ

Enter the values directly in the fields.

Data threshold, Data hysteresis
Sets the middle threshold and the hysteresis for the data source channel.

Remote command:
`SBUS<sb>:NRZU:DATA:THReshold` on page 1761
`SBUS<sb>:NRZU:DATA:HYSTeresis` on page 1761
`SBUS<sb>:NRZC:DATA:THReshold` on page 1732
`SBUS<sb>:NRZC:DATA:HYSTeresis` on page 1732

Clock threshold, Clock hysteresis
Available only for "NRZ Clocked".

Sets the middle threshold and the hysteresis for the clock source channel.

Remote command:
`SBUS<sb>:NRZC:CLK:THReshold` on page 1731
`SBUS<sb>:NRZC:CLK:HYSTeresis` on page 1732

Enable threshold, Enable hysteresis
Available only, if you have selected a source for the enable signal. See "Enable source" on page 673.

Sets the middle threshold and the hysteresis for the enable source channel.

Remote command:
`SBUS<sb>:NRZC:ENABle:THReshold` on page 1732
`SBUS<sb>:NRZC:ENABle:HYSTeresis` on page 1733

Show threshold lines
If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also Show threshold lines.

Remote command:
`SBUS<sb>:THReshold` on page 1492

14.9.2.3 Display settings

For details about the display settings, see Section 14.1.3.1, "Display settings", on page 511.

Decode layer
Selects the decode layer.

Decoding is performed in several steps, and the results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display.

"Off"	Disables the display of the decode layer.
"Edges"	Enables the display of all edges.
"Bits"	Enables the display of all encoded bits.

Data format
See "Data format" on page 512.

14.9.2.4 NRZ symbols

There is no symbolic translation for NRZ protocols, because of the custom frame definitions.

14.9.3 NRZ filter

Access:

- "Menu" > "Apps" > "Protocol" tab > "NRZ Clocked" > "Filter" tab
- "Menu" > "Apps" > "Protocol" tab > "NRZ Unclocked" > "Filter" tab

Although NRZ has a free format description according to section Section 14.9.4, "NRZ format configuration", on page 679, we provide a dynamic filter solution that can adapt to custom frames and fields in the decoded events.

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

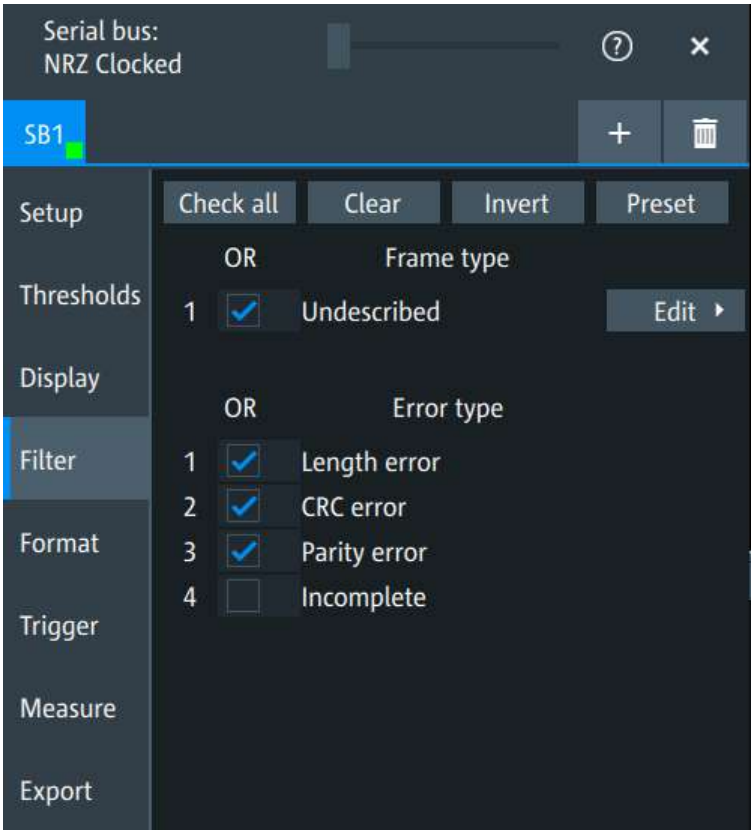

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all" Enables the filter for all available frames and error types.

"Clear" Disables the filter for all available frames and error types.

"Invert" Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types.

Remote command:
`SBUS<sb>:NRZC:FILTer:CHKall` on page 1734
`SBUS<sb>:NRZU:FILTer:CHKall` on page 1763
`SBUS<sb>:NRZC:FILTer:CLR` on page 1734
`SBUS<sb>:NRZU:FILTer:CLR` on page 1764
`SBUS<sb>:NRZC:FILTer:INVert` on page 1734
`SBUS<sb>:NRZU:FILTer:INVert` on page 1764
`SBUS<sb>:NRZC:FILTer:RST` on page 1735
`SBUS<sb>:NRZU:FILTer:RST` on page 1764

Enable
Enables the filtering on NRZ frames. Only the frames that match the selected filter conditions are displayed.

Remote command:
SBUS<sb>:NRZC:FILTer:FRENable on page 1737
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:ENABle on page 1737
SBUS<sb>:NRZU:FILTer:FRENable on page 1767
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:ENABle on page 1767

Frame type
Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.

For selected frame types, you can also specify conditions for the value of the fields in the "Edit" dialog.

The only frame type available by default is "Undescribed", because the NRZ protocols support custom coding.

However, the frame formats that you define appear in this list, too. See Section 14.9.4, "NRZ format configuration", on page 679.

Edit
Opens a dialog to define the details of the selected frame.

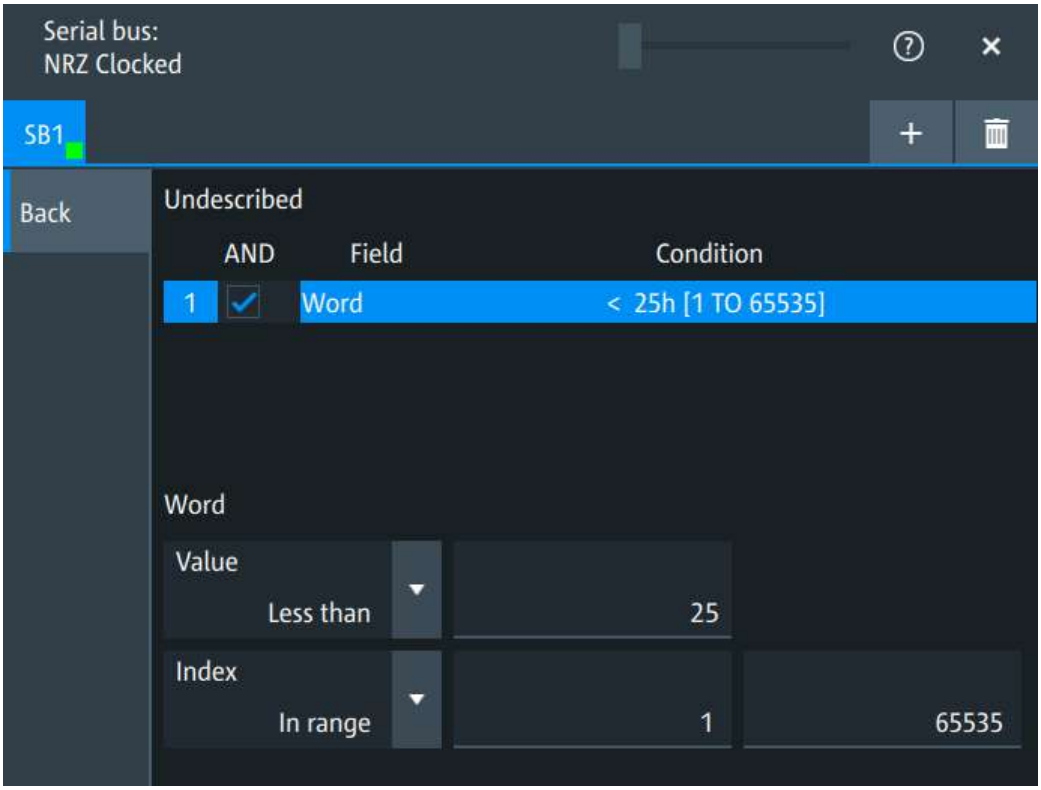

"Field" Enables the field type that you want to filter on for the selected frame. For the default "Undescribed" frame, the only available field type is "Word", which is the payload component of an undescribed frame. See "Frame type" on page 677.
However, the field formats that you define appear in this list, too. See Section 14.9.4, "NRZ format configuration", on page 679.

Remote command:
`SBUS<sb>:NRZC:FILTer:FIENable` on page 1737
`SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:ENABle` on page 1737
`SBUS<sb>:NRZU:FILTer:FIENable` on page 1766
`SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:ENABle` on page 1766

"Condition" Displays the value condition for the selected field.

Remote command:
`SBUS<sb>:NRZC:FILTer:BIT` on page 1735
`SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:BIT` on page 1735
`SBUS<sb>:NRZU:FILTer:BIT` on page 1764
`SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:BIT` on page 1764

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
`SBUS<sb>:NRZC:FILTer:DMAX` on page 1736
`SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:DMAX` on page 1736
`SBUS<sb>:NRZU:FILTer:DMAX` on page 1765
`SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:DMAX` on page 1765
`SBUS<sb>:NRZC:FILTer:DMIN` on page 1736
`SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:DMIN` on page 1736
`SBUS<sb>:NRZU:FILTer:DMIN` on page 1765
`SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:DMIN` on page 1765
`SBUS<sb>:NRZC:FILTer:DOPerator` on page 1736
`SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:DOPerator` on page 1736
`SBUS<sb>:NRZU:FILTer:DOPerator` on page 1766
`SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:DOPerator` on page 1766

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
SBUS<sb>:NRZC:FILTer:IMAX on page 1738
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:IMAX on page 1738
SBUS<sb>:NRZU:FILTer:IMAX on page 1767
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:IMAX on page 1767
SBUS<sb>:NRZC:FILTer:IMIN on page 1738
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:IMIN on page 1738
SBUS<sb>:NRZU:FILTer:IMIN on page 1767
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:IMIN on page 1767
SBUS<sb>:NRZC:FILTer:IOPerator on page 1738
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:IOPerator on page 1738
SBUS<sb>:NRZU:FILTer:IOPerator on page 1768
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:IOPerator on page 1768

Error type
Enables filtering on the selected error type.

The available error types are "Length error", "CRC error", "Parity error", "Incomplete".

Remote command:
SBUS<sb>:NRZC:FILTer:ERENable on page 1735
SBUS<sb>:NRZC:FILTer:ERRor<n>:ENABle on page 1735
SBUS<sb>:NRZU:FILTer:ERENable on page 1765
SBUS<sb>:NRZU:FILTer:ERRor<n>:ENABle on page 1765

14.9.4 NRZ format configuration

Access: "Menu" > "Apps" > "Protocol" tab > "NRZ Clocked"or "NRZ Unclocked" > "Format".

See Section 14.1.5, "Format", on page 516.

Add Frame
Creates a frame format and adds it to the end of the frame list. A dialog opens to specify the frame details. The number of frame formats is limited to 100.

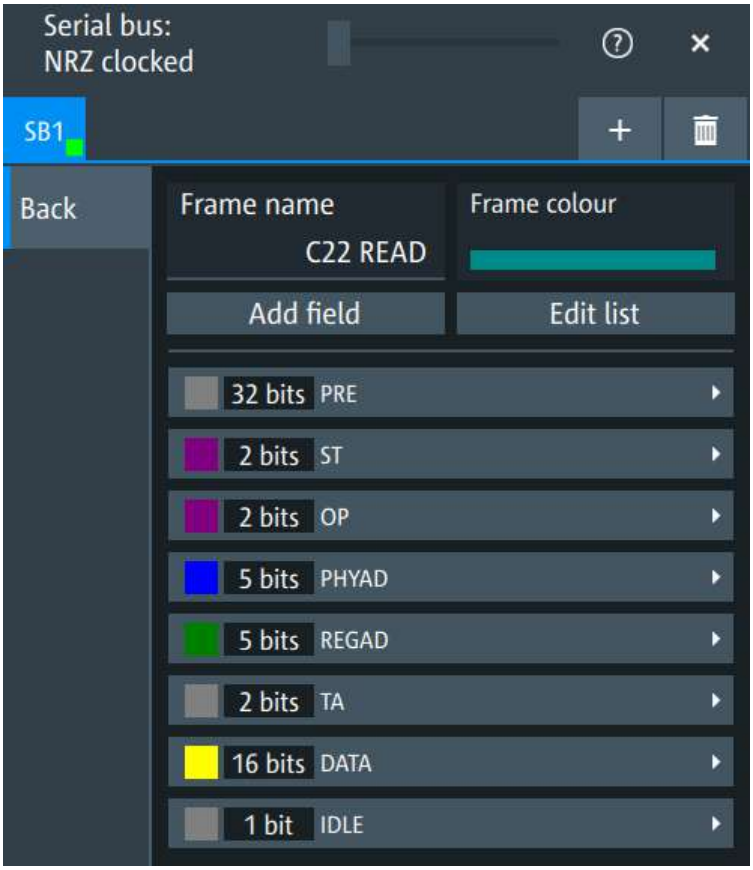

Remote command:
SBUS<sb>:NRZC:FORMat:ADDFrame on page 1739
SBUS<sb>:NRZU:FORMat:ADDFrame on page 1769

Edit List
Enables editing the frame list. If enabled, you can delete a frame format by clicking its "Delete" icon. In a list with several entries, you can move frame formats up or down by clicking the arrow buttons. To exit the editing mode, click "Edit list" again.

Remote command:
SBUS<sb>:NRZC:FORMat:CLR on page 1740
SBUS<sb>:NRZU:FORMat:CLR on page 1769
SBUS<sb>:NRZC:FORMat:FCOunt? on page 1740
SBUS<sb>:NRZU:FORMat:FCOunt? on page 1770

Open
Opens a dialog for loading an existing list of frame formats in XML file format.

Remote command:
SBUS<sb>:NRZC:FORMat:LOAD on page 1740
SBUS<sb>:NRZU:FORMat:LOAD on page 1769

Save as
Opens a dialog for saving your current list of frame formats to an `XML` file. Saved frame formats can support efficient and convenient working.

Remote command:
`SBUS<sb>:NRZC:FORMat:SAVE` on page 1740
`SBUS<sb>:NRZU:FORMat:SAVE` on page 1769

Frame name
Specifies an arbitrary name to label the currently selected frame format. Ideally, use speaking names according to the specifications of the applicable protocol standard. Frame names do not have to be unique and are only intended to support you.

Remote command:
`SBUS<sb>:NRZC:FORMat:FRAMe<fr>:NAME` on page 1741
`SBUS<sb>:NRZU:FORMat:FRAMe<fr>:NAME` on page 1771

Frame Color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
`SBUS<sb>:NRZC:FORMat:FRAMe<fr>:COLor` on page 1741
`SBUS<sb>:NRZU:FORMat:FRAMe<fr>:COLor` on page 1771

Add Field
Creates a new field description for the currently selected frame format and adds it to the end of the field list with color, bit position (order of transmission) and name. Brackets indicate how often bits will be repeated, [] indicates that this is an open array.

A dialog opens to specify the field details. The number of field descriptions is limited to 100.

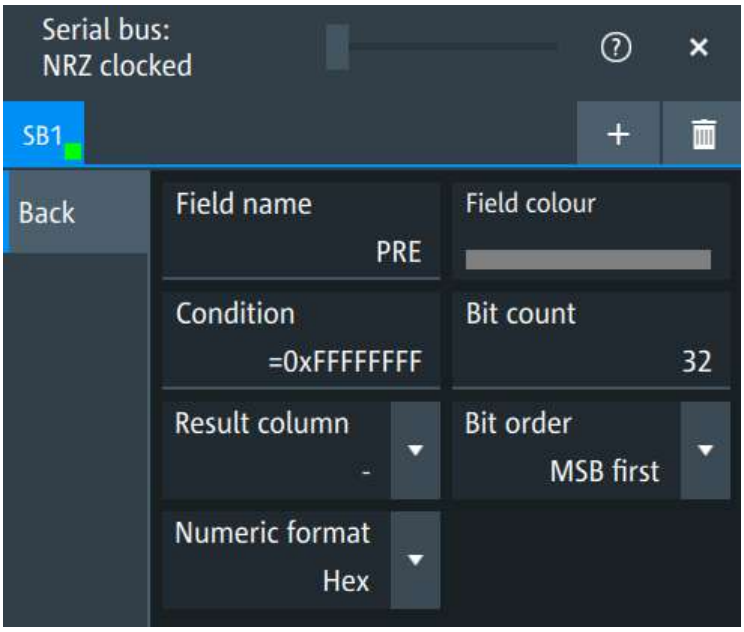

Remote command:
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:ADDField on page 1741
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:ADDField on page 1770

Edit List
Enables editing the field list. If enabled, you can delete a field description by clicking its "Delete" icon. In a list with several entries, you can move field descriptions up or down by clicking the arrow buttons. To exit the editing mode, click "Edit list" again.

Remote command:
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLDCount? on page 1741
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLDCount? on page 1770

Field name
Specifies an arbitrary name for the currently selected field description. Ideally, use speaking names.

Field names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:NAME on page 1742
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:NAME on page 1771

Field Color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:COLor on page 1742
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:COLor on page 1771

Condition
Defines a rule or pattern that a field must match to help identify a frame and/or validate mandatory values, e.g., CRC, ID. The condition must match the field's "Numeric format", "Bit order", and "Bit length".

The following conditions are implemented:

"=" (equal / pattern match)

Defines a bit pattern that the field must match. Allowed characters depend on the field's "Format", "Bit order", and "Bits". In binary format, for example, valid characters are "1", "0", "H" (high), and "L" (low).

The behavior depends on whether the frame contains a variable-length array [ ]:

- **No [ ] in the frame**: All fields using = act as keys to identify the frame type. The frame matches only if all such fields match.
- **Frame contains one [ ]**: If there is a "Variable Length Array" field, then the equal operator has two different functionalities, depending on the position of the equal-operator field within the frame format configuration:
  - **Field is before the [ ]**: The condition acts as a key to identify a frame type and matches starting bits.
  - **Field is immediately after the [ ]**: The condition acts as an array delimiter and matches the bits right after the variable-length data to terminate the array.
    Note: If a = field is after the [ ] but not immediately after it, decode results are unpredictable.

"[ ]" (array / repetition)

Defines the number of permissible repetitions of the field.

- **Fixed-length array [n] (n > 0)**: Repeat the field n times. Effective length is n × "Bit count". Elements appear individually in results/ honeycomb under the same name and color.
- **Variable-length array [ ]**: Repeat the field 0 or more times, so the frame length is unspecified and ends via an end-of-frame condition, which can be an operator or gap.
  Constraints:
  - Only one variable-length array is supported per frame (processing limitation).
  - A delimiter field must follow immediately after [ ] (unless [ ] is the last field) so the decoder can terminate the array.
  - Variable-length array elements appear in details as Name: 1, Name: 2, etc. The selected field shows as Name[n] where n is the detected size.
  - Exception: Consecutive variable arrays can form a repeated structure, e.g. A[] + B[] → ABABAB... until the end condition has been detected.
  - Check functions can be combined in dynamic arrays, e.g., B[] can check parity relative to A[] by index.

"crc5usb(n-m)" (CRC check, 5-bit, USB polynomial)

Verifies a 5-bit CRC over fields in the index range n to m. For example, use "crc5usb(1-5)" to check fields 1 through 4. If the range includes an array, all elements in the array are included.
If the CRC check fails, the CRC field is marked "CRC error" (red), and the containing frame marked similarly unless a higher-priority error exists.

"odd(n-m), even(n-m)" (parity check)	Checks odd/even parity over the index range n to m including the parity bit. If the parity check fails, the parity field is marked "CRC error" (red), and the containing frame marked similarly unless a higher-priority error exists.

Remote command:
`SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:CONDition` on page 1743
`SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:CONDition` on page 1772

Bit count
Sets the number of bits in the selected field, i.e., the field's length. Selecting the value opens a keypad showing allowed minimum and maximum values. You can set "Min", "Max", "Reset" or adjust with the "Inc" or "Dec" buttons by 1 or 10 (step size dependent). Use "CE" to restore the value used before the keypad opened.

If the "Condition" pattern length does not match the "Bit count":
- Too long, it is truncated.
- Too short, it is left-padded with 0.

Both truncation and padding happen on the left side of the condition and follow the configured "Bit order".

Examples for "Condition" "=100"):
- "Bit order" is "MSB":
  - Bit count = 2: truncated. Result: =00
  - Bit count = 4: padded. Result: =0100
- "Bit order" is LSB first (equivalent MSB-first representation is =001):
  - Bit count = 2: truncated. Result: =00 (LSB first), =00 (MSB first)
  - Bit count = 4: padded. Result: =0100 (LSB first), =0010 (MSB first)

Remote command:
`SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:BITCount` on page 1742
`SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:BITCount` on page 1772

Result column
Determines which field is displayed in which result column of the decode table.

- Selecting "-" (no index) means that the result is not displayed.
- Selecting "1", "2" or "3" means that the result is displayed in the 1st, 2nd or 3rd result column, that the decode table supports. Each of the three result columns has to be unique for each frame type. But to display unrelated information for different frame types, you can define different result columns.

Remote command:
`SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:CLMN` on page 1744
`SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:CLMN` on page 1774

Bit order
Selects, in which order the bits of a field's "Condition" value are evaluated:

- "LSB first": little endian, least significant bit first
- "MSB first": big endian, most significant bit first

Remote command:
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:BITorder on page 1744
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:BITorder on page 1773

Numeric format
Selects how the "Condition" value is interpreted:

- Symbolic: Assigns a symbolic translation on the data fields. Only available for custom protocols.
- Value list: Assigns a custom name to each hexadecimal value; any value without an assigned value is shown as "Undefined".
- A*X+B: Assigns a linear function on the data fields.
- For details on the other numeric formats, see "Format-specific information" on page 532.

The following rules apply:

- If the condition contains at least one of "H", "h", "L", "l", "X", "x", and all other characters are only "1" and/or "0", the value is always treated as binary, regardless of the selected numeric format.
- "x" and "X" are wildcards and are supported only in binary format or when the string is auto-interpreted as binary per the rule above.
  Examples for format set to "HEX":
  – "=1HL111000": valid (read as binary)
  – "=0x10101": valid (read as binary; "x" acts as wildcard, not a hex prefix)
  – "=1010": valid (read as HEX, with a total of 16 bits)
  – "=0x5A": valid (read as HEX "5A", because "0x" is a valid hex prefix; entering 5A alone is recommended)
  – "=5X12": invalid
  – "=1H33": invalid

Remote command:
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:FORMat on page 1743
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:FORMat on page 1773

Add value
Creates a new hexagonal value for customization.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:ADDValue on page 1745
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:ADDValue on page 1774

Value
Defines the hexagonal value to convert it into a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue on page 1745
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue on page 1775

Label
Defines the label to convert the corresponding hexagonal value to a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel on page 1746
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel on page 1775

Unit
Defines a unit for the linear function.

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:UNIT on page 1746
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:UNIT on page 1776

Parameter A,B
Defines the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:PARA on page 1746
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:PARB on page 1746
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:PARA on page 1776
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:PARB on page 1776

14.9.5 NRZ software trigger

14.9.5.1 Setup A trigger

Before setting up the software trigger for the protocols, a trigger A event needs to be set up.

14.9.5.2 Software trigger settings

Access:

- "Menu" > "Apps" > "Protocol" tab > "NRZ Clocked" > "Trigger" tab > "Setup Software Trigger"
- "Menu" > "Apps" > "Protocol" tab > "NRZ Unclocked" > "Trigger" tab > "Setup Software Trigger"

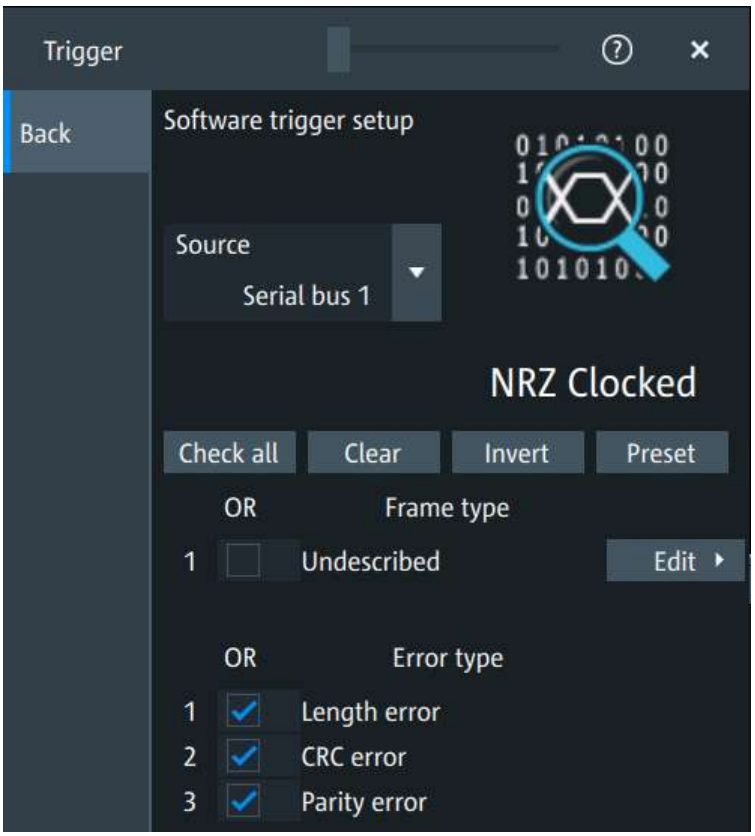

In the "Software Trigger" tab, you can define the settings to trigger on the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to trigger on.

"Check all" Enables the software trigger for all available frames and error types.

"Clear" Disables the software trigger for all available frames and error types.

"Invert" Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types for the software trigger.

Remote command:
`TRIGger:SBSW:NRZC:CHKall` on page 1748
`TRIGger:SBSW:NRZU:CHKall` on page 1777
`TRIGger:SBSW:NRZC:CLR` on page 1748
`TRIGger:SBSW:NRZU:CLR` on page 1777
`TRIGger:SBSW:NRZC:INVert` on page 1748
`TRIGger:SBSW:NRZU:INVert` on page 1778
`TRIGger:SBSW:NRZC:RST` on page 1748
`TRIGger:SBSW:NRZU:RST` on page 1778

Frame type
Selects the frame type that you want to trigger on. You can trigger on all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

The only frame type available by default is "Undescribed", because the NRZ protocols support custom coding.

However, the frame formats that you define appear in this list, too. See Section 14.9.4, "NRZ format configuration", on page 679.

Remote command:
`TRIGger:SBSW:NRZC:FRENable` on page 1748
`TRIGger:SBSW:NRZU:FRENable` on page 1778
`TRIGger:SBSW:NRZC:FRAMe<fr>:ENABle` on page 1748
`TRIGger:SBSW:NRZU:FRAMe<fr>:ENABle` on page 1778

Edit
Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

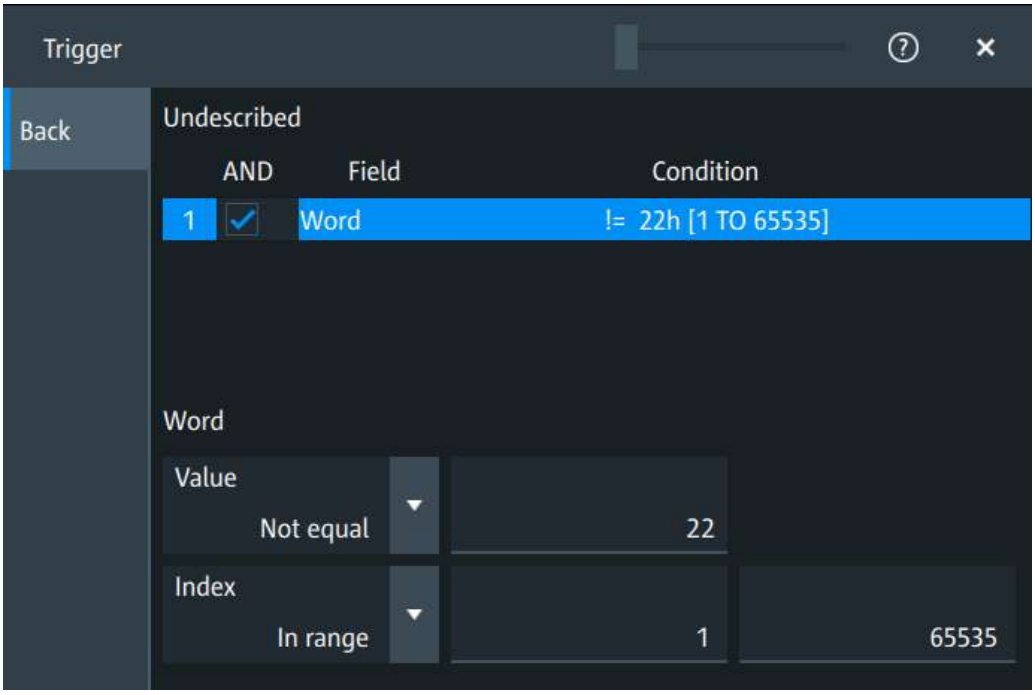

"Field" Enables the field type that you want to trigger on for the selected frame.
For the default "Undescribed" frame, the only available field type is "Word". See "Frame type" on page 688.
However, the field formats that you define appear in this list, too. See Section 14.9.4, "NRZ format configuration", on page 679.

Remote command:
`TRIGger:SBSW:NRZC:FIENable` on page 1750
`TRIGger:SBSW:NRZU:FIENable` on page 1780
`TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:ENABle` on page 1750
`TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:ENABle` on page 1780

"Condition" Displays the value condition for the selected field.

Remote command:
`TRIGger:SBSW:NRZC:BIT` on page 1749
`TRIGger:SBSW:NRZU:BIT` on page 1778
`TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:BIT` on page 1749
`TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:BIT` on page 1778

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
`TRIGger:SBSW:NRZC:DMAX` on page 1749
`TRIGger:SBSW:NRZU:DMAX` on page 1779
`TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:DMAX` on page 1749
`TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:DMAX` on page 1779
`TRIGger:SBSW:NRZC:DMIN` on page 1750
`TRIGger:SBSW:NRZU:DMIN` on page 1779
`TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:DMIN` on page 1750
`TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:DMIN` on page 1779
`TRIGger:SBSW:NRZC:DOPerator` on page 1750
`TRIGger:SBSW:NRZU:DOPerator` on page 1779
`TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:DOPerator` on page 1750
`TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:DOPerator` on page 1779

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
TRIGger:SBSW:NRZC:IMAX on page 1751
TRIGger:SBSW:NRZU:IMAX on page 1780
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:IMAX on page 1751
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:IMAX on page 1780
TRIGger:SBSW:NRZC:IMIN on page 1751
TRIGger:SBSW:NRZU:IMIN on page 1781
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:IMIN on page 1751
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:IMIN on page 1781
TRIGger:SBSW:NRZC:IOPerator on page 1751
TRIGger:SBSW:NRZU:IOPerator on page 1781
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:IOPerator on page 1751
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:IOPerator on page 1781

Error type
Enables triggering on the selected error type.

The available error types are "Length error", "CRC error", "Parity error".

Remote command:
TRIGger:SBSW:NRZC:ERENable on page 1752
TRIGger:SBSW:NRZU:ERENable on page 1781
TRIGger:SBSW:NRZC:ERRor<m>:ENABle on page 1752
TRIGger:SBSW:NRZU:ERRor<m>:ENABle on page 1781

14.9.6 Measure

The "Setup Measurement" button opens the dialog for automatic measurements in the "Protocol" category for the selected serial bus.

See Section 10.2.8.2, "Settings for protocol measurements", on page 311.

14.9.7 NRZ decode results

To enable the decoding, see Section 14.1.9.3, "Decoding protocol signals", on page 531.

Decode results table

The "Decode results" table contains information about all decoded frames.

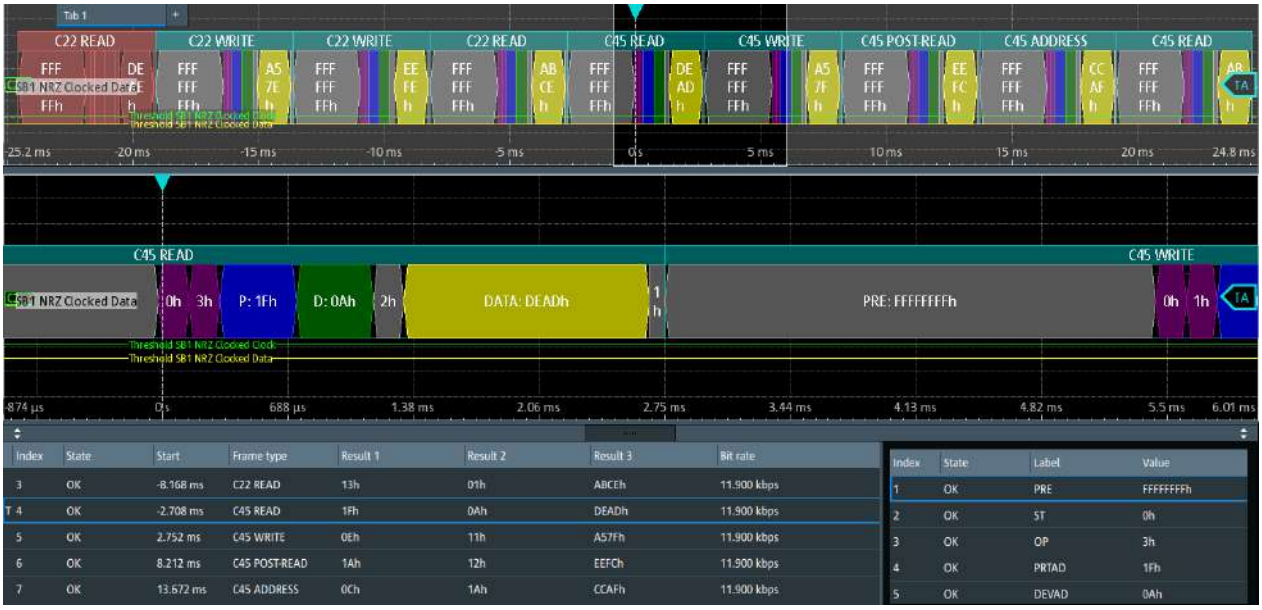

Figure 14-25: Decoded NRZ clocked signal

The decode results table contains information about all decoded frames.

Table 14-14: Content of the decode results table

Column	Description
Index	Frame count
State	Overall state of the frame
Start	Start time of the frame
Frame type	The type of the frame
Result	Data displayed in the 1st, 2nd and 3rd results column. For "undescribed" frames (see Frame type), you can select the data format in the "Display" tab. For other frames, the "Format" table controls the format of each field. See Section 14.9.4, "NRZ format configuration", on page 679.
Bit rate	Value of the bit rate

When you select a frame in the decode results table, its field content is shown in the details table to the right.

Table 14-15: Content of the frame details table

Column	Description
Index	Number of the decoded field
Label	Name of the field
State	State of the field
Value	Value of the field

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 1491

Remote commands

Remote commands to retrieve decode results are described in Section 18.18.9.5, "Decode results", on page 1753 (NRZ clocked) and Section 18.18.10.5, "Decode results", on page 1782 (NRZ unclocked).

You can also export the decode results. For details see Section 14.1.9.4, "Exporting decode results", on page 531.

Example NRZC export file

```
Index,Start,Stop,State,Type,Result 1,Result 2,Result 3,Bit-rate
1,-0.019539,-0.014079,'OK','C22 WRITE',0Eh,11h,A57Eh,11900
2,-0.014079,-0.008619,'OK','C22 WRITE',1Ah,12h,EEFEh,11900
3,-0.008619,-0.00315997,'OK','C22 READ',13h,01h,ABCEh,11910
4,-0.00315997,0.0023,'OK','C45 READ',1Fh,0Ah,DEADh,11900
5,0.0023,0.0077608,'OK','C45 WRITE',0Eh,11h,A57Fh,11900
6,0.0077608,0.013221,'OK','C45 POST-READ',1Ah,12h,EEFCh,11900
7,0.013221,0.018681,'OK','C45 ADDRESS',0Ch,1Ah,CCAFh,11900
8,0.018681,0.0241433,'OK','C45 READ',13h,01h,ABCDh,11900

Details frame 1
Index,Label,State,Value
1,'PRE','OK',FFFFFFFFh
2,'ST','OK',1h
3,'OP','OK',1h
4,'PHYAD','OK',0Eh
5,'REGAD','OK',11h
6,'TA','OK',2h
7,'DATA','OK',A57Eh
8,'IDLE','OK',1h

Details frame 2
Index,Label,State,Value
1,'PRE','OK',FFFFFFFFh
2,'ST','OK',1h
3,'OP','OK',1h
4,'PHYAD','OK',1Ah
5,'REGAD','OK',12h
6,'TA','OK',2h
7,'DATA','OK',EEFEh
8,'IDLE','OK',1h
```

(...)

14.10 Manchester (option R&S MXO5-K510)

Manchester is a simple protocol for enhanced data integrity and reliability in serial bus communication. It is based on a self-clocked coding scheme also known as binary phase-shift keying (BPSK, or phase encoding, PE). Manchester is used in protocols such as ProfiBus (IEC 61158), DALI (Digital Addressable Lighting Interface, IEC 60929 and IEC 62386), MVB (Multifunction Vehicle Bus, part of IEC 61375 for Train Communication Networks, TCN), and Ethernet 10BASE-T (10 Mbit/s, IEEE 802.3i).

- Manchester basics 693
- Manchester configuration 695
- Manchester filter 700
- Manchester format configuration 703
- Manchester software trigger 708
- Measure 712
- Manchester decode results 712

14.10.1 Manchester basics

There are two opposing data polarity conventions:

- In Manchester coding (as per G. E. Thomas), a logical 0 is expressed by a low-to-high transition, while a logical 1 is represented by a high-to-low transition. These line voltage transitions occur at the middle of each bit period.
- In "Manchester II" coding (as per IEEE 802.3), the value of each bit is the Boolean exclusive disjunction (XOR) of the original data value and the clock value. Hence, it is equivalent to inverted Manchester coding: a logical 0 is represented by a high-to-low transition, a logical 1 is represented by a low-to-high transition.

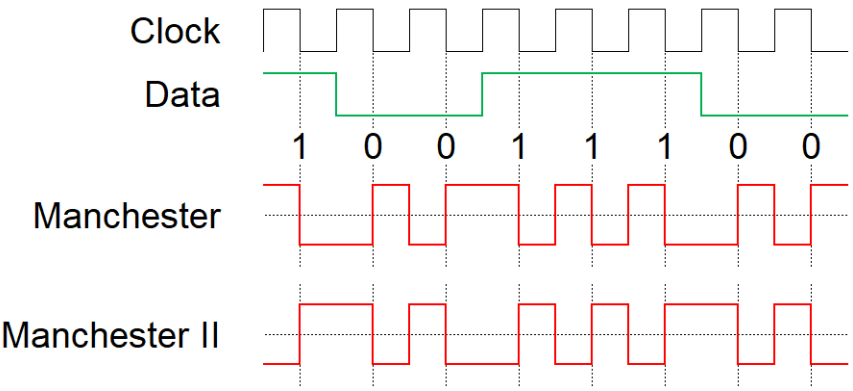

Figure 14-26: Data polarity conventions for Manchester and Manchester II

Transitions at the start of a bit period are overhead and do not represent data. Because of this overhead, Manchester coding requires twice the bandwidth of the related NRZ code.

However, the frequent transitions at the beginning and middle of bit periods support clock recovery. All transitions are directly proportional to the clock rate, allowing the signal to be self-clocked. Unless idle, the voltage level is either high or low: it does not return to a zero voltage level between bits.

14.10.1.1 Special features of Manchester coding

In practical protocols, Manchester coding appears in many variations, often employing deliberate coding violations to encode special waveform features, such as unambiguous synchronization and termination patterns. To adapt to these specific Manchester implementations and handle ambiguous signals, the option R&S MXO5-K510 uses a combination of automatic algorithms and user configurable parameters.

Quaternary Symbols

The software supports not just traditional binary symbols "0" and "1", but also arbitrary violation waveforms that use two additional symbols, yielding a total of four valid "quaternary bit" values. The two additional violation symbols are "H" (high) and "L" (low). Values of "H" correspond to a waveform lacking a transition in the center of the bit, with a physical high voltage state. Similarly, "L" violations also lack a center transition, but have a physical low voltage state. Most Manchester synchronization and termination conventions, even those containing violations, may be expressed as sequences of these four symbols. R&S MXO5-K510 uses the quaternary notation to support Manchester patterns in the honeycomb display and to describe synchronization and termination patterns in the frame description table.

Idle Conditions

The state of the signal line in between messages is the idle condition. Manchester appears in practical standards with varying idle conditions: it can idle at the high, low, or middle voltage state. High and low idle states correspond to "biphase" Manchester, while the middle voltage (often ground) adds a third state to become "ternary" Manchester. Using ternary Manchester, option R&S MXO5-K510 can usually establish the gaps between messages automatically. Using binary Manchester, the software has no way to automatically discriminate an idling bus from monotonic sequences of "H" or "L" violations. For these biphase situations, R&S MXO5-K510 offers a "Gap Time" detection feature, which allows to distinguish long intervals of non-transitions between bus idling and sequences of violations. Other differences between biphase and ternary Manchester are managed automatically by the software, with no user input required.

Edge Conventions

Most Manchester encodings establish the beginning of the first bit by a first transition, hence an "overhead" edge. The center of the bit is then marked by a second transition, which is a "sampling" edge. Some Manchester implementations, however, sample the first bit on the first edge. The option R&S MXO5-K510 attempts to automatically detect this situation. Unfortunately, it is possible to trick the algorithm with waveforms that

contain many (legitimate) violations. In these situations, the user can force a "First Edge" or "Second Edge" convention for handling edges. Edge sampling according to the "First Edge" convention is more likely to appear in biphase Manchester, but the software also supports this setting for ternary Manchester situations.

Bit Rate

Typically, a single bit rate is clearly specified in Manchester protocols; however, some implementations use a variable bit rate. If you do not specify it in the "Setup" tab, R&S MXO5-K510 by default automatically estimates it. However, with an estimated (hence, undefined) bit rate, fundamental ambiguities are possible in Manchester. In particular, sequences like "0000", "1111", "0101", "1010", and many situations involving "H" and "L" violations, cannot be decoded without it. The situation becomes even less defined with eventual Manchester coding violations. In these situations, you must provide a fixed ""Bit rate"" setting to bypass the software's estimation algorithm.

14.10.2 Manchester configuration

14.10.2.1 Manchester configuration settings

Access: "Menu" > "Apps" > "Protocol" tab > "Manchester" > "Setup".

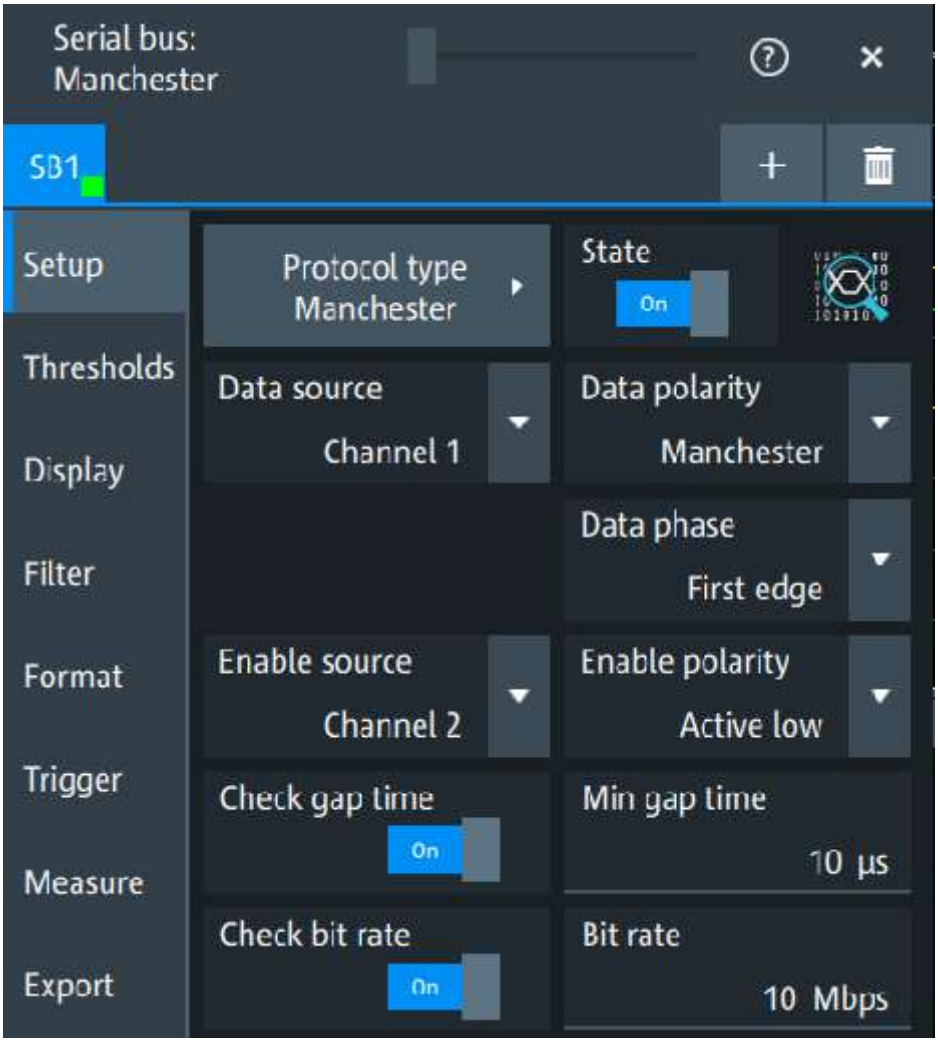

Figure 14-27: Setup dialog, Data polarity selects "Manchester" or "Manchester II"

Make sure that the tab of the correct serial bus is selected.

Protocol type
Selects the protocol type to be decoded.

Remote command:
`SBUS<sb>:TYPE` on page 1489

State
Enables the decoding of the selected bus. The signal icon of the bus appears on the signal bar.

Remote command:
`SBUS<sb>[:STATe]` on page 1489

Data source
Selects the source for the data signal.

Remote command:
SBUS<sb>:MANCh:DATA:SOURce on page 1788

Data polarity
Selects the polarity for the data signal, and hence the data representation convention, see Figure 14-26.

- "Manchester" (as per G. E. Thomas):
  – Low-to-high transition for logical 0
  – High-to-low transition for logical 1
- "Manchester II" (as per IEEE 802.3):
  – High-to-low transition for logical 0
  – Low-to-high transition for logical 1

Remote command:
SBUS<sb>:MANCh:DATA:POLarity on page 1788

Data phase
Defines the phase for the Manchester data signal. The available settings are:

- "First edge": the decoder captures data bits on the clock's rising edge (low-to-high transition).
  Select this option, if the 1st transition is no overhead and needs to be sampled.
- "Second edge": the decoder captures data bits on the clock's falling edge (high-to-low transition).
  Select this option, if the 1st edge is only an overhead transition from the idle state.

Note: The requirement to specify "First edge" or "Second edge" has the following background: An edge is always a transition from high to low or from low to high. In Manchester coding, however, if the signal comes from the idle state, there is right before the first valid edge always an overhead transition from idle to high or from idle to low. Some standards can regard this as a valid transition. Defining the phase avoids this potential ambiguity.
See also Special features of Manchester coding.

Remote command:
SBUS<sb>:MANCh:DATA:PHASe on page 1789

Enable source
Selects the source of the enable signal.

If you select any source other than "None", the "Enable polarity" becomes available, which selects the polarity of the enable signal.

Remote command:
SBUS<sb>:MANCh:ENABle:SOURce on page 1789
SBUS<sb>:MANCh:ENABle:POLarity on page 1789

Check gap time
Enables the detection of the minimum idle time between two frames during decoding. Also enables setting the "Min gap time". Optionally, if you set it, the decoder considers any longer idle time a gap. A known minimum gap time helps the decoder with frame synchronization.

Remote command:
`SBUS<sb>:MANCh:MINGap:SELect` on page 1790
`SBUS<sb>:MANCh:MINGap:WIDTh` on page 1790

Check bit rate
Enables setting the "Bit rate".
- If you define a bit rate, it is used for triggering and decoding.
- If you disable this option, the decoder calculates the bit rate.

Remote command:
`SBUS<sb>:MANCh:BITRate:SELect` on page 1790
`SBUS<sb>:MANCh:BITRate:WIDTh` on page 1791

14.10.2.2 Thresholds

Access: "Menu" > "Apps" > "Protocol" tab > "Manchester" > "Thresholds"

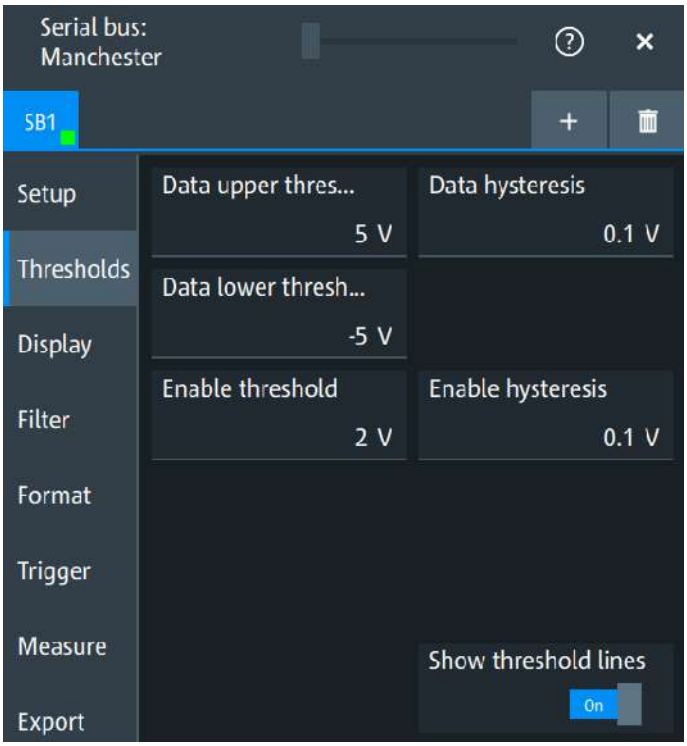

Figure 14-28: Thresholds dialog

Enter the values directly in the fields.

Upper threshold, Lower threshold, Hysteresis
Sets the upper and lower threshold and the hysteresis for the data source channel.

Remote command:
SBUS<sb>:MANCh:DATA:THUPper on page 1791
SBUS<sb>:MANCh:DATA:THLower on page 1791
SBUS<sb>:MANCh:DATA:HYSTeresis on page 1791

Enable threshold, Enable hysteresis
Available only, if you have selected a source for the enable signal. See "Enable source" on page 697.

Sets the middle threshold and the hysteresis for the enable source channel.

Remote command:
SBUS<sb>:MANCh:ENABle:THReshold on page 1792
SBUS<sb>:MANCh:ENABle:HYSTeresis on page 1792

Show threshold lines
If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also Show threshold lines.

Remote command:
SBUS<sb>:THReshold on page 1492

14.10.2.3 Display settings

For details about the display settings, see Section 14.1.3.1, "Display settings", on page 511.

Decode layer
Selects the decode layer.

Decoding is performed in several steps, and the results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display.

"Off"	Disables the display of the decode layer.
"Edges"	Enables the display of all edges.
"Bits"	Enables the display of all encoded bits.

Data format
See "Data format" on page 512.

14.10.2.4 Manchester symbols

There is no symbolic translation for the Manchester protocol, because of the custom frame definitions. See Section 14.10.4, "Manchester format configuration", on page 703.

14.10.3 Manchester filter

Access: "Menu" > "Apps" > "Protocol" tab > "Manchester" > "Filter" tab

Although Manchester has a free format description according to section Section 14.10.4, "Manchester format configuration", on page 703, we provide a dynamic filter solution that can adapt to custom frames and fields in the decoded events.

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

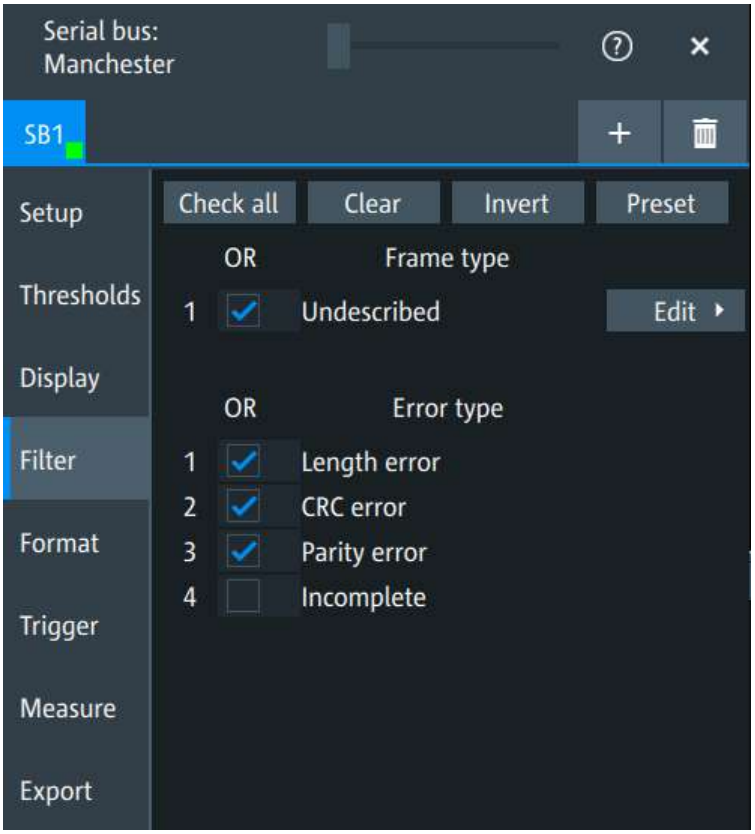

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all" Enables the filter for all available frames and error types.

"Clear" Disables the filter for all available frames and error types.

"Invert" Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types.

Remote command:
`SBUS<sb>:MANCh:FILTer:CHKall` on page 1793
`SBUS<sb>:MANCh:FILTer:CLR` on page 1794
`SBUS<sb>:MANCh:FILTer:INVert` on page 1794
`SBUS<sb>:MANCh:FILTer:RST` on page 1794

Enable
Enables the filtering on Manchester frames. Only the frames that match the selected filter conditions are displayed.

Remote command:
`SBUS<sb>:MANCh:FILTer:FRENable` on page 1797
`SBUS<sb>:MANCh:FILTer:FRAMe<fr>:ENABle` on page 1797

Frame type
Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.

For selected frame types, you can also specify conditions for the value of the fields in the "Edit" dialog.

The only frame type available by default is "Undescribed", because the Manchester protocol supports custom coding.

However, the frame formats that you define appear in this list, too. See Section 14.10.4, "Manchester format configuration", on page 703.

Edit
Opens a dialog to define the details of the selected frame.

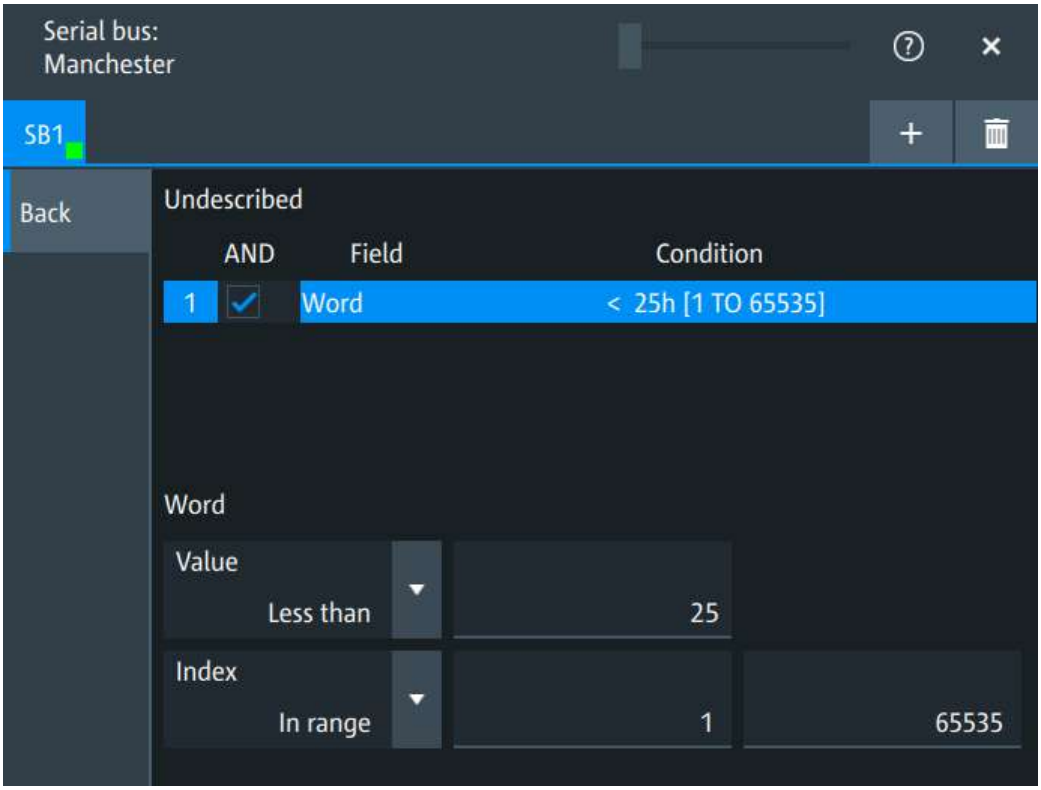

"Field" Enables the field type that you want to filter on for the selected frame. For the default "Undescribed" frame, the only available field type is "Word", which is the payload component of an undescribed frame. See "Frame type" on page 701.
However, the field formats that you define appear in this list, too. See Section 14.10.4, "Manchester format configuration", on page 703.

Remote command:
`SBUS<sb>:MANCh:FILTer:FIENable` on page 1796
`SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:ENABle` on page 1796

"Condition" Displays the value condition for the selected field.

Remote command:
`SBUS<sb>:MANCh:FILTer:BIT` on page 1794
`SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:BIT` on page 1794

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
`SBUS<sb>:MANCh:FILTer:DMAX` on page 1795
`SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:DMAX` on page 1795
`SBUS<sb>:MANCh:FILTer:DMIN` on page 1795
`SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:DMIN` on page 1795
`SBUS<sb>:MANCh:FILTer:DOPerator` on page 1796
`SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:DOPerator` on page 1796

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
`SBUS<sb>:MANCh:FILTer:IMAX` on page 1797
`SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:IMAX` on page 1797
`SBUS<sb>:MANCh:FILTer:IMIN` on page 1797
`SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:IMIN` on page 1797
`SBUS<sb>:MANCh:FILTer:IOPerator` on page 1798
`SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:IOPerator` on page 1798

Error type
Enables filtering on the selected error type.

The available error types are "Length error", "CRC error", "Parity error", "Incomplete".

Remote command:
`SBUS<sb>:MANCh:FILTer:ERENable` on page 1795
`SBUS<sb>:MANCh:FILTer:ERRor<n>:ENABle` on page 1795

14.10.4 Manchester format configuration

Access: "Menu" > "Apps" > "Protocol" tab > "Manchester" > "Format".

See Section 14.1.5, "Format", on page 516.

Add Frame
Creates a frame format and adds it to the end of the frame list. A dialog opens to specify the frame details. The number of frame formats is limited to 100.

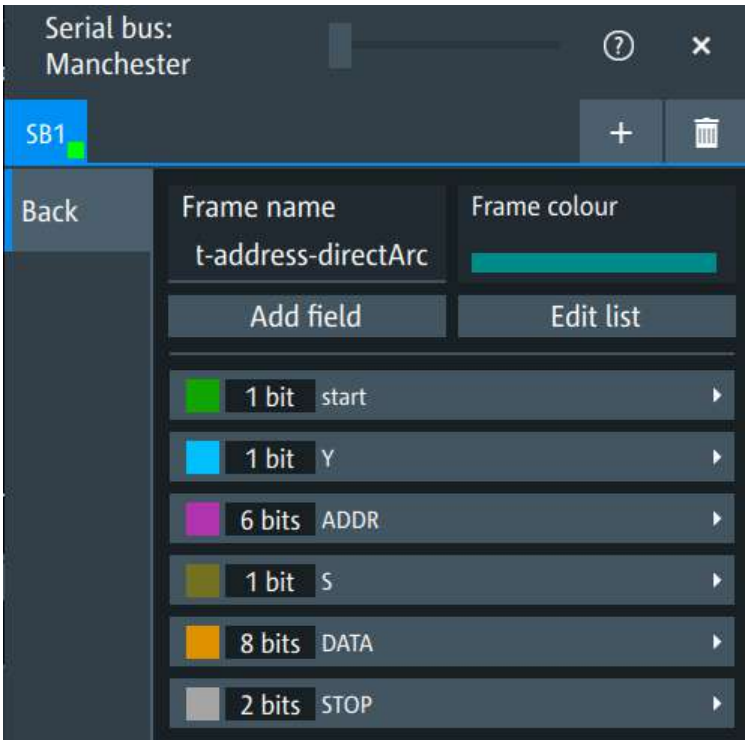

Remote command:
SBUS<sb>:MANCh:FORMat:ADDFrame on page 1799

Edit List
Enables editing the frame list. If enabled, you can delete a frame format by clicking its "Delete" icon. In a list with several entries, you can move frame formats up or down by clicking the arrow buttons. To exit the editing mode, click "Edit list" again.

Remote command:
SBUS<sb>:MANCh:FORMat:CLR on page 1799
SBUS<sb>:MANCh:FORMat:FCOunt? on page 1800

Open
Opens a dialog for loading an existing list of frame formats in XML file format.

Remote command:
SBUS<sb>:MANCh:FORMat:LOAD on page 1799

Save as
Opens a dialog for saving your current list of frame formats to an `XML` file. Saved frame formats can support efficient and convenient working.

Remote command:
`SBUS<sb>:MANCh:FORMat:SAVE` on page 1799

Frame name
Specifies an arbitrary name to label the currently selected frame format. Ideally, use speaking names according to the specifications of the applicable protocol standard. Frame names do not have to be unique and are only intended to support you.

Remote command:
`SBUS<sb>:MANCh:FORMat:FRAMe<fr>:NAME` on page 1801

Frame Color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
`SBUS<sb>:MANCh:FORMat:FRAMe<fr>:COLor` on page 1801

Add Field
Creates a new field description for the currently selected frame format and adds it to the end of the field list with color, bit position (order of transmission) and name. Brackets indicate how often bits will be repeated, [] indicates that this is an open array.

A dialog opens to specify the field details. The number of field descriptions is limited to 100.

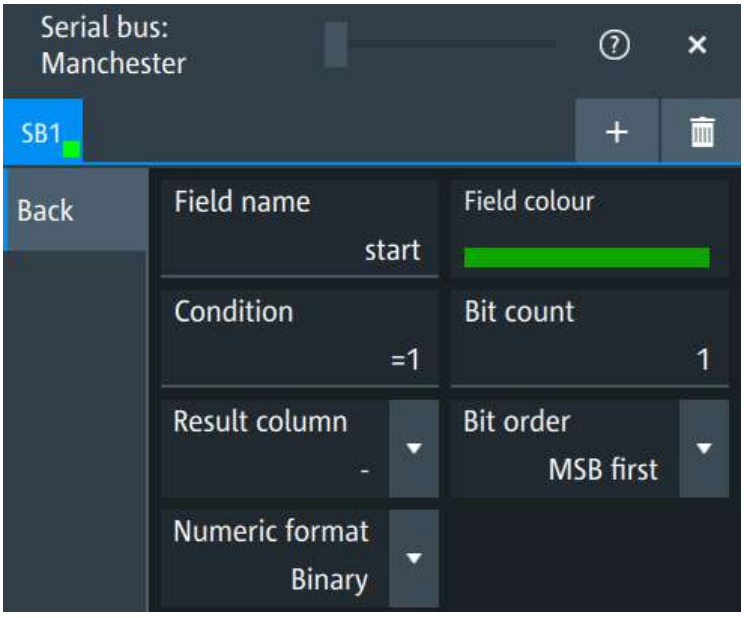

Remote command:
`SBUS<sb>:MANCh:FORMat:FRAMe<fr>:ADDField` on page 1800

Edit List
Enables editing the field list. If enabled, you can delete a field description by clicking its "Delete" icon. In a list with several entries, you can move field descriptions up or down by clicking the arrow buttons. To exit the editing mode, click "Edit list" again.

Remote command:
`SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLDCount?` on page 1800

Field name
Specifies an arbitrary name for the currently selected field description. Ideally, use speaking names.

Field names do not have to be unique and are only intended to support you.

Remote command:
`SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:NAME` on page 1801

Field Color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
`SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:COLor` on page 1801

Condition
Defines a rule or pattern that a field must match to help identify a frame and/or validate mandatory values, e.g., CRC, ID. The condition must match the field's "Numeric format", "Bit order", and "Bit length".

The following conditions are implemented:

"=" (equal / pattern match) — Defines a bit pattern that the field must match. Allowed characters depend on the field's "Format", "Bit order", and "Bits". In binary format, for example, valid characters are "1", "0", "H" (high), and "L" (low).

The behavior depends on whether the frame contains a variable-length array [ ]:

- **No [ ] in the frame**: All fields using = act as keys to identify the frame type. The frame matches only if all such fields match.
- **Frame contains one [ ]**: If there is a "Variable Length Array" field, then the equal operator has two different functionalities, depending on the position of the equal-operator field within the frame format configuration:
  - **Field is before the [ ]**: The condition acts as a key to identify a frame type and matches starting bits.
  - **Field is immediately after the [ ]**: The condition acts as an array delimiter and matches the bits right after the variable-length data to terminate the array.
    Note: If a = field is after the [ ] but not immediately after it, decode results are unpredictable.

"[ ]" (array / repetition)
Defines the number of permissible repetitions of the field.

- **Fixed-length array [n] (n > 0)**: Repeat the field n times. Effective length is n × "Bit count". Elements appear individually in results/ honeycomb under the same name and color.
- **Variable-length array [ ]**: Repeat the field 0 or more times, so the frame length is unspecified and ends via an end-of-frame condition, which can be an operator or gap.
  Constraints:
  – Only one variable-length array is supported per frame (processing limitation).
  – A delimiter field must follow immediately after [ ] (unless [ ] is the last field) so the decoder can terminate the array.
  – Variable-length array elements appear in details as Name: 1, Name: 2, etc. The selected field shows as Name[n] where n is the detected size.
  – Exception: Consecutive variable arrays can form a repeated structure, e.g. A[] + B[] → ABABAB... until the end condition has been detected.
  – Check functions can be combined in dynamic arrays, e.g., B[] can check parity relative to A[] by index.

"crc5usb(n-m)" (CRC check, 5-bit, USB polynomial)
Verifies a 5-bit CRC over fields in the index range n to m. For example, use "crc5usb(1-5)" to check fields 1 through 4. If the range includes an array, all elements in the array are included.
If the CRC check fails, the CRC field is marked "CRC error" (red), and the containing frame marked similarly unless a higher-priority error exists.

"odd(n-m), even(n-m)" (parity check)
Checks odd/even parity over the index range n to m including the parity bit.
If the parity check fails, the parity field is marked "CRC error" (red), and the containing frame marked similarly unless a higher-priority error exists.

Remote command:
`SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:CONDition` on page 1802

Bit count
Sets the number of bits in the selected field, i.e., the field's length. Selecting the value opens a keypad showing allowed minimum and maximum values. You can set "Min", "Max", "Reset" or adjust with the "Inc" or "Dec" buttons by 1 or 10 (step size dependent). Use "CE" to restore the value used before the keypad opened.

If the "Condition" pattern length does not match the "Bit count":
- Too long, it is truncated.
- Too short, it is left-padded with 0.

Both truncation and padding happen on the left side of the condition and follow the configured "Bit order".

Examples for "Condition" "=100"):
- "Bit order" is "MSB":
  – Bit count = 2: truncated. Result: =00
  – Bit count = 4: padded. Result: =0100

- "Bit order" is LSB first (equivalent MSB-first representation is =001):
  - Bit count = 2: truncated. Result: =00 (LSB first), =00 (MSB first)
  - Bit count = 4: padded. Result: =0100 (LSB first), =0010 (MSB first)

Remote command:
`SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:BITCount` on page 1802

Result column
Determines which field is displayed in which result column of the decode table.

- Selecting "-" (no index) means that the result is not displayed.
- Selecting "1", "2" or "3" means that the result is displayed in the 1st, 2nd or 3rd result column, that the decode table supports. Each of the three result columns has to be unique for each frame type. But to display unrelated information for different frame types, you can define different result columns.

Remote command:
`SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:CLMN` on page 1804

Bit order
Selects, in which order the bits of a field's "Condition" value are evaluated:

- "LSB first": little endian, least significant bit first
- "MSB first": big endian, most significant bit first

Remote command:
`SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:BITorder` on page 1803

Numeric format
Selects how the "Condition" value is interpreted:

- Symbolic: Assigns a symbolic translation on the data fields. Only available for custom protocols.
- Value list: Assigns a custom name to each hexadecimal value; any value without an assigned value is shown as "Undefined".
- A*X+B: Assigns a linear function on the data fields.
- For details on the other numeric formats, see "Format-specific information" on page 532.

The following rules apply:

- If the condition contains at least one of "H", "h", "L", "l", "X", "x", and all other characters are only "1" and/or "0", the value is always treated as binary, regardless of the selected numeric format.
- "x" and "X" are wildcards and are supported only in binary format or when the string is auto-interpreted as binary per the rule above.
  Examples for format set to "HEX":
  - "=1HL111000": valid (read as binary)
  - "=0x10101": valid (read as binary; "x" acts as wildcard, not a hex prefix)
  - "=1010": valid (read as HEX, with a total of 16 bits)
  - "=0x5A": valid (read as HEX "5A", because "0x" is a valid hex prefix; entering 5A alone is recommended)
  - "=5X12": invalid
  - "=1H33": invalid

Remote command:
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:FORMat on page 1803

Add value
Creates a new hexagonal value for customization.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:ADDValue on page 1804

Value
Defines the hexagonal value to convert it into a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue on page 1805

Label
Defines the label to convert the corresponding hexagonal value to a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel on page 1805

Unit
Defines a unit for the linear function.

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:UNIT on page 1806

Parameter A,B
Defines the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:PARA on page 1806
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:PARB on page 1806

14.10.5 Manchester software trigger

14.10.5.1 Setup A trigger

Before setting up the software trigger for the protocols, a trigger A event needs to be set up.

14.10.5.2 Software trigger settings

Access: "Menu" > "Apps" > "Protocol" tab > "Manchester" > "Trigger" tab > "Setup Software Trigger"

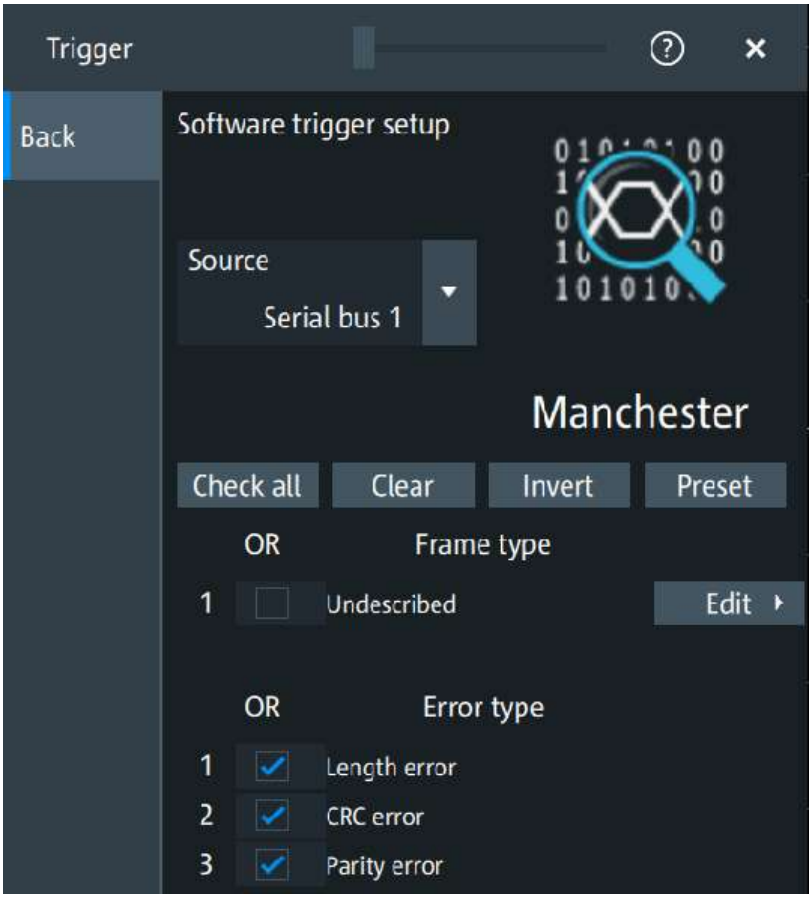

In the "Software Trigger" tab, you can define the settings to trigger on the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to trigger on.

"Check all" Enables the software trigger for all available frames and error types.

"Clear" Disables the software trigger for all available frames and error types.

"Invert" Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types for the software trigger.

Remote command:
`TRIGger:SBSW:MANCh:CHKall` on page 1807
`TRIGger:SBSW:MANCh:CLR` on page 1807

TRIGger:SBSW:MANCh:INVert on page 1808
TRIGger:SBSW:MANCh:RST on page 1808

Frame type
Selects the frame type that you want to trigger on. You can trigger on all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

The only frame type available by default is "Undescribed", because the Manchester protocol supports custom coding.

However, the frame formats that you define appear in this list, too. See Section 14.10.4, "Manchester format configuration", on page 703.

Remote command:
TRIGger:SBSW:MANCh:FRENable on page 1808
TRIGger:SBSW:MANCh:FRAMe<fr>:ENABle on page 1808

Edit
Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

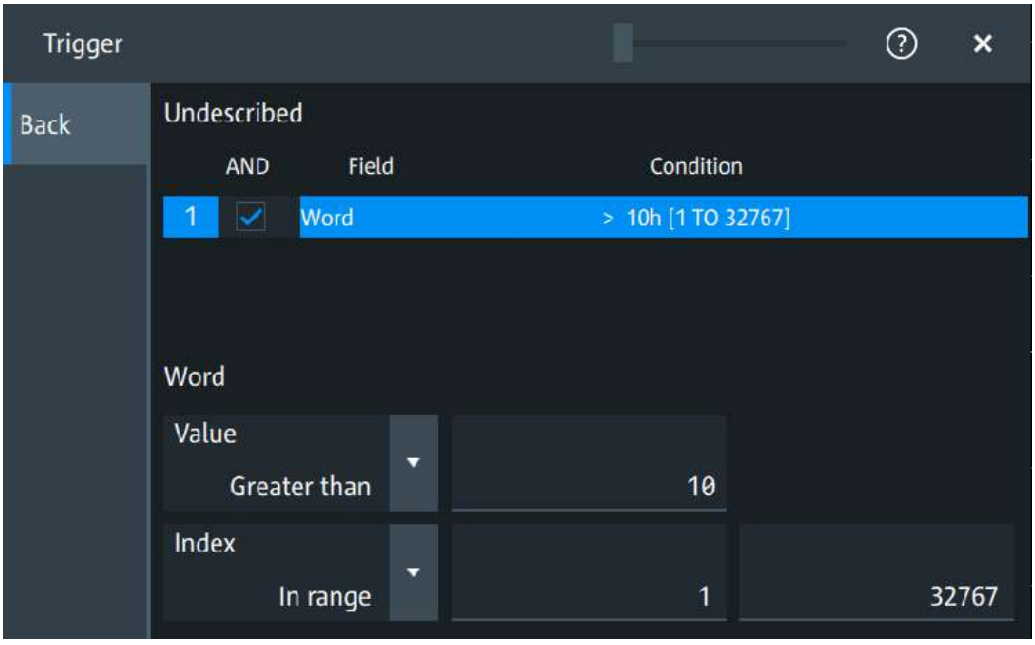

"Field" Enables the field type that you want to trigger on for the selected frame.
For the default "Undescribed" frame, the only available field type is "Word". See "Frame type" on page 710.
However, the field formats that you define appear in this list, too. See Section 14.10.4, "Manchester format configuration", on page 703.

Remote command:
`TRIGger:SBSW:MANCh:FIENable` on page 1810
`TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:ENABle` on page 1810

"Condition" Displays the value condition for the selected field.

Remote command:
`TRIGger:SBSW:MANCh:BIT` on page 1808
`TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:BIT` on page 1808

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
`TRIGger:SBSW:MANCh:DMAX` on page 1809
`TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:DMAX` on page 1809
`TRIGger:SBSW:MANCh:DMIN` on page 1809
`TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:DMIN` on page 1809
`TRIGger:SBSW:MANCh:DOPerator` on page 1809
`TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:DOPerator` on page 1809

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
`TRIGger:SBSW:MANCh:IMAX` on page 1810
`TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:IMAX` on page 1810
`TRIGger:SBSW:MANCh:IMIN` on page 1811
`TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:IMIN` on page 1811
`TRIGger:SBSW:MANCh:IOPerator` on page 1811
`TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:IOPerator` on page 1811

Error type
Enables triggering on the selected error type.

The available error types are "Length error", "CRC error", "Parity error".

Remote command:
`TRIGger:SBSW:MANCh:ERENable` on page 1811
`TRIGger:SBSW:MANCh:ERRor<m>:ENABle` on page 1811

14.10.6 Measure

The "Setup Measurement" button opens the dialog for automatic measurements in the "Protocol" category for the selected serial bus.

See Section 10.2.8.2, "Settings for protocol measurements", on page 311.

14.10.7 Manchester decode results

To enable the decoding, see Section 14.1.9.3, "Decoding protocol signals", on page 531.

Decode results table

The "Decode results" table contains information about all decoded frames.

Figure 14-29: Decoded Manchester signal

The decode results table contains information about all decoded frames.

Table 14-16: Content of the decode results table

Column	Description
Index	Frame count
State	Overall state of the frame
Start	Start time of the frame
Frame type	The type of the frame
Result	Data displayed in the 1st, 2nd and 3rd results column. For "undescribed" frames (see Frame type), you can select the data format in the "Display" tab. For other frames, the "Format" table controls the format of each field. See Section 14.10.4, "Manchester format configuration", on page 703.
Bit rate	Value of the bit rate

When you select a frame in the decode results table, its field content is shown in the details table to the right.

Table 14-17: Content of the frame details table

Column	Description
Index	Number of the decoded field
Label	Name of the field
State	State of the field
Value	Value of the field

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 1491

Remote commands

Remote commands to retrieve decode results are described in Section 18.18.11.5, "Decode results", on page 1812.

You can also export the decode results. For details see Section 14.1.9.4, "Exporting decode results", on page 531.

Example Manchester export file

```
Index,State,Type,Result 1,Result 2,Result 3,Bit-rate
1,'OK','Cmd/Stat',3h,049h,1h,14280
2,'OK','Data',4h,1234h,0h,14290
3,'OK','Data',4h,5678h,1h,14280
4,'OK','Data',4h,9ABCh,0h,14280
5,'OK','Data',4h,DEF0h,1h,14280
6,'OK','Cmd/Stat',3h,000h,0h,14270
7,'OK','Cmd/Stat',3h,083h,1h,14280
8,'PAR','Cmd/Stat',3h,083h,0h,14280

Details frame 1
Index,Label,State,Value
1,'Sync','OK',3h
2,'RTA','OK',01h
3,'Info','OK',049h
4,'P','OK',1h

Details frame 2
Index,Label,State,Value
1,'Sync','OK',4h
2,'Data','OK',1234h
3,'P','OK',0h
```

(...)

14.11 8b/10b (option R&S MXO5-K510)

The 8b/10b coding scheme is used for high-speed serial data transmission, used by different standards, like Fibre Channel, PCIe, DVI and USB 3.0. Also the MIPI UniPro M-PHY interface in smartphones and display interfaces such as HDMI use 8b/10b encoding, as do base stations based on the Common Public Radio Interface (CPRI).

The MXO 5 can decode differential and single-ended 8b/10b signals. Furthermore, you can search the decoded data to isolate data contents and error states such as disparity violations.

You can also trigger on defined data contents and on error states.

- About the 8b/10b code....714
- 8b/10b configuration....715
- 8b/10b filter....717
- 8b/10b format configuration....720
- 8b/10b software trigger....726
- Measure....729
- 8b/10b decode results....730

14.11.1 About the 8b/10b code

The 8b10b is a code where an 8-bit parallel data input is mapped into a 10-bit output. This code achieves a DC-balance and bounded disparity and simultaneously allows a reasonable clock recovery.

In the coding scheme, the original 8 bits are split into two blocks, three most significant bits and five least significant bits, see Figure 14-30. After that the 3-bit block is encoded into 4 bits and the 5-bit block into 6 bits. The 4-bit and the 6-bit blocks are then combined into a 10-bit.

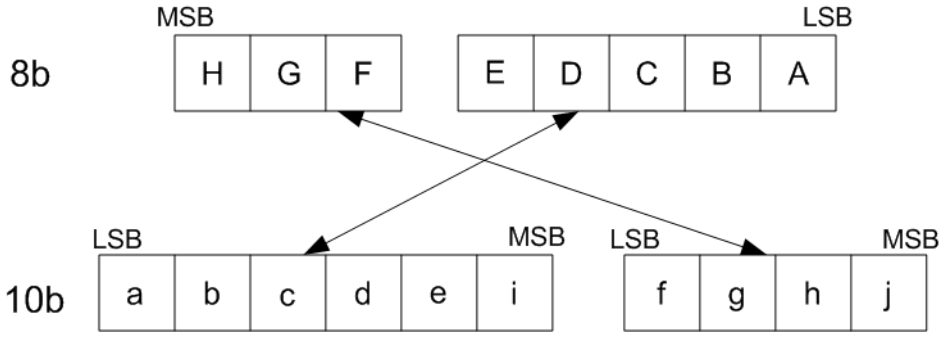

Figure 14-30: Coding scheme of the 8b/10b

The additional two bits I and j that join the stream are variable and ensure the running disparity.

There are two types of characters used in the 8b/10b coding, special characters Kx.y and data characters Dx.y. x denotes the decimal value of EDCBA and is within the range from 0 to 31. y denotes the decimal value of HGF and is within the range 0 to 7.

Supported frame types

The only frame type available by default is "Undescribed", because this protocol supports custom coding.

If you have created frame formats, those types also appear in this list.

14.11.2 8b/10b configuration

14.11.2.1 8b/10b configuration settings

Access: "Menu" > "Apps" > "Protocol" tab > "8b/10b" > "Setup".

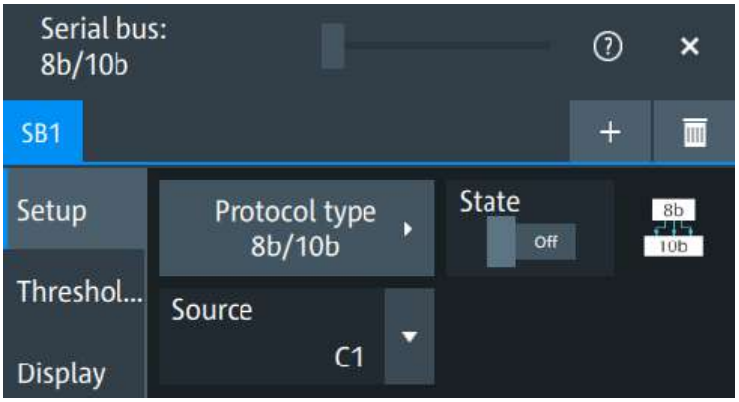

Make sure that the tab of the correct serial bus is selected.

Protocol type
Selects the protocol type to be decoded.

Remote command:
`SBUS<sb>:TYPE` on page 1489

State
Enables the decoding of the selected bus. The signal icon of the bus appears on the signal bar.

Remote command:
`SBUS<sb>[:STATe]` on page 1489

Source
Sets the source of the selected data line. Usually, the source is one of the analog channels.

Remote command:
SBUS<sb>:EBTB:DATA:SOURce on page 1818

14.11.2.2 Threshold settings

Access: "Menu" > "Apps" > "Protocol" tab > "8b/10b" > "Thresholds".

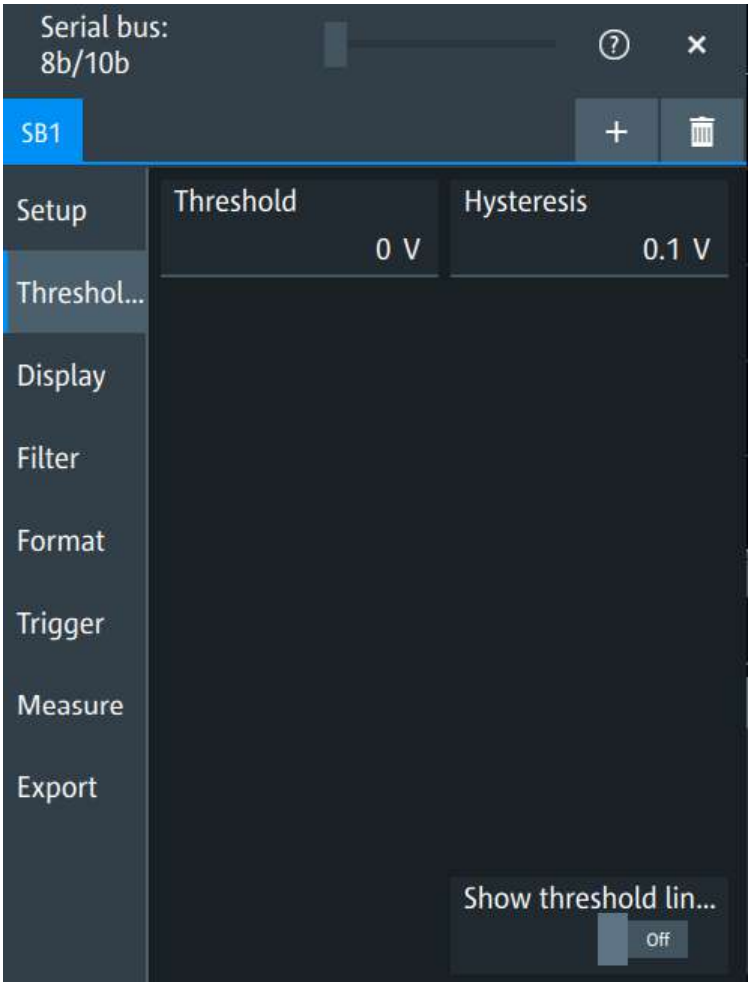

Threshold
Sets the threshold for the source channel. Enter the value directly in the fields.

Additional to the threshold, you can also set a hysteresis.

Remote command:
SBUS<sb>:EBTB:DATA:THReshold on page 1818

Hysteresis
Additional to the threshold, you can also set a hysteresis. Enter the value directly in the fields.

Remote command:
SBUS<sb>:EBTB:DATA:HYSTeresis on page 1818

Show threshold lines
If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also Show threshold lines.

Remote command:
`SBUS<sb>:THReshold` on page 1492

14.11.2.3 Display settings

For details about the display settings, see Section 14.1.3.1, "Display settings", on page 511.

Decode layer
Selects the decode layer.

Decoding is performed in several steps, and the results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display.

"Off"	Disables the display of the decode layer.
"Edges"	Show transition edges to see the timing of each threshold crossover point.
"10b bits"	Show the bits that constitute the 10b representation
"K/D symbols"	Show K/D symbol classification. Each 10b symbol is labeled with K/D value, and disparity (e.g. K28.5+ or D0.5-).
"Bytes"	Show the decoded 8-bit value of each symbol in hexadecimal format.

14.11.3 8b/10b filter

Access: "Menu" > "Apps" > "Protocol" tab > "8b/10b" > "Filter" tab

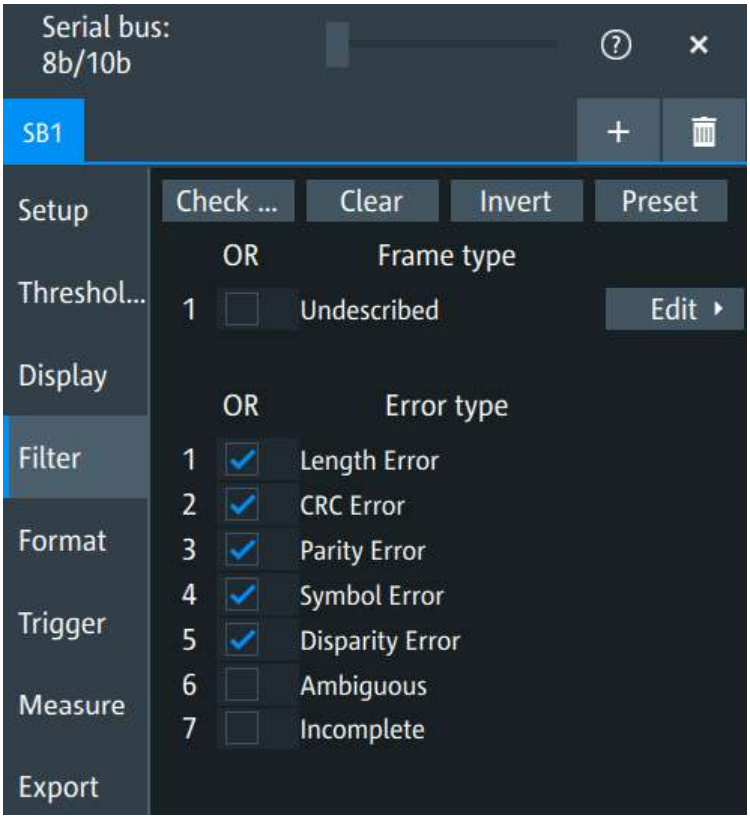

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all" Enables the filter for all available frames and error types.

"Clear" Disables the filter for all available frames and error types.

"Invert" Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types.

Remote command:
`SBUS<sb>:EBTB:FILTer:CHKall` on page 1820
`SBUS<sb>:EBTB:FILTer:CLR` on page 1820
`SBUS<sb>:EBTB:FILTer:INVert` on page 1820
`SBUS<sb>:EBTB:FILTer:RST` on page 1820

Enable
Enables the filtering on 8b/10b frames. Only the frames that match the selected filter conditions are displayed.

Remote command:
`SBUS<sb>:EBTB:FILTer:FRENable` on page 1823
`SBUS<sb>:EBTB:FILTer:FRAMe<fr>:ENABle` on page 1823

Frame type
Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.

For selected frame types, you can also specify conditions for the value of the fields in the "Edit" dialog.

The only frame type available by default is "Undescribed", because this protocol supports custom coding.

If you have created frame formats, those types also appear in this list.

See Section 14.1.5, "Format", on page 516.

Edit
Opens a dialog to define the details of the selected frame.

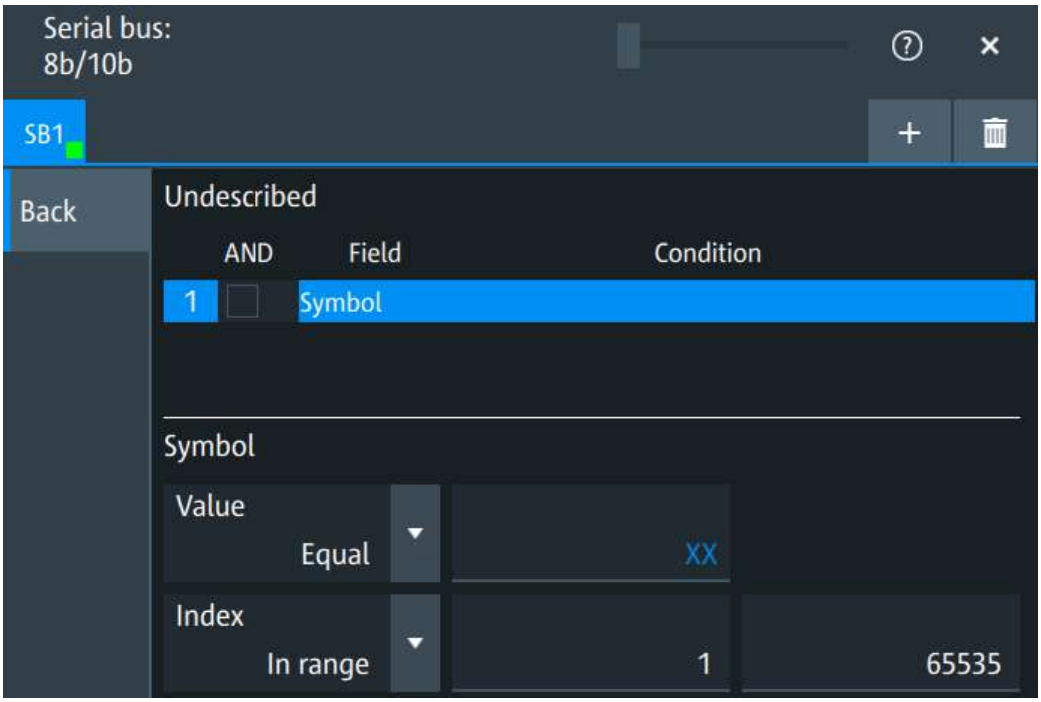

"Field"
Enables the field type that you want to filter on for the selected frame.

For the default "Undescribed" frame, the only available field types are the payload components of an undescribed frame.
As soon as you create field formats, those types also appear in this list.

See Section 14.1.5, "Format", on page 516.

Remote command:
`SBUS<sb>:EBTB:FILTer:FIENable` on page 1823
`SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:ENABle` on page 1823

"Condition" Displays the value condition for the selected field.

Remote command:
SBUS<sb>:EBTB:FILTer:BIT on page 1821
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:BIT on page 1821

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
SBUS<sb>:EBTB:FILTer:DMAX on page 1821
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:DMAX on page 1821
SBUS<sb>:EBTB:FILTer:DMIN on page 1822
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:DMIN on page 1822
SBUS<sb>:EBTB:FILTer:DOPerator on page 1822
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:DOPerator on page 1822

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
SBUS<sb>:EBTB:FILTer:IMAX on page 1823
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:IMAX on page 1823
SBUS<sb>:EBTB:FILTer:IMIN on page 1824
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:IMIN on page 1824
SBUS<sb>:EBTB:FILTer:IOPerator on page 1824
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:IOPerator on page 1824

Error type
Enables filtering on the selected error type.

Remote command:
SBUS<sb>:EBTB:FILTer:ERENable on page 1821
SBUS<sb>:EBTB:FILTer:ERRor<n>:ENABle on page 1821

14.11.4 8b/10b format configuration

Access: "Menu" > "Apps" > "Protocol" tab > "8b/10b" > "Format".

See Section 14.1.5, "Format", on page 516.

Add frame
Creates a frame format and adds it to the end of the frame list. A dialog opens to specify the frame details. The number of frame formats is limited to 100.

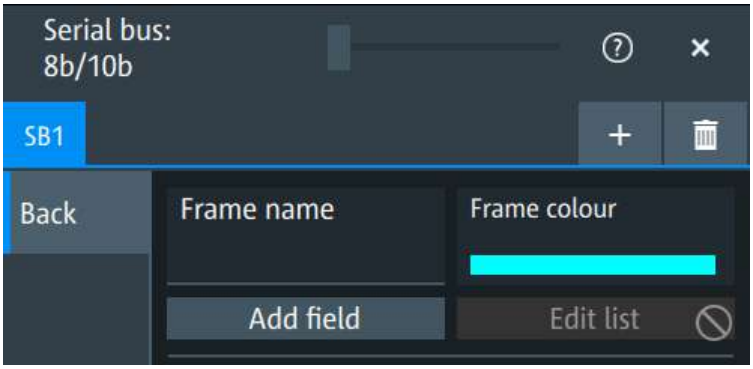

Remote command:
SBUS<sb>:EBTB:FORMat:ADDFrame on page 1825

Edit list
Enables editing the frame list. If enabled, you can delete a frame format by clicking its "Delete" icon. In a list with several entries, you can move frame formats up or down by clicking the arrow buttons. To exit the editing mode, click "Edit list" again.

Remote command:
SBUS<sb>:EBTB:FORMat:CLR on page 1826
SBUS<sb>:EBTB:FORMat:FCOunt? on page 1826

Open
Opens a dialog for loading an existing list of frame formats in XML file format.

Remote command:
SBUS<sb>:EBTB:FORMat:LOAD on page 1825

Save as
Opens a dialog for saving your current list of frame formats to an XML file. Saved frame formats can support efficient and convenient working.

Remote command:
SBUS<sb>:EBTB:FORMat:SAVE on page 1826

Frame name
Specifies an arbitrary name to label the currently selected frame format. Ideally, use speaking names according to the specifications of the applicable protocol standard. Frame names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:NAME on page 1827

Frame color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:COLor on page 1827

Add field
Creates a new field description for the currently selected frame format and adds it to the end of the field list with color, bit position (order of transmission) and name. Brackets indicate how often bits will be repeated, [] indicates that this is an open array.

A dialog opens to specify the field details. The number of field descriptions is limited to 100.

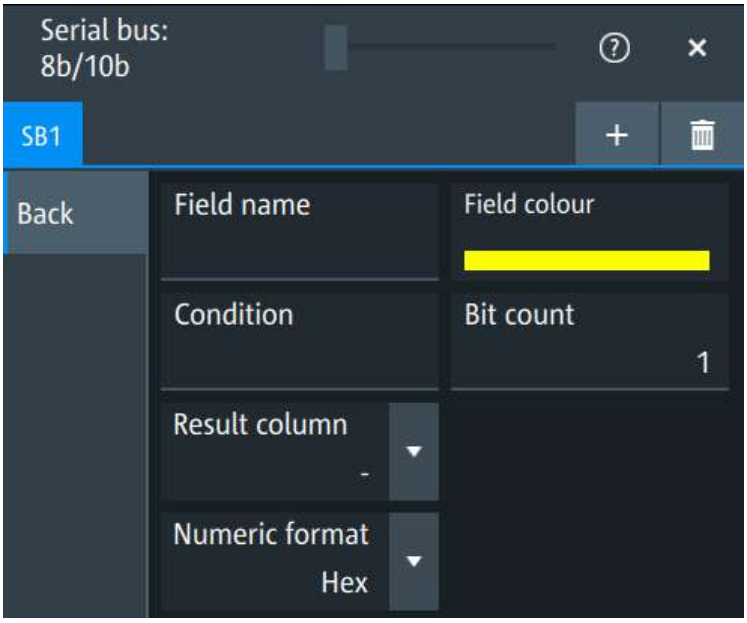

Remote command:
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:ADDField on page 1826

Edit list
Enables editing the field list. If enabled, you can delete a field description by clicking its "Delete" icon. In a list with several entries, you can move field descriptions up or down by clicking the arrow buttons. To exit the editing mode, click "Edit list" again.

Remote command:
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLDCount? on page 1827

Field name
Specifies an arbitrary name for the currently selected field description. Ideally, use speaking names.

Field names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:NAME on page 1827

Field color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:COLor on page 1828

Condition
Defines a rule or pattern that a field must match to help identify a frame and/or validate mandatory values, e.g., CRC, ID. The condition must match the field's "Numeric format", "Bit order", and "Bit length".

The following conditions are implemented:

"=" (equal / pattern match)
Defines a bit pattern that the field must match. Allowed characters depend on the field's "Format", "Bit order", and "Bits". In binary format, for example, valid characters are "1", "0", "H" (high), and "L" (low).

The behavior depends on whether the frame contains a variable-length array [ ]:

- **No [ ] in the frame**: All fields using = act as keys to identify the frame type. The frame matches only if all such fields match.
- **Frame contains one [ ]**: If there is a "Variable Length Array" field, then the equal operator has two different functionalities, depending on the position of the equal-operator field within the frame format configuration:
  - **Field is before the [ ]**: The condition acts as a key to identify a frame type and matches starting bits.
  - **Field is immediately after the [ ]**: The condition acts as an array delimiter and matches the bits right after the variable-length data to terminate the array.
    Note: If a = field is after the [ ] but not immediately after it, decode results are unpredictable.

"[ ]" (array / repetition)
Defines the number of permissible repetitions of the field.

- **Fixed-length array [n] (n > 0)**: Repeat the field n times. Effective length is n × "Bit count". Elements appear individually in results/honeycomb under the same name and color.
- **Variable-length array [ ]**: Repeat the field 0 or more times, so the frame length is unspecified and ends via an end-of-frame condition, which can be an operator or gap.
  Constraints:
  - Only one variable-length array is supported per frame (processing limitation).
  - A delimiter field must follow immediately after [ ] (unless [ ] is the last field) so the decoder can terminate the array.
  - Variable-length array elements appear in details as Name: 1, Name: 2, etc. The selected field shows as Name[n] where n is the detected size.
  - Exception: Consecutive variable arrays can form a repeated structure, e.g. A[] + B[] → ABABAB... until the end condition has been detected.
  - Check functions can be combined in dynamic arrays, e.g., B[] can check parity relative to A[] by index.

"crc5usb(n-m)" (CRC check, 5-bit, USB polynomial)	Verifies a 5-bit CRC over fields in the index range n to m. For example, use "crc5usb(1-5)" to check fields 1 through 4. If the range includes an array, all elements in the array are included. If the CRC check fails, the CRC field is marked "CRC error" (red), and the containing frame marked similarly unless a higher-priority error exists.
"odd(n-m), even(n-m)" (parity check)	Checks odd/even parity over the index range n to m including the parity bit. If the parity check fails, the parity field is marked "CRC error" (red), and the containing frame marked similarly unless a higher-priority error exists.

Remote command:
`SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:CONDition` on page 1829

Bit count
Sets the number of bits in the selected field, i.e., the field's length. Selecting the value opens a keypad showing allowed minimum and maximum values. You can set "Min", "Max", "Reset" or adjust with the "Inc" or "Dec" buttons by 1 or 10 (step size dependent). Use "CE" to restore the value used before the keypad opened.

If the "Condition" pattern length does not match the "Bit count":
- Too long, it is truncated.
- Too short, it is left-padded with 0.

Both truncation and padding happen on the left side of the condition and follow the configured "Bit order".

Examples for "Condition" "=100"):
- "Bit order" is "MSB":
  - Bit count = 2: truncated. Result: =00
  - Bit count = 4: padded. Result: =0100
- "Bit order" is LSB first (equivalent MSB-first representation is =001):
  - Bit count = 2: truncated. Result: =00 (LSB first), =00 (MSB first)
  - Bit count = 4: padded. Result: =0100 (LSB first), =0010 (MSB first)

Remote command:
`SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:BITCount` on page 1828

Result column
Determines which field is displayed in which result column of the decode table.

- Selecting "-" (no index) means that the result is not displayed.
- Selecting "1", "2" or "3" means that the result is displayed in the 1st, 2nd or 3rd result column, that the decode table supports. Each of the three result columns has to be unique for each frame type. But to display unrelated information for different frame types, you can define different result columns.

Remote command:
`SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:CLMN` on page 1830

Bit order
Selects, in which order the bits of a field's "Condition" value are evaluated:

- "LSB first": little endian, least significant bit first

- "MSB first": big endian, most significant bit first

Remote command:
???

Numeric format
Selects how the "Condition" value is interpreted:

- Symbolic: Assigns a symbolic translation on the data fields. Only available for custom protocols.
- Value list: Assigns a custom name to each hexadecimal value; any value without an assigned value is shown as "Undefined".
- A*X+B: Assigns a linear function on the data fields.
- For details on the other numeric formats, see "Format-specific information" on page 532.

The following rules apply:

- If the condition contains at least one of "H", "h", "L", "l", "X", "x", and all other characters are only "1" and/or "0", the value is always treated as binary, regardless of the selected numeric format.
- "x" and "X" are wildcards and are supported only in binary format or when the string is auto-interpreted as binary per the rule above.
  Examples for format set to "HEX":
  - "=1HL111000": valid (read as binary)
  - "=0x10101": valid (read as binary; "x" acts as wildcard, not a hex prefix)
  - "=1010": valid (read as HEX, with a total of 16 bits)
  - "=0x5A": valid (read as HEX "5A", because "0x" is a valid hex prefix; entering 5A alone is recommended)
  - "=5X12": invalid
  - "=1H33": invalid

Remote command:
`SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:FORMat` on page 1829

Add value
Creates a new hexagonal value for customization.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:ADDValue` on page 1830

Value
Defines the hexagonal value to convert it into a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue` on page 1831

Label
Defines the label to convert the corresponding hexagonal value to a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel` on page 1831

Unit
Defines a unit for the linear function.

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
`SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:UNIT` on page 1831

Parameter A,B
Defines the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
`SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:PARA` on page 1832
`SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:PARB` on page 1832

14.11.5 8b/10b software trigger

If you need information on how to get started with triggering on 8b/10b signals, see Section 14.11.2, "8b/10b configuration", on page 715. Otherwise proceed with the 8b/10b trigger settings.

14.11.5.1 Setup A trigger

Before setting up the software trigger for the protocols, a trigger A event needs to be set up.

14.11.5.2 Software trigger settings

Access: "Menu" > "Apps" > "Protocol" tab > "8b/10b" > "Trigger" tab > "Setup Software Trigger"

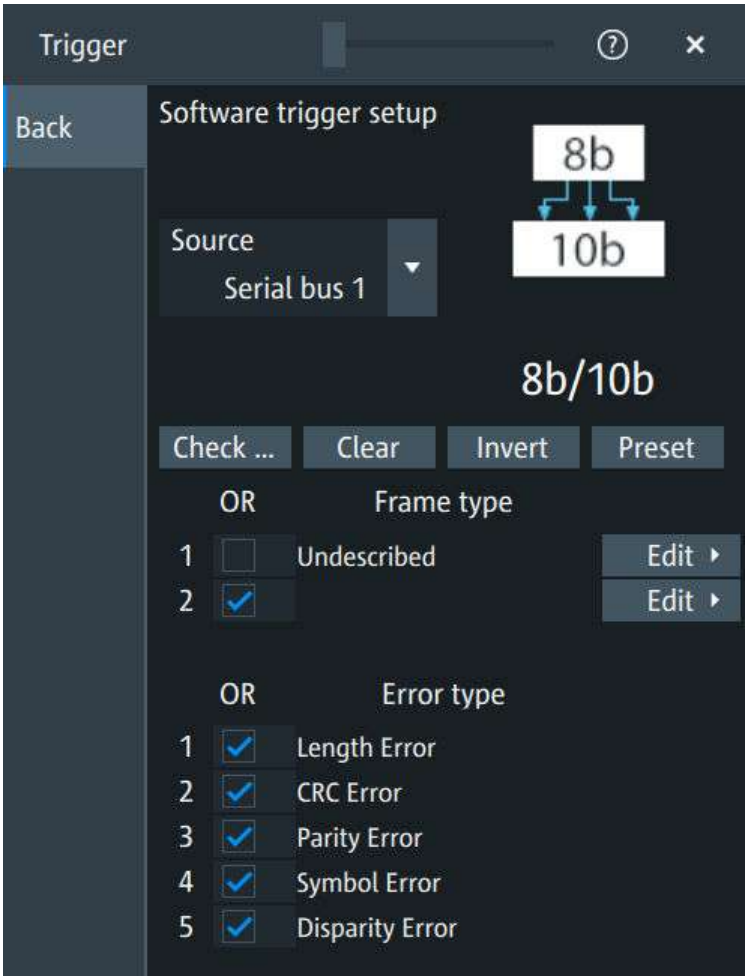

In the "Software Trigger" tab, you can define the settings to trigger on the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to trigger on.

"Check all" Enables the software trigger for all available frames and error types.

"Clear" Disables the software trigger for all available frames and error types.

"Invert" Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types for the software trigger.

Remote command:
`TRIGger:SBSW:EBTB:CHKall` on page 1833
`TRIGger:SBSW:EBTB:CLR` on page 1833
`TRIGger:SBSW:EBTB:INVert` on page 1682
`TRIGger:SBSW:EBTB:RST` on page 1834

Frame type
Selects the frame type that you want to trigger on. You can trigger on all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

The only frame type available by default is "Undescribed", because this protocol supports custom coding.

If you have created frame formats, those types also appear in this list.

See Section 14.1.5, "Format", on page 516.

Remote command:
`TRIGger:SBSW:EBTB:FRENable` on page 1834
`TRIGger:SBSW:EBTB:FRAMe<fr>:ENABle` on page 1834

Edit
Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

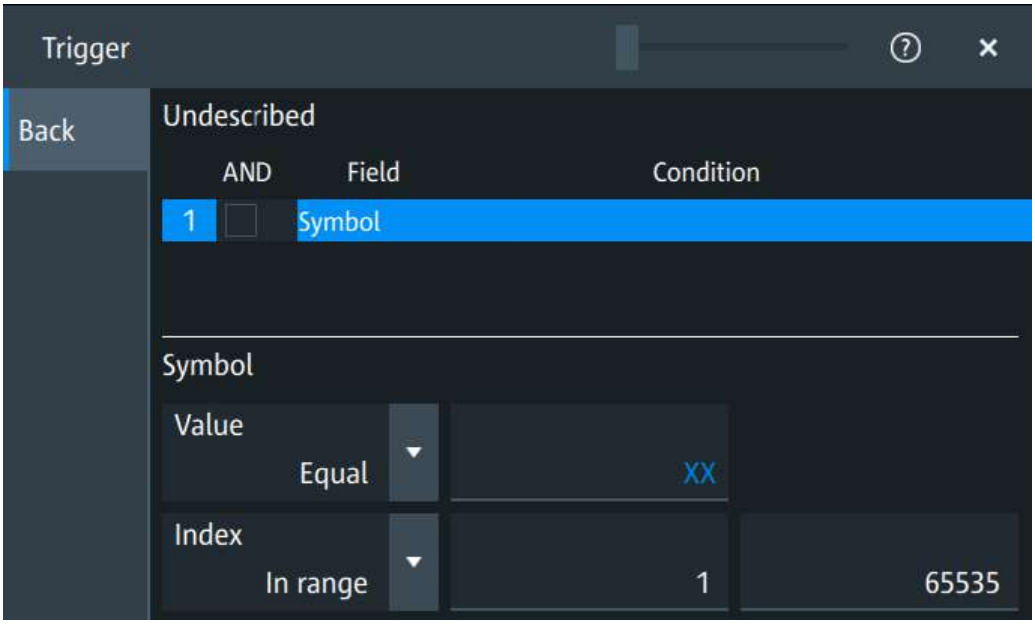

"Field" Enables the field type that you want to trigger on for the selected frame.

For the default "Undescribed" frame, the only available field types are the payload components of an undescribed frame.
As soon as you create field formats, those types also appear in this list.

See Section 14.1.5, "Format", on page 516.

Remote command:
`TRIGger:SBSW:EBTB:FIENable` on page 1836
`TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:ENABle` on page 1836

"Condition" Displays the value condition for the selected field.

Remote command:
TRIGger:SBSW:EBTB:BIT on page 1834
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:BIT on page 1834

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
TRIGger:SBSW:EBTB:DMAX on page 1834
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:DMAX on page 1834
TRIGger:SBSW:EBTB:DMIN on page 1835
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:DMIN on page 1835
TRIGger:SBSW:EBTB:DOPerator on page 1835
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:DOPerator on page 1835

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
TRIGger:SBSW:EBTB:IMAX on page 1836
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:IMAX on page 1836
TRIGger:SBSW:EBTB:IMIN on page 1836
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:IMIN on page 1836
TRIGger:SBSW:EBTB:IOPerator on page 1837
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:IOPerator on page 1837

Error type
Enables triggering on the selected error type.

The following error types are available:
- "Length error"
- "CRC error"
- "Parity error"
- "Symbol error"
- "Disparity error"

Remote command:
TRIGger:SBSW:EBTB:ERENable on page 1837
TRIGger:SBSW:EBTB:ERRor<m>:ENABle on page 1837

14.11.6 Measure

The "Setup Measurement" button opens the dialog for automatic measurements in the "Protocol" category for the selected serial bus.

See Section 10.2.8.2, "Settings for protocol measurements", on page 311.

14.11.7 8b/10b decode results

To enable the decoding, see Section 14.1.9.3, "Decoding protocol signals", on page 531.

Decode results table

The "Decode results" table contains information about all decoded frames.

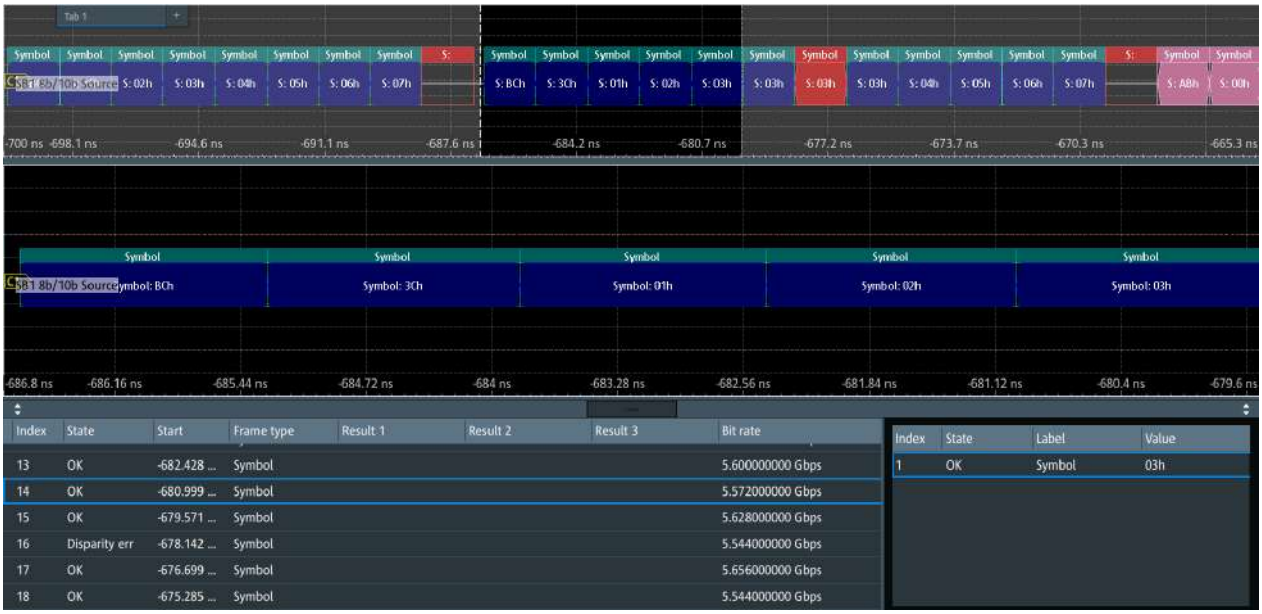

Figure 14-31: Decoded 8b/10b signal

The decode results table contains information about all decoded frames.

Table 14-18: Content of the decode results table

Column	Description
Index	Frame count
State	Overall state of the frame
Start	Start time of the frame
Frame type	Frame types
Result	Data displayed in the 1st, 2nd and 3rd results column. For "undescribed" frame types, you can select the data format in the "Display" tab. For configured frame formats, the "Format" tab controls the format of each field. See Section 14.11.4, "8b/10b format configuration", on page 720.
Bit rate	Bit rate of the frame

When you select a frame in the decode results table, its field content is shown in the details table to the right.

Table 14-19: Content of the frame details table

Column	Description
Index	Number of the decoded field
Label	Name of the field
State	State of the field
Value	Value of the field

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 1491

Remote commands

Remote commands to retrieve decode results are described in Section 18.18.12.5, "Decode results", on page 1838.

You can also export the decode results. For details see Section 14.1.9.4, "Exporting decode results", on page 531.

Example 8b/10b export file

```
Index,Start,Stop,State,Type,Result 1,Result 2,Result 3,Bit-rate
1,-6.99857e-07,-6.98414e-07,'OK','Symbol',---,---,---,5544000000
2,-6.98414e-07,-6.96986e-07,'OK','Symbol',---,---,---,5600000000
3,-6.96986e-07,-6.95571e-07,'OK','Symbol',---,---,---,5656000000
4,-6.95571e-07,-6.94129e-07,'OK','Symbol',---,---,---,5544000000
5,-6.94129e-07,-6.927e-07,'OK','Symbol',---,---,---,5600000000
6,-6.927e-07,-6.91271e-07,'OK','Symbol',---,---,---,5600000000
7,-6.91271e-07,-6.89843e-07,'OK','Symbol',---,---,---,5600000000
8,-6.89843e-07,-6.88429e-07,'OK','Symbol',---,---,---,5656000000
9,-6.88429e-07,-6.87e-07,'SYMB','Symbol Error',---,---,---,---
10,-6.867e-07,-6.85286e-07,'OK','Symbol',---,---,---,5656000000
11,-6.85286e-07,-6.83843e-07,'OK','Symbol',---,---,---,5544000000
12,-6.83843e-07,-6.82429e-07,'OK','Symbol',---,---,---,5656000000
13,-6.82429e-07,-6.81e-07,'OK','Symbol',---,---,---,5600000000
14,-6.81e-07,-6.79564e-07,'OK','Symbol',---,---,---,5572000000
15,-6.79564e-07,-6.78143e-07,'OK','Symbol',---,---,---,5628000000
16,-6.78143e-07,-6.767e-07,'DISP','Symbol',---,---,---,5544000000
17,-6.767e-07,-6.75286e-07,'OK','Symbol',---,---,---,5656000000
18,-6.75286e-07,-6.73843e-07,'OK','Symbol',---,---,---,5544000000
19,-6.73843e-07,-6.72414e-07,'OK','Symbol',---,---,---,5600000000
20,-6.72414e-07,-6.70986e-07,'OK','Symbol',---,---,---,5600000000
21,-6.70986e-07,-6.69557e-07,'OK','Symbol',---,---,---,5600000000
22,-6.69557e-07,-6.68129e-07,'SYMB','Symbol Error',---,---,---,---

Details frame 1
```

```
Index,Label,State,Value
1,'Symbol','OK',BCh
```

14.12 CAN (automotive electronics, option R&S MXO5-K520)

CAN is the Controller Area Network, a bus system designed by Bosch for use within automotive network architecture, for example, for brake, power train and engine management. Today, it is also used in many other systems, for example, in industrial machines, aerospace, subsea, merchant marine.

With the MXO 5 you can decode frames from some of the most common CAN protocols standards:

- Classical CAN (CAN 2.0): includes the standard frame format (11-bit identifier) and the extended frame format (29-bit identifier).
- CAN FD: CAN with flexible data rate. It is an extension of the classical CAN protocol and allows for increased data rates and payloads. It is backward compatible with CAN 2.0.
- CAN XL: an advanced version of the CAN protocol designed to handle higher data rates and larger payloads compared to classical CAN and CAN FD.

Requirements

For performing CAN decode measurements, you need the following:

- MXO 5 with 1 available channel. The channel can be:
  - Analog channels (C1-C4)
  - Logic channels (D0-D15) (requires option R&S MXO5-B1)
- One probe
- Option R&S MXO5-K520

- CAN configuration....732
- CAN filter....738
- CAN format configuration....741
- CAN hardware trigger....746
- CAN software trigger....755
- Measure....759
- CAN decode results....759

14.12.1 CAN configuration

14.12.1.1 CAN configuration settings

Access: "Menu" > "Apps" > "Protocol" tab > "CAN" > "Setup".

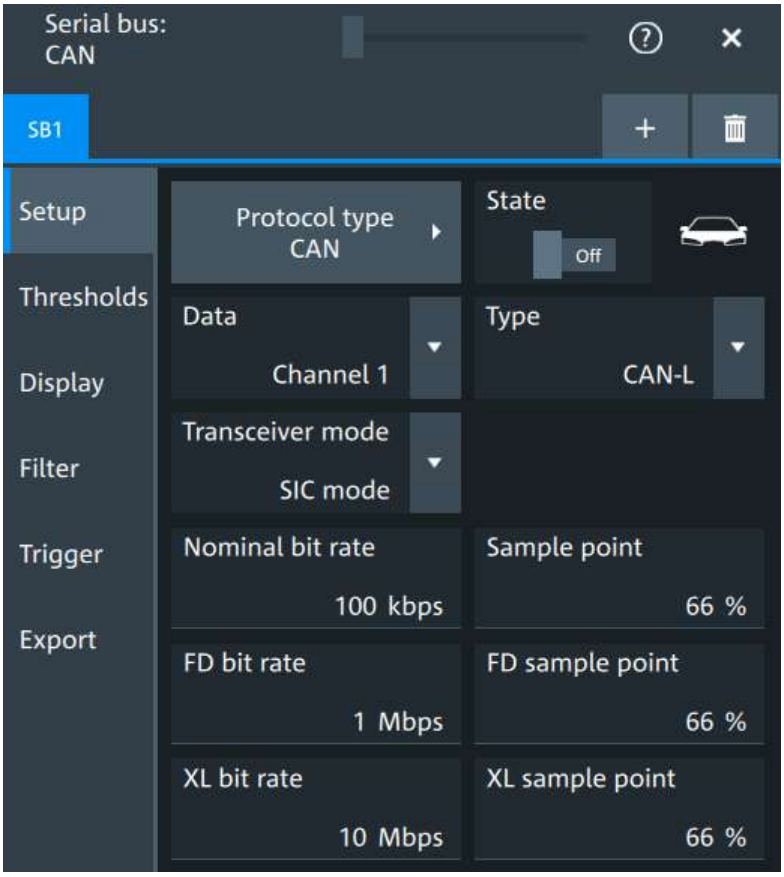

Make sure that the tab of the correct serial bus is selected.

Protocol type
Selects the protocol type to be decoded.

Remote command:
`SBUS<sb>:TYPE` on page 1489

State
Enables the decoding of the selected bus. The signal icon of the bus appears on the signal bar.

Remote command:
`SBUS<sb>[:STATe]` on page 1489

Data
Sets the source of the selected data line.

Remote command:
`SBUS<sb>:CAN:SOURce` on page 1845

Type
Selects the CAN-High or CAN-Low line. CAN uses both lines for differential signal transmission.

If you measure with a differential probe, connect the probe to both CAN-H and CAN-L lines, and select the data "Type" = *CAN-H*.

If you use a single-ended probe, connect the probe to either CAN_L or CAN_H, and select the data type accordingly.

Remote command:
`SBUS<sb>:CAN:TYPE` on page 1844

Transceiver mode
Selects the transceiver mode for the CAN decoding.

"SIC mode" The signal improvement capability (SIC) mode supports bit rates up to 8 Mbit/s.

"FAST mode" The fast mode supports bit rates up to 20 Mbit/s.

Remote command:
`SBUS<sb>:CAN:TRCVmode` on page 1848

Nominal bit rate
Sets the number of transmitted bits per second.

Remote command:
`SBUS<sb>:CAN:BITRate` on page 1845

Sample point
Sets the position of the sample point within the bit in percent of the nominal bit time.

Remote command:
`SBUS<sb>:CAN:SAMPlepoint` on page 1845

FD bit rate
Sets the number of transmitted bits per second for the CAN FD frame.

Remote command:
`SBUS<sb>:CAN:FDATa:DBITrate` on page 1846

FD sample point
Sets the position of the sample point within the bit in percent of the nominal bit time for the CAN FD frame.

Remote command:
`SBUS<sb>:CAN:FDATa:SAMPlepoint` on page 1846

XL bit rate
Sets the number of transmitted bits per second for the CAN XL frame.

Remote command:
`SBUS<sb>:CAN:XDATa:DBITrate` on page 1847

XL sample point
Sets the position of the sample point within the bit in percent of the nominal bit time for the CAN XL frame.

Remote command:
`SBUS<sb>:CAN:XDATa:SAMPlepoint` on page 1848

14.12.1.2 Threshold settings

Access: "Menu" > "Apps" > "Protocol" tab > "CAN" > "Thresholds".

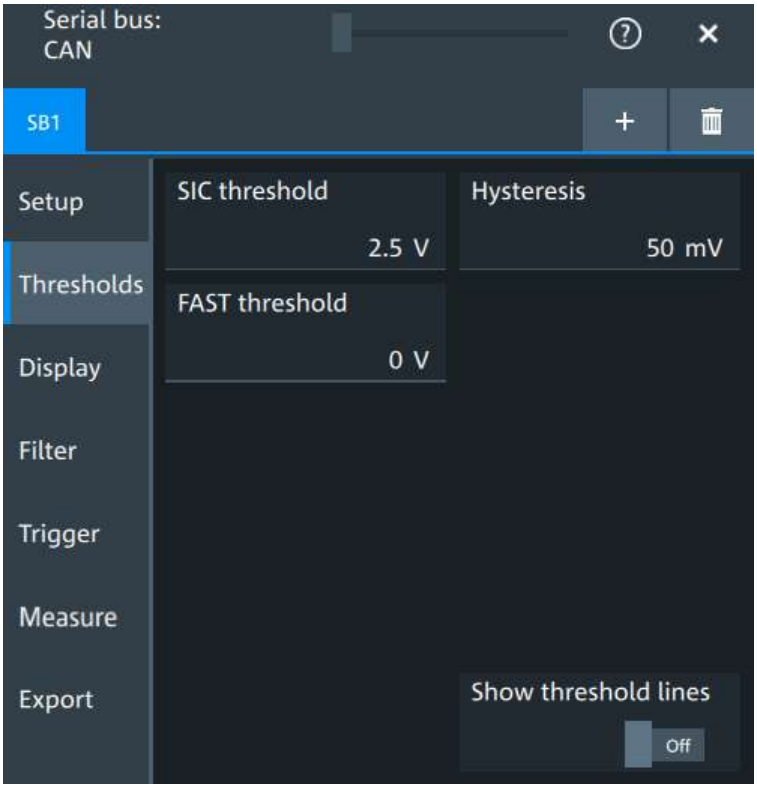

Threshold
Sets the threshold for the SIC and Fast channels. Enter the value directly in the fields.

Additional to the threshold, you can also set a hysteresis.

Remote command:
`SBUS<sb>:CAN:FAST:HYSTeresis` on page 1847
`SBUS<sb>:CAN:FAST:THReshold` on page 1847
`SBUS<sb>:CAN:SIC:HYSTeresis` on page 1846
`SBUS<sb>:CAN:SIC:THReshold` on page 1846

Show threshold lines
If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also Show threshold lines.

Remote command:
SBUS<sb>:THReshold on page 1492

14.12.1.3 Display settings

For details about the display settings, see Section 14.1.3.1, "Display settings", on page 511.

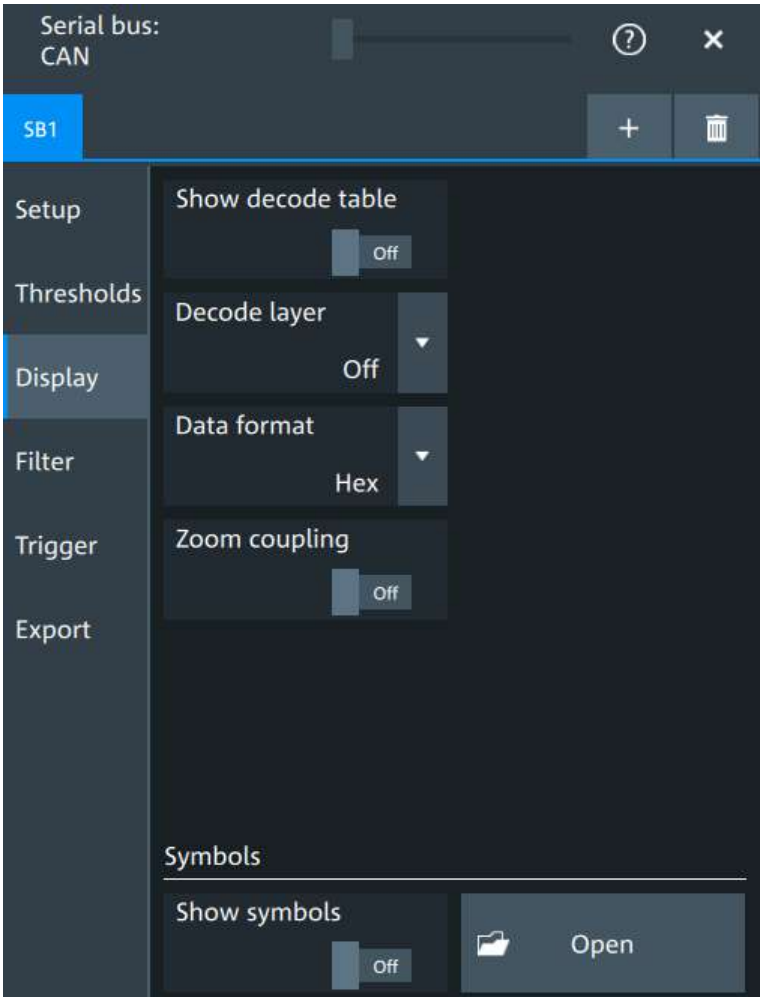

Decode layer
Selects the decode layer.

Decoding is performed in several steps, and the results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display. See "Decode layer" on page 512.

Show symbols
You can load symbol lists, and activate its usage for decoding. As a result, an additional "Symbol" column appears in the "Decode results" table, containing the symbolic label.

Symbol lists for CAN are available in DBC and CSV format, see CAN symbols.

Remote command:
SBUS<sb>:CAN:SYMBols on page 1848
SBUS<sb>:CAN:NEWList on page 1848

14.12.1.4 CAN symbols

For the CAN protocol, you can upload symbol lists containing IDs and a symbolic name for each node. You can load a file in one of the supported formats: DBC and CSV.

DBC files for CAN and CAN FD

Industry standard DBC files contain more information than CSV files and translate the abstract decode results to human language. For each frame, the frame ID and the symbolic name of the ID are given. The frames are also called messages in CAN. The data of a CAN message can consist of several "signals". The DBC file provides the label, unit, start bit, length and other indicators for each signal. For state-encoded signals, the meaning of the states is given.

In the following demo example, the message "EngineData" has the decimal ID 2,166,573,756 and consists of 8 data bytes. These 8 bytes are defined as 6 signals. The first one, "PetrolLevel", starts at bit #24, has a length of 8 bit, and the unit is liter. The signal "IdleRunning" is state-encoded. It has only one bit. The binary value 0 means "Running", and the binary value 1 means "Idle".

Example: CAN DBC file section

```
BO_ 2166573756 EngineData: 8 Engine
 SG_ PetrolLevel : 24|8@1+ (1,0) [0|255] "l" ...
 SG_ EngPower : 48|16@1+ (0.01,0) [0|350] "kW" ...
 SG_ EngForce : 32|10@1+ (1,0) [0|1000] "N" ...
 SG_ IdleRunning : 23|1@1+ (1,0) [0|1] "" ...
 SG_ EngTemp : 16|7@1+ (2,-50) [-50|150] "degC" ....
 SG_ EngSpeed : 0|13@1+ (1,0) [0|8000] "rpm" ...
....
 VAL_ 2166573756 IdleRunning 0 "Running" 1 "Idle" ;
```

CSV files for CAN / CAN FD

Symbol list files are protocol-specific. A CSV label file for CAN protocols contains three values for each identifier:

- Identifier type, 11-bit or 29-bit long
- Identifier value
- Symbolic name of the identifier, specifying its function in the bus network.

Example: CAN CSV file

```
# ------------------------------------------------------------------------
@FILE_VERSION  = 1.00
@PROTOCOL_NAME = can
# ------------------------------------------------------------------------
# Labels for CAN protocol
#   Column order: Identifier type, Identifier value, Label
```

```
# ------------------------------------------------------------------------
11,064h,Diag_Response
11,1E5h,EngineData
11,0A2h,Ignition_Info
11,1BCh,TP_Console
11,333h,ABSdata
11,313h,Door_Left
11,314h,Door_Right
29,01A54321h,Throttle
29,13A00FA2h,LightState
29,0630ABCDh,Engine_Status
29,03B1C002h,Airbag_Status
29,01234ABCh,NM_Gateway
# ------------------------------------------------------------------------
```

14.12.2 CAN filter

Access: "Menu" > "Apps" > "Protocol" tab > "CAN" > "Filter" tab

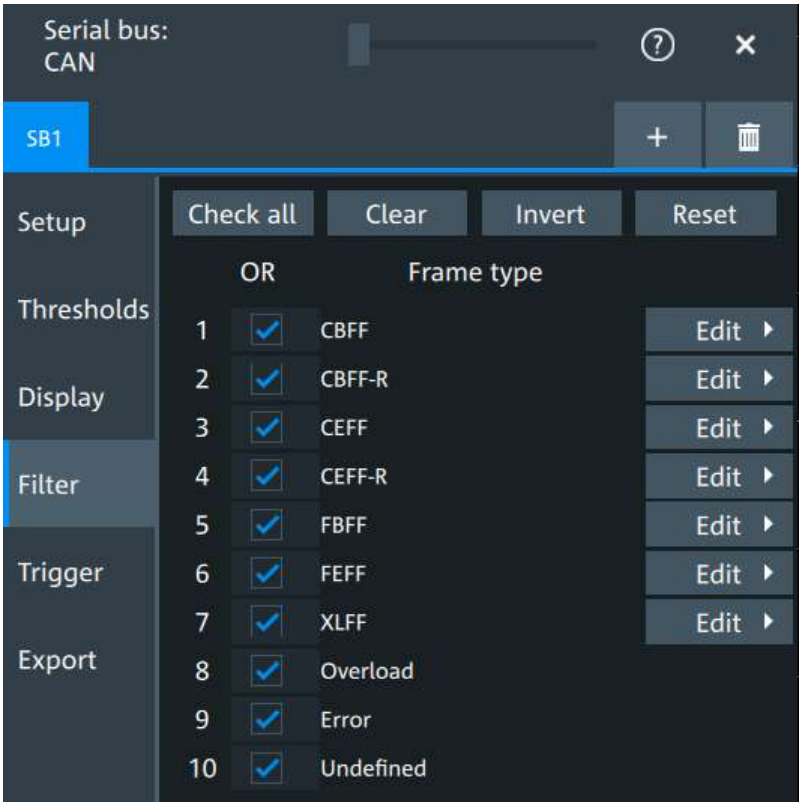

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all"	Enables the filter for all available frames and error types.
"Clear"	Disables the filter for all available frames and error types.
"Invert"	Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.
"Preset"	Presets the state of the selected frames and error types.

Remote command:
`SBUS<sb>:CAN:FILTer:CHKall` on page 1850
`SBUS<sb>:CAN:FILTer:CLR` on page 1850
`SBUS<sb>:CAN:FILTer:INVert` on page 1850
`SBUS<sb>:CAN:FILTer:RST` on page 1851

Frame type
Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.

For selected frame types, you can also specify conditions for the value of the fields in the "Edit" dialog.

Available frames are "CBFF", "CBFF-R", "CEFF", "CEFF-R", "FBFF", "FEFF", "XLFF", "Overload" and "Error".

Remote command:
`SBUS<sb>:CAN:FILTer:FRENable` on page 1853
`SBUS<sb>:CAN:FILTer:FRAMe<fr>:ENABle` on page 1853

Edit
Opens a dialog to define the details of the selected frame.

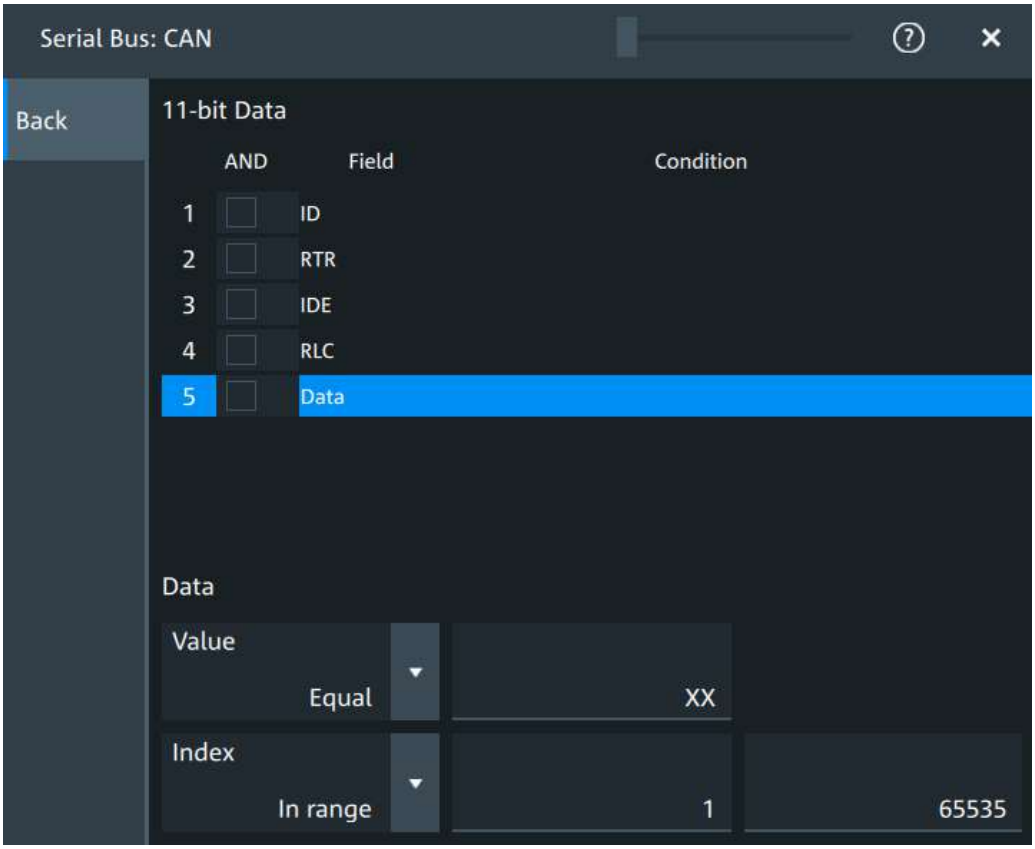

"Field" Enables the field type that you want to filter on for the selected frame. The available fields are "ID", "RTR", "ITE", "RLC" and "Data".

Remote command:
`SBUS<sb>:CAN:FILTer:FIENable` on page 1853
`SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:ENABle` on page 1853

"Condition" Displays the value condition for the selected field.

Remote command:
`SBUS<sb>:CAN:FILTer:BIT` on page 1851
`SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:BIT` on page 1851

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
SBUS<sb>:CAN:FILTer:DMAX on page 1851
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:DMAX on page 1851
SBUS<sb>:CAN:FILTer:DMIN on page 1852
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:DMIN on page 1852
SBUS<sb>:CAN:FILTer:DOPerator on page 1852
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:DOPerator on page 1852

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
SBUS<sb>:CAN:FILTer:IMAX on page 1853
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:IMAX on page 1853
SBUS<sb>:CAN:FILTer:IMIN on page 1854
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:IMIN on page 1854
SBUS<sb>:CAN:FILTer:IOPerator on page 1854
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:IOPerator on page 1854

Error type
Enables filtering on the selected error type.

Remote command:
SBUS<sb>:CAN:FILTer:ERENable on page 1852
SBUS<sb>:CAN:FILTer:ERRor<n>:ENABle on page 1852

14.12.3 CAN format configuration

Access: "Menu" > "Apps" > "Protocol" tab > "CAN" > "Format".

See Section 14.1.5, "Format", on page 516.

Show format
Enables the format configuration and displays the frame formats in the honey-comb view and results. If enabled, the frame formats are also selectable for triggering and filtering.

Remote command:
SBUS<sb>:CAN:FORMat:SELect on page 1855

Add frame
Creates a frame format and adds it to the end of the frame list. A dialog opens to specify the frame details. The number of frame formats is limited to 100.

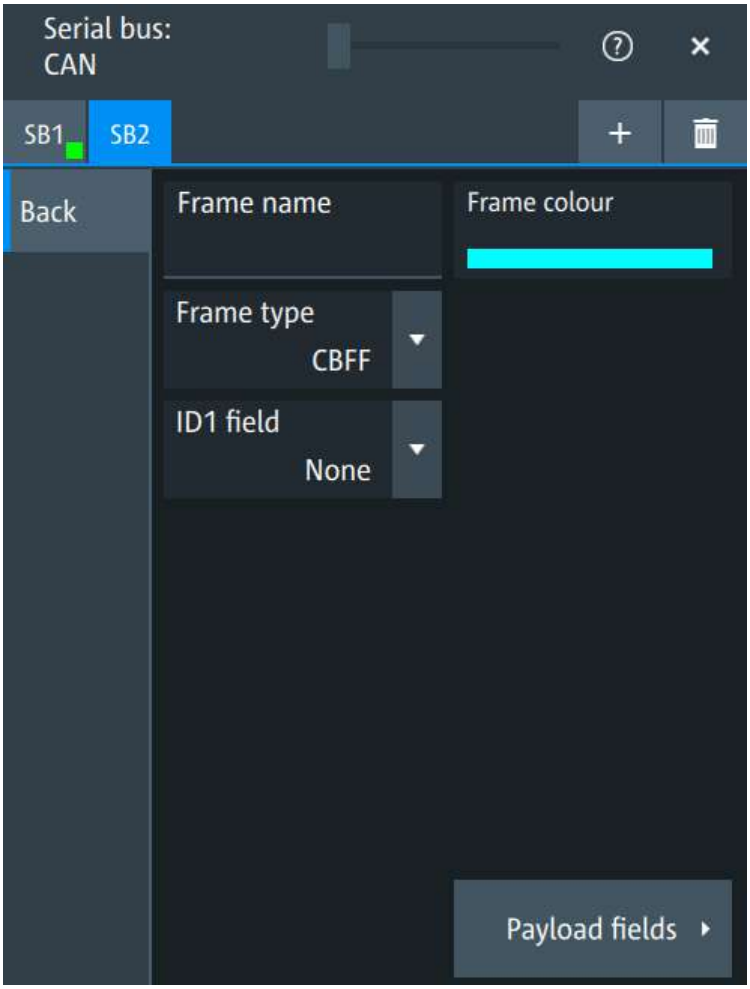

Remote command:
SBUS<sb>:CAN:FORMat:ADDFrame on page 1856

Edit list
Enables editing the frame list. If enabled, you can delete a frame format by clicking its "Delete" icon. In a list with several entries, you can move frame formats up or down by clicking the arrow buttons. To exit the editing mode, click "Edit list" again.

Remote command:
SBUS<sb>:CAN:FORMat:CLR on page 1856
SBUS<sb>:CAN:FORMat:FCOunt? on page 1857

Open
Opens a dialog for loading an existing list of frame formats in XML file format.

Remote command:
SBUS<sb>:CAN:FORMat:LOAD on page 1856

Save as
Opens a dialog for saving your current list of frame formats to an XML file. Saved frame formats can support efficient and convenient working.

Remote command:
SBUS<sb>:CAN:FORMat:SAVE on page 1856

Frame name
Specifies an arbitrary name to label the currently selected frame format. Ideally, use speaking names according to the specifications of the applicable protocol standard. Frame names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:CAN:FORMat:FRAMe<fr>:NAME on page 1857

Frame color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:CAN:FORMat:FRAMe<fr>:COLor on page 1858

Frame type
Select an original frame type.

Remote command:
SBUS<sb>:CAN:FORMat:FRAMe<fr>:TYPE on page 1858

ID<n> field
Select the first to third identifying field types.

Remote command:
SBUS<sb>:CAN:FORMat:FRAMe<fr>:ID1Field on page 1858
SBUS<sb>:CAN:FORMat:FRAMe<fr>:ID2Field on page 1858
SBUS<sb>:CAN:FORMat:FRAMe<fr>:ID3Field on page 1858

ID<n> value
Select the value of the corresponding field type.

Remote command:
SBUS<sb>:CAN:FORMat:FRAMe<fr>:ID1Value on page 1859
SBUS<sb>:CAN:FORMat:FRAMe<fr>:ID2Value on page 1859
SBUS<sb>:CAN:FORMat:FRAMe<fr>:ID3Value on page 1859

Payload fields
Opens the payload field configuration dialog. The format configuration of payload fields is optional and replaces the payload data of the identified frame.

Add field
Creates a new field description for the currently selected frame format and adds it to the end of the field list with color, bit position (order of transmission) and name. Brackets indicate how often bits will be repeated, [] indicates that this is an open array.

A dialog opens to specify the field details. The number of field descriptions is limited to 100.

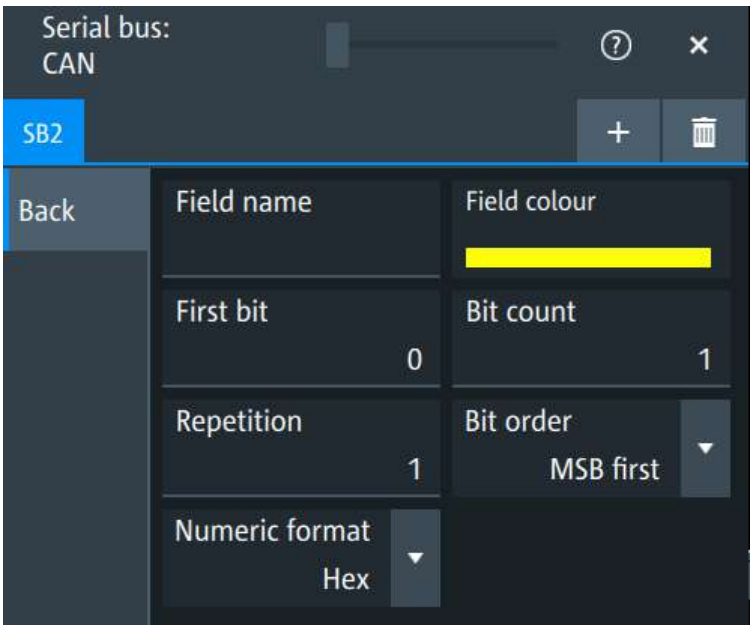

Remote command:
SBUS<sb>:CAN:FORMat:FRAMe<fr>:ADDField on page 1857

Field name
Specifies an arbitrary name for the currently selected field description. Ideally, use speaking names.

Field names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:NAME on page 1859

Field color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:COLor on page 1859

First bit
In order of transmission, sets the first bit of this field in the payload.

Remote command:
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:FSTBit on page 1860

Bit count
Sets the number of bits in the selected field, i.e., the field's length. Selecting the value opens a keypad showing allowed minimum and maximum values. You can set "Min", "Max", "Reset" or adjust with the "Inc" or "Dec" buttons by 1 or 10 (step size dependent). Use "CE" to restore the value used before the keypad opened.

If the "Condition" pattern length does not match the "Bit count":
- Too long, it is truncated.

- Too short, it is left-padded with 0.

Both truncation and padding happen on the left side of the condition and follow the configured "Bit order".

Examples for "Condition" "=100"):
- "Bit order" is "MSB":
  – Bit count = 2: truncated. Result: =00
  – Bit count = 4: padded. Result: =0100
- "Bit order" is LSB first (equivalent MSB-first representation is =001):
  – Bit count = 2: truncated. Result: =00 (LSB first), =00 (MSB first)
  – Bit count = 4: padded. Result: =0100 (LSB first), =0010 (MSB first)

Remote command:
`SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:BITCount` on page 1860

Repetition
Defines the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Remote command:
`SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:REPetition` on page 1860

Bit order
Selects, in which order the bits of a field's "Condition" value are evaluated:

- "LSB first": little endian, least significant bit first
- "MSB first": big endian, most significant bit first

Remote command:
`SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:BITorder` on page 1861

Numeric format
Selects how the "Condition" value is interpreted:

- Symbolic: Assigns a symbolic translation on the data fields. Only available for custom protocols.
- Value list: Assigns a custom name to each hexadecimal value; any value without an assigned value is shown as "Undefined".
- A*X+B: Assigns a linear function on the data fields.
- For details on the other numeric formats, see "Format-specific information" on page 532.

The following rules apply:
- If the condition contains at least one of "H", "h", "L", "l", "X", "x", and all other characters are only "1" and/or "0", the value is always treated as binary, regardless of the selected numeric format.
- "x" and "X" are wildcards and are supported only in binary format or when the string is auto-interpreted as binary per the rule above.
  Examples for format set to "HEX":
  – "=1HL111000": valid (read as binary)
  – "=0x10101": valid (read as binary; "x" acts as wildcard, not a hex prefix)
  – "=1010": valid (read as HEX, with a total of 16 bits)
  – "=0x5A": valid (read as HEX "5A", because "0x" is a valid hex prefix; entering 5A alone is recommended)

– "=5X12": invalid
– "=1H33": invalid

Remote command:
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:FORMat on page 1861

Add value
Creates a new hexagonal value for customization.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:ADDValue on page 1862

Value
Defines the hexagonal value to convert it into a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue on page 1862

Label
Defines the label to convert the corresponding hexagonal value to a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel on page 1863

Unit
Defines a unit for the linear function.

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:UNIT on page 1863

Parameter A,B
Defines the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:PARA on page 1863
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:PARB on page 1863

14.12.4 CAN hardware trigger

Access: "Menu" > "Apps" > "Protocol" tab > "CAN" > "Trigger" tab > "Setup Hardware Trigger"

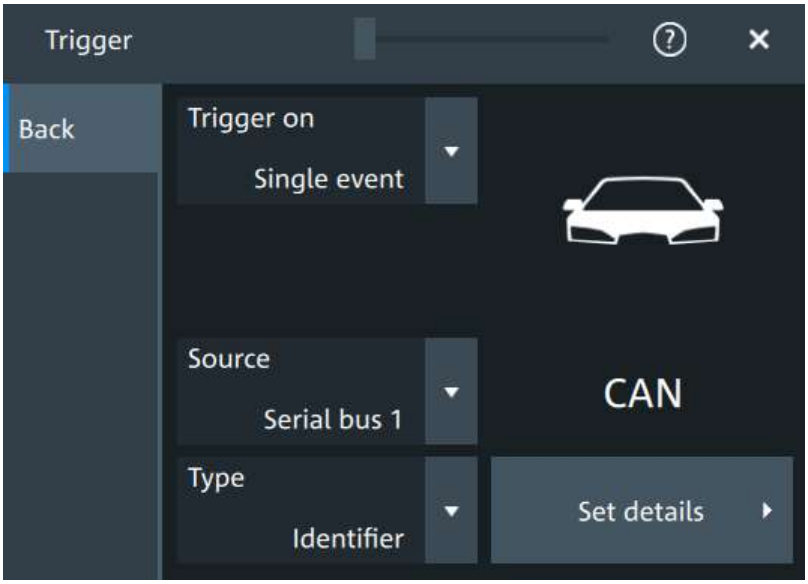

Type
Selects the trigger type for CAN analysis.

Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

"Start of frame" Triggers on the first edge of the dominant SOF bit (synchronization bit).

"End of frame" Triggers on the end of frame.

"Frame type" Triggers on a specified frame type (data, remote, error, or overload). For data and remote frames, also the identifier format is considered.

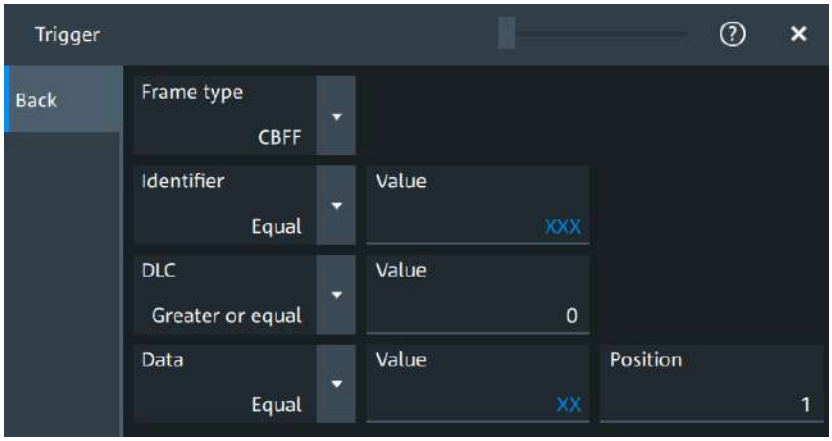

"Identifier" Sets the trigger to a specific message identifier or an identifier range.

"Identifier + Data"

Sets the trigger to a combination of identifier and data condition. The instrument triggers at the end of the last byte of the specified data pattern.

"Error condition"

Identifies various errors in the frame.

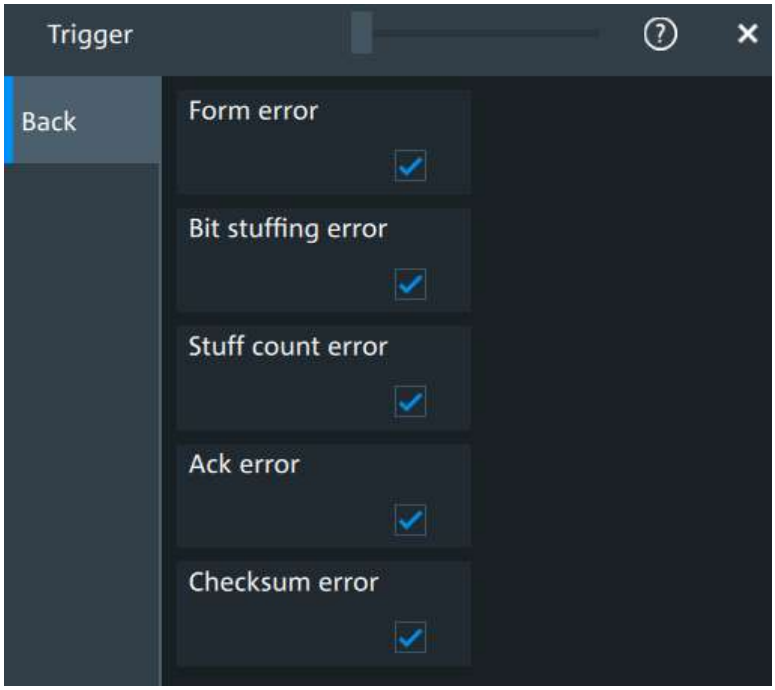

Remote command:
TRIGger:SBHW:CAN:TYPE on page 1870

Frame type
CAN has different frame types which can be used as trigger condition. Depending on the selected frame, you can specify further parameters.

"CBFF" Classical base frame format data: supports a length of 11 bit for the CAN identifier. The data frame is the only frame for actual data transmission.

Figure 14-32: Settings for CBFF and CEFF frames

"CBFF-R" Classical base frame format remote: supports a length of 11 bit for the CAN identifier.
The remote frame initiates the transmission of data by another node. The frame format is the same as of data frames but without the data field.

Figure 14-33: Settings for CBFF-R and CEFF-R frames

"CEFF" Classical extended frame format data: supports a length of 29 bit for the CAN identifier. The data frame is the only frame for actual data transmission.

"CEFF-R" Classical extended frame format remote: supports a length of 29 bit for the CAN identifier.
The remote frame initiates the transmission of data by another node. The frame format is the same as of data frames but without the data field.

"FBFF" FD base frame format: supports a length of 11 bit for the CAN identifier.

Figure 14-34: Settings for FBFF and FEFF frames

"FEFF" FD extended frame format: supports a length of 29 bit for the CAN identifier.

"XLFF" XL frame format: supports a length of 29 bit for the CAN identifier.

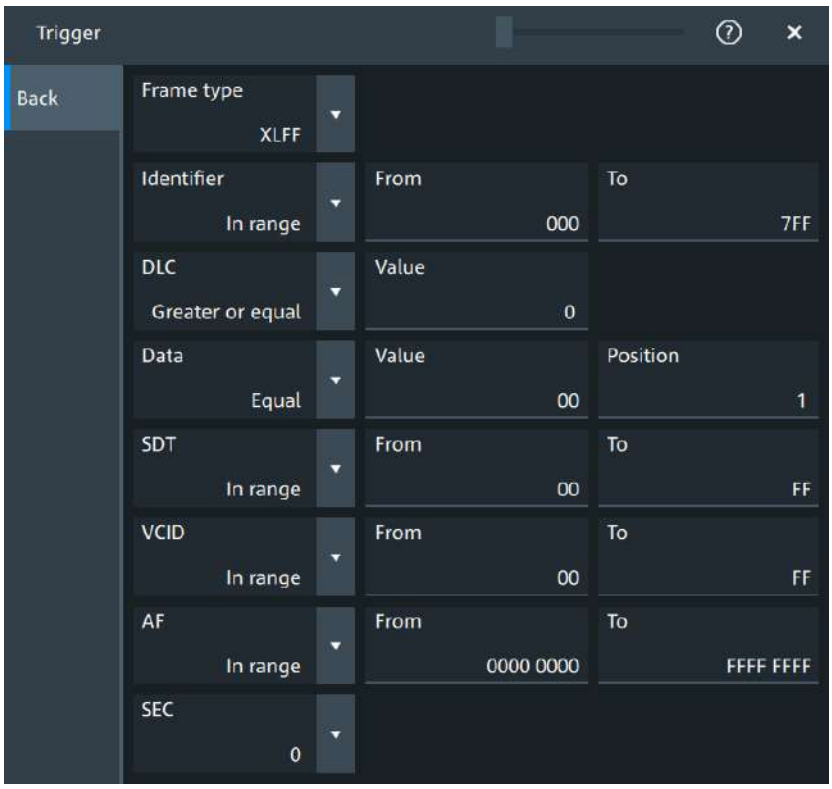

"Error" When a node recognizes an error, it cancels transmission by sending an error frame.
The ID type is irrelevant for error frames.

"Overload" When a node needs a delay between data and/or remote frames, it sends and overload frame.
The ID type is irrelevant for overload frames.

Remote command:
`TRIGger:SBHW:CAN:FTYPe` on page 1868

Identifier
Specifies the identifier pattern.

"Condition" Sets the comparison condition to a specific value or a range.

"Value"/"From" Specifies the value or sets the start value of a range.

"To" Sets the maximum value of a range for "Condition" = "In range"/"Out of range".

Remote command:
`TRIGger:SBHW:CAN:ICONdition` on page 1869
`TRIGger:SBHW:CAN:IMAX` on page 1869
`TRIGger:SBHW:CAN:IMIN` on page 1869

DLC
The data length code (DLC) defines the number of data bytes to be found. You can set a fixed value for the DLC or define a minimum value.

Remote command:
TRIGger:SBHW:CAN:DLC on page 1866
TRIGger:SBHW:CAN:DLCCondition on page 1866

Data pattern
Specifies the data pattern.

"Condition" Sets the comparison condition to a specific value or a range.

"Value" Specifies the value or sets the start value of a range.

Remote command:
TRIGger:SBHW:CAN:DCONdition on page 1866
TRIGger:SBHW:CAN:DMIN on page 1867

ID type
Selects the length of the identifier:

"11 bit" Identifier length of the CAN base frame format. The instrument triggers on the sample point of the identifier extension flag (IDE) bit.

"29 bit" Identifier length of the CAN extended frame format. The instrument triggers on the sample point of the remote transmission request (RTR) bit.

"Any" The ID type and ID pattern are not relevant for the trigger condition.
If the trigger type is "Identifier", the instrument triggers on any identifier in the specified frame type.
If the trigger type is "Identifier + Data", set the "ID type" to "Any" if you want to trigger only on data.

Remote command:
TRIGger:SBHW:CAN:ITYPe on page 1870

BRS, ESI
If "Frame type" = "FBFF"/"FEFF", you can trigger on specific bits.

"BRS" The bit rate switch bit. Value 1 means that the bit rate switches from the arbitration rate to the faster data rate.

"ESI" The error state indicator bit. Set "X" if the bit is not relevant.

Remote command:
TRIGger:SBHW:CAN:FDATa:BRS on page 1867
TRIGger:SBHW:CAN:FDATa:ESI on page 1867

SDT
Specifies a value or a range for the service data unit type.

"Condition" Sets the comparison condition to a specific value or a range.

"Value"/"From" Specifies the value or sets the start value of a range.

"To" Sets the maximum value of a range for "Condition" = "In range"/"Out of range".

Remote command:
TRIGger:SBHW:CAN:XDATa:SDT:CONDition on page 1872
TRIGger:SBHW:CAN:XDATa:SDT:MAX on page 1872
TRIGger:SBHW:CAN:XDATa:SDT:MIN on page 1872

VCID
Specifies a value or a range for the virtual CAN network ID (VCID).

"Condition"	Sets the comparison condition to a specific value or a range.
"Value"/"From"	Specifies the value or sets the start value of a range.
"To"	Sets the maximum value of a range for "Condition" = "In range"/"Out of range".

Remote command:
TRIGger:SBHW:CAN:XDATa:VCID:CONDition on page 1873
TRIGger:SBHW:CAN:XDATa:VCID:MAX on page 1873
TRIGger:SBHW:CAN:XDATa:VCID:MIN on page 1873

AF
Specifies a value or a range for the CAN XL acceptance field (AF).

"Condition"	Sets the comparison condition to a specific value or a range.
"Value"/"From"	Specifies the value or sets the start value of a range.
"To"	Sets the maximum value of a range for "Condition" = "In range"/"Out of range".

Remote command:
TRIGger:SBHW:CAN:XDATa:AF:CONDition on page 1871
TRIGger:SBHW:CAN:XDATa:AF:MAX on page 1871
TRIGger:SBHW:CAN:XDATa:AF:MIN on page 1871

SEC
Sets a value for the simple extended content (SEC) field. It indicates, if the CAN XL data frame uses the CADsec protocol.

Remote command:
TRIGger:SBHW:CAN:XDATa:SEC on page 1873

Error conditions
If a CAN detects an error, it transmits an error flag at the next bit. The MXO 5 detects errors in the message and triggers on these errors even if no CAN node sends an error flag.

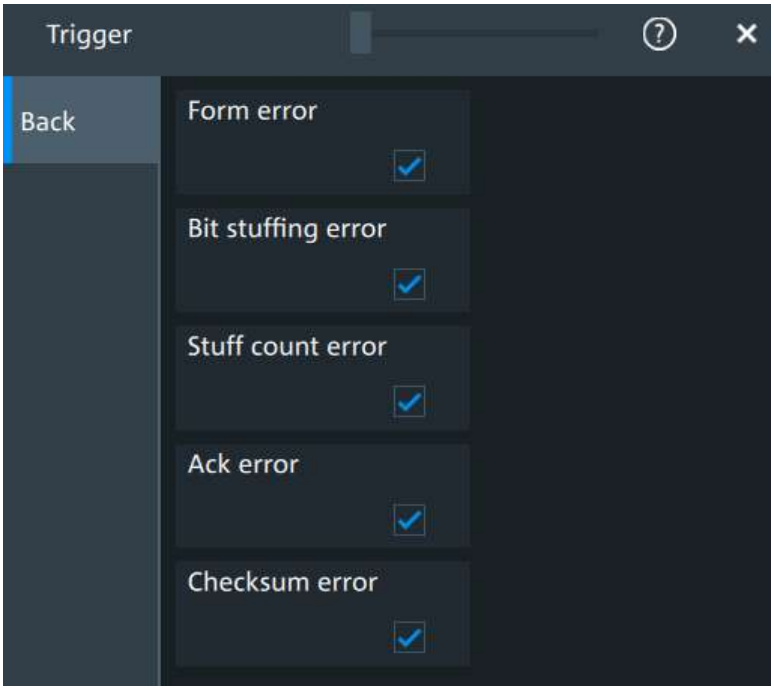

"Form error" A form error occurs when a fixed-form bit field contains one or more illegal bits.

"Bit stuffing error" The frame segments Start of Frame, Arbitration Field, Control Field, Data Field and CRC Sequence are coded by the bit stuffing method. The transmitter automatically inserts a complementary bit into the bitstream when it detects five consecutive bits of identical value in the bitstream to be transmitted. A stuff error occurs when the 6th consecutive equal bit level in the mentioned fields is detected.

"Stuff count error" A stuff bit error occurs, if more than five consecutive bits of the same level occur on the bus.

"Ack error" An acknowledgment error occurs when the transmitter does not receive an acknowledgment - a dominant bit during the ACK Slot.

"Checksum error" CAN uses the Cyclic Redundancy Check, which is a complex checksum calculation method. The transmitter calculates the CRC and sends the result in the CRC sequence. The receiver calculates the CRC in the same way. A CRC error occurs when the calculated result differs from the received value in the CRC sequence.

Remote command:
`TRIGger:SBHW:CAN:FORMerror` on page 1868
`TRIGger:SBHW:CAN:BITSterror` on page 1865
`TRIGger:SBHW:CAN:FDATa:SCERror` on page 1868
`TRIGger:SBHW:CAN:ACKerror` on page 1865
`TRIGger:SBHW:CAN:CRCerror` on page 1866

14.12.5 CAN software trigger

14.12.5.1 Setup A trigger

Before setting up the software trigger for the protocols, a trigger A event needs to be set up.

14.12.5.2 Software trigger settings

Access: "Menu" > "Apps" > "Protocol" tab > "CAN" > "Trigger" tab > "Setup Software Trigger" > "Setup SB Trigger".

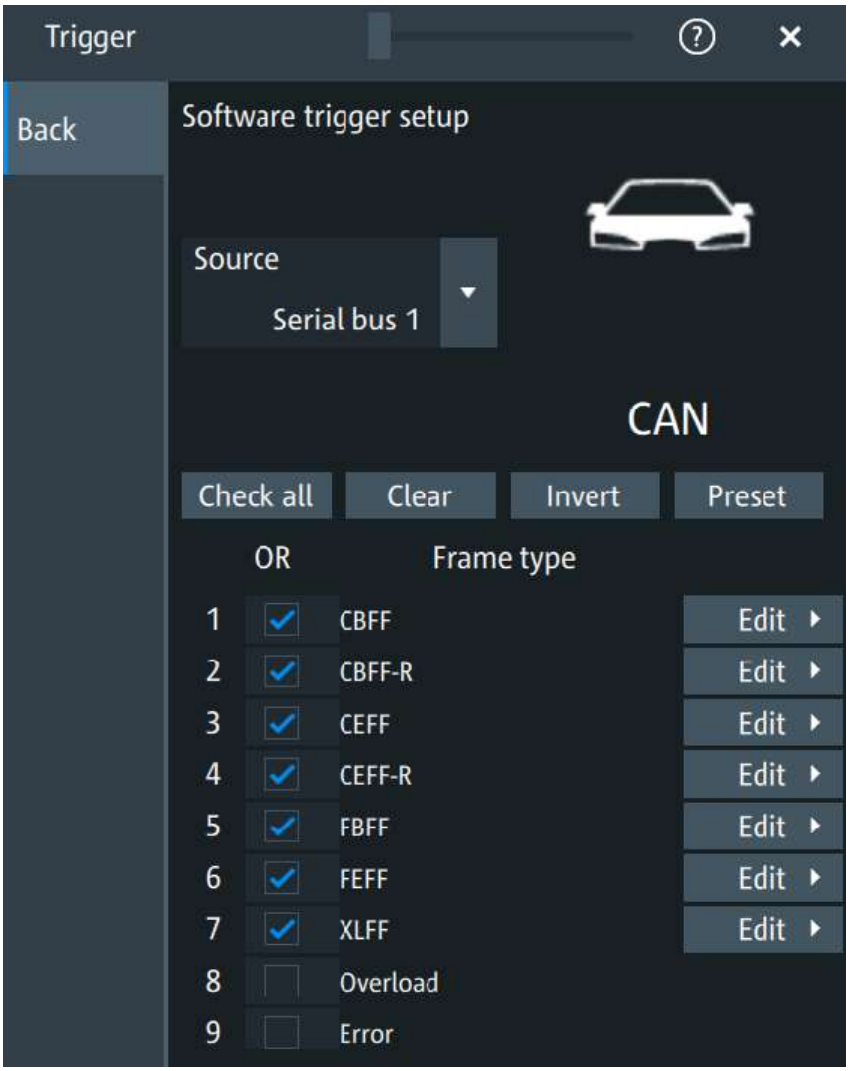

In the "Software Trigger" tab, you can define the settings to trigger on the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to trigger on.

"Check all" Enables the software trigger for all available frames and error types.

"Clear" Disables the software trigger for all available frames and error types.

"Invert" Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types for the software trigger.

Remote command:
`TRIGger:SBSW:CAN:CHKall` on page 1874
`TRIGger:SBSW:CAN:CLR` on page 1875
`TRIGger:SBSW:CAN:INVert` on page 1875
`TRIGger:SBSW:CAN:RST` on page 1875

Frame type
Selects the frame type that you want to trigger on. You can trigger on all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

Remote command:
`TRIGger:SBSW:CAN:FRENable` on page 1875
`TRIGger:SBSW:CAN:FRAMe<fr>:ENABle` on page 1875

Edit
Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

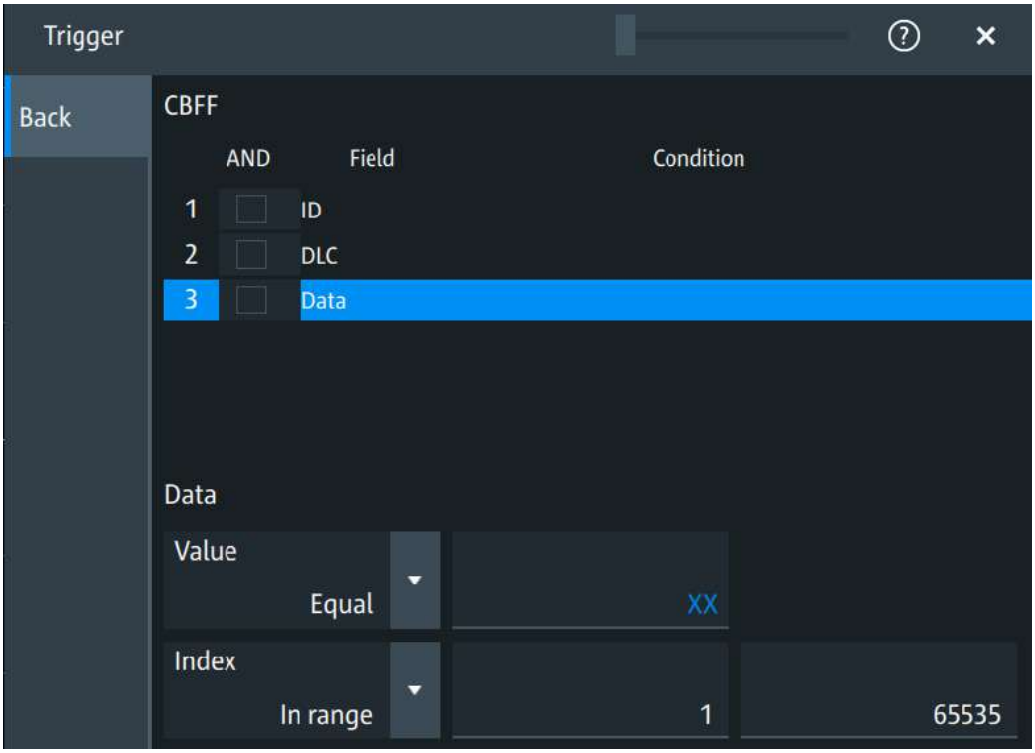

"Field" Enables the field type that you want to trigger on for the selected frame.

Remote command:
`TRIGger:SBSW:CAN:FIENable` on page 1877
`TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:ENABle` on page 1877

"Condition" Displays the value condition for the selected field.

Remote command:
`TRIGger:SBSW:CAN:BIT` on page 1875
`TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:BIT` on page 1875

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
`TRIGger:SBSW:CAN:DMAX` on page 1876
`TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:DMAX` on page 1876
`TRIGger:SBSW:CAN:DMIN` on page 1876
`TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:DMIN` on page 1876
`TRIGger:SBSW:CAN:DOPerator` on page 1877
`TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:DOPerator` on page 1877

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
TRIGger:SBSW:CAN:IMAX on page 1877
TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:IMAX on page 1877
TRIGger:SBSW:CAN:IMIN on page 1878
TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:IMIN on page 1878
TRIGger:SBSW:CAN:IOPerator on page 1878
TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:IOPerator on page 1878

Error type
Enables triggering on the selected error type.

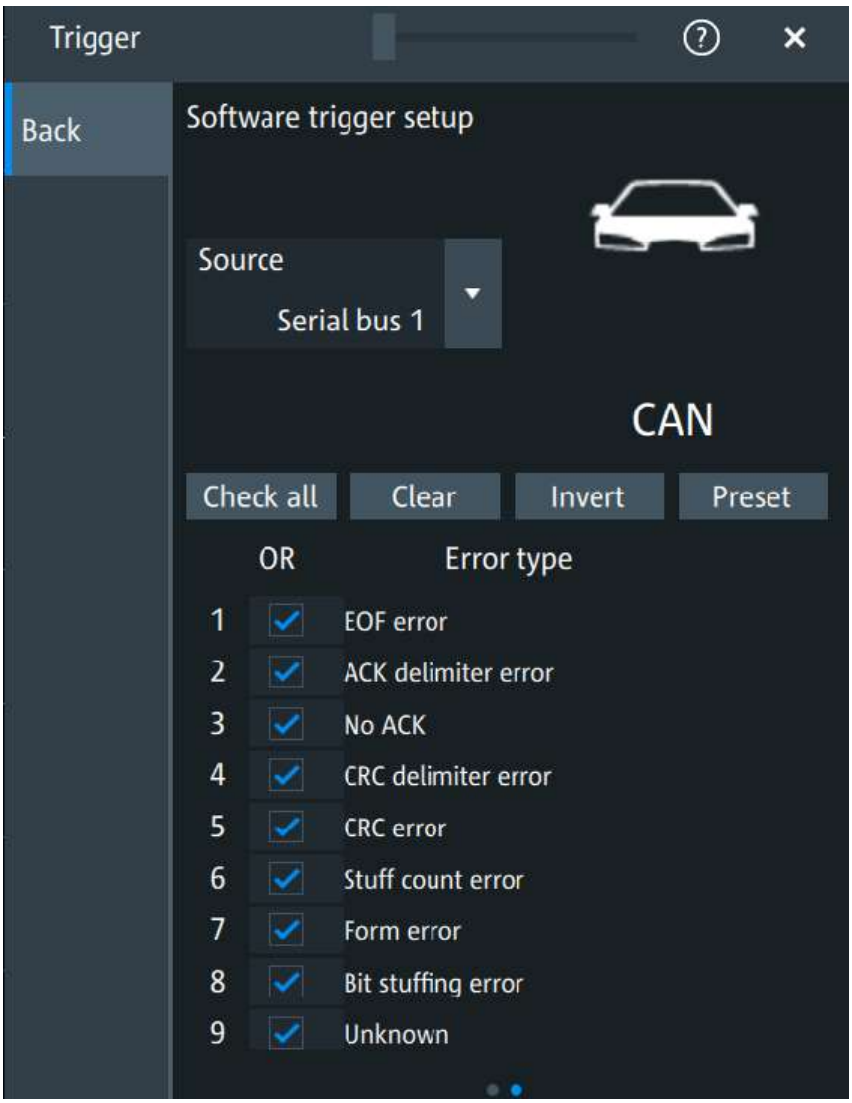

Remote command:
TRIGger:SBSW:CAN:ERENable on page 1878
TRIGger:SBSW:CAN:ERRor<m>:ENABle on page 1878

14.12.6 Measure

The "Setup Measurement" button opens the dialog for automatic measurements in the "Protocol" category for the selected serial bus.

See Section 10.2.8.2, "Settings for protocol measurements", on page 311.

14.12.7 CAN decode results

To enable the decoding, see Section 14.1.9.3, "Decoding protocol signals", on page 531.

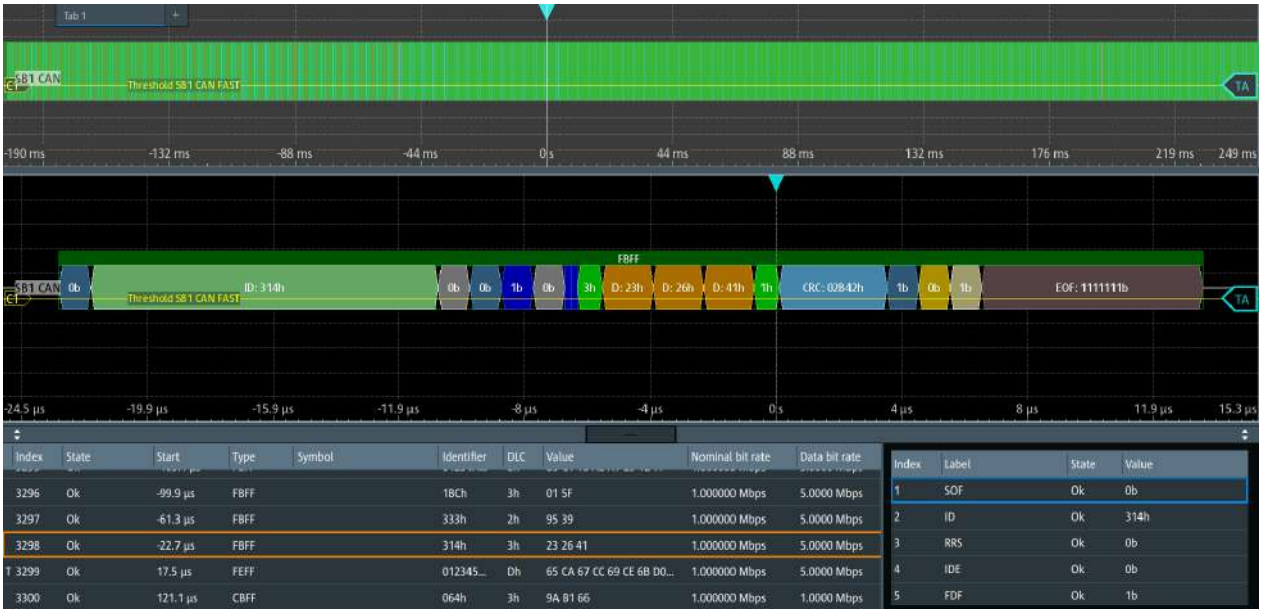

Figure 14-35: Decoded CAN signal

The decode results table contains information about all decoded frames.

Table 14-20: Content of the decode results table

Column	Description
"Index"	Number of the decoded frame
"State"	Overall state of the frame. "Insuffcient waveform length" indicates that the frame is not completely contained in the acquisition. Change the horizontal scale, or move the reference point to the left to get a longer acquisition.
"Start"	Time of frame start
"Type"	Frame type
"Symbol"	Symbolic label of the frame. Available only, if "Show symbols" is enabled in the "Display" tab and a symbols list is loaded.
"Identifier"	Identifier value in hexadecimal format. Select the data format in the "Display" tab.
"DLC"	Data length code, coded number of data bytes. Select the data format in the "Display" tab.

Column	Description
"Value"	Value of the data frame. Remote frames do not transmit data, therefore "- - -" is displayed. Select the data format in the "Display" tab.
"Nominal bit rate"	Number of bits per second
"Data bit rate"	Number of data bits per second

When you select a frame in the decode results table, its field content is shown in the details table to the right.

Table 14-21: Content of the frame details table

Column	Description
"Index"	Number of the decoded field
"Label"	Field type. Values depend on the decoded frame "Type", see Table 14-22.
"State"	Overall state of the frame
"Value"	Value of the field

Depending on the decoded type of frame, the following fields are available:

Table 14-22: Decoded fields, depending on the frame type

Frame	Fields
CBFF/CBFF-R	CRC: cyclic redundancy check
CEFF/CEFF-R	CRC: cyclic redundancy check
FBFF/FEFF	BRS: bit rate switch
	ESI: error state indicator
	SBC: stuff bit count
	CRC: cyclic redundancy check
XLFF	SBC: stuff bit count
	SDT: service data unit
	SEC: simple extended content
	VCID: virtual CAN network ID
	AF: acceptance field
	PCRC: preamble cyclic redundancy check
	FCRC: frame CRC

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 1491

Remote commands

Remote commands to retrieve decode results are described in Section 18.18.13.6, "Decode results", on page 1879.

You can also export the decode results. For details see Section 14.1.9.4, "Exporting decode results", on page 531.

Example of a CAN export file

```
Index,Start,Stop,State,Type,ID value,DLC,Nominal bit rate,Data bit rate,CRC,BRS,ESI,
  SBC,SDT,SEC,VCID,AF,PCRC
1,-0.19,-0.188,'OK','XLFF',064h,7FFh,1000000,10000000,0000AABBh,-,-,6h,FFh,1b,AAh,
  000ABCDh,01FFh
2,-0.188311,-0.188243,'OK','CBFF',064h,3h,1000000,1000000,35CEh,-,-,-,-,-,-,-,-
3,-0.188239,-0.188195,'OK','CBFR',064h,3h,1000000,1000000,5AA0h,-,-,-,-,-,-,-,-
4,-0.188191,-0.188157,'OK','FBFF',064h,2h,1000000,5000000,035FFh,0b,1b,Eh,-,-,-,-,-
5,-0.188153,-0.188075,'OK','CEFF',01401B26h,2h,1000000,1000000,32A0h,-,-,-,-,-,-,-,-
6,-0.188071,-0.188008,'OK','CEFR',01900064h,3h,1000000,1000000,32AAh,-,-,-,-,-,-,-,-
7,-0.188004,-0.187951,'OK','FEFF',01900064h,3h,1000000,5000000,032AAh,1b,0b,Fh,-,-,-,-,-
8,-0.187947,-0.187899,'OK','XLFF',064h,046h,1000000,10000000,000032AAh,-,-,6h,03h,0b,0Ah,
  0000ABCFh,1FFFh
9,-0.187895,-0.187881,'INC','ERR',---,---,1000000,1000000,-,-,-,-,-,-,-,-,-
10,-0.187877,-0.187863,'UNKN','OVER',---,---,1000000,1000000,-,-,-,-,-,-,-,-,-


Details frame 2
Index,Data
1,D0h
2,E7h
3,20h

Details frame 4
Index,Data
1,D1h
2,E8h

Details frame 5
Index,Data
1,D2h
2,E9h

Details frame 7
Index,Data
1,D3h
2,EAh
3,21h
```

14.13 LIN (automotive electronics, option R&S MXO5-K520)

The Local Interconnect Network (LIN) is a simple, low-cost bus system used within automotive network architectures. LIN is usually a subnetwork of a CAN bus. The primary purpose of LIN is the integration of uncritical sensors and actuators with low-bandwidth requirements. Common applications in a motor vehicle are the control of doors, windows, wing mirrors, and wipers.

Requirements

For performing LIN decode measurements, you need the following:

- MXO 5 with 1 available channel. The channel can be:
  - Analog channels (C1-C4)
  - Logic channels (D0-D15) (requires option R&S MXO5-B1)
- One probe
- Option R&S MXO5-K520

- About the LIN protocol 762
- LIN configuration 763
- LIN filter 766
- LIN format configuration 768
- LIN hardware trigger 773
- LIN software trigger 776
- Measure 779
- LIN decode results 779

14.13.1 About the LIN protocol

This section provides an overview of protocol characteristics, frame format, identifiers and trigger possibilities. For detailed information, order the LIN specification on http://www.lin-subbus.org/ (free of charge).

LIN characteristics

The main characteristics of LIN are:

- Single-wire serial communications protocol, based on the UART byte-word interface
- Single primary, multiple secondaries - usually up to 12 nodes
- Primary-controlled communication: primary coordinates communication with the LIN schedule and sends the identifier to the secondaries
- Synchronization mechanism for clock recovery by secondary nodes without crystal or ceramic resonator

Data transfer

Basic communication concept of LIN:

- Communication in an active LIN network is always initiated by the primary.

- The primary sends a message header including the synchronization break, the synchronization byte, and the message identifier.
- The identified node sends the message response: one to eight data bytes and one checksum byte.
- Header and response form the message frame.

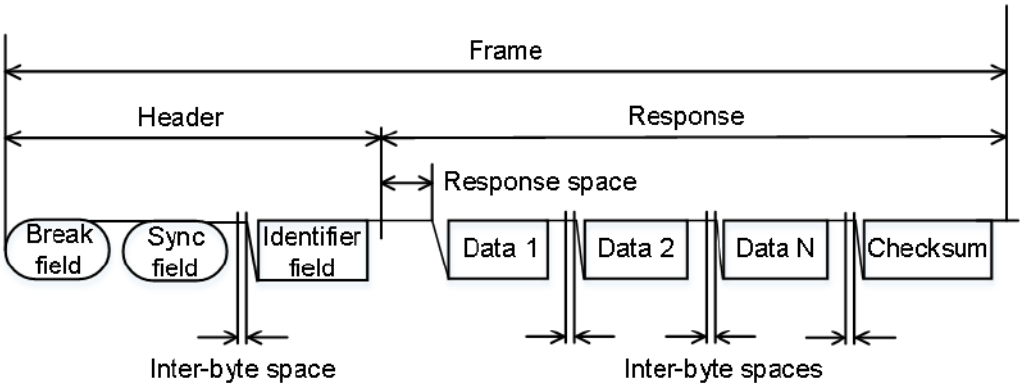

Figure 14-36: LIN frame with header and response

Data bytes are transmitted with LSB first.

The identifier byte consists of 6 bits for the frame identifier and two parity bits. This combination is known as protected identifier.

14.13.2 LIN configuration

14.13.2.1 LIN configuration settings

Access: "Menu" > "Apps" > "Protocol" tab > "LIN" > "Setup".

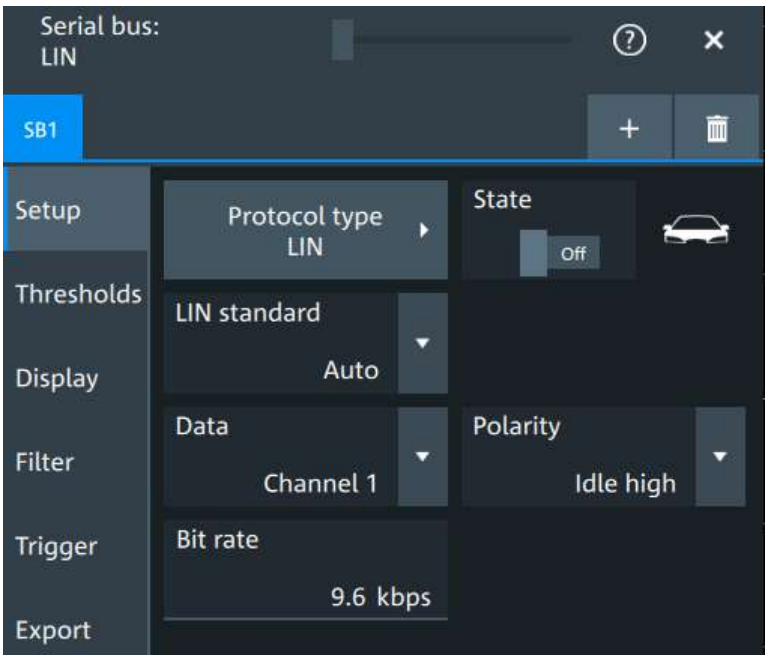

LIN standard
Selects the version of the LIN standard that is used in the DUT. The setting mainly defines the checksum version used during decoding.

The most common version is LIN v.2.x. For mixed networks, or if the standard is unknown, set the LIN standard to "Auto".

Remote command:
`SBUS<sb>:LIN:STANdard` on page 1894

Data
Sets the source waveform of the data line.

Remote command:
`SBUS<sb>:LIN:DATA:SOURce` on page 1893

Polarity
Defines the idle state of the bus. The idle state is the recessive state and corresponds to a logic high.

Remote command:
`SBUS<sb>:LIN:POLarity` on page 1894

Bit rate
Sets the number of transmitted bits per second. The maximum bit rate for LIN is 20 kbit/s.

If the LIN standard is "J2602", the bit rate is 10.417 kbit/s and cannot be changed.

Remote command:
`SBUS<sb>:LIN:BITRate` on page 1892

14.13.2.2 Threshold settings

Access: "Menu" > "Apps" > "Protocol" tab > "LIN" > "Thresholds".

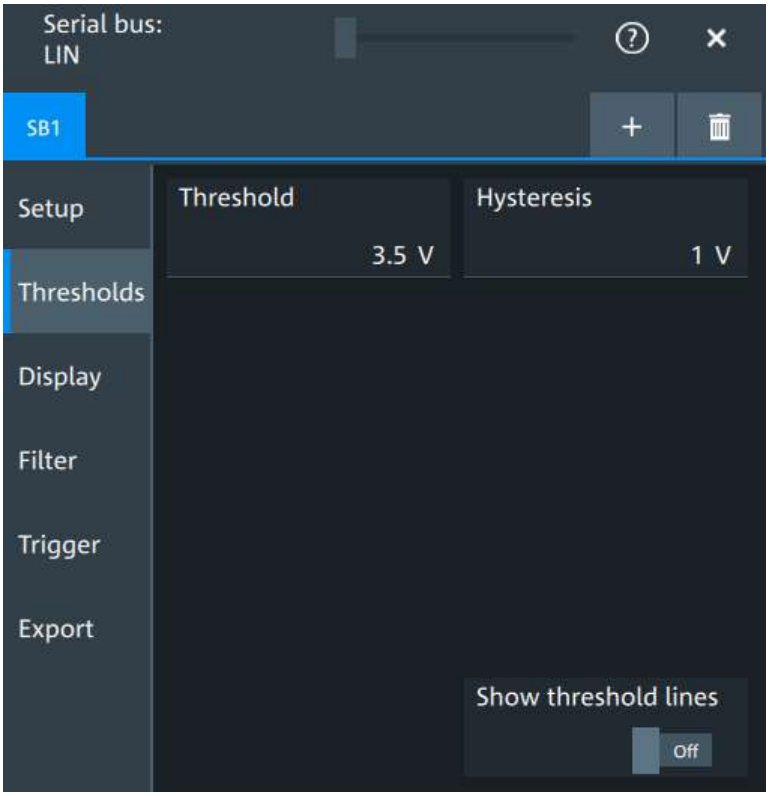

Threshold
Sets the threshold for the data channel. Enter the value directly in the fields.

Additional to the threshold, you can also set a hysteresis.

Remote command:
`SBUS<sb>:LIN:DATA:THReshold` on page 1893
`SBUS<sb>:LIN:DATA:HYSTeresis` on page 1893

Show threshold lines
If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also Show threshold lines.

Remote command:
`SBUS<sb>:THReshold` on page 1492

14.13.2.3 Display settings

For details about the display settings, see Section 14.1.3.1, "Display settings", on page 511.

14.13.3 LIN filter

Access: "Menu" > "Apps" > "Protocol" tab > "LIN" > "Filter" tab

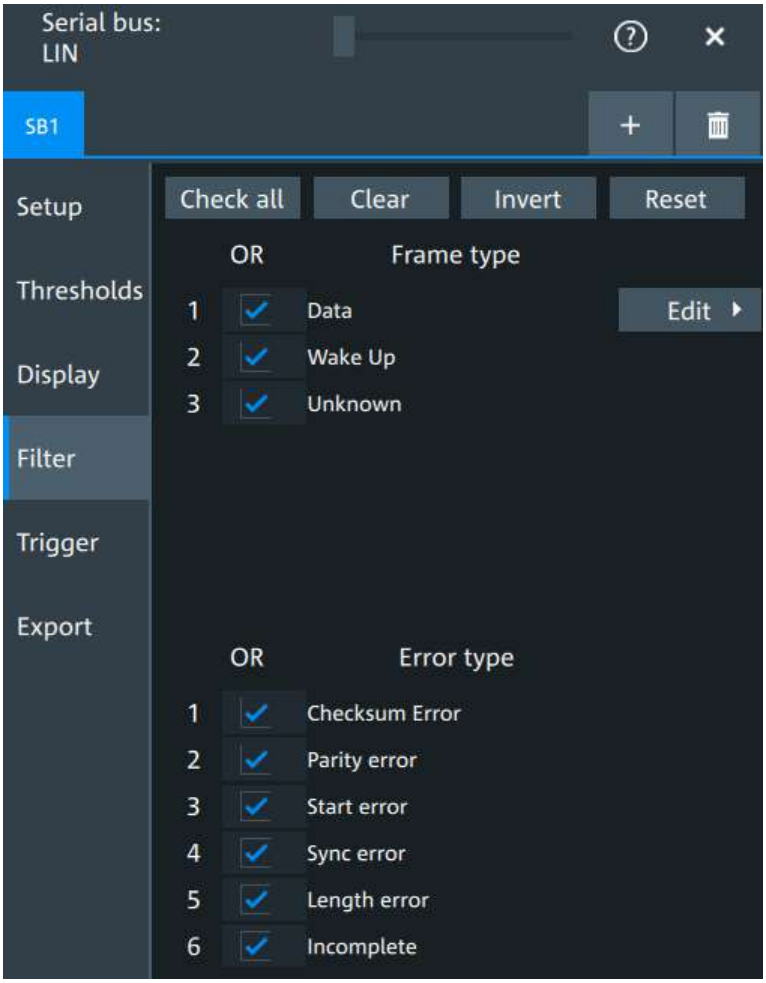

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all" Enables the filter for all available frames and error types.

"Clear" Disables the filter for all available frames and error types.

"Invert" Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types.

Remote command:
`SBUS<sb>:LIN:FILTer:CHKall` on page 1896
`SBUS<sb>:LIN:FILTer:CLR` on page 1896

SBUS<sb>:LIN:FILTer:INVert on page 1896
SBUS<sb>:LIN:FILTer:RST on page 1897

Frame type
Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.

For selected frame types, you can also specify conditions for the value of the fields in the "Edit" dialog.

Available frames are "Data", "Wake" and "Unknown".

Remote command:
SBUS<sb>:LIN:FILTer:FRENable on page 1899
SBUS<sb>:LIN:FILTer:FRAMe<fr>:ENABle on page 1899

Edit
Opens a dialog to define the details of the selected frame.

"Field" Enables the field type that you want to filter on for the selected frame.

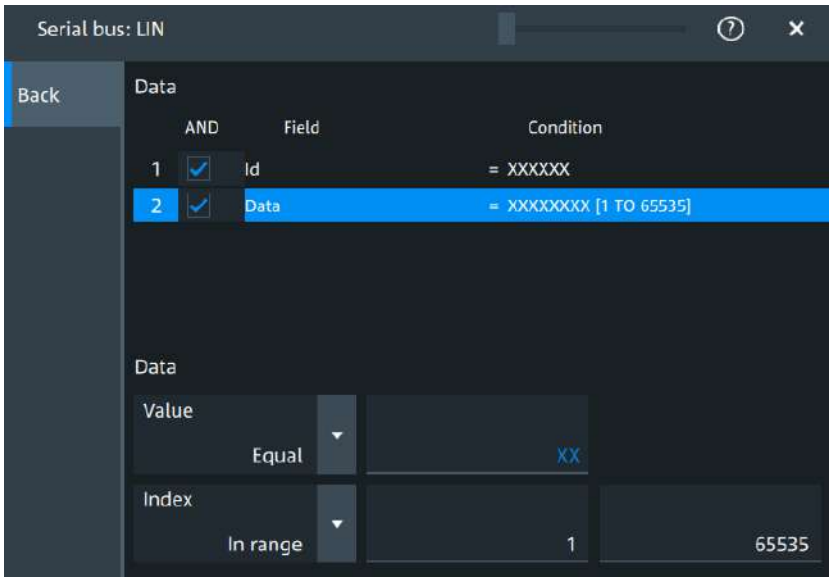

The available fields are "Id" and "Data".

Remote command:
SBUS<sb>:LIN:FILTer:FIENable on page 1899
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:ENABle on page 1899

"Condition" Displays the value condition for the selected field.

Remote command:
SBUS<sb>:LIN:FILTer:BIT on page 1897
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:BIT on page 1897

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
SBUS<sb>:LIN:FILTer:DMAX on page 1897
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:DMAX on page 1897
SBUS<sb>:LIN:FILTer:DMIN on page 1898
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:DMIN on page 1898
SBUS<sb>:LIN:FILTer:DOPerator on page 1898
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:DOPerator on page 1898

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
SBUS<sb>:LIN:FILTer:IMAX on page 1899
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:IMAX on page 1899
SBUS<sb>:LIN:FILTer:IMIN on page 1900
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:IMIN on page 1900
SBUS<sb>:LIN:FILTer:IOPerator on page 1900
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:IOPerator on page 1900

Error type
Enables filtering on the selected error type.

The available errors are "Checksum error", "Parity error","Start error", "Sync error", "Length error" and "Incomplete".

Remote command:
SBUS<sb>:LIN:FILTer:ERENable on page 1898
SBUS<sb>:LIN:FILTer:ERRor<n>:ENABle on page 1898

14.13.4 LIN format configuration

Access: "Menu" > "Apps" > "Protocol" tab > "LIN" > "Format".

See Section 14.1.5, "Format", on page 516.

Show format
Enables the format configuration and displays the frame formats in the honey-comb view and results. If enabled, the frame formats are also selectable for triggering and filtering.

Remote command:
SBUS<sb>:LIN:FORMat:SELect on page 1901

Add frame
Creates a frame format and adds it to the end of the frame list. A dialog opens to specify the frame details. The number of frame formats is limited to 100.

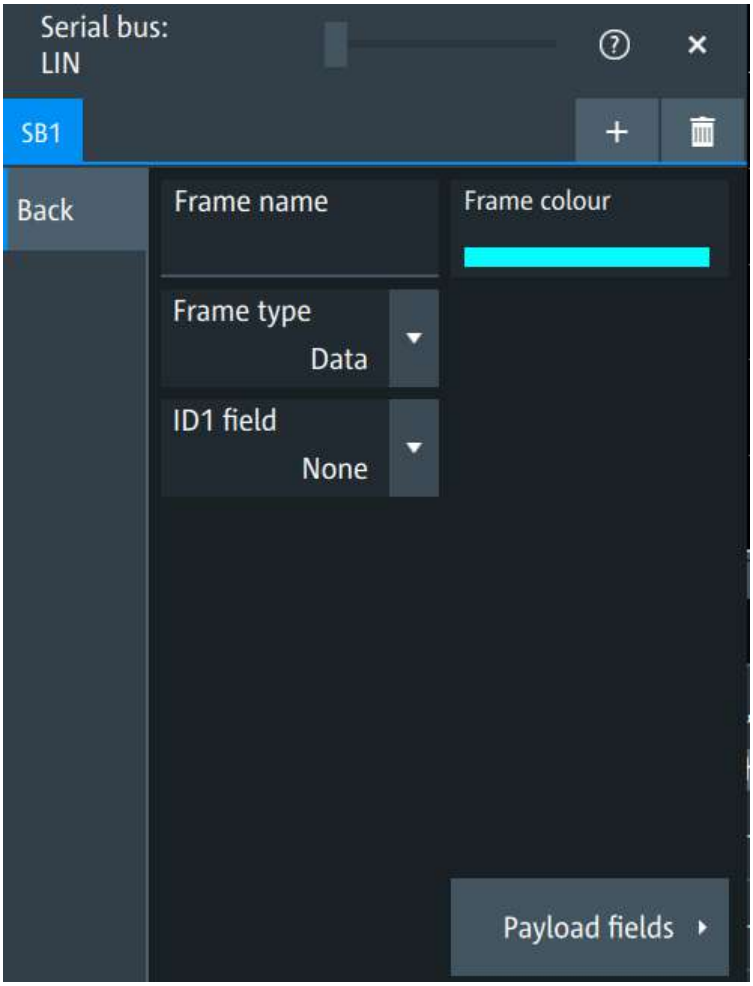

Remote command:
SBUS<sb>:LIN:FORMat:ADDFrame on page 1902

Edit list
Enables editing the frame list. If enabled, you can delete a frame format by clicking its "Delete" icon. In a list with several entries, you can move frame formats up or down by clicking the arrow buttons. To exit the editing mode, click "Edit list" again.

Remote command:
SBUS<sb>:LIN:FORMat:CLR on page 1902
SBUS<sb>:LIN:FORMat:FCOunt? on page 1903

Open
Opens a dialog for loading an existing list of frame formats in XML file format.

Remote command:
SBUS<sb>:LIN:FORMat:LOAD on page 1902

Save as
Opens a dialog for saving your current list of frame formats to an XML file. Saved frame formats can support efficient and convenient working.

Remote command:
SBUS<sb>:LIN:FORMat:SAVE on page 1902

Frame name
Specifies an arbitrary name to label the currently selected frame format. Ideally, use speaking names according to the specifications of the applicable protocol standard. Frame names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:LIN:FORMat:FRAMe<fr>:NAME on page 1903

Frame color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:LIN:FORMat:FRAMe<fr>:COLor on page 1904

Frame type
Select an original frame type.

Remote command:
SBUS<sb>:LIN:FORMat:FRAMe<fr>:TYPE on page 1904

ID<n> field
Select the first to third identifying field types.

Remote command:
SBUS<sb>:LIN:FORMat:FRAMe<fr>:ID1Field on page 1904
SBUS<sb>:LIN:FORMat:FRAMe<fr>:ID2Field on page 1904
SBUS<sb>:LIN:FORMat:FRAMe<fr>:ID3Field on page 1904

ID<n> value
Select the value of the corresponding field type.

Remote command:
SBUS<sb>:LIN:FORMat:FRAMe<fr>:ID1Value on page 1905
SBUS<sb>:LIN:FORMat:FRAMe<fr>:ID2Value on page 1905
SBUS<sb>:LIN:FORMat:FRAMe<fr>:ID3Value on page 1905

Payload fields
Opens the payload field configuration dialog. The format configuration of payload fields is optional and replaces the payload data of the identified frame.

Add field
Creates a new field description for the currently selected frame format and adds it to the end of the field list with color, bit position (order of transmission) and name. Brackets indicate how often bits will be repeated, [] indicates that this is an open array.

A dialog opens to specify the field details. The number of field descriptions is limited to 100.

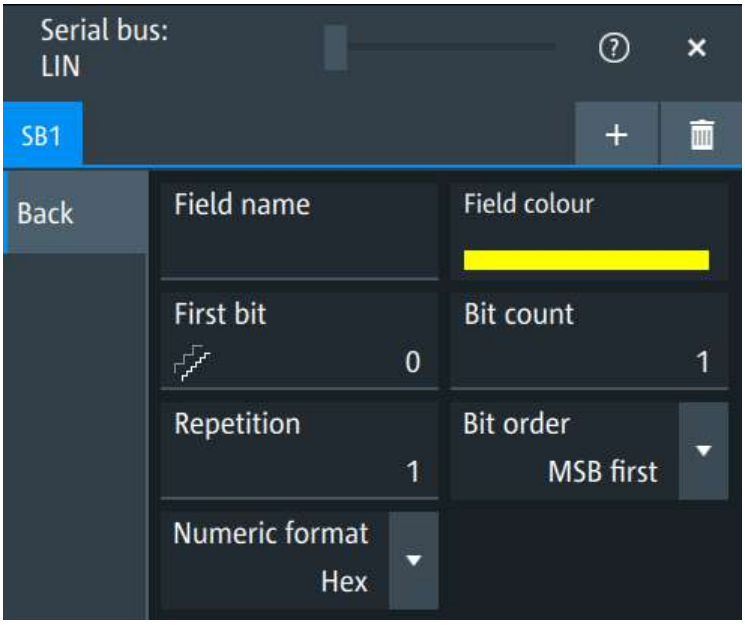

Remote command:
SBUS<sb>:LIN:FORMat:FRAMe<fr>:ADDField on page 1903

Field name
Specifies an arbitrary name for the currently selected field description. Ideally, use speaking names.

Field names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:NAME on page 1905

Field color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:COLor on page 1905

First bit
In order of transmission, sets the first bit of this field in the payload.

Remote command:
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:FSTBit on page 1906

Bit count
Sets the number of bits in the selected field, i.e., the field's length. Selecting the value opens a keypad showing allowed minimum and maximum values. You can set "Min", "Max", "Reset" or adjust with the "Inc" or "Dec" buttons by 1 or 10 (step size dependent). Use "CE" to restore the value used before the keypad opened.

If the "Condition" pattern length does not match the "Bit count":
- Too long, it is truncated.
- Too short, it is left-padded with 0.

Both truncation and padding happen on the left side of the condition and follow the configured "Bit order".

Examples for "Condition" "=100"):
- "Bit order" is "MSB":
  - Bit count = 2: truncated. Result: =00
  - Bit count = 4: padded. Result: =0100
- "Bit order" is LSB first (equivalent MSB-first representation is =001):
  - Bit count = 2: truncated. Result: =00 (LSB first), =00 (MSB first)
  - Bit count = 4: padded. Result: =0100 (LSB first), =0010 (MSB first)

Remote command:
`SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:BITCount` on page 1906

Repetition
Defines the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Remote command:
`SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:REPetition` on page 1906

Bit order
Selects, in which order the bits of a field's "Condition" value are evaluated:

- "LSB first": little endian, least significant bit first
- "MSB first": big endian, most significant bit first

Remote command:
`SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:BITorder` on page 1907

Numeric format
Selects how the "Condition" value is interpreted:

- Symbolic: Assigns a symbolic translation on the data fields. Only available for custom protocols.
- Value list: Assigns a custom name to each hexadecimal value; any value without an assigned value is shown as "Undefined".
- A*X+B: Assigns a linear function on the data fields.
- For details on the other numeric formats, see "Format-specific information" on page 532.

The following rules apply:
- If the condition contains at least one of "H", "h", "L", "l", "X", "x", and all other characters are only "1" and/or "0", the value is always treated as binary, regardless of the selected numeric format.
- "x" and "X" are wildcards and are supported only in binary format or when the string is auto-interpreted as binary per the rule above.
  Examples for format set to "HEX":
  - "=1HL111000": valid (read as binary)
  - "=0x10101": valid (read as binary; "x" acts as wildcard, not a hex prefix)
  - "=1010": valid (read as HEX, with a total of 16 bits)

– "=0x5A": valid (read as HEX "5A", because "0x" is a valid hex prefix; entering 5A alone is recommended)
– "=5X12": invalid
– "=1H33": invalid

Remote command:
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:FORMat on page 1907

Add value
Creates a new hexagonal value for customization.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:ADDValue on page 1908

Value
Defines the hexagonal value to convert it into a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue on page 1908

Label
Defines the label to convert the corresponding hexagonal value to a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel on page 1909

Unit
Defines a unit for the linear function.

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:UNIT on page 1909

Parameter A,B
Defines the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:PARA on page 1909
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:PARB on page 1909

14.13.5 LIN hardware trigger

Access: "Menu" > "Apps" > "Protocol" tab > "LIN" > "Trigger" tab > "Setup Hardware Trigger"

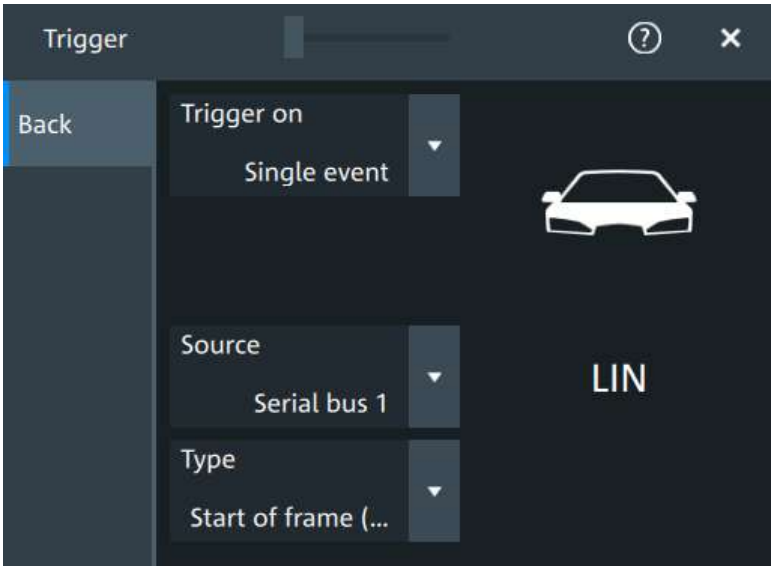

Type
Selects the trigger type for LIN analysis.

Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

"Start of frame (Sync)" Triggers on the stop bit of the sync field.

"Identifier" Sets the trigger to one specific identifier or an identifier range. Enter only the 6-bit identifier without parity bits, not the protected identifier. Description of trigger type specific settings: Identifier setup: Condition, Frame ID min, Frame ID max.

"Identifier + Data" Sets the trigger to a combination of identifier and data condition. The instrument triggers at the end of the last byte of the specified data pattern.

The identifier conditions are the same as for the "Identifier" trigger type, see Identifier setup: Condition, Frame ID min, Frame ID max. Data conditions are set with Data setup: Condition, Pattern, Position.

"Wake-up frame"	Triggers after a wake-up frame.
"Error condition"	Identifies various errors in the frame, see Error conditions.

Remote command:
`TRIGger:SBHW:LIN:TYPE` on page 1910

Identifier setup: Condition, Frame ID min, Frame ID max
The identifier setup consists of the condition and one or two identifier pattern.

Condition	Sets the comparison condition to a specific value or a range.
"Frame ID min"	Defines the bit pattern of the identifier. Enter only the 6-bit identifier without parity bits, not the protected identifier.
"Frame ID max"	Sets the maximum value of a range for "Condition" = "In range"/"Out of range".

Remote command:
`TRIGger:SBHW:LIN:IMIN` on page 1911
`TRIGger:SBHW:LIN:IMAX` on page 1912
`TRIGger:SBHW:LIN:ICONdition` on page 1912

Data setup: Condition, Pattern, Position
The data setup consists of the the condition, the position of the pattern, and one data pattern.

Condition	Sets the operator to define a specific data pattern ("Equal" or "Not equal") or a range smaller or bigger than a specific pattern.
"Pattern"	Defines the data pattern.
"Position"	Sets the number of data events that are ignored, before trigger condition check of the data starts.

Remote command:
`TRIGger:SBHW:LIN:DCONdition` on page 1913
`TRIGger:SBHW:LIN:DMIN` on page 1912
`TRIGger:SBHW:LIN:DPOSition` on page 1912

Error conditions
Triggers if one or more of the following errors occur.

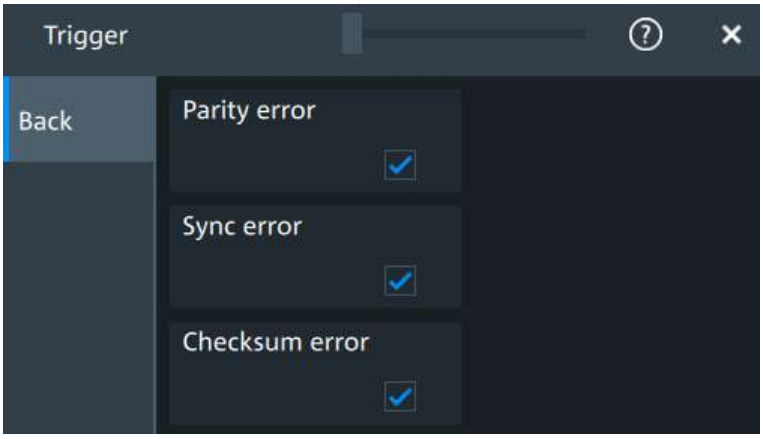

"Parity error" Parity bits are the bits 6 and 7 of the identifier. They verify the correct transmission of the identifier.

"Sync error" Synchronization error.

"Checksum error" The checksum verifies the correct data transmission. It is the last byte of the frame response. The checksum includes not only the data but also the protected identifier (PID).

Remote command:
`TRIGger:SBHW:LIN:IPERror` on page 1911
`TRIGger:SBHW:LIN:SYERror` on page 1911
`TRIGger:SBHW:LIN:CHKSerror` on page 1913

14.13.6 LIN software trigger

14.13.6.1 Setup A trigger

Before setting up the software trigger for the protocols, a trigger A event needs to be set up.

14.13.6.2 Software trigger settings

Access: "Menu" > "Apps" > "Protocol" tab > "LIN" > "Trigger" tab > "Setup Software Trigger"

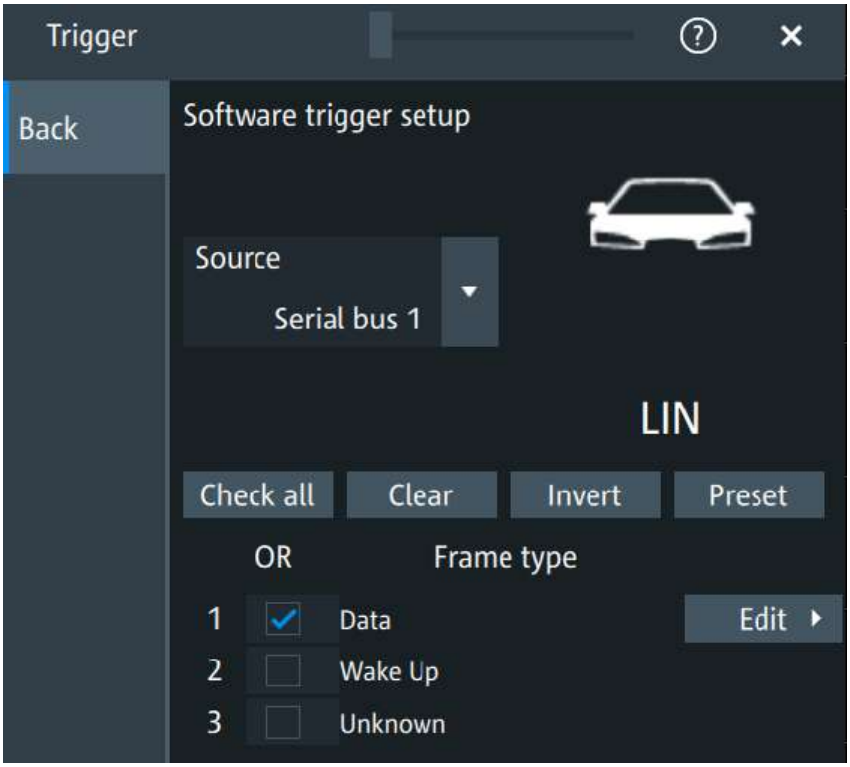

In the "Software Trigger" tab, you can define the settings to trigger on the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to trigger on.

"Check all" Enables the software trigger for all available frames and error types.

"Clear" Disables the software trigger for all available frames and error types.

"Invert" Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types for the software trigger.

Remote command:
`TRIGger:SBSW:LIN:CHKall` on page 1914
`TRIGger:SBSW:LIN:CLR` on page 1914
`TRIGger:SBSW:LIN:INVert` on page 1914
`TRIGger:SBSW:LIN:RST` on page 1914

Frame type
Selects the frame type that you want to trigger on. You can trigger on all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

The following frames are available: "Data", "Wake Up", "Unknown".

Remote command:
TRIGger:SBSW:LIN:FRENable on page 1915
TRIGger:SBSW:LIN:FRAMe<fr>:ENABle on page 1915

Edit
Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

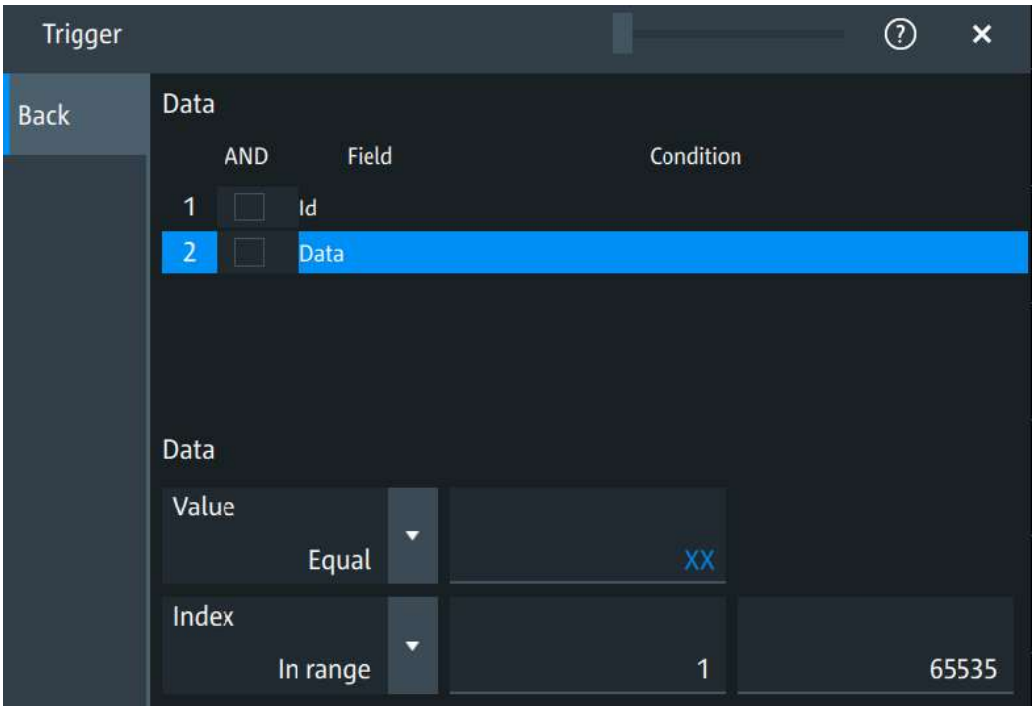

"Field" Enables the field type that you want to trigger on for the selected frame.
The following fields are available:

Remote command:
TRIGger:SBSW:LIN:FIENable on page 1916
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:ENABle on page 1916

"Condition" Displays the value condition for the selected field.

Remote command:
TRIGger:SBSW:LIN:BIT on page 1915
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:BIT on page 1915

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
TRIGger:SBSW:LIN:DMAX on page 1915
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:DMAX on page 1915
TRIGger:SBSW:LIN:DMIN on page 1916
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:DMIN on page 1916
TRIGger:SBSW:LIN:DOPerator on page 1916
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:DOPerator on page 1916

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
TRIGger:SBSW:LIN:IMAX on page 1917
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:IMAX on page 1917
TRIGger:SBSW:LIN:IMIN on page 1917
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:IMIN on page 1917
TRIGger:SBSW:LIN:IOPerator on page 1918
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:IOPerator on page 1918

Error type
Enables triggering on the selected error type.

The following error types are available:"Checksum error", "Parity error","Start error", "Sync error", "Length error" and "Incomplete".

Remote command:
TRIGger:SBSW:LIN:ERENable on page 1918
TRIGger:SBSW:LIN:ERRor<m>:ENABle on page 1918

14.13.7 Measure

The "Setup Measurement" button opens the dialog for automatic measurements in the "Protocol" category for the selected serial bus.

See Section 10.2.8.2, "Settings for protocol measurements", on page 311.

14.13.8 LIN decode results

To enable the decoding, see Section 14.1.9.3, "Decoding protocol signals", on page 531.

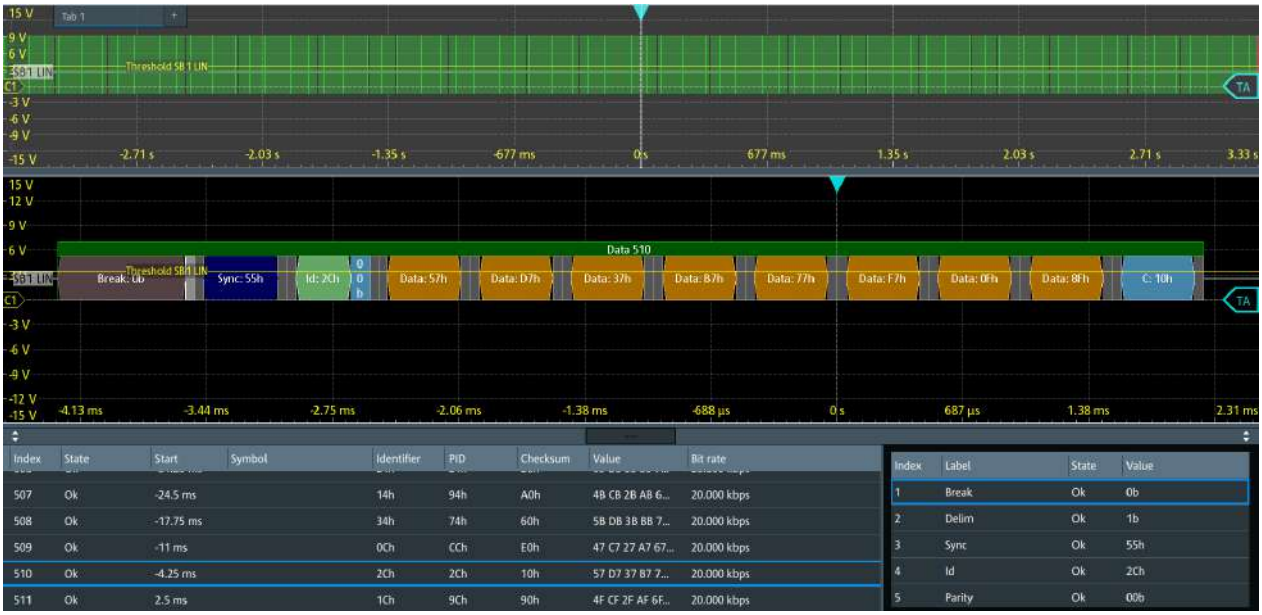

Figure 14-37: Decoded LIN signal

The decode results table contains information about all decoded frames.

Table 14-23: Content of the decode results table

Column	Description
Index	Index of the decoded frame
State	Overall state of the frame
Start	Time of frame start
Symbol	Symbolic label of the frame. Available only, if "Show symbols" is enabled in the "Display" tab and a symbols list is loaded.
Identifier	Identifier value
PID	Protected identifier
Checksum	Checksum value
Values	Value of the data bytes. Select the data format in the "Display" tab.
Bit rate	Value of the bit rate

When you select a frame in the decode results table, its field content is shown in the details table to the right.

Table 14-24: Content of the frame details table

Column	Description
Index	Index of the field
Label	Name of the field
State	State of the field
Value	Value of the field

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 1491

Remote commands

Remote commands to retrieve decode results are described in Section 18.18.14, "LIN (option R&S MXO5-K520)", on page 1892.

You can also export the decode results. For details see Section 14.1.9.4, "Exporting decode results", on page 531.

Example of LIN export file

```
Index,Start,Stop,State,Identifier,PID,Checksum,Bit rate
1,-3.44,-3.43375,'OK',02h,C2h,D0h,20000
2,-3.43325,-3.427,'OK',22h,22h,30h,20000
3,-3.4265,-3.42025,'OK',12h,92h,B0h,20000
4,-3.41975,-3.4135,'OK',32h,72h,70h,20000
5,-3.413,-3.40675,'OK',0Ah,CAh,F0h,20000

Details frame 1
Index,State,Value
1,'OK',40h
2,'OK',C0h
3,'OK',20h
4,'OK',A0h
5,'OK',60h
6,'OK',E0h
7,'OK',10h
8,'OK',90h

Details frame 2
Index,State,Value
1,'OK',50h
2,'OK',D0h
3,'OK',30h
4,'OK',B0h
5,'OK',70h
6,'OK',F0h
7,'OK',08h
8,'OK',88h
```

14.14 SENT (automotive electronics, option R&S MXO5-K520)

Single Ended Nibble Transmission (SENT) is a serial transmission interface protocol originally specified for the communication of sensors and control units in automotive electronics.

SENT is a protocol standard governed by the Society of Automotive Engineers (SAE J2716). For detailed information, refer to the SENT standard specification on http://www.sae.org.

The SENT protocol is used exclusively in automotive applications. Examples are electrical power steering, and advanced driver assistance such as parking assist or sensing of pressure, throttle position, pedal position, airflow mass, liquid level, etc.

Requirements

For performing SENT decode measurements, you need the following:

- MXO 5 with 1 available channel. The channel can be:
  - Analog channels (C1-C4)
  - Logic channels (D0-D15) (requires option R&S MXO5-B1)
- One probe
- Option R&S MXO5-K520

- About the SENT protocol 782
- SENT configuration 786
- SENT filter 790
- SENT format configuration 794
- SENT software trigger 799
- Measure 803
- SENT decode results 803

14.14.1 About the SENT protocol

This section provides an overview of the protocol characteristics, encoding scheme, identifiers and trigger possibilities.

The SENT protocol transmits signal values point-to-point from a sensor to a controller (electronic control unit ECU), unidirectional. In contrast to conventional measurements, you can receive multiple data parameters via the SENT interface in a single transmission. Nevertheless, SENT is characterized by its simplicity and yet high customizability to meet the individual requirements of the applications.

SENT operates via a three-wire connection, a signal line, a supply voltage line for the sensor and a ground line. It transmits data digitally in variable timing units and evaluates the time between two falling edges (single edges). The signal is amplitude modulated with a constant amplitude voltage. Thus the influences of disturbance signals are not critical.

SENT key features

The main characteristics of SENT are:

- Serial communication protocol
- 3 wires: SENT (signal line), 5V (voltage line), GND (ground line)
- Output only, from sensor to receiver
- Point-to-point transmission, no bus
- Digital transmission
- High baud rate
- Data transmission in variable timing units of 4 bits (1 nibble) between two falling edges
- Transmitter-specific clock period (tick)
- Time measured between single falling edges

14.14.1.1 SENT transmission concept

A sensor converts the analog measured data to a digital signal, and thus transmits a series of pulses to the receiver. The receiver, e.g. an ECU processes the received signal also digitally.

The format of a SENT message frame has a fixed pulse order and a transmitter-specific clock period. The total transmission time varies depending on the clock variation of the transmitter and the transmitted data values. The data pulses embedded in the transmission sequence represent one or multiple data parameters to be communicated. The last pulses in a message frame are the CRC check pulse, allowing the receiver to perform some diagnostic tests, and an optional pause pulse.

A SENT transmission starts without a request from the receiver. Consecutive sequences are transmitted continuously after the falling edge of the last pulse.

The SENT protocol distinguishes between two channel types:

- **Fast channel:** transmits primary data, i.e. sensor readings like temperature, pressure, mass air flow, throttle position.
- **Slow channel:** transmits secondary data consisting of transfer characteristics, sensor ID, type, manufacturer diagnostic, etc.
  The slow channel transmission provides two serial message formats *Short* and *Enhanced* for customizing the secondary data.

The data of both channels is transmitted simultaneously, by including two bits of a slow channel message in the message frame of the fast channel. Even though it requires many fast channel messages to complete a slow channel message, you can use this function to transmit several slow channel messages with minimal impact on the primary sensor data and the data rate.

14.14.1.2 SENT message definitions

SENT terms

See the specific terms and definitions used in the SENT protocol:

- **Tick (clock tick):** basic unit of time
  - Transmitter-specific nominal clock period
  - 3 µs < clock tick <90 µs, with max. 20 % clock variation
- **Nibble:** minimum unit of data
  - Used to transmit data
  - Variable timing units between two falling edges

SENT fast channel

The SENT protocol enables you to transmit measurements of multiple sensors in one transmission sequence with data signals of varying length. The diagram in Figure 14-38 shows, for example, the encoding scheme for two 12-bit data signals.

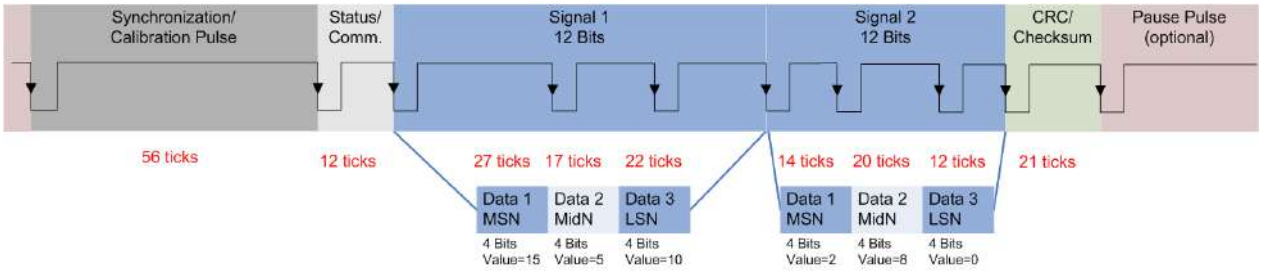

Figure 14-38: Example of a SENT transmission sequence

The format of a SENT transmission sequence consists of the following pulses:

- **Synchronization/Calibration pulse:**
  - Initial sequence of the receiver
  - The start condition is the falling edge of the last pulse (CRC or Pause)
  - The nominal pulse period is 56 clock ticks
  - Measures the actual clock variation of the transmitter and calculates the tick timing
- **Status/Communication Pulse (Nibble)**
  - One 4 bit pulse
  - Communicates status and enables the sensor to include slow channel message bits
    0: (LSB) specific application
    1: specific application
    2: Serial Data message or specific application (e.g. Infineon TLE4998S)
    3: (MSB) 1= message start; 0=Serial Data message or specific application (e.g. Infineon TLE4998S)
  - 12 to 27 clock ticks
  - Not included in CRC frame calculation

- **Data Pulses (Nibbles)**
  - One up to six 4 bit data nibbles
  - 12 to 27 clock ticks pulse period
  - Initial logic 0 time with ≥5 ticks, subsequent logical 1 with variable duration
- **CRC/Checksum**
  - One 4 bit pulse
  - Used for error checking of data nibbles (status nibble not included)
  - Detects single bit, odd number of nonconsecutive and single burst errors
- **Pause Pulse**
  - One optional pulse
  - Variable pulse length: 12 to 768 clock ticks
  - Can be used to create a transmission with a constant number of clock ticks

SENT slow channel

Short Serial Messages

For transmission of a slow channel message, 2 bits are included in a fast channel message, see the status nibble (Bit 2,3) in Figure 14-39.

A short serial message needs 16 fast channel messages until it is completely transmitted. Prerequisite for the complete transmission of the slow channel message is 16 consecutive error-free fast channel transmissions.

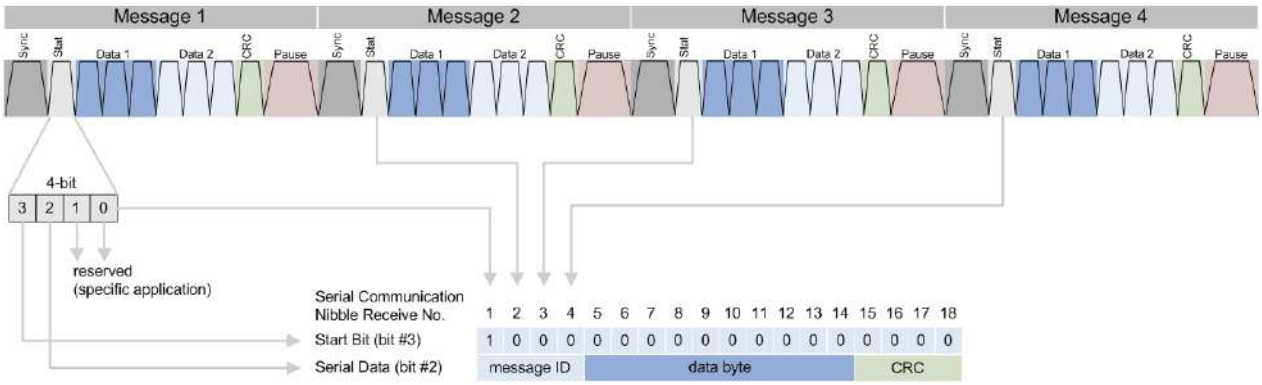

Figure 14-39: One serial message, composed of 16 SENT consecutive fast channel transmissions

Enhanced Serial Messages

The transmission of an enhanced serial message format requires 18 fast channel transmissions. Each slow channel message is assigned a message ID, which is transmitted with the data.

The enhanced serial message format provides two alternatives for configuring the message:

- 4-bit ID and 16-bit data
- 8-bit ID and 12-bit data

The graphs below illustrate the variants.

Table 14-25: Enhanced serial message formats

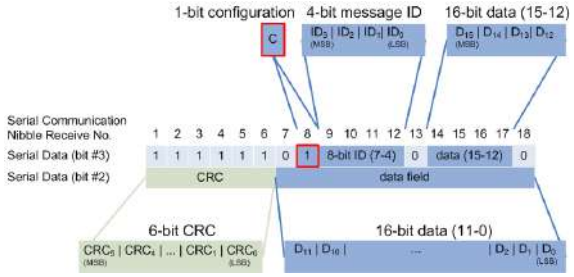

16-bit data and 4-bit message ID

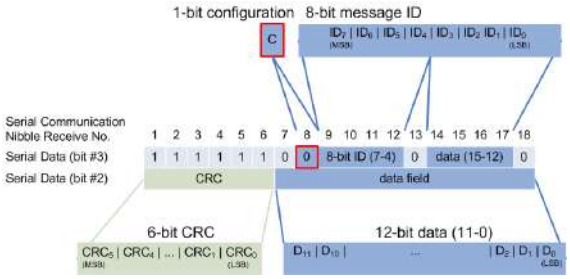

12-bit data and 8-bit message ID

14.14.2 SENT configuration

14.14.2.1 SENT configuration settings

Access: "Menu" > "Apps" > "Protocol" tab > "SENT" > "Setup".

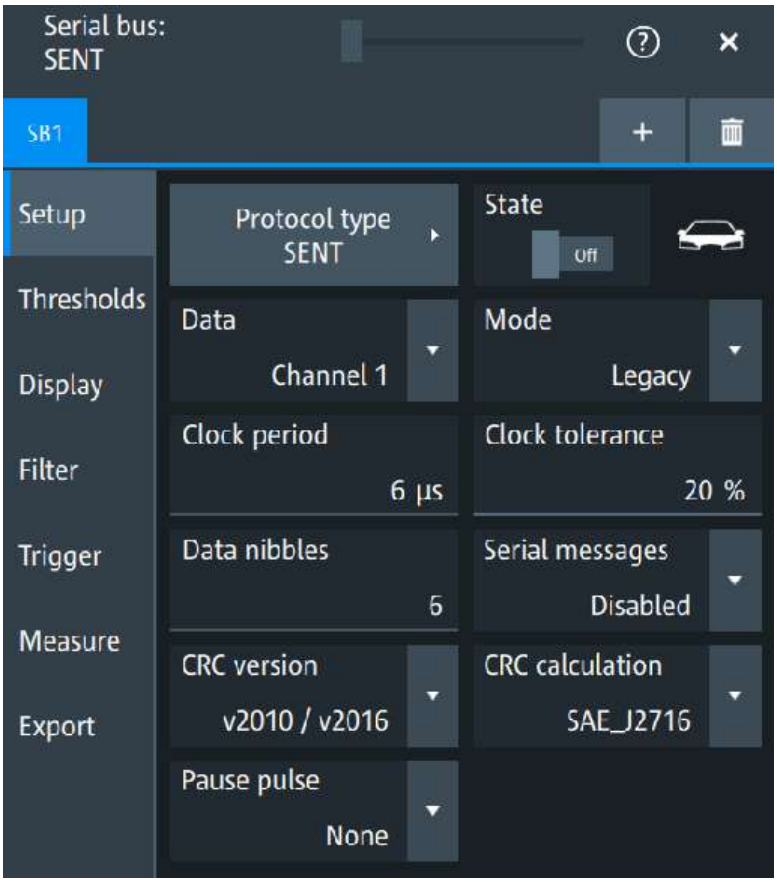

Make sure that the tab of the correct serial bus is selected.

Protocol type
Selects the protocol type to be decoded.

Remote command:
`SBUS<sb>:TYPE` on page 1489

Data
Sets the source of the data line.

Remote command:
`SBUS<sb>:SENT:DATA:SOURce` on page 1927

Mode
Selects the operating mode of the SENT protocol.

If "Mode" = "Legacy", the "SPC" mode is not supported.

The single point calibration ("SPC") mode was introduced in the SENT 2.0 specification. If "SPC" mode is selected, the SENT protocol allows for the calibration of a sensor's output by sending a single calibrated value. It is particularly useful for applications where a sensor needs to be calibrated to ensure accurate readings. The SPC mode typically involves the transmission of a single data frame that contains the calibrated value, which can then be used by the receiving device to interpret the sensor's output correctly.

Remote command:
`SBUS<sb>:SENT:MODE` on page 1928

Clock period
Sets the transmitter-specific nominal clock period (clock tick).

The clock period and signal length determine the speed of transmission.

Remote command:
`SBUS<sb>:SENT:CLKPeriod` on page 1925

Clock tolerance
Specifies a tolerated deviation of the clock.

Remote command:
`SBUS<sb>:SENT:CLKTolerance` on page 1926

Data nibbles
Sets the number of data units in a single transmission sequence.

The maximum number of data nibbles is 6.

Remote command:
`SBUS<sb>:SENT:DNIBbles` on page 1928

Serial message
Selects if serial messages are enabled or disabled.

Remote command:
SBUS<sb>:SENT:SFORmat on page 1930

CRC version
Selects the version that the CRC check is based on.

"Legacy" Based on the CRC calculation version used earlier than 2010.

"v2010/v2016" Based on the CRC calculation version updated in 2010/2016.

Remote command:
SBUS<sb>:SENT:CRCVersion on page 1926

CRC calculation
Selects the method for CRC calculation.

"SAE_J2716" Calculates the CRC according to the SAE standard.
For this method, the checksum is calculated over all nibbles except the communication and status nibble.

"TLE_4998X" Calculates the CRC according to the standard computing method for Infineon TLE_4998X sensors.
For this method, the checksum is calculated over all nibbles except the communication nibble.

Remote command:
SBUS<sb>:SENT:CRCMethod on page 1926

Pause pulse
Determines whether a pause pulse is transmitted after the checksum nibble.

You can use this pulse to create a transmission with a constant number of clock ticks. The pause pulse length can be between a minimum of 12 clock ticks up to 768 (3*256) ticks at a maximum.

Remote command:
SBUS<sb>:SENT:PPULse on page 1929

Frame length
Determines the frame length in terms of ticks. The dialog displays this settings parameter, if the signal has a constant frame length.

Remote command:
SBUS<sb>:SENT:PPFLength on page 1929

14.14.2.2 Threshold settings

Access: "Menu" > "Apps" > "Protocol" tab > "SENT" > "Thresholds".

Threshold
Sets the threshold for the data channel. Enter the value directly in the fields.

Additional to the threshold, you can also set a hysteresis.

Remote command:
SBUS<sb>:SENT:DATA:THReshold on page 1927
SBUS<sb>:SENT:DATA:HYSTeresis on page 1927

Show threshold lines
If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also Show threshold lines.

Remote command:
SBUS<sb>:THReshold on page 1492

14.14.2.3 Display settings

For details about the display settings, see Section 14.1.3.1, "Display settings", on page 511.

Decode layer
Selects the decode layer.

Decoding is performed in several steps, and the results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display.

Show symbols
You can load symbol lists, and activate its usage for decoding. As a result, an additional "Symbol" column appears in the "Decode results" table, containing the symbolic label.

For details, see Section 14.14.2.4, "SENT symbols", on page 789.

14.14.2.4 SENT symbols

Label lists are protocol-specific. For the SENT protocol, you can upload symbol lists as in the format shown in the following example.

Example: SENT symbols file

```
<sb:FRAME NAME="Diagnostic Error Codes" STATE="ON">
  <!-- Start of a Frame Definition -->
  <!-- This block defines the information of a Transmission Sequence
   or Serial Message:
   NAME => Symbolic Label of the Frame
   STATE [ON/OFF] => When ON, this frame Translation is taken into consideration.
                     When OFF, this frame Translation is skipped.-->
<sb:DESCRIPTION> used to diagnose the current SENT System</sb:DESCRIPTION>
  <!-- Doesn't affect the Translation -->
<sb:ID-VALUE>01</sb:ID-VALUE>
  <!-- ID Value of the Serial Message (in decimal) -->
  <!-- Absence of the ID-VALUE field implies that the current Frame Translation
   is to be used for Transmission Sequences and not for a Serial Message -->
<sb:ID-LENGTH>8</sb:ID-LENGTH>
  <!-- ID Length of the Serial Message (in bits) -->
<sb:DATA-SIZE>12</sb:DATA-SIZE>
  <!-- Data Length of the Serial Message (in bits) -->
<sb:SIGNALS>
```

```
  <!-- This block defines the information of the Signals embedded
   in the Data Field of the Frame (Transmission Sequence or Serial Message) -->
<sb:SIGNAL ID="Diagnostic">
  <!-- Unique ID of the Signal (no effect on Translation) -->
<sb:SHORT-NAME>Diagnostic Code</sb:SHORT-NAME>
  <!-- Name of the Signal -->
<sb:DESCRIPTION></sb:DESCRIPTION>
  <!-- Info Field (no effect on Translation) -->
<sb:BIT-POSITION>11</sb:BIT-POSITION>
  <!-- Starting Bit position of the Signal
   (The whole Data Field is represented as MSB -> LSB Sequence) -->
<sb:BIT-LENGTH>12</sb:BIT-LENGTH>
  <!-- Number of Bits representing the Signal Value -->
<sb:BYTE-ORDER>MSB</sb:BYTE-ORDER>
  <!-- Byte Order of the Signal Value [MSB or LSB], Default: MSB -->
<sb:VALUE-TYPE>ENUM</sb:VALUE-TYPE>
  <!-- Representation of the Bits [ENUM, UNSIGNED_INT, INT, FLOAT, DOUBLE],
   Default: UNSIGNED_INT
   The Signal Value is calculated according to the following:
   Translated_Value = Encoded_Value * FACTOR + OFFSET -->
<sb:FACTOR>1.0</sb:FACTOR>
  <!-- Signal Factor (decimal value)-->
<sb:OFFSET>0.0</sb:OFFSET>
  <!-- Signal Offset (decimal value)-->
<sb:MIN>0</sb:MIN>
  <!-- Minimum Signal Value (decimal value) -->
<sb:MAX>4096</sb:MAX>
  <!-- Maximum Signal Value (decimal value) -->
<sb:ENUM-VALUES>
  <!-- This block is only valid (and taken into consideration)
   when the VALUE-TYPE is ENUM
   It defines the Enumeration List Translation of the Signal -->
<sb:ENUM INDEX="0" LABEL="No Error"/>
   <!-- INDEX is the Enum Value (corresponds to the Signal Value in decimal),
    LABEL is the matching Translated Signal Value -->
<sb:ENUM INDEX="1" LABEL="Channel 1 out of range high"/>
</sb:ENUM-VALUES>
  <!-- End of Signal Enumeration List Definition -->
</sb:SIGNAL>
  <!-- End of a Signal Definition -->
  <!-- More Signals can be defined here! -->
</sb:SIGNALS>
  <!-- End of list of Signals Definition -->
</sb:FRAME>
  <!-- End of Frame Definition -->
```

14.14.3 SENT filter

Access: "Menu" > "Apps" > "Protocol" tab > "SENT" > "Filter" tab

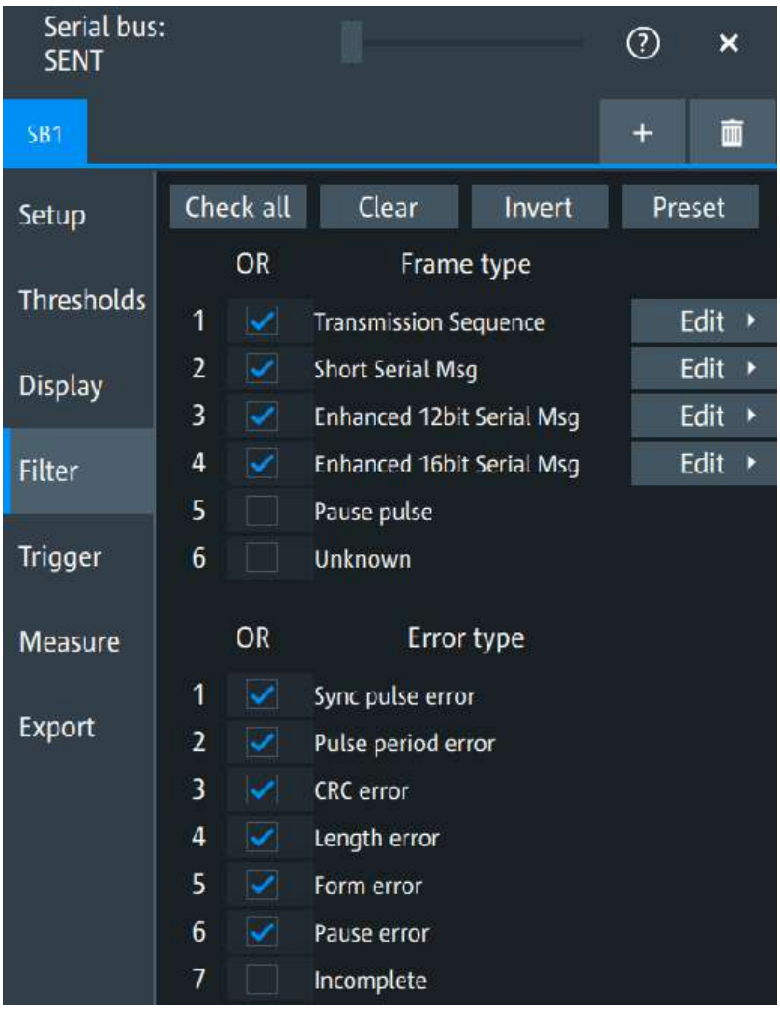

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all" Enables the filter for all available frames and error types.

"Clear" Disables the filter for all available frames and error types.

"Invert" Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types.

Remote command:
`SBUS<sb>:SENT:FILTer:CHKall` on page 1932
`SBUS<sb>:SENT:FILTer:CLR` on page 1932
`SBUS<sb>:SENT:FILTer:INVert` on page 1933
`SBUS<sb>:SENT:FILTer:RST` on page 1933

Enable
Enables the filtering on SENT frames. Only the frames that match the selected filter conditions are displayed.

Remote command:
`SBUS<sb>:SENT:FILTer:FRENable` on page 1933
`SBUS<sb>:SENT:FILTer:FRAMe<fr>:ENABle` on page 1933

Frame type
Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.

For selected frame types, you can also specify conditions for the value of the fields in the "Edit" dialog.

The following frame types are available: "Transmission Sequence", "Short Serial Msg", "Enhanced 12bit Serial Msg", "Enhanced 16bit Serial Msg", "Pause pulse", "Unknown".

Edit
Opens a dialog to define the details of the selected frame.

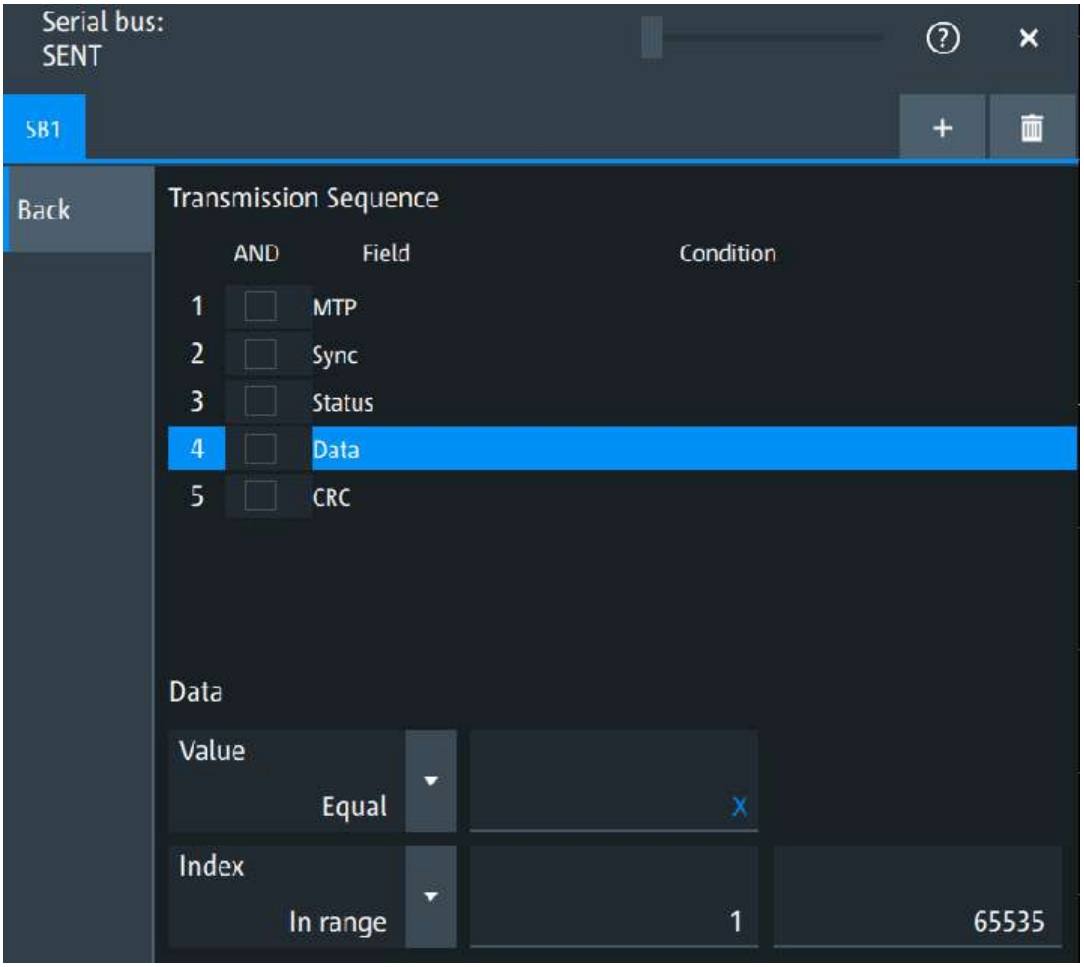

"Field" Enables the field type that you want to filter on for the selected frame. The following fields are available: "MTP", "Sync", "Status", "Data", "CRC", "ID".

Remote command:
SBUS<sb>:SENT:FILTer:FIENable on page 1935
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:ENABle on page 1935

"Condition" Displays the value condition for the selected field.

Remote command:
SBUS<sb>:SENT:FILTer:BIT on page 1933
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:BIT on page 1933

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
SBUS<sb>:SENT:FILTer:DMAX on page 1934
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:DMAX on page 1934
SBUS<sb>:SENT:FILTer:DMIN on page 1934
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:DMIN on page 1934
SBUS<sb>:SENT:FILTer:DOPerator on page 1935
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:DOPerator on page 1935

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
SBUS<sb>:SENT:FILTer:IMAX on page 1935
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:IMAX on page 1935
SBUS<sb>:SENT:FILTer:IMIN on page 1936
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:IMIN on page 1936
SBUS<sb>:SENT:FILTer:IOPerator on page 1936
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:IOPerator on page 1936

Error type
Enables filtering on the selected error type.

The available error types are "Sync pulse error", "Pulse period error", "CRC error", "Length error", "Form error", "Pause error", "Incomplete".

Remote command:
SBUS<sb>:SENT:FILTer:ERENable on page 1937
SBUS<sb>:SENT:FILTer:ERRor<n>:ENABle on page 1937

14.14.4 SENT format configuration

Access: "Menu" > "Apps" > "Protocol" tab > "SENT" > "Format".

See Section 14.1.5, "Format", on page 516.

Show format
Enables the format configuration and displays the frame formats in the honey-comb view and results. If enabled, the frame formats are also selectable for triggering and filtering.

Remote command:
SBUS<sb>:SENT:FORMat:SELect on page 1938

Add frame
Creates a frame format and adds it to the end of the frame list. A dialog opens to specify the frame details. The number of frame formats is limited to 100.

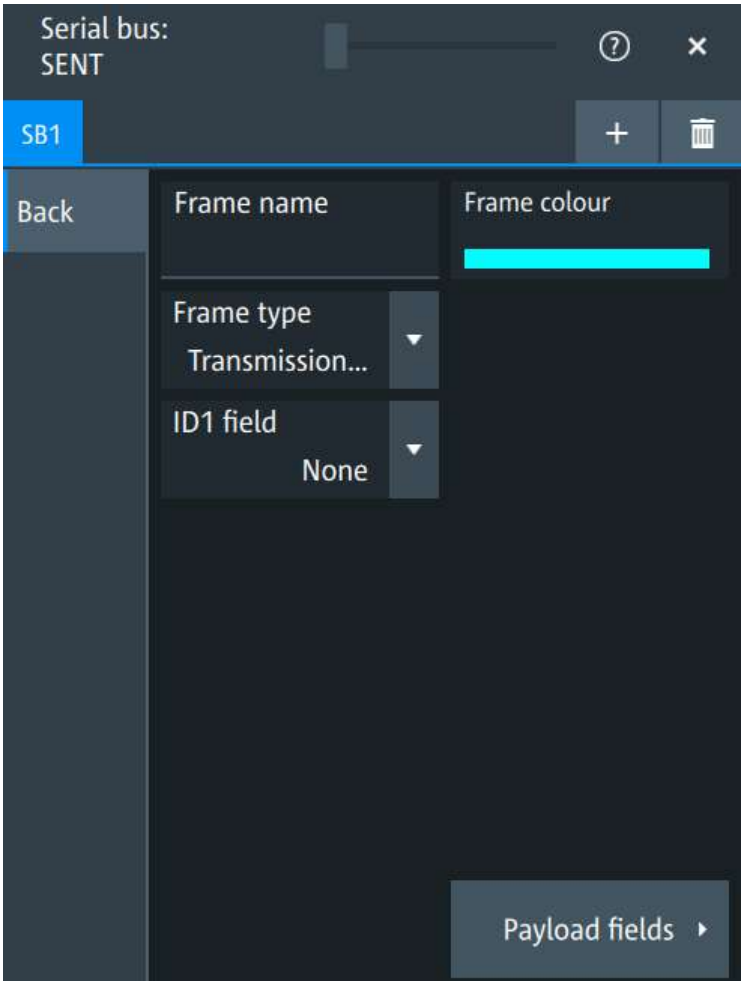

Remote command:
SBUS<sb>:SENT:FORMat:ADDFrame on page 1938

Edit list
Enables editing the frame list. If enabled, you can delete a frame format by clicking its "Delete" icon. In a list with several entries, you can move frame formats up or down by clicking the arrow buttons. To exit the editing mode, click "Edit list" again.

Remote command:
SBUS<sb>:SENT:FORMat:CLR on page 1939
SBUS<sb>:SENT:FORMat:FCOunt? on page 1939

Open
Opens a dialog for loading an existing list of frame formats in XML file format.

Remote command:
SBUS<sb>:SENT:FORMat:LOAD on page 1938

Save as
Opens a dialog for saving your current list of frame formats to an XML file. Saved frame formats can support efficient and convenient working.

Remote command:
SBUS<sb>:SENT:FORMat:SAVE on page 1938

Frame name
Specifies an arbitrary name to label the currently selected frame format. Ideally, use speaking names according to the specifications of the applicable protocol standard. Frame names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:SENT:FORMat:FRAMe<fr>:NAME on page 1940

Frame color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:SENT:FORMat:FRAMe<fr>:COLor on page 1940

Frame type
Select an original frame type.

Remote command:
SBUS<sb>:SENT:FORMat:FRAMe<fr>:TYPE on page 1940

ID<n> field
Select the first to third identifying field types.

Remote command:
SBUS<sb>:SENT:FORMat:FRAMe<fr>:ID1Field on page 1941
SBUS<sb>:SENT:FORMat:FRAMe<fr>:ID2Field on page 1941
SBUS<sb>:SENT:FORMat:FRAMe<fr>:ID3Field on page 1941

ID<n> value
Select the value of the corresponding field type.

Remote command:
SBUS<sb>:SENT:FORMat:FRAMe<fr>:ID1Value on page 1941
SBUS<sb>:SENT:FORMat:FRAMe<fr>:ID2Value on page 1941
SBUS<sb>:SENT:FORMat:FRAMe<fr>:ID3Value on page 1941

Payload fields
Opens the payload field configuration dialog. The format configuration of payload fields is optional and replaces the payload data of the identified frame.

Add field
Creates a new field description for the currently selected frame format and adds it to the end of the field list with color, bit position (order of transmission) and name. Brackets indicate how often bits will be repeated, [] indicates that this is an open array.

A dialog opens to specify the field details. The number of field descriptions is limited to 100.

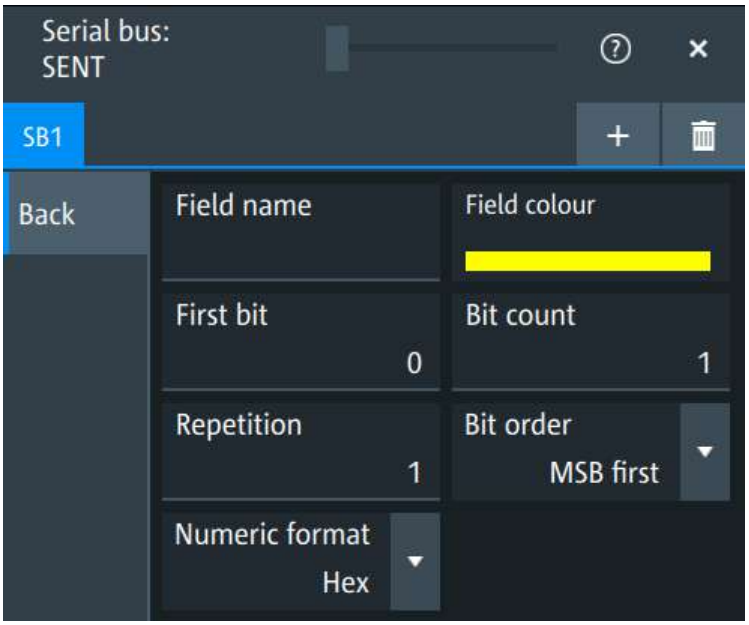

Remote command:
SBUS<sb>:SENT:FORMat:FRAMe<fr>:ADDField on page 1939

Field name
Specifies an arbitrary name for the currently selected field description. Ideally, use speaking names.

Field names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:NAME on page 1941

Field color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:COLor on page 1941

First bit
In order of transmission, sets the first bit of this field in the payload.

Remote command:
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:FSTBit on page 1942

Bit count
Sets the number of bits in the selected field, i.e., the field's length. Selecting the value opens a keypad showing allowed minimum and maximum values. You can set "Min", "Max", "Reset" or adjust with the "Inc" or "Dec" buttons by 1 or 10 (step size dependent). Use "CE" to restore the value used before the keypad opened.

If the "Condition" pattern length does not match the "Bit count":
- Too long, it is truncated.
- Too short, it is left-padded with 0.

Both truncation and padding happen on the left side of the condition and follow the configured "Bit order".

Examples for "Condition" "=100"):
- "Bit order" is "MSB":
  - Bit count = 2: truncated. Result: =00
  - Bit count = 4: padded. Result: =0100
- "Bit order" is LSB first (equivalent MSB-first representation is =001):
  - Bit count = 2: truncated. Result: =00 (LSB first), =00 (MSB first)
  - Bit count = 4: padded. Result: =0100 (LSB first), =0010 (MSB first)

Remote command:
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:BITCount on page 1942

Repetition
Defines the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Remote command:
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:REPetition on page 1943

Bit order
Selects, in which order the bits of a field's "Condition" value are evaluated:

- "LSB first": little endian, least significant bit first
- "MSB first": big endian, most significant bit first

Remote command:
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:BITorder on page 1943

Numeric format
Selects how the "Condition" value is interpreted:

- Symbolic: Assigns a symbolic translation on the data fields. Only available for custom protocols.
- Value list: Assigns a custom name to each hexadecimal value; any value without an assigned value is shown as "Undefined".

- A*X+B: Assigns a linear function on the data fields.
- For details on the other numeric formats, see "Format-specific information" on page 532.

The following rules apply:

- If the condition contains at least one of "H", "h", "L", "l", "X", "x", and all other characters are only "1" and/or "0", the value is always treated as binary, regardless of the selected numeric format.
- "x" and "X" are wildcards and are supported only in binary format or when the string is auto-interpreted as binary per the rule above.
  Examples for format set to "HEX":
  - "=1HL111000": valid (read as binary)
  - "=0x10101": valid (read as binary; "x" acts as wildcard, not a hex prefix)
  - "=1010": valid (read as HEX, with a total of 16 bits)
  - "=0x5A": valid (read as HEX "5A", because "0x" is a valid hex prefix; entering 5A alone is recommended)
  - "=5X12": invalid
  - "=1H33": invalid

Remote command:
`SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:FORMat` on page 1943

Add value
Creates a new hexagonal value for customization.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:ADDValue` on page 1944

Value
Defines the hexagonal value to convert it into a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue` on page 1945

Label
Defines the label to convert the corresponding hexagonal value to a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel` on page 1945

Unit
Defines a unit for the linear function.

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
`SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:UNIT` on page 1945

Parameter A,B
Defines the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
`SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:PARA` on page 1946
`SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:PARB` on page 1946

14.14.5 SENT software trigger

14.14.5.1 Setup A trigger

Before setting up the software trigger for the protocols, a trigger A event needs to be set up.

14.14.5.2 Software trigger settings

Access: "Menu" > "Apps" > "Protocol" tab > "SENT" > "Trigger" tab > "Setup Software Trigger" > "Setup SB Trigger"

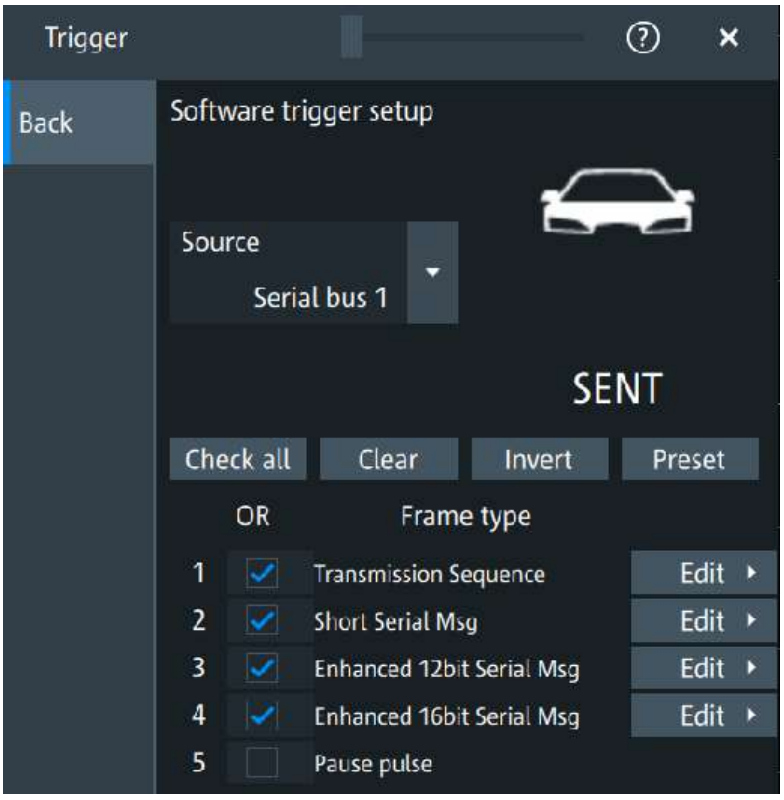

In the "Software Trigger" tab, you can define the settings to trigger on the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to trigger on.

"Check all" Enables the software trigger for all available frames and error types.

"Clear" Disables the software trigger for all available frames and error types.

"Invert" Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types for the software trigger.

Remote command:
`TRIGger:SBSW:SENT:CHKall` on page 1947
`TRIGger:SBSW:SENT:CLR` on page 1947
`TRIGger:SBSW:SENT:INVert` on page 1947
`TRIGger:SBSW:SENT:RST` on page 1947

Frame type
Selects the frame type that you want to trigger on. You can trigger on all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

The following frame types are available: "Transmission Sequence", "Short Serial Msg", "Enhanced 12bit Serial Msg", "Enhanced 16bit Serial Msg", "Pause pulse", "Unknown".

Remote command:
`TRIGger:SBSW:SENT:FRENable` on page 1948
`TRIGger:SBSW:SENT:FRAMe<fr>:ENABle` on page 1948

Edit
Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

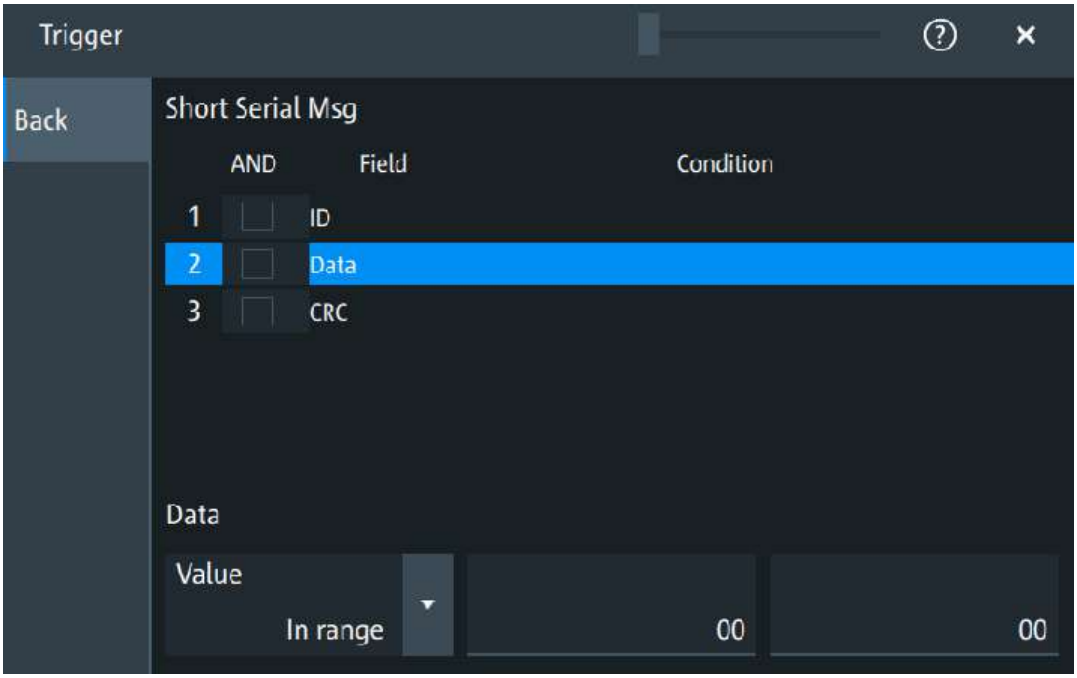

"Field" Enables the field type that you want to trigger on for the selected frame.
The following fields are available: "MTP", "Sync", "Status", "Data", "CRC", "ID".

Remote command:
`TRIGger:SBSW:SENT:FIENable` on page 1948
`TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:ENABle` on page 1948

"Condition" Displays the value condition for the selected field.

Remote command:
`TRIGger:SBSW:SENT:BIT` on page 1948
`TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:BIT` on page 1948

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
`TRIGger:SBSW:SENT:DMAX` on page 1949
`TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:DMAX` on page 1949
`TRIGger:SBSW:SENT:DMIN` on page 1949
`TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:DMIN` on page 1949
`TRIGger:SBSW:SENT:DOPerator` on page 1949
`TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:DOPerator` on page 1949

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
TRIGger:SBSW:SENT:IMAX on page 1950
TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:IMAX on page 1950
TRIGger:SBSW:SENT:IMIN on page 1950
TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:IMIN on page 1950
TRIGger:SBSW:SENT:IOPerator on page 1951
TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:IOPerator on page 1951

Error type
Enables triggering on the selected error type.

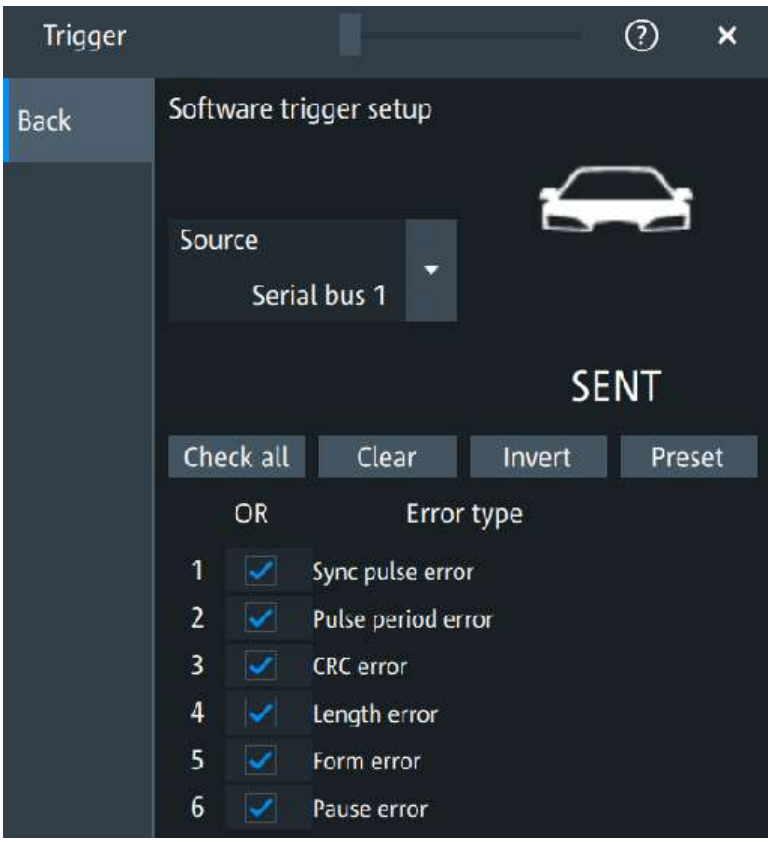

The following error types are available: "Sync pulse error", "Pulse period error", "CRC error", "Length error", "Form error", "Pause error".

Remote command:
TRIGger:SBSW:SENT:ERENable on page 1951
TRIGger:SBSW:SENT:ERRor<m>:ENABle on page 1951

14.14.6 Measure

The "Setup Measurement" button opens the dialog for automatic measurements in the "Protocol" category for the selected serial bus.

See Section 10.2.8.2, "Settings for protocol measurements", on page 311.

14.14.7 SENT decode results

To enable the decoding, see Section 14.1.9.3, "Decoding protocol signals", on page 531.

Decode results table

The "Decode results" table contains information about all decoded frames.

Figure 14-40: Decoded SENT signal

The decode results table contains information about all decoded frames.

Table 14-26: Content of the decode results table

Column	Description
Index	Index of the decoded frame
State	Overall state of the frame
Start	Time of frame start
Frame type	The type of frame
Symbolic name	Symbolic label of the frame. Available only, if "Show symbols" is enabled in the "Display" tab and a symbols list is loaded.
Sync time	Synchronisation time

Column	Description
Status [bin]	Status value
Data nibbles	Values of the data nibbles. Select the data format in the "Display" tab.
ID value	Identifier value
Clock rate	Value of the clock rate

When you select a frame in the decode results table, its field content is shown in the details table to the right.

Table 14-27: Content of the frame details table

Column	Description
Index	Number of the decoded field
Label	Name of the field
State	State of the field
Value	Value of the field

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 1491

Remote commands

Remote commands to retrieve decode results are described in Section 18.18.15.5, "Decode results", on page 1952.

You can also export the decode results. For details see Section 14.1.9.4, "Exporting decode results", on page 531.

Example SENT export file

```
Index,Start,Stop,State,Type,Symbol,SyncDur,Status,CRC,ID,MTP,SensorRespTime,BR
1 -0.0534 -0.0523 'OK' 'TRSQ' 0.000280 3h Bh - - - 199900
2 -0.0521 -0.0509 'PULS' 'TRSQ' 0.000280 3h Bh - - - 199900
3 -0.050  -0.0499 'OK' 'TRSQ' 0.000280 0h Fh - - - 199900
4 -0.0496 -0.0486 'OK' 'TRSQ' 0.000280 0h 4h - - - 199900
5 -0.0483 -0.0472 'CRC' 'TRSQ' 0.000280 0h 4h - - - 199900
6 -0.0470 -0.0460 'OK' 'TRSQ' 0.000280 0h 1h - - - 199900
7 -0.0457 -0.0447 'OK' 'TRSQ' 0.000280 0h 0h - - - 199900
8 -0.0447 -0.0435 'OK' 'TRSQ' 0.000280 0h Bh - - - 199900
9 -0.0432 -0.0422 'OK' 'TRSQ' 0.000280 0h Eh - - - 199900
10 -0.041 -0.0410 'OK' 'TRSQ' 0.000280 0h 3h - - - 199900

Details frame 1
Index    State    Value
```

```
1    'OK'    14h
2    'OK'    15h
3    'OK'    16h
4    'OK'    17h
5    'OK'    18h
6    'OK'    19h
7    'OK'    1Ah
8    'OK'    1Bh

Details frame 2
Index    State    Value
1    'OK'    1Ch
2    'OK'    1Dh
3    'OK'    1Eh
4    'OK'    1Fh
5    'OK'    20h
6    'OK'    21h
7    'OK'    22h
8    'OK'    23h
9    'OK'    24h
```

14.15 ARINC 429 (aerospace electronics, option R&S MXO5-K530)

The ARINC 429 is a specification that defines the characteristics of an avionic data bus used on commercial and transport aircraft.

- About the ARINC 429 805
- ARINC 429 configuration 806
- ARINC 429 filter 810
- ARINC 429 format configuration 812
- ARINC 429 software trigger 818
- Measure 820
- ARINC 429 decode results 820

14.15.1 About the ARINC 429

In an ARINC 429 system, a single transmitter/source is connected to 1 to 20 receivers/sinks on one twisted wire pair. The bus uses differential signals. The ARINC 429 standard uses a simplex communication - data may be transmitted in only one direction. The information is transmitted over the bus in defined series of words.

Word Format

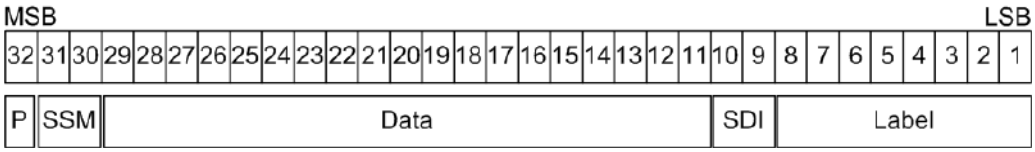

Figure 14-41: Structure of an ARINC 429 word

An ARINC 429 word is 32-bits and consists of the following parts (see Figure 14-41):

- Parity: the most significant bit (MSB). Checks if there are bit errors during the transmission. The total number of logic 1 bits for the word shall be odd.
- Sign/Status Matrix (SSM): the value of these bits depends on the data type. It may be used to report the status of hardware equipment.
- Data:
  - Binary (BNR): stores the data as a binary number.
  - Binary Coded Decimal (BCD): uses 4 data field bits to represent a decimal digit.
  - Discrete data: a combination of BNR and/ or BCD or individual bits that express specific equipment conditions.
  - Maintenance data and acknowledgment
  - Williamsburg / Buckhorn protocol: a bit-oriented protocol that is used for file transfer.
- Source/Destination Identifier (SDI): indicates the intended receiver or the transmitting subsystem.
- Label: gives information about the word's data type.

For comfortable analysis, you can load an editable label list, to interpret transferred numeric values as meaningful text labels.

14.15.2 ARINC 429 configuration

14.15.2.1 ARINC 429 configuration settings

Access: "Menu" > "Apps" > "Protocol" tab > "ARINC 429" > "Setup".

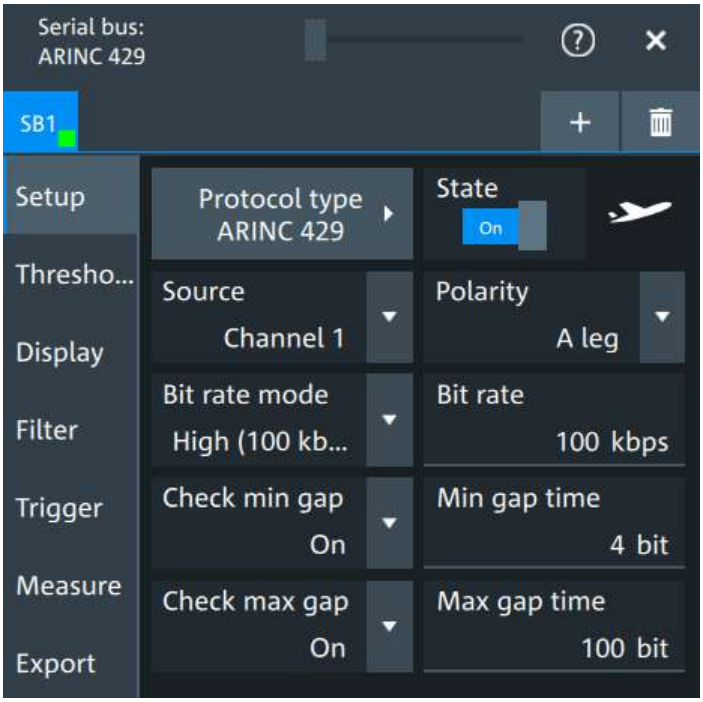

Source
Sets the source of the selected data line. Usually, the source is one of the analog channels.

Remote command:
`SBUS<sb>:ARINc:SOURce` on page 1962

Polarity
Selects the wire on which the bus signal is measured : A Leg or B Leg. The setting affects the digitization of the signal.

Remote command:
`SBUS<sb>:ARINc:POLarity` on page 1962

Bit rate mode, Bit rate
Selects the number of transmitted bits per second. The value can be set to high speed (100 kbit/s) or low speed (12.0- 14.5 kbit/s).

Remote command:
`SBUS<sb>:ARINc:BRMode` on page 1961
`SBUS<sb>:ARINc:BRValue` on page 1961

Min gap time,Max gap time
The gap time defines the idle time between two words, which is needed for word synchronization. The beginning of the first bit after the gap marks the start of a new word.

If "Check min gap" and/or "Check max gap" are enabled, the instrument detects the specified gaps during decoding.

You can define a minimum idle time "Min gap time", and/or a maximum time "Max gap time". The standard defines a minimum of 4-bit times to separate two subsequent words.

Remote command:
SBUS<sb>:ARINc:MAXGap:BITS on page 1964
SBUS<sb>:ARINc:MAXGap:SELect on page 1964
SBUS<sb>:ARINc:MINGap:BITS on page 1964
SBUS<sb>:ARINc:MINGap:SELect on page 1965

14.15.2.2 Thresholds

Access: "Menu" > "Apps" > "Protocol" tab > "ARINC 429" > "Thresholds".

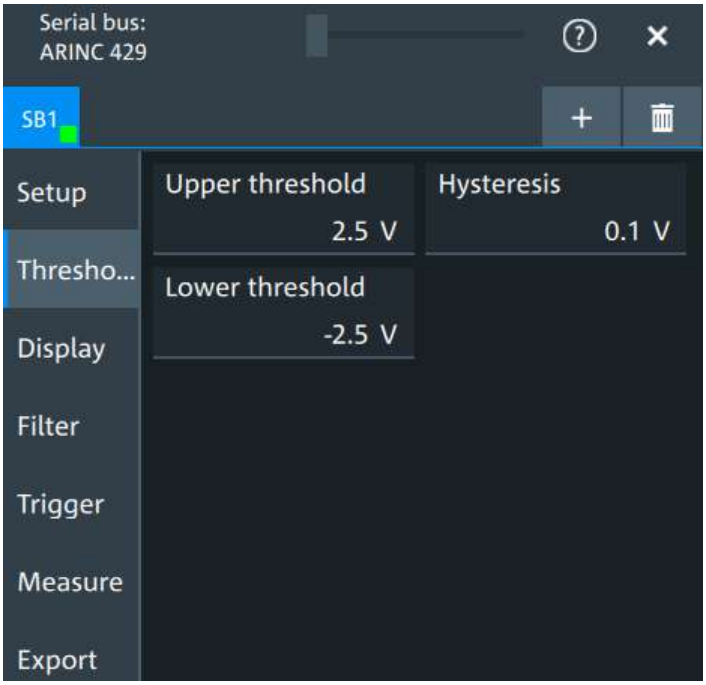

Threshold
Sets the upper and lower threshold for the source channel. Enter the value directly in the fields.

Additional to the threshold, you can also set a hysteresis.

Remote command:
SBUS<sb>:ARINc:THReshold:HIGH on page 1962
SBUS<sb>:ARINc:THReshold:LOW on page 1963
SBUS<sb>:ARINc:THReshold:HYSTeresis on page 1963

Show threshold lines
If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also Show threshold lines.

Remote command:
SBUS<sb>:THReshold on page 1492

14.15.2.3 Display settings

For details about the display settings, see Section 14.1.3.1, "Display settings", on page 511.

Decode layer
Selects the decode layer.

Decoding is performed in several steps, and the results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display.

"Off"	Disables the display of the decode layer.
"Ternary symbols"	Enables the display of the raw, ternary encoded symbols, consisting of the three states "-1", "0" and "+1".
"Bits"	Enables the display of all bits.
"Words"	Enables the display of all words.

Show symbols
Symbol lists are protocol-specific. Label lists for ARINC 429 are available in CSV format.

For details, see Section 14.15.2.4, "ARINC 429 symbols", on page 809.

Remote command:
SBUS<sb>:ARINc:SYMBols on page 1963
SBUS<sb>:ARINc:NEWList on page 1963

14.15.2.4 ARINC 429 symbols

Label lists are protocol-specific. An ARINC 429 label file contains two values for each identifier:

- "Arinc Label": the ARINC 429 label value that identifies the data type and the parameters associated with it. The usual data format is octal.
- "Symbolic label": symbolic name of the label, specifying its function.

Example: ARINC 429 PTT file

```
# ------------------------------------------------------------------------
@FILE_VERSION = 1.0
@PROTOCOL_NAME = arinc429
# ------------------------------------------------------------------------
# Labels for ARINC 429 protocol
#   Column order: Arinc Label, Symbolic Label
# ------------------------------------------------------------------------
# ----Definition----
001o, Distance to Go
002o, Time to Go
```

```
010o, Present Position - Latitude
011o, Present Position - Longitude
014o, Magnetic Heading
015o, Wind Speed
075o, Gross Weight
125o, Universal Time Coordinated
# ------------------------------------------------------------------------------
s
```

14.15.3 ARINC 429 filter

Access: "Menu" > "Apps" > "Protocol" tab > "ARINC 429" > "Filter" tab

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

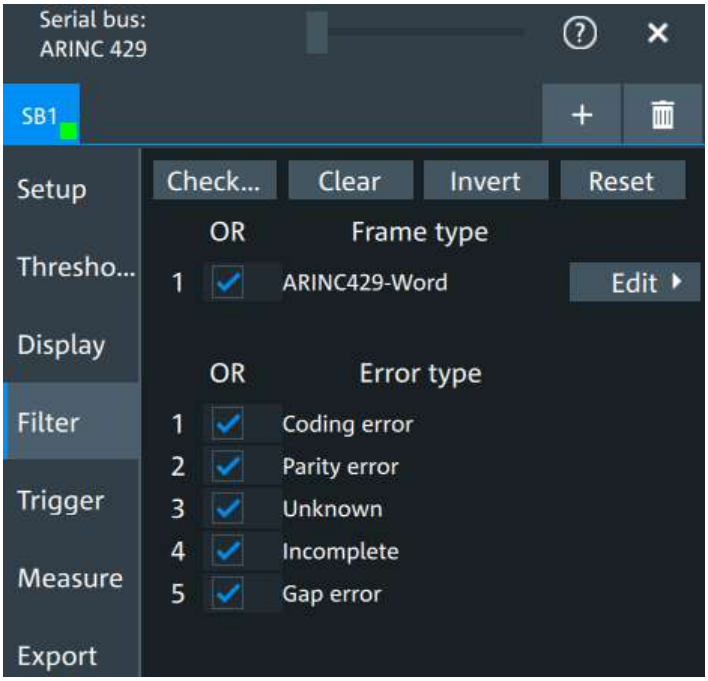

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all" Enables the filter for all available frames and error types.

"Clear" Disables the filter for all available frames and error types.

"Invert" Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types.

Remote command:
`SBUS<sb>:ARINc:FILTer:RST` on page 1967
`SBUS<sb>:ARINc:FILTer:INVert` on page 1967

SBUS<sb>:ARINc:FILTer:CHKall on page 1966
SBUS<sb>:ARINc:FILTer:CLR on page 1966

Enable
Enables the filtering on ARINC 429 frames. Only the frames that match the selected filter conditions are displayed.

Remote command:
SBUS<sb>:ARINc:FILTer:FRENable on page 1969
SBUS<sb>:ARINc:FILTer:FRAMe<fr>:ENABle on page 1969

Frame type
Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.

For selected frame types, you can also specify conditions for the value of the fields in the "Edit" dialog.

Edit
Opens a dialog to define the details of the selected frame.

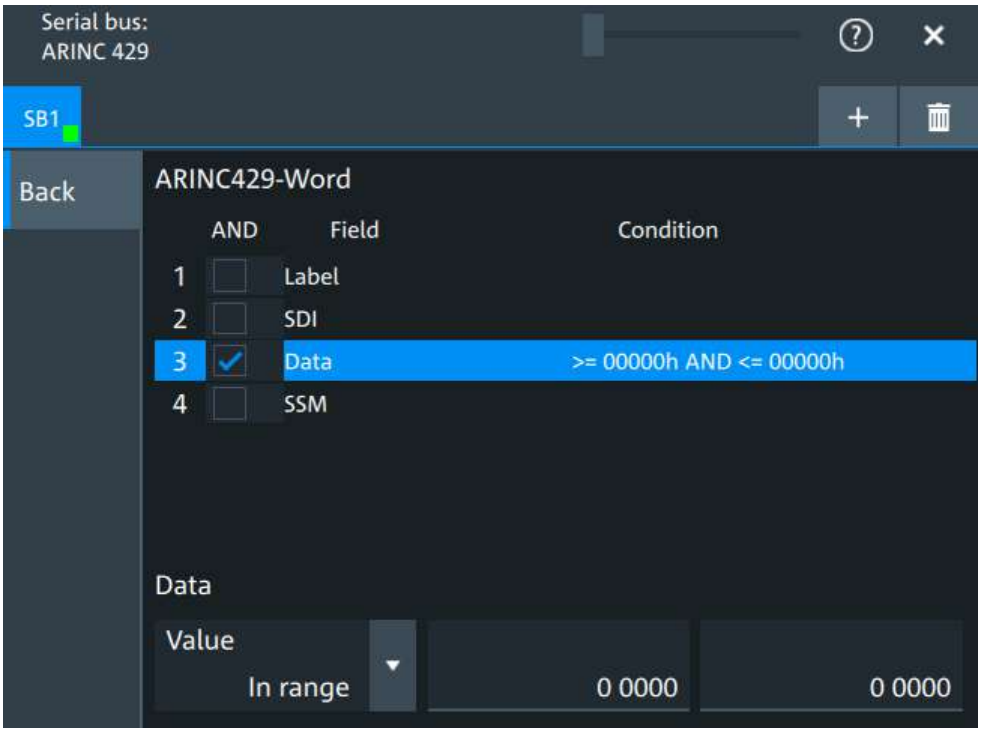

"Field" Enables the field type that you want to filter on for the selected frame. The available fields are "Label", "SDI", "Data", "SSM".

Remote command:
SBUS<sb>:ARINc:FILTer:FIENable on page 1969
SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:ENABle on page 1969

"Condition" Displays the value condition for the selected field.

Remote command:
SBUS<sb>:ARINc:FILTer:BIT on page 1967
SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:BIT on page 1967

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
SBUS<sb>:ARINc:FILTer:DMAX on page 1968
SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:DMAX on page 1968
SBUS<sb>:ARINc:FILTer:DMIN on page 1968
SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:DMIN on page 1968
SBUS<sb>:ARINc:FILTer:DOPerator on page 1969
SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:DOPerator on page 1969

Error type
Enables filtering on the selected error type.

The available error types are "Coding error", "Parity error", "Unknown", "Incomplete", "Gap error".

Remote command:
SBUS<sb>:ARINc:FILTer:ERENable on page 1968
SBUS<sb>:ARINc:FILTer:ERRor<n>:ENABle on page 1968

14.15.4 ARINC 429 format configuration

Access: "Menu" > "Apps" > "Protocol" tab > "ARINC 429" > "Format".

See Section 14.1.5, "Format", on page 516.

Show format
Enables the format configuration and displays the frame formats in the honey-comb view and results. If enabled, the frame formats are also selectable for triggering and filtering.

Remote command:
SBUS<sb>:ARINc:FORMat:SELect on page 1970

Add frame
Creates a frame format and adds it to the end of the frame list. A dialog opens to specify the frame details. The number of frame formats is limited to 100.

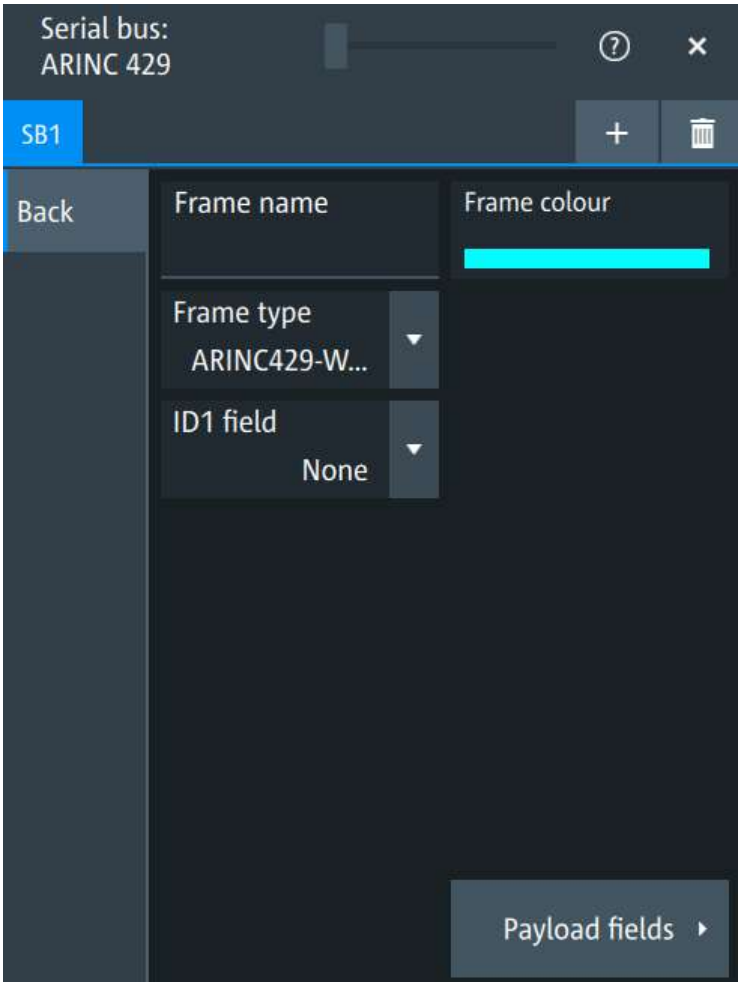

Remote command:
SBUS<sb>:ARINc:FORMat:ADDFrame on page 1971

Edit list
Enables editing the frame list. If enabled, you can delete a frame format by clicking its "Delete" icon. In a list with several entries, you can move frame formats up or down by clicking the arrow buttons. To exit the editing mode, click "Edit list" again.

Remote command:
SBUS<sb>:ARINc:FORMat:CLR on page 1972
SBUS<sb>:ARINc:FORMat:FCOunt? on page 1972

Open
Opens a dialog for loading an existing list of frame formats in XML file format.

Remote command:
SBUS<sb>:ARINc:FORMat:LOAD on page 1971

Save as
Opens a dialog for saving your current list of frame formats to an XML file. Saved frame formats can support efficient and convenient working.

Remote command:
SBUS<sb>:ARINc:FORMat:SAVE on page 1971

Frame name
Specifies an arbitrary name to label the currently selected frame format. Ideally, use speaking names according to the specifications of the applicable protocol standard. Frame names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:NAME on page 1973

Frame color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:COLor on page 1973

Frame type
Select an original frame type.

Remote command:
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:TYPE on page 1973

ID<n> field
Select the first to third identifying field types.

Remote command:
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ID1Field on page 1973
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ID2Field on page 1973
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ID3Field on page 1973

ID<n> value
Select the value of the corresponding field type.

Remote command:
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ID1Value on page 1974
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ID2Value on page 1974
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ID3Value on page 1974

Payload fields
Opens the payload field configuration dialog. The format configuration of payload fields is optional and replaces the payload data of the identified frame.

Add field
Creates a new field description for the currently selected frame format and adds it to the end of the field list with color, bit position (order of transmission) and name. Brackets indicate how often bits will be repeated, [] indicates that this is an open array.

A dialog opens to specify the field details. The number of field descriptions is limited to 100.

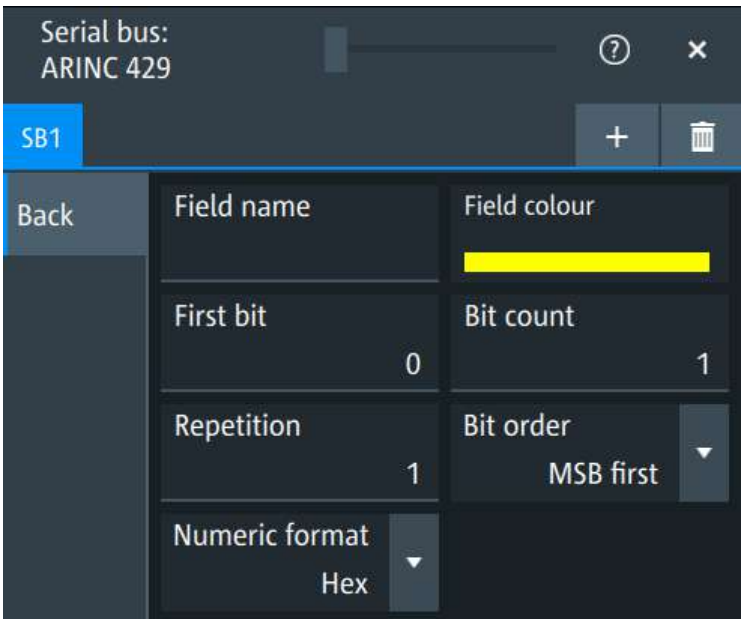

Remote command:
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ADDField on page 1972

Field name
Specifies an arbitrary name for the currently selected field description. Ideally, use speaking names.

Field names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:NAME on page 1974

Field color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:COLor on page 1974

First bit
In order of transmission, sets the first bit of this field in the payload.

Remote command:
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:FSTBit on page 1975

Bit count
Sets the number of bits in the selected field, i.e., the field's length. Selecting the value opens a keypad showing allowed minimum and maximum values. You can set "Min", "Max", "Reset" or adjust with the "Inc" or "Dec" buttons by 1 or 10 (step size dependent). Use "CE" to restore the value used before the keypad opened.

If the "Condition" pattern length does not match the "Bit count":
- Too long, it is truncated.

- Too short, it is left-padded with 0.

Both truncation and padding happen on the left side of the condition and follow the configured "Bit order".

Examples for "Condition" "=100"):

- "Bit order" is "MSB":
  - Bit count = 2: truncated. Result: =00
  - Bit count = 4: padded. Result: =0100
- "Bit order" is LSB first (equivalent MSB-first representation is =001):
  - Bit count = 2: truncated. Result: =00 (LSB first), =00 (MSB first)
  - Bit count = 4: padded. Result: =0100 (LSB first), =0010 (MSB first)

Remote command:
`SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:BITCount` on page 1975

Repetition
Defines the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Remote command:
`SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:REPetition` on page 1975

Bit order
Selects, in which order the bits of a field's "Condition" value are evaluated:

- "LSB first": little endian, least significant bit first
- "MSB first": big endian, most significant bit first

Remote command:
`SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:BITorder` on page 1976

Numeric format
Selects how the "Condition" value is interpreted:

- Symbolic: Assigns a symbolic translation on the data fields. Only available for custom protocols.
- Value list: Assigns a custom name to each hexadecimal value; any value without an assigned value is shown as "Undefined".
- A*X+B: Assigns a linear function on the data fields.
- For details on the other numeric formats, see "Format-specific information" on page 532.

The following rules apply:

- If the condition contains at least one of "H", "h", "L", "l", "X", "x", and all other characters are only "1" and/or "0", the value is always treated as binary, regardless of the selected numeric format.
- "x" and "X" are wildcards and are supported only in binary format or when the string is auto-interpreted as binary per the rule above.
  Examples for format set to "HEX":
  - "=1HL111000": valid (read as binary)
  - "=0x10101": valid (read as binary; "x" acts as wildcard, not a hex prefix)
  - "=1010": valid (read as HEX, with a total of 16 bits)
  - "=0x5A": valid (read as HEX "5A", because "0x" is a valid hex prefix; entering 5A alone is recommended)

– "=5X12": invalid
– "=1H33": invalid

Remote command:
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:FORMat on page 1976

Add value
Creates a new hexagonal value for customization.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:ADDValue on page 1977

Value
Defines the hexagonal value to convert it into a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue on page 1977

Label
Defines the label to convert the corresponding hexagonal value to a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel on page 1978

Unit
Defines a unit for the linear function.

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:UNIT on page 1978

Parameter A,B
Defines the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:PARA on page 1979
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:PARB on page 1979

14.15.5 ARINC 429 software trigger

14.15.5.1 Setup A trigger

Before setting up the software trigger for the protocols, a trigger A event needs to be set up.

14.15.5.2 Software trigger settings

Access: "Menu" > "Apps" > "Protocol" tab > "ARINC 429" > "Trigger" tab > "Setup Software Trigger"

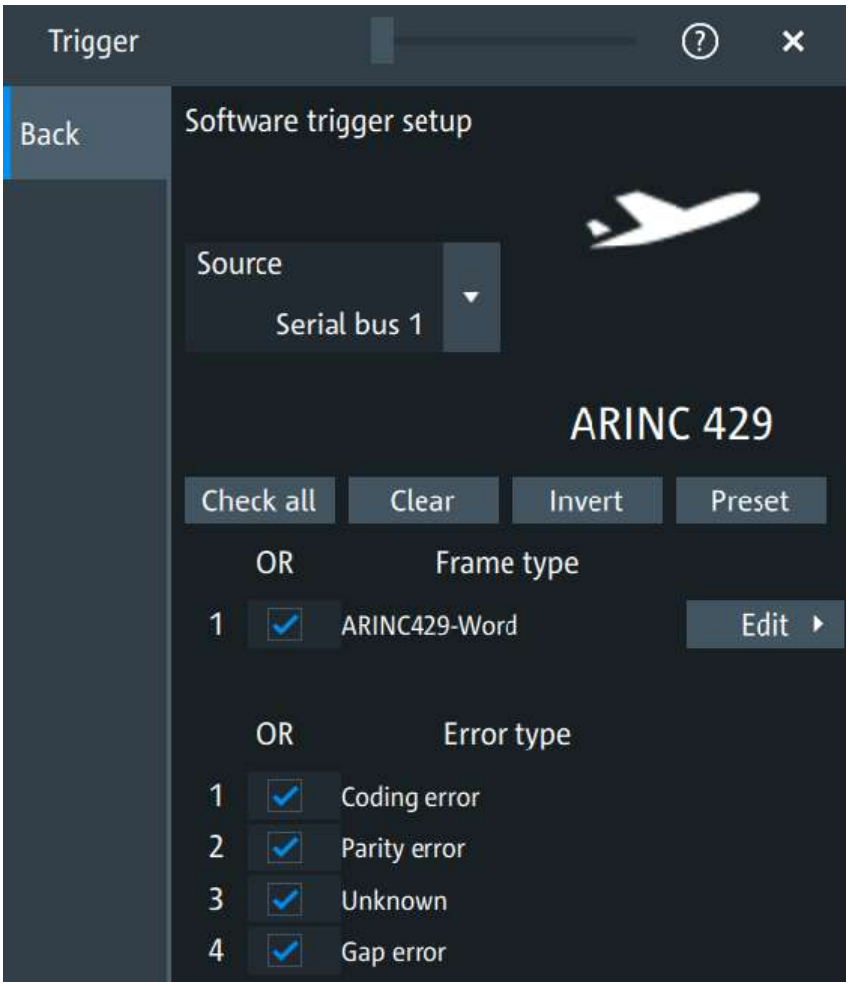

In the "Software Trigger" tab, you can define the settings to trigger on the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to trigger on.

"Check all" Enables the software trigger for all available frames and error types.

"Clear" Disables the software trigger for all available frames and error types.

"Invert" Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types for the software trigger.

Remote command:
`TRIGger:SBSW:ARINc:CHKall` on page 1980
`TRIGger:SBSW:ARINc:CLR` on page 1980
`TRIGger:SBSW:ARINc:INVert` on page 1980
`TRIGger:SBSW:ARINc:RST` on page 1980

Frame type
Selects the frame type that you want to trigger on. You can trigger on all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

The following frames are available: "ARINC429-Word".

Remote command:
`TRIGger:SBSW:ARINc:FRENable` on page 1980
`TRIGger:SBSW:ARINc:FRAMe<fr>:ENABle` on page 1980

Edit
Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

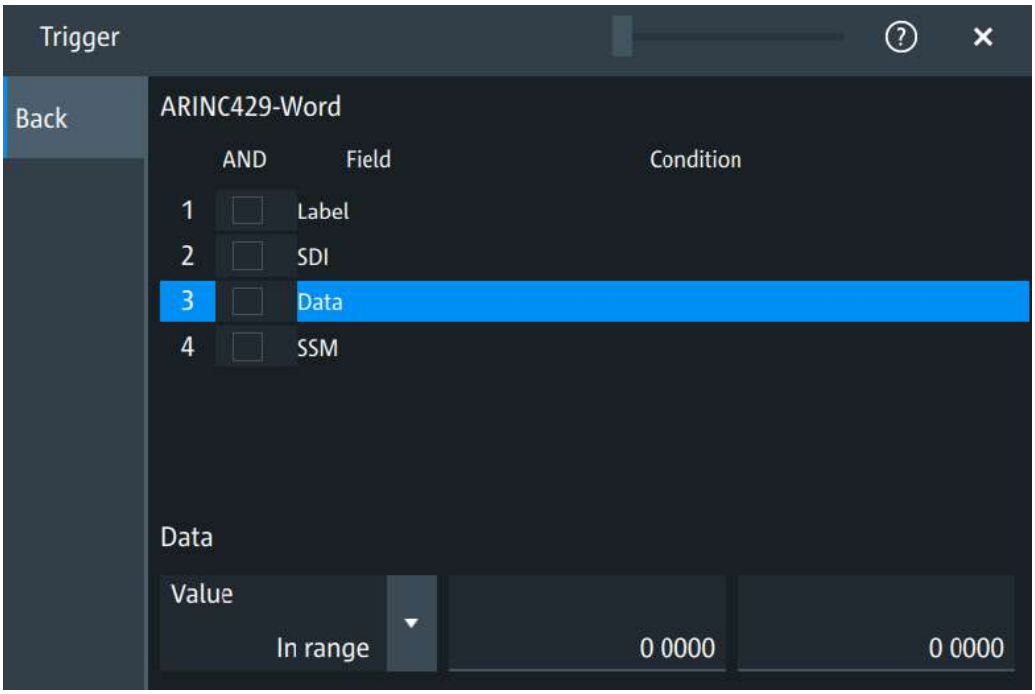

"Field" Enables the field type that you want to trigger on for the selected frame.
The available fields are "Label", "SDI", "Data", "SSM".

Remote command:
TRIGger:SBSW:ARINc:FIENable on page 1982
TRIGger:SBSW:ARINc:FRAMe<fr>:FLD<fl>:ENABle on page 1982

"Condition" Displays the value condition for the selected field.

Remote command:
TRIGger:SBSW:ARINc:BIT on page 1981
TRIGger:SBSW:ARINc:FRAMe<fr>:FLD<fl>:BIT on page 1981

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
TRIGger:SBSW:ARINc:DMAX on page 1981
TRIGger:SBSW:ARINc:FRAMe<fr>:FLD<fl>:DMAX on page 1981
TRIGger:SBSW:ARINc:DMIN on page 1981
TRIGger:SBSW:ARINc:FRAMe<fr>:FLD<fl>:DMIN on page 1981
TRIGger:SBSW:ARINc:DOPerator on page 1982
TRIGger:SBSW:ARINc:FRAMe<fr>:FLD<fl>:DOPerator on page 1982

Error type
Enables triggering on the selected error type.

The available error types are "Coding error", "Parity error", "Unknown", "Gap error".

Remote command:
TRIGger:SBSW:ARINc:ERENable on page 1983
TRIGger:SBSW:ARINc:ERRor<m>:ENABle on page 1983

14.15.6 Measure

The "Setup Measurement" button opens the dialog for automatic measurements in the "Protocol" category for the selected serial bus.

See Section 10.2.8.2, "Settings for protocol measurements", on page 311.

14.15.7 ARINC 429 decode results

To enable the decoding, see Section 14.1.9.3, "Decoding protocol signals", on page 531.

Decode results table

The "Decode results" table contains information about all decoded frames.

Figure 14-42: Decoded ARINC429 signal

The decode results table contains information about all decoded frames.

Table 14-28: Content of the decode results table

Column	Description
Index	Frame count
State	Overall state of the frame
Start	Start time of the frame
Symbol	Symbolic label of the frame. Available only, if "Show symbols" is enabled in the "Display" tab and a symbols list is loaded.
Label	The label name
SDI	The state of the SDI bits
Data	All 32 bits of the word. Select the data format in the "Display" tab.
SSM	The state of the SSM bits
32-bit word	The value of the data bytes. Select the data format in the "Display" tab.
Data rate	Value of the data rate

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 1491

Remote commands

Remote commands to retrieve decode results are described in Section 18.18.16.5, "Decode results", on page 1984.

You can also export the decode results. For details see Section 14.1.9.4, "Exporting decode results", on page 531.

Example ARINC export file

```
Index,Start,Stop,Symbol,State,Label,SDI,Data,SSM,Raw Data,Bit Rate
1,-0.103,-0.10268,---,'OK',257o,3h,72470h,01b,#HC1,#HC4,#H9F,#HF5,100000
2,-0.10268,-0.10236,---,'OK',316o,0h,22608h,00b,#H02,#H0C,#H88,#H73,100000
3,-0.10236,-0.10204,---,'OK',257o,3h,72470h,01b,#HC1,#HC4,#H9F,#HF5,100000
4,-0.10204,-0.10172,---,'OK',317o,0h,62608h,00b,#H02,#H0C,#H8C,#HF3,100000
5,-0.10172,-0.1014,---,'OK',257o,3h,72470h,01b,#HC1,#HC4,#H9F,#HF5,100000
```

14.16 SpaceWire (aerospace communications, option R&S MXO5-K530)

The SpaceWire is a communication network standard used for spacecraft. It is based on the IEEE 1355 standard of communications and coordinated by the European Space Agency (ESA).

- SpaceWire basics 822
- SpaceWire configuration 823
- SpaceWire filter 826
- SpaceWire format configuration 829
- SpaceWire software trigger 835
- Measure 837
- SpaceWire decode results 837

14.16.1 SpaceWire basics

The SpaceWire links are a Point-to-point (P2P) connection between a node and another node or a router. The link is full-duplex bidirectional serial data link.

The SpaceWire has two types of characters:

- Data characters containing a parity bit, a data control flag and eight bits of data.

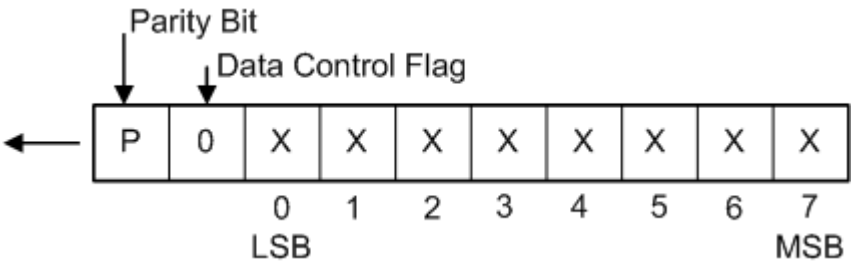

Figure 14-43: SpaceWire data characters

- Control characters containing a parity-bit, a data-control flag and the 2-bit control code. The data control flag is set to 1 and indicates that this is a control character.

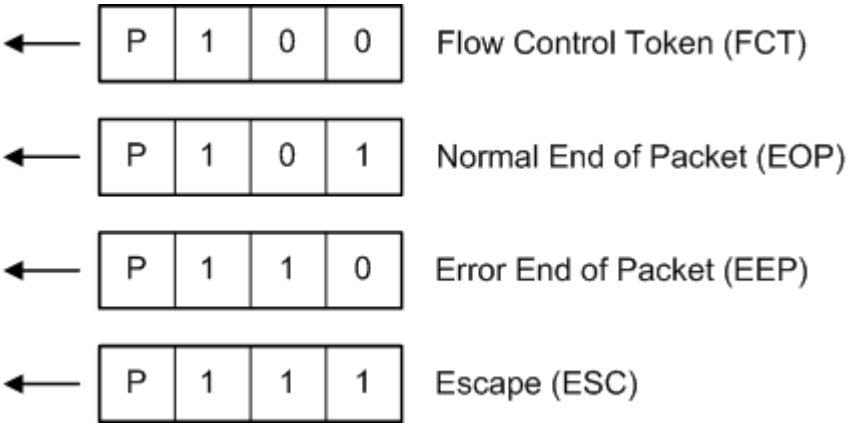

Figure 14-44: SpaceWire control characters

Also there are two control codes:

- NULL code consisting of an Escape (ESC) and a Flow Control Token (FCT)
- Time Code consisting of an ESC followed by a single data character

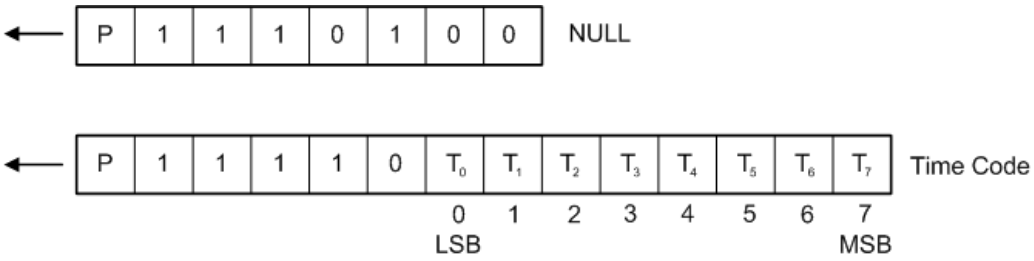

Figure 14-45: SpaceWire control codes

14.16.2 SpaceWire configuration

14.16.2.1 SpaceWire configuration settings

Access: "Menu" > "Apps" > "Protocol" tab > "SpaceWire" > "Setup".

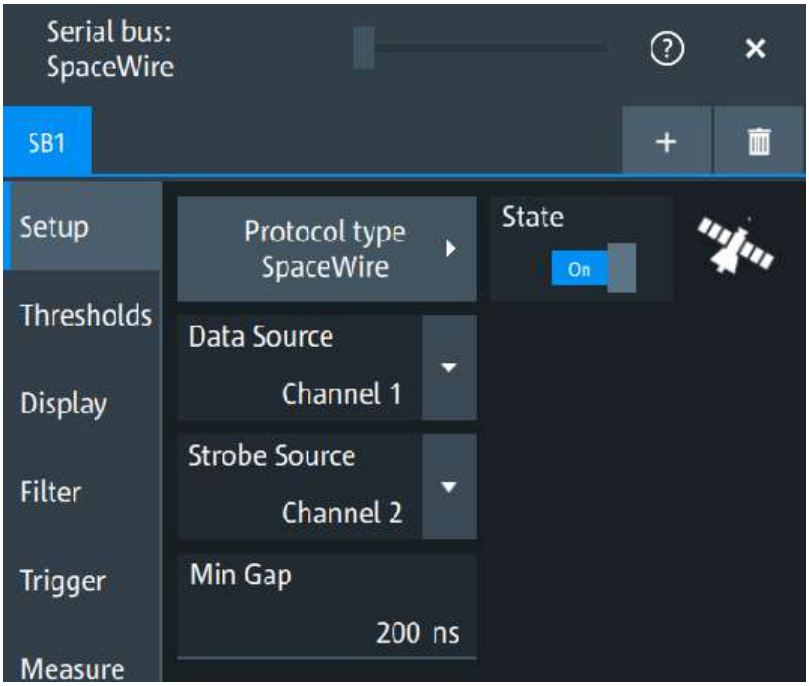

Data Source
Selects the source for the data signal. Typically, the data source is one of the analog channels.

Remote command:
`SBUS<sb>:SWIRe:DATA:SOURce` on page 2018

Strobe Source
Selects the source for the strobe signal. Typically, the strobe source is an analog channel different from the data source.

Remote command:
`SBUS<sb>:SWIRe:STRBe:SOURce` on page 2019

Min Gap
Specifies the minimum idle time between two frames, which is needed for synchronization. The beginning of the first bit after the gap marks the start of a new frame.

Remote command:
`SBUS<sb>:SWIRe:MGAP` on page 2020
`SBUS<sb>:SWIRe:MINGap` on page 2020

14.16.2.2 Thresholds

Access: "Menu" > "Apps" > "Protocol" tab > "SpaceWire" > "Thresholds".

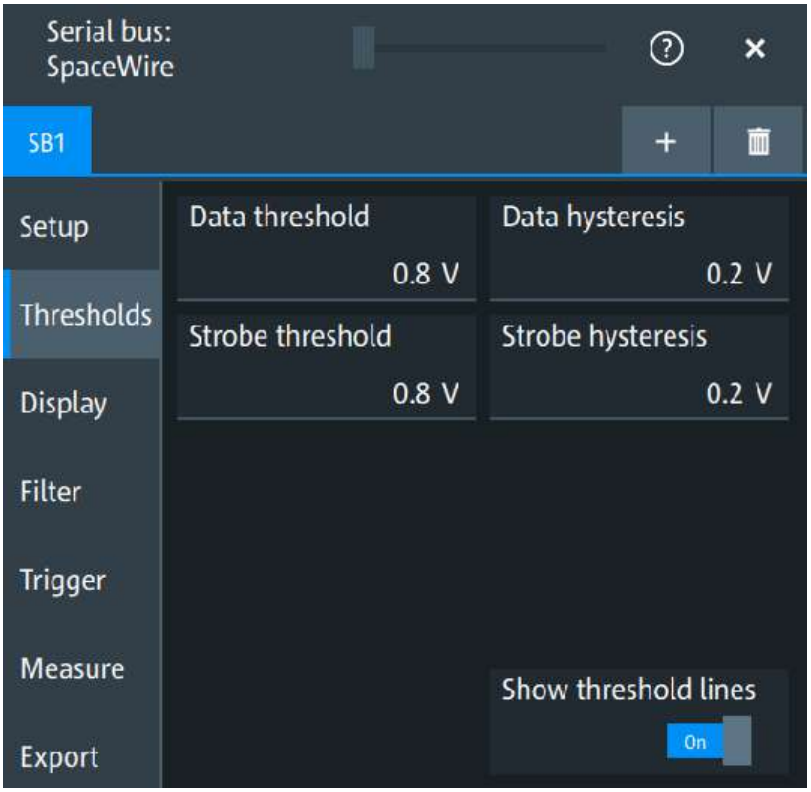

Thresholds
Sets the middle threshold for the data source and strobe source channels. Enter the values directly in the fields.

Additional to the thresholds, you can also set the hysteresis for the data source and strobe source, respectively.

Remote command:
`SBUS<sb>:SWIRe:DATA:THReshold` on page 2019
`SBUS<sb>:SWIRe:DATA:HYSTeresis` on page 2019
`SBUS<sb>:SWIRe:STRBe:THReshold` on page 2019
`SBUS<sb>:SWIRe:STRBe:HYSTeresis` on page 2020

Show threshold lines
If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also Show threshold lines.

Remote command:
`SBUS<sb>:THReshold` on page 1492

14.16.2.3 Display settings

For details about the display settings, see Section 14.1.3.1, "Display settings", on page 511.

Decode layer
Selects the decode layer.

Decoding is performed in several steps, and the results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display.

"Off"	Disables the display of the decode layer.
"Edges"	Enables the display of all edges.
"Binary"	Enables the display of the raw, binary encoded symbols, consisting of the states "0" and "1".

Data format
See "Data format" on page 512.

14.16.3 SpaceWire filter

Access: "Menu" > "Apps" > "Protocol" tab > "SpaceWire" > "Filter" tab

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

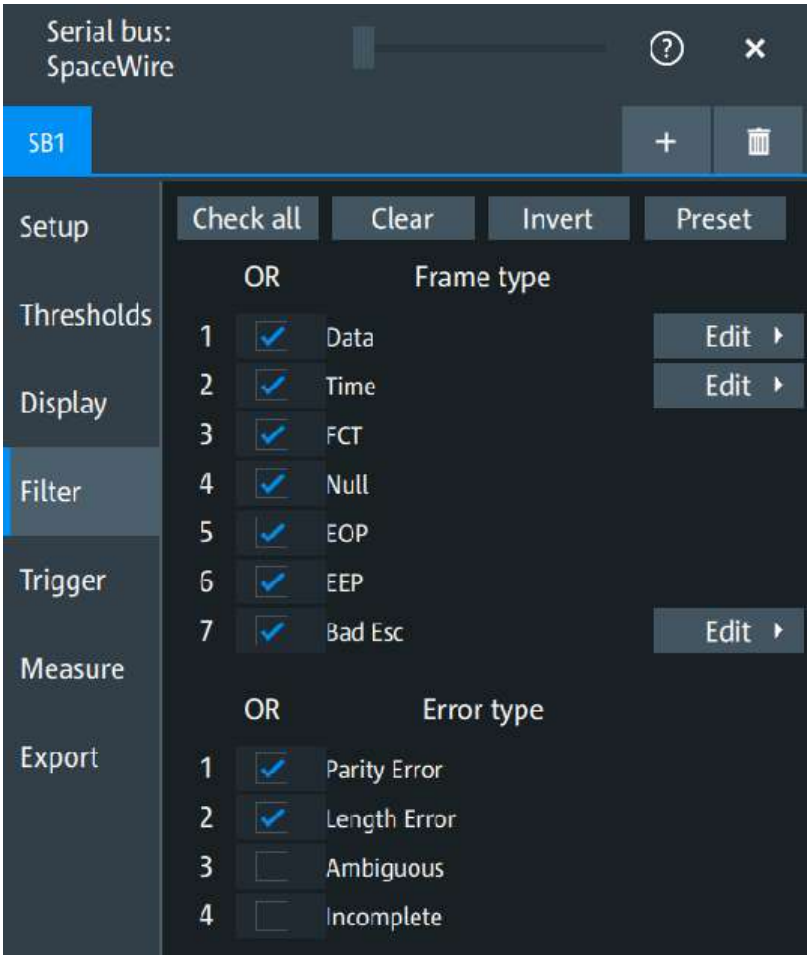

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all"	Enables the filter for all available frames and error types.
"Clear"	Disables the filter for all available frames and error types.
"Invert"	Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.
"Preset"	Presets the state of the selected frames and error types.

Remote command:
`SBUS<sb>:SWIRe:FILTer:CHKall` on page 2021
`SBUS<sb>:SWIRe:FILTer:CLR` on page 2022
`SBUS<sb>:SWIRe:FILTer:INVert` on page 2022
`SBUS<sb>:SWIRe:FILTer:RST` on page 2022

Enable
Enables the filtering on SpaceWire frames. Only the frames that match the selected filter conditions are displayed.

Remote command:
`SBUS<sb>:SWIRe:FILTer:FRENable` on page 2025
`SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:ENABle` on page 2025

Frame type
Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.

For selected frame types, you can also specify conditions for the value of the fields in the "Edit" dialog.

The available frame types are "Data", "Time", "FCT", "Null", "EOP", "EEP", "Bad Esc".

Edit
Opens a dialog to define the details of the selected frame.

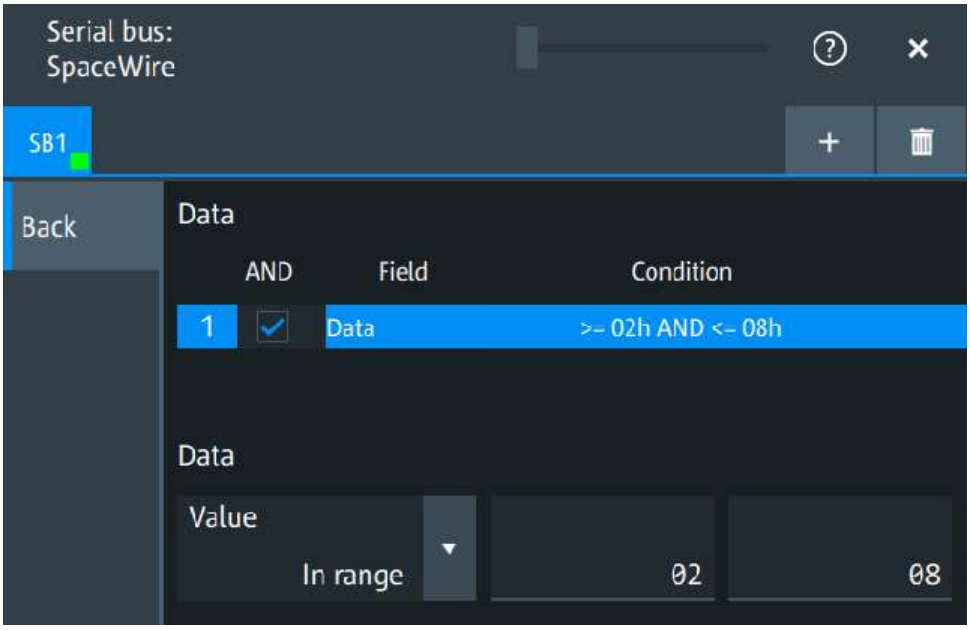

"Field" Enables the field type that you want to filter on for the selected frame. The available fields are "Data", "Time", "Bad Esc".

Remote command:
SBUS<sb>:SWIRe:FILTer:FIENable on page 2024
SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:FLD<fl>:ENABle on page 2024

"Condition" Displays the value condition for the selected field.

Remote command:
SBUS<sb>:SWIRe:FILTer:BIT on page 2022
SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:FLD<fl>:BIT on page 2022

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
SBUS<sb>:SWIRe:FILTer:DMAX on page 2023
SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:FLD<fl>:DMAX on page 2023
SBUS<sb>:SWIRe:FILTer:DMIN on page 2023
SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:FLD<fl>:DMIN on page 2023
SBUS<sb>:SWIRe:FILTer:DOPerator on page 2024
SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:FLD<fl>:DOPerator on page 2024

Error type
Enables filtering on the selected error type.

The available error types are "Parity error", "Length error", "Ambiguous", "Incomplete".

Remote command:
SBUS<sb>:SWIRe:FILTer:ERENable on page 2023
SBUS<sb>:SWIRe:FILTer:ERRor<n>:ENABle on page 2023

14.16.4 SpaceWire format configuration

Access: "Menu" > "Apps" > "Protocol" tab > "SpaceWire" > "Format".

See Section 14.1.5, "Format", on page 516.

Show format
Enables the format configuration and displays the frame formats in the honey-comb view and results. If enabled, the frame formats are also selectable for triggering and filtering.

Remote command:
SBUS<sb>:SWIRe:FORMat:SELect on page 2026

Add frame
Creates a frame format and adds it to the end of the frame list. A dialog opens to specify the frame details. The number of frame formats is limited to 100.

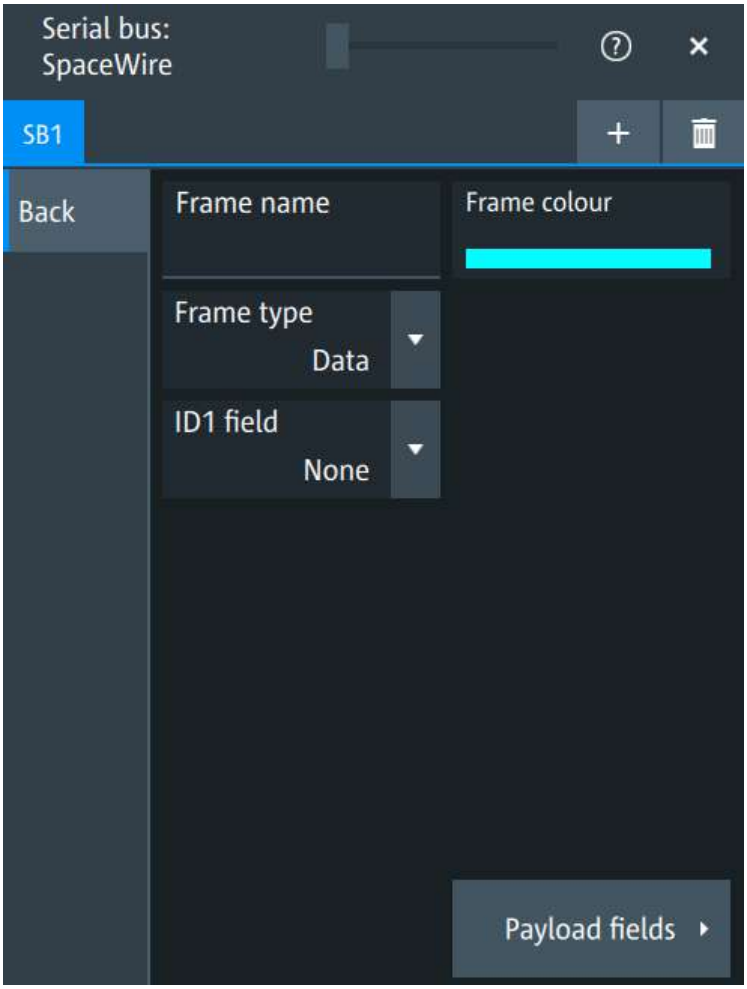

Remote command:
SBUS<sb>:SWIRe:FORMat:ADDFrame on page 2026

Edit list
Enables editing the frame list. If enabled, you can delete a frame format by clicking its "Delete" icon. In a list with several entries, you can move frame formats up or down by clicking the arrow buttons. To exit the editing mode, click "Edit list" again.

Remote command:
SBUS<sb>:SWIRe:FORMat:CLR on page 2027
SBUS<sb>:SWIRe:FORMat:FCOunt? on page 2027

Open
Opens a dialog for loading an existing list of frame formats in XML file format.

Remote command:
SBUS<sb>:SWIRe:FORMat:LOAD on page 2026

Save as
Opens a dialog for saving your current list of frame formats to an XML file. Saved frame formats can support efficient and convenient working.

Remote command:
SBUS<sb>:SWIRe:FORMat:SAVE on page 2026

Frame name
Specifies an arbitrary name to label the currently selected frame format. Ideally, use speaking names according to the specifications of the applicable protocol standard. Frame names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:NAME on page 2028

Frame color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:COLor on page 2028

Frame type
Select an original frame type.

Remote command:
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:TYPE on page 2028

ID<n> field
Select the first to third identifying field types.

Remote command:
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ID1Field on page 2029
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ID2Value on page 2029
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ID3Value on page 2029

ID<n> value
Select the value of the corresponding field type.

Remote command:
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ID1Value on page 2029
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ID2Value on page 2029
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ID3Value on page 2029

Payload fields
Opens the payload field configuration dialog. The format configuration of payload fields is optional and replaces the payload data of the identified frame.

Add field
Creates a new field description for the currently selected frame format and adds it to the end of the field list with color, bit position (order of transmission) and name. Brackets indicate how often bits will be repeated, [] indicates that this is an open array.

A dialog opens to specify the field details. The number of field descriptions is limited to 100.

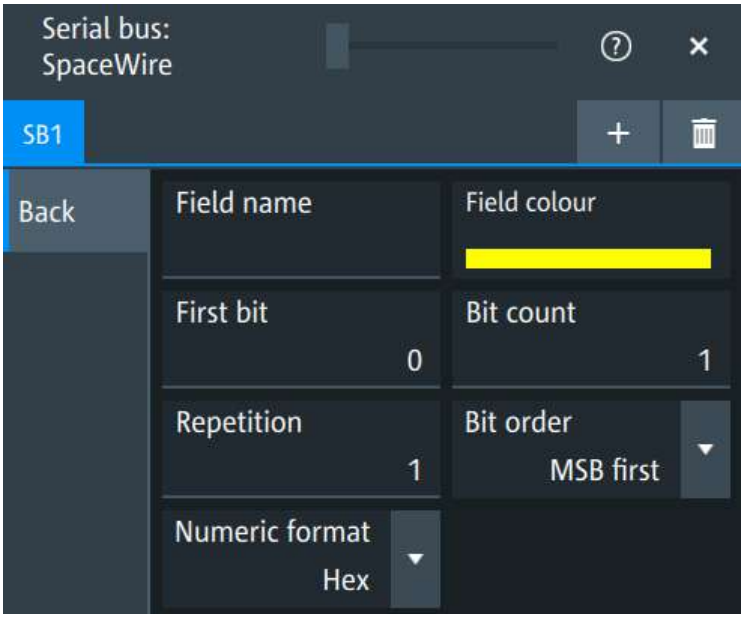

Remote command:
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ADDField on page 2027

Field name
Specifies an arbitrary name for the currently selected field description. Ideally, use speaking names.

Field names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:NAME on page 2029

Field color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:COLor on page 2029

First bit
In order of transmission, sets the first bit of this field in the payload.

Remote command:
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:FSTBit on page 2030

Bit count
Sets the number of bits in the selected field, i.e., the field's length. Selecting the value opens a keypad showing allowed minimum and maximum values. You can set "Min", "Max", "Reset" or adjust with the "Inc" or "Dec" buttons by 1 or 10 (step size dependent). Use "CE" to restore the value used before the keypad opened.

If the "Condition" pattern length does not match the "Bit count":
- Too long, it is truncated.

- Too short, it is left-padded with 0.

Both truncation and padding happen on the left side of the condition and follow the configured "Bit order".

Examples for "Condition" "=100"):
- "Bit order" is "MSB":
  – Bit count = 2: truncated. Result: =00
  – Bit count = 4: padded. Result: =0100
- "Bit order" is LSB first (equivalent MSB-first representation is =001):
  – Bit count = 2: truncated. Result: =00 (LSB first), =00 (MSB first)
  – Bit count = 4: padded. Result: =0100 (LSB first), =0010 (MSB first)

Remote command:
`SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:BITCount` on page 2030

Repetition
Defines the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Remote command:
`SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:REPetition` on page 2031

Bit order
Selects, in which order the bits of a field's "Condition" value are evaluated:

- "LSB first": little endian, least significant bit first
- "MSB first": big endian, most significant bit first

Remote command:
`SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:BITorder` on page 2031

Numeric format
Selects how the "Condition" value is interpreted:

- Symbolic: Assigns a symbolic translation on the data fields. Only available for custom protocols.
- Value list: Assigns a custom name to each hexadecimal value; any value without an assigned value is shown as "Undefined".
- A*X+B: Assigns a linear function on the data fields.
- For details on the other numeric formats, see "Format-specific information" on page 532.

The following rules apply:
- If the condition contains at least one of "H", "h", "L", "l", "X", "x", and all other characters are only "1" and/or "0", the value is always treated as binary, regardless of the selected numeric format.
- "x" and "X" are wildcards and are supported only in binary format or when the string is auto-interpreted as binary per the rule above.
  Examples for format set to "HEX":
  – "=1HL111000": valid (read as binary)
  – "=0x10101": valid (read as binary; "x" acts as wildcard, not a hex prefix)
  – "=1010": valid (read as HEX, with a total of 16 bits)
  – "=0x5A": valid (read as HEX "5A", because "0x" is a valid hex prefix; entering 5A alone is recommended)

– "=5X12": invalid
– "=1H33": invalid

Remote command:
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:FORMat on page 2031

Add value
Creates a new hexagonal value for customization.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:ADDValue on page 2032

Value
Defines the hexagonal value to convert it into a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue on page 2033

Label
Defines the label to convert the corresponding hexagonal value to a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel on page 2033

Unit
Defines a unit for the linear function.

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:UNIT on page 2033

Parameter A,B
Defines the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:PARA on page 2034
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:PARB on page 2034

14.16.5 SpaceWire software trigger

14.16.5.1 Setup A trigger

Before setting up the software trigger for the protocols, a trigger A event needs to be set up.

14.16.5.2 Software trigger settings

Access: "Menu" > "Apps" > "Protocol" tab > "SpaceWire" > "Trigger" tab > "Setup Software Trigger"

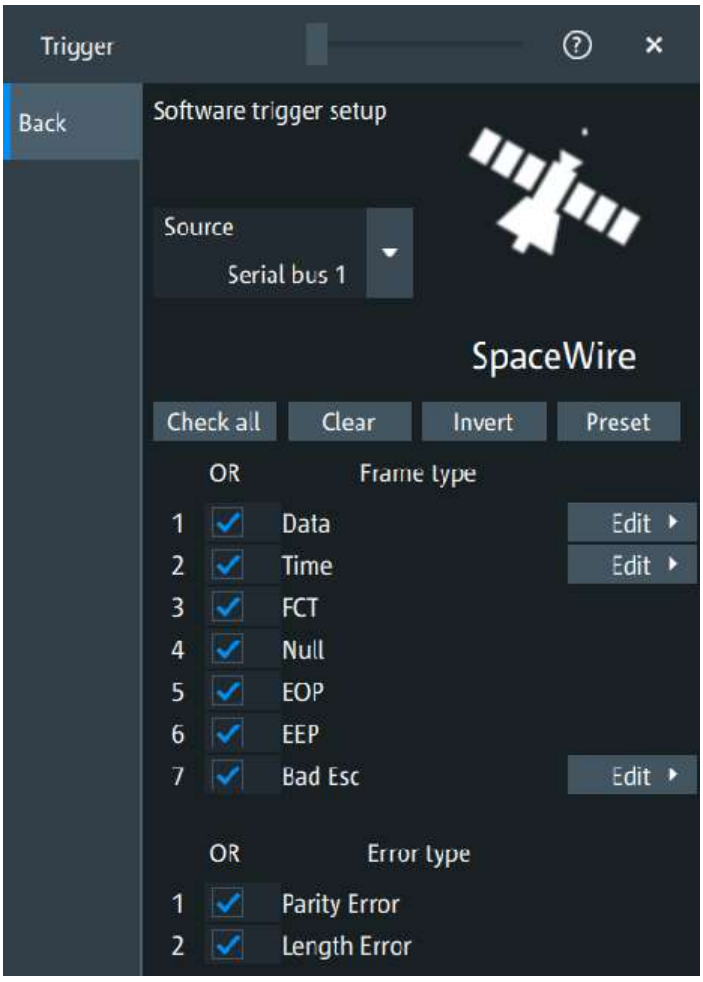

In the "Software Trigger" tab, you can define the settings to trigger on the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to trigger on.

"Check all" Enables the software trigger for all available frames and error types.

"Clear"	Disables the software trigger for all available frames and error types.
"Invert"	Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.
"Preset"	Presets the state of the selected frames and error types for the software trigger.

Remote command:
`TRIGger:SBSW:SWIRe:CHKall` on page 2035
`TRIGger:SBSW:SWIRe:CLR` on page 2035
`TRIGger:SBSW:SWIRe:INVert` on page 2035
`TRIGger:SBSW:SWIRe:RST` on page 2035

Frame type
Selects the frame type that you want to trigger on. You can trigger on all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

The following frames are available: "Data", "Time", "FCT", "Null", "EOP", "EEP", "Bad Esc".

Remote command:
`TRIGger:SBSW:SWIRe:FRENable` on page 2036
`TRIGger:SBSW:SWIRe:FRAMe<fr>:ENABle` on page 2036

Edit
Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

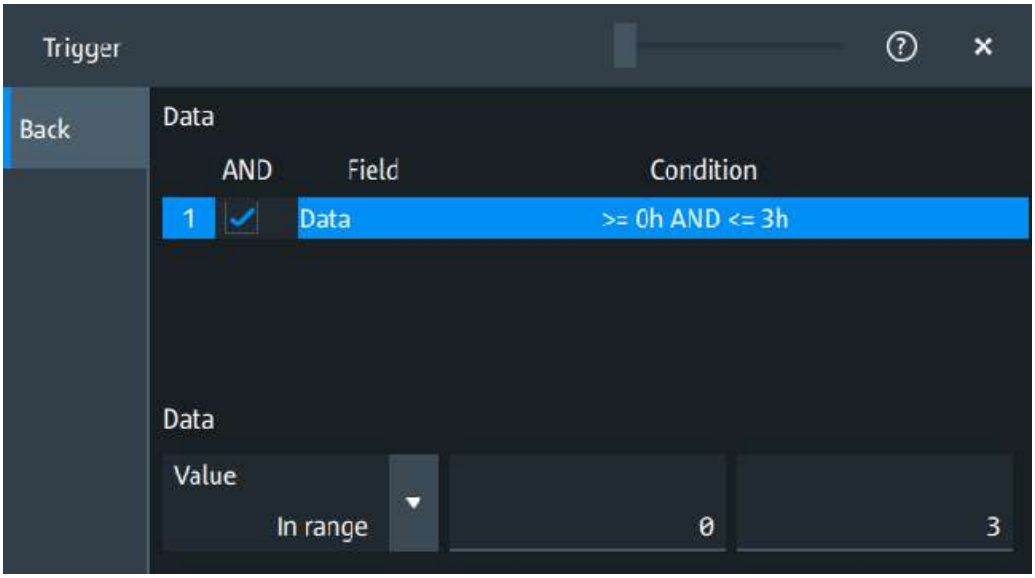

"Field" Enables the field type that you want to trigger on for the selected frame.
The available fields are "Data", "Time", "Code".

Remote command:
`TRIGger:SBSW:SWIRe:FIENable` on page 2037
`TRIGger:SBSW:SWIRe:FRAMe<fr>:FLD<fl>:ENABle` on page 2037

"Condition" Displays the value condition for the selected field.

Remote command:
`TRIGger:SBSW:SWIRe:BIT` on page 2036
`TRIGger:SBSW:SWIRe:FRAMe<fr>:FLD<fl>:BIT` on page 2036

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
`TRIGger:SBSW:SWIRe:DMAX` on page 2036
`TRIGger:SBSW:SWIRe:FRAMe<fr>:FLD<fl>:DMAX` on page 2036
`TRIGger:SBSW:SWIRe:DMIN` on page 2037
`TRIGger:SBSW:SWIRe:FRAMe<fr>:FLD<fl>:DMIN` on page 2037
`TRIGger:SBSW:SWIRe:DOPerator` on page 2037
`TRIGger:SBSW:SWIRe:FRAMe<fr>:FLD<fl>:DOPerator` on page 2037

Error type
Enables triggering on the selected error type.

The available error types are "Parity error", "Length error".

Remote command:
`TRIGger:SBSW:SWIRe:ERENable` on page 2038
`TRIGger:SBSW:SWIRe:ERRor<m>:ENABle` on page 2038

14.16.6 Measure

The "Setup Measurement" button opens the dialog for automatic measurements in the "Protocol" category for the selected serial bus.

See Section 10.2.8.2, "Settings for protocol measurements", on page 311.

14.16.7 SpaceWire decode results

To enable the decoding, see Section 14.1.9.3, "Decoding protocol signals", on page 531.

Decode results table

The "Decode results" table contains information about all decoded frames.

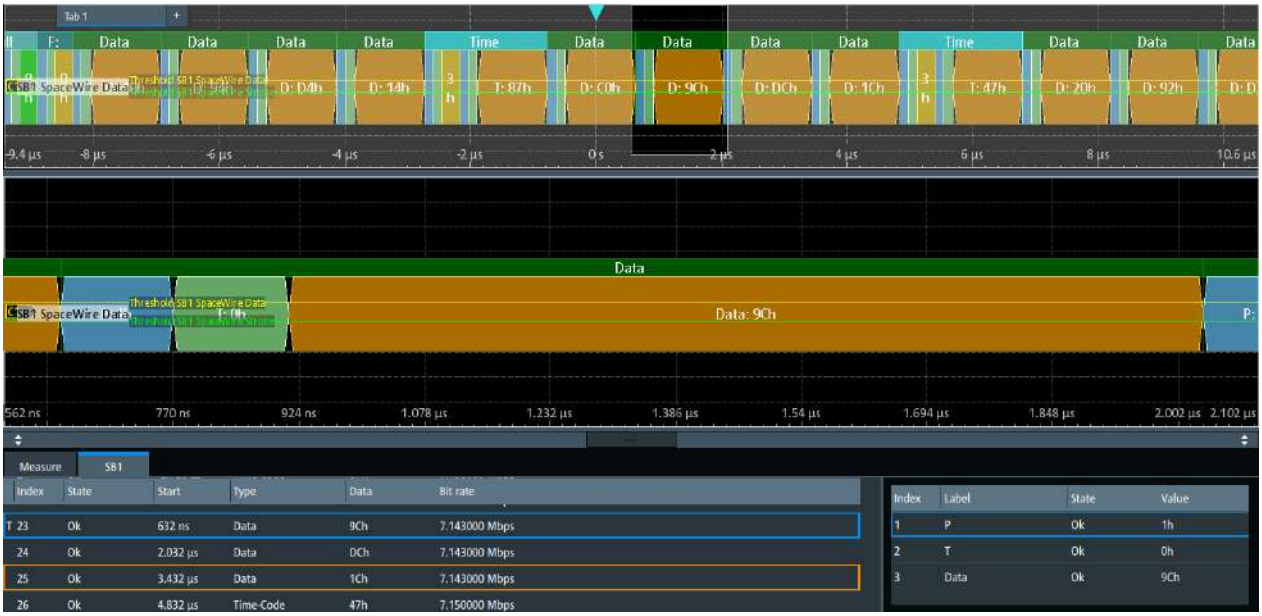

Figure 14-46: Decoded SpaceWire signal

The decode results table contains information about all decoded frames.

Table 14-29: Content of the decode results table

Column	Description
Index	Frame count
State	Overall state of the frame
Start	Start time of the frame
Type	The type of the frame
Data	Value of the data byte. Select the data format in the "Display" tab.
Bit rate	Value of the bit rate

When you select a frame in the decode results table, its field content is shown in the details table to the right.

Table 14-30: Content of the frame details table

Column	Description
Index	Number of the decoded field
Label	Name of the field
State	State of the field (OK / Not OK)
Value	Value of the field

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- SBUS<sb>:FORMat on page 1491

Remote commands

Remote commands to retrieve decode results are described in Section 18.18.18.5, "Decode results", on page 2039.

You can also export the decode results. For details see Section 14.1.9.4, "Exporting decode results", on page 531.

Example SpaceWire export file

```
Index,Start,Stop,State,Type
1,-2.7928e-05,-2.6808e-05,'OK','NULL'
2,-2.6808e-05,-2.5688e-05,'OK','NULL'
3,-2.5688e-05,-2.5128e-05,'OK','FCT'
4,-2.5128e-05,-2.3728e-05,'OK','DATA'
5,-2.3728e-05,-2.2328e-05,'OK','DATA'
6,-2.2328e-05,-2.0928e-05,'OK','DATA'
7,-2.0928e-05,-1.897e-05,'OK','TCOD'
8,-1.897e-05,-1.7568e-05,'OK','DATA'
9,-1.7568e-05,-1.617e-05,'OK','DATA'
10,-1.617e-05,-1.477e-05,'OK','DATA'
11,-1.477e-05,-1.4208e-05,'OK','EEP'
```

14.17 MIL-1553 (aerospace electronics, option R&S MXO5-K530)

The MIL-1553 (or MIL-STD-1553) specification defines the characteristics of a serial data bus originally designed for use in the military avionics. Nowadays it is also used in spacecraft on-board data handling.

- About the MIL-1553 protocol....839
- MIL-1553 configuration....842
- MIL-1553 filter....844
- MIL-1553 software trigger....847
- Measure....850
- MIL-1553 decode results....850

14.17.1 About the MIL-1553 protocol

The MIL-1553 bus is a 2-wire bus that uses differential signals.

A MIL-1553 system consists of the following components:

- Bus Controller (BC): initiates and coordinates the data flow in the system.
- Remote Terminal (RT): interfaces various subsystems with the data bus. A system consists of up to 31 RTs and each RT can have 31 subaddresses.

The subaddresses 0 and 31 refer to a mode code command.

- Bus Monitor (BM) (optional): listens to all messages and can record selected data for real-time or off-line analysis.

The information is transmitted over the bus in defined series of words using Manchester code, where each bit is transmitted as high-low for a logical 1 or a low-high for a logical 0. There are three types of words: command, data and status.

Command Word

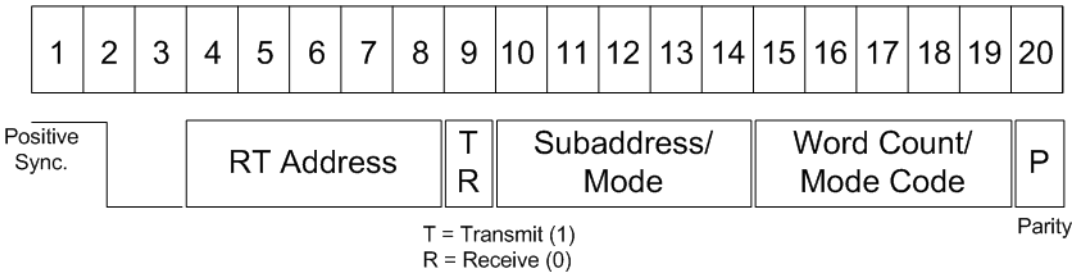

Figure 14-47: Structure of a command word

The format of a command word consists of the following parts (see Figure 14-47):

- Sync: an invalid Manchester waveform.
- Remote Terminal (RT) Address: the unique address of the corresponding RT.
- Transmit/Receive (T/R): indicates the action required from the RT.
- Subaddress/Mode Code: indicates the RT subaddress. The subaddresses 0 and 31 signalize the transmission of a mode code.
- Data Word Count /Mode Code: indicates the number of words that are sent/ received by the RT. A maximum of 32 words is allowed. This field may be used for the transmission of the mode code value.
- Parity: checks if there are bit errors during the transmission. The total number of logic 1 bits for the word (sync bits not included) shall be odd.

Data Word

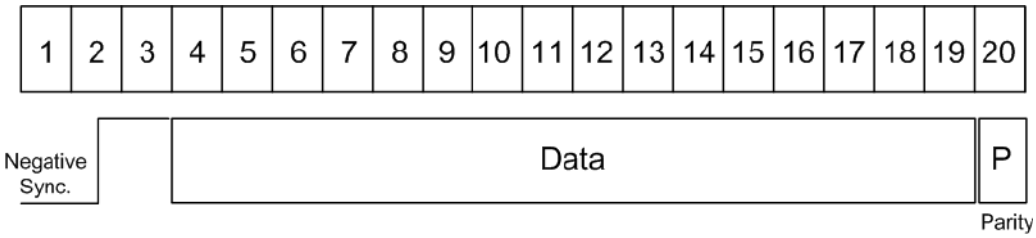

Figure 14-48: Structure of a data word

The format of a data word consists of the following parts (see Figure 14-48):

- Sync: an invalid Manchester waveform.
- Data: the transferred information (16 bit).
- Parity: checks if there are bit errors during the transmission. The total number of logic 1 bits for the word (sync bits not included) shall be odd.

Status Word

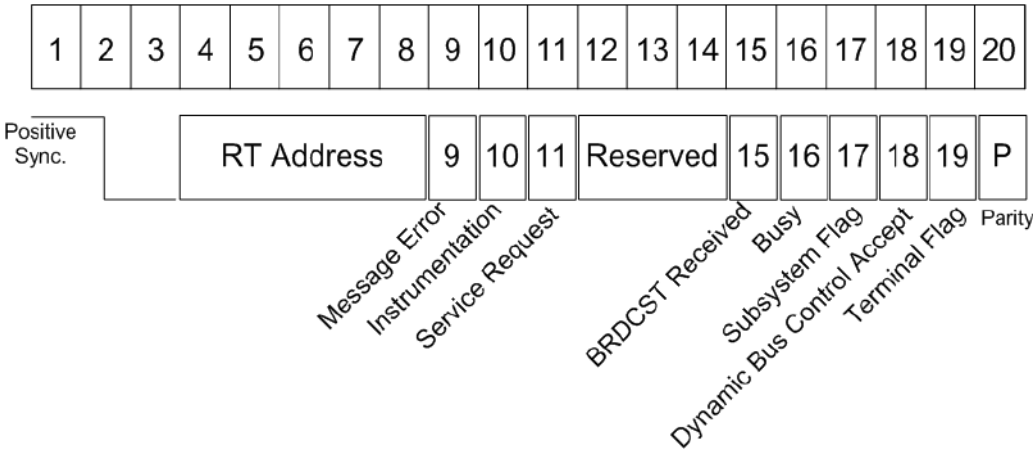

Figure 14-49: Structure of a status word

The format of a status word consists of the following parts (see Figure 14-49):

- Sync: an invalid Manchester waveform.
- Remote Terminal (RT) Address: the unique address of the corresponding RT.
- Message error: indicates an error in the command/data word transmission from the BC. A logic 1 indicates presence of a message error and a logic 0 indicates its absence.
- Instrumentation: helps to distinguish between a status word and a command word. The logic state of this bit shall be 0.
- Service Request: indicates that the RT requires service. A logic 1 indicates a presence of a service request and logic 0 indicates its absence.
- Reserved: bits reserved for future uses.
- Broadcast Command: a logic 1 indicates that the preceding valid command word was a broadcast command and a logic 0 that it was not.
- Busy: a busy state indicates that the RT or the subsystem is not able to transfer data. A logic 1 indicates a presence of a busy condition and logic 0 indicates its absence.
- Subsystem Flag: flags a subsystem fault. A logic 1 indicates a presence of a flag and logic 0 indicates its absence.
- Dynamic Bus Control Acceptance: a logic 1 indicates acceptance of a dynamic bus control and a logic 0 a rejection.
- Terminal Flag: flags an RT fault condition. A logic 1 indicates a presence of a flag and logic 0 indicates its absence.
- Parity: checks if there are bit errors during the transmission. The total number of logic 1 bits for the word (sync bits not included) shall be odd.

For comfortable analysis, you can load an editable label list, to interpret transferred numeric values as meaningful text labels.

14.17.2 MIL-1553 configuration

14.17.2.1 MIL-1553 configuration settings

Access: "Menu" > "Apps" > "Protocol" tab > "MIL-1553" > "Setup".

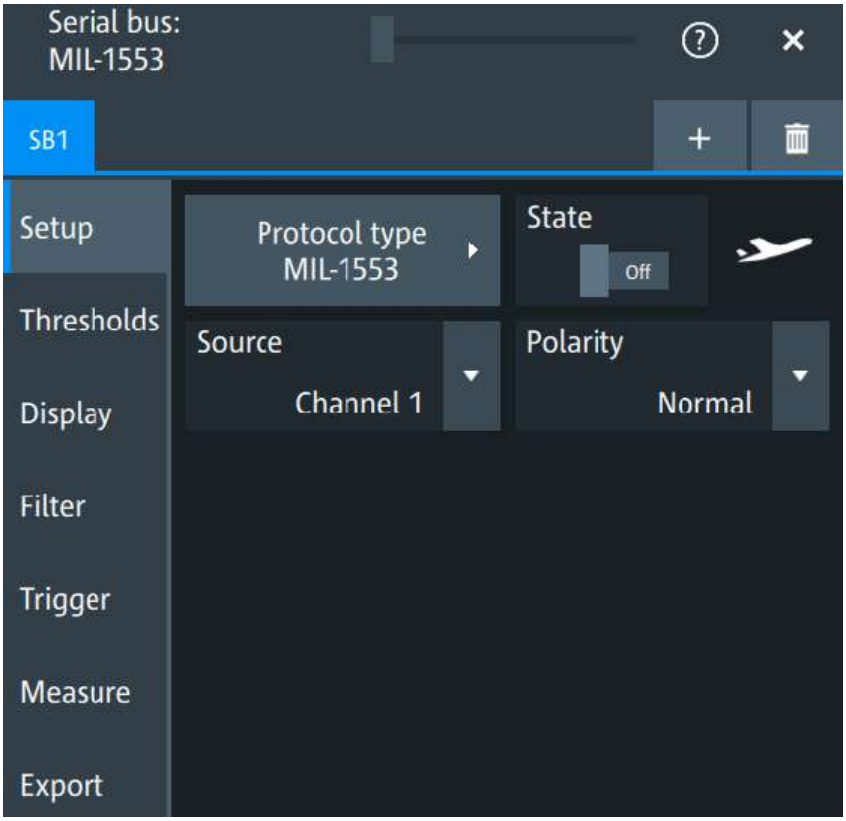

Source
Sets the source of the selected data line. Usually, the source is one of the analog channels.

Remote command:
`SBUS<sb>:MILStd:SOURce` on page 1990

Polarity
Sets the wire on which the bus signal is measured : normal or inverted. The setting affects the digitization of the signal.

Remote command:
`SBUS<sb>:MILStd:POLarity` on page 1990

14.17.2.2 Threshold

Access: "Menu" > "Apps" > "Protocol" tab > "MIL-1553" > "Thresholds".

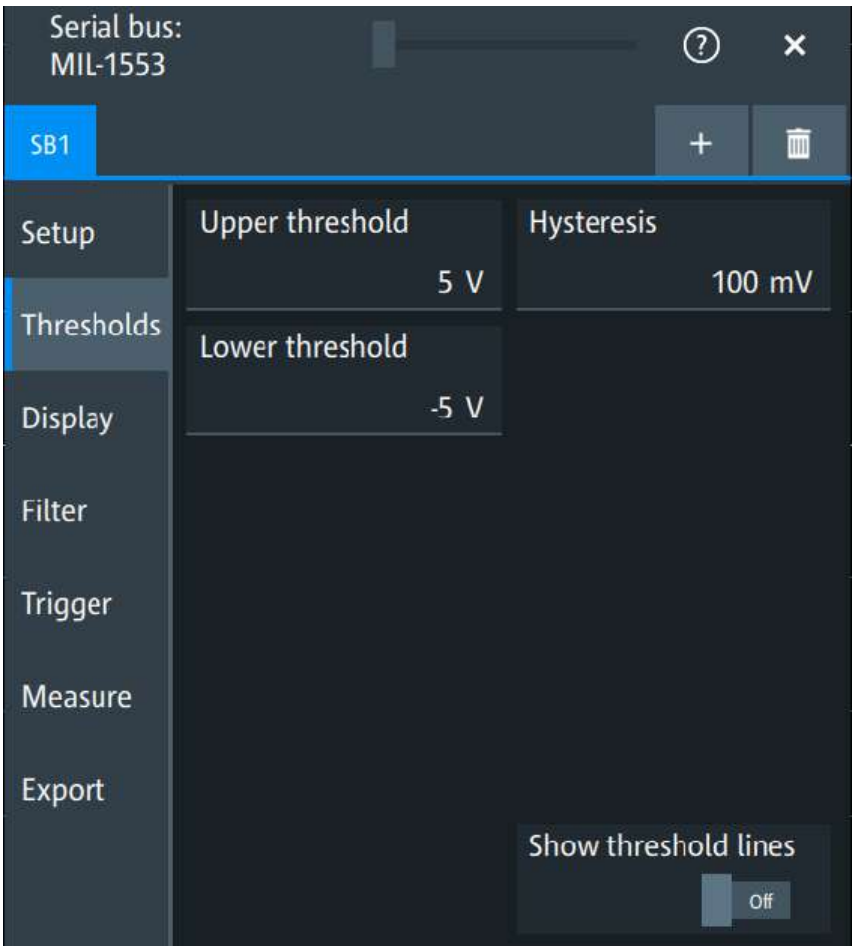

Threshold
Sets the upper and lower threshold for the source channel. Enter the value directly in the fields.

Additional to the threshold, you can also set a hysteresis.

Remote command:
`SBUS<sb>:MILStd:THReshold:HIGH` on page 1990
`SBUS<sb>:MILStd:THReshold:LOW` on page 1991
`SBUS<sb>:MILStd:THReshold:HYSTeresis` on page 1991

Show threshold lines
If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also Show threshold lines.

Remote command:
`SBUS<sb>:THReshold` on page 1492

14.17.2.3 Display settings

For details about the display settings, see Section 14.1.3.1, "Display settings", on page 511.

Show symbols
Symbol lists are protocol-specific. Label lists for MIL-1553 are available in CSV format.

For details, see Section 14.17.2.4, "MIL-1553 symbols", on page 844.

14.17.2.4 MIL-1553 symbols

Label lists are protocol-specific. A MIL-1553 label file contains four values for each identifier:

- "RTA": hexadecimal remote terminal address value
- "Sub Addr": hexadecimal sub address value
- "Sub Address Label Name": the label name corresponding to the value of the subaddress.
- "Symbolic label": symbolic name of addressed device, specifying the device function, and the label of the sub address.

Example: MIL PTT file

```
# ------------------------------------------------------------
# Labels for MIL.1553 protocol
# Column order: RT address, RT label, Subaddress, Subaddress Label
# ------------------------------------------------------------------------
@PROTOCOL_NAME = mil1553
0Ah,Engine,01h,Thrust
03h,Main panel,07h,Altimeter
03h,Main panel,01h,Speed
0Eh,Only RTA
```

14.17.3 MIL-1553 filter

Access: "Menu" > "Apps" > "Protocol" tab > "MIL-1553" > "Filter" tab

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

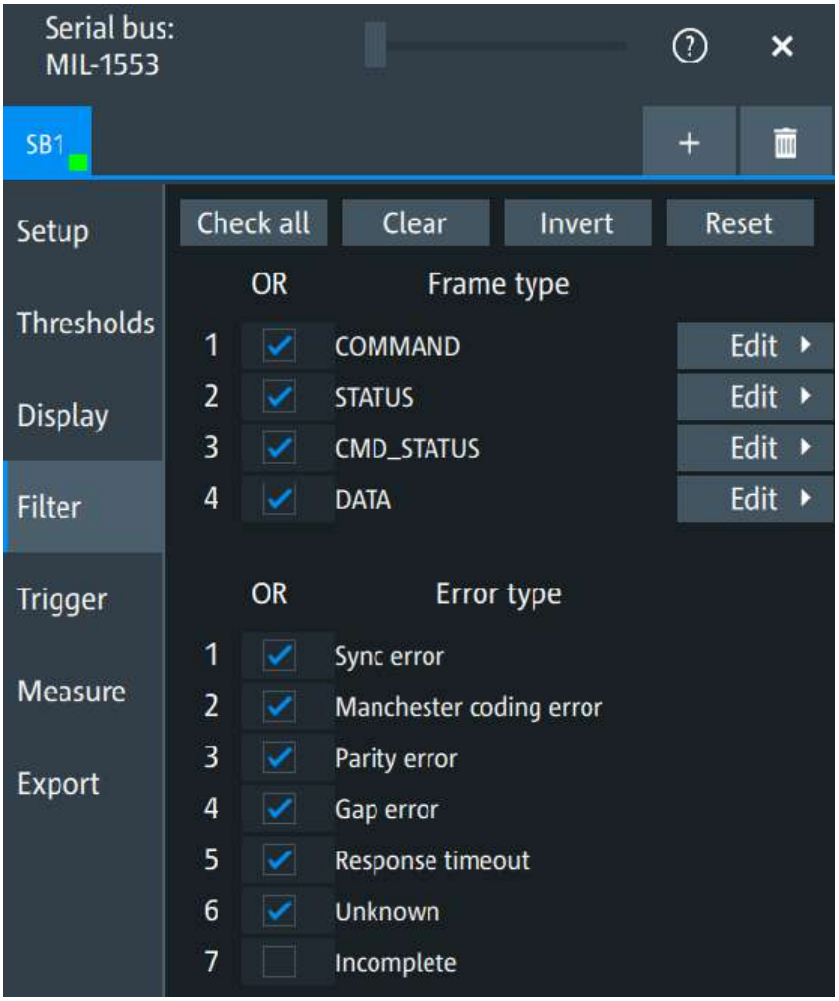

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all" Enables the filter for all available frames and error types.

"Clear" Disables the filter for all available frames and error types.

"Invert" Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types.

Remote command:
`SBUS<sb>:MILStd:FILTer:RST` on page 1994
`SBUS<sb>:MILStd:FILTer:INVert` on page 1993
`SBUS<sb>:MILStd:FILTer:CHKall` on page 1993
`SBUS<sb>:MILStd:FILTer:CLR` on page 1993

Enable
Enables the filtering on MIL-1553 frames. Only the frames that match the selected filter conditions are displayed.

Remote command:
SBUS<sb>:MILStd:FILTer:FRENable on page 1997
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:ENABle on page 1997

Frame type
Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.

For selected frame types, you can also specify conditions for the value of the fields in the "Edit" dialog.

Edit
Opens a dialog to define the details of the selected frame.

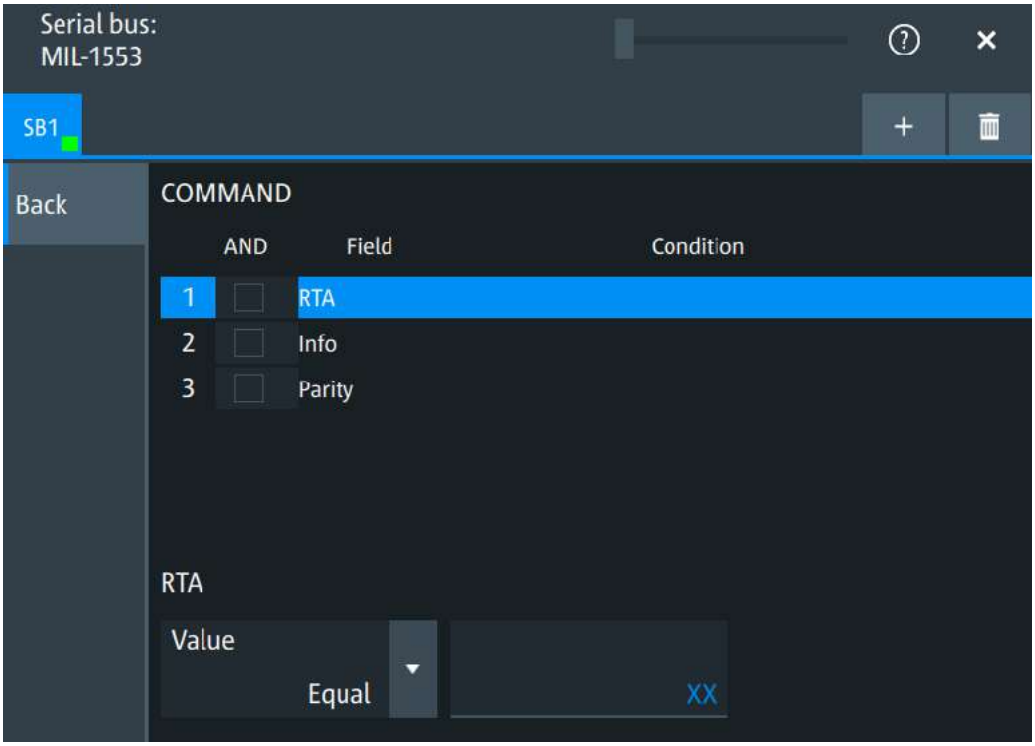

"Field" Enables the field type that you want to filter on for the selected frame. The available fields are "RTA", "Info", "Parity", "Data".

Remote command:
SBUS<sb>:MILStd:FILTer:FIENable on page 1997
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:ENABle on page 1997

"Condition" Displays the value condition for the selected field.

Remote command:
SBUS<sb>:MILStd:FILTer:BIT on page 1994
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:BIT on page 1994

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
SBUS<sb>:MILStd:FILTer:DMAX on page 1995
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:DMAX on page 1995
SBUS<sb>:MILStd:FILTer:DMIN on page 1995
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:DMIN on page 1995
SBUS<sb>:MILStd:FILTer:DOPerator on page 1995
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:DOPerator on page 1995

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
SBUS<sb>:MILStd:FILTer:IMAX on page 1996
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:IMAX on page 1996
SBUS<sb>:MILStd:FILTer:IMIN on page 1996
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:IMIN on page 1996
SBUS<sb>:MILStd:FILTer:IOPerator on page 1997
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:IOPerator on page 1997

Error type
Enables filtering on the selected error type.

The available error types are "Sync error", "Manchester coding error", "Parity error", "Gap error", "Response timeout", "Unknown", "Incomplete".

Remote command:
SBUS<sb>:MILStd:FILTer:ERENable on page 1994
SBUS<sb>:MILStd:FILTer:ERRor<n>:ENABle on page 1994

14.17.4 MIL-1553 software trigger

14.17.4.1 Setup A trigger

Before setting up the software trigger for the protocols, a trigger A event needs to be set up.

14.17.4.2 Software trigger settings

Access: "Menu" > "Apps" > "Protocol" tab > "MIL-1553" > "Trigger" tab > "Setup Software Trigger"

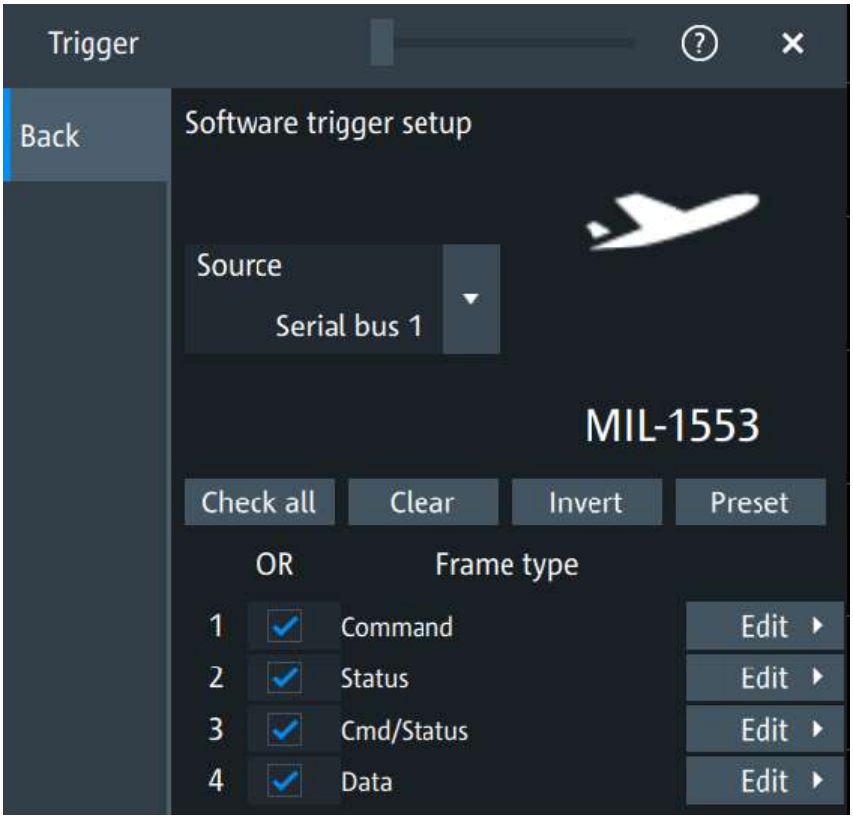

In the "Software Trigger" tab, you can define the settings to trigger on the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to trigger on.

"Check all" Enables the software trigger for all available frames and error types.

"Clear" Disables the software trigger for all available frames and error types.

"Invert" Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types for the software trigger.

Remote command:
`TRIGger:SBSW:MILStd:CHKall` on page 2007
`TRIGger:SBSW:MILStd:CLR` on page 2007
`TRIGger:SBSW:MILStd:INVert` on page 2008
`TRIGger:SBSW:MILStd:RST` on page 2008

Frame type
Selects the frame type that you want to trigger on. You can trigger on all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

The following frames are available: "Command", "Status", "Cmd/Status", "Data".

Remote command:
`TRIGger:SBSW:MILStd:FRENable` on page 2008
`TRIGger:SBSW:MILStd:FRAMe<fr>:ENABle` on page 2008

Edit
Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

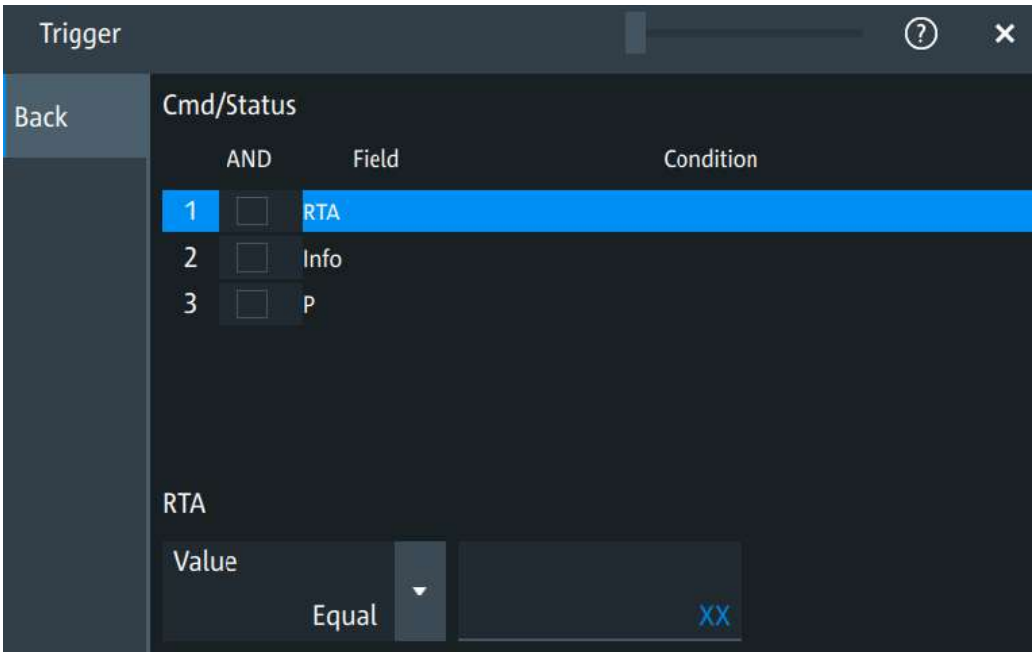

"Field" Enables the field type that you want to trigger on for the selected frame.
The following fields are available: "RTA", "Info", "Parity", "Data".

Remote command:
`TRIGger:SBSW:MILStd:FIENable` on page 2010
`TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:ENABle` on page 2010

"Condition" Displays the value condition for the selected field.

Remote command:
`TRIGger:SBSW:MILStd:BIT` on page 2008
`TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:BIT` on page 2008

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
TRIGger:SBSW:MILStd:DMAX on page 2009
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:DMAX on page 2009
TRIGger:SBSW:MILStd:DMIN on page 2009
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:DMIN on page 2009
TRIGger:SBSW:MILStd:DOPerator on page 2009
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:DOPerator on page 2009

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
TRIGger:SBSW:MILStd:IMAX on page 2010
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:IMAX on page 2010
TRIGger:SBSW:MILStd:IMIN on page 2011
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:IMIN on page 2011
TRIGger:SBSW:MILStd:IOPerator on page 2011
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:IOPerator on page 2011

Error type
Enables triggering on the selected error type.

The following error types are available: "Sync error", "Manchester coding error", "Parity error", "Gap error", "Response timeout".

Remote command:
TRIGger:SBSW:MILStd:ERENable on page 2011
TRIGger:SBSW:MILStd:ERRor<m>:ENABle on page 2011

14.17.5 Measure

The "Setup Measurement" button opens the dialog for automatic measurements in the "Protocol" category for the selected serial bus.

See Section 10.2.8.2, "Settings for protocol measurements", on page 311.

14.17.6 MIL-1553 decode results

To enable the decoding, see Section 14.1.9.3, "Decoding protocol signals", on page 531.

Decode results table

The "Decode results" table contains information about all decoded frames.

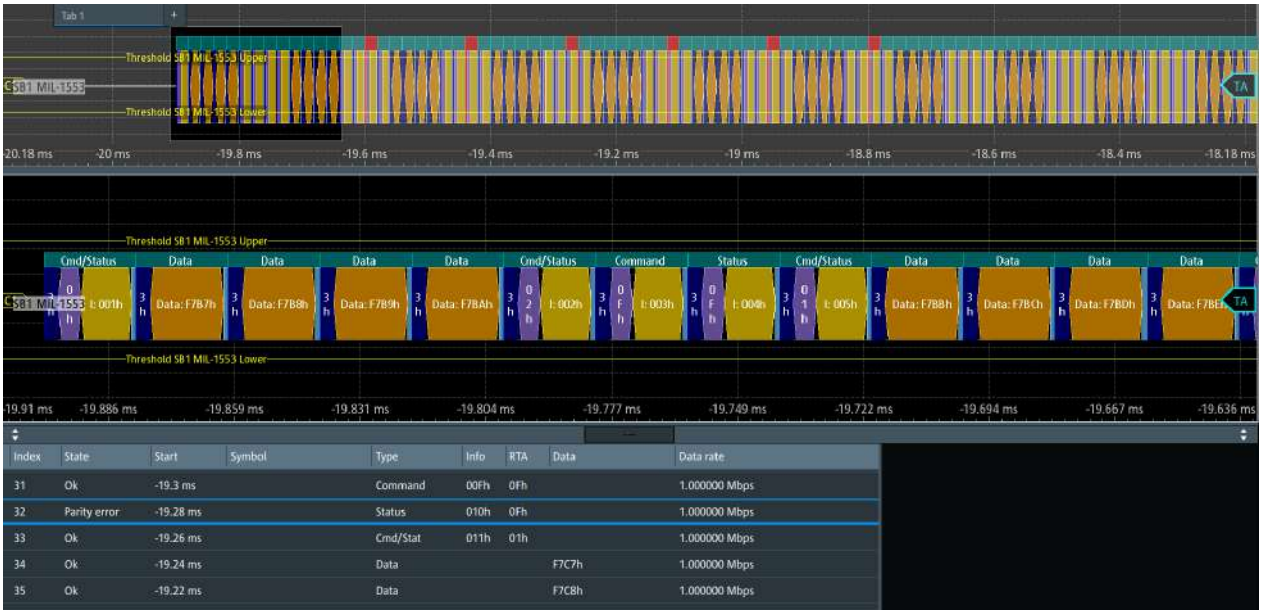

Figure 14-50: Decoded MIL-1553 signal

The decode results table contains information about all decoded frames.

Table 14-31: Content of the Decode results table

Column	Description
Index	Index of the decoded word
State	Overall state of the word
Start	Time of word start in relation to the trigger point
Symbol	Symbolic label of the frame. Available only, if "Show symbols" is enabled in the "Display" tab and a symbols list is loaded.
Type	Word type
Info	The hexadecimal value of the 9th to 1th bit of a command/status word
RTA	Remote terminal address
Data	The values of the data bytes. Select the data format in the "Display" tab.
Data rate	Data rate

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 1491

Remote commands

Remote commands to retrieve decode results are described in Section 18.18.17.5, "Decode results", on page 2012.

You can also export the decode results. For details see Section 14.1.9.4, "Exporting decode results", on page 531.

Example MIL-1553 export file

```
Index,Start,Stop,Type,State,RTA,Info,Data,Bit Rate
1,-0.0199,-0.01988,'STAT','OK',1Dh,027h,---,1000000
2,-0.01988,-0.01986,'DATA','OK',---,---,F7C0h,1000000
3,-0.01986,-0.01984,'DATA','OK',---,---,F7CAh,1000000
4,-0.01984,-0.01982,'DATA','OK',---,---,F7D4h,1000000
5,-0.01982,-0.0198,'DATA','OK',---,---,F7DEh,1000000
```

14.18 SPMI (mobile electronics, option R&S MXO5-K550)

The System Power Management Interface (SPMI) is a high-speed, low-latency, bi-directional, 2-wire serial bus.

For basic information on SPMI, you can also refer to a video, available on the Rohde & Schwarz YouTube channel: Understanding SPMI.

- SPMI configuration....852
- SPMI filter....855
- SPMI format configuration....858
- SPMI software trigger....864
- Measure....868
- SPMI decode results....868

14.18.1 SPMI configuration

14.18.1.1 SPMI configuration settings

Access: "Menu" > "Apps" > "Protocol" tab > "SPMI" > "Setup".

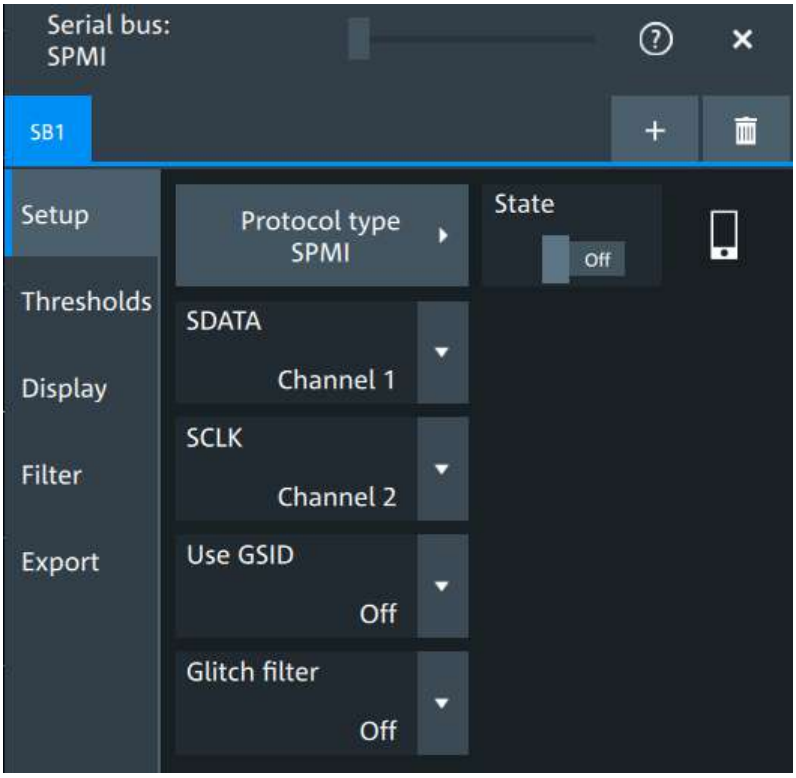

Make sure that the tab of the correct serial bus is selected.

Protocol type
Selects the protocol type to be decoded.

Remote command:
SBUS<sb>:TYPE on page 1489

SDATA
Sets the source of the data line.

Remote command:
SBUS<sb>:SPMI:SDATa:SOURce on page 2048

SCLK
Sets the source of the clock line.

Remote command:
SBUS<sb>:SPMI:SCLK:SOURce on page 2047

Use GSID, GSID (hex)
Enables the use of the group sub ID (GSID). You can then enter a value for the "GSID (hex)". If the "SA" value of a frame matches this "GSID (hex)" value, the interpreter reverses the meaning of the "ACK" field: It interprets a bit value of zero in the ACK field as an error, and a bit value of one as OK.

Remote command:
SBUS<sb>:SPMI:GSIDenable on page 2046
SBUS<sb>:SPMI:GIDValue on page 2046

Glitch filter, Glitch width
A glitch filter can help to filter out short-duration voltage spikes/ glitches that can occur on the communication line.

If "Glitch filter" > "On" you can set the "Glitch width". Any signal transitions with a duration smaller than this value are considered a glitch and filtered out.

Remote command:
SBUS<sb>:SPMI:GTCHenable on page 2047
SBUS<sb>:SPMI:GTWDith on page 2047

14.18.1.2 Threshold settings

Access: "Menu" > "Apps" > "Protocol" tab > "SPMI" > "Thresholds".

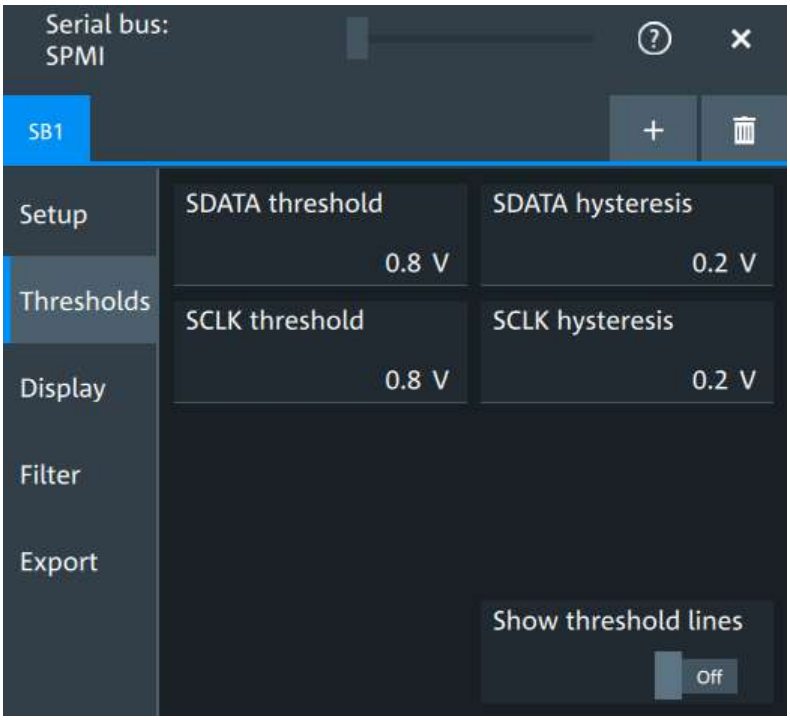

Threshold
Sets the threshold for the data/clock channel. Enter the value directly in the fields.

Additional to the threshold, you can also set a hysteresis.

Remote command:
SBUS<sb>:SPMI:SCLK:THReshold on page 2048
SBUS<sb>:SPMI:SDATa:THReshold on page 2049
SBUS<sb>:SPMI:SCLK:HYSTeresis on page 2047
SBUS<sb>:SPMI:SDATa:HYSTeresis on page 2048

Show threshold lines
If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also Show threshold lines.

Remote command:
`SBUS<sb>:THReshold` on page 1492

14.18.1.3 Display settings

For details about the display settings, see Section 14.1.3.1, "Display settings", on page 511.

Decode layer
Selects the decode layer.

Decoding is performed in several steps, and the results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display.

14.18.2 SPMI filter

Access: "Menu" > "Apps" > "Protocol" tab > "SPMI" > "Filter" tab

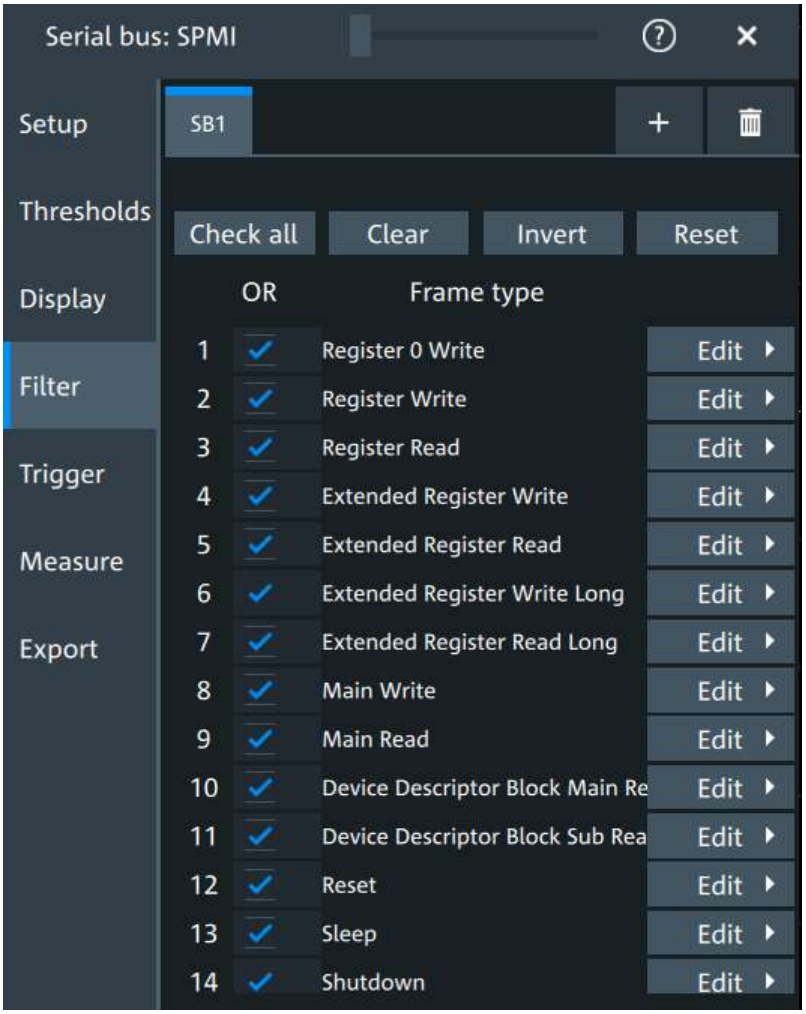

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all" Enables the filter for all available frames and error types.

"Clear" Disables the filter for all available frames and error types.

"Invert" Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types.

Remote command:
`SBUS<sb>:SPMI:FILTer:CHKall` on page 2051
`SBUS<sb>:SPMI:FILTer:CLR` on page 2051
`SBUS<sb>:SPMI:FILTer:INVert` on page 2051
`SBUS<sb>:SPMI:FILTer:RST` on page 2051

Frame type
Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.

For selected frame types, you can also specify conditions for the value of the fields in the "Edit" dialog.

Remote command:
`SBUS<sb>:SPMI:FILTer:FRAMe<fr>:ENABle` on page 2055
`SBUS<sb>:SPMI:FILTer:FRENable` on page 2055

Edit
Opens a dialog to define the details of the selected frame.

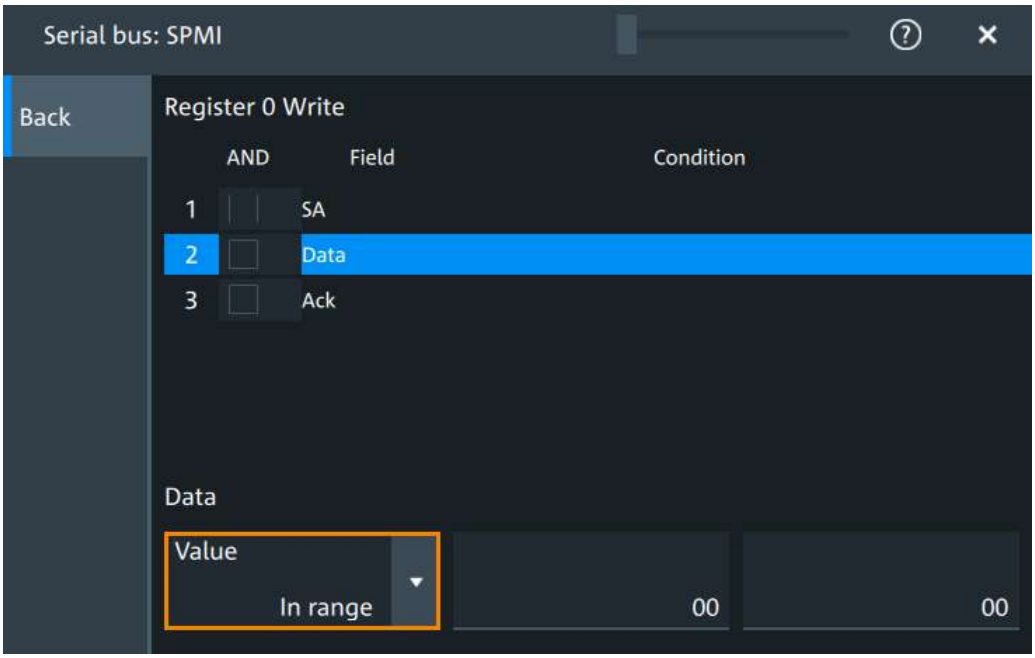

"Field" Enables the field type that you want to filter on for the selected frame. The available fields depend on the selected frame type.

Remote command:
`SBUS<sb>:SPMI:FILTer:FIENable` on page 2055
`SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:ENABle` on page 2055

"Condition" Displays the value condition for the selected field.

Remote command:
`SBUS<sb>:SPMI:FILTer:BIT` on page 2051
`SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:BIT` on page 2051

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
SBUS<sb>:SPMI:FILTer:DMAX on page 2052
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:DMAX on page 2052
SBUS<sb>:SPMI:FILTer:DMIN on page 2052
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:DMIN on page 2052
SBUS<sb>:SPMI:FILTer:DOPerator on page 2053
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:DOPerator on page 2053

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
SBUS<sb>:SPMI:FILTer:IMAX on page 2054
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:IMAX on page 2054
SBUS<sb>:SPMI:FILTer:IMIN on page 2054
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:IMIN on page 2054
SBUS<sb>:SPMI:FILTer:IOPerator on page 2053
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:IOPerator on page 2053

Error type
Enables filtering on the selected error type.

Remote command:
SBUS<sb>:SPMI:FILTer:ERRor<n>:ENABle on page 2053
SBUS<sb>:SPMI:FILTer:ERENable on page 2053

14.18.3 SPMI format configuration

Access: "Menu" > "Apps" > "Protocol" tab > "SPMI" > "Format".

See Section 14.1.5, "Format", on page 516.

Show format
Enables the format configuration and displays the frame formats in the honey-comb view and results. If enabled, the frame formats are also selectable for triggering and filtering.

Remote command:
SBUS<sb>:SPMI:FORMat:SELect on page 2056

Add frame
Creates a frame format and adds it to the end of the frame list. A dialog opens to specify the frame details. The number of frame formats is limited to 100.

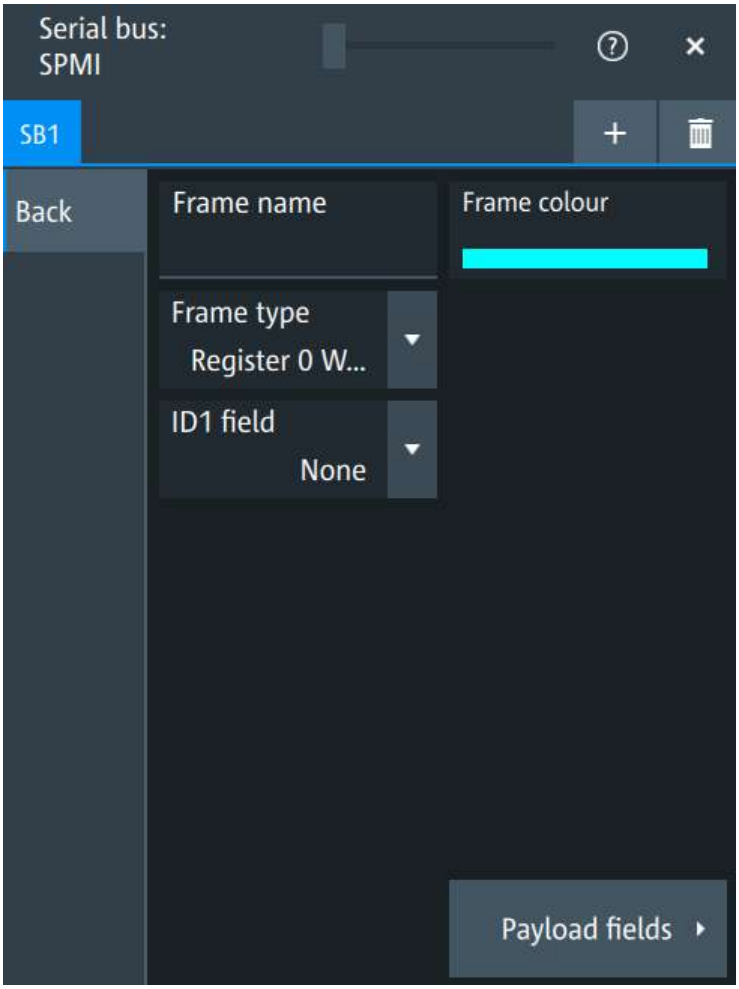

Remote command:
SBUS<sb>:SPMI:FORMat:ADDFrame on page 2056

Edit list
Enables editing the frame list. If enabled, you can delete a frame format by clicking its "Delete" icon. In a list with several entries, you can move frame formats up or down by clicking the arrow buttons. To exit the editing mode, click "Edit list" again.

Remote command:
SBUS<sb>:SPMI:FORMat:CLR on page 2057
SBUS<sb>:SPMI:FORMat:FCOunt? on page 2057

Open
Opens a dialog for loading an existing list of frame formats in XML file format.

Remote command:
SBUS<sb>:SPMI:FORMat:LOAD on page 2056

Save as
Opens a dialog for saving your current list of frame formats to an XML file. Saved frame formats can support efficient and convenient working.

Remote command:
SBUS<sb>:SPMI:FORMat:SAVE on page 2057

Frame name
Specifies an arbitrary name to label the currently selected frame format. Ideally, use speaking names according to the specifications of the applicable protocol standard. Frame names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:NAME on page 2058

Frame color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:COLor on page 2058

Frame type
Select an original frame type.

Remote command:
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:TYPE on page 2059

ID<n> field
Select the first to third identifying field types.

Remote command:
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ID1Field on page 2059
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ID2Field on page 2059
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ID3Field on page 2059

ID<n> value
Select the value of the corresponding field type.

Remote command:
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ID1Value on page 2059
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ID2Value on page 2059
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ID3Value on page 2059

Payload fields
Opens the payload field configuration dialog. The format configuration of payload fields is optional and replaces the payload data of the identified frame.

Add field
Creates a new field description for the currently selected frame format and adds it to the end of the field list with color, bit position (order of transmission) and name. Brackets indicate how often bits will be repeated, [] indicates that this is an open array.

A dialog opens to specify the field details. The number of field descriptions is limited to 100.

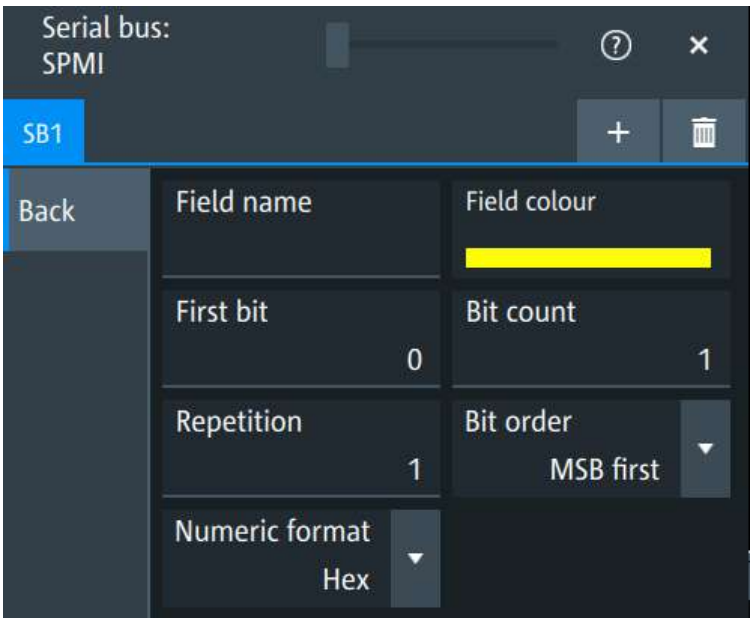

Remote command:
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ADDField on page 2058

Field name
Specifies an arbitrary name for the currently selected field description. Ideally, use speaking names.

Field names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:NAME on page 2060

Field color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:COLor on page 2060

First bit
In order of transmission, sets the first bit of this field in the payload.

Remote command:
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:FSTBit on page 2060

Bit count
Sets the number of bits in the selected field, i.e., the field's length. Selecting the value opens a keypad showing allowed minimum and maximum values. You can set "Min", "Max", "Reset" or adjust with the "Inc" or "Dec" buttons by 1 or 10 (step size dependent). Use "CE" to restore the value used before the keypad opened.

If the "Condition" pattern length does not match the "Bit count":
- Too long, it is truncated.

- Too short, it is left-padded with 0.

Both truncation and padding happen on the left side of the condition and follow the configured "Bit order".

Examples for "Condition" "=100"):
- "Bit order" is "MSB":
  – Bit count = 2: truncated. Result: =00
  – Bit count = 4: padded. Result: =0100
- "Bit order" is LSB first (equivalent MSB-first representation is =001):
  – Bit count = 2: truncated. Result: =00 (LSB first), =00 (MSB first)
  – Bit count = 4: padded. Result: =0100 (LSB first), =0010 (MSB first)

Remote command:
`SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:BITCount` on page 2061

Repetition
Defines the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Remote command:
`SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:REPetition` on page 2061

Bit order
Selects, in which order the bits of a field's "Condition" value are evaluated:

- "LSB first": little endian, least significant bit first
- "MSB first": big endian, most significant bit first

Remote command:
`SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:BITorder` on page 2061

Numeric format
Selects how the "Condition" value is interpreted:

- Symbolic: Assigns a symbolic translation on the data fields. Only available for custom protocols.
- Value list: Assigns a custom name to each hexadecimal value; any value without an assigned value is shown as "Undefined".
- A*X+B: Assigns a linear function on the data fields.
- For details on the other numeric formats, see "Format-specific information" on page 532.

The following rules apply:
- If the condition contains at least one of "H", "h", "L", "l", "X", "x", and all other characters are only "1" and/or "0", the value is always treated as binary, regardless of the selected numeric format.
- "x" and "X" are wildcards and are supported only in binary format or when the string is auto-interpreted as binary per the rule above.
  Examples for format set to "HEX":
  – "=1HL111000": valid (read as binary)
  – "=0x10101": valid (read as binary; "x" acts as wildcard, not a hex prefix)
  – "=1010": valid (read as HEX, with a total of 16 bits)
  – "=0x5A": valid (read as HEX "5A", because "0x" is a valid hex prefix; entering 5A alone is recommended)

– "=5X12": invalid
– "=1H33": invalid

Remote command:
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:FORMat on page 2062

Add value
Creates a new hexagonal value for customization.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:ADDValue on page 2063

Value
Defines the hexagonal value to convert it into a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue on page 2063

Label
Defines the label to convert the corresponding hexagonal value to a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel on page 2063

Unit
Defines a unit for the linear function.

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:UNIT on page 2064

Parameter A,B
Defines the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:PARA on page 2064
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:PARB on page 2064

14.18.4 SPMI software trigger

14.18.4.1 Setup A trigger

Before setting up the software trigger for the protocols, a trigger A event needs to be set up.

14.18.4.2 Software trigger settings

Access: "Menu" > "Apps" > "Protocol" tab > "SPMI" > "Trigger" tab > "Setup Software Trigger" > "Setup SB Trigger".

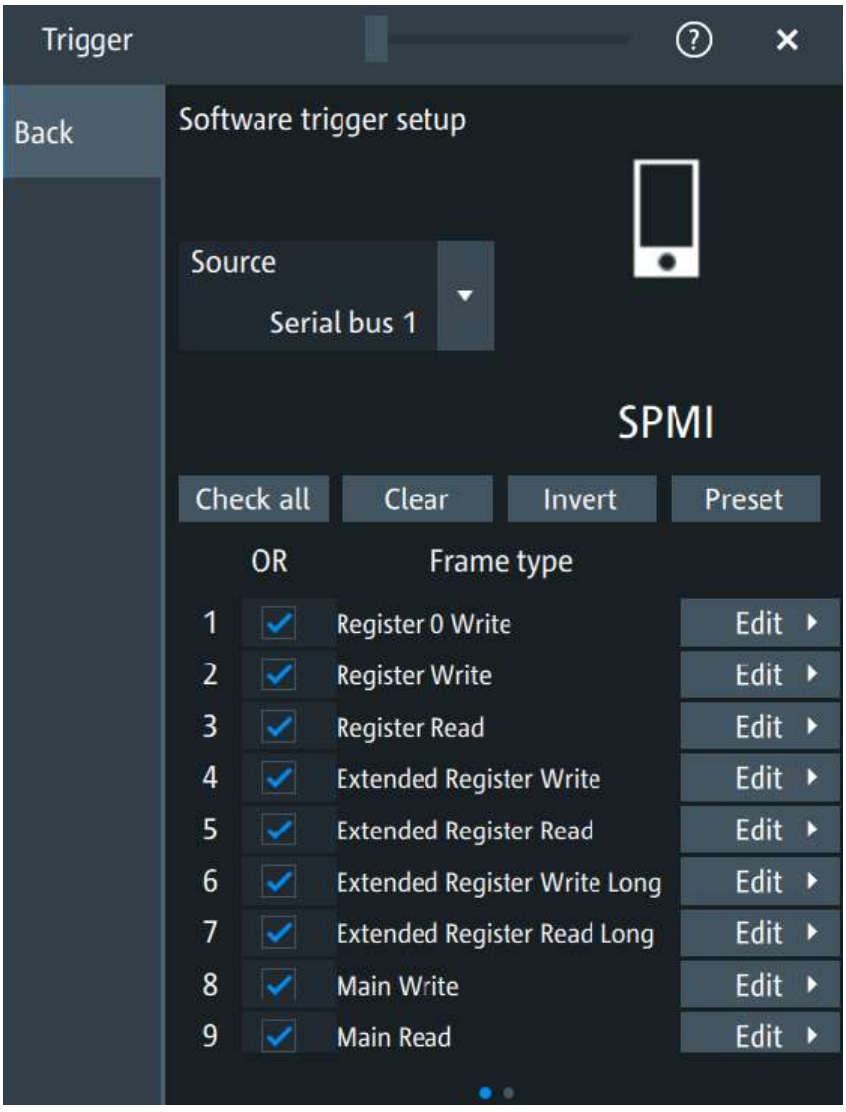

In the "Software Trigger" tab, you can define the settings to trigger on the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to trigger on.

"Check all" Enables the software trigger for all available frames and error types.

"Clear" Disables the software trigger for all available frames and error types.

"Invert" Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types for the software trigger.

Remote command:
`TRIGger:SBSW:SPMI:CHKall` on page 2065
`TRIGger:SBSW:SPMI:CLR` on page 2066
`TRIGger:SBSW:SPMI:INVert` on page 2066
`TRIGger:SBSW:SPMI:RST` on page 2066

Frame type
Selects the frame type that you want to trigger on. You can trigger on all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

Remote command:
`TRIGger:SBSW:SPMI:FRENable` on page 2066
`TRIGger:SBSW:SPMI:FRAMe<fr>:ENABle` on page 2066

Edit
Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

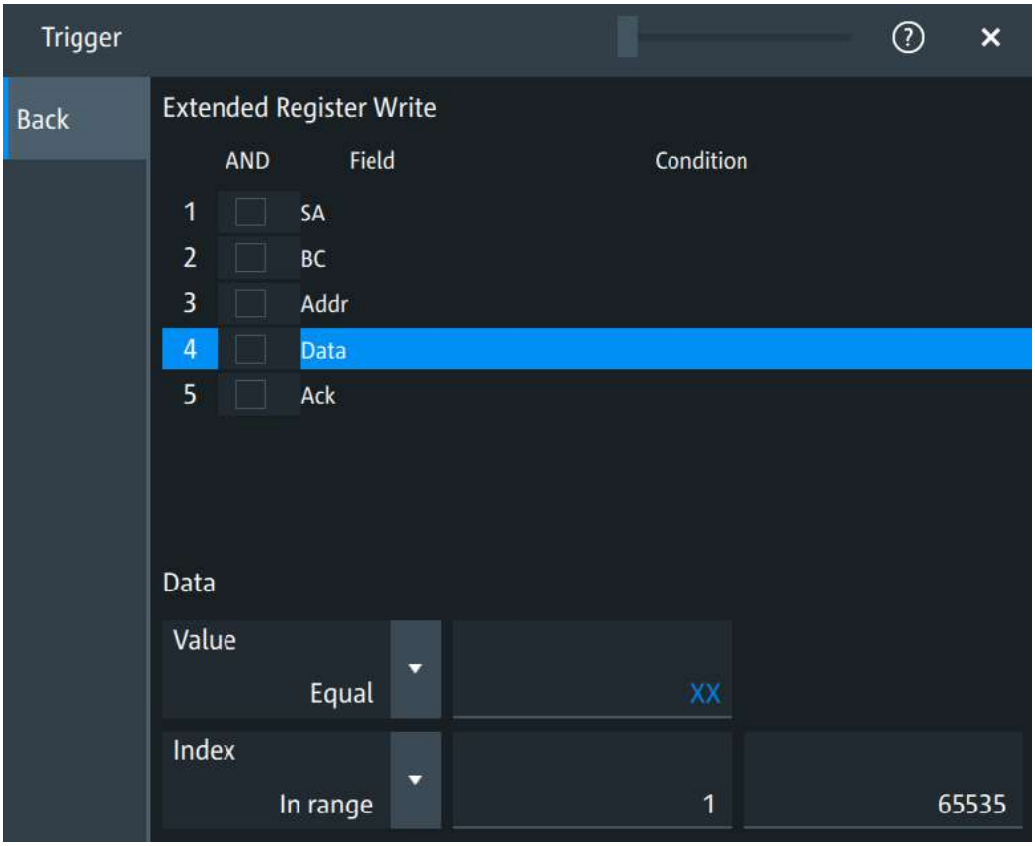

"Field" Enables the field type that you want to trigger on for the selected frame.

Remote command:
`TRIGger:SBSW:SPMI:FIENable` on page 2068
`TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:ENABle` on page 2068

"Condition" Displays the value condition for the selected field.

Remote command:
`TRIGger:SBSW:SPMI:BIT` on page 2066
`TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:BIT` on page 2066

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
`TRIGger:SBSW:SPMI:DMAX` on page 2067
`TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:DMAX` on page 2067
`TRIGger:SBSW:SPMI:DMIN` on page 2067
`TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:DMIN` on page 2067
`TRIGger:SBSW:SPMI:DOPerator` on page 2068
`TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:DOPerator` on page 2068

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
TRIGger:SBSW:SPMI:IMAX on page 2068
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:IMAX on page 2068
TRIGger:SBSW:SPMI:IMIN on page 2069
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:IMIN on page 2069
TRIGger:SBSW:SPMI:IOPerator on page 2069
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:IOPerator on page 2069

Error type
Enables triggering on the selected error type.

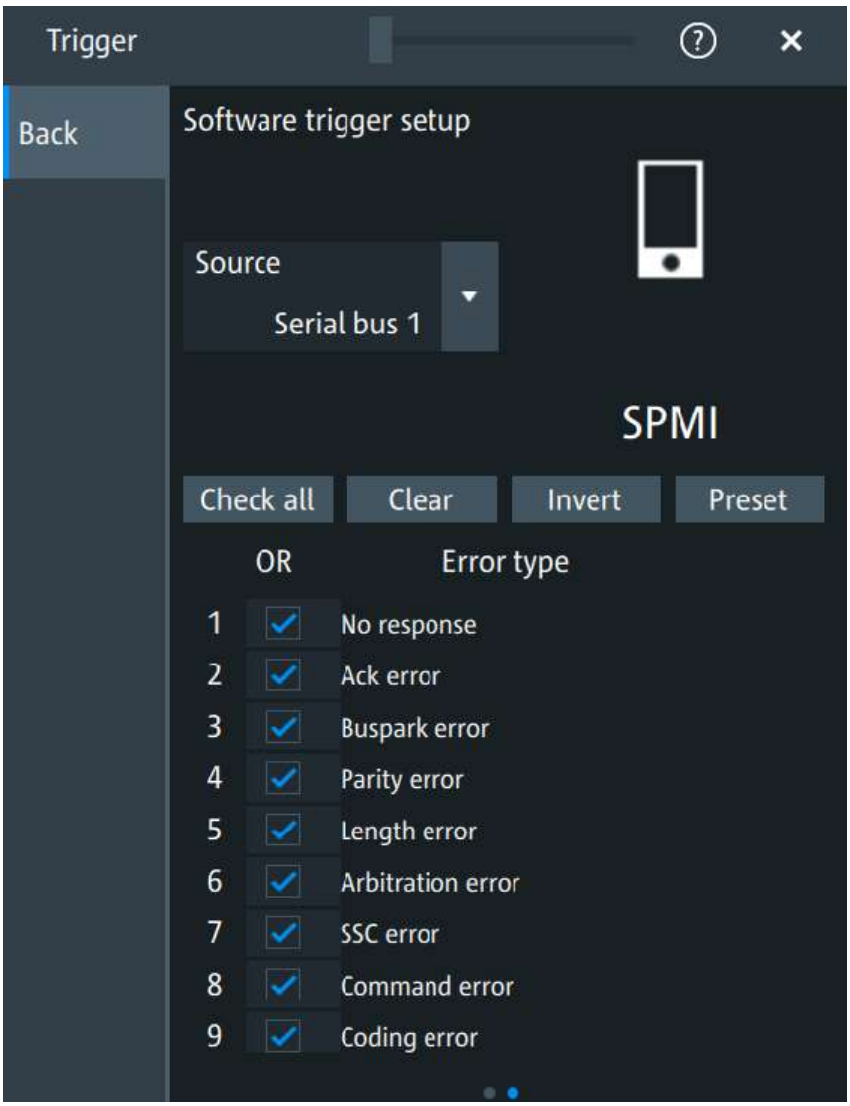

Remote command:
TRIGger:SBSW:SPMI:ERENable on page 2069
TRIGger:SBSW:SPMI:ERRor<m>:ENABle on page 2069

14.18.5 Measure

The "Setup Measurement" button opens the dialog for automatic measurements in the "Protocol" category for the selected serial bus.

See Section 10.2.8.2, "Settings for protocol measurements", on page 311.

14.18.6 SPMI decode results

To enable the decoding, see Section 14.1.9.3, "Decoding protocol signals", on page 531.

For more information on decoding SPMI, you can also refer to the video, available on the Rohde & Schwarz YouTube channel: Decoding SPMI with MXO Series Oscilloscopes.

Decode results table

The "Decode results" table contains information about all decoded frames.

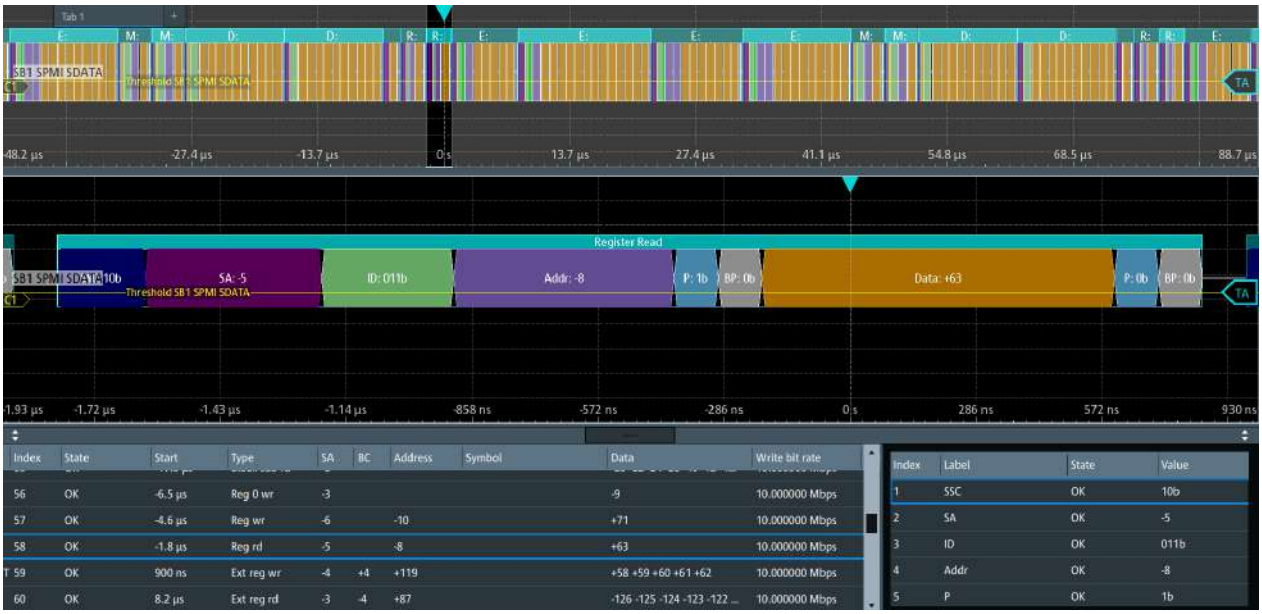

Figure 14-51: Decoded SPMI signal

The decode results table contains information about all decoded frames.

Table 14-32: Content of the decode results table

Column	Description
Index	Index of the decoded frame
State	Overall state of the frame
Start	Time of frame start
Type	The type of frame
SA	Secondary node address. Select the data format in the "Display" tab.

Column	Description
BC	Byte count value. Select the data format in the "Display" tab.
Address	Register address. Select the data format in the "Display" tab.
Symbol	Symbolic label of the frame. Available only, if "Show symbols" is enabled in the "Display" tab and a symbols list is loaded.
Data	Data value. Select the data format in the "Display" tab.
Write bit rate	Value of the write bit rate
Read bit rate	Value of the read bit rate

When you select a frame in the decode results table, its field content is shown in the details table to the right.

Table 14-33: Content of the frame details table

Column	Description
Index	Number of the decoded field
Label	Name of the field
State	State of the field
Value	Value of the field

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 1491

Remote commands

Remote commands to retrieve decode results are described in Section 18.18.19, "SPMI (option R&S MXO5-K550)", on page 2045.

You can also export the decode results. For details see Section 14.1.9.4, "Exporting decode results", on page 531.

Example SPMI export file

```
Index,Start,Stop,State,Type,SA,BC,Address,Write bit rate,Read bit rate
1,-0.000405,-0.0004032,'OK','RZWR',Dh,---,---,10000000,---
2,-0.0004031,-0.0004004,'OK','RWR',Ah,---,16h,10000000,---
3,-0.0004003,-0.0003977,'OK','RRD',Bh,---,18h,10000000,10000000
4,-0.0003976,-0.0003904,'OK','ERWR',Ch,4h,77h,10000000,---
5,-0.0003903,-0.000376,'OK','ERRD',Dh,Ch,57h,10000000,10000000

Details frame 1
Index,Label,State,Value
1,'"SSC"','OK','"10b"'
```

```
2,'"SA"','OK','"Dh"'
3,'"ID"','OK','"1b"'
4,'"Data"','OK','"77h"'
5,'"P"','OK','"1b"'
6,'"BP"','OK','"0b"'
7,'"Ack"','OK','"1b"'
8,'"BP"','OK','"0b"'

Details frame 2
Index,Label,State,Value
1,'"SSC"','OK','"10b"'
2,'"SA"','OK','"Ah"'
3,'"ID"','OK','"010b"'
4,'"Addr"','OK','"16h"'
5,'"P"','OK','"1b"'
6,'"Data"','OK','"47h"'
7,'"P"','OK','"1b"'
8,'"BP"','OK','"0b"'
9,'"Ack"','OK','"1b"'
10,'"BP"','OK','"0b"'
```

14.19 RFFE (mobile electronics, option R&S MXO5-K550)

Requirements

For performing RFFE decode measurements, you need the following:

- MXO 5 with 2 available channels. The channel can be:
  - Analog channels (C1-C4)
  - Logic channels (D0-D15) (requires option R&S MXO5-B1)
- Two probes
- Option R&S MXO5-K550

- About the RFFE protocol 870
- RFFE configuration 872
- RFFE filter 874
- RFFE format configuration 878
- RFFE software trigger 884
- Measure 888
- RFFE decode results 888

14.19.1 About the RFFE protocol

The RFFE interface is specified in the "MIPI® Alliance Specification for RF Front-End Control Interface". The RFFE interface is used by the radio frequency front-end interface chips in most LTE-Advanced platforms and in smart phones in general. RFFE is

a replacement for existing standards like SPI and I²C that do no meet performance requirements.

Bus structure

RFFE is a two-wire, serial interface that connects up to 4 main devices (Radio Frequency IC, RFIC) to up to 15 sub devices (front-end modules, FEM) on a single RFFE bus. A sub device has read-write capability, or it is write only. Only one of the main devices is the active main device (bus owner main device, BOM), which can initiate command sequences on the bus.

The interface has two lines: one clock signal (SCLK) controlled by the main device, and a serial bidirectional data signal (SDATA). Furthermore, a VIO supply/reference voltage from a common source is applied to all components on the bus.

Command sequences

Protocol messages are called command sequences in RFFE. The standard defines various command sequences to accomplish read and write access to sub devices and to non-active main devices. Command sequences are initiated by the BOM main device on the SDATA line.

In general, a command sequence consists of:

- Sequence start condition (SSC)
  Two bits: 1 followed by 0 on SDATA while SCLK is at logic level zero.
- Command frame
  Consist of a 4-bit sub device address field (SA), followed by 8 command payload bits and a single parity bit.
- Address and/or data frames, depending on the command sequence
  A frame consists of 8 data bits or 8 register address bits, followed by a single parity bit. The number of address and data frames varies depending on the command sequence type.
- Bus park cycle (BP)
  A BP cycle is sent at the end of a command sequence, and when the device transfers control of SDATA to another device.

Between the end of a command sequence and the beginning of a new command sequence, the bus is in idle condition at least for 10 ns.

The bits are sent MSB first.



Figure 14-52: General structure of a RFFE Write command sequence

SSC	Command frame		Address and data frames			BP
	SA 4 bits	Command payload 8 bits + P	[Address frames] 8 bits + P	BP	[Data frames] 8 bits + P	

Figure 14-53: General structure of a RFFE Read command sequence

14.19.2 RFFE configuration

14.19.2.1 RFFE configuration settings

Access: "Menu" > "Apps" > "Protocol" tab > "RFFE" > "Setup".

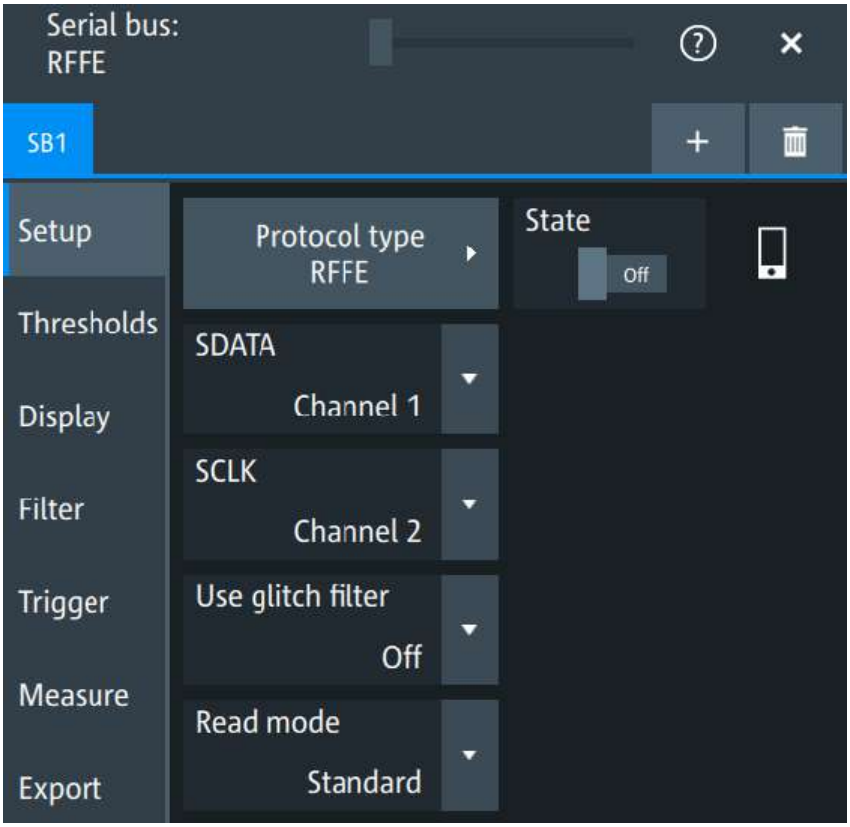

Make sure that the tab of the correct serial bus is selected.

Protocol type
Selects the protocol type to be decoded.

Remote command:
`SBUS<sb>:TYPE` on page 1489

State
Enables the decoding of the selected bus. The signal icon of the bus appears on the signal bar.

Remote command:
SBUS<sb>[:STATe] on page 1489

SDATA
Sets the source of the data line.

Remote command:
SBUS<sb>:RFFE:DATA:SOURce on page 2078

SCLK
Sets the source of the clock line.

Remote command:
SBUS<sb>:RFFE:CLOCk:SOURce on page 2077

Use glitch filter, Glitch filter width
Enables the glitch filter on the SCLK and SDATA lines to improve decode accuracy.

The "Glitch filter width" field sets the maximum glitch width to be ignored.

Remote command:
SBUS<sb>:RFFE:GFILter on page 2079
SBUS<sb>:RFFE:GFWidth on page 2079

Read mode
Selects, if the standard or synchronous read ("sRead") mode is used.

Remote command:
SBUS<sb>:RFFE:RDMD on page 2079

14.19.2.2 Threshold settings

Access: "Menu" > "Apps" > "Protocol" tab > "RFFE" > "Thresholds".

Threshold
Sets the threshold for the data and clock channel. Enter the value directly in the fields.

Additional to the threshold, you can also set a hysteresis.

Remote command:
SBUS<sb>:RFFE:DATA:THReshold on page 2078
SBUS<sb>:RFFE:DATA:HYSTeresis on page 2078
SBUS<sb>:RFFE:CLOCk:THReshold on page 2077
SBUS<sb>:RFFE:CLOCk:HYSTeresis on page 2077

Show threshold lines
If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also Show threshold lines.

Remote command:
SBUS<sb>:THReshold on page 1492

14.19.2.3 Display settings

For details about the display settings, see Section 14.1.3.1, "Display settings", on page 511.

Decode layer
Selects the decode layer.

Decoding is performed in several steps, and the results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display.

14.19.3 RFFE filter

Access: "Menu" > "Apps" > "Protocol" tab > "RFFE" > "Filter" tab

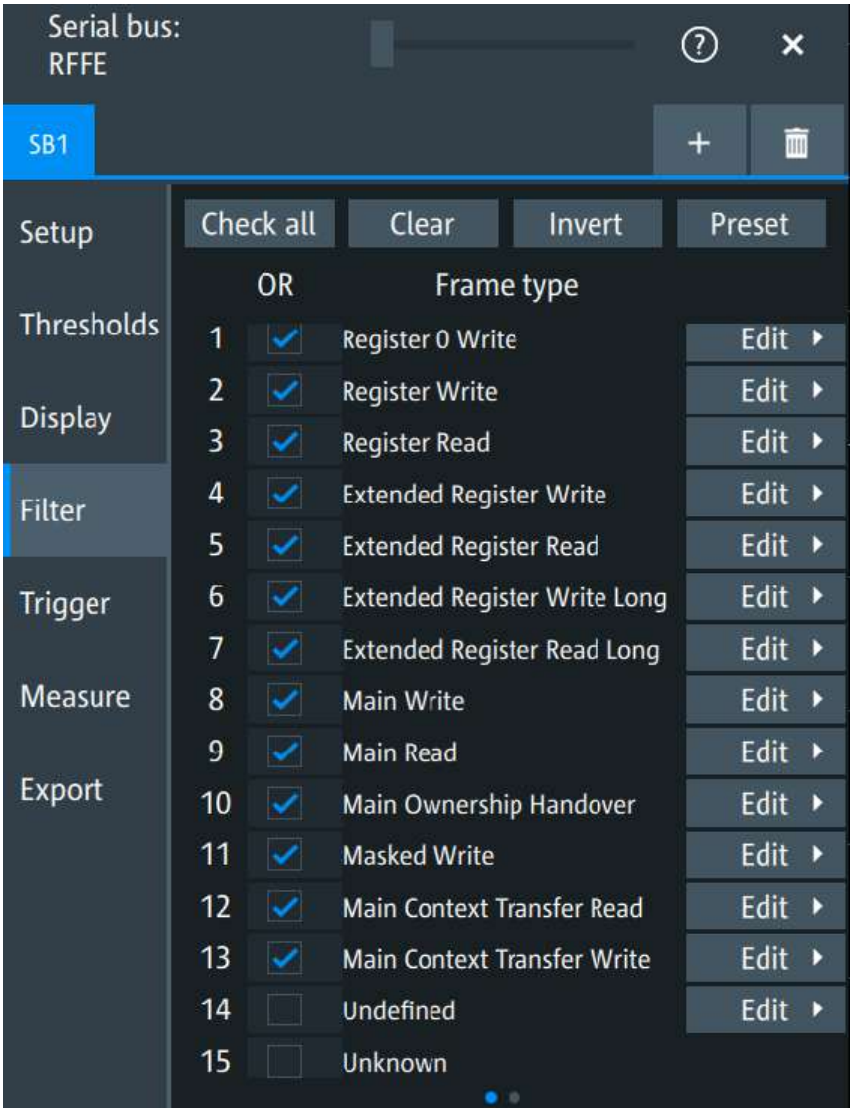

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all" Enables the filter for all available frames and error types.

"Clear" Disables the filter for all available frames and error types.

"Invert" Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types.

Remote command:
`SBUS<sb>:RFFE:FILTer:CHKall` on page 2081
`SBUS<sb>:RFFE:FILTer:CLR` on page 2081

SBUS<sb>:RFFE:FILTer:INVert on page 2081
SBUS<sb>:RFFE:FILTer:RST on page 2081

Enable
Enables the filtering on RFFE frames. Only the frames that match the selected filter conditions are displayed.

Remote command:
SBUS<sb>:RFFE:FILTer:FRENable on page 2082
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:ENABle on page 2084

Frame type
Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.

For selected frame types, you can also specify conditions for the value of the fields in the "Edit" dialog.

The following frames are available: "Register 0 Write", "Register Write", "Register Read", "Extended Register Write", "Extended Register Read", "Extended Register Write Long", "Extended Register Read Long", "Main Write", "Main Read".

Edit
Opens a dialog to define the details of the selected frame.

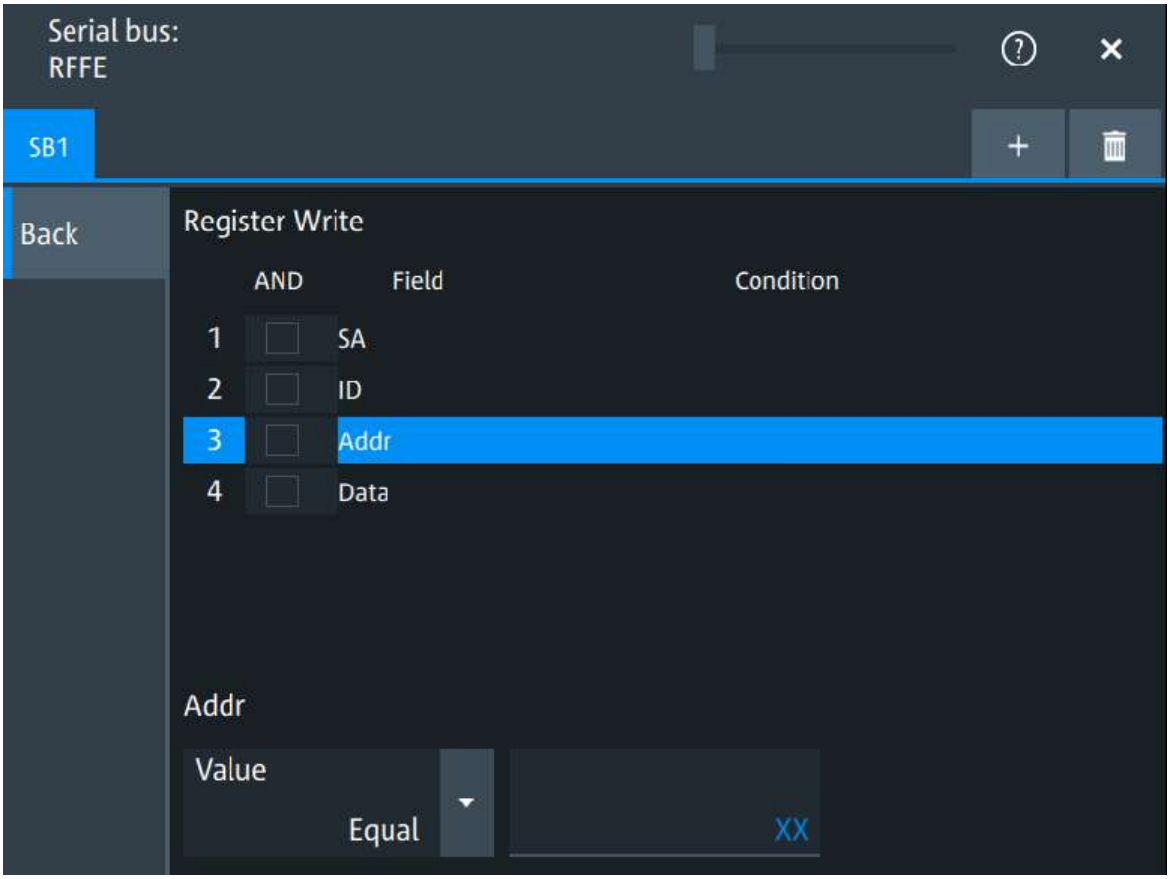

"Field" Enables the field type that you want to filter on for the selected frame. The following fields are available: "SA", "ID", "Data", "Addr", "BC", "MID", "Data MSB", "Data LSB".

Remote command:
SBUS<sb>:RFFE:FILTer:FIENable on page 2084
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:ENABle on page 2084

"Condition" Displays the value condition for the selected field.

Remote command:
SBUS<sb>:RFFE:FILTer:BIT on page 2082
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:BIT on page 2082

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
SBUS<sb>:RFFE:FILTer:DMAX on page 2082
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:DMAX on page 2082
SBUS<sb>:RFFE:FILTer:DMIN on page 2083
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:DMIN on page 2083
SBUS<sb>:RFFE:FILTer:DOPerator on page 2083
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:DOPerator on page 2083

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
SBUS<sb>:RFFE:FILTer:IMAX on page 2084
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:IMAX on page 2084
SBUS<sb>:RFFE:FILTer:IMIN on page 2084
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:IMIN on page 2084
SBUS<sb>:RFFE:FILTer:IOPerator on page 2085
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:IOPerator on page 2085

Error type
Enables filtering on the selected error type.

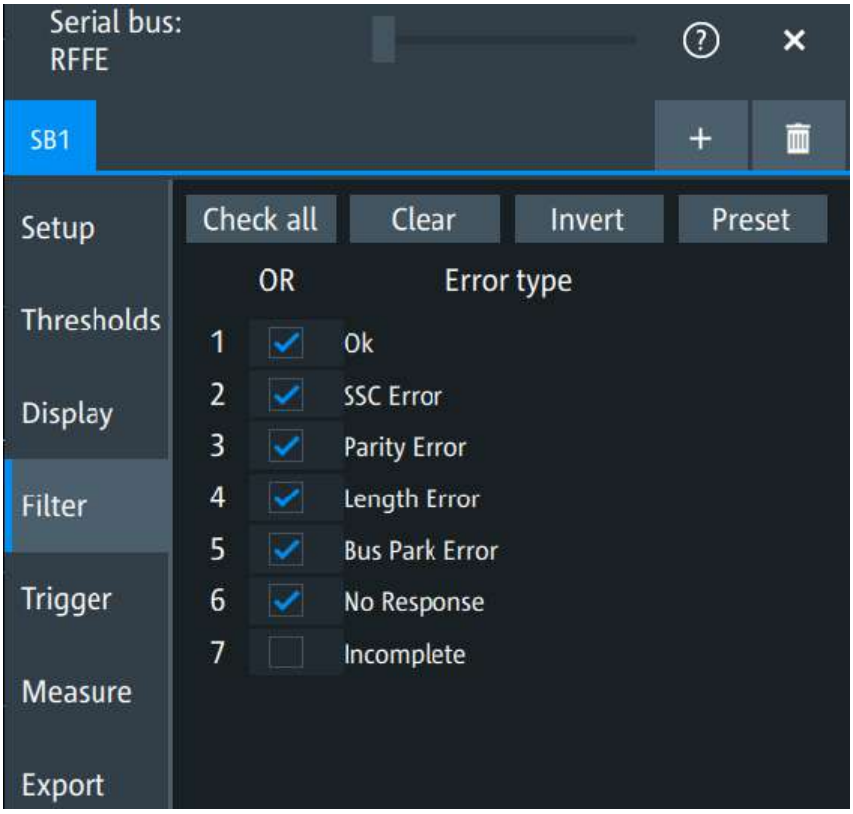

The following error types are available: "OK", "SSC Error", "Parity error", "Length error", "Bus park error", "No response".

Remote command:
`SBUS<sb>:RFFE:FILTer:ERENable` on page 2085
`SBUS<sb>:RFFE:FILTer:ERRor<n>:ENABle` on page 2085

14.19.4 RFFE format configuration

Access: "Menu" > "Apps" > "Protocol" tab > "RFFE" > "Format".

See Section 14.1.5, "Format", on page 516.

Show format
Enables the format configuration and displays the frame formats in the honey-comb view and results. If enabled, the frame formats are also selectable for triggering and filtering.

Remote command:
`SBUS<sb>:RFFE:FORMat:SELect` on page 2086

Add frame
Creates a frame format and adds it to the end of the frame list. A dialog opens to specify the frame details. The number of frame formats is limited to 100.

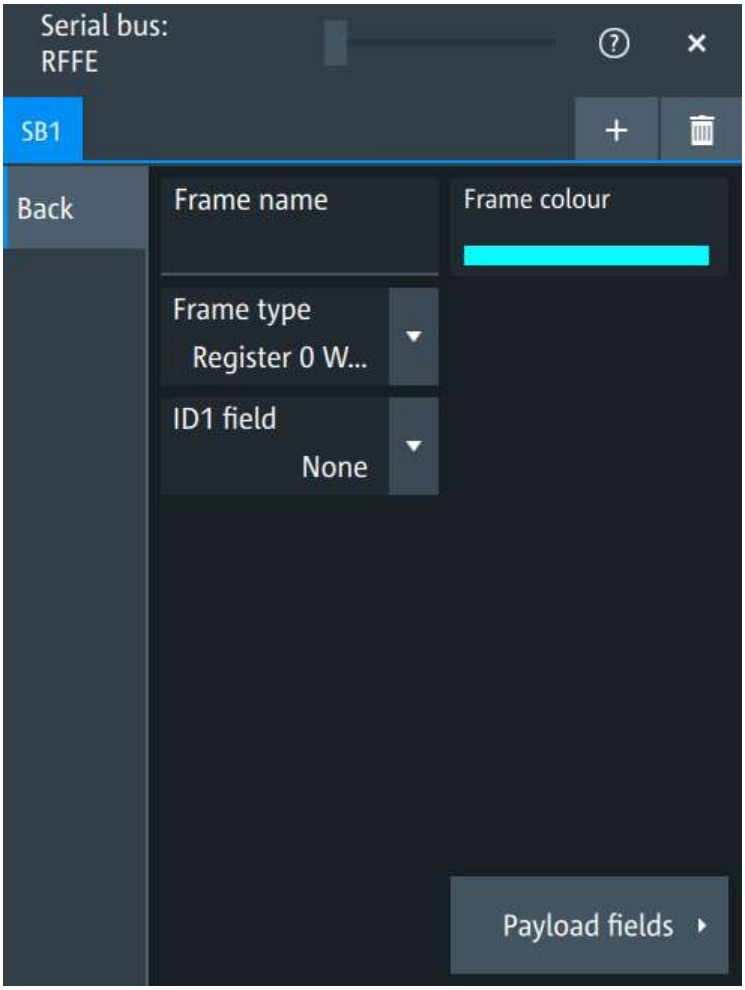

Remote command:
SBUS<sb>:RFFE:FORMat:ADDFrame on page 2086

Edit list
Enables editing the frame list. If enabled, you can delete a frame format by clicking its "Delete" icon. In a list with several entries, you can move frame formats up or down by clicking the arrow buttons. To exit the editing mode, click "Edit list" again.

Remote command:
SBUS<sb>:RFFE:FORMat:CLR on page 2087
SBUS<sb>:RFFE:FORMat:FCOunt? on page 2087

Open
Opens a dialog for loading an existing list of frame formats in XML file format.

Remote command:
SBUS<sb>:RFFE:FORMat:LOAD on page 2087

Save as
Opens a dialog for saving your current list of frame formats to an XML file. Saved frame formats can support efficient and convenient working.

Remote command:
SBUS<sb>:RFFE:FORMat:SAVE on page 2087

Frame name
Specifies an arbitrary name to label the currently selected frame format. Ideally, use speaking names according to the specifications of the applicable protocol standard. Frame names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:NAME on page 2088

Frame color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:COLor on page 2089

Frame type
Select an original frame type.

Remote command:
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:TYPE on page 2089

ID<n> field
Select the first to third identifying field types.

Remote command:
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ID1Field on page 2089
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ID2Field on page 2089
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ID3Field on page 2089

ID<n> value
Select the value of the corresponding field type.

Remote command:
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ID1Value on page 2090
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ID2Value on page 2090
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ID3Value on page 2090

Payload fields
Opens the payload field configuration dialog. The format configuration of payload fields is optional and replaces the payload data of the identified frame.

Add field
Creates a new field description for the currently selected frame format and adds it to the end of the field list with color, bit position (order of transmission) and name. Brackets indicate how often bits will be repeated, [] indicates that this is an open array.

A dialog opens to specify the field details. The number of field descriptions is limited to 100.

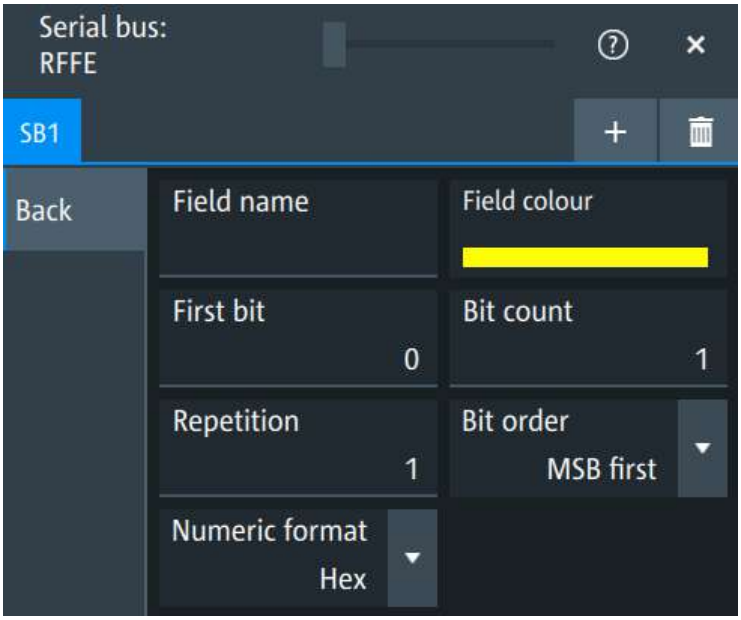

Remote command:
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ADDField on page 2088

Field name
Specifies an arbitrary name for the currently selected field description. Ideally, use speaking names.

Field names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:NAME on page 2090

Field color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:COLor on page 2090

First bit
In order of transmission, sets the first bit of this field in the payload.

Remote command:
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:FSTBit on page 2091

Bit count
Sets the number of bits in the selected field, i.e., the field's length. Selecting the value opens a keypad showing allowed minimum and maximum values. You can set "Min", "Max", "Reset" or adjust with the "Inc" or "Dec" buttons by 1 or 10 (step size dependent). Use "CE" to restore the value used before the keypad opened.

If the "Condition" pattern length does not match the "Bit count":
- Too long, it is truncated.

- Too short, it is left-padded with 0.

Both truncation and padding happen on the left side of the condition and follow the configured "Bit order".

Examples for "Condition" "=100"):
- "Bit order" is "MSB":
  – Bit count = 2: truncated. Result: =00
  – Bit count = 4: padded. Result: =0100
- "Bit order" is LSB first (equivalent MSB-first representation is =001):
  – Bit count = 2: truncated. Result: =00 (LSB first), =00 (MSB first)
  – Bit count = 4: padded. Result: =0100 (LSB first), =0010 (MSB first)

Remote command:
`SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:BITCount` on page 2091

Repetition
Defines the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Remote command:
`SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:REPetition` on page 2091

Bit order
Selects, in which order the bits of a field's "Condition" value are evaluated:

- "LSB first": little endian, least significant bit first
- "MSB first": big endian, most significant bit first

Remote command:
`SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:BITorder` on page 2092

Numeric format
Selects how the "Condition" value is interpreted:

- Symbolic: Assigns a symbolic translation on the data fields. Only available for custom protocols.
- Value list: Assigns a custom name to each hexadecimal value; any value without an assigned value is shown as "Undefined".
- A*X+B: Assigns a linear function on the data fields.
- For details on the other numeric formats, see "Format-specific information" on page 532.

The following rules apply:
- If the condition contains at least one of "H", "h", "L", "l", "X", "x", and all other characters are only "1" and/or "0", the value is always treated as binary, regardless of the selected numeric format.
- "x" and "X" are wildcards and are supported only in binary format or when the string is auto-interpreted as binary per the rule above.
  Examples for format set to "HEX":
  – "=1HL111000": valid (read as binary)
  – "=0x10101": valid (read as binary; "x" acts as wildcard, not a hex prefix)
  – "=1010": valid (read as HEX, with a total of 16 bits)
  – "=0x5A": valid (read as HEX "5A", because "0x" is a valid hex prefix; entering 5A alone is recommended)

– "=5X12": invalid
– "=1H33": invalid

Remote command:
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:FORMat on page 2092

Add value
Creates a new hexagonal value for customization.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:ADDValue on page 2093

Value
Defines the hexagonal value to convert it into a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue on page 2093

Label
Defines the label to convert the corresponding hexagonal value to a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel on page 2094

Unit
Defines a unit for the linear function.

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:UNIT on page 2094

Parameter A,B
Defines the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:PARA on page 2094
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:PARB on page 2094

14.19.5 RFFE software trigger

14.19.5.1 Setup A trigger

Before setting up the software trigger for the protocols, a trigger A event needs to be set up.

14.19.5.2 Software trigger settings

Access: "Menu" > "Apps" > "Protocol" tab > "RFFE" > "Trigger" tab > "Setup Software Trigger" > "Setup SB Trigger"

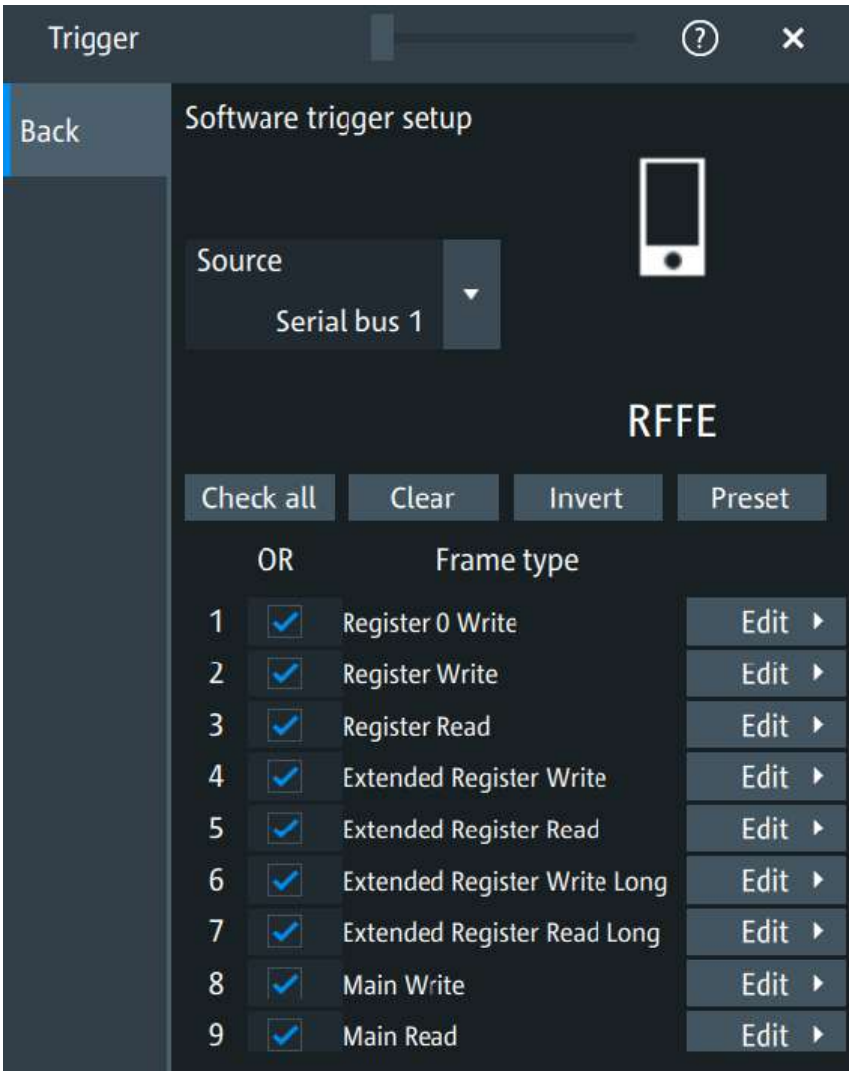

In the "Software Trigger" tab, you can define the settings to trigger on the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to trigger on.

"Check all" Enables the software trigger for all available frames and error types.

"Clear" Disables the software trigger for all available frames and error types.

"Invert" Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types for the software trigger.

Remote command:
`TRIGger:SBSW:RFFE:CHKall` on page 2096
`TRIGger:SBSW:RFFE:CLR` on page 2096
`TRIGger:SBSW:RFFE:INVert` on page 2096
`TRIGger:SBSW:RFFE:RST` on page 2096

Frame type
Selects the frame type that you want to trigger on. You can trigger on all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

The following frames are available: : "Register 0 Write", "Register Write", "Register Read", "Extended Register Write", "Extended Register Read", "Extended Register Write Long", "Extended Register Read Long", "Main Write", "Main Read".

Remote command:
`TRIGger:SBSW:RFFE:FRENable` on page 2096
`TRIGger:SBSW:RFFE:FRAMe<fr>:ENABle` on page 2096

Edit
Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

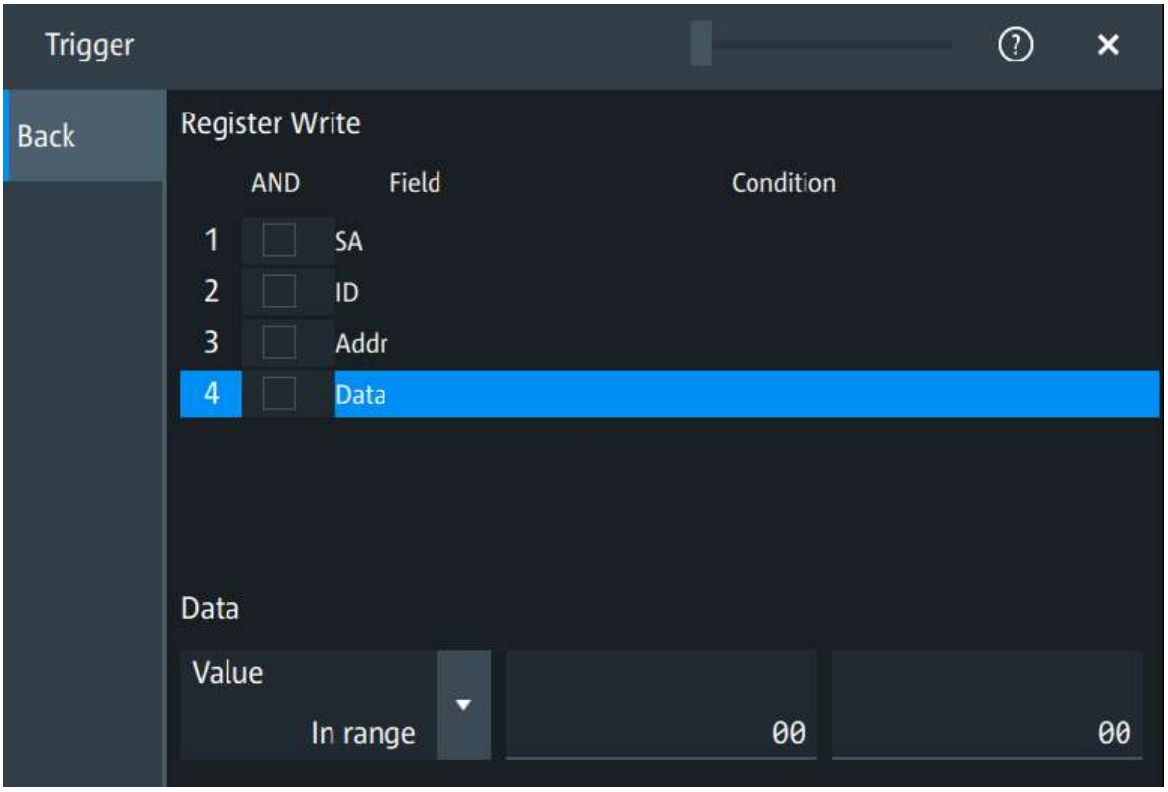

"Field" Enables the field type that you want to trigger on for the selected frame.
The available fields are: "SA", "ID", "Data", "Addr", "BC", "MID", "Data MSB", "Data LSB".

Remote command:
`TRIGger:SBSW:RFFE:FIENable` on page 2098
`TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:ENABle` on page 2098

"Condition" Displays the value condition for the selected field.

Remote command:
`TRIGger:SBSW:RFFE:BIT` on page 2097
`TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:BIT` on page 2097

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
`TRIGger:SBSW:RFFE:DMAX` on page 2097
`TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:DMAX` on page 2097
`TRIGger:SBSW:RFFE:DMIN` on page 2097
`TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:DMIN` on page 2097
`TRIGger:SBSW:RFFE:DOPerator` on page 2098
`TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:DOPerator` on page 2098

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
TRIGger:SBSW:RFFE:IMAX on page 2099
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:IMAX on page 2099
TRIGger:SBSW:RFFE:IMIN on page 2099
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:IMIN on page 2099
TRIGger:SBSW:RFFE:IOPerator on page 2099
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:IOPerator on page 2099

Error type
Enables triggering on the selected error type.

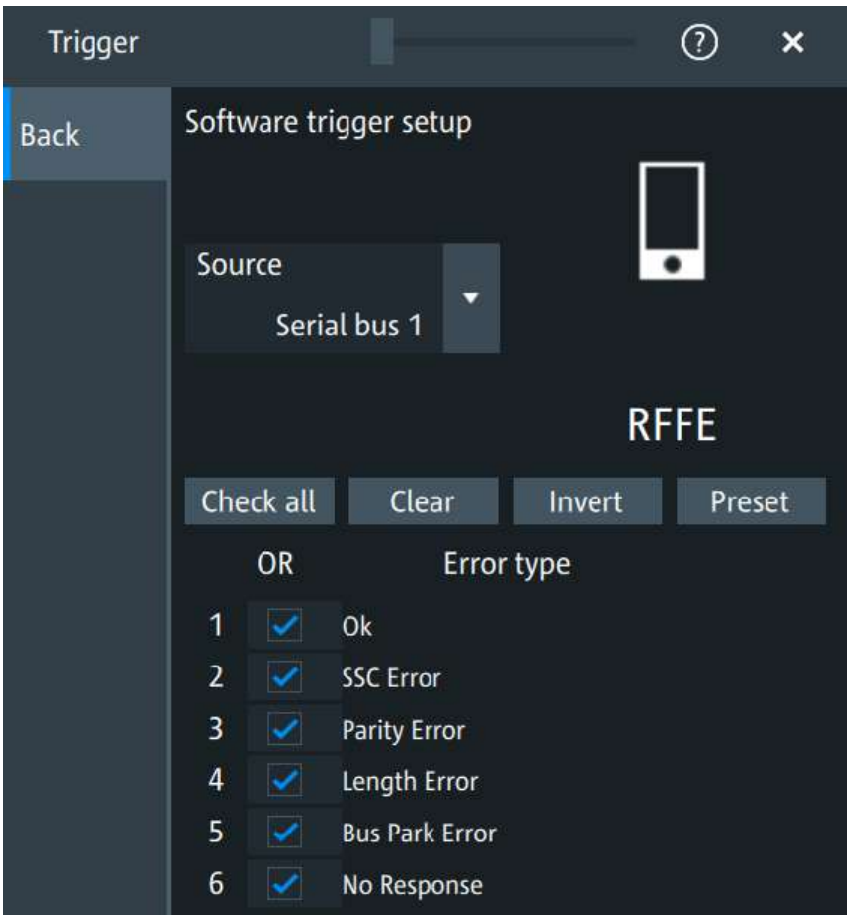

The following error types are available: "OK", "SSC Error", "Parity error", "Length error", "Bus park error", "No response".

Remote command:
TRIGger:SBSW:RFFE:ERENable on page 2100
TRIGger:SBSW:RFFE:ERRor<m>:ENABle on page 2100

14.19.6 Measure

The "Setup Measurement" button opens the dialog for automatic measurements in the "Protocol" category for the selected serial bus.

See Section 10.2.8.2, "Settings for protocol measurements", on page 311.

14.19.7 RFFE decode results

To enable the decoding, see Section 14.1.9.3, "Decoding protocol signals", on page 531.

Decode results table

The "Decode results" table contains information about all decoded frames.

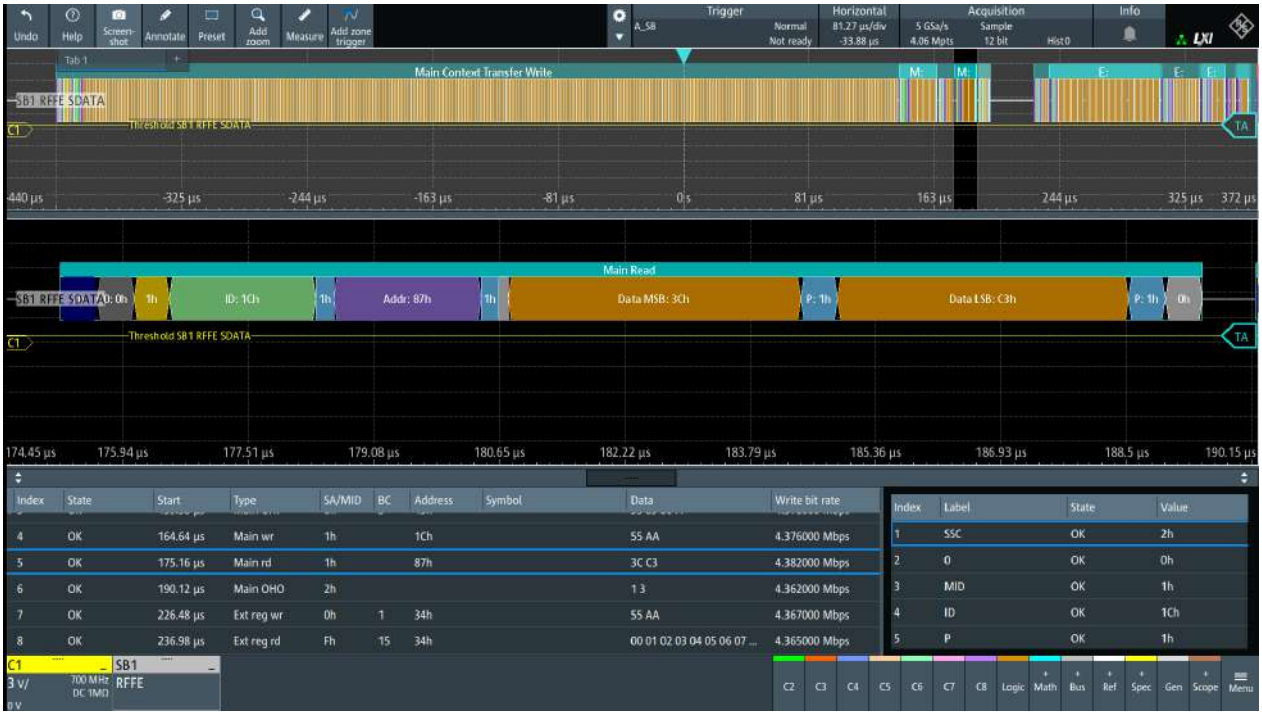

Figure 14-54: Decoded RFFE signal

The decode results table contains information about all decoded frames.

Table 14-34: Content of the decode results table

Column	Description
Index	Index of the decoded frame
State	Overall state of the frame
Start	Times of frame start
Type	The type of command
SA/MID	Address of the sub device

Column	Description
BC	Byte count
Address	Register address
Symbol	Symbolic label of the frame. Available only, if "Show symbols" is enabled in the "Display" tab and a symbols list is loaded.
Data	Values of the data bytes. Select the data format in the "Display" tab.
Write bit rate	Value of the write bit rate
Read bit rate	Value of the read bit rate

When you select a frame in the decode results table, its field content is shown in the details table to the right.

Table 14-35: Content of the frame details table

Column	Description
Index	Number of the decoded field
Label	Name of the field
State	State of the field
Data	Value of the field

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 1491

Remote commands

Remote commands to retrieve decode results are described in Section 18.18.20.5, "Decode results", on page 2101.

You can also export the decode results. For details see Section 14.1.9.4, "Exporting decode results", on page 531.

Example of RFFE export file

```
Index,Start,Stop,State,Type,SA, BC,    Addr,    Write BR,    Read BR
1    -0.1000402    -0.0003965    OK    MSKW    5h    ---    2Eh    4376000    ---
2    -0.0003957    0.00013858    OK    MCTW    0h    255    3Ah    4375000    ---
3    0.00013938    0.00016396    OK    MCTR    0h    3      43h    4378000    2187000
4    0.00016464    0.00017436    OK    MWR     1h    ---    1Ch    4376000    ---
5    0.00017516    0.00018944    OK    MRD     1h    ---    87h    4382000    2190000
6    0.00019012    0.00019824    OK    MOHO    2h    ---    ---    4362000    2195000
7    0.00022648    0.00023618    OK    ERWR    0h    1      34h    4367000    ---
8    0.00023698    0.00030888    OK    ERRD    Fh    15     34h    4365000    2187000
```

```
Details frame 1
Index    Label    State    Value
1    'Mask'    'OK'    3Fh
2    'Data'    'OK'    15h

Details frame 3
Index    Label    State    Value
1    'Data: 1'    'OK'    55h
2    'Data: 2'    'OK'    83h
3    'Data: 3'    'OK'    00h
4    'Data: 4'    'OK'    FFh

Details frame 4
Index    Label    State    Value
1    'Data MSB'    'OK'    55h
2    'Data LSB'    'OK'    AAh
```

14.20 10BASE-T1S (automotive Ethernet, option R&S MXO5-K560)

10BASE-T1S technology provides a 10 Mbit/s, multidrop transmission over a single pair physical layer. It is defined in the IEEE standard 802.3cg-2019 specification.

Requirements

For performing 10BASE-T1S decode measurements, you need the following:

- MXO 5. One of the analog input channels is used for analysis.
- Option R&S MXO5-K560

10BASE-T1S does not support logical channels for decoding, because it requires two thresholds, which are not available with this option.

- 10BASE-T1S basics 890
- 10BASE-T1S configuration 891
- 10BASE-T1S filter 896
- PPIFormat.PPIFrame.Name10BASE-T1S format configuration 898
- 10BASE-T1S software trigger 904
- Measure 906
- 10BASE-T1S decode results 907

14.20.1 10BASE-T1S basics

This option provides in-demand monitor and decode functions for 10BASE-T1S, where S stands for short reach. This standard, officially IEEE 802.3cg, attracted attention even before the specification was published in 2020. It was specified with automotive requirements in mind, as an alternative to CAN, CAN-FD or LIN. Target application is short-range data transmission with data rates up to 10 Mbit/s.

10BASE-T1S supports half-duplex and full-duplex communication, providing a point-to-point direct connection between two nodes. It is also suited for using a multidrop topology with up to eight nodes, connected on a single 25 m bus segment. Typical application examples are automotive interior lighting, parking radar, active suspension, motor management, and audio connections. It also supports networks of incompatible devices and different physical hardware.

Advantages over previously established 10 Mbit/s protocols include:

- Connecting all sensors over the same unshielded twisted pair cable, which saves interfaces, connectors, and cables, hence reducing weight, cost, and complexity.
- The simplified architecture, entirely Ethernet-based, eliminates any need for gateways between the networks. The unified design is also simpler to test and maintain.
- Maximized data rate: With Physical Layer Collision Avoidance (PLCA), only the node that currently has the right to transmit can send data. Nodes with no data to transmit will be given a reduced slot to send data, increasing the available bandwidth.

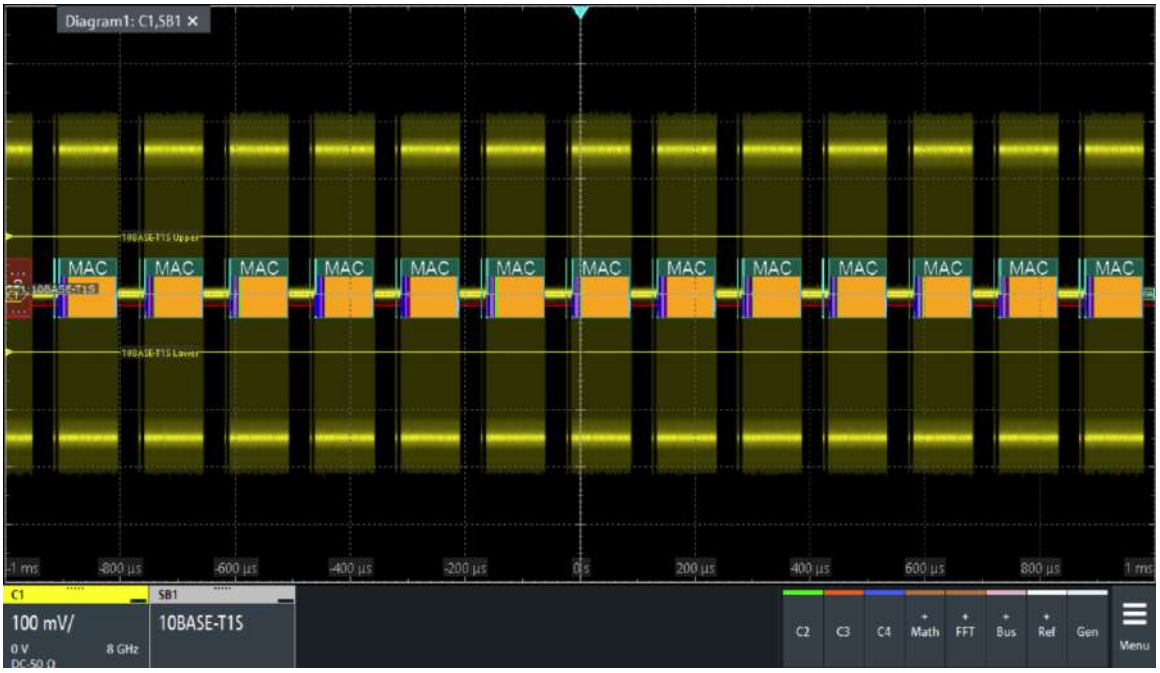

Figure 14-55: Example of a decoded 10BASE-T1S signal

14.20.2 10BASE-T1S configuration

14.20.2.1 10BASE-T1S configuration settings

Access: "Menu" > "Apps" > "Protocol" tab > "10BASE-T1S" > "Setup".

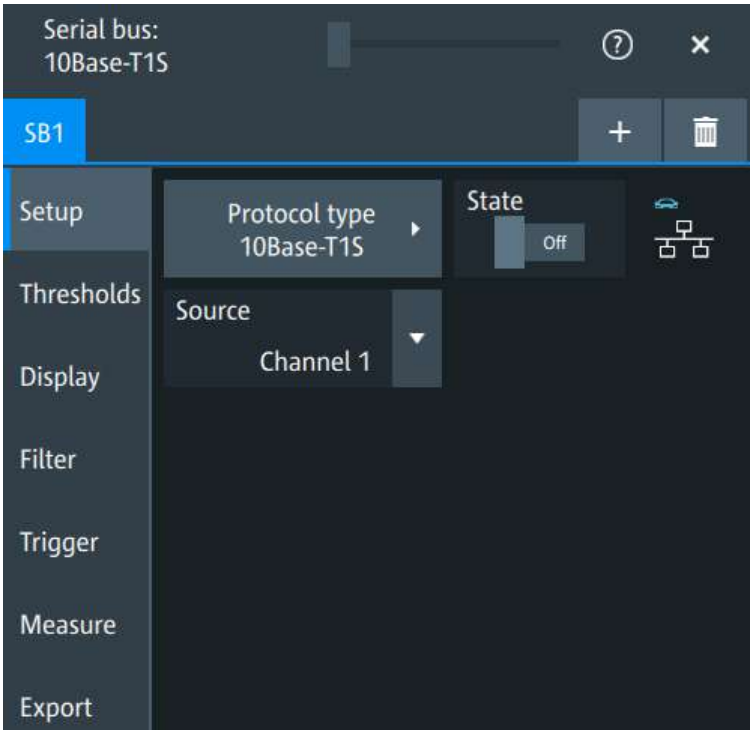

Make sure that the tab of the correct serial bus is selected.

Protocol type
Selects the protocol type to be decoded.

Remote command:
`SBUS<sb>:TYPE` on page 1489

Source
Selects the source channel for the 10BASE-T1S protocol. Only analog channels can be used.

Remote command:
`SBUS<sb>:TNOS:SOURce` on page 2110

14.20.2.2 Threshold settings

Access: "Menu" > "Apps" > "Protocol" tab > "10BASE-T1S" > "Thresholds".

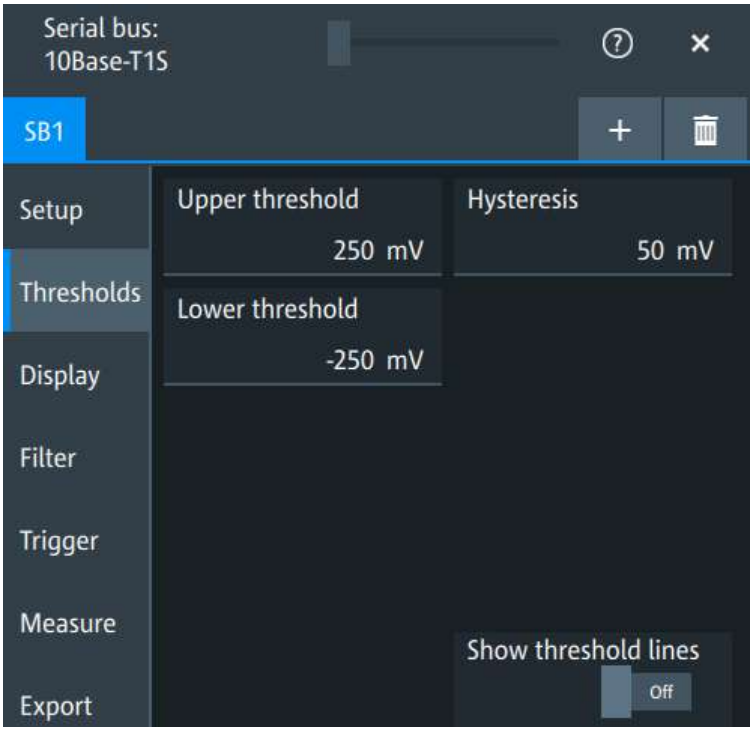

Threshold
Sets the threshold for the data channel. Enter the value directly in the fields.

Additional to the threshold, you can also set a hysteresis.

Remote command:
`SBUS<sb>:TNOS:THReshold:LOWer` on page 2110
`SBUS<sb>:TNOS:THReshold:UPPer` on page 2111
`SBUS<sb>:TNOS:THReshold:HYSTeresis` on page 2110

Show threshold lines
If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also Show threshold lines.

Remote command:
`SBUS<sb>:THReshold` on page 1492

14.20.2.3 Display settings

For details about the display settings, see Section 14.1.3.1, "Display settings", on page 511.

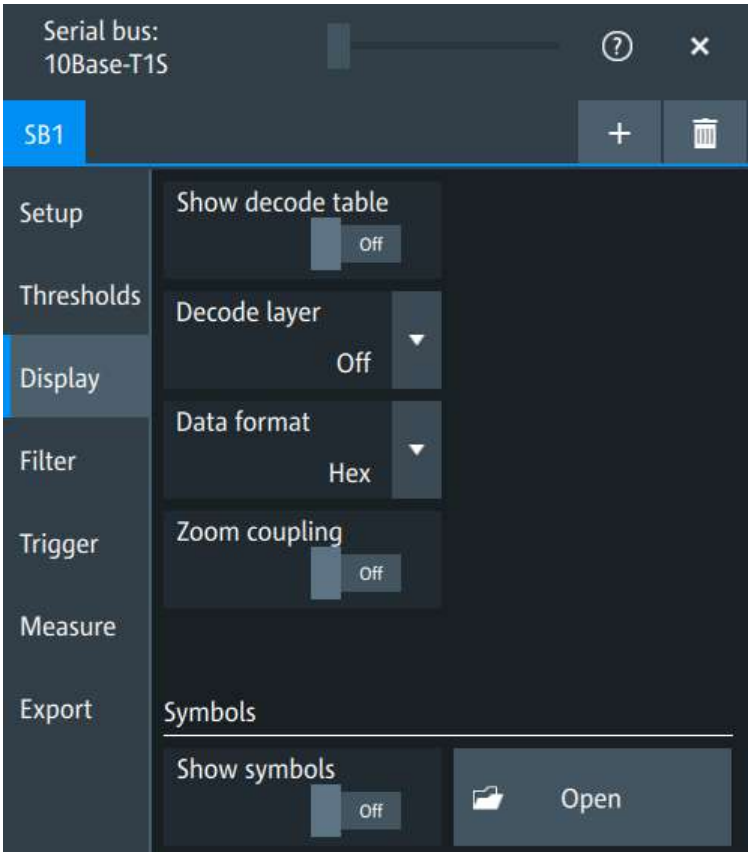

Decode layer
Selects the decode layer.

Decoding is performed in several steps, and the results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display:

"Off"	Disables the display of the decode layer.
"Edges"	Enables the display of all edges.
"Bits"	Enables the display of the raw, encoded bits.
"Symbols"	Enables the display of the raw, encoded symbols.
"Descrambled bits"	Enables the display of the fully decoded and descrambled binary data, representing the original information being transmitted over the 10BASE-T1S link.

Data format
See "Data format" on page 512.

Zoom coupling
See "Zoom coupling" on page 513.

Show symbols
You can load symbol lists and activate their usage for decoding. As a result, an additional "Symbol" column appears in the "Decode results" table, containing the symbolic label.

For more details, see Section 14.20.2.4, "10BASE-T1S symbols", on page 895.

14.20.2.4 10BASE-T1S symbols

Symbol lists are protocol-specific.

A 10BASE-T1S symbol file contains two values for each Ethernet header:

- Ethernet Header display
- Symbolic label: name of the address, specifying its function in the bus network.

```
############################################################
# Supported MAC Address Format
# xx:xx:xx  standard 24 bit manufactory header
# xx:xx:xx:xx:xx:xx/yy  support other length headers
# yy should be the header length in decimal
# yy should be between 24 - 48
############################################################
@PROTOCOL_NAME = ethernet
00:00:0C     Cisco
0:01:13     Olympus
0:01:14     KandaTsu
0:04:07     TopconPo
00:0B:64     KiebackP
00:1B:C5:06:C0:00/36     LuxconSy
00:1B:C5:06:D0:00/36     TesElect
00:1B:C5:06:E0:00/36     TwoDimen
00:1B:C5:06:F0:00/36     LlcEmzio
00:1F:BE     Shenzhen
00:21:8F     Avantgar
0.015625     GoliathS
0.015636574     D-Link
0.015648148     BaodingG
00:50:C2:5F:60:00/36     Cambridg
00:50:C2:5F:70:00/36     Metrolog
00:50:C2:5F:80:00/36     GrupoEpe
18:42:2F     AlcatelL
0.781273148     RiavaNet
18:46:17     SamsungE
18:8E:D5     TpVision
18:E7:F4     Apple
40:D8:55:1C:80:00/36     SensataT
40:D8:55:1C:90:00/36     Andy-L
40:D8:55:1C:A0:00/36     RigelEng
40:D8:55:1C:B0:00/36     MgSRL
40:D8:55:1C:D0:00/36     YxlonInt
```

```
40:D8:55:1C:E0:00/36     PeterHub
40:D8:55:1C:F0:00/36     OmnikNew
40:D8:55:1D:00:00/36     WebeasyB
FC:F8:B7      TronteqE
FC:FA:F7      Shanghai
FC:FE:77      HitachiR
FF:FF:FF:FF:FF:FF/48     BroadCast
```

14.20.3 10BASE-T1S filter

Access: "Menu" > "Apps" > "Protocol" tab > "10BASE-T1S" > "Filter" tab

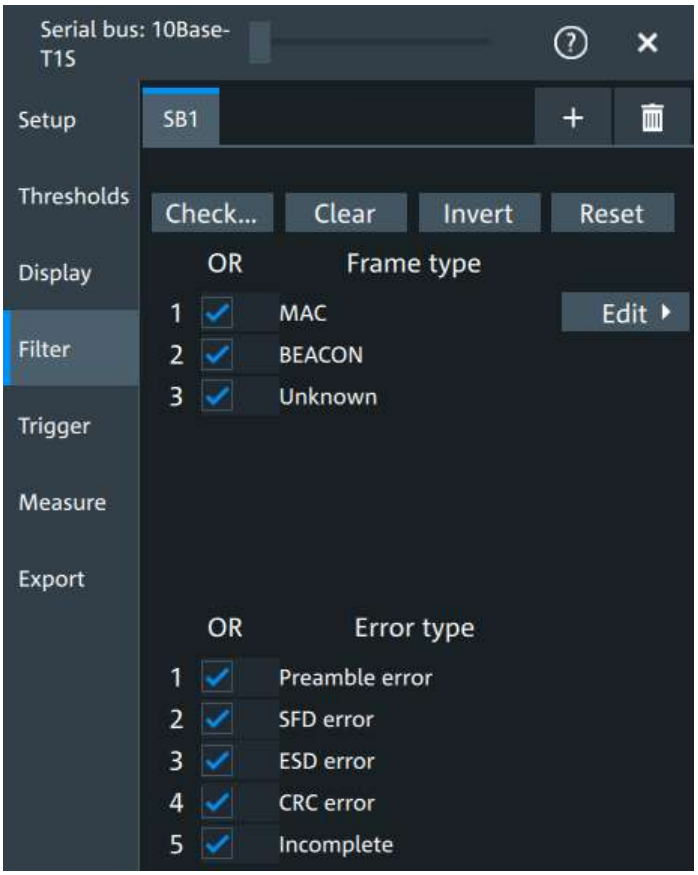

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all" Enables the filter for all available frames and error types.

"Clear" Disables the filter for all available frames and error types.

"Invert" Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types.

Remote command:
SBUS<sb>:TNOS:FILTer:CHKall on page 2112
SBUS<sb>:TNOS:FILTer:CLR on page 2112
SBUS<sb>:TNOS:FILTer:INVert on page 2113
SBUS<sb>:TNOS:FILTer:RST on page 2112

Frame type
Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.

For selected frame types, you can also specify conditions for the value of the fields in the "Edit" dialog.

Available frames are "MAC", "BEACON" and "Unknown".

Remote command:
SBUS<sb>:TNOS:FILTer:FRENable on page 2116
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:ENABle on page 2116

Edit
Opens a dialog to define the details of the selected frame.

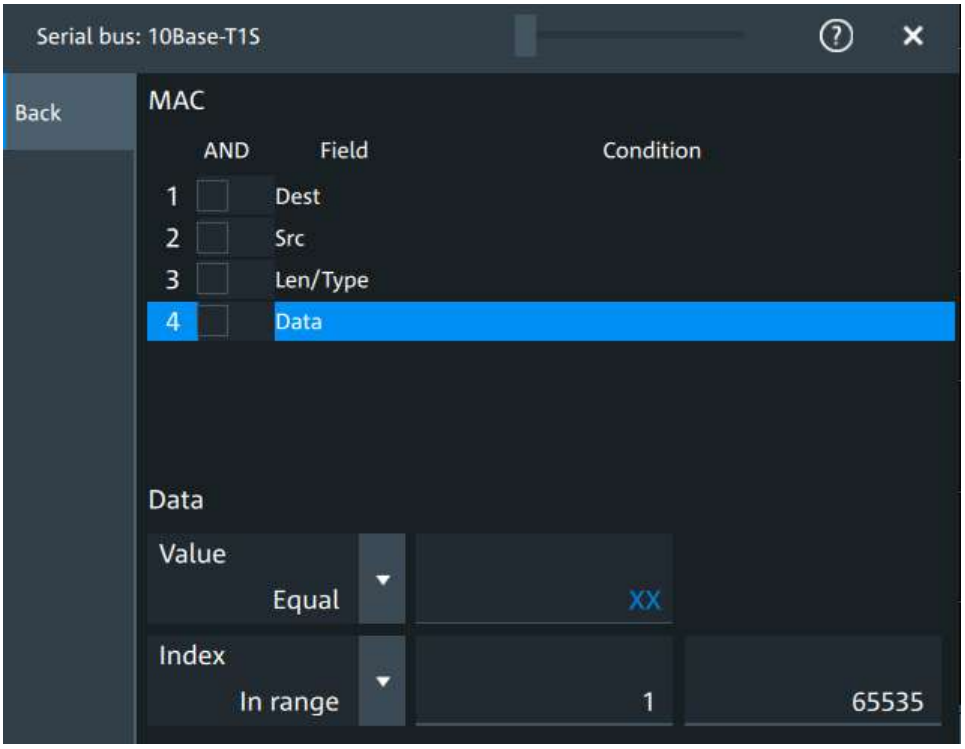

"Field" Enables the field type that you want to filter on for the selected frame. The available fields are "Dest", "Src", "Len/Type" and "Data".

Remote command:
SBUS<sb>:TNOS:FILTer:FIENable on page 2115
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:ENABle on page 2115

"Condition" Displays the value condition for the selected field.

Remote command:
SBUS<sb>:TNOS:FILTer:BIT on page 2113
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:BIT on page 2113

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
SBUS<sb>:TNOS:FILTer:DMAX on page 2113
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:DMAX on page 2113
SBUS<sb>:TNOS:FILTer:DMIN on page 2114
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:DMIN on page 2114
SBUS<sb>:TNOS:FILTer:DOPerator on page 2114
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:DOPerator on page 2114

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
SBUS<sb>:TNOS:FILTer:IMAX on page 2115
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:IMAX on page 2115
SBUS<sb>:TNOS:FILTer:IMIN on page 2115
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:IMIN on page 2115
SBUS<sb>:TNOS:FILTer:IOPerator on page 2116
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:IOPerator on page 2116

Error type
Enables filtering on the selected error type.

Remote command:
SBUS<sb>:TNOS:FILTer:ERENable on page 2114
SBUS<sb>:TNOS:FILTer:ERRor<n>:ENABle on page 2114

14.20.4 PPIFormat.PPIFrame.Name10BASE-T1S format configuration

Access: "Menu" > "Apps" > "Protocol" tab > "10BASE-T1S" > "Format".

See Section 14.1.5, "Format", on page 516.

Show format
Enables the format configuration and displays the frame formats in the honey-comb view and results. If enabled, the frame formats are also selectable for triggering and filtering.

Remote command:
SBUS<sb>:TNOS:FORMat:SELect on page 2117

Add frame
Creates a frame format and adds it to the end of the frame list. A dialog opens to specify the frame details. The number of frame formats is limited to 100.

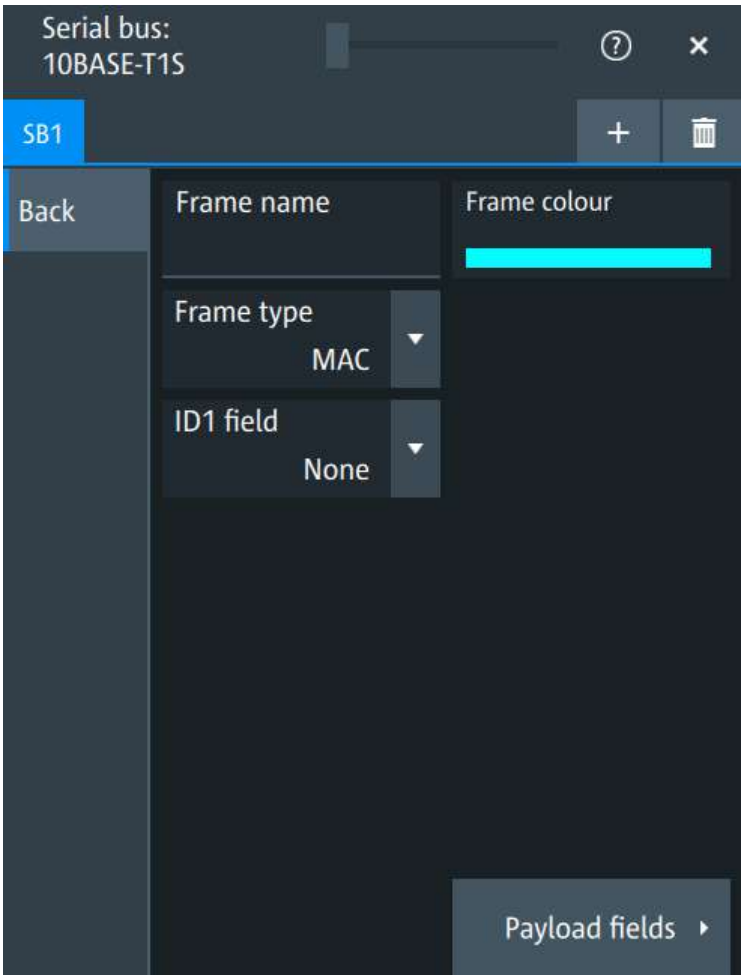

Remote command:
SBUS<sb>:TNOS:FORMat:ADDFrame on page 2118

Edit list
Enables editing the frame list. If enabled, you can delete a frame format by clicking its "Delete" icon. In a list with several entries, you can move frame formats up or down by clicking the arrow buttons. To exit the editing mode, click "Edit list" again.

Remote command:
SBUS<sb>:TNOS:FORMat:CLR on page 2118
SBUS<sb>:TNOS:FORMat:FCOunt? on page 2119

Open
Opens a dialog for loading an existing list of frame formats in XML file format.

Remote command:
SBUS<sb>:TNOS:FORMat:LOAD on page 2118

Save as
Opens a dialog for saving your current list of frame formats to an XML file. Saved frame formats can support efficient and convenient working.

Remote command:
SBUS<sb>:TNOS:FORMat:SAVE on page 2118

Frame name
Specifies an arbitrary name to label the currently selected frame format. Ideally, use speaking names according to the specifications of the applicable protocol standard. Frame names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:NAME on page 2119

Frame color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:COLor on page 2120

Frame type
Select an original frame type.

Remote command:
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:TYPE on page 2120

ID<n> field
Select the first to third identifying field types.

Remote command:
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ID1Field on page 2120
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ID2Field on page 2120
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ID3Field on page 2120

ID<n> value
Select the value of the corresponding field type.

Remote command:
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ID1Value on page 2121
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ID2Value on page 2121
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ID3Value on page 2121

Payload fields
Opens the payload field configuration dialog. The format configuration of payload fields is optional and replaces the payload data of the identified frame.

Add field
Creates a new field description for the currently selected frame format and adds it to the end of the field list with color, bit position (order of transmission) and name. Brackets indicate how often bits will be repeated, [] indicates that this is an open array.

A dialog opens to specify the field details. The number of field descriptions is limited to 100.

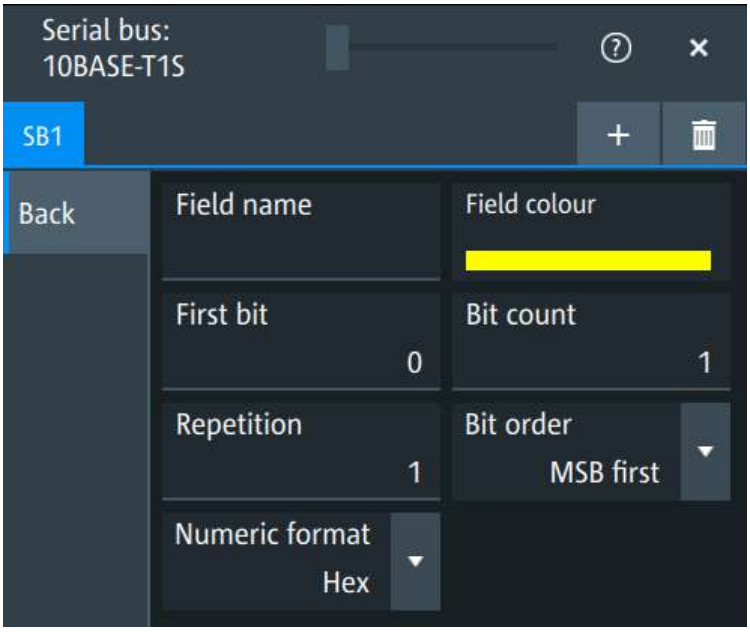

Remote command:
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ADDField on page 2119

Field name
Specifies an arbitrary name for the currently selected field description. Ideally, use speaking names.

Field names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:NAME on page 2121

Field color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:COLor on page 2121

First bit
In order of transmission, sets the first bit of this field in the payload.

Remote command:
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:FSTBit on page 2122

Bit count
Sets the number of bits in the selected field, i.e., the field's length. Selecting the value opens a keypad showing allowed minimum and maximum values. You can set "Min", "Max", "Reset" or adjust with the "Inc" or "Dec" buttons by 1 or 10 (step size dependent). Use "CE" to restore the value used before the keypad opened.

If the "Condition" pattern length does not match the "Bit count":
- Too long, it is truncated.
- Too short, it is left-padded with 0.

Both truncation and padding happen on the left side of the condition and follow the configured "Bit order".

Examples for "Condition" "=100"):
- "Bit order" is "MSB":
  - Bit count = 2: truncated. Result: =00
  - Bit count = 4: padded. Result: =0100
- "Bit order" is LSB first (equivalent MSB-first representation is =001):
  - Bit count = 2: truncated. Result: =00 (LSB first), =00 (MSB first)
  - Bit count = 4: padded. Result: =0100 (LSB first), =0010 (MSB first)

Remote command:
`SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:BITCount` on page 2122

Repetition
Defines the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Remote command:
`SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:REPetition` on page 2122

Bit order
Selects, in which order the bits of a field's "Condition" value are evaluated:

- "LSB first": little endian, least significant bit first
- "MSB first": big endian, most significant bit first

Remote command:
`SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:BITorder` on page 2123

Numeric format
Selects how the "Condition" value is interpreted:

- Symbolic: Assigns a symbolic translation on the data fields. Only available for custom protocols.
- Value list: Assigns a custom name to each hexadecimal value; any value without an assigned value is shown as "Undefined".
- A*X+B: Assigns a linear function on the data fields.
- For details on the other numeric formats, see "Format-specific information" on page 532.

The following rules apply:
- If the condition contains at least one of "H", "h", "L", "l", "X", "x", and all other characters are only "1" and/or "0", the value is always treated as binary, regardless of the selected numeric format.

- "x" and "X" are wildcards and are supported only in binary format or when the string is auto-interpreted as binary per the rule above.
  Examples for format set to "HEX":
  – "=1HL111000": valid (read as binary)
  – "=0x10101": valid (read as binary; "x" acts as wildcard, not a hex prefix)
  – "=1010": valid (read as HEX, with a total of 16 bits)
  – "=0x5A": valid (read as HEX "5A", because "0x" is a valid hex prefix; entering 5A alone is recommended)
  – "=5X12": invalid
  – "=1H33": invalid

Remote command:
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:FORMat on page 2123

Add value
Creates a new hexagonal value for customization.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:ADDValue on page 2124

Value
Defines the hexagonal value to convert it into a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue on page 2124

Label
Defines the label to convert the corresponding hexagonal value to a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel on page 2125

Unit
Defines a unit for the linear function.

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:UNIT on page 2125

Parameter A,B
Defines the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:PARA on page 2125
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:PARB on page 2125

14.20.5 10BASE-T1S software trigger

14.20.5.1 Setup A trigger

Before setting up the software trigger for the protocols, a trigger A event needs to be set up.

14.20.5.2 Software trigger settings

Access: "Menu" > "Apps" > "Protocol" tab > "10BASE-T1S" > "Trigger" tab > "Setup Software Trigger"

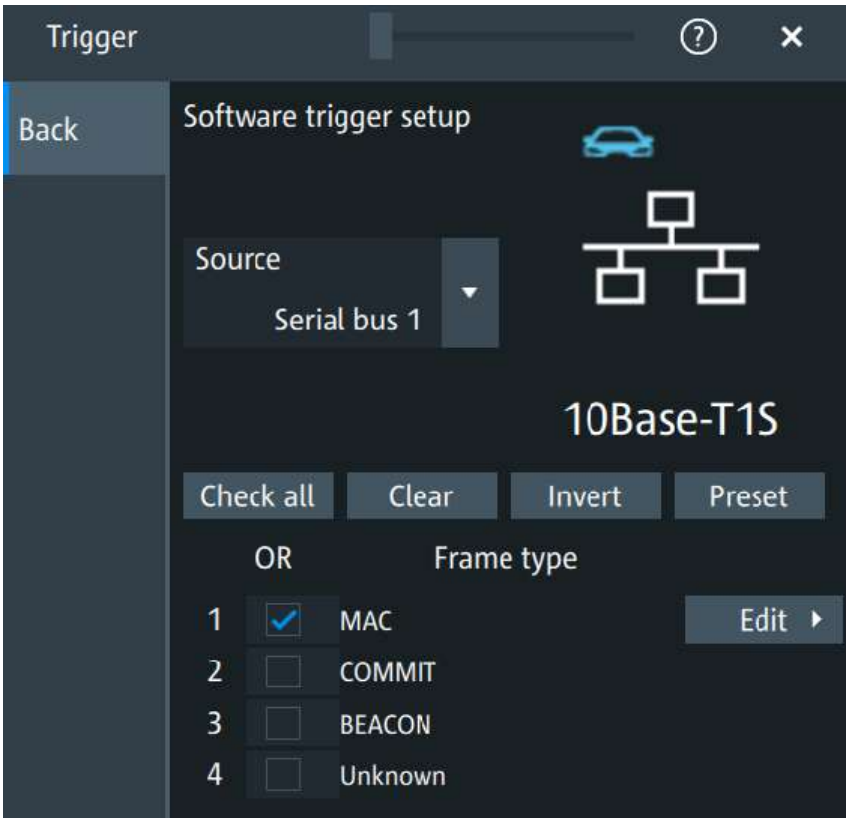

In the "Software Trigger" tab, you can define the settings to trigger on the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to trigger on.

"Check all" Enables the software trigger for all available frames and error types.

"Clear" Disables the software trigger for all available frames and error types.

"Invert" Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types for the software trigger.

Remote command:
TRIGger:SBSW:TNOS:CHKall on page 2127
TRIGger:SBSW:TNOS:CLR on page 2127
TRIGger:SBSW:TNOS:INVert on page 2127
TRIGger:SBSW:TNOS:RST on page 2127

Frame type
Selects the frame type that you want to trigger on. You can trigger on all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

The following frames are available: "MAC", "COMMIT", "BEACON", "Unknown".

Remote command:
TRIGger:SBSW:TNOS:FRENable on page 2127
TRIGger:SBSW:TNOS:FRAMe<fr>:ENABle on page 2127

Edit
Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

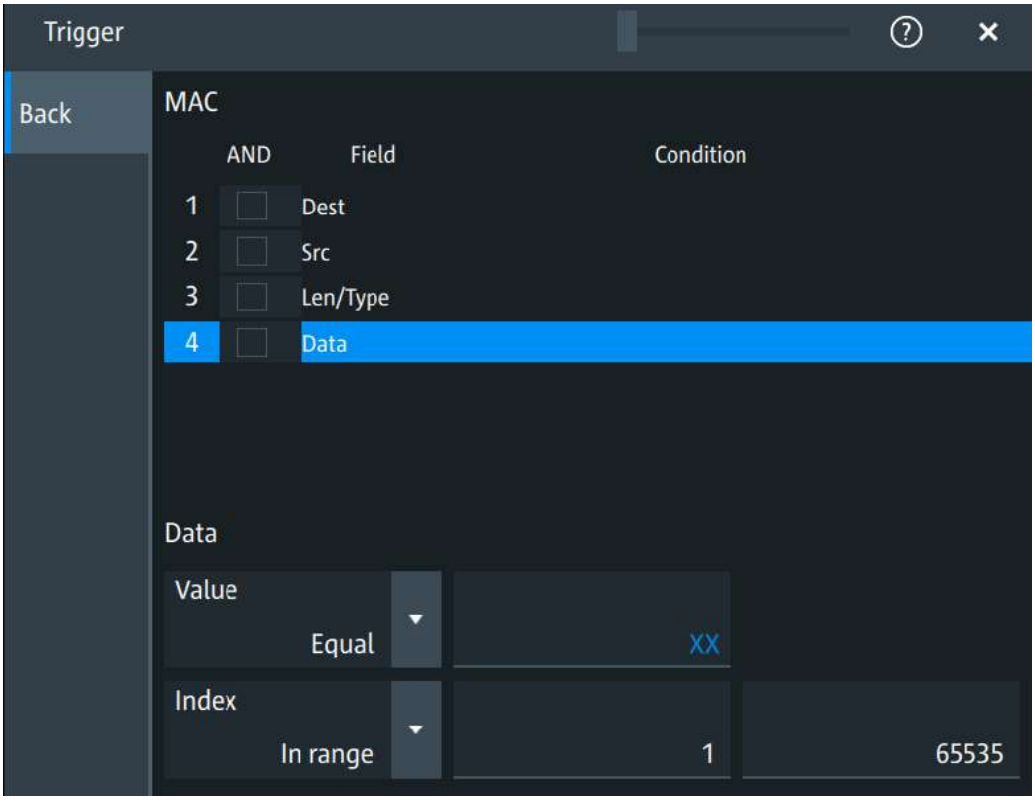

"Field" Enables the field type that you want to trigger on for the selected frame.
The following fields are available: "Dest", "Src", "Len/Type", "Data".

Remote command:
TRIGger:SBSW:TNOS:FIENable on page 2129
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:ENABle on page 2129

"Condition" Displays the value condition for the selected field.

Remote command:
TRIGger:SBSW:TNOS:BIT on page 2128
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:BIT on page 2128

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
TRIGger:SBSW:TNOS:DMAX on page 2128
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:DMAX on page 2128
TRIGger:SBSW:TNOS:DMIN on page 2128
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:DMIN on page 2128
TRIGger:SBSW:TNOS:DOPerator on page 2129
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:DOPerator on page 2129

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
TRIGger:SBSW:TNOS:IMAX on page 2130
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:IMAX on page 2130
TRIGger:SBSW:TNOS:IMIN on page 2130
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:IMIN on page 2130
TRIGger:SBSW:TNOS:IOPerator on page 2130
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:IOPerator on page 2130

Error type
Enables triggering on the selected error type.

The following error types are available: "Preamble error", "SFD error", "ESD error", "CRC error".

Remote command:
TRIGger:SBSW:TNOS:ERENable on page 2131
TRIGger:SBSW:TNOS:ERRor<m>:ENABle on page 2131

14.20.6 Measure

The "Setup Measurement" button opens the dialog for automatic measurements in the "Protocol" category for the selected serial bus.

See Section 10.2.8.2, "Settings for protocol measurements", on page 311.

14.20.7 10BASE-T1S decode results

To enable the decoding, see Section 14.1.9.3, "Decoding protocol signals", on page 531.

Decode results table

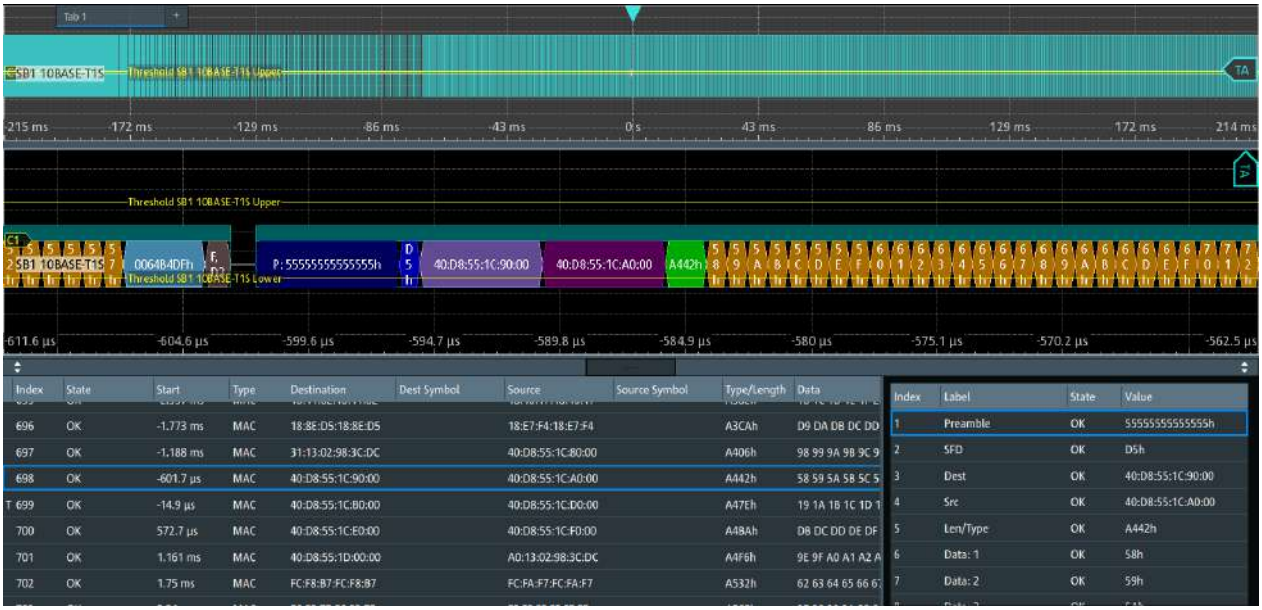

Figure 14-56: Decoded 10BASE-T1S signal

The decode results table contains information about all decoded frames.

Table 14-36: Content of the decode results table

Column	Description
Index	Frame count
State	Overall state of the frame: either OK or the relevant error condition (preamble, CRC or SFD)
Start	Start time of the frame
Type	Type of frame (e.g. Idle, MAC or data)
Destination	Destination address of the frame
Dest Symbol	Symbolic name of the destination defined in the symbol list. Available only, if "Show symbols" is enabled in the "Display" tab and a symbols list is loaded.
Source	Source address of the frame
Source Symbol	Symbolic name of the source defined in the symbol list. Available only, if "Show symbols" is enabled in the "Display" tab and a symbols list is loaded.

Column	Description
Type/Length	The sub-protocol (e.g. HTML, video, etc.) determines what meaning this field has. Since the content of this data area is not decoded, the interpretation of this field is ambivalent. It could either be the word type (specific for the sub-protocol) or the word length.
Data	Value of the data. Select the data format in the "Display" tab.
Bit rate	Value of the bit rate

When you select a frame in the decode results table, its field content is shown in the details table to the right.

Table 14-37: Content of the frame details table

Column	Description
Index	Index of the decoded field
Label	Name of the field
State	State of the field (OK / not OK)
Value	Value of the field

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 1491

Remote commands

Remote commands to retrieve decode results are described in Section 18.18.21.5, "Decode results", on page 2132.

You can also export the decode results. For details see Section 14.1.9.4, "Exporting decode results", on page 531.

Example 10BASE-T1S export file

```
Index,Start,Stop,State,Type,Destination,Dest Symbol,Source,Source Symbol,
  Type/Len,CRC,Bit rate
1,-0.214999,-0.214971,'OK','MAC','00:00:0C:12:14:65',,'00:01:13:AB:C1:9C',
  ,00E6h,00002507h,12500000
2,-0.21497,-0.214941,'EPRM','MAC','00:01:14:06:C0:00',,'00:04:07:C6:C0:00',
  ,0122h,00004A04h,12500000
3,-0.21494,-0.21491,'ESFD','MAC','00:13:02:98:3C:CC',,'00:0B:64:06:C0:12',
  ,015Eh,00006F01h,12500000
4,-0.214909,-0.214878,'EESD','MAC','00:1B:C5:06:C0:00',,'00:1B:C5:06:D0:00',
  ,019Ah,000093FEh,12500000
5,-0.214877,-0.214846,'ECRC','MAC','00:1B:C5:06:E0:00',,'00:1B:C5:06:F0:00',
  ,01D6h,0000B8FBh,12500000
```

```
Details frame 1
Index,State,Value
1,'OK',14h
2,'OK',15h
3,'OK',16h
4,'OK',17h
5,'OK',18h
6,'OK',19h
7,'OK',1Ah
8,'OK',1Bh

Details frame 2
Index,State,Value
1,'OK',1Ch
2,'OK',1Dh
3,'OK',1Eh
4,'OK',1Fh
5,'OK',20h
6,'OK',21h
7,'OK',22h
8,'OK',23h
9,'OK',24h
```

14.21 100BASE-T1 (automotive Ethernet, option R&S MXO5-K560)

100BASE-T1 is an Ethernet based protocol. It is specialized for the needs of the automotive industry, such as in the automotive networking applications, enabling advanced safety, comfort and infotainment features within the automobile.

100BASE-T1 is also known as BroadR-Reach Physical Layer (BR-PHY) or Open Alliance BroadR-Reach PHY (OABR PHY). For more details on the specifications, refer to opensig.org/automotive-ethernet-specifications and ieeexplore.ieee.org/document/7433918.

The 100BASE-T1 option is compatible with the MII (IEEE 802.3 Clause 22) and IEEE 802.3 MAC operating at 100 Mbit/s.

- 100BASE-T1 configuration....910
- 100BASE-T1S filter....912
- PPIFormat.PPIFrame.Color100BASE-T1 format configuration....914
- 100BASE-T1 software trigger....920
- Measure....923
- 100BASE-T1 decode results....924

14.21.1 100BASE-T1 configuration

14.21.1.1 100BASE-T1 configuration settings

Access: "Menu" > "Apps" > "Protocol" tab > "100BASE-T1" > "Setup".

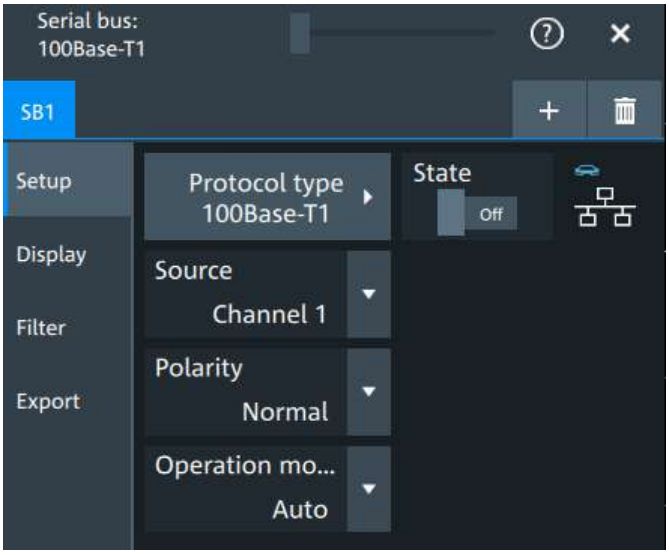

Make sure that the tab of the correct serial bus is selected.

Protocol type
Selects the protocol type to be decoded.

Remote command:
`SBUS<sb>:TYPE` on page 1489

Source
Selects the source channel.

Remote command:
`SBUS<sb>:HBTO:SOURce` on page 2141

Polarity
Selects the polarity of the data signal. You can select between "Normal" and "Inverted".

For "Normal" polarity, active high is defined as +1 V and active low is defined as -1 V.
For "Inverted" polarity, active high is defined as -1 V and active low is defined as +1 V.

Remote command:
`SBUS<sb>:HBTO:POLarity` on page 2141

Operation mode
Selects the desired direction of the full duplex signal for analysis You can choose between "Auto", "Main" and "Subordinate".

If "Auto" is selected, the decoder automatically detects the "Main" or "Subordinate" mode.

Remote command:
SBUS<sb>:HBTO:MODE on page 2140

14.21.1.2 Display settings

For details about the display settings, see Section 14.1.3.1, "Display settings", on page 511.

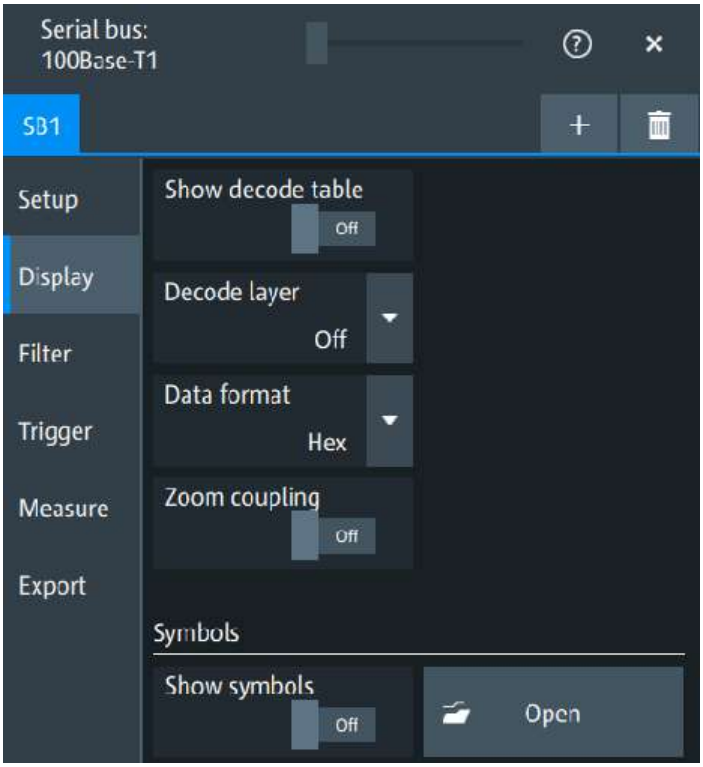

Decode layer
Selects the decode layer.

Decoding is performed in several steps, and the results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display.

"Off"	Disables the display of the decode layer.
"Ternary symbols"	Enables the display of the raw, ternary encoded symbols, consisting of the three states "-1", "0" and "+1".
"Scrambled bits"	Enables the display of the binary bits, decoded from the ternary symbols, but still in a scrambled (pre-descrambling) state.
"Descrambled bits"	Enables the display of the fully decoded and descrambled binary data, representing the original information being transmitted over the 100BASE-T1 link.

"Reversed bits"	Enables display of the bits after a byte-wise reversal of the descrambled bits of the MAC frame.

Data format
See "Data format" on page 512.

Zoom coupling
See "Zoom coupling" on page 513.

Show symbols
Symbol lists are protocol-specific. Label lists for 100BASE-T1 are available in CSV format.

For details, see 100BASE-T1 symbols.

Remote command:
`SBUS<sb>:HBTO:SYMBols` on page 2142
`SBUS<sb>:HBTO:NEWList` on page 2142

14.21.1.3 100BASE-T1 symbols

Symbol lists are protocol-specific.

A 100BASE-T1 symbol file contains two values for each Ethernet header:

- Ethernet Header display
- Symbolic label: name of the address, specifying its function in the bus network.

For an example, see Section 14.20.2.4, "10BASE-T1S symbols", on page 895.

14.21.2 100BASE-T1S filter

Access: "Menu" > "Apps" > "Protocol" tab > "100BASE-T1" > "Filter" tab

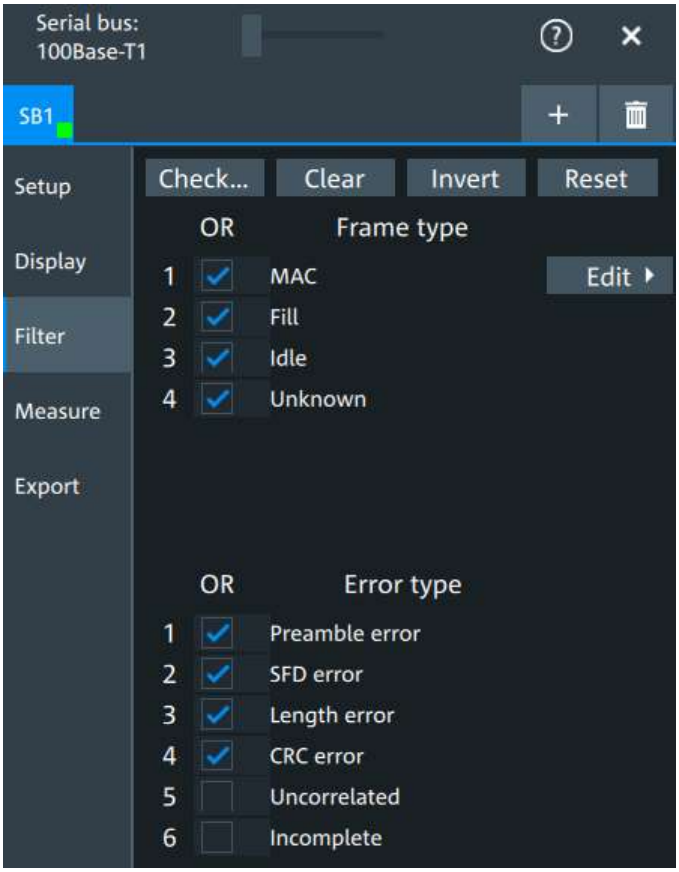

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all" Enables the filter for all available frames and error types.

"Clear" Disables the filter for all available frames and error types.

"Invert" Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types.

Remote command:
`SBUS<sb>:HBTO:FILTer:CHKall` on page 2143
`SBUS<sb>:HBTO:FILTer:CLR` on page 2143
`SBUS<sb>:HBTO:FILTer:INVert` on page 2143
`SBUS<sb>:HBTO:FILTer:RST` on page 2144

Frame type
Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.

For selected frame types, you can also specify conditions for the value of the fields in the "Edit" dialog.

Available frames are "MAC", "Fill", "Idle" and "Unknown".

Edit
Opens a dialog to define the details of the selected frame.

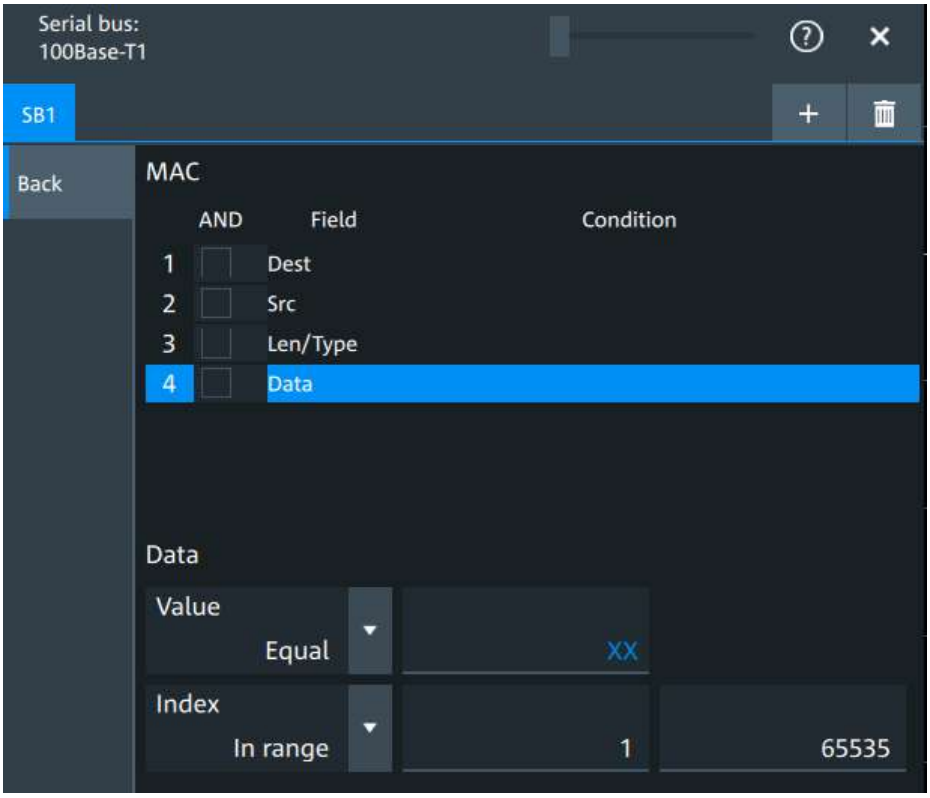

"Field" Enables the field type that you want to filter on for the selected frame. The available fields are "Dest", "Src", "Len/Type" and "Data".

"Condition" Displays the value condition for the selected field.

"Value" The data setup consists of a comparison condition and one or two data patterns.

"Index" The index setup consists of a comparison condition and one or two index values.

Error type
Enables filtering on the selected error type.

14.21.3 PPIFormat.PPIFrame.Color100BASE-T1 format configuration

Access: "Menu" > "Apps" > "Protocol" tab > "100BASE-T1" > "Format".

See Section 14.1.5, "Format", on page 516.

Show format
Enables the format configuration and displays the frame formats in the honey-comb view and results. If enabled, the frame formats are also selectable for triggering and filtering.

Remote command:
`SBUS<sb>:HBTO:FORMat:SELect` on page 2148

Add frame
Creates a frame format and adds it to the end of the frame list. A dialog opens to specify the frame details. The number of frame formats is limited to 100.

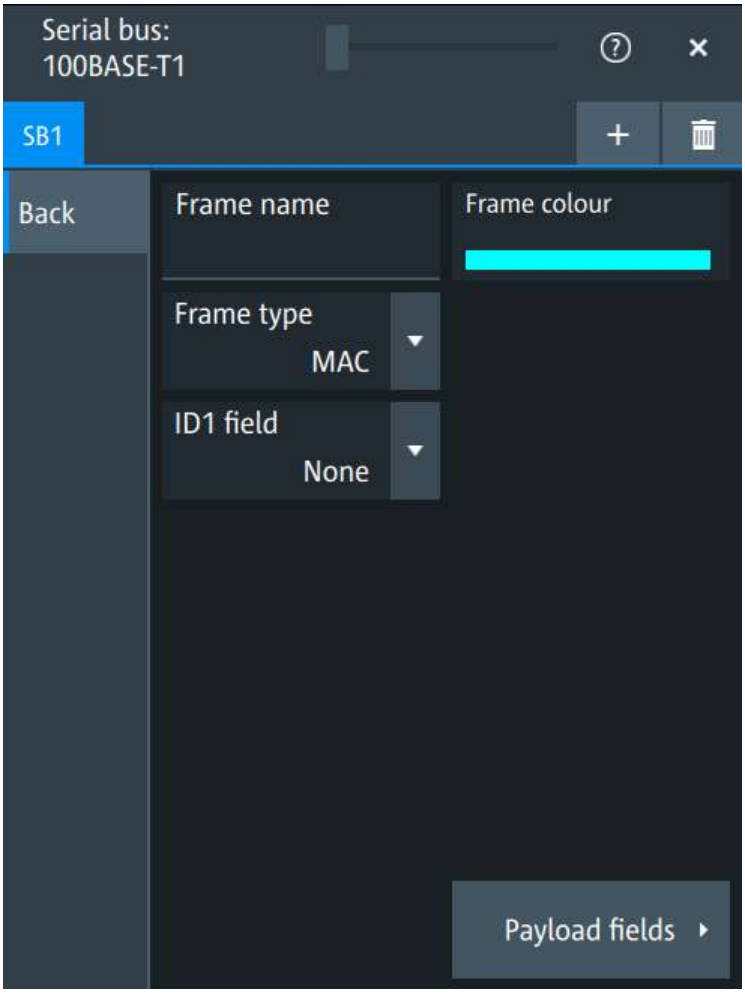

Remote command:
`SBUS<sb>:HBTO:FORMat:ADDFrame` on page 2148

Edit list
Enables editing the frame list. If enabled, you can delete a frame format by clicking its "Delete" icon. In a list with several entries, you can move frame formats up or down by clicking the arrow buttons. To exit the editing mode, click "Edit list" again.

Remote command:
SBUS<sb>:HBTO:FORMat:CLR on page 2149
SBUS<sb>:HBTO:FORMat:FCOunt? on page 2149

Open
Opens a dialog for loading an existing list of frame formats in XML file format.

Remote command:
SBUS<sb>:HBTO:FORMat:LOAD on page 2149

Save as
Opens a dialog for saving your current list of frame formats to an XML file. Saved frame formats can support efficient and convenient working.

Remote command:
SBUS<sb>:HBTO:FORMat:SAVE on page 2149

Frame name
Specifies an arbitrary name to label the currently selected frame format. Ideally, use speaking names according to the specifications of the applicable protocol standard. Frame names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:NAME on page 2150

Frame color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:COLor on page 2150

Frame type
Select an original frame type.

Remote command:
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:TYPE on page 2151

ID<n> field
Select the first to third identifying field types.

Remote command:
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ID1Field on page 2151
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ID2Field on page 2151
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ID3Field on page 2151

ID<n> value
Select the value of the corresponding field type.

Remote command:
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ID1Value on page 2151
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ID2Value on page 2151
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ID3Value on page 2151

Payload fields
Opens the payload field configuration dialog. The format configuration of payload fields is optional and replaces the payload data of the identified frame.

Add field
Creates a new field description for the currently selected frame format and adds it to the end of the field list with color, bit position (order of transmission) and name. Brackets indicate how often bits will be repeated, [] indicates that this is an open array.

A dialog opens to specify the field details. The number of field descriptions is limited to 100.

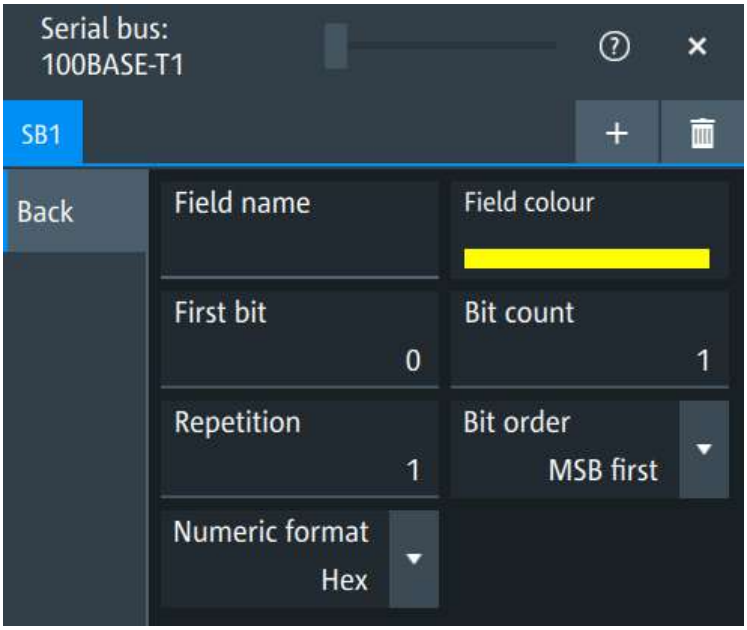

Remote command:
`SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ADDField` on page 2150

Field name
Specifies an arbitrary name for the currently selected field description. Ideally, use speaking names.

Field names do not have to be unique and are only intended to support you.

Remote command:
`SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:NAME` on page 2152

Field color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
`SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:COLor` on page 2152

First bit
In order of transmission, sets the first bit of this field in the payload.

Remote command:
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:FSTBit on page 2152

Bit count
Sets the number of bits in the selected field, i.e., the field's length. Selecting the value opens a keypad showing allowed minimum and maximum values. You can set "Min", "Max", "Reset" or adjust with the "Inc" or "Dec" buttons by 1 or 10 (step size dependent). Use "CE" to restore the value used before the keypad opened.

If the "Condition" pattern length does not match the "Bit count":
- Too long, it is truncated.
- Too short, it is left-padded with 0.

Both truncation and padding happen on the left side of the condition and follow the configured "Bit order".

Examples for "Condition" "=100"):
- "Bit order" is "MSB":
  - Bit count = 2: truncated. Result: =00
  - Bit count = 4: padded. Result: =0100
- "Bit order" is LSB first (equivalent MSB-first representation is =001):
  - Bit count = 2: truncated. Result: =00 (LSB first), =00 (MSB first)
  - Bit count = 4: padded. Result: =0100 (LSB first), =0010 (MSB first)

Remote command:
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:BITCount on page 2153

Repetition
Defines the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Remote command:
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:REPetition on page 2153

Bit order
Selects, in which order the bits of a field's "Condition" value are evaluated:

- "LSB first": little endian, least significant bit first
- "MSB first": big endian, most significant bit first

Remote command:
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:BITorder on page 2153

Numeric format
Selects how the "Condition" value is interpreted:

- Symbolic: Assigns a symbolic translation on the data fields. Only available for custom protocols.
- Value list: Assigns a custom name to each hexadecimal value; any value without an assigned value is shown as "Undefined".
- A*X+B: Assigns a linear function on the data fields.
- For details on the other numeric formats, see "Format-specific information" on page 532.

The following rules apply:

- If the condition contains at least one of "H", "h", "L", "l", "X", "x", and all other characters are only "1" and/or "0", the value is always treated as binary, regardless of the selected numeric format.
- "x" and "X" are wildcards and are supported only in binary format or when the string is auto-interpreted as binary per the rule above.
  Examples for format set to "HEX":
  – "=1HL111000": valid (read as binary)
  – "=0x10101": valid (read as binary; "x" acts as wildcard, not a hex prefix)
  – "=1010": valid (read as HEX, with a total of 16 bits)
  – "=0x5A": valid (read as HEX "5A", because "0x" is a valid hex prefix; entering 5A alone is recommended)
  – "=5X12": invalid
  – "=1H33": invalid

Remote command:
`SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:FORMat` on page 2154

Add value
Creates a new hexagonal value for customization.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:ADDValue` on page 2155

Value
Defines the hexagonal value to convert it into a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue` on page 2155

Label
Defines the label to convert the corresponding hexagonal value to a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel` on page 2155

Unit
Defines a unit for the linear function.

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
`SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:UNIT` on page 2156

Parameter A,B
Defines the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:PARA on page 2156
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:PARB on page 2156

14.21.4 100BASE-T1 software trigger

14.21.4.1 Setup A trigger

Before setting up the software trigger for the protocols, a trigger A event needs to be set up.

14.21.4.2 Software trigger settings

Access: "Menu" > "Apps" > "Protocol" tab > "100BASE-T1" > "Trigger" tab > "Setup Software Trigger" > "Setup SB Trigger".

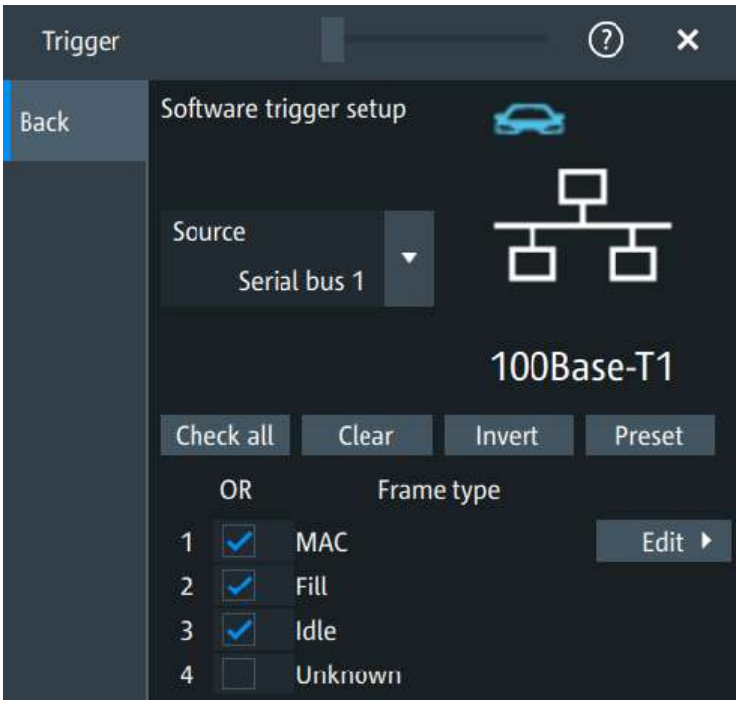

In the "Software Trigger" tab, you can define the settings to trigger on the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to trigger on.

"Check all" Enables the software trigger for all available frames and error types.

"Clear" Disables the software trigger for all available frames and error types.

"Invert" Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types for the software trigger.

Remote command:
`TRIGger:SBSW:HBTO:CHKall` on page 2157
`TRIGger:SBSW:HBTO:CLR` on page 2158
`TRIGger:SBSW:HBTO:INVert` on page 2158
`TRIGger:SBSW:HBTO:RST` on page 2158

Frame type
Selects the frame type that you want to trigger on. You can trigger on all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

The following frames are available: "MAC", "Fill", "Idle", "Unknown".

Remote command:
`TRIGger:SBSW:HBTO:FRENable` on page 2158
`TRIGger:SBSW:HBTO:FRAMe<fr>:ENABle` on page 2158

Edit
Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

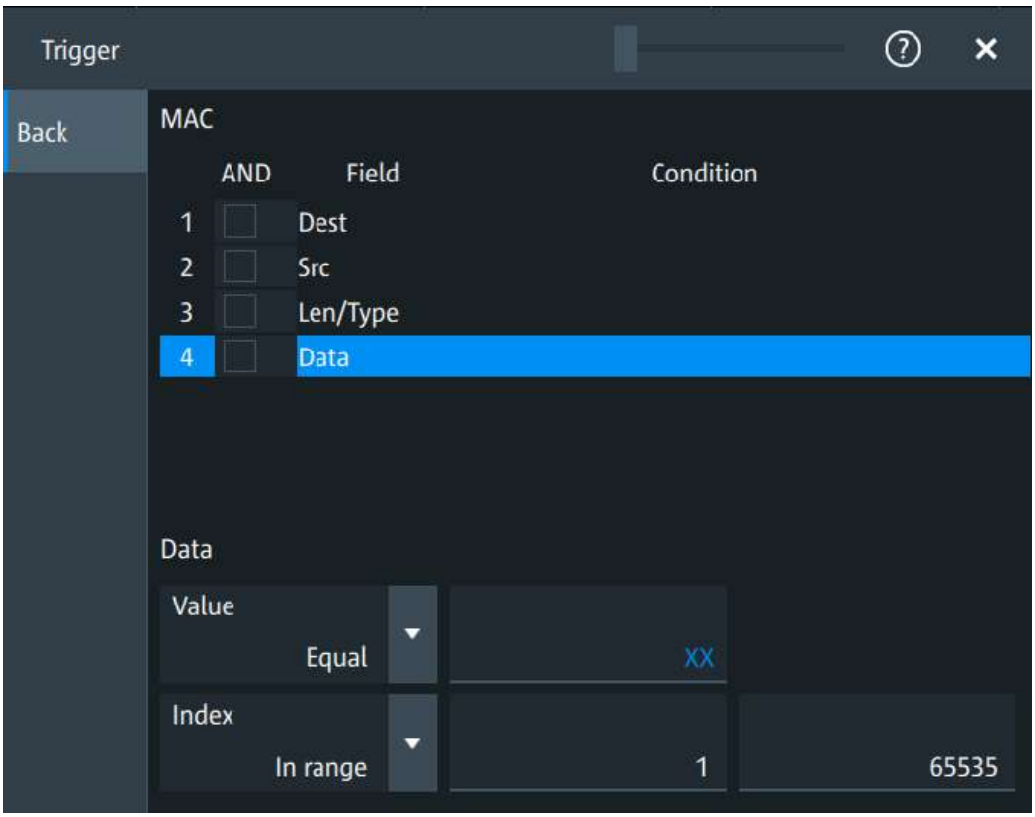

"Field" Enables the field type that you want to trigger on for the selected frame.
The following fields are available: "Dest", "Src", "Len/Type", "Data".

Remote command:
`TRIGger:SBSW:HBTO:FIENable` on page 2160
`TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:ENABle` on page 2160

"Condition" Displays the value condition for the selected field.

Remote command:
`TRIGger:SBSW:HBTO:BIT` on page 2158
`TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:BIT` on page 2158

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
`TRIGger:SBSW:HBTO:DMAX` on page 2159
`TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:DMAX` on page 2159
`TRIGger:SBSW:HBTO:DMIN` on page 2159
`TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:DMIN` on page 2159
`TRIGger:SBSW:HBTO:DOPerator` on page 2160
`TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:DOPerator` on page 2160

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
TRIGger:SBSW:HBTO:IMAX on page 2160
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:IMAX on page 2160
TRIGger:SBSW:HBTO:IMIN on page 2161
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:IMIN on page 2161
TRIGger:SBSW:HBTO:IOPerator on page 2161
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:IOPerator on page 2161

Error type
Enables triggering on the selected error type.

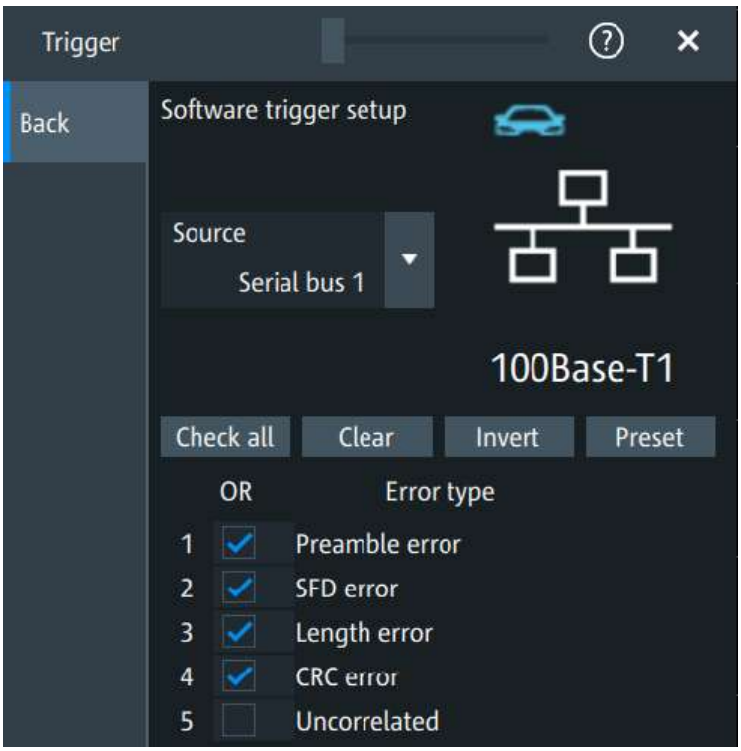

The following error types are available: "Preamble error", "SFD error", "Length error", "CRC error", "Uncorrelated".

Remote command:
TRIGger:SBSW:HBTO:ERENable on page 2161
TRIGger:SBSW:HBTO:ERRor<m>:ENABle on page 2161

14.21.5 Measure

The "Setup Measurement" button opens the dialog for automatic measurements in the "Protocol" category for the selected serial bus.

See Section 10.2.8.2, "Settings for protocol measurements", on page 311.

14.21.6 100BASE-T1 decode results

To enable the decoding, see Section 14.1.9.3, "Decoding protocol signals", on page 531.

Decode results table

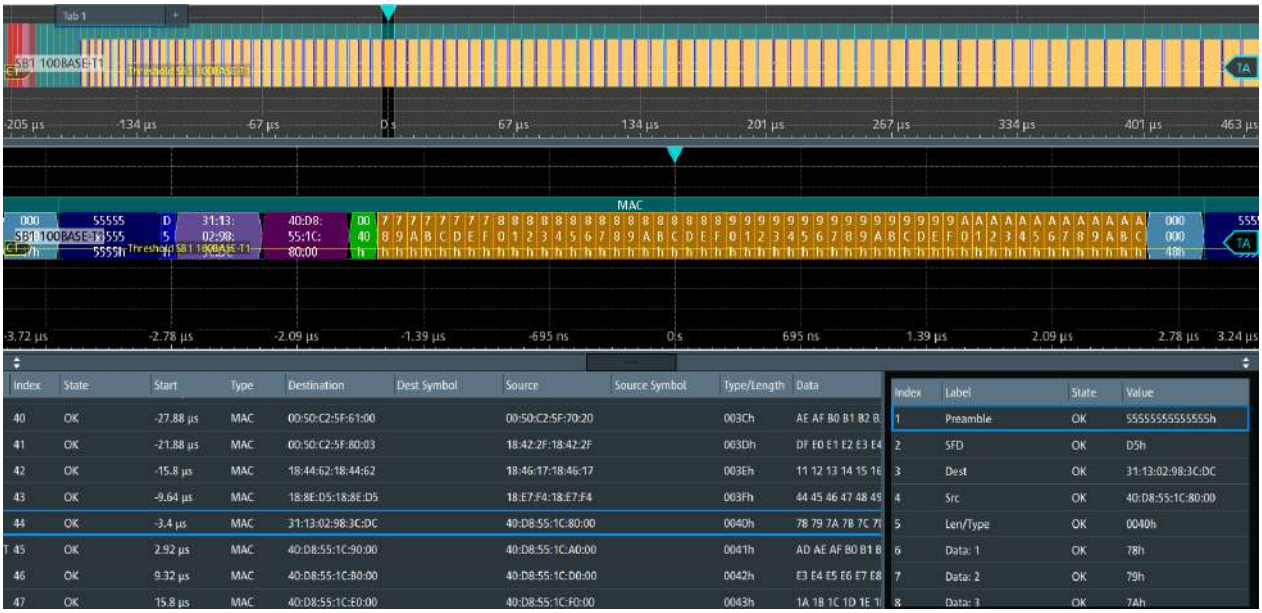

Figure 14-57: Decoded 100BASE-T1 signal

The decode results table contains information about all decoded frames.

Table 14-38: Content of the decode results table

Column	Description
Index	Frame count
State	Overall state of the frame: either OK or the relevant error condition (preamble, CRC or SFD)
Start	Start time of the frame
Type	Type of frame (e.g. Idle, MAC or data)
Destination	Destination address of the frame
Dest Symbol	Symbolic name of the destination defined in the symbol list. Available only, if "Show symbols" is enabled in the "Display" tab and a symbols list is loaded.
Source	Source address of the frame
Source Symbol	Symbolic name of the source defined in the symbol list. Available only, if "Show symbols" is enabled in the "Display" tab and a symbols list is loaded.
Type/Length	The subprotocol (e.g. HTML, video, etc.) determines what meaning this field has. Since the content of this data area is not decoded, the interpretation of this field is ambivalent. It could either be the word type (specific for the sub-protocol) or the word length.

Column	Description
Data	Value of the data. Select the data format in the "Display" tab.
Bit rate	Value of the bit rate

When you select a frame in the decode results table, its field content is shown in the details table to the right.

Table 14-39: Content of the frame details table

Column	Description
Index	Index of the decoded field
Label	Name of the field
State	State of the field (OK / not OK)
Value	Value of the field

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 1491

Remote commands

Remote commands to retrieve decode results are described in Section 18.18.22.5, "Decode results", on page 2162.

You can also export the decode results. For details see Section 14.1.9.4, "Exporting decode results", on page 531.

Example 100BASE-T1 export file

```
Index,Start,Stop,State,Type,Destination,Dest Symbol,Source,Source Symbol,
  Type/Len,CRC,Bit rate
1,-0.214999,-0.214971,'OK','MAC','00:00:0C:12:14:65',,'00:01:13:AB:C1:9C',
  ,00E6h,00002507h,12500000
2,-0.21497,-0.214941,'EPRM','MAC','00:01:14:06:C0:00',,'00:04:07:C6:C0:00',
  ,0122h,00004A04h,12500000
3,-0.21494,-0.21491,'ESFD','MAC','00:13:02:98:3C:CC',,'00:0B:64:06:C0:12',
  ,015Eh,00006F01h,12500000
4,-0.214909,-0.214878,'EESD','MAC','00:1B:C5:06:C0:00',,'00:1B:C5:06:D0:00',
  ,019Ah,000093FEh,12500000
5,-0.214877,-0.214846,'ECRC','MAC','00:1B:C5:06:E0:00',,'00:1B:C5:06:F0:00',
  ,01D6h,0000B8FBh,12500000

Details frame 1
Index,Label,State,Value
1,'"Data: 1"','OK','"32h"'
```

```
2,'"Data: 2"','OK','"33h"'
3,'"Data: 3"','OK','"34h"'
4,'"Data: 4"','OK','"35h"'
5,'"Data: 5"','OK','"36h"'
6,'"Data: 6"','OK','"37h"'
7,'"Data: 7"','OK','"38h"'
8,'"Data: 8"','OK','"39h"'

Details frame 2
Index,Label,State,Value
1,'"Data: 1"','OK','"3Ah"'
2,'"Data: 2"','OK','"3Bh"'
3,'"Data: 3"','OK','"3Ch"'
4,'"Data: 4"','OK','"3Dh"'
5,'"Data: 5"','OK','"3Eh"'
6,'"Data: 6"','OK','"3Fh"'
7,'"Data: 7"','OK','"40h"'
8,'"Data: 8"','OK','"41h"'
9,'"Data: 9"','OK','"42h"'
```

14.22 1000BASE-T1 (automotive Ethernet, option R&S MXO5-K560)

1000BASE-T1 is a single-pair Ethernet-based protocol, specialized for the needs of the automotive industry. Main applications are in automotive networking, enabling advanced safety, comfort and infotainment features within the automobile. For specifications, refer to IEEE P802.3bp.

- 1000BASE-T1 basics....926
- 1000BASE-T1 configuration....927
- 1000BASE-T1 filter....930
- 1000BASE-T1 format configuration....933
- 1000BASE-T1 software trigger....939
- Measure....942
- 1000BASE-T1 decode results....943

14.22.1 1000BASE-T1 basics

The 1000BASE-T1 has the following objectives:

- Provides a PHY that supports full duplex operating at 1000 Mbps over a pair of unshielded sheathed twisted-pair cable or better cable.
- Achieves bit error rate (BER) of less than $1e^{-10}$.
- Support for up to at least 15 meters of cable length in the automotive link segment.

To achieve the above objectives, 1000BASE-T1 uses Physical Coding Sublayer (PCS) and Physical Medium Attachment (PMA) sublayer as follows:

- Adopts full duplex communication of 1000BASE-T1 and therefore echo cancellation on a single twisted-pair channel. This feature reduces cabling while preserving the Ethernet MAC compatibility
- Adopts Pulse Amplitude Modulation (PAM-3) encoding scheme with the following encoding techniques:
  - PAM-3 is transmitted at 750 MB data rate.
  - It uses 15-bit scrambler to improve the EMC performance.
  - Data is encoded in 80B/81B blocks.
  - 396 bits of Reed-Solomon forward error correction (FEC) parity is added to each group of 45 80B/81B blocks.
  - 9-bit OAM symbol is added, then 396 bits Reed-Solomon. Together, they shape a PHY frame of 4050 bits, or 450 forward error correction (FEC) symbols of 9 bits. FEC allows for correction of up to 22 FEC symbols per PHY frame.

14.22.2 1000BASE-T1 configuration

14.22.2.1 1000BASE-T1 configuration settings

Access: "Menu" > "Apps" > "Protocol" tab > "1000BASE-T1" > "Setup".

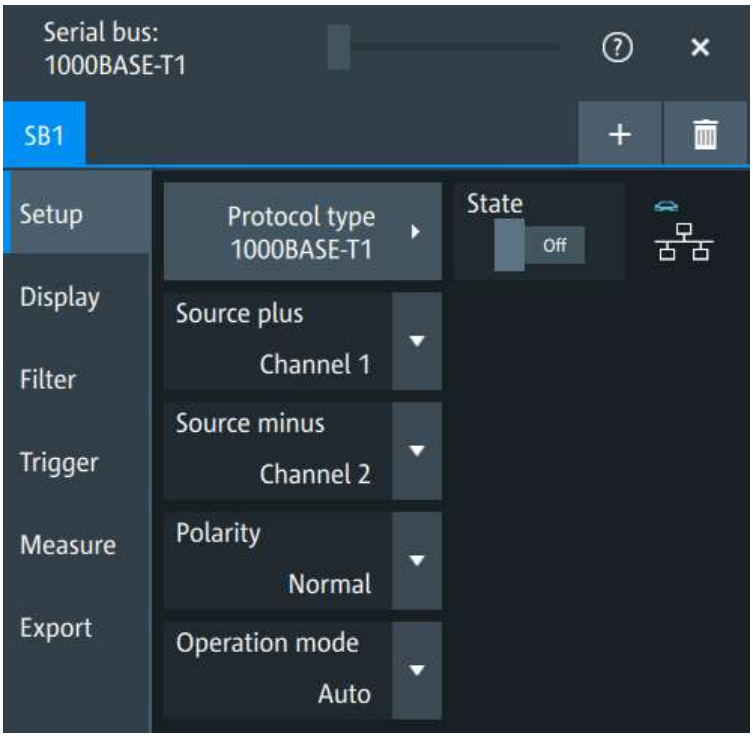

Make sure that the tab of the correct serial bus is selected.

Protocol type
Selects the protocol type to be decoded.

Remote command:
SBUS<sb>:TYPE on page 1489

Source plus
Selects the D+ data source channel for the 1000BASE-T1 protocol. No digital channels can be used.

Remote command:
SBUS<sb>:TBTO:SRCPlus on page 2172

Source minus
Selects the D- data source channel for the 1000BASE-T1 protocol. No digital channels can be used.

Remote command:
SBUS<sb>:TBTO:SRCMinus on page 2173

Polarity
Selects the polarity of the data signal. You can select between "Normal" and "Inverted".

For "Normal" polarity, active high is defined as +1 V and active low is defined as -1 V. For "Inverted" polarity, active high is defined as -1 V and active low is defined as +1 V.

Remote command:
SBUS<sb>:TBTO:POLarity on page 2172

Operation mode
Selects the desired direction of the full duplex signal for analysis You can choose between "Auto", "Main" and "Subordinate".

If "Auto" is selected, the decoder automatically detects the "Main" or "Subordinate" mode.

Remote command:
SBUS<sb>:TBTO:MODE on page 2171

14.22.2.2 Display settings

For details about the display settings, see Section 14.1.3.1, "Display settings", on page 511.

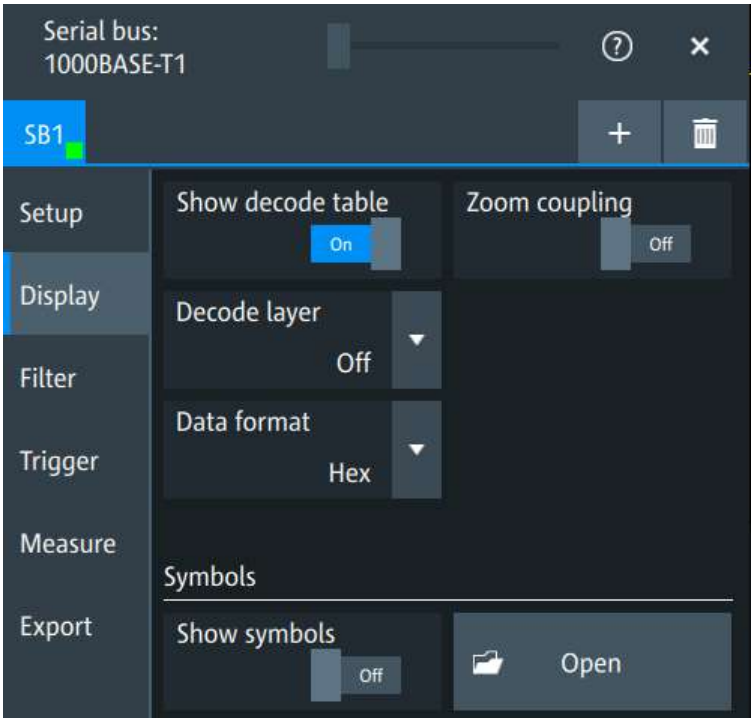

Decode layer
Selects the decode layer.

Decoding is performed in several steps, and the results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display:

"Off"	Disables the display of the decode layer.
"Ternary symbols"	Enables the display of the raw, ternary encoded symbols, consisting of the three states "-1", "0" and "+1".
"Scrambled bits"	Enables the display of the binary bits, decoded from the ternary symbols, but still in a scrambled (pre-descrambling) state.
"Descrambled bits"	Enables the display of the fully decoded and descrambled binary data, representing the original information being transmitted over the 10BASE-T1S link.
"Corrected RS-FEC"	Enables the display of the corrected Reed-Solomon frame error count, which is the number of errors corrected by the Reed-Solomon recovery algorithm.

Data format
See "Data format" on page 512.

Zoom coupling
See "Zoom coupling" on page 513.

Show symbols
Symbol lists are protocol-specific. Label lists for 1000BASE-T1 are available in CSV format.

For details, see Section 14.22.2.3, "1000BASE-T1 symbols", on page 930.

Remote command:
SBUS<sb>:TBTO:SYMBols on page 2173
SBUS<sb>:TBTO:NEWList on page 2171

14.22.2.3 1000BASE-T1 symbols

Symbol lists are protocol-specific.

A 1000BASE-T1 symbol file contains two values for each Ethernet header:

- Ethernet Header display
- Symbolic label: name of the address, specifying its function in the bus network.

For an example, see Section 14.20.2.4, "10BASE-T1S symbols", on page 895.

14.22.3 1000BASE-T1 filter

Access: "Menu" > "Apps" > "Protocol" tab > "1000BASE-T1" > "Filter" tab

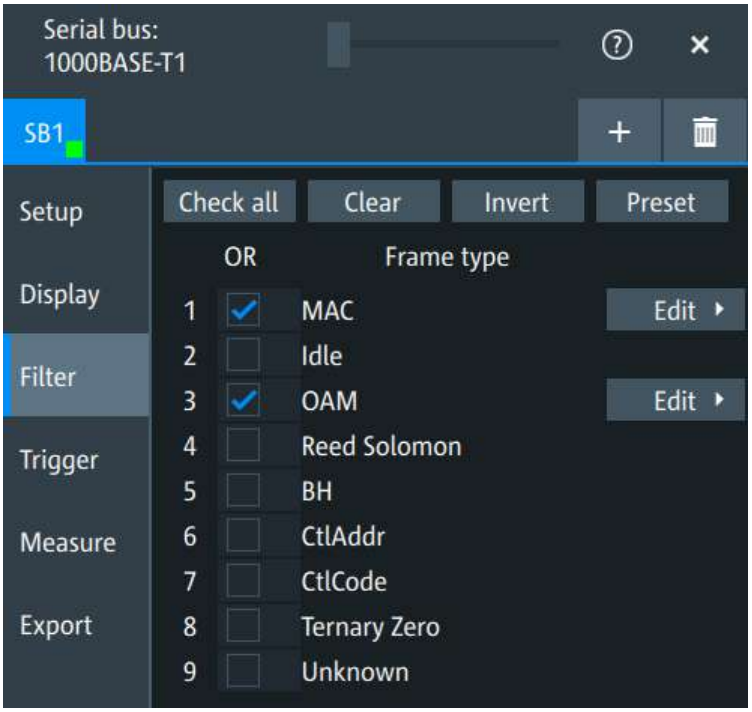

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all" Enables the filter for all available frames and error types.

"Clear" Disables the filter for all available frames and error types.

"Invert" Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types.

Remote command:
`SBUS<sb>:TBTO:FILTer:CHKall` on page 2174
`SBUS<sb>:TBTO:FILTer:CLR` on page 2174
`SBUS<sb>:TBTO:FILTer:INVert` on page 2175
`SBUS<sb>:TBTO:FILTer:RST` on page 2175

Frame type
Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.

For selected frame types, you can also specify conditions for the value of the fields in the "Edit" dialog.

Available frames are:
- "MAC"
- "Idle"
- "OAM"
- "Reed Solomon"
- "BH"
- "CtlAddr"
- "CtlCode"
- "Ternary Zero"
- "Unknown"

Edit
Opens a dialog to define the details of the selected frame.

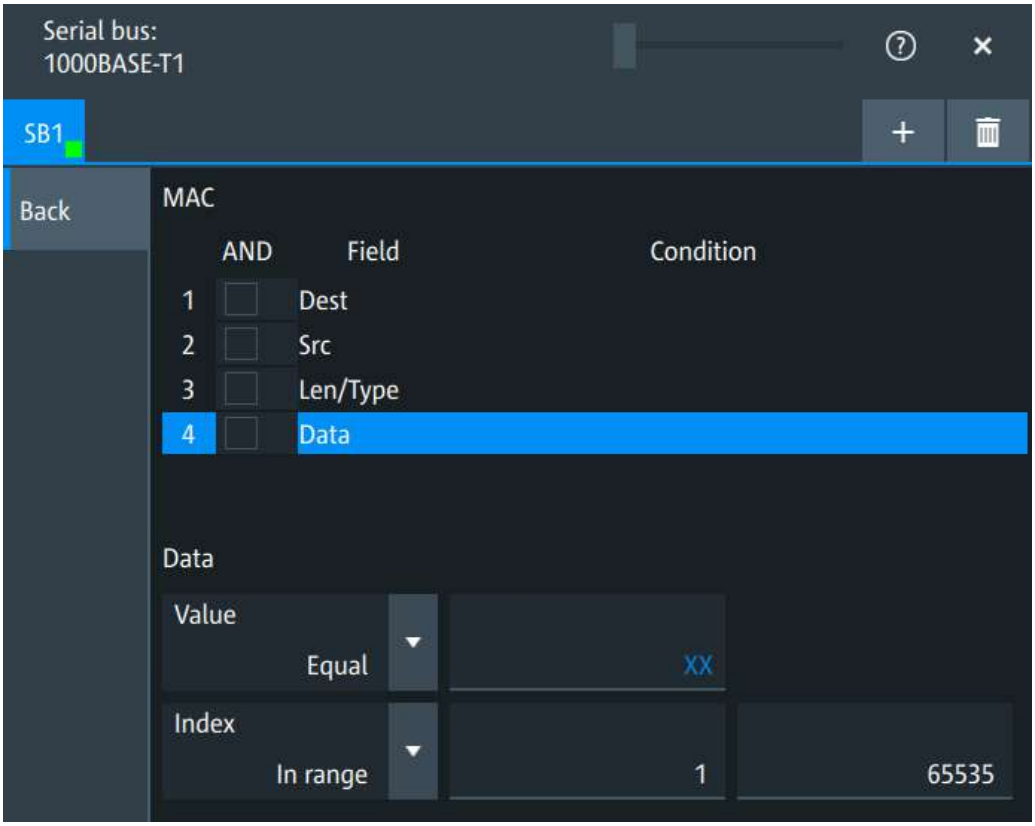

"Field" Enables the field type that you want to filter on for the selected frame. The available fields are "Dest", "Src", "Len/Type", "Data" and "OAM".

Remote command:
`SBUS<sb>:TBTO:FILTer:FIENable` on page 2177
`SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:ENABle` on page 2177

"Condition" Displays the value condition for the selected field.

Remote command:
`SBUS<sb>:TBTO:FILTer:BIT` on page 2175
`SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:BIT` on page 2175

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
`SBUS<sb>:TBTO:FILTer:DMAX` on page 2175
`SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:DMAX` on page 2175
`SBUS<sb>:TBTO:FILTer:DMIN` on page 2176
`SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:DMIN` on page 2176
`SBUS<sb>:TBTO:FILTer:DOPerator` on page 2176
`SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:DOPerator` on page 2176

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
SBUS<sb>:TBTO:FILTer:IMAX on page 2178
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:IMAX on page 2178
SBUS<sb>:TBTO:FILTer:IMIN on page 2178
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:IMIN on page 2178
SBUS<sb>:TBTO:FILTer:IOPerator on page 2178
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:IOPerator on page 2178

Error type
Enables filtering on the selected error type.

Remote command:
SBUS<sb>:TBTO:FILTer:ERENable on page 2177
SBUS<sb>:TBTO:FILTer:ERRor<n>:ENABle on page 2177

14.22.4 1000BASE-T1 format configuration

Access: "Menu" > "Apps" > "Protocol" tab > "1000BASE-T1" > "Format".

See Section 14.1.5, "Format", on page 516.

Show format
Enables the format configuration and displays the frame formats in the honey-comb view and results. If enabled, the frame formats are also selectable for triggering and filtering.

Remote command:
SBUS<sb>:TBTO:FORMat:SELect on page 2180

Add frame
Creates a frame format and adds it to the end of the frame list. A dialog opens to specify the frame details. The number of frame formats is limited to 100.

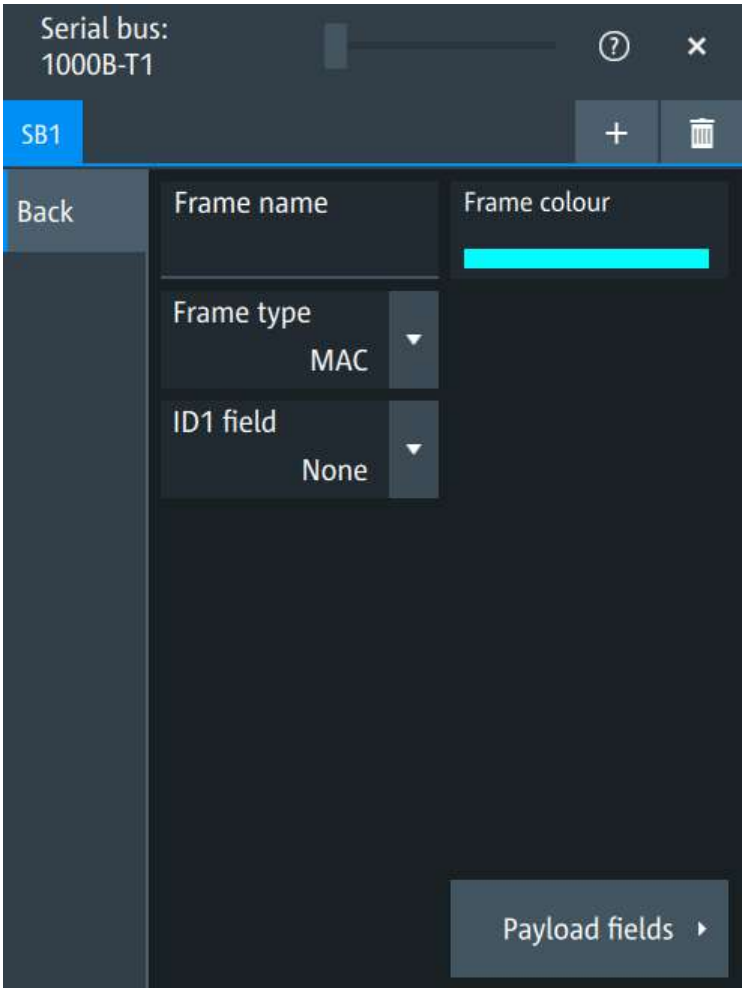

Remote command:
SBUS<sb>:TBTO:FORMat:ADDFrame on page 2180

Edit list
Enables editing the frame list. If enabled, you can delete a frame format by clicking its "Delete" icon. In a list with several entries, you can move frame formats up or down by clicking the arrow buttons. To exit the editing mode, click "Edit list" again.

Remote command:
SBUS<sb>:TBTO:FORMat:CLR on page 2181
SBUS<sb>:TBTO:FORMat:FCOunt? on page 2181

Open
Opens a dialog for loading an existing list of frame formats in XML file format.

Remote command:
SBUS<sb>:TBTO:FORMat:LOAD on page 2180

Save as
Opens a dialog for saving your current list of frame formats to an XML file. Saved frame formats can support efficient and convenient working.

Remote command:
SBUS<sb>:TBTO:FORMat:SAVE on page 2180

Frame name
Specifies an arbitrary name to label the currently selected frame format. Ideally, use speaking names according to the specifications of the applicable protocol standard. Frame names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:NAME on page 2182

Frame color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:COLor on page 2182

Frame type
Select an original frame type.

Remote command:
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:TYPE on page 2182

ID<n> field
Select the first to third identifying field types.

Remote command:
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ID1Field on page 2182
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ID2Field on page 2182
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ID3Field on page 2182

ID<n> value
Select the value of the corresponding field type.

Remote command:
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ID1Value on page 2183
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ID2Value on page 2183
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ID3Value on page 2183

Payload fields
Opens the payload field configuration dialog. The format configuration of payload fields is optional and replaces the payload data of the identified frame.

Add field
Creates a new field description for the currently selected frame format and adds it to the end of the field list with color, bit position (order of transmission) and name. Brackets indicate how often bits will be repeated, [] indicates that this is an open array.

A dialog opens to specify the field details. The number of field descriptions is limited to 100.

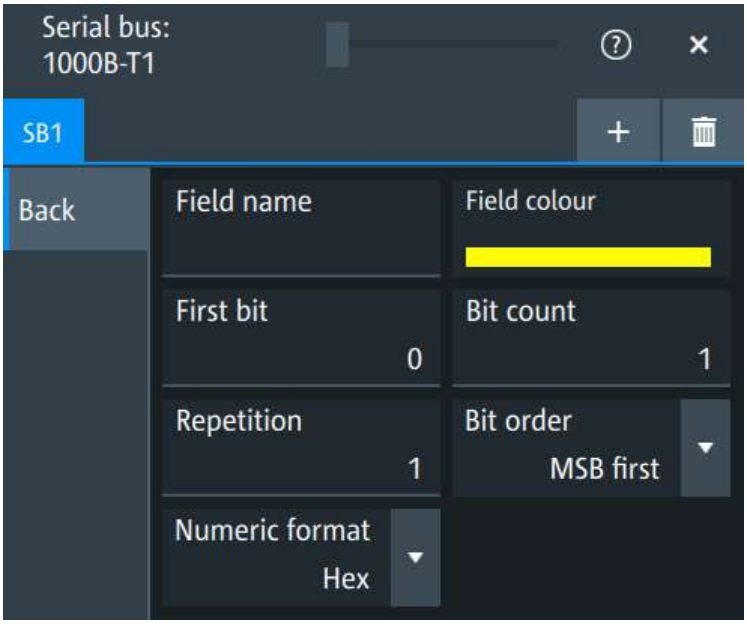

Remote command:
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ADDField on page 2181

Field name
Specifies an arbitrary name for the currently selected field description. Ideally, use speaking names.

Field names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:NAME on page 2183

Field color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:COLor on page 2182

First bit
In order of transmission, sets the first bit of this field in the payload.

Remote command:
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:FSTBit on page 2184

Bit count
Sets the number of bits in the selected field, i.e., the field's length. Selecting the value opens a keypad showing allowed minimum and maximum values. You can set "Min", "Max", "Reset" or adjust with the "Inc" or "Dec" buttons by 1 or 10 (step size dependent). Use "CE" to restore the value used before the keypad opened.

If the "Condition" pattern length does not match the "Bit count":
- Too long, it is truncated.

- Too short, it is left-padded with 0.

Both truncation and padding happen on the left side of the condition and follow the configured "Bit order".

Examples for "Condition" "=100"):
- "Bit order" is "MSB":
  - Bit count = 2: truncated. Result: =00
  - Bit count = 4: padded. Result: =0100
- "Bit order" is LSB first (equivalent MSB-first representation is =001):
  - Bit count = 2: truncated. Result: =00 (LSB first), =00 (MSB first)
  - Bit count = 4: padded. Result: =0100 (LSB first), =0010 (MSB first)

Remote command:
`SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:BITCount` on page 2184

Repetition
Defines the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Remote command:
`SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:REPetition` on page 2184

Bit order
Selects, in which order the bits of a field's "Condition" value are evaluated:

- "LSB first": little endian, least significant bit first
- "MSB first": big endian, most significant bit first

Remote command:
`SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:BITorder` on page 2185

Numeric format
Selects how the "Condition" value is interpreted:

- Symbolic: Assigns a symbolic translation on the data fields. Only available for custom protocols.
- Value list: Assigns a custom name to each hexadecimal value; any value without an assigned value is shown as "Undefined".
- A*X+B: Assigns a linear function on the data fields.
- For details on the other numeric formats, see "Format-specific information" on page 532.

The following rules apply:
- If the condition contains at least one of "H", "h", "L", "l", "X", "x", and all other characters are only "1" and/or "0", the value is always treated as binary, regardless of the selected numeric format.
- "x" and "X" are wildcards and are supported only in binary format or when the string is auto-interpreted as binary per the rule above.
  Examples for format set to "HEX":
  - "=1HL111000": valid (read as binary)
  - "=0x10101": valid (read as binary; "x" acts as wildcard, not a hex prefix)
  - "=1010": valid (read as HEX, with a total of 16 bits)
  - "=0x5A": valid (read as HEX "5A", because "0x" is a valid hex prefix; entering 5A alone is recommended)

– "=5X12": invalid
– "=1H33": invalid

Remote command:
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:FORMat on page 2185

Add value
Creates a new hexagonal value for customization.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:ADDValue on page 2186

Value
Defines the hexagonal value to convert it into a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue on page 2186

Label
Defines the label to convert the corresponding hexagonal value to a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel on page 2187

Unit
Defines a unit for the linear function.

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:UNIT on page 2187

Parameter A,B
Defines the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:PARA on page 2188
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:PARB on page 2188

14.22.5 1000BASE-T1 software trigger

14.22.5.1 Setup A trigger

Before setting up the software trigger for the protocols, a trigger A event needs to be set up.

14.22.5.2 Software trigger settings

Access: "Menu" > "Apps" > "Protocol" tab > "1000BASE-T1" > "Trigger" tab > "Setup Software Trigger" > "Setup SB Trigger".

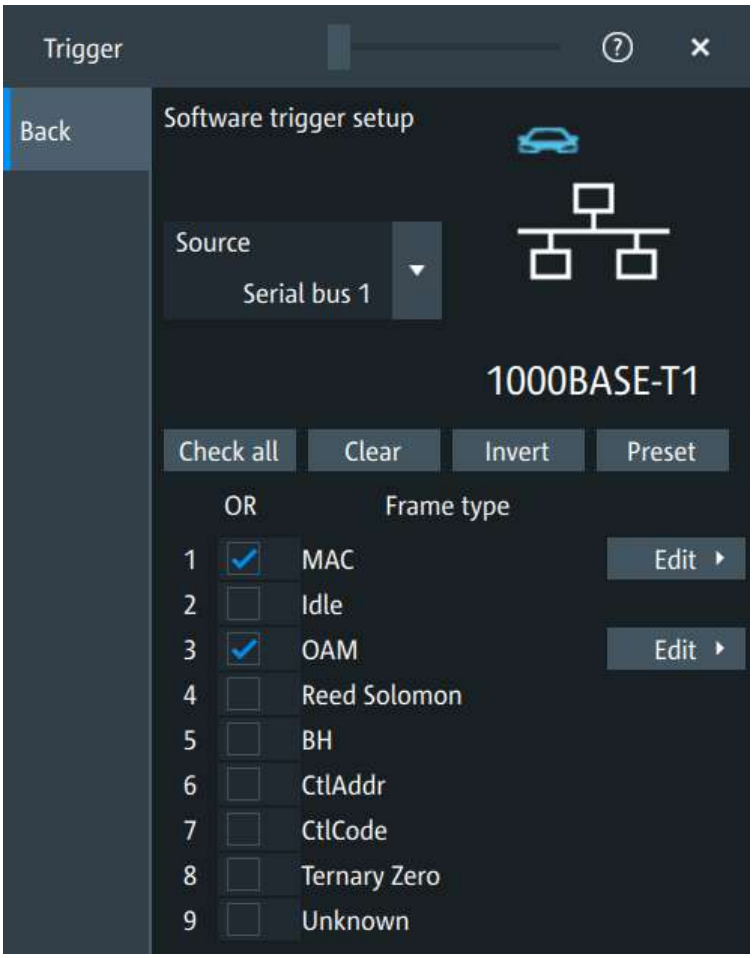

In the "Software Trigger" tab, you can define the settings to trigger on the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to trigger on.

"Check all" Enables the software trigger for all available frames and error types.

"Clear" Disables the software trigger for all available frames and error types.

"Invert" Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types for the software trigger.

Remote command:
`TRIGger:SBSW:TBTO:CHKall` on page 2189
`TRIGger:SBSW:TBTO:CLR` on page 2189
`TRIGger:SBSW:TBTO:INVert` on page 2189
`TRIGger:SBSW:TBTO:RST` on page 2189

Frame type
Selects the frame type that you want to trigger on. You can trigger on all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

The following frames are available: "MAC", "Idle", "OAM", "Reed Solomon", "BH", "CtlAddr", "CtlCode", "Ternary Zero", "Unknown".

Remote command:
`TRIGger:SBSW:TBTO:FRENable` on page 2190
`TRIGger:SBSW:TBTO:FRAMe<fr>:ENABle` on page 2190

Edit
Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

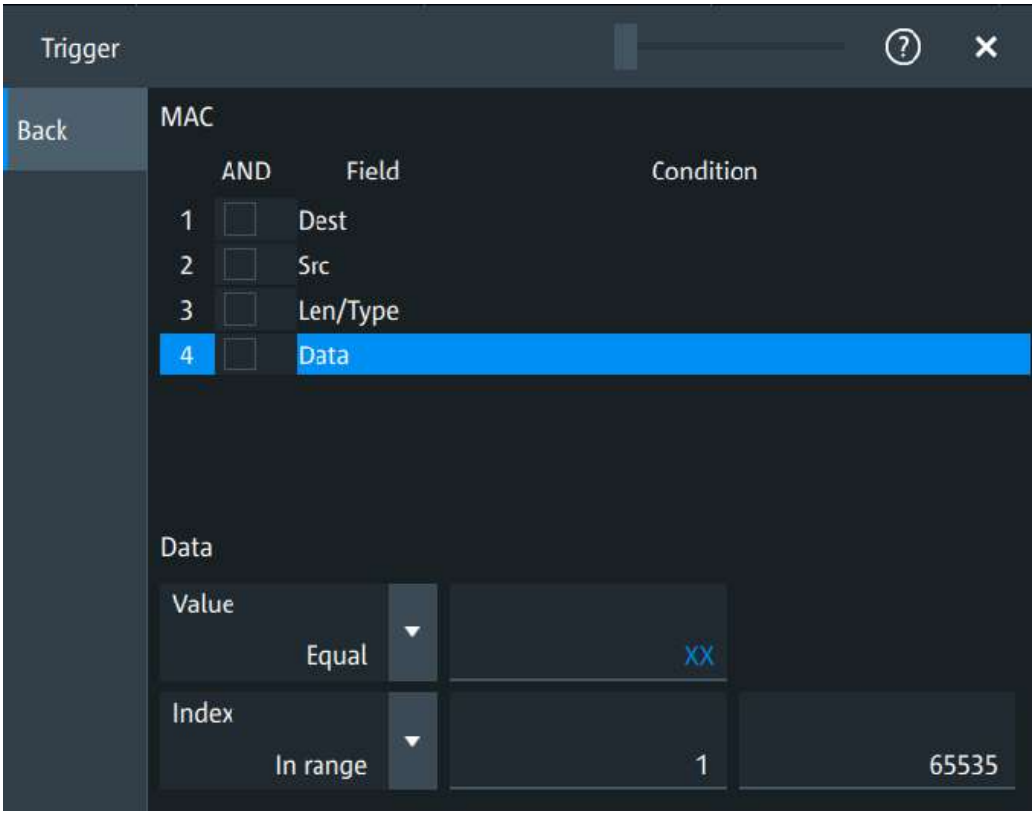

"Field" Enables the field type that you want to trigger on for the selected frame.
The following fields are available: "Dest", "Src", "Len/Type", "Data", "OAM".

Remote command:
`TRIGger:SBSW:TBTO:FIENable` on page 2191
`TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:ENABle` on page 2191

"Condition" Displays the value condition for the selected field.

Remote command:
`TRIGger:SBSW:TBTO:BIT` on page 2190
`TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:BIT` on page 2190

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
`TRIGger:SBSW:TBTO:DMAX` on page 2190
`TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:DMAX` on page 2190
`TRIGger:SBSW:TBTO:DMIN` on page 2191
`TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:DMIN` on page 2191
`TRIGger:SBSW:TBTO:DOPerator` on page 2191
`TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:DOPerator` on page 2191

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
`TRIGger:SBSW:TBTO:IMAX` on page 2192
`TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:IMAX` on page 2192
`TRIGger:SBSW:TBTO:IMIN` on page 2192
`TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:IMIN` on page 2192
`TRIGger:SBSW:TBTO:IOPerator` on page 2193
`TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:IOPerator` on page 2193

Error type
Enables triggering on the selected error type.

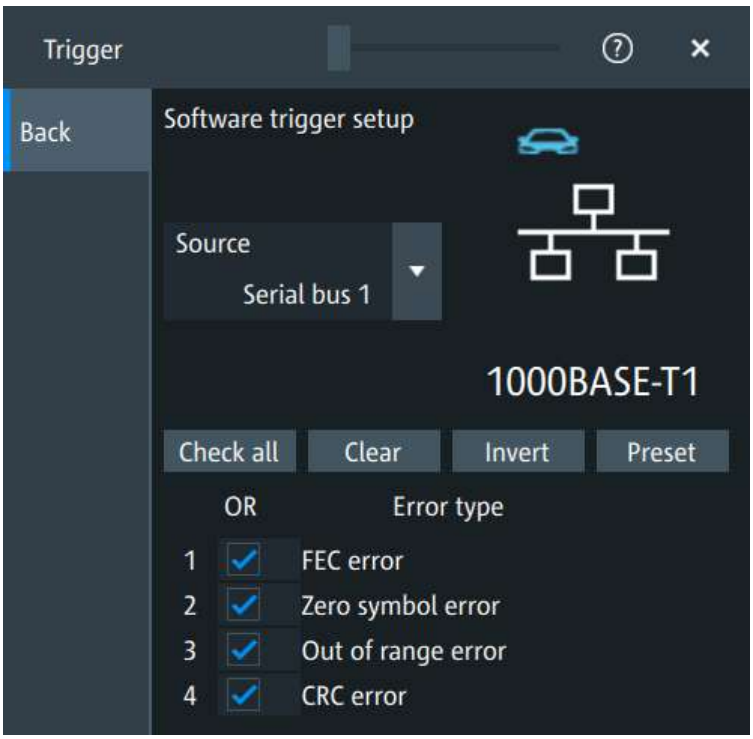

The following error types are available: "FEC error", "Zero symbol error", "Out of range error", "CRC error".

Remote command:
`TRIGger:SBSW:TBTO:ERENable` on page 2193
`TRIGger:SBSW:TBTO:ERRor<m>:ENABle` on page 2193

14.22.6 Measure

The "Setup Measurement" button opens the dialog for automatic measurements in the "Protocol" category for the selected serial bus.

See Section 10.2.8.2, "Settings for protocol measurements", on page 311.

14.22.7 1000BASE-T1 decode results

To enable the decoding, see Section 14.1.9.3, "Decoding protocol signals", on page 531.

Decode results table

The "Decode results" table contains information about all decoded frames.

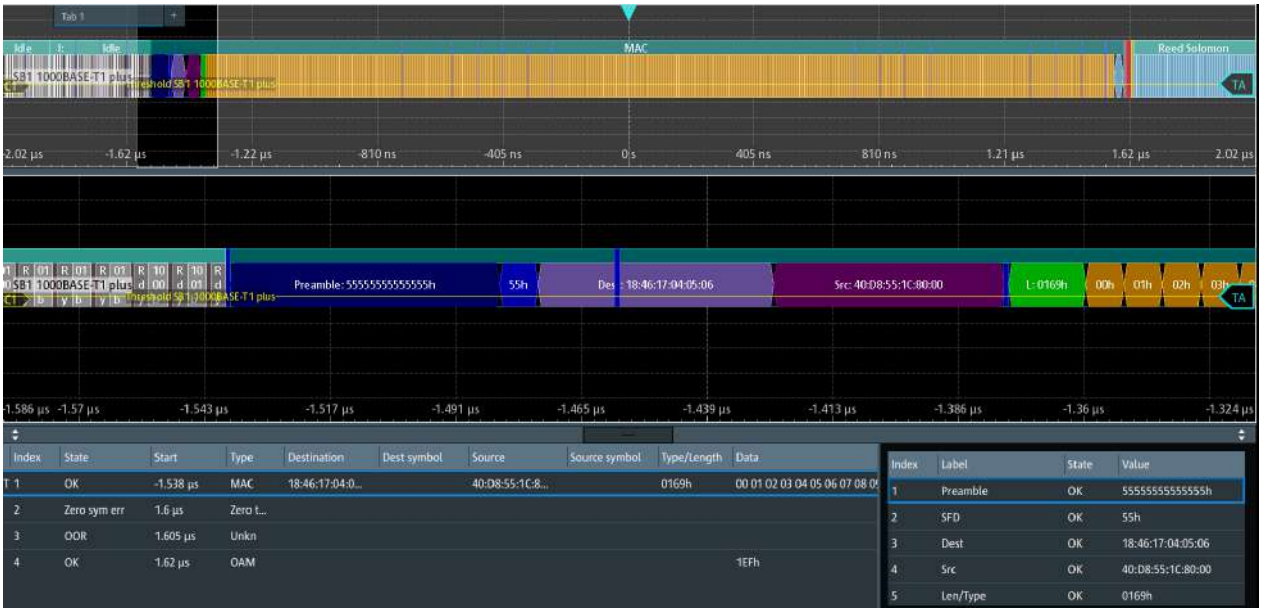

Figure 14-58: Decoded 1000BASE-T1 signal

The decode results table contains information about all decoded frames.

Table 14-40: Content of the decode results table

Column	Description
Index	Frame count
State	Overall state of the frame: either OK or the relevant error condition (preamble, CRC or SFD)
Start	Start time of the frame
Type	Type of frame (e.g. Idle, MAC or data)
Destination	Destination address of the frame
Dest symbol	Symbolic destination name. Available only, if "Show symbols" is enabled in the "Display" tab and a symbols list is loaded.
Source	Source address of the frame
Source Symbol	Symbolic source name. Available only, if "Show symbols" is enabled in the "Display" tab and a symbols list is loaded.
Type/Length	The subprotocol (e.g. HTML, video, etc.) determines what meaning this field has. Since the content of this data area is not decoded, the interpretation of this field is ambivalent. It could either be the word type (specific for the subprotocol) or the word length.

Column	Description
Data	Value of the data. Select the data format in the "Display" tab.
Bit rate	Value of the bit rate

When you select a frame in the decode results table, its field content is shown in the details table to the right.

Table 14-41: Content of the frame details table

Column	Description
Index	Index of the decoded field
Label	Name of the field
State	State of the field (OK / not OK)
Value	Value of the field

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 1491

Remote commands

Remote commands to retrieve decode results are described in Section 18.18.23, "1000BASE-T1 (option R&S MXO5-K560)", on page 2171.

You can also export the decode results. For details see Section 14.1.9.4, "Exporting decode results", on page 531.

Example 1000BASE-T1 export file

```
Index,Start,Stop,State,Type,Destination,Source,Type/Len,Data,CRC,Bit rate
1,-1.538e-06,1.596e-06,'OK','MAC','18:46:17:04:05:06','40:D8:55:1C:80:00',0169h,
00 01 02 03 04 05 06 07 08 09 0A 0B 0C 0D 0E 0F 10 11 12 13 14 15 16 17 18 19 1A
1B 1C 1D 1E 1F 20 21 22 23 24 25 26 27 28 29 2A 2B 2C 2D 2E 2F 30 31 32 33 34 35
36 37 38 39 3A 3B 3C 3D 3E 3F 40 41 42 43 44 45 46 47 48 49 4A 4B 4C 4D 4E 4F 50
51 52 53 54 55 56 57 58 59 5A 5B 5C 5D 5E 5F 60 61 62 63 64 65 66 67 68 69 6A 6B
6C 6D 6E 6F 70 71 72 73 74 75 76 77 78 79 7A 7B 7C 7D 7E 7F 80 81 82 83 84 85 86
87 88 89 8A 8B 8C 8D 8E 8F 90 91 92 93 94 95 96 97 98 99 9A 9B 9C 9D 9E 9F A0 A1
A2 A3 A4 A5 A6 A7 A8 A9 AA AB AC AD AE AF B0 B1 B2 B3 B4 B5 B6 B7 B8 B9 BA BB BC
BD BE BF C0 C1 C2 C3 C4 C5 C6 C7 C8 C9 CA CB CC CD CE CF D0 D1 D2 D3 D4 D5 D6 D7
D8 D9 DA DB DC DD DE DF E0 E1 E2 E3 E4 E5 E6 E7 E8 E9 EA EB EC ED EE EF F0 F1 F2
F3 F4 F5 F6 F7 F8 F9 FA FB FC FD FE FF 00 01 02 03 04 05 06 07 08 09 0A 0B 0C 0D
0E 0F 10 11 12 13 14 15 16 17 18 19 1A 1B 1C 1D 1E 1F 20 21 22 23 24 25 26 27 28
29 2A 2B 2C 2D 2E 2F 30 31 32 33 34 35 36 37 38 39 3A 3B 3C 3D 3E 3F 40 41 42 43
44 45 46 47 48 49 4A 4B 4C 4D 4E 4F 50 51 52 53 54 55 56 57 58 59 5A 5B 5C 5D 5E
5F 60 61 62 63 64 65 66 67 68,AFFEAFFEh,987900000
2,1.6e-06,1.602e-06,'ERRZERO','ZEROTSYM',---,---,---,---,---,1500000000
```

```
3,1.605e-06,1.62e-06,'ERROOR','UNKN',---,---,---,---,---,1067000000
4,1.62e-06,1.629e-06,'OK','OAM',---,---,---,1EFh,---,1000000000

Details frame 1
Index,Label,State,Value
1,'"Data: 1"','OK','"00h"'
2,'"Data: 2"','OK','"01h"'
3,'"Data: 3"','OK','"02h"'
4,'"Data: 4"','OK','"03h"'
5,'"Data: 5"','OK','"04h"'
6,'"Data: 6"','OK','"05h"'
7,'"Data: 7"','OK','"06h"'
8,'"Data: 8"','OK','"07h"'
9,'"Data: 9"','OK','"08h"'
10,'"Data: 10"','OK','"09h"'
(...)
```

14.23 USB 1.1 (option R&S MXO5-K570)

R&S MXO5-K570 is a firmware option that enables the MXO 5 to analyze Universal Serial Bus (USB) protocols, by triggering and decoding them. The option is compatible with the standards USB 1.0, USB 1.1 and USB 2.0, but not with USB HSIC. It supports the data rates "Low Speed" (1.5 Mbit/s) and "Full Speed" (12 Mbit/s), both in USB 1.0 and USB 1.1, and "High Speed" (480 Mbit/s in USB 2.0).

For USB 2.0, refer to Section 14.24, "USB 2.0 (option R&S MXO5-K570)", on page 968.

- USB protocol basics....945
- USB 1.1 configuration....950
- USB 1.1 filter....954
- USB1.1 format configuration....957
- USB 1.1 trigger....963
- Measure....966
- USB 1.1 decode results....966

14.23.1 USB protocol basics

The USB protocol was developed, starting in 1996, by the nonprofit organization USB Implementers Forum, Inc. (USB-IF), formed by Compaq, Hewlett-Packard, Intel, Lucent Technologies, Microsoft, NEC, and Philips. The purpose was to provide a common "plug-and-play" solution to replace a multitude of interfaces for the communication between computers and devices. It allows even unskilled users to connect many devices to a PC easily. USB was originally used for devices that feature low signaling rates (up to 1.5 Mbit/s), especially human interface devices like mouse, joystick or keyboard. With the release of USB 2.0 in April 2000, devices such as printers, cameras and mass storage media were enabled to exchange data at faster rates (up to 480 Mbit/s). Also,

the high-speed protocol HSIC (High Speed Inter Chip) is used for the communication between on-board devices.

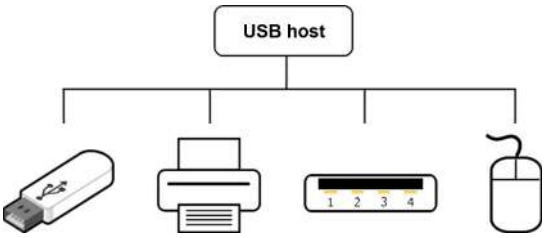

Figure 14-59: USB Topology: mass storage device, printer, USB hub, and mouse (human interface device) connected to a USB host

More information, including the USB specification, is available online within the web domain http://usb.org.

This section provides an overview of protocol characteristics, data transfer, packet structure, address and endpoint formats of USB and trigger possibilities.

USB characteristics

The main characteristics of USB are:

- Four-wire design: USB requires a shielded cable containing four wires. Two of them, called D+ and D-, form a twisted pair (for low speed, they can be non-twisted). These data lines transmit differential data signals and single-ended signal states, both referenced to a third wire: the GND or ground. The fourth wire is called VBUS (voltage bus). It carries a nominal 5 V supply, which can be used to power a device.
- Host-to-device communication: in USBs "speak-when-spoken-to" protocol, communication is always initiated by the host. Consequently, there is no direct communication between USB devices, apart from a few exceptions.
- The addressing scheme can distinguish a maximum of 127 connected devices, because a packet's address field length is limited to 7 bits. USB devices have up to 16 OUT endpoints (from host to device) and up to 16 IN endpoints (from device to host).
- USB transactions consist of two or three packets: token, data, and typically handshake
- Packet type: a packet identifier (PID) is sent as a first byte within the packet and specifies the different packet types.
- NRZI (Non Return to Zero Inverted): a zero (0) is encoded as a transition of the physical level, whereas a one (1) has no transition, thus it is represented by a steady level.



Figure 14-60: Example of an NRZI sequence

- Bit stuffing: a zero (0) is inserted after every 6 consecutive ones (111111). This insertion ensures sufficient transitions to keep the phase-locked loop (PLL) synchronized and locked onto the data stream.
- Little Endian scheme: both multiple bits and multiple bytes are transmitted with the least significant bit/byte (LSB) sent first, while the most significant bit/byte (MSB) is sent last.
- HSIC (high-speed inter-chip): an industry standard for USB chip-to-chip interconnection with a 2-signal (strobe, data) source synchronous serial interface, using 240 MHz DDR signaling to provide only high-speed (480 Mbit/s) data rate.

Table 14-42: Simplified symbolic representation from the USB standard

Bus State	Protocol	Levels
Differential **"1"**		D+ High, D- Low
Differential **"0"**		D+ Low, D- High
Data **"J"** State	Low speed	D+ Low, D- High (differential **"0"**)
	Full speed	D+ High, D- Low (differential **"1"**)
Data **"K"** State	Low speed	D+ High, D- Low (differential **"1"**)
	Full speed	D+ Low, D- High (differential **"0"**)

In the example in Table 14-42, "High" speed can be assumed to be like "Full" speed. For a complete overview of bus states and for an electrical definition of "High" and "Low" speed, refer to section 7 of the USB specification.

Data transfer

In contrast to a conventional bus, USB is more like a network protocol, using target addresses and endpoints. However, USB features a primary on the bus, called the host. It transmits packets of data to all devices or hubs connected to the host (or connected to a device or hub, which is in turn connected to the host). All connected devices receive each data packet, but disregard it unless it carries the correct address. In reply, only the addressed device (one at a time) can send data upstream to the host.

The USB architecture supports four different kinds of data transfer: control, bulk, interrupt or isochronous transfer. For example, a "bulk OUT" transfer (from host to device) can look like this:

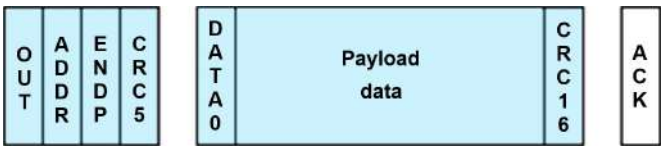

Figure 14-61: Example of a bulk OUT transfer. Blue: host speaks, white: device speaks

Packet structure

All packets must start with a **SYNC** field, also called **SOP** (start of packet), which indicates data transmission. It consists of "KJ" pairs, followed by one "KK". At low

speed and full speed (USB 1.x), it is 8 bits long, encoded as "KJKJKJKK". At high speed (USB 2.0 and HSIC), it is up to 32 bits long, encoded as "KJKJKJKJKJKJ...KK".

The SYNC field is used to synchronize the clock of the receiver with the clock of the transmitter. The final 2 bits ("KK") indicate where the PID field starts.

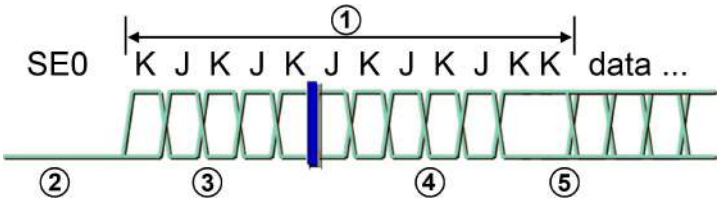

Figure 14-62: Start of a high-speed packet: after an SE0, the packet starts with a SYNC field (or SOP), followed by the data packet

SE0 = Single-ended zero, both D+ and D- wire are on low level
1 = High-speed SYNC field (or SOP), length up to 32 bits
2 = Receiver-squelched differential envelope, below 100 mV
3 = Differential envelope exceeds 150 mV, reception enabled with 4 symbol times
4 = Clock recovery must lock in time to detect the end of SYNC
5 = End of SYNC detected, receiver begins data recovery

After the SYNC (or SOP), USB data packets consist of (in this order):

- **PID** (packet identifier): specifies the type of packet. Examples are:
  - Token packets (IN, OUT, SETUP) are always the first packet in a USB transaction, containing the address of the device and its endpoint.
  - Token SOF packets (start of frame) are there to schedule a data transfer.
  - Handshake packets provide the status of the transaction.
  - Data packets are dedicated for the data transfer payload.
  - Various special packets provide special characteristics: for instance, SPLIT packets are used to communicate with low or full speed devices on a high-speed link.

  The PID's length is 8 bit, beginning (LSB) with the fields PID0, PID1, PID2 and PID3. Those 4 bits are repeated in PID4, PID5, PID6 and PID7, but in complementary form (for integrity checking). The PID is the only part of a packet not to be covered by the CRC (see below). Packets with invalid or non-supported PID fields are rejected. For valid PIDs, see Table 14-43.
- **ADDR** (address): contains the USB address of the target device. The length of this field is 7 bits, resulting in addresses 0 through 127 (with 0 reserved as the default address after reset).
- **ENDP** (endpoint): number of the endpoint. The length of this field is 4 bits, resulting in a maximum of 16 different endpoints.
- **Frame number**: this field with a length of 11 bits specifies the current frame number 0 to 2047. It is only sent in SOF packets.
- **Data field** (or "payload data"): the length of this field is not fixed, it can contain between 0 bytes and 1024 bytes.
- **CRC** (cyclic redundancy check): Finally, the CRC field ensures that the received data is correct. If an error is detected in the CRC calculation, the packet is rejected. Packets (in this case IN, OUT, SOF, SETUP, PING, SPLIT) are followed by a CRC5

(which is 5 bits long) over ADDR and ENDP (or the frame number field in the SOF packet). Data packets (DATA0, DATA1, MDATA, DATA2) are followed by a CRC16 (which is 16 bits long) over the data field. No CRC is used for handshake packets.

- **EOP** (end of package): the devices determine the length of the data field with the EOP signal, which indicates the end of a packet. In low and full speed, it consists of two SE0 bits, followed by a J state. For high speed, the current state is inverted and kept for 7-bit times, leading to a bit-stuff error that is used as an EOP indicator. This state corresponds to the bit sequence 01111111 ahead of NRZI. For the SOF token, the bit sequence 01111111111111111111111111111111111111111111 is transmitted (five NRZI bytes), which is used to recognize disconnects (since high-speed devices normally do not apply voltage to D+/D-). If no device is present, a higher voltage is measured. After that, the idle state (SE0) is occupied.

Table 14-43: Valid PIDs for different packet types

Packet type	Name	PID value	Meaning
Token	OUT	0xE1	Starts data transfer towards a device
	IN	0x69	Starts data transfer towards the host
	SOF	0xA5	Indicates start of frame
	SETUP	0x2D	Starts a setup transfer and sends information on this start to the device
Data	DATA0	0xC3	Data packet with data-toggle bit 0
	DATA1	0x4B	Data packet with data-toggle bit 1
	DATA2	0x87	Data packet for high speed IN isochronous transfers that require high bandwidth
	MDATA	0x0F	Data packet for high-speed OUT isochronous transfers that require high bandwidth
Handshake	ACK	0xD2	Acknowledgment of a packet received without error
	NAK	0x5A	Data not accepted, typically equivalent with some type of EAGAIN, meaning that the data needs to be resent later
	STALL	0x1E	A severe error has occurred, the target endpoint cannot be addressed until it is explicitly cleared again
	NYET	0x96	Only used in high-speed transfers, meaning ACK, but in the next interval no data can be received. Therefore the host must apply a PING first.
Special	PRE	0x3C	Starts a low speed transfer via a full speed bus
	ERR	0x3C	Indicates an error in an SPLIT transaction (using the same PID as PRE, however, these indications cannot be mistaken for each other)
	SPLIT	0x78	Starts an SPLIT transaction (thus: a low speed or full speed transfer via a high-speed bus)
	PING	0xB4	Used for monitoring high-speed data flow

- Token packets (IN, OUT, SETUP) and PING packets have the following format:

SYNC	PID	ADDR	ENDP	CRC5	EOP

- Start of frame packets (SOF) have the following format:

SYNC	PID	Frame number	CRC5	EOP

- Data packets have the following format:

SYNC	PID	Data	CRC16	EOP

- Handshake packets have the following format:

SYNC	PID	EOP

- SPLIT packets have the following format:

SYNC	PID	ADDR	SC	PORT	S	E	ET	CRC5	EOP

Trigger possibilities

Signals on the input channels can be triggered. The following trigger types are available:

- ANY Packet - Packet Sync: Triggering on the first rising slope after transmission of the packet Sync. Various lengths according to standard (in USB 2.0: 32 bit)
- Any token, OUT, IN, SOF, SETUP, AND-ing with user-defined PID check, address, endpoint, CRC5: For OUT, IN, SETUP, the endpoint and CRC5 follow from the bit order, therefore such patterns can be recognized.
- Data Selection: DATA0, DATA1, DATA2, MDATA, (for USB 1.x only: AND-ing with user-defined PID check, payload and CRC values)
- Handshake Packet Setup: Triggering on handshake packet, trigger with specific settings: ACK, NAK, NYET, STALL or ERR handshake packet
- Protocol Error: Triggering on PID/check error, CRC5 error, CRC16 (for USB 1.x only), frame length error (for USB 1.x only)
- Bus Event: Triggering on reset, resume, or suspend.

14.23.2 USB 1.1 configuration

If you need information on how to get started with configuring the USB 1.1 setup, see Section 14.23.2.2, "Configuring USB 1.1 signals", on page 952. Otherwise proceed with the configuration settings.

14.23.2.1 USB 1.1 configuration settings

Access: "Menu" > "Apps" > "Protocol" tab > "USB 1.1" > "Setup" tab

Make sure that the tab of the correct serial bus is selected.

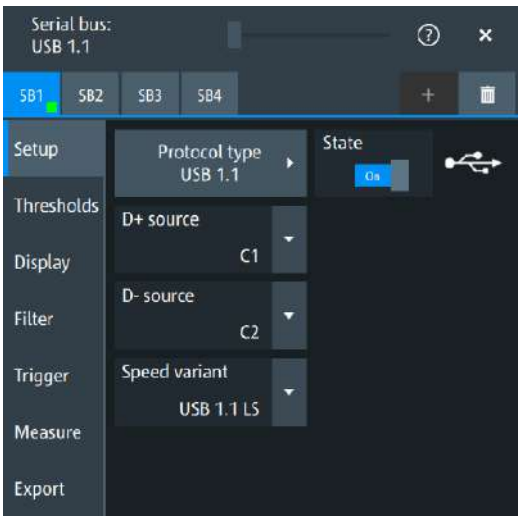

Figure 14-63: Serial bus protocol configuration dialog for USB 1.1 LS or FS

See also: Section 14.1.1, "Setup - general settings", on page 508.

Protocol type
Selects the protocol type to be decoded.

Remote command:
`SBUS<sb>:TYPE` on page 1489

State
Enables the decoding of the selected bus. The signal icon of the bus appears on the signal bar.

Remote command:
`SBUS<sb>[:STATe]` on page 1489

D+ source, D- source
Defines the source settings for the D+ and the D- data signals for USB 1.1 low speed (LS) or full speed (FS) protocols.

Usually, the source is one of the analog channels. Reference and math waveforms are available as sources if the trigger source is one of the analog channels but not the serial bus.

Remote command:
`SBUS<sb>:USBone:DPLus:SOURce` on page 2203
`SBUS<sb>:USBone:DMINus:SOURce` on page 2203

Speed variant
Selects the low or full speed variant of USB:

"USB 1.1 LS"
Selects the 1.5 Mbit/s low speed (LS) protocol variant of USB 1.1.

"USB 1.1 FS"

Selects the 12 Mbit/s full speed (FS) protocol variant of USB 1.1.

Note: Instead of selecting the speed variant in this "Setup" dialog, you can select it in the protocol selection table:

To access the protocol selection table, select "Menu" > "Apps" > "Protocol", or use the "Protocol type" button in the "Setup" dialog.

Remote command:
`SBUS<sb>:USBone:MODE` on page 2203

14.23.2.2 Configuring USB 1.1 signals

For configuration, assign the lines to the input channels and define the active states and the logical thresholds.

For details on configuration settings, see Section 14.23.2.1, "USB 1.1 configuration settings", on page 950.

Serial Bus Setup

1. Tap the "+ Bus" activator in the bottom right of the screen.
2. Select the tab of the bus that you want to set up, for example "SB1".
3. Tap the "Protocol type" button. Select "Protocol type" = "USB 1.1 LS" or "USB 1.1 FS".
4. Select the waveform for the "D+ source" and "D- source" lines.
5. In the "Thresholds" tab, specify the logical thresholds: "D+ threshold" and "D- threshold".
   Specify also hysteresis settings: "D+ hysteresis" and "D- hysteresis".
6. In the "Display" tab, enable "Show decode table".

14.23.2.3 Threshold settings

Access: "Menu" > "Apps" > "Protocol" tab > "USB 1.1" > "Thresholds" tab

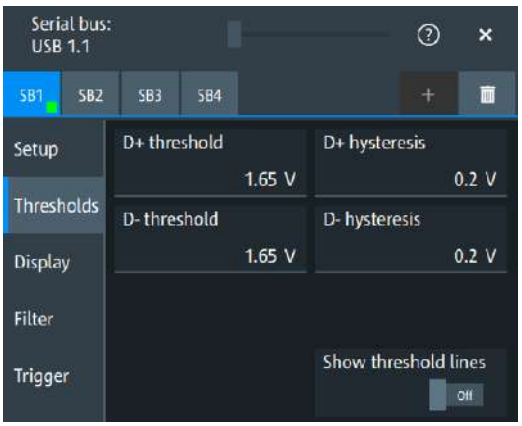

Figure 14-64: Serial bus threshold configuration dialog for USB 1.1

Threshold and hysteresis settings
Specifies the following values:

D+ threshold ← Threshold and hysteresis settings
Sets the threshold value for the digitization of the signal on the D+ data line.

For transformation of high or low levels into J or K states of the bus, refer to Table 14-42. The J and K states are transformed into bits according to the rules of non-return-to-zero inverted (NRZI) encoding.

Remote command:
`SBUS<sb>:USBone:DPLus:THReshold` on page 2204

D- threshold ← Threshold and hysteresis settings
Sets the threshold value for the digitization of the signal on the D- data line.

See also "D+ threshold" on page 953.

Remote command:
`SBUS<sb>:USBone:DMINus:THReshold` on page 2204

D+ hysteresis ← Threshold and hysteresis settings
Sets the hysteresis value for the D+ data line.

Remote command:
`SBUS<sb>:USBone:DPLus:HYSTeresis` on page 2204

D- hysteresis ← Threshold and hysteresis settings
Sets the hysteresis value for the D- data line.

Remote command:
`SBUS<sb>:USBone:DMINus:HYSTeresis` on page 2204

Show threshold lines
If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also Show threshold lines.

Remote command:
SBUS<sb>:THReshold on page 1492

14.23.2.4 Display settings

Access: "Menu" > "Apps" > "Protocol" tab > "USB 1.1" > "Display" tab

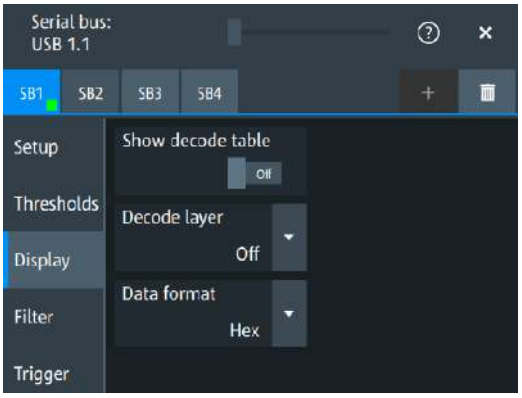

Figure 14-65: Serial bus display configuration dialog for USB 1.1

For details about the display settings, see Section 14.1.3.1, "Display settings", on page 511.

Decode layer
Selects the decode layer.

Decoding is performed in several steps, and the results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display.

"Off"	Disables the display of the decode layer.
"Edges"	Enables the display of all edges.
"States"	"Enables the display of J and K states according to Table 14-42 in Section 14.23.1, "USB protocol basics", on page 945.
"Bits"	Enables the display of the raw, binary encoded symbols, consisting of the states "0" and "1".
"Words"	Enables the display of words, which are the numerical values of the individual fields that compose each packet, like PID, ADDR, DATA or CRC.

14.23.3 USB 1.1 filter

Access: "Menu" > "Apps" > "Protocol" tab > "USB 1.1" > "Filter" tab

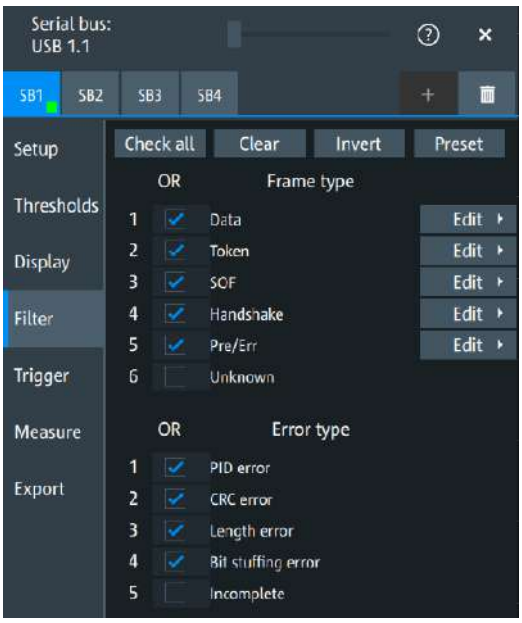

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all" Enables the filter for all available frames and error types.

"Clear" Disables the filter for all available frames and error types.

"Invert" Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types.

Remote command:
`SBUS<sb>:USBone:FILTer:CHKall` on page 2206
`SBUS<sb>:USBone:FILTer:CLR` on page 2206
`SBUS<sb>:USBone:FILTer:INVert` on page 2206
`SBUS<sb>:USBone:FILTer:RST` on page 2207

Frame type
Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.

For selected frame types, you can also specify conditions for the value of the fields in the "Edit" dialog.

Available frames are "Data", "Token", "SOF", "Handshake", "Pre/Err" and "Unknown".

Remote command:
`SBUS<sb>:USBone:FILTer:FRENable` on page 2207
`SBUS<sb>:USBone:FILTer:FRAMe<fr>:ENABle` on page 2207

Edit
Opens a dialog to define the details of the selected frame.

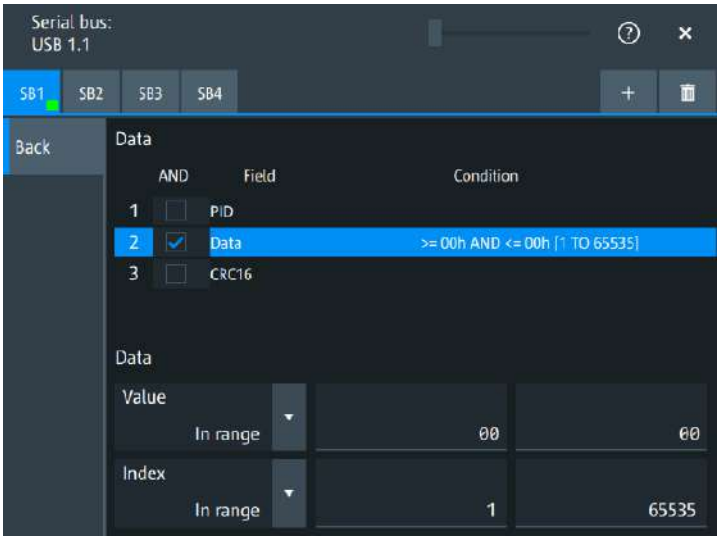

"Field" Enables the field type that you want to filter on for the selected frame. The available fields are "PID", "Data", "CRC5", "CRC16", "Addr", "Endp" and "Frame No.".

Remote command:
`SBUS<sb>:USBone:FILTer:FIENable` on page 2210
`SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:ENABle` on page 2210

"Condition" Displays the value condition for the selected field.

Remote command:
`SBUS<sb>:USBone:FILTer:BIT` on page 2210
`SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:BIT` on page 2210

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
`SBUS<sb>:USBone:FILTer:DMAX` on page 2207
`SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:DMAX` on page 2207
`SBUS<sb>:USBone:FILTer:DMIN` on page 2208
`SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:DMIN` on page 2208
`SBUS<sb>:USBone:FILTer:DOPerator` on page 2208
`SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:DOPerator` on page 2208

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
SBUS<sb>:USBone:FILTer:IMAX on page 2209
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:IMAX on page 2209
SBUS<sb>:USBone:FILTer:IMIN on page 2209
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:IMIN on page 2209
SBUS<sb>:USBone:FILTer:IOPerator on page 2209
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:IOPerator on page 2209

Error type
Enables filtering on the selected error type.

The available error types are "PID error" (packet identifier), "CRC error" (cyclic redundancy check), "Length error", "Bit stuffing error" and "Incomplete".

Remote command:
SBUS<sb>:USBone:FILTer:ERENable on page 2208
SBUS<sb>:USBone:FILTer:ERRor<n>:ENABle on page 2208

14.23.4 USB1.1 format configuration

Access: "Menu" > "Apps" > "Protocol" tab > "USB 1.1" > "Format".

See Section 14.1.5, "Format", on page 516.

Show format
Enables the format configuration and displays the frame formats in the honey-comb view and results. If enabled, the frame formats are also selectable for triggering and filtering.

Remote command:
SBUS<sb>:USBone:FORMat:SELect on page 2211

Add frame
Creates a frame format and adds it to the end of the frame list. A dialog opens to specify the frame details. The number of frame formats is limited to 100.

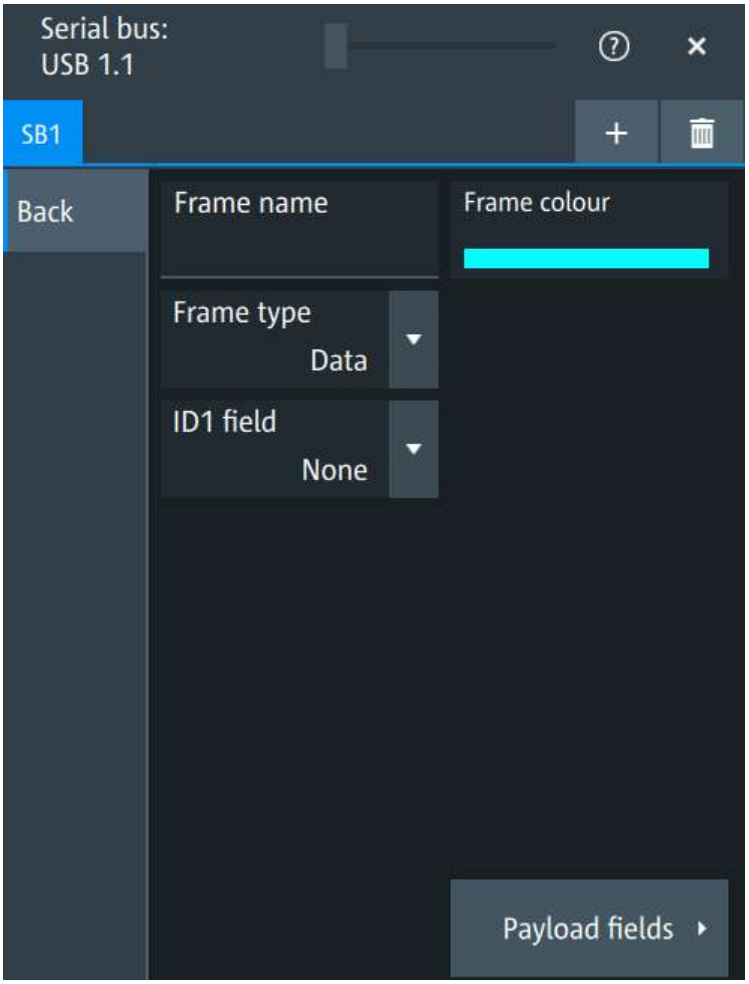

Remote command:
SBUS<sb>:USBone:FORMat:ADDFrame on page 2212

Edit list
Enables editing the frame list. If enabled, you can delete a frame format by clicking its "Delete" icon. In a list with several entries, you can move frame formats up or down by clicking the arrow buttons. To exit the editing mode, click "Edit list" again.

Remote command:
SBUS<sb>:USBone:FORMat:CLR on page 2212
SBUS<sb>:USBone:FORMat:FCOunt? on page 2213

Open
Opens a dialog for loading an existing list of frame formats in XML file format.

Remote command:
SBUS<sb>:USBone:FORMat:LOAD on page 2212

Save as
Opens a dialog for saving your current list of frame formats to an XML file. Saved frame formats can support efficient and convenient working.

Remote command:
SBUS<sb>:USBone:FORMat:SAVE on page 2212

Frame name
Specifies an arbitrary name to label the currently selected frame format. Ideally, use speaking names according to the specifications of the applicable protocol standard. Frame names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:USBone:FORMat:FRAMe<fr>:NAME on page 2213

Frame color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:USBone:FORMat:FRAMe<fr>:COLor on page 2214

Frame type
Select an original frame type.

Remote command:
SBUS<sb>:USBone:FORMat:FRAMe<fr>:TYPE on page 2214

ID<n> field
Select the first to third identifying field types.

Remote command:
SBUS<sb>:USBone:FORMat:FRAMe<fr>:ID1Field on page 2214
SBUS<sb>:USBone:FORMat:FRAMe<fr>:ID2Field on page 2214
SBUS<sb>:USBone:FORMat:FRAMe<fr>:ID3Field on page 2214

ID<n> value
Select the value of the corresponding field type.

Remote command:
SBUS<sb>:USBone:FORMat:FRAMe<fr>:ID1Value on page 2215
SBUS<sb>:USBone:FORMat:FRAMe<fr>:ID2Value on page 2215
SBUS<sb>:USBone:FORMat:FRAMe<fr>:ID3Value on page 2215

Payload fields
Opens the payload field configuration dialog. The format configuration of payload fields is optional and replaces the payload data of the identified frame.

Add field
Creates a new field description for the currently selected frame format and adds it to the end of the field list with color, bit position (order of transmission) and name. Brackets indicate how often bits will be repeated, [] indicates that this is an open array.

A dialog opens to specify the field details. The number of field descriptions is limited to 100.

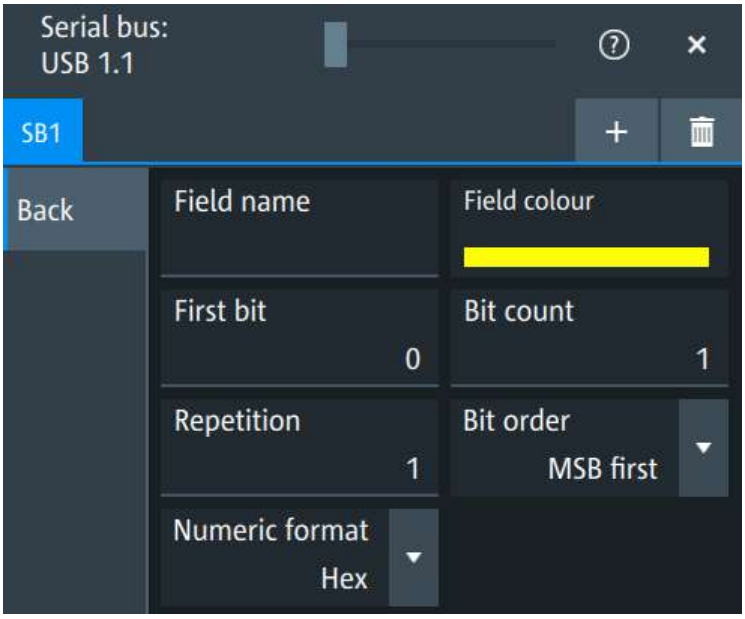

Remote command:
SBUS<sb>:USBone:FORMat:FRAMe<fr>:ADDField on page 2213

Field name
Specifies an arbitrary name for the currently selected field description. Ideally, use speaking names.

Field names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:NAME on page 2215

Field color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:COLor on page 2215

First bit
In order of transmission, sets the first bit of this field in the payload.

Remote command:
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:FSTBit on page 2216

Bit count
Sets the number of bits in the selected field, i.e., the field's length. Selecting the value opens a keypad showing allowed minimum and maximum values. You can set "Min", "Max", "Reset" or adjust with the "Inc" or "Dec" buttons by 1 or 10 (step size dependent). Use "CE" to restore the value used before the keypad opened.

If the "Condition" pattern length does not match the "Bit count":
- Too long, it is truncated.

- Too short, it is left-padded with 0.

Both truncation and padding happen on the left side of the condition and follow the configured "Bit order".

Examples for "Condition" "=100"):
- "Bit order" is "MSB":
  – Bit count = 2: truncated. Result: =00
  – Bit count = 4: padded. Result: =0100
- "Bit order" is LSB first (equivalent MSB-first representation is =001):
  – Bit count = 2: truncated. Result: =00 (LSB first), =00 (MSB first)
  – Bit count = 4: padded. Result: =0100 (LSB first), =0010 (MSB first)

Remote command:
`SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:BITCount` on page 2216

Repetition
Defines the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Remote command:
`SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:REPetition` on page 2216

Bit order
Selects, in which order the bits of a field's "Condition" value are evaluated:

- "LSB first": little endian, least significant bit first
- "MSB first": big endian, most significant bit first

Remote command:
`SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:BITorder` on page 2217

Numeric format
Selects how the "Condition" value is interpreted:

- Symbolic: Assigns a symbolic translation on the data fields. Only available for custom protocols.
- Value list: Assigns a custom name to each hexadecimal value; any value without an assigned value is shown as "Undefined".
- A*X+B: Assigns a linear function on the data fields.
- For details on the other numeric formats, see "Format-specific information" on page 532.

The following rules apply:
- If the condition contains at least one of "H", "h", "L", "l", "X", "x", and all other characters are only "1" and/or "0", the value is always treated as binary, regardless of the selected numeric format.
- "x" and "X" are wildcards and are supported only in binary format or when the string is auto-interpreted as binary per the rule above.
  Examples for format set to "HEX":
  – "=1HL111000": valid (read as binary)
  – "=0x10101": valid (read as binary; "x" acts as wildcard, not a hex prefix)
  – "=1010": valid (read as HEX, with a total of 16 bits)
  – "=0x5A": valid (read as HEX "5A", because "0x" is a valid hex prefix; entering 5A alone is recommended)

– "=5X12": invalid
– "=1H33": invalid

Remote command:
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:FORMat on page 2217

Add value
Creates a new hexagonal value for customization.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:ADDValue on page 2218

Value
Defines the hexagonal value to convert it into a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue on page 2218

Label
Defines the label to convert the corresponding hexagonal value to a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel on page 2219

Unit
Defines a unit for the linear function.

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:UNIT on page 2219

Parameter A,B
Defines the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:PARA on page 2219
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:PARB on page 2219

14.23.5 USB 1.1 trigger

14.23.5.1 Setup A trigger

Before setting up the software trigger for the protocols, a trigger A event needs to be set up.

14.23.5.2 Software trigger setup

Access: "Menu" > "Apps" > "Protocol" tab > "USB 1.1" > "Trigger" > "Setup Software Trigger" tab

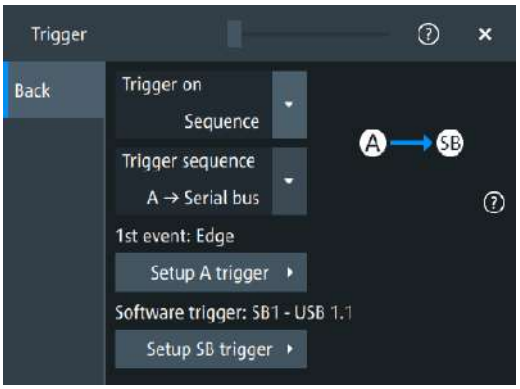

Figure 14-66: Serial bus Trigger setup dialog for USB 1.1

Make sure that:

- In the "Trigger" tab (Figure 14-63):
  - The correct protocol type and speed variant are selected.
  - The correct channels are assigned to the corresponding data source of the serial bus.
- In the "Trigger" tab (Figure 14-66):
  - The "Trigger on" = "Sequence"
  - The "Trigger sequence" = "A → Serial bus"
  - The 1st event is set according to your requirements.
- In the "Setup SB Trigger" tab (Figure 14-67):
  - The trigger "Source" is set to the correct serial bus, for example "Serial bus 1".

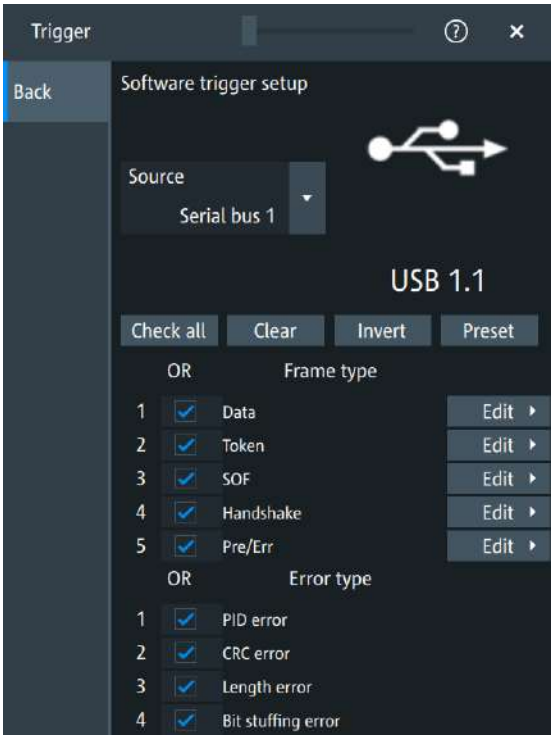

Figure 14-67: Serial bus Software trigger setup dialog for USB 1.1

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to trigger on.

"Check all" Enables the software trigger for all available frames and error types.

"Clear" Disables the software trigger for all available frames and error types.

"Invert" Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types for the software trigger.

Remote command:
`TRIGger:SBSW:USBone:CHKall` on page 2221
`TRIGger:SBSW:USBone:CLR` on page 2221
`TRIGger:SBSW:USBone:INVert` on page 2221
`TRIGger:SBSW:USBone:RST` on page 2221

Frame type
Selects the frame type that you want to trigger on. You can trigger on all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

The following frames are available: "Data", "Token", "SOF", "Handshake" and "Pre/Err".

Remote command:
TRIGger:SBSW:USBone:FRENable on page 2221
TRIGger:SBSW:USBone:FRAMe<fr>:ENABle on page 2221

Edit
Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

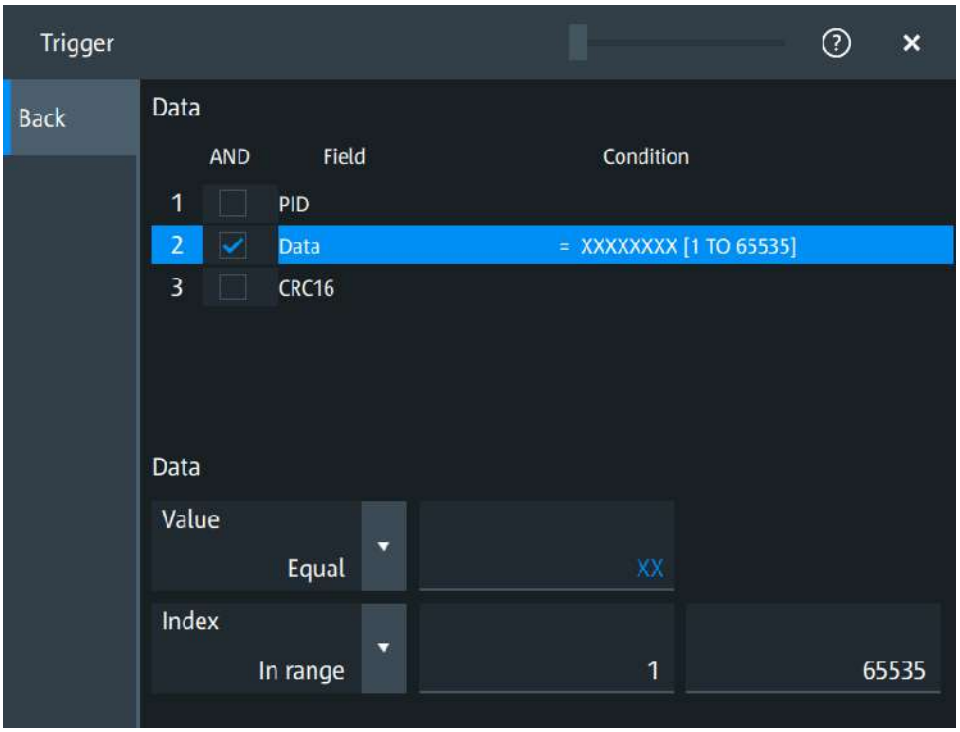

"Field" Enables the field type that you want to trigger on for the selected frame.
The available fields are "PID", "Data", "CRC5", "CRC16", "Addr", "Endp" and "Frame No.".

Remote command:
TRIGger:SBSW:USBone:FIENable on page 2223
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:ENABle on page 2223

"Condition" Displays the value condition for the selected field.

Remote command:
TRIGger:SBSW:USBone:BIT on page 2222
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:BIT on page 2222

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
TRIGger:SBSW:USBone:DMAX on page 2222
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:DMAX on page 2222
TRIGger:SBSW:USBone:DMIN on page 2222
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:DMIN on page 2222
TRIGger:SBSW:USBone:DOPerator on page 2223
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:DOPerator on page 2223

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
TRIGger:SBSW:USBone:IMAX on page 2224
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:IMAX on page 2224
TRIGger:SBSW:USBone:IMIN on page 2224
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:IMIN on page 2224
TRIGger:SBSW:USBone:IOPerator on page 2224
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:IOPerator on page 2224

Error type
Enables triggering on the selected error type.

The available error types are "PID error" (packet identifier), "CRC error" (cyclic redundancy check), "Length error" and "Bit stuffing error".

Remote command:
TRIGger:SBSW:USBone:ERENable on page 2225
TRIGger:SBSW:USBone:ERRor<m>:ENABle on page 2225

14.23.6 Measure

The "Setup Measurement" button opens the dialog for automatic measurements in the "Protocol" category for the selected serial bus.

See Section 10.2.8.2, "Settings for protocol measurements", on page 311.

14.23.7 USB 1.1 decode results

To enable the decoding, see Section 14.1.9.3, "Decoding protocol signals", on page 531.

Decode results table

The "Decode results" table contains information about all decoded frames.

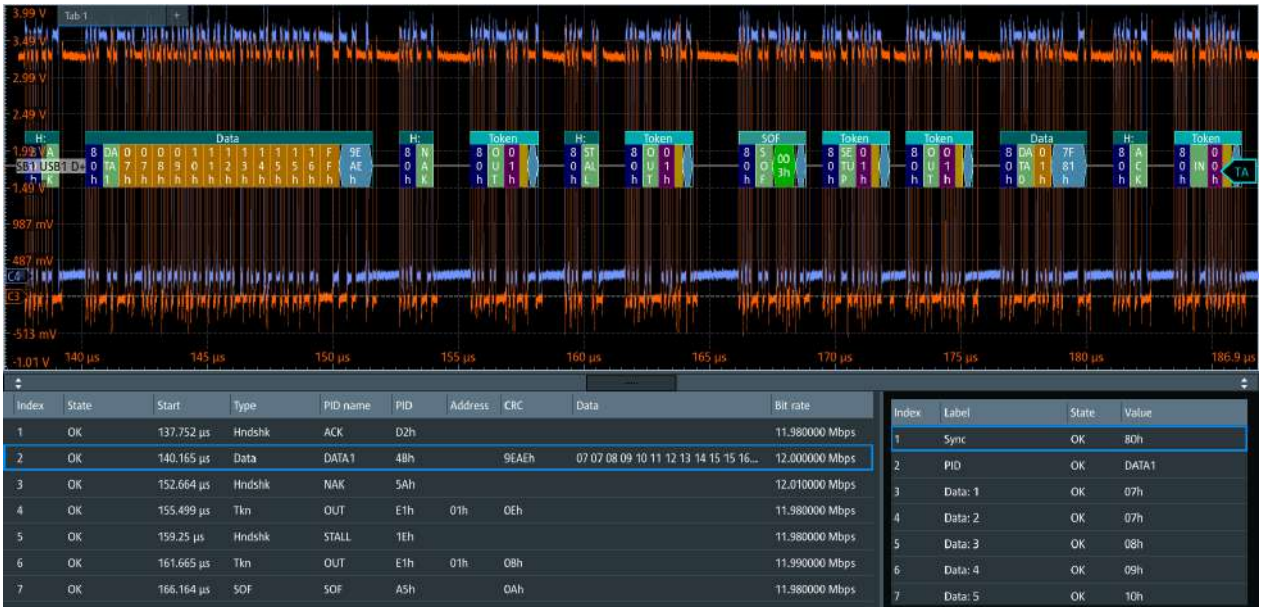

Figure 14-68: Example of a decoded USB 1.1 signal

The decode results table contains information about all decoded frames.

Table 14-44: Content of the decode results table

Column	Description
Index	Index of the decoded frame
State	Overall state of the frame
Start	Times of frame start
Type	Type of the frame
PID name	Name of the packet identifier
PID	Value of the packet identifier
Address	Address of the frame
CRC	CRC value (cyclic redundancy check)
Data	Payload data bytes
Bit rate	Value of the bit rate

When you select a frame in the decode results table, its field content is shown in the details table to the right.

Table 14-45: Content of the frame details table

Column	Description
Index	Number of the decoded field
Label	Name of the field

Column	Description
State	State of the field (OK / Not OK)
Value	Value of the field

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 1491

Remote commands

Remote commands to retrieve decode results are described in Section 18.18.24.5, "Decode results", on page 2226.

You can also export the decode results. For details see Section 14.1.9.4, "Exporting decode results", on page 531.

14.24 USB 2.0 (option R&S MXO5-K570)

R&S MXO5-K570 is a firmware option that enables the MXO 5 to analyze Universal Serial Bus (USB) protocols, by triggering and decoding them. The option is compatible with the standards USB 1.0, USB 1.1 and USB 2.0, but not with USB HSIC (High-Speed Inter-Chip, 480 Mbit/s). It supports the data rates "Low Speed" (1.5 Mbit/s) and "Full Speed" (12 Mbit/s), both in USB 1.0 and USB 1.1, and "High Speed" (480 Mbit/s in USB 2.0).

For USB 1.1, refer to Section 14.23, "USB 1.1 (option R&S MXO5-K570)", on page 945.

- About the USB protocol....968
- USB 2.0 configuration....969
- USB 2.0 filter....972
- USB 2.0 format configuration....975
- USB 2.0 trigger....980
- Measure....984
- USB 2.0 decode results....984

14.24.1 About the USB protocol

Refer to Section 14.23.1, "USB protocol basics", on page 945 in the USB 1.1 (option R&S MXO5-K570) section.

14.24.2 USB 2.0 configuration

If you need information on how to get started with configuring the USB 2.0 setup, see Section 14.24.2.2, "Configuring USB 2.0 signals", on page 970. Otherwise proceed with the configuration settings.

14.24.2.1 USB 2.0 configuration settings

Access: "Menu" > "Apps" > "Protocol" tab > "USB 2.0" > "Setup" tab

Make sure that the tab of the correct serial bus is selected.

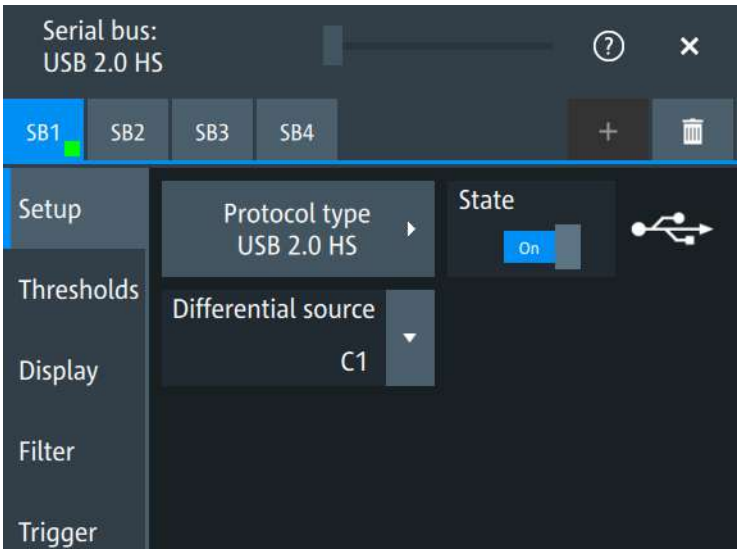

Figure 14-69: Serial bus protocol configuration dialog for USB 2.0 HS

See also: Section 14.1.1, "Setup - general settings", on page 508.

Protocol type
Selects the protocol type to be decoded.

Remote command:
`SBUS<sb>:TYPE` on page 1489

State
Enables the decoding of the selected bus. The signal icon of the bus appears on the signal bar.

Remote command:
`SBUS<sb>[:STATe]` on page 1489

Differential source
Selects the differential signal source of the data line for the USB 2.0 high speed (HS) protocol.

Usually, the source is one of the analog channels. Reference and math waveforms are available as sources if the trigger source is one of the analog channels but not the serial bus.

Remote command:
`SBUS<sb>:USBHspeed:SOURce` on page 2234

14.24.2.2 Configuring USB 2.0 signals

For configuration, assign the lines to the input channels and define the active states and the logical thresholds.

For details on configuration settings, see Section 14.24.2.1, "USB 2.0 configuration settings", on page 969.

Serial Bus Setup

1. Tap the "+ Bus" activator in the bottom right of the screen.
2. Select the tab of the bus that you want to set up, for example "SB1".
3. Tap the "Protocol type" button. Select the protocol: "USB 2.0 HS".
4. Select the waveform for the "Differential" source.
5. In the "Thresholds" tab, specify the upper and lower logical thresholds and the hysteresis.
6. In the "Display" tab, enable "Show decode table".

14.24.2.3 Threshold settings

Access: "Menu" > "Apps" > "Protocol" tab > "USB 2.0" > "Thresholds" tab

Figure 14-70: Serial bus threshold configuration dialog for USB 2.0

Upper threshold
Sets the upper threshold value for the digitization of the data line's differential signal.

For transformation of high or low levels into bus states, refer to Table 14-42. The bus states are transformed into bits according to the rules of non-return-to-zero inverted (NRZI) encoding.

For transformation of high or low levels into J or K states of the bus, refer to Table 14-42. The J and K states are transformed to bits according to the rules of non-return-to-zero inverted (NRZI) encoding.

Remote command:
`SBUS<sb>:USBHspeed:THReshold:UPPer` on page 2234

Lower threshold
Sets the lower threshold value for the digitization of the data line's differential signal.

See also "Upper threshold" on page 970.

Remote command:
`SBUS<sb>:USBHspeed:THReshold:LOWer` on page 2234

Hysteresis
Sets the hysteresis value for the data line's differential signal.

Remote command:
`SBUS<sb>:USBHspeed:THReshold:HYSTeresis` on page 2234

Show threshold lines
If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also Show threshold lines.

Remote command:
`SBUS<sb>:THReshold` on page 1492

14.24.2.4 Display settings

Access: "Menu" > "Apps" > "Protocol" tab > "USB 2.0" > "Display" tab

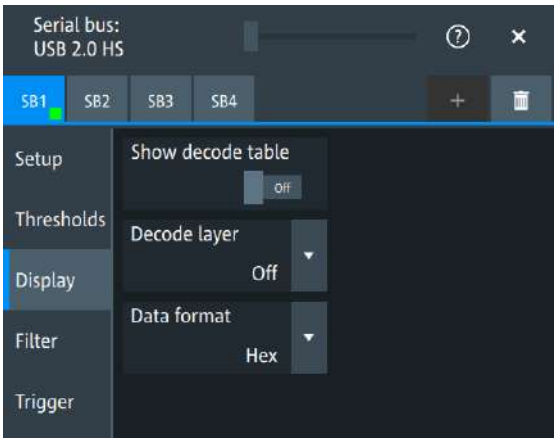

Figure 14-71: Serial bus display configuration dialog for USB 2.0

Decode layer
Selects the decode layer.

Decoding is performed in several steps, and the results are presented in the decode table. The decode layer selects an interim step for which the decoding result is shown in the honeycomb display.

"Off"	Disables the display of the decode layer.
"Edges"	Enables the display of all edges.
"States"	"Enables the display of J and K states according to Table 14-42 in Section 14.23.1, "USB protocol basics", on page 945.
"Bits"	Enables the display of the raw, binary encoded symbols, consisting of the states "0" and "1".
"Words"	Enables the display of words, which are the numerical values of the individual fields that compose each packet, like PID, ADDR, DATA or CRC.

14.24.3 USB 2.0 filter

Access: "Menu" > "Apps" > "Protocol" tab > "USB 2.0" > "Filter" tab

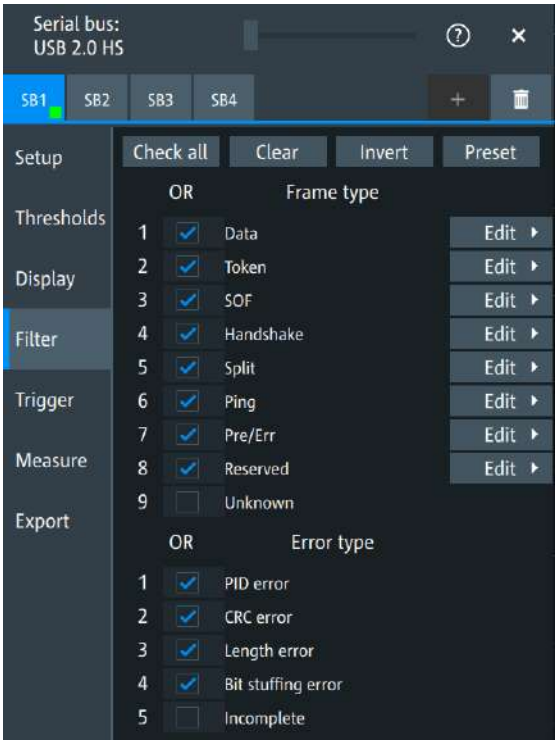

In the "Filter" tab, you can define the settings to display only the frames that match the selected filter conditions.

Check all, Clear, Invert, Preset
The following settings help you select the frames and errors you want to filter for. Only the frames and error types that match the selected filter conditions are displayed.

"Check all" Enables the filter for all available frames and error types.

"Clear" Disables the filter for all available frames and error types.

"Invert" Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types.

Remote command:
`SBUS<sb>:USBHspeed:FILTer:CHKall` on page 2236
`SBUS<sb>:USBHspeed:FILTer:CLR` on page 2236
`SBUS<sb>:USBHspeed:FILTer:INVert` on page 2236
`SBUS<sb>:USBHspeed:FILTer:RST` on page 2236

Frame type
Selects the frame type that you want to display. You can filter all enabled frame types simultaneously.

For selected frame types, you can also specify conditions for the value of the fields in the "Edit" dialog.

Available frames are "Data", "Token", "SOF", "Handshake", "Split", "Ping", "Pre/Err", "Reserved" and "Unknown".

Remote command:
`SBUS<sb>:USBHspeed:FILTer:FRENable` on page 2237
`SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:ENABle` on page 2237

Edit
Opens a dialog to define the details of the selected frame.

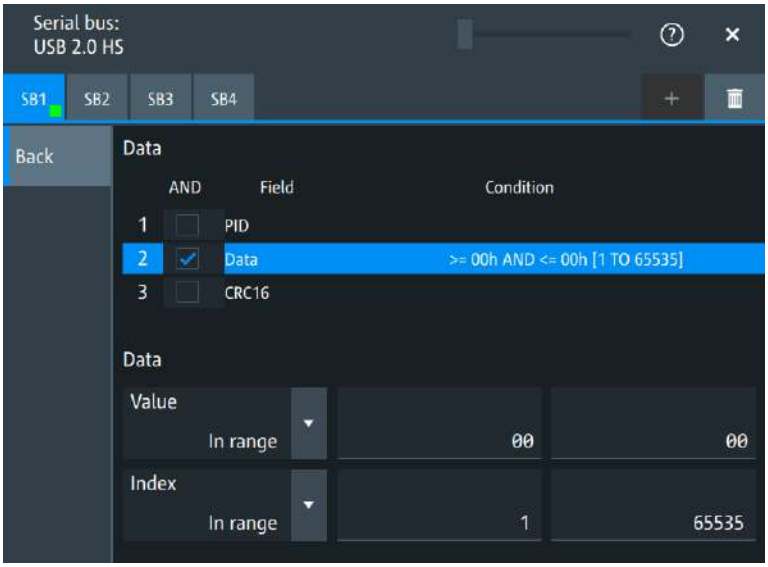

"Field" Enables the field type that you want to filter on for the selected frame. The available fields are "PID", "Data", "CRC5", "CRC16", "Addr", "Endp", "SC", "Port", "S", "E/U", "ET" and "Frame No.".

Remote command:
SBUS<sb>:USBHspeed:FILTer:FIENable on page 2240
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:ENABle on page 2240

"Condition" Displays the value condition for the selected field.

Remote command:
SBUS<sb>:USBHspeed:FILTer:BIT on page 2240
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:BIT on page 2240

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
SBUS<sb>:USBHspeed:FILTer:DMAX on page 2237
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:DMAX on page 2237
SBUS<sb>:USBHspeed:FILTer:DMIN on page 2237
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:DMIN on page 2237
SBUS<sb>:USBHspeed:FILTer:DOPerator on page 2238
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:DOPerator on page 2238

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
SBUS<sb>:USBHspeed:FILTer:IMAX on page 2239
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:IMAX on page 2239
SBUS<sb>:USBHspeed:FILTer:IMIN on page 2239
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:IMIN on page 2239
SBUS<sb>:USBHspeed:FILTer:IOPerator on page 2239
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:IOPerator on page 2239

Error type
Enables filtering on the selected error type.

The available error types are "PID error" (packet identifier), "CRC error" (cyclic redundancy check), "Length error", "Bit stuffing error" and "Incomplete".

Remote command:
SBUS<sb>:USBHspeed:FILTer:ERENable on page 2238
SBUS<sb>:USBHspeed:FILTer:ERRor<n>:ENABle on page 2238

14.24.4 USB 2.0 format configuration

Access: "Menu" > "Apps" > "Protocol" tab > "USB 2.0" > "Format".

See Section 14.1.5, "Format", on page 516.

Show format
Enables the format configuration and displays the frame formats in the honey-comb view and results. If enabled, the frame formats are also selectable for triggering and filtering.

Remote command:
`SBUS<sb>:USBHspeed:FORMat:SELect` on page 2241

Add frame
Creates a frame format and adds it to the end of the frame list. A dialog opens to specify the frame details. The number of frame formats is limited to 100.

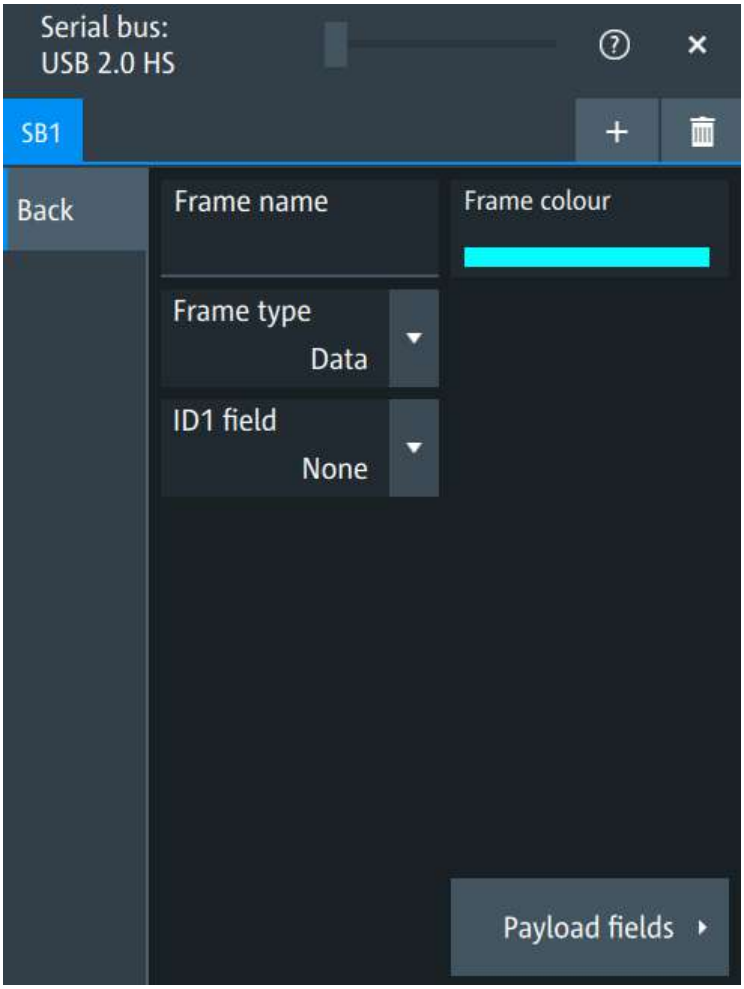

Remote command:
`SBUS<sb>:USBHspeed:FORMat:ADDFrame` on page 2242

Edit list
Enables editing the frame list. If enabled, you can delete a frame format by clicking its "Delete" icon. In a list with several entries, you can move frame formats up or down by clicking the arrow buttons. To exit the editing mode, click "Edit list" again.

Remote command:
SBUS<sb>:USBHspeed:FORMat:CLR on page 2242
SBUS<sb>:USBHspeed:FORMat:FCOunt? on page 2243

Open
Opens a dialog for loading an existing list of frame formats in XML file format.

Remote command:
SBUS<sb>:USBHspeed:FORMat:LOAD on page 2242

Save as
Opens a dialog for saving your current list of frame formats to an XML file. Saved frame formats can support efficient and convenient working.

Remote command:
SBUS<sb>:USBHspeed:FORMat:SAVE on page 2242

Frame name
Specifies an arbitrary name to label the currently selected frame format. Ideally, use speaking names according to the specifications of the applicable protocol standard. Frame names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:NAME on page 2243

Frame color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:COLor on page 2244

Frame type
Select an original frame type.

Remote command:
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:TYPE on page 2244

ID<n> field
Select the first to third identifying field types.

Remote command:
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ID1Field on page 2244
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ID2Field on page 2244
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ID3Field on page 2244

ID<n> value
Select the value of the corresponding field type.

Remote command:
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ID1Value on page 2245
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ID2Value on page 2245
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ID3Value on page 2245

Payload fields
Opens the payload field configuration dialog. The format configuration of payload fields is optional and replaces the payload data of the identified frame.

Add field
Creates a new field description for the currently selected frame format and adds it to the end of the field list with color, bit position (order of transmission) and name. Brackets indicate how often bits will be repeated, [] indicates that this is an open array.

A dialog opens to specify the field details. The number of field descriptions is limited to 100.

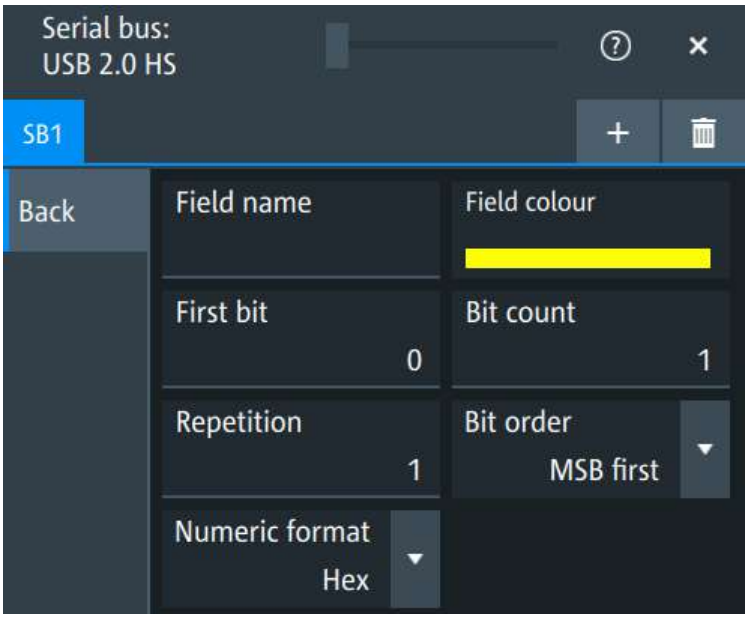

Remote command:
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ADDField on page 2243

Field name
Specifies an arbitrary name for the currently selected field description. Ideally, use speaking names.

Field names do not have to be unique and are only intended to support you.

Remote command:
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:NAME on page 2245

Field color
Opens a dialog to select the color representation of different frames or fields in the honeycomb display. Assigning specific colors can help you to interpret the decode results more easily. You can select a predefined color or specify a "User-defined color".

Remote command:
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:COLor on page 2245

First bit
In order of transmission, sets the first bit of this field in the payload.

Remote command:
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:FSTBit on page 2246

Bit count
Sets the number of bits in the selected field, i.e., the field's length. Selecting the value opens a keypad showing allowed minimum and maximum values. You can set "Min", "Max", "Reset" or adjust with the "Inc" or "Dec" buttons by 1 or 10 (step size dependent). Use "CE" to restore the value used before the keypad opened.

If the "Condition" pattern length does not match the "Bit count":
- Too long, it is truncated.
- Too short, it is left-padded with 0.

Both truncation and padding happen on the left side of the condition and follow the configured "Bit order".

Examples for "Condition" "=100"):
- "Bit order" is "MSB":
  - Bit count = 2: truncated. Result: =00
  - Bit count = 4: padded. Result: =0100
- "Bit order" is LSB first (equivalent MSB-first representation is =001):
  - Bit count = 2: truncated. Result: =00 (LSB first), =00 (MSB first)
  - Bit count = 4: padded. Result: =0100 (LSB first), =0010 (MSB first)

Remote command:
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:BITCount on page 2246

Repetition
Defines the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Remote command:
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:REPetition
on page 2246

Bit order
Selects, in which order the bits of a field's "Condition" value are evaluated:

- "LSB first": little endian, least significant bit first
- "MSB first": big endian, most significant bit first

Remote command:
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:BITorder on page 2247

Numeric format
Selects how the "Condition" value is interpreted:

- Symbolic: Assigns a symbolic translation on the data fields. Only available for custom protocols.

- Value list: Assigns a custom name to each hexadecimal value; any value without an assigned value is shown as "Undefined".
- A*X+B: Assigns a linear function on the data fields.
- For details on the other numeric formats, see "Format-specific information" on page 532.

The following rules apply:

- If the condition contains at least one of "H", "h", "L", "l", "X", "x", and all other characters are only "1" and/or "0", the value is always treated as binary, regardless of the selected numeric format.
- "x" and "X" are wildcards and are supported only in binary format or when the string is auto-interpreted as binary per the rule above.
  Examples for format set to "HEX":
  – "=1HL111000": valid (read as binary)
  – "=0x10101": valid (read as binary; "x" acts as wildcard, not a hex prefix)
  – "=1010": valid (read as HEX, with a total of 16 bits)
  – "=0x5A": valid (read as HEX "5A", because "0x" is a valid hex prefix; entering 5A alone is recommended)
  – "=5X12": invalid
  – "=1H33": invalid

Remote command:
`SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:FORMat` on page 2247

Add value
Creates a new hexagonal value for customization.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:ADDValue` on page 2248

Value
Defines the hexagonal value to convert it into a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue` on page 2248

Label
Defines the label to convert the corresponding hexagonal value to a labeled state.

This setting is only available, for "Numeric format" = "Value list".

Remote command:
`SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel` on page 2249

Unit
Defines a unit for the linear function.

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
`SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:UNIT` on page 2249

Parameter A,B
Defines the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

This setting is only available, for "Numeric format" = "A*X+B".

Remote command:
`SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:PARA` on page 2249
`SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:PARB` on page 2249

14.24.5 USB 2.0 trigger

14.24.5.1 Setup A trigger

Before setting up the software trigger for the protocols, a trigger A event needs to be set up.

14.24.5.2 Software trigger setup

Access: "Menu" > "Apps" > "Protocol" tab > "USB 2.0" > "Trigger" > "Setup Software Trigger" tab

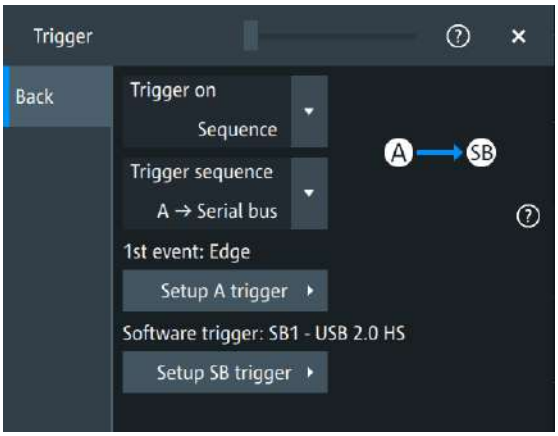

Figure 14-72: Serial bus Trigger setup dialog for USB 2.0

Make sure that:

- In the "Trigger" tab (Figure 14-69):
  - The correct protocol type is selected.
  - The correct channels are assigned to the corresponding data source of the serial bus.
- In the "Trigger" tab (Figure 14-72):
  - The "Trigger on" = "Sequence"
  - The "Trigger sequence" = "A → Serial bus"
  - The 1st event is set according to your requirements.
- In the "Setup SB Trigger" tab (Figure 14-73):
  - The trigger "Source" is set to the correct serial bus, for example "Serial bus 1".

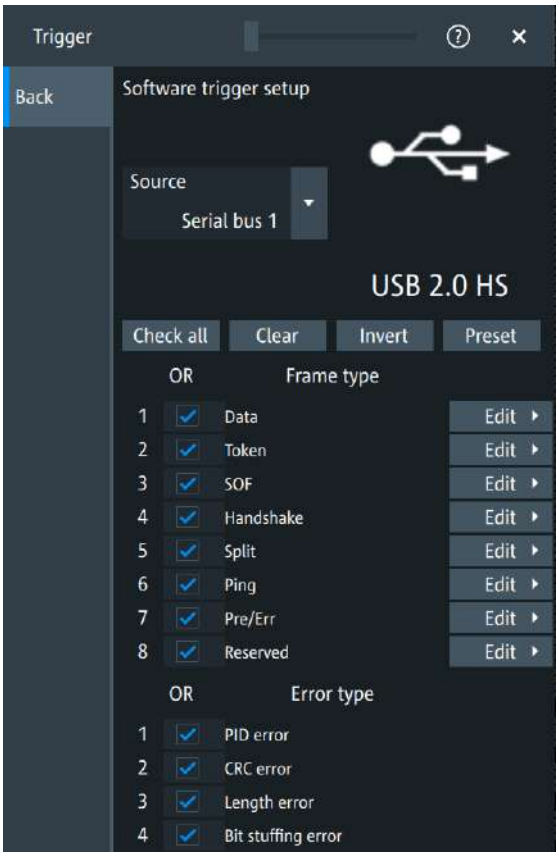

Figure 14-73: Serial bus Software trigger setup dialog for USB 2.0

Check all, Clear, Invert, Preset

The following settings help you select the frames and errors you want to trigger on.

"Check all" Enables the software trigger for all available frames and error types.

"Clear" Disables the software trigger for all available frames and error types.

"Invert" Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

"Preset" Presets the state of the selected frames and error types for the software trigger.

Remote command:
`TRIGger:SBSW:USBHspeed:CHKall` on page 2251
`TRIGger:SBSW:USBHspeed:CLR` on page 2251
`TRIGger:SBSW:USBHspeed:INVert` on page 2251
`TRIGger:SBSW:USBHspeed:RST` on page 2251

Frame type
Selects the frame type that you want to trigger on. You can trigger on all enabled frame types simultaneously.

For each frame type, you can also specify conditions for the value of the fields in the "Edit" dialog.

The following frames are available: "Data", "Token", "SOF", "Handshake", "Split", "Ping", "Pre/Err" and "Reserved".

Remote command:
`TRIGger:SBSW:USBHspeed:FRENable` on page 2251
`TRIGger:SBSW:USBHspeed:FRAMe<fr>:ENABle` on page 2251

Edit
Some trigger types have additional settings that can be defined. In this case, the "Set details" button appears next to "Type" the function. Open it for a detailed definition of the trigger conditions.

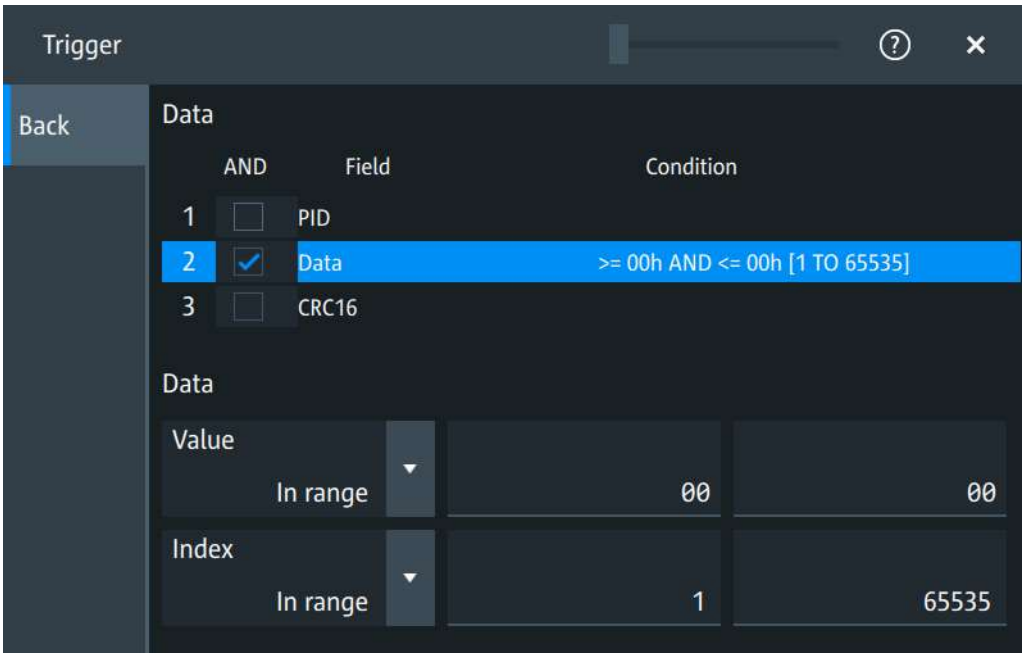

"Field" Enables the field type that you want to trigger on for the selected frame.
The available fields are "PID", "Data", "CRC5", "CRC16", "Addr", "Endp", "SC", "Port", "S", "E/U", "ET" and "Frame No.".

Remote command:
`TRIGger:SBSW:USBHspeed:FIENable` on page 2253
`TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:ENABle` on page 2253

"Condition" Displays the value condition for the selected field.

Remote command:
`TRIGger:SBSW:USBHspeed:BIT` on page 2252
`TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:BIT` on page 2252

"Value" The data setup consists of a comparison condition and one or two data patterns.

Remote command:
`TRIGger:SBSW:USBHspeed:DMAX` on page 2252
`TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:DMAX` on page 2252
`TRIGger:SBSW:USBHspeed:DMIN` on page 2253
`TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:DMIN` on page 2253
`TRIGger:SBSW:USBHspeed:DOPerator` on page 2253
`TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:DOPerator` on page 2253

"Index" The index setup consists of a comparison condition and one or two index values.

Remote command:
`TRIGger:SBSW:USBHspeed:IMAX` on page 2254
`TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:IMAX` on page 2254
`TRIGger:SBSW:USBHspeed:IMIN` on page 2254
`TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:IMIN` on page 2254
`TRIGger:SBSW:USBHspeed:IOPerator` on page 2254
`TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:IOPerator` on page 2254

Error type
Enables triggering on the selected error type.

The available error types are "PID error" (packet identifier), "CRC error" (cyclic redundancy check), "Length error" and "Bit stuffing error".

Remote command:
`TRIGger:SBSW:USBHspeed:ERENable` on page 2255
`TRIGger:SBSW:USBHspeed:ERRor<m>:ENABle` on page 2255

14.24.6 Measure

The "Setup Measurement" button opens the dialog for automatic measurements in the "Protocol" category for the selected serial bus.

See Section 10.2.8.2, "Settings for protocol measurements", on page 311.

14.24.7 USB 2.0 decode results

To enable the decoding, see Section 14.1.9.3, "Decoding protocol signals", on page 531.

Decode results table

The "Decode results" table contains information about all decoded frames.

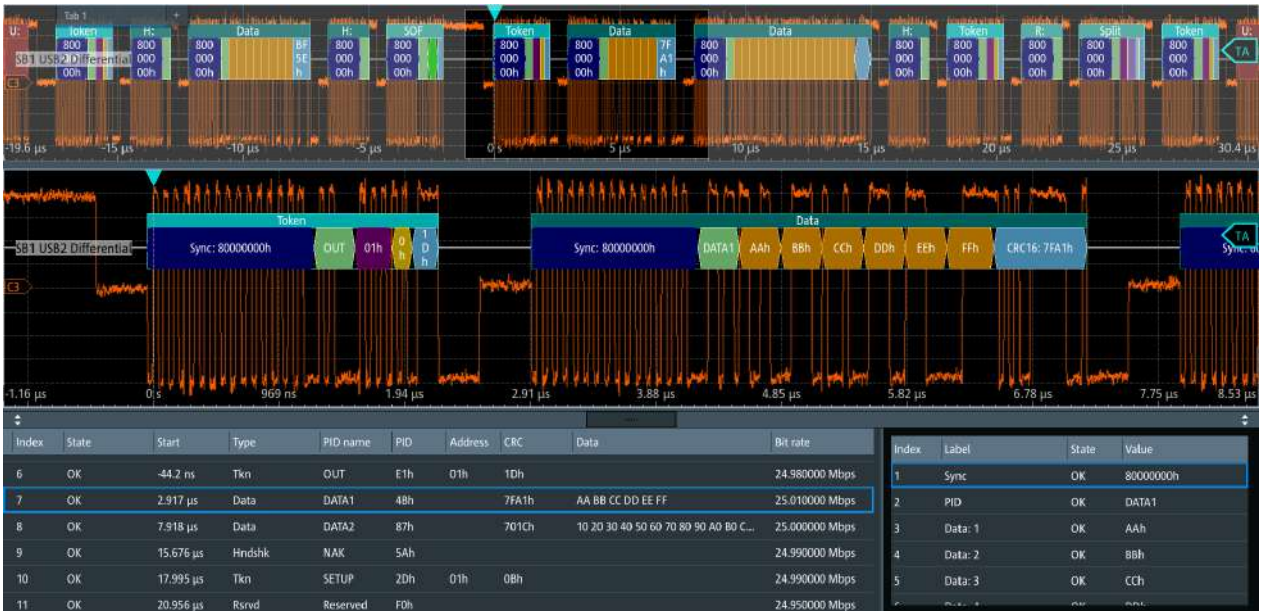

Figure 14-74: Example of a decoded USB 2.0 signal

The decode results table contains information about all decoded frames.

Table 14-46: Content of the decode results table

Column	Description
Index	Index of the decoded frame
State	Overall state of the frame
Start	Times of frame start
Type	Type of the frame
PID name	Name of the packet identifier
PID	Value of the packet identifier
Address	Address of the frame

Column	Description
CRC	CRC value (cyclic redundancy check)
Data	Payload data bytes
Bit rate	Value of the bit rate

When you select a frame in the decode results table, its field content is shown in the details table to the right.

Table 14-47: Content of the frame details table

Column	Description
Index	Number of the decoded field
Label	Name of the field
State	State of the field (OK / Not OK)
Value	Value of the field

Data format

You can select various data formats for the values displayed in the decode table and in the combs of the decoded signal.

Remote command:

- `SBUS<sb>:FORMat` on page 1491

Remote commands

Remote commands to retrieve decode results are described in Section 18.18.25, "USB 2.0 (option R&S MXO5-K570)", on page 2233.

You can also export the decode results. For details see Section 14.1.9.4, "Exporting decode results", on page 531.

15 Logic analysis on digital channels

The Mixed Signal Option R&S MXO5-B1 adds logic analyzer functions to the classical oscilloscope functions. Using the MSO option, you can analyze and debug embedded systems with mixed-signal designs that use analog signals and correlated digital signals simultaneously.

The Mixed Signal Option provides 16 digital channels grouped in two logic probes (pods) with 8 channels each. The instrument ensures that analog and digital waveforms are time-aligned and synchronized so that critical timing interactions between analog and digital signals can be displayed and tested. The automatic alignment compensates the skew between the probe connectors of the analog channels and the probe boxes of the digital channels.

Trigger

You can trigger on digital channels. Digital channels are available as trigger source if you trigger on single events, but not in any trigger sequence. The level is the threshold of the digital signal, which is configured in "Logic" > "Setup". All other trigger settings are configured in the "Trigger" dialog.

The following trigger types are available for digital trigger sources:

- Edge
- Width
- Timeout
- State
- Pattern

Data export

You can export the data of digital channels to waveform files, and you can use remote commands to retrieve and transmit digital data for further analysis.

15.1 Logic configuration

Access: "Menu" > "Logic" > "Setup" tab

You can display digital channels individually, and you can group them and display as a logic group. 4 logic groups are available. Each digital channel can be assigned to one *active* logic only. Conflicting buses are disabled automatically.

For clocked buses, you can display the decoded data in a result box.

If you have configured several logic groups and you want to modify the settings, make sure that the tab of the correct logic is selected. Disable the logic before you change the settings.

15.1.1 Setup

Access: "Menu" > "Logic" > "Setup" tab

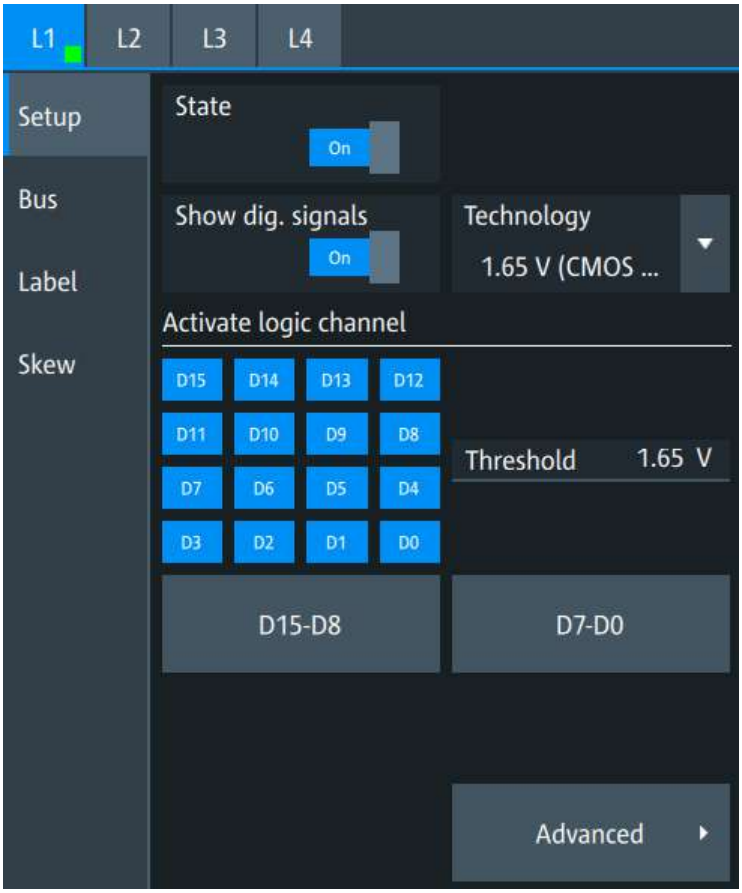

State
Enables the selected logic group. The corresponding signal icon appears on the signal bar.

If another active bus already uses the same digital channel, the instrument disables the other bus and shows a message.

Remote command:
`PBUS<pb>:STATe` on page 2275

Show dig. signals
If enabled, the selected digital channels are shown in the diagram. Each channel is displayed as a logic signal.

Remote command:
`PBUS<pb>:DISPlay:SHDI` on page 2274

Technology, Threshold
Sets the logical threshold. For each sample, the instrument compares the input voltage with the threshold value. If the input voltage is above the threshold, the signal state "1" is stored. Otherwise, the signal state "0" is stored if the input voltage is below the threshold.

To avoid the change of signal states due to noise, a hysteresis is considered.

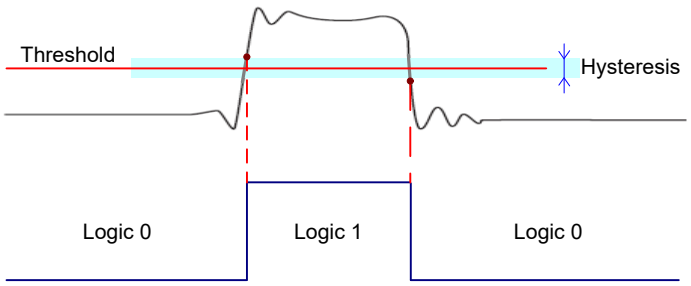

By default, the same threshold and hysteresis value are used for all digital channels and all logic buses: "Couple thresholds" is enabled.

You can also set different thresholds for the individual channel groups. As long as the buses are disabled, you can set different thresholds for each bus. Active buses use the same threshold and hysteresis values, the settings of the last activated bus take effect.

The range of threshold levels and the minimum voltage swing is given in the specifications document.

"Threshold" Enter the value directly in the field.

"Technology" Selects the threshold voltage for various types of integrated circuits from a list and applies it to all digital channels. The value is set to "Manual" if a user-defined threshold was entered directly.

Remote command:
`PBUS<pb>:TECHnology` on page 2276
`PBUS<pb>:THReshold<n>` on page 2277

Active logic channel
Set the state of the individual digital channels.

Remote command:
`PBUS<pb>:BIT<n>[:STATe]` on page 2270
`DIGital<m>:STATe` on page 2268

Enable/Disable D7-D0,D15-D8
The buttons select or deselect all digital channels of a pod at once.

Advanced
Opens a dialog for advanced threshold and hysteresis settings. You can define them in addition to the "Threshold" and "Technology".

Level coupling ← Advanced
Sets the threshold and the hysteresis for all digital channels and all buses to the same value.

If level coupling is off, you can set the thresholds individually for the channel groups D0 to D3, D4 to D7, D8 to D11 and D12 to D15 in the "Setup" tab. The hysteresis for each channel group is set in the "Advanced" dialog.

Remote command:
PBUS<pb>:THCoupling on page 2276

Hysteresis ← Advanced
Defines the size of the hysteresis for the respective channels.

"Small" The instrument sets a small value suitable for the signal and its settings. Use this setting for clean signals.

"Medium" The instrument sets the maximum value that is possible and useful for the signal and its settings. Use this setting for noisy signals.

"Large" Sets different hysteresis values for falling and rising edges to avoid an undefined state of the trigger system. Use this setting for very noisy signals.

Remote command:
PBUS<pb>:HYSTeresis<n> on page 2274

15.1.2 Bus

Access: "Menu" > "Logic" > "Bus" tab

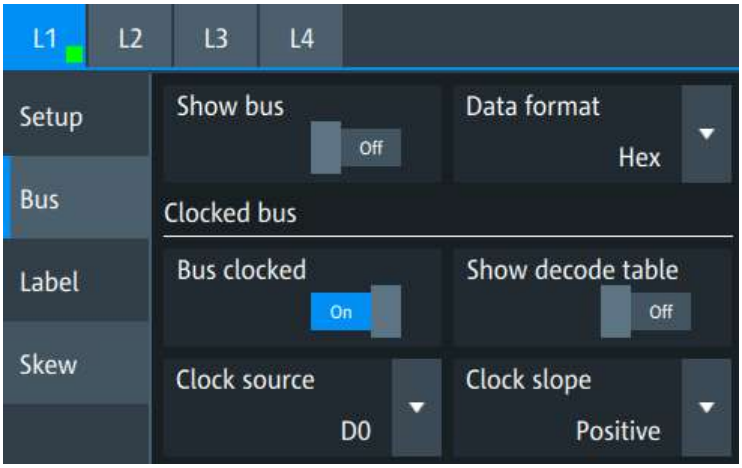

Show bus
If enabled, the resulting bus signal and bus values are displayed in the diagram.

Remote command:
PBUS<pb>:DISPlay:SHBU on page 2273

Data format
Sets the data format of bus values, which are displayed in the decode table and on the comb bus display.

Available formats are: Hex, octal, binary, ASCII, string, signed, unsigned, symbolic, and auto.

Signed and Unsigned are integer data types with a maximum 16-bit length. Unsigned is used for positive integers. Signed is used for positive and negative integers.

If the target file format is BIN, you can save only signed and unsigned binary data. The data format "Signed" writes signed data; all other formats are saved as unsigned binary data.

Remote command:
`PBUS<pb>:DATA:FORMat` on page 1261
`PBUS<pb>:DATA:HEADer?` on page 1261
`PBUS<pb>:DATA[:VALues]?` on page 1261

Clocked bus
If a bus is a clocked bus, one of the digital channels serves as the clock of the bus.

For an unclocked bus, the logical state of the bus is determined for each sample. For a clocked bus, the logical state is determined only at the specified clock edges.

Bus clocked ← Clocked bus
Enable this option for a clocked bus.

Remote command:
`PBUS<pb>:CLON` on page 2271

Show decode table ← Clocked bus
If enabled, a result table is shown with decoded values and corresponding points in time of the bus signal. Each clock edge corresponds to one row in the table.

The decode table is only available for clocked buses to check the data words.

Remote command:
`PBUS<pb>:DECTable:SHOW` on page 2272
`PBUS<pb>:DECTable:COUNt?` on page 2272
`PBUS<pb>:DECTable:DATA?` on page 2273

Clock source ← Clocked bus
Selects the digital channel used as clock.

Remote command:
`PBUS<pb>:CLOCk` on page 2271

Clock slope ← Clocked bus
Selects the slope of the clock signal at which all digital channels of the bus are analyzed.

Remote command:
`PBUS<pb>:CLSLope` on page 2272

15.1.3 Label settings

Access: "Menu" > "Logic" > "Label" tab

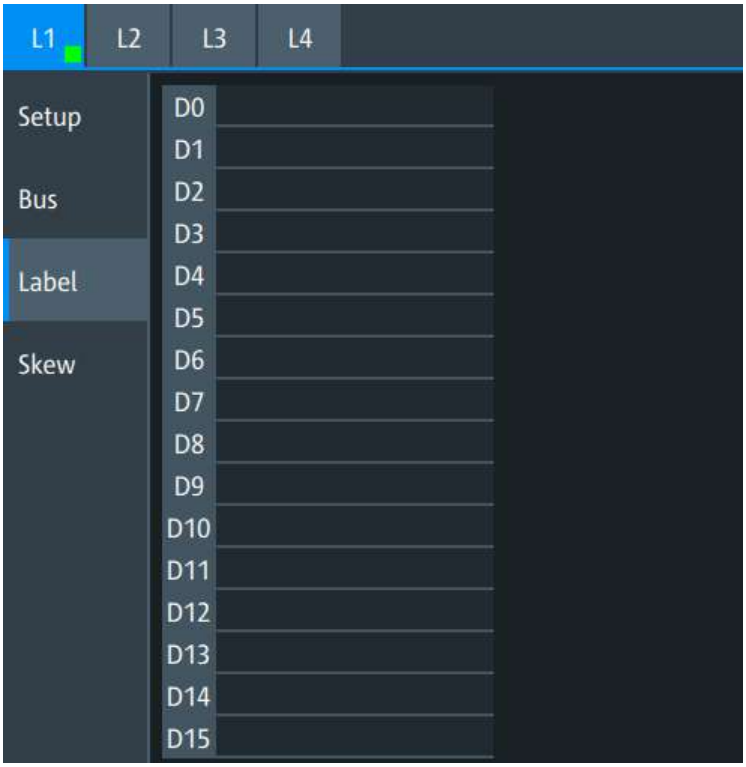

In this tab, you can enter a name for each digital channel. The name is displayed in the diagram.

PBUS<pb>:BIT<n>:LABel on page 2270

15.1.4 Skew settings

Access: "Menu" > "Logic" > "Skew" tab

D0-D15
Sets an individual delay for each digital channel to time-align it with other digital channels.

The skew value compensates delays that are known from the circuit specifics or caused by the different length of cables. The skew between the probe boxes of the digital channels and the probe connectors of the analog channels is automatically aligned by the instrument.

Remote command:
`PBUS<pb>:BIT<n>:SKEW` on page 2270

Skew
Sets a general delay for all digital channels.

Remote command:
`PBUS<pb>:SKEW` on page 2275

15.2 Display

Each logic group is shown in a separate diagram, and the diagrams can be minimized and arranged as usual.

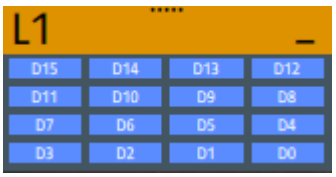

You can adjust the display of the logic bus signals and the individual digital channels to optimize the analysis of bus data:

- Select the digital channels to be displayed.
  Drag the logic signals and the digital channels to the optimal position.
- Adjust the size and position of the logic signal: Tap the Lx signal or its signal icon, and use the [Position] and [Scale] knobs.
- Adjust the size and position of active digital channels: Tap one of the Dx signals, and use the [Position] and [Scale] knobs.
- Show the result table of the decoded clocked bus signal.

Remote commands:

- `PBUS<pb>:DIGSignals:POSition` on page 2273
- `PBUS<pb>:DIGSignals:SCALe` on page 2273
- `PBUS<pb>:POSition` on page 2275
- `PBUS<pb>:SCALe` on page 2275

To access and analyze one or more specific acquisitions, you can use the "History" in the common way.

Furthermore, you can zoom in digital signals and bus signal in the same way as in analog waveforms.

15.2.1 Logic bus - decode table

Decoding is available for clocked buses.

The decode table shows the decoded data words of the bus signal and the corresponding time. Each clock edge corresponds to one row in the table. Beside the table, you can select the data format of the bus values.

The results can be saved to a `.csv` or `.html` file.

16 Waveform generator (option R&S MXO5-B6)

The MXO 5 includes a two-channel 100 MHz waveform generator. Each waveform generator can output simple functions, modulated sine waveform, arbitrary waveforms and sweep waveforms. It is possible to couple and synchronize the settings of the waveform generators.

The instrument preset does not affect the generator settings. Each generator has its own preset ("Default setup"). When the instrument is shut down, the waveform generator settings are stored. At the instrument start, these settings are restored but the generators are switched off. When a saveset of instrument settings is recalled, generators are also switched off but the generator settings remain unchanged.

If you often switch on and off a generator, add a generator icon to the toolbar ("Gen1", "Gen2"). Tap the icon to switch on or off the generator.

16.1 Setup of the waveform generator

Access: "Gen" signal activator > "Gen"1 or "Gen"2 > "Setup" tab.

16.1.1 General settings

The "Setup" tab provides general settings like enabling the waveform generator, and setting that depend on the selected function type.

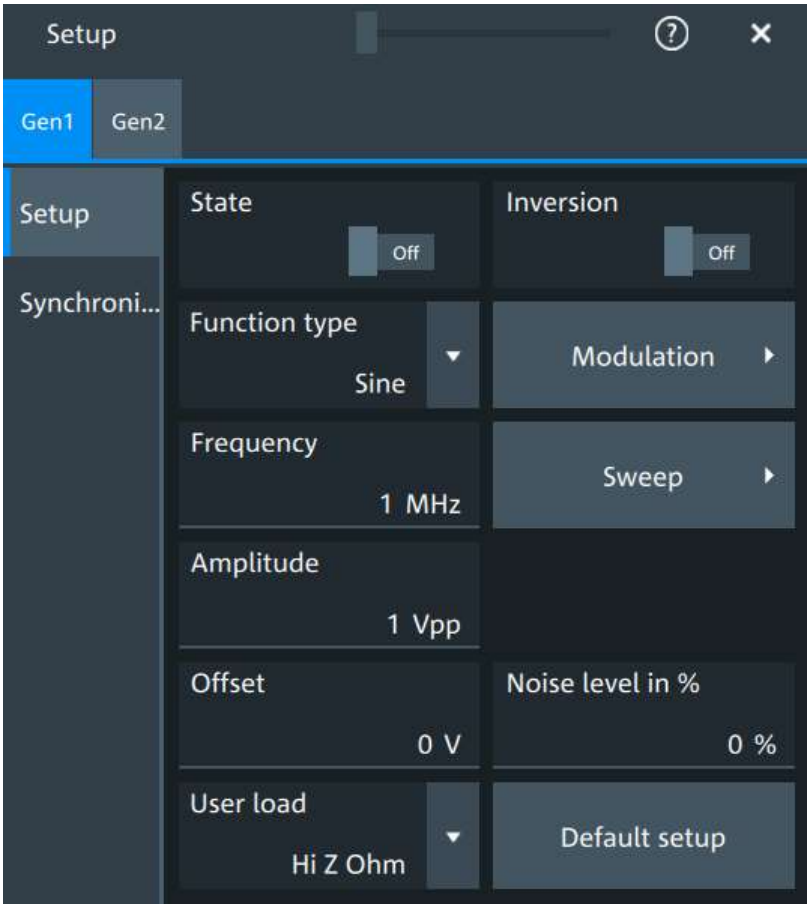

State
Enables the function generator.

If you often switch on and off a generator, use the generator icon on the toolbar ("Gen1", "Gen2").

Remote command:
`WGENerator<wg>[:ENABle]` on page 2284

Inversion
Inverts the waveform at the offset level.

Remote command:
`WGENerator<wg>:VOLTage:INVersion` on page 2283

Function type
Selects the type of waveform to be generated.

For all waveforms, you can set:

- Frequency
- Amplitude, Peak amplitude
- Offset
- Noise level in % or DC level
- User load

"Sine"	Generates a sine wave. Modulation settings and Sweep settings are available.
"Square"	Generates a square wave. You can set the Duty cycle. Modulation settings is available.
"Ramp"	Generates a ramp signal. You can set the Symmetry.
"DC"	Generates a direct current (DC) signal. You can set the DC level.
"Pulse"	Generates a pulse signal. Additional settings are the Period and the Pulse width. Modulation settings is available.
"Cardinal sine"	Generates a cardinal sine wave. No additional settings are needed.
"Cardiac"	Generates a cardiac signal. No additional settings are needed.
"Gauss"	Generates a Gaussian signal. No additional settings are needed.
"Lorentz"	Generates a Lorentz signal. No additional settings are needed.
"Haversine"	Generates a haversine function signal (great-circle distance between two points on a sphere). No additional settings are needed.
"Exp. rise"	Generates an exponential rise signal. No additional settings are needed.
"Exp. fall"	Generates an exponential fall signal. No additional settings are needed.
"Arbitrary"	Generates an arbitrary waveform, which is copied from an existing waveform, or loaded from a file. See Section 16.1.4, "Arbitrary waveforms", on page 1002.

Remote command:
`WGENerator<wg>:FUNCtion[:SELect]` on page 2280

Frequency
Sets the frequency of the waveform.

The available frequency range depends on the selected "Function type", see Frequency range of the function generator waveforms.

Table 16-1: Frequency range of the function generator waveforms

"Function type"	Min frequency	Max frequency
"Sine"	0.001 Hz	100 MHz
"Square"	0.001 Hz	30 MHz
"Ramp"	0.001 Hz	1 MHz
"DC"	-	-
"Pulse"	0.001 Hz	30 MHz
"Cardinal sine"	0.001 Hz	5 MHz
"Cardiac"	0.001 Hz	1 MHz
"Gauss"	0.001 Hz	25 MHz
"Lorentz"	0.001 Hz	10 MHz

"Function type"	Min frequency	Max frequency
"Haversine"	0.001 Hz	100 MHz
"Exp.rise"	0.001 Hz	10 MHz
"Ep. fall"	0.001 Hz	10 MHz

Remote command:
`WGENerator<wg>:FREQuency` on page 2279

Amplitude, Peak amplitude
Sets the amplitude of the waveform. If AM modulation is active, this value defines the peak amplitude of the modulated signal.

Remote command:
`WGENerator<wg>:VOLTage[:VPP]` on page 2283

Carrier amplitude
Sets the mean peak-to-peak voltage of the modulated signal if AM modulation is active.

The setting is only available, if "Modulation" is on and set to "AM".

Remote command:
`WGENerator<wg>:MODulation:AM:CAMPlitude` on page 2282

Offset
Sets the vertical offset of the generated waveform.

Remote command:
`WGENerator<wg>:VOLTage:OFFSet` on page 2283

Arbitrary Setup
Opens a menu to configure the arbitrary waveform.

See Section 16.1.4, "Arbitrary waveforms", on page 1002.

Sweep
Opens a menu to configure the sweep.

See Section 16.1.3, "Sweep settings", on page 1001.

Modulation
Opens a menu to configure the modulation.

See Section 16.1.2, "Modulation settings", on page 999.

Noise level in %
Sets the level of the noise in percentage of the set "Amplitude" output of the signal.

Remote command:
`WGENerator<wg>:MODulation:NLPCent` on page 2290

User load
Select the user load, the load of the DUT at its connection.

You can select either a "50Ω" or a "High-Z" (high input impedance) load.

Remote command:
WGENerator<wg>:OUTPut[:LOAD] on page 2281

Symmetry
Sets the symmetry of a ramp waveform, the percentage of time the waveform is rising. By changing the symmetry of the ramp, you can create, for example, triangular waveforms.

50% defines symmetric triangles. Values <50% define triangles with a steeper rising edge leaned to the left. Values >50% define triangles with a steeper falling edge leaned to the right.

Remote command:
WGENerator<wg>:FUNCtion:RAMP[:SYMMetry] on page 2280

Duty cycle
Sets the duty cycle for the pulse function.

The duty cycle expresses for what percentage of the period, the signal state is high.

Remote command:
WGENerator<wg>:FUNCtion[:SQUare]:DCYCle on page 2280

Pulse width
Sets the pulse width, the pulse duration of the generated pulse waveform.

Remote command:
WGENerator<wg>:FUNCtion:PULSe[:WIDTh] on page 2279

Default setup
Presets the generator to a default setup. The default includes the following settings:

- "Function type" = "Sine"
- "Frequency" = "1 MHz"
- "Amplitude" = "1 Vpp"

Remote command:
WGENerator<wg>:PRESet on page 2281

DC level
Available for "Function type" = DC.

Sets the level for the DC signal.

Remote command:
WGENerator<wg>:VOLTage:DCLevel on page 2283

Noise level for DC
Available for "Function type" = "DC".

Sets the level of the noise for the DC signal.

Remote command:
WGENerator<wg>:MODulation:NDCLevel on page 2289

Period
Available for "Function type" = "Pulse".

Sets the period of the pulse waveform.

Remote command:
`WGENerator<wg>:PERiod` on page 2281

16.1.2 Modulation settings

Modulation is available only for sine and square waveforms.

Access: "Gen" signal activator > "Gen"1 or "Gen"2 > "Setup" tab > "Function type" = "Sine" or "Square" > "Modulation".

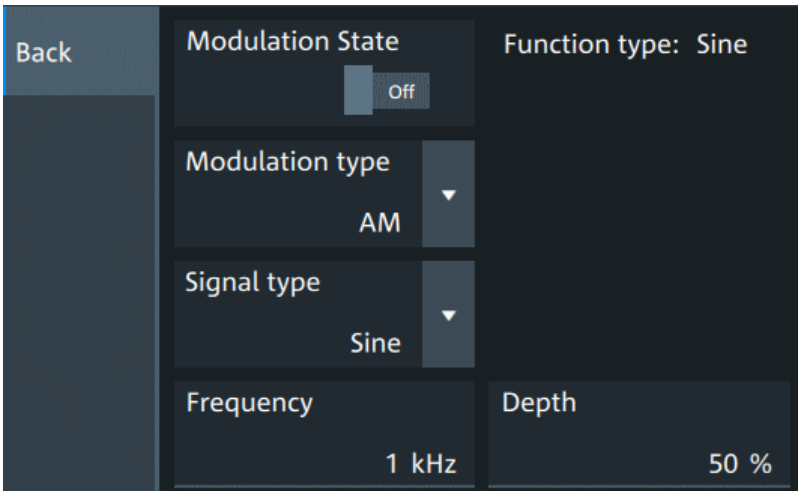

Figure 16-1: Modulation setup

Modulation state
Enables or disables modulation.

Modulation is available only for "Function type" = "Sine"/"Square".

Remote command:
`WGENerator<wg>:MODulation[:STATe]` on page 2285

Modulation type
Selects the modulation type, which defines how the carrier signal is modified.

"AM"	Amplitude modulation. The amplitude of the carrier signal is varied according to the modulation signal. Available for "Function type" = "Sine".
"FM"	Frequency modulation. The frequency of the carrier signal is varied according to the modulation signal. Available for "Function type" = "Sine".
"PWM"	Pulse width modulation. The time for which the signal is in a high state is varied according to the modulation signal. Available for "Function type" = "Square".

"FSK" Frequency shift keying (FSK) modulation. The signal frequency switches between "Frequency 1" and "Frequency 2" at a "FSK rate". Available for "Function type" = "Sine".

Remote command:
WGENerator<wg>:MODulation:TYPE on page 2292

Signal type
Selects the type of the modulating signal for AM, FM or PWM modulation.

Remote command:
WGENerator<wg>:MODulation:AM[:FUNCtion] on page 2286
WGENerator<wg>:MODulation:FM[:FUNCtion] on page 2288
WGENerator<wg>:MODulation:PWM[:FUNCtion] on page 2291

Frequency
Sets the frequency of the modulating waveform for AM/FM/PWM modulation.

Remote command:
WGENerator<wg>:MODulation:AM:FREQuency on page 2286
WGENerator<wg>:MODulation:FM:FREQuency on page 2288
WGENerator<wg>:MODulation:PWM:FREQuency on page 2291

Depth
Sets the modulation depth, the percentage of the amplitude range that is used for AM modulation.

Remote command:
WGENerator<wg>:MODulation:AM:DEPTh on page 2285

Duty cycle
Sets the duty cycle for a square waveform. The duty cycle expresses for what percentage fraction of the period, the waveform is active, i.e. the signal state is high.

Remote command:
WGENerator<wg>:MODulation:AM:DCYCle on page 2285
WGENerator<wg>:MODulation:FM:DCYCle on page 2287
WGENerator<wg>:MODulation:PWM:DCYCle on page 2290

Symmetry
Sets the symmetry for the ramp modulation waveform, the percentage of time that the waveform is rising.

Remote command:
WGENerator<wg>:MODulation:AM:SYMMetry on page 2286
WGENerator<wg>:MODulation:FM:SYMMetry on page 2288
WGENerator<wg>:MODulation:PWM:SYMMetry on page 2291

Deviation
Sets the frequency deviation, the maximum difference between the FM modulated signal and the carrier signal.

Remote command:
WGENerator<wg>:MODulation:FM:DEViation on page 2287

Modulation depth
Sets the modulation depth, the percentage of the amplitude range that is used for PWM modulation.

Remote command:
`WGENerator<wg>:MODulation:PWM:DEPTh` on page 2290

Frequency 1/Frequency 2
Sets the frequency of the first /second signal in FSK modulated signal.

Remote command:
`WGENerator<wg>:MODulation:FSK:FONE` on page 2289
`WGENerator<wg>:MODulation:FSK:FTWO` on page 2289

FSK rate
Sets the frequency at which signal switches between "Frequency 1" and "Frequency 2".

Remote command:
`WGENerator<wg>:MODulation:FSK[:RATE]` on page 2289

16.1.3 Sweep settings

Sweep is available only for sine waveforms.

Access: "Gen" signal activator > "Gen1" or "Gen2" > "Setup" tab > "Function type" = "Sine" > "Sweep".

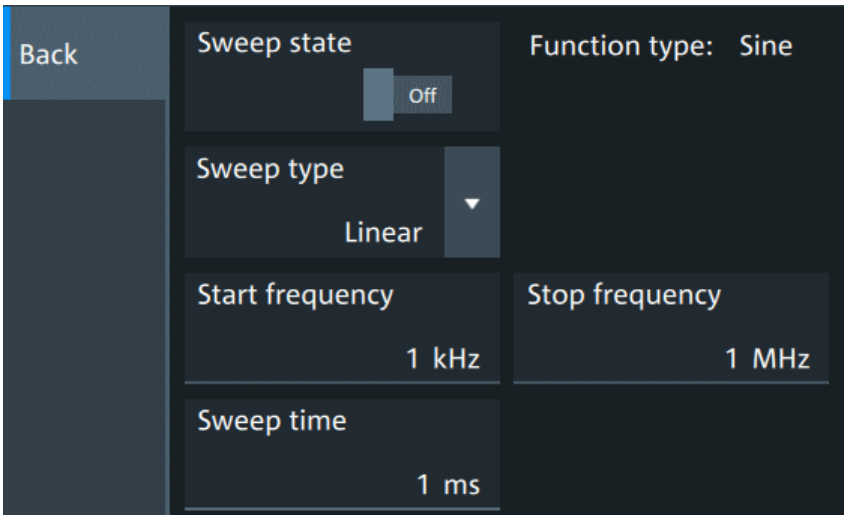

Figure 16-2: Sweep setup

In the sweep mode, the MXO 5 generates a signal whose frequency gradually changes from the "Start frequency" to the "Stop frequency" for a certain "Sweep time".

For a step-by-step description of the sweep setup, see Section 16.3.3, "Configuring a sine sweep waveform", on page 1009.

Sweep state
Enables or disables the sweeping.

Remote command:
WGENerator<wg>:SWEep[:STATe] on page 2294

Sweep type
Sets the type of the sweep, a linear or logarithmic change of the frequency.

Remote command:
WGENerator<wg>:SWEep:TYPE on page 2295

Start frequency
Sets the start frequency of the sweep signal.

Remote command:
WGENerator<wg>:SWEep:FSTart on page 2295

Stop frequency
Sets the stop frequency of the sweep signal.

Remote command:
WGENerator<wg>:SWEep:FEND on page 2295

Sweep time
Sets the duration of the sweep.

Remote command:
WGENerator<wg>:SWEep:TIME on page 2295

16.1.4 Arbitrary waveforms

The arbitrary waveform generator allows you to output a user-defined waveform for testing your devices. An arbitrary waveform is loaded from a file. You can load CSV files that follow a defined structure, or saved reference waveforms.

See also: Section 16.3.4, "Configuring an arbitrary waveform", on page 1009.

16.1.4.1 Arbitrary waveform files

You can load CSV files that have a Rohde & Schwarz WaveGen format.

Content and format of the Rohde & Schwarz arbitrary waveform CSV files

The waveform generator format can contain the following values:

- Rate
- Time value
- Voltage value

If all the values are defined, the file format is as follows:

```
Rate 5000000            //Sample rate of the arbitrary waveform.
0.000000E+000,-5.995    //Time value 1, Voltage value 1
1.237011E-005,-6.0      //Time value 2, Voltage value 2
.......
```

In this case, the rate is reflected in the "Sample Rate" field of the user interface. The total number of Time/Voltage values is reflected in the "Samples" of the user interface. Anything written after `//` is ignored as a comment.

You can define only some of the values. According to what you define, the file format looks different and is handled differently:

- With specified *Rate*:
  Time values are ignored. You can specify just rate and voltage values as below:

```
Rate 5000000               //Sample rate of the arbitrary waveform
-5.995                     //Voltage value 1
-6.0                       //Voltage value 2
.......
```

- Without specified *Rate* and without specified *Time* values:
  The last user-defined sample rate is used to calculate the waveform. You can change the "Sample rate" in the user interface. The voltage values are then played with this sample rate.

```
-5.995                //Voltage value 1
-6.0                   //Voltage value 2
.......
```

- Without specified *Rate* and with specified *Time*:
  The timing information of the first 2 time values is used to calculate the sample rate.

Example:

Consider the following file:

```
0.000000E+000,-5.995    //Time value 1, Voltage value 1
1.237011E-005,-6.0      //Time value 2, Voltage value 2
```

The sample rate is:

Sample rate = 1/ Time between first two samples =1 / 1.237011E-005 = 80.840KSampe/sec

16.1.4.2 Arbitrary settings

Access: "Gen" signal activator> "Gen1" or "Gen2" > "Setup" tab > "Function type" = "Arbitrary"

Access: "Gen" signal activator > "Gen"1 or "Gen"2 > "Setup" tab > "Function type" = "Arbitrary".

The following settings in the "Setup" tab and the "Arbitrary Setup" dialog are specific for generated arbitrary waveforms.

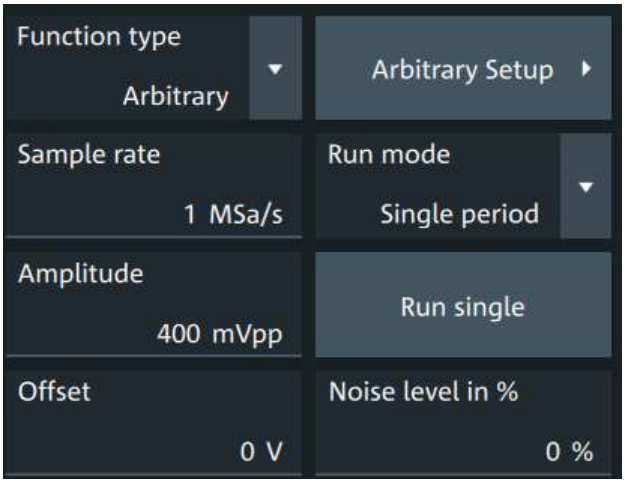

Run mode....1004
Run single....1004
Arbitrary Setup....1004
Arb wfm source....1005
Sample rate....1005
Number of samples....1005
Open....1005

Run mode
Selects the duration for which the signal of the arbitrary generator is output after the trigger event. You can choose between a "Continuous" and "Single period" duration.

Remote command:
`WGENerator<wg>:ARBGen:RUNMode` on page 2293

Run single
Generates a single period of the arbitrary waveform if "Run mode" is set to "Single period".

If you load the arbitrary waveform from a file, first load the file, and then connect the DUT. See also: "Open" on page 1005.

Remote command:
`WGENerator<wg>:ARBGen:RUNSingle` on page 2293

Arbitrary Setup
Opens a dialog to define the arbitrary waveform.

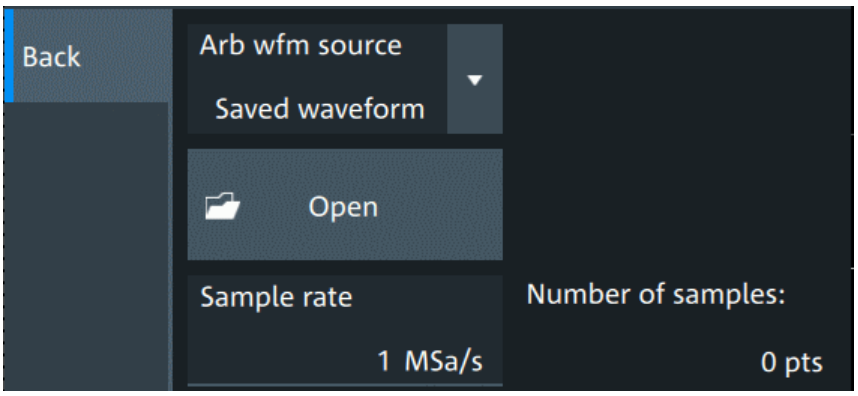

Arb wfm source
Selects the source of the arbitrary waveform.

You can load CSV files that follow a defined structure, or saved reference waveforms.

Remote command:
`WGENerator<wg>:ARBGen[:SOURce]` on page 2294

Sample rate
Sets the sample rate for the arbitrary waveform.

If the sample rate is given in the arbitrary waveform file (CSV or REF file), the instrument displays the value here, and you can change it. If no sample rate is available in the data, you can set the required sample rate.

Remote command:
`WGENerator<wg>:ARBGen:SRATe` on page 2294

Number of samples
Displays the number of samples in the loaded waveform.

Remote command:
`WGENerator<wg>:ARBGen:SAMPles?` on page 2293

Open
Opens a dialog to select the saved waveform, and loads the file. The setting is available if "Arb wfm source" is set to "Saved waveform".

You can load CSV files, or REF waveforms (saved reference waveforms). See also: Section 16.1.4.1, "Arbitrary waveform files", on page 1002.

When the file is loaded, the output voltage is set to the value of the first sample in the file. Therefore, if you want to output single periods of the arbitrary waveform, first load the waveform file, and then connect the DUT.

Remote command:
`WGENerator<wg>:ARBGen:NAME` on page 2292
`WGENerator<wg>:ARBGen:OPEN` on page 2292

16.2 Synchronize settings

Access: "Menu" > "Apps" > "Gen1" > "Synchronisation" tab.

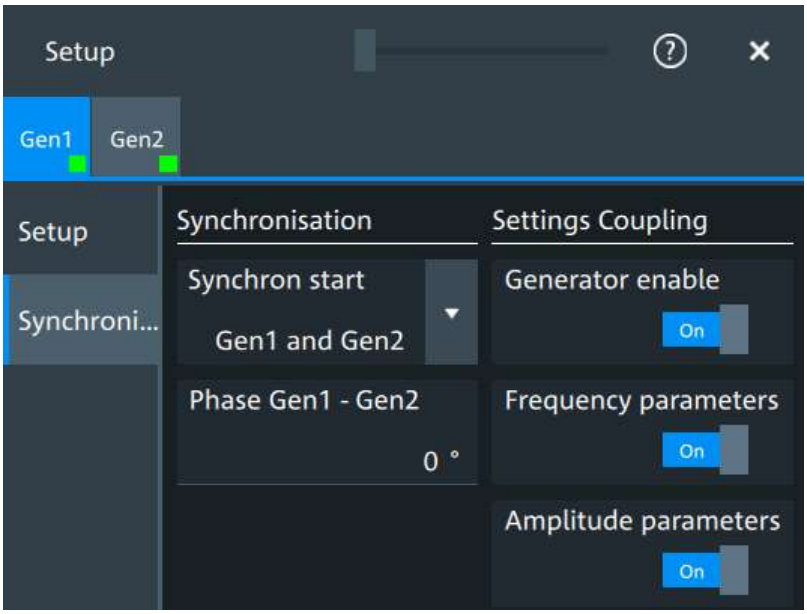

Synchron start
Selects, which signals generated from the waveform generator are synchronized.

Selecting one of the sync options indicates that the first samples of those signals are generated at the same time, irrespective of if the generators are on or off. Selecting one of the coupling options automatically syncs the signals generated by the two waveform generators.

Remote command:
`GENerator:SYNC[:COMBination]` on page 2297

Phase Gen1 - Gen2
Sets the phase shift between the waveform of Gen1 and Gen2 when the frequency parameters of the two waveforms are coupled.

Remote command:
`WGENerator<wg>:COUPling:PHASeshift` on page 2297

Generator enable
Enables the coupling of the generators, with the selected set of parameters: amplitude and frequency.

Remote command:
`WGENerator<wg>:COUPling:STATe` on page 2296

Frequency parameters
Couples all frequency parameters of "Gen1" and "Gen2". The values are taken from the currently selected generator.

You can still change the other settings of the generators independently.

Remote command:
WGENerator<wg>:COUPling:AMPLitude on page 2297

Amplitude parameters
Couples all amplitude parameters of "Gen1" and "Gen2" including the load. The values are taken from the currently selected generator.

Remote command:
WGENerator<wg>:COUPling[:FREQuency] on page 2297

16.3 Configuring the waveform generator

This section explains step by step how to configure the waveform generator.

- Configuring a function waveform....1007
- Configuring a modulation waveform....1007
- Configuring a sine sweep waveform....1009
- Configuring an arbitrary waveform....1009

16.3.1 Configuring a function waveform

1. Tap the "Gen" signal activator.
2. Select the tab of the generator that you want to configure: "Gen"1 or "Gen"2.
3. In the "Setup" tab, select the "Function type" that you want to generate, e.g. "Sine".
4. Depending on the selected "Function type", configure the settings of the waveform like "Frequency" and "Amplitude".
5. If necessary, change the "User load" settings, or add "Noise level in %" to the waveform.
6. Set "State" = "On" to output the waveform at the output connector of the waveform generator.

16.3.2 Configuring a modulation waveform

Generating an AM modulated waveform

1. Tap the "Gen" signal activator.
2. Select the tab of the generator that you want to configure: "Gen"1 or "Gen"2.
3. In the "Setup" tab, set the "Function type" = "Sine".
4. Press "Modulation" to open the modulation dialog.
5. Set "Modulation type" = "AM".

6. Set the "Carrier frequency" and the "Carrier period".
7. Tap "Modulation signal", and select the required waveform.
8. Depending on the selected "Modulation signal", configure the settings of the waveform like "Modulation freq" and "Modulation depth".
9. Set "Modulation state" = "On" to enable the modulation.
10. Press "Back" to return to the "Setup" tab.
11. Set "State" = "On" to output the waveform at the output connector of the waveform generator.

Generating an FM modulated waveform

1. Tap the "Gen" signal activator.
2. Select the tab of the generator that you want to configure: "Gen"1 or "Gen"2.
3. In the "Setup" tab, set the "Function type" = "Sine".
4. Press "Modulation" to open the modulation dialog.
5. Set "Modulation type" = "FM".
6. Select the "Signal type".
7. Set the "Frequency" and the "Deviation".
8. Set "Modulation state" = "On" to enable the modulation.
9. Press "Back" to return to the "Setup" tab.
10. Set "State" = "On" to output the waveform at the output connector of the waveform generator.

Generating an FSK modulated waveform

1. Tap the "Gen" signal activator.
2. Select the tab of the generator that you want to configure: "Gen"1 or "Gen"2.
3. In the "Setup" tab, set the "Function type" = "Sine".
4. Press "Modulation" to open the modulation dialog.
5. Set "Modulation type" = "FSK".
6. Set the "Frequency 1", "Frequency 2" and the "FSK rate".
7. Set "Modulation state" = "On" to enable the modulation.
8. Press "Back" to return to the "Setup" tab.
9. Set "State" = "On" to output the waveform at the output connector of the waveform generator.

Generating a PWM modulated waveform

1. Tap the "Gen" signal activator.
2. Select the tab of the generator that you want to configure: "Gen"1 or "Gen"2.
3. In the "Setup" tab, set the "Function type" = "Square".
4. Press "Modulation" to open the modulation dialog.
5. Set "Modulation type" = "PWM".
6. Tap "Signal type", and select the required waveform.
7. Configure the settings of the waveform like "Frequency" and "Modulation depth".
8. Set "Modulation state" = "On" to enable the modulation.
9. Press "Back" to return to the "Setup" tab.
10. Set "State" = "On" to output the waveform at the output connector of the waveform generator.

16.3.3 Configuring a sine sweep waveform

1. Tap the "Gen" signal activator.
2. Select the tab of the generator that you want to configure: "Gen"1 or "Gen"2.
3. In the "Setup" tab, set "Function type" = "Sine".
4. Press "Sweep" to open the sweep dialog.
5. Select the "Sweep type".
6. Set the "Start frequency", the "Stop frequency" and the "Sweep time".
7. Set "Sweep state" = "On" to enable the sweep.
8. Press "Back" to return to the "Setup" tab.
9. Set "State" = "On" to output the waveform at the output connector of the waveform generator.

16.3.4 Configuring an arbitrary waveform

For a description of the settings, see Section 16.1.4, "Arbitrary waveforms", on page 1002.

Generating an arbitrary waveform from a saved file

If you want to output single periods of the arbitrary waveform, first set up the generator, and then connect the DUT.

1. Tap the "Gen" signal activator.

2. Select the tab of the generator that you want to configure: "Gen1" or "Gen2".
3. In the "Setup" tab, set "Function type" = "Arbitrary".
4. Select "Arbitrary Setup" to open the arbitrary dialog.
5. Set the "Arb wfm source" to "Saved waveform".
6. Set the "Sample rate" if it is not defined in the file data.
7. Check "Number of samples".
8. Select "Back" to return to the "Setup" tab.
9. Select the "Run mode".
10. If "Run mode" = "Repetitive", set "State" = "On" to output the waveform at the output connector of the waveform generator.
11. If "Run mode" = "Single period":
    a) Connect the DUT.
    b) Set "State" = "On" to enable the output of the waveform generator.
    c) Tap "Run single" to output one waveform.

17 Network operation

The operating system is the basis of the instrument's firmware, it provides basic functions such as logon, password protection, virus protection, and connection to a network.

In addition to working with the MXO 5 directly with the touchscreen and the keys, you can also operate the instrument from a remote PC. Various methods of remote operation and control in a LAN network are supported:

- Using the web interface
- Using a VNC client
- Remote control with SCPI commands

You can also connect and synchronize two MXO oscilloscopes together and thus extend the number of channels. If you use R&S ScopeStudio on a computer, you can connect and synchronize two oscilloscopes to the software.

- Connecting the instrument to the network (LAN)..... 1011
- ScopeSync..... 1013
- Web interface..... 1027
- Remote operation with VNC client..... 1033
- Remote control..... 1033
- Remote control - status reporting system..... 1037

17.1 Connecting the instrument to the network (LAN)

Network environment

Before connecting the product to a LAN, consider the following:

- Install the latest firmware to reduce security risks.
- For internet or remote access, use secured connections if applicable.
- Ensure that the network settings comply with the security policies of your company. Contact your local system administrator or IT department before connecting your product to your company LAN.
- When connected to the LAN, the product may potentially be accessed from the internet, which may be a security risk. For example, attackers might misuse or damage the product.

17.1.1 Connecting the instrument to the network

There are two methods to establish a LAN connection to the instrument:

- A non-dedicated network (Ethernet) connection from the instrument to an existing network.

- A dedicated network connection (Point-to-point connection) between the instrument and a single computer.

To connect a LAN cable

► Connect an RJ-45 cable to the LAN connector on the rear panel, and to the LAN.

For supported LAN interfaces, refer to the specifications document.

17.1.2 Assigning the IP address

Depending on the network capacities, the TCP/IP address information for the instrument can be obtained in different ways.

- If the network supports the Dynamic Host Configuration Protocol (DHCP), the address is assigned automatically.
- If the network does not support DHCP, or if the instrument is set to use manual configuration, the addresses must be set manually.

By default, the instrument is configured to use DHCP and obtains all address information automatically. Thus it is safe to establish a physical connection to the LAN without any previous instrument configuration.

To assign the IP address manually on the instrument

1. **NOTICE!** Connection errors can affect the entire network. If your network does not support DHCP, or if you choose to disable dynamic TCP/IP configuration, you must assign valid address information before connecting the instrument to the LAN.

   Contact your network administrator to obtain a valid IP address.
2. Open "Menu" > "Settings".
3. Select "System" > "Network" > "Advanced".
4. Disable "Automatic IP (DHCP)".
5. Enter the address information as obtained from the network administrator.

17.1.3 Using host names

In a LAN that uses a DNS server (Domain Name System server), each computer and instrument in the LAN can be accessed via an unambiguous host name (or computer name) instead of the IP address. The DNS server translates the host name to the IP address. Host names are useful when a DHCP server is used, as a new IP address can be assigned each time the instrument is restarted.

Each instrument is delivered with an assigned host name, but you can change this name.

The default host name is the device name, a non-case-sensitive string with the following syntax: <instrument_model>-<serial_number>.

For example, the default host name of an MXO58 with serial number 123456 is MXO58-123456.

You can find the current host name, the model and the serial number in the "Device summary", when you tap the Rohde & Schwarz logo in the upper right corner of the screen. See also: Section 4.13, "Information and notifications", on page 83.

The serial number can also be found on the rear panel of the instrument. It is the third part of the device ID printed on the barcode sticker:

To change the host name

1. Open the "Menu".
2. Select "Settings" > "System" > "Network".
3. In "Host name", enter the new host name.
4. Confirm the entry.
5. Reboot the instrument.

17.2 ScopeSync

- ScopeSync concept 1013
- Using ScopeSync 1017
- ScopeSync settings 1021

17.2.1 ScopeSync concept

Using the ScopeSync functionality, you can extend the number of channels in analysis. You find the maximum number of synchronized channels in the specifications document. ScopeSync is useful in applications that need more signals than one oscilloscope has. Such applications are, for example, power sequencing, power conversion, multi-phase buck converters, 6-phase motor drives, and automotive applications. You can use most measurement and analysis functions across all channels.

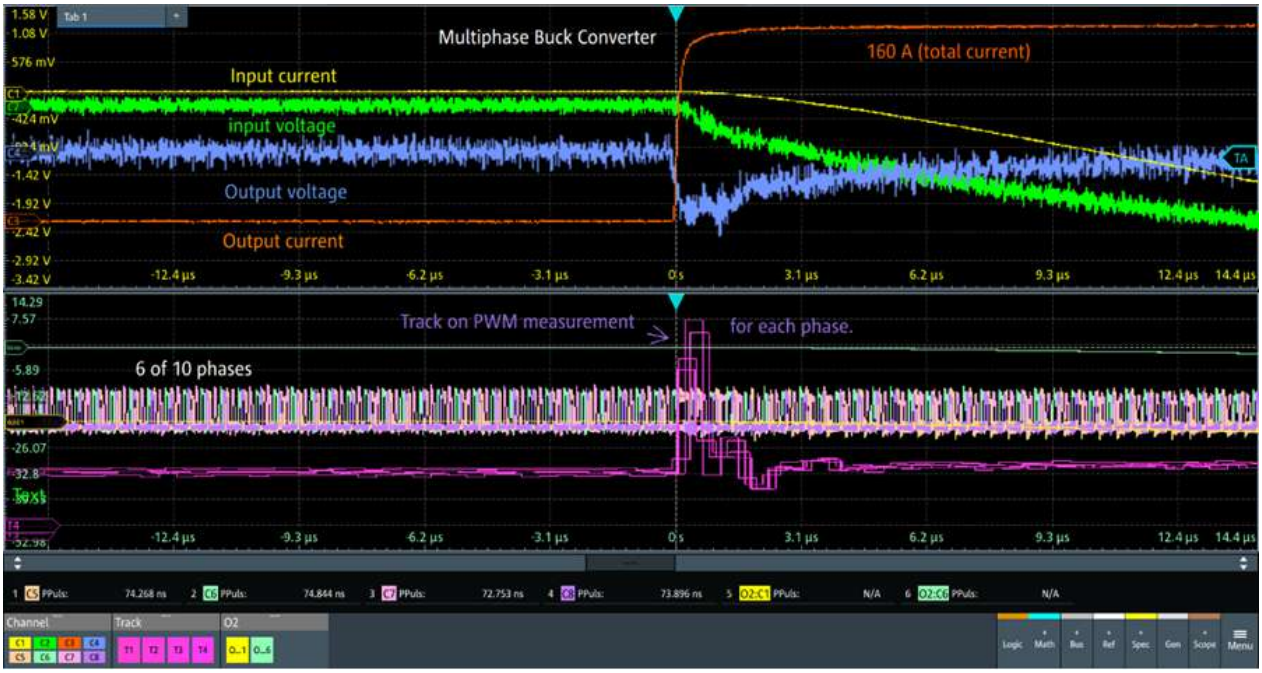

Figure 17-1: Example: analysis of multi-phase buck converter on MXO 5 with ScopeSync

The following products can be connected with ScopeSync:

- MXO 4 with 4 channels
- MXO 5 with 4 or 8 channels
- MXO 5C with 4 or 8 channels

Each instrument can have a different specifications, like bandwidth, sample rate, memory depth, timebase and so on.

R&S ScopeStudio uses the ScopeSync interface to importt sessions and signals.

17.2.1.1 Connections between oscilloscopes

In a ScopeSync setup, there is the leading oscilloscope (also called scope 1), where the analysis is done. Other oscilloscopes are the secondary oscilloscopes, and one of these is the connected one. The leading and the connected oscilloscopes are set up independently, and you can use the front panel keys and the touchscreen on each instrument. It is possible to use several secondary oscilloscopes.

ScopeSync of two oscilloscopes

ScopeSync of two oscilloscopes requires several cable connections:

- Connect "Ref Out 10 MHz" of the leading scope to "Ref In 10 MHz" of the connected scope with BNC cable. This connection ensures the timing accuracy across the oscilloscopes.
- Connect "Trigger Out" of the leading scope to "Trigger In" of the connected scope with BNC cable. This connection ensures trigger alignment. The trigger is set on the leading scope, and the connected scope triggers when the leading scope trig-

gers. The trigger out delay is eliminated by a skew value that is measured during skew setup.

- LAN connection between the two oscilloscopes, either directly, via network, or using a switch. A direct connection via USB 3.0 is also possible. This connection is used for the communication of the scopes: sending commands from the leading scope to the connected scope, and transferring waveforms vice versa.

ScopeSync of several oscilloscopes

You can configure several devices to act as secondary oscilloscopes (O2, O3, O4,...). One of these secondary scopes has the active connection. You can use the secondary scopes alternatively by activating the required connection. The currently active connection is terminated when you activate another oscilloscope.

You can also use several secondary scopes together and synchronize their waveforms at once on the leading oscilloscope.

ScopeSync of several oscilloscopes requires more cable connections:

- Connect "Ref Out 10 MHz" of the leading scope to a splitter, and "Ref In 10 MHz" of the secondary scopes with the splitter using BNC cables. These connections ensure the timing accuracy across the oscilloscopes.
- Connect "Trigger Out" of the leading scope to another splitter, and "Trigger In" of the secondary scopes with this splitter using BNC cables. These connections ensure trigger alignment. The trigger is set on the leading scope, and the secondary scopes trigger when the leading scope triggers. The trigger out delay is eliminated by a skew value that is measured during the skew setup of each secondary scope.
- LAN connection between all oscilloscopes. This connection is used for the communication of the scopes: sending commands from the leading scope to the secondary scopes, and transferring waveforms vice versa.

Synchronized waveforms on the leading oscilloscope

When acquiring the waveforms with "Run Single" or "Run/Stop", the currently active waveforms on the connected scopes are transferred to the leading scope, and you can analyze them. Only waveforms that are based on the identical trigger event are shown simultaneously in run mode.

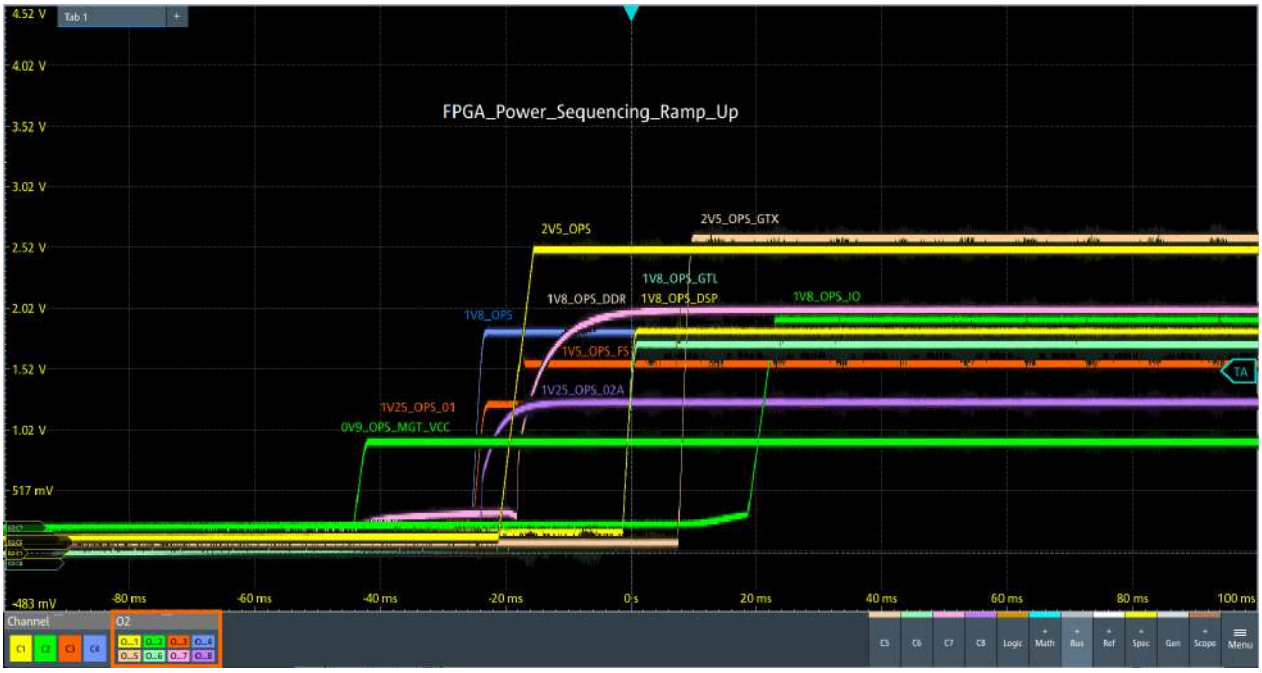

The channels of each oscilloscope are grouped in the signal bar. Select the channel group to open it. Channels of secondary scopes are named "O2:C<n>", "O3:C<n>" and so on. They are available as sources along with the waveforms of the leading scope, for example, for math, measurements, masks, serial buses.

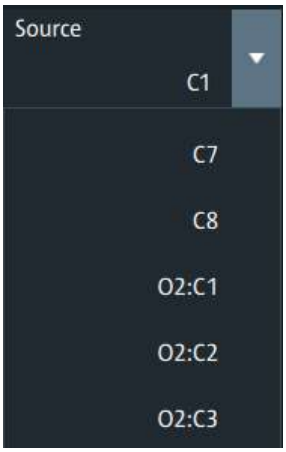

Limitations

When working with ScopeSync and analyzing waveforms from a connected oscilloscope, some limitations exist.

- ScopeSync "Get signals" transfers only analog channels.
- You can actively connect one oscilloscope at a time.
- Waveform persistence, measurement statistics, and other functions that require repeated acquisitions are not available on waveforms of connected scopes. These waveforms are handled like reference waveforms in the background.

- Up to 16 waveforms can be displayed in one diagram. If you have more waveforms, you need a second diagram to display all.
- Triggering is possible only on signals of the leading oscilloscope. Connected scopes use the external trigger.
- You can save a session or saveset when the connection to a connected scope is active. When you recall a saveset or session in the "Recall" tab with active connection, the file is loaded, but the connection is terminated. You have to reconnect the connected oscilloscope. Recalling a session file loads the saveset and reference waveforms (if included). See Section 13.7, "Sessions", on page 497.
- The higher the record length of the signals on the connected scope, the longer it takes to transfer the waveforms. The time also depends on the type of the leading oscilloscope.

17.2.1.2 R&S ScopeStudio connection

With R&S ScopeStudio, which is the oscilloscope application on a computer, you can retrieve the signals and settings from an MXO oscilloscope and analyze the waveforms on the computer. If the oscilloscope is connected to another one with ScopeSync, you can analyze the waveforms and data of both scopes.

You need a working LAN or USB 3.0 connection between the computer with R&S ScopeStudio and the leading scope, usually via the network, or a direct connection. Then you can load the data from the leading scope into R&S ScopeStudio:

- "Get signals" to load analog channel waveforms.
- "Get session" to load all settings and waveforms.

You can also load a session in the "Recall" tab when the connection to the leading scope is active. The file is loaded, but the connection is terminated. You have to reconnect the oscilloscope.

Instead, save the complete session on the oscilloscope and use "Get session" in R&S ScopeStudio, which keeps the connection active.

17.2.2 Using ScopeSync

This sction describes the basic procedures on how to use ScopeSync.

- "To set up the physical connection of two oscilloscopes" on page 1017
- "To configure the connection" on page 1018
- "To align the scopes" on page 1018
- "To get signals for analysis on the leading scope" on page 1019
- "To analyze waveforms of two or more secondary scopes" on page 1020

To set up the physical connection of two oscilloscopes

1. Connect "Ref Out 10 MHz" of the leading scope to "Ref In 10 MHz" of the connected scope with a BNC cable.

2. Connect "Trigger Out" of the leading scope to "Trigger In" of the connected scope with a BNC cable.
3. Establish a LAN connection between the two scopes. You can connect both instruments to the network, connect them directly, or use a switch.

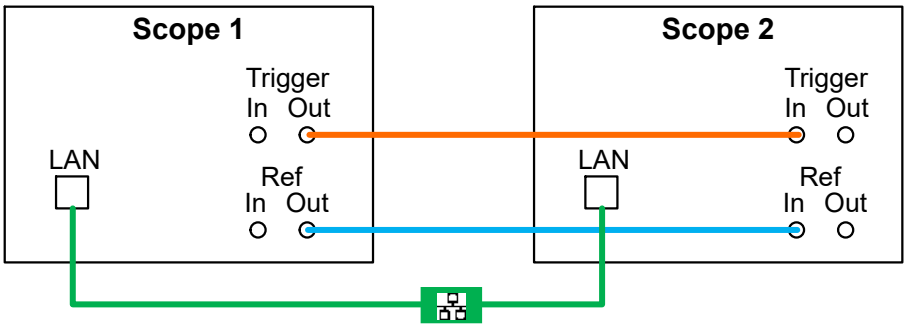

4. Configure the connection, see "To configure the connection" on page 1018.

To configure the connection

All settings are described in Section 17.2.3, "ScopeSync settings", on page 1021. The setup is the same for each secondary scope. The cable connections are complete.

1. On leading scope, tap the "+ Scope" activator on the signal bar.
2. On the "Remote" tab, tap "+ Add".
3. Enter the "IP or hostname" of the secondary scope. To get the information, tap the Rohde & Schwarz logo on the display of the secondary scope.
   You can also use "Find devices" to get a list of available instruments and select the required one.
4. Enter a name for the secondary scope.
5. Tap "Connect".
6. Proceed with "To align the scopes" on page 1018 or "To get signals for analysis on the leading scope" on page 1019

To align the scopes

If you connect the scopes for the first time for the current measurement setup, you need to deskew them for correct horizontal synchronization.

1. Set up both scopes independently for edge trigger.
2. Connect the scopes as described in "To configure the connection" on page 1018.
3. On leading scope, tap the "+ Scope" activator on the signal bar.
4. Select the "Remote" tab.
5. Tap "Skew setup".
6. Connect two passive probes to the Probe Comp. connectors of the leading scope and to C1 both scopes as shown in the dialog.

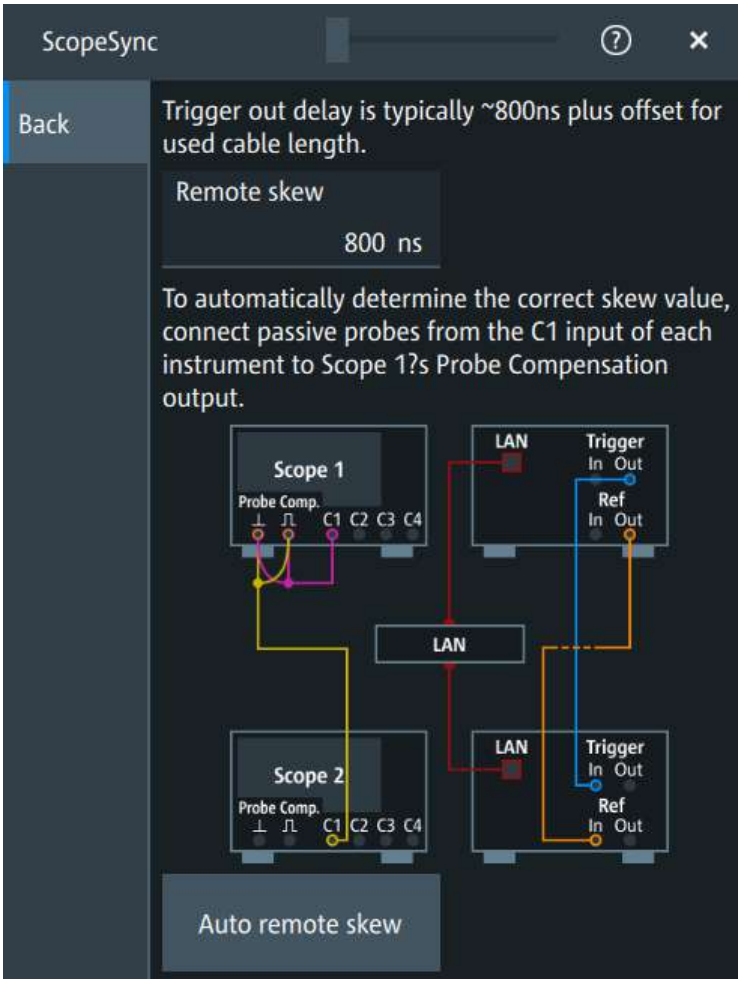

7. Tap "Auto remote skew".

   The skew is measured and the result is written to "Remote skew" and used for alignment of the channels.

8. Tap "Back" to return to the "Remote" tab.
9. Select the "Control" tab.
10. Activate "Sync timebase".
11. Preset the connected scope.
12. Proceed with "To get signals for analysis on the leading scope" on page 1019.

To get signals for analysis on the leading scope

1. To prepare the analysis:
   - Connect the scopes as described in "To set up the physical connection of two oscilloscopes" on page 1017.
   - Configure the the connection as described in "To configure the connection" on page 1018.

- For a new test setup, configure the deskew as described in "To align the scopes" on page 1018.

2. Set up both scopes independently for the measurement task.
3. On the leading scope, open the "Remote" tab in the "Add scope" dialog.
4. To get the signals, tap "Run Single" or "Run/Stop".

   Now you can start the analysis of the signals.

To analyze waveforms of two or more secondary scopes

If you need more channels than available on the leading and one connected scope, you can include more scopes in the measurement setup and connect them with the leading scope. All connected scopes use the external trigger of the leading scope, and the reference clock of the leading scope.

1. Connect "Ref Out 10MHz" of the leading scope to a high-quality power splitter, and "Ref In 10MHz" of the secondary scopes with the splitter using BNC cables.
2. Connect "Trigger Out" of the leading scope to another high-quality power splitter, and "Trigger In" of the secondary scopes with this splitter using BNC cables.
3. Establish a LAN connection between the all scopes. You can connect both instruments to the network, connect them directly, or use a switch.
4. Configure and align each scope as described in "To configure the connection" on page 1018 and "To align the scopes" on page 1018.
5. Set up all scopes independently for the measurement task.
6. Press [Single] on each oscilloscope to put in wait for trigger.
7. On the leading scope, open the "Control" tab in the "ScopeSync" dialog.
8. Tap "Run Single".

   When the leading scope triggers, a trigger-out signal is sent to all connected scopes, and they acquire the waveforms.
9. Select the "All" subtab.
10. Select all secondary scopes that contribute to the measurement.

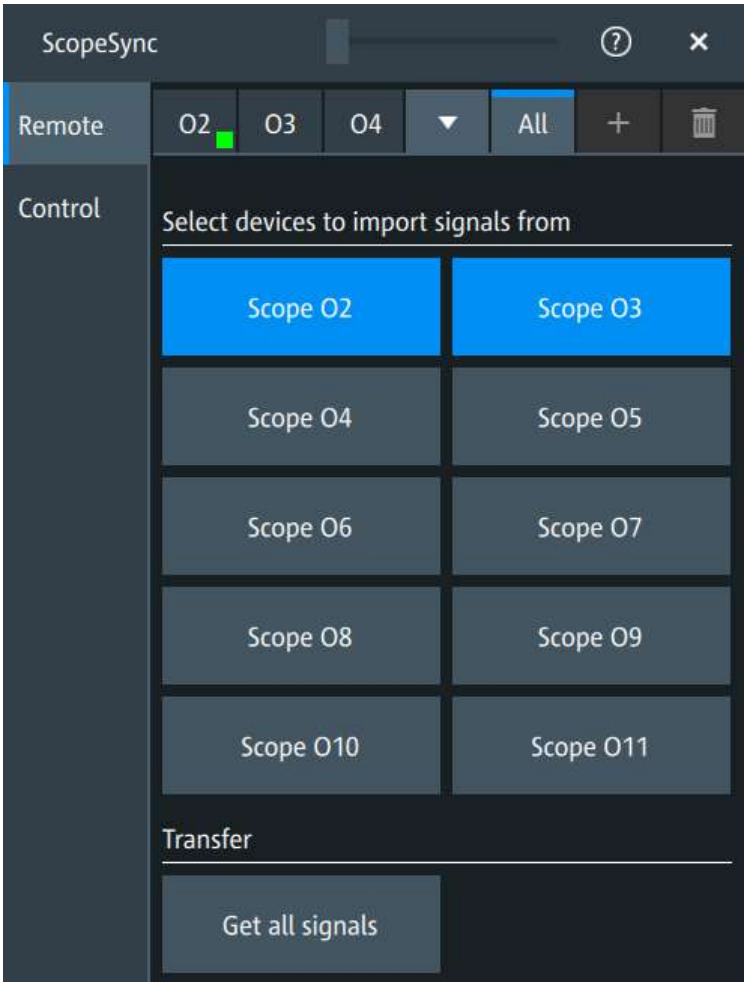

11. Tap "Get all signals".

    Now you can start the analysis of the signals.

17.2.3 ScopeSync settings

- Connection setup 1021
- Control 1025
- Scope selection for data transfer 1026

17.2.3.1 Connection setup

Access: "Menu" > "Apps" > "General" tab > "Add scope" > "Remote" tab

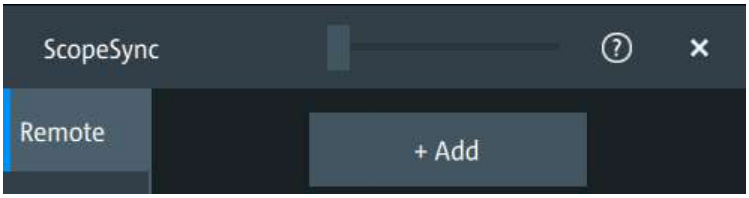

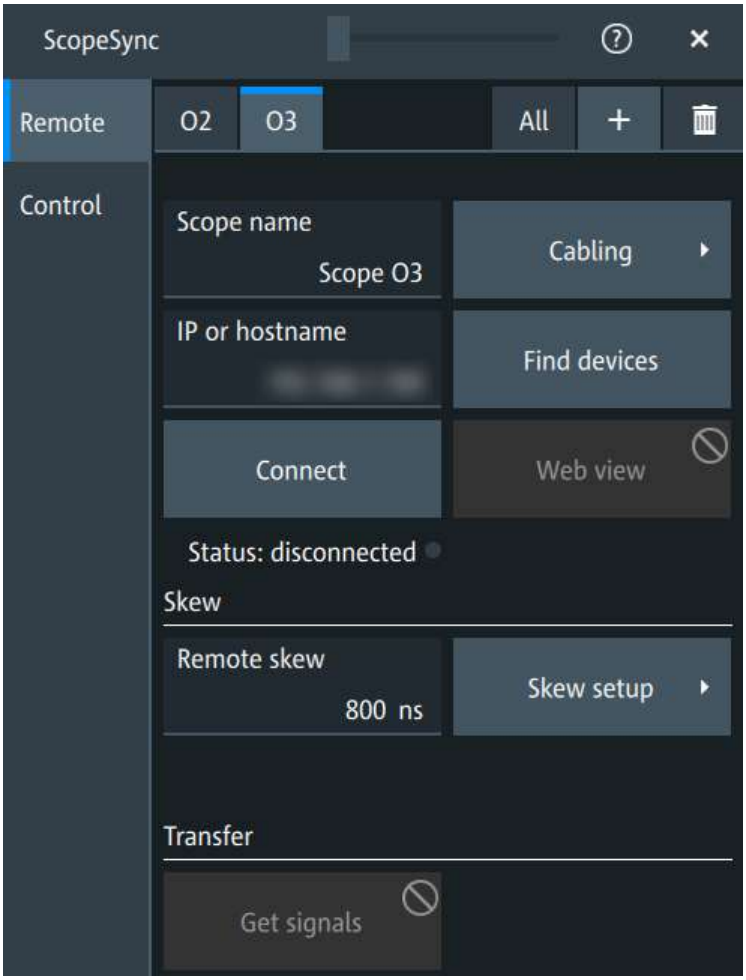

+ Add
Adds a tab for the first secondary oscilloscope ("O2") to the dialog. To add more oscilloscopes, use the ⊞ icon in the tab line. Each secondary instrument gets its own tab and is configured in the same way. The active connection is indicated by a green square.

Remote command:
`SYNChronize:DEVice<m>[:ENABle]` on page 2301

Scope name
Enter a name for the secondary oscilloscope. This name is used on the "All" tab.

Remote command:
`SYNChronize:DEVice<m>:NAME` on page 2300

Cabling
A dialog shows the required cable connections of two oscilloscopes. To connect more oscilloscopes, place a splitter in the trigger connection line, and another splitter in the reference line. Thus, all wired secondary scopes get the same reference clock and trigger signal.

IP or hostname
Enter the IP address or the host name of the secondary oscilloscope. To find and connect available oscilloscopes in the network, use Find devices.

Remote command:
SYNChronize:DEVice<m>:COMMunicate:NET[:HOSTname] on page 2298

Find devices
The button starts a search for available oscilloscopes and opens a dialog with the results and some search settings.

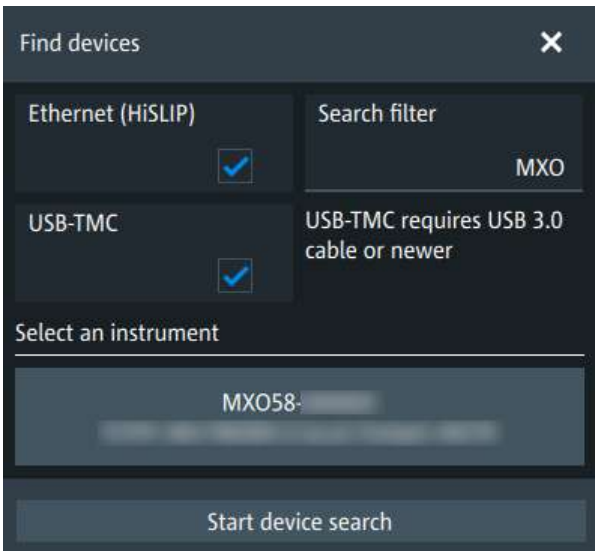

"Ethernet (HiSLIP)"	Filters the instruments that are connected via Ethernet.
"USB-TMC"	Filters the instruments that are connected via USB.
"Search filter"	Filters for instruments that contain the specified string in the device name.
"Start device search"	Starts the search using the configured filters.

Connect
Activates the connection between the two oscilloscopes, or between the R&S ScopeStudio software and the oscilloscope.

Another active connection is terminated.

On the leading scope, the reference clock output and the "Trigger out pulse" are activated. On the secondary scope, the source of the reference clock and the trigger source are set to "External".

Remote command:
SYNChronize:DEVice<m>:CONNect on page 2299

Disconnect
Terminates the active connection.

The reference clock and trigger source and action settings on the leading scope and secondary scope remain unchanged.

Remote command:
SYNChronize:DISConnect on page 2301

Web view
Opens the web interface of the connected oscilloscope. There, you can control the connected scope directly from the leading scope. "Web view" is particulary helpful if the connected oscilloscopes is an MXO5C, which has no display and front panel control.

See also: Section 17.3, "Web interface", on page 1027.

Remote skew
Shows the skew value that was measured by "Auto remote skew". If you know the skew, or measure it manually, you can also enter the value.

Remote command:
SYNChronize:DEVice<m>:SKEW[:VALue] on page 2300

Skew setup
Opens a dialog to compensate for the delay between the scopes. The delay is caused by the trigger out delay and the cable length of the trigger out to trigger in connection.

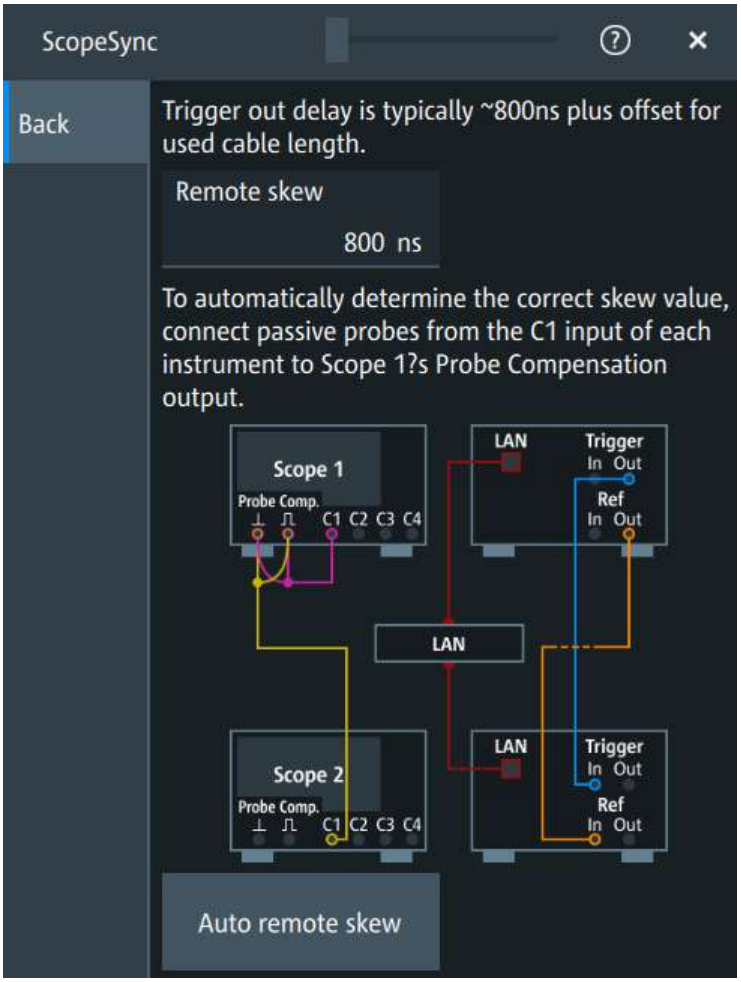

Auto remote skew ← Skew setup
Measures the delay between the scopes automatically, and sets the skew. Connect the scopes as shown in the dialog, and tap "Auto remote skew".

Remote command:
`SYNChronize:DEVice<m>:SKEW:AUTO` on page 2300

Get signals
Retrieves the active analog waveforms of the latest acquisition from the connected oscilloscope. Digital channels and reference waveforms are not transferred.

Remote command:
`SYNChronize:LOAD[:WAVeform]` on page 2301
`SYNChronize:LOAD:ABORt` on page 2301

17.2.3.2 Control

Access: "Menu" > "Apps" > "General" tab > "Add scope" > "Control" tab

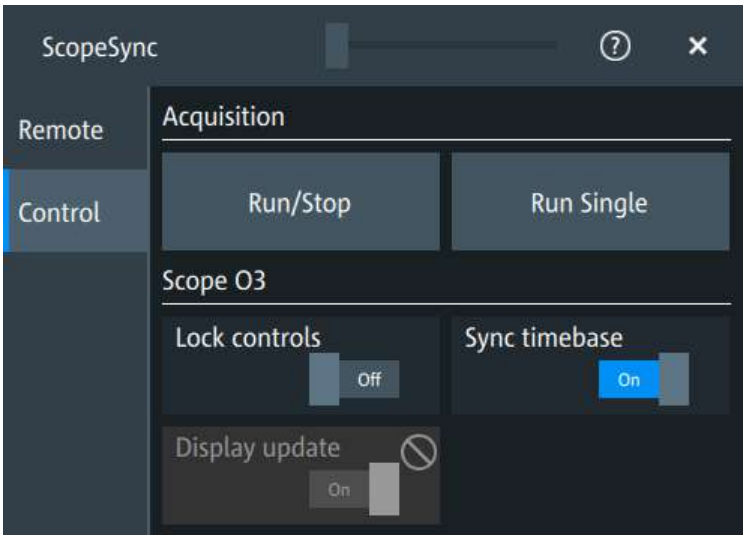

Run/Stop
See "Run/stop" on page 131.

Run Single
See "Run single" on page 132.

"Run Single" is the preferred acquisition mode in ScopeSync.

Lock controls
Locks the touchscreen and the front panel keys on the connected oscilloscope.

Remote command:
`SYNChronize:DEVice<m>:LOCKcontrols` on page 2299

Sync timebase
Enables or disables the timebase synchronization.

If enabled, all secondary scopes use the timebase of the leading scope.

Remote command:
SYNChronize:DEVice<m>:TIMebasesync on page 2300

Display update
Enables the continuous display update on the connected secondary oscilloscope when acquisition is controlled on the leading oscilloscope.

The display update allows for visual comparison of the waveforms on both displays.

"Display update" is available if "Lock controls" is on.

Remote command:
SYNChronize:DEVice<m>:DISPlay on page 2299

17.2.3.3 Scope selection for data transfer

Access: "Menu" > "Apps" > "General" tab > "Add scope" > "Remote" tab > "All" subtab

You can transfer signals from more than one secondary scope to the leading scope. On the "All" subtab, you select the scopes that contribute, and start the signal transfer.

For the complete procedure, see "To analyze waveforms of two or more secondary scopes" on page 1020.

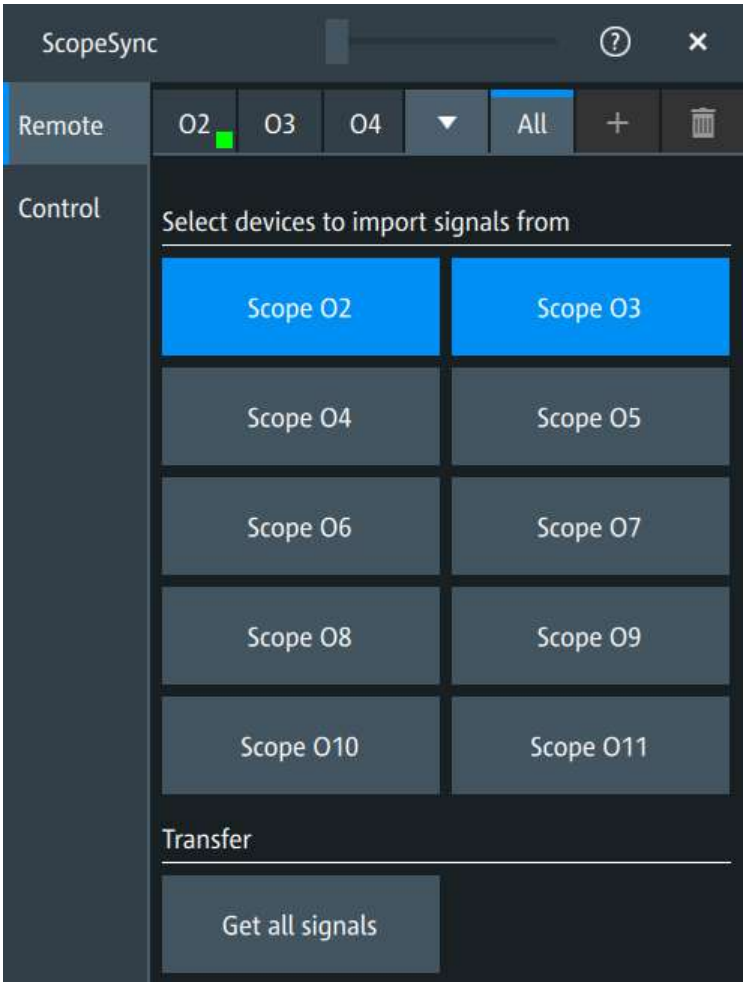

Get all signals
Retrieves the active analog waveforms of the latest acquisition from the selected oscilloscopes. The software connects, retrieves the signals and disconnects the selected scopes one by one. When finished, it restores the connection that was active before starting "Get all signals", or disconnects all if no connection was active.

All selected scopes required a correct cabling and correct connection settings.

17.3 Web interface

If the MXO 5 is connected to a computer via LAN, you can operate the instrument from the computer. No additional tools are required, you need only a web browser.

17.3.1 Settings on the MXO 5

The "Network" tab of the "System" dialog box provides network information and settings. See Section 5.1.2, "Network settings", on page 89.

17.3.2 Web browser

The instrument's web interface works with all W3C compliant browsers.

To open the instrument's web browser

1. Open a browser on a computer connected to the instrument via LAN.
2. Type the instrument's host name or IP address in the address field of the browser on your PC, e.g. "http://11.111.11.222".

   The instrument homepage opens.

17.3.2.1 Instrument homepage

The instrument homepage displays the device information in read-only format, including DNS host names, IP address, and the VISA resource strings.

At the bottom of the homepage, you find the "Device Indicator". Activate the indicator to find the instrument. In the instrument GUI, above the waveform diagram, the connection status icon starts blinking.



The navigation menu of the instrument's browser interface has the following items.

- "LAN configuration" opens the menu with configuration pages.
- "Web control" emulates the front panel and shows the instrument display. You see a live image of the instrument, and you can operate the instrument remotely. You can use the keys, the knobs and the menus in the same way as directly on the instrument.
- "File manager" provides access to the user data that is saved on the instrument, upload and download.

17.3.2.2 LAN configuration

The LAN configuration consists of several parts:

- "General"

- "IP configuration" provides all mandatory LAN parameters.
- "Advanced configuration" provides LAN settings that are not declared mandatory by the standard.
- "Ping client" provides the ping utility to verify the connection between the instrument and other devices.

Changing the LAN parameters requires the "Web password" password, which is set on the instrument.

IP configuration

The "LAN Configuration > IP configuration" webpage displays all mandatory LAN parameters and allows their modification. Changing the LAN parameters requires the "Web password" password, which is set on the instrument.

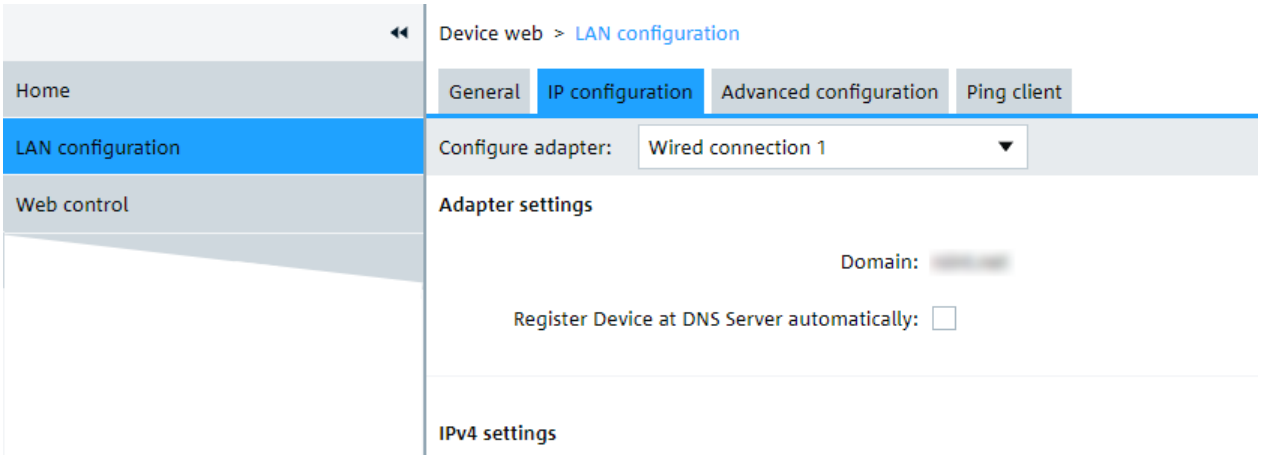

The "IP address mode" controls how the IP address for the instrument gets assigned. For the manual configuration mode, at least the static IP address, subnet mask, and default gateway are used to configure the LAN. The automatic configuration mode uses a DHCP server or Dynamic Link Local Addressing to obtain the instrument IP address.

The same settings are available on the instrument under "Menu" > "Settings" > "System" > "Network" > "Advanced".

Advanced configuration

The "LAN Configuration > Advanced configuration" parameters are used as follows:

- mDNS and DNS-SD are two additional protocols: Multicast DNS and DNS Service Discovery. They are used for device communication in zero configuration networks working without DNS and DHCP.
- "ICMP ping" must be enabled to use the ping utility.
- "VXI-11" is the protocol that is used to detect the instrument in the LAN.

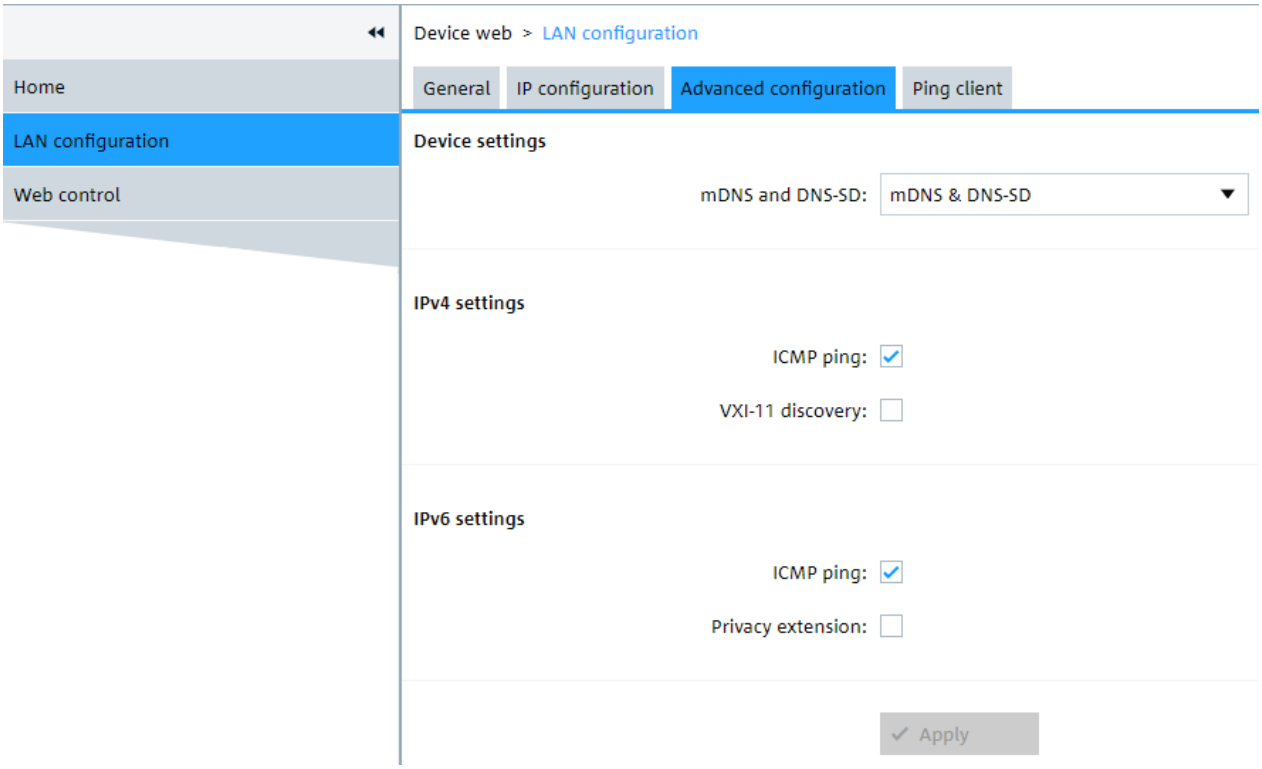

Ping client

Ping is a utility that verifies the connection between the instrument and another device. The ping command uses the `ICMP` echo request and echo reply packets to determine whether the LAN connection is functional. Ping is useful for diagnosing IP network or router failures. The ping utility is not password-protected.

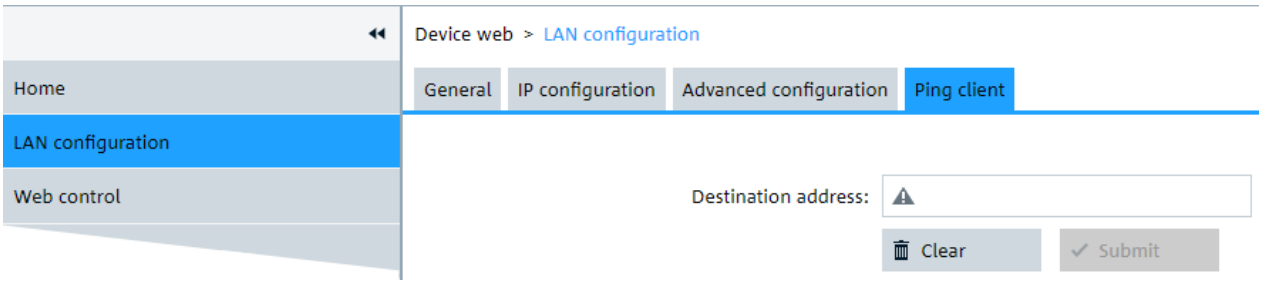

To initiate a ping between the compliant instrument and a second connected device:

1. Enable "ICMP ping" on the "Advanced configuration" page (enabled by default).
2. On the "Ping client" page, enter the IP address of the second device **without the ping command and without any further parameters** into the "Destination address" field (e.g. *11.113.11.203*).
3. Click "Submit".

17.3.2.3 Web control

"Web Control" emulates the front panel and shows the instrument display. You see a live image of the instrument, and you can operate the instrument remotely. You can use the keys, the knobs and the menus in the same way as directly on the instrument.

In the upper right corner above the emulated display, you see some options:

- "Front panel" hides or shows the front panel.
- "Scaling" scales the diagram to show it completely. If disabled, the diagram is shown in its original size.
- "Read-only" disables operating, only viewing is possible.
- The camera icon saves a screenshot.
- The arrows icon hides or shows the menu.

17.3.2.4 File manager

The file manager on the instrument's webpage provides access to the user data that is stored on the instrument, or on a USB flash device connected to the instrument.

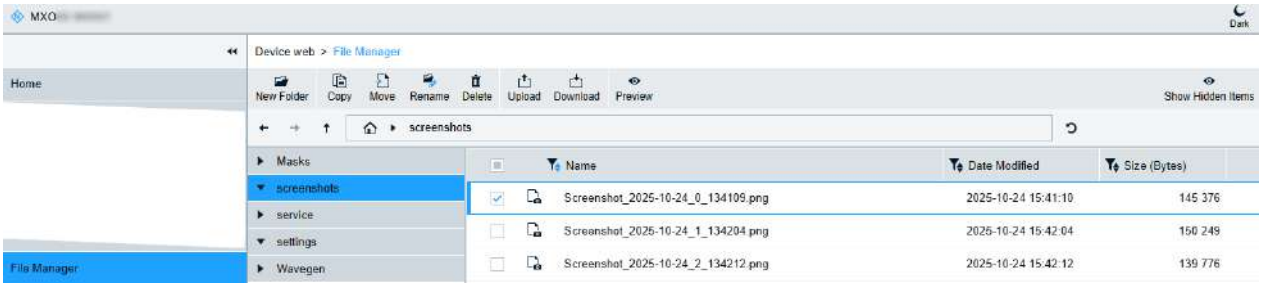

In the browser's file manager, you can organize the data:

- Create folders.
- Copy files within the instrument's file system, or from and to a USB flash device. Multiple files selection is possible.
- Move files within the instrument's file system, or from and to a USB flash device. Multiple files selection is possible.
- Rename files.
- Delete files.
- Upload files from the operating computer to the instrument. Multiple files can be uploaded at once.
- Download files from the instrument to the operating computer. Multiple files selection is possible.
- Preview file content of text files with maximum size of 500 kbyte.

Notes on USB flash devices

If no USB flash device is connected to the MXO 5, the "USB" folder is empty but still listed. Do NOT upload files to this main "USB" folder because data will be lost. Upload files only to the subfolders of connected USB flash devices.

After attaching a USB flash device, creating a screenshot or other actions, the file manager might not display the last change:

► Click the "Refresh" icon on the right of the address field to update the display.

The "Eject" button for USB flash devices has no function when operating the instrument remotely.

17.3.2.5 Mapping the instrument's file system as a network drive

Using web based distributed authoring and versioning (WebDAV), you can access and exchange files over the internet: move, cut, copy and paste files from the instrument to the computer and vice versa. To prepare file exchange, map the instrument's file system as a network drive in the file explorer of the operating computer:

1. Check if the connection status icon in the upper right corner of the instrument's display is green.

   If it is green, the instrument is connected to the LAN.

2. Open the file explorer on the operating computer.

3. In the left list, right-click "Network" or the entry of the operating computer, and select "Map network drive".

4. Enter the path to the instrument's file system:
   `http://<hostname>/webdavData`.
   Example: `http://MXO58-123456/webdavData`

   You can find the host name in the "Device summary", which is shown when you tap the Rohde & Schwarz logo in the upper right corner of the instrument's screen. The default host name is <instrument_model>-<serial_number>.

5. Activate "Connect using different credentials".

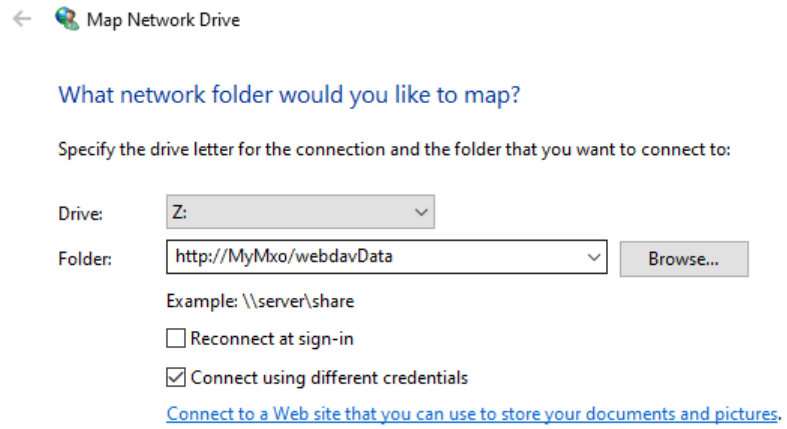

6. Click "Finish".
7. Leave the "User name" and "Password" empty. Click "OK".

If there are problems with the connection, check if the "WebClient" service is running: "Task Manager" > "Services" tab. If the "WebClient" service is not running, start it.

17.4 Remote operation with VNC client

If the MXO 5 is connected to a computer via LAN, you can operate the instrument from the computer using a VNC client. Therefore, install a VNC client on the computer.

To operate the instrument via VNC client:

1. Start the VNC client.
2. Enter the hostname (device name) of the instrument. You find the name in the instrument information on the oscilloscope. Tap the Rohde & Schwarz logo to show the information.
3. Connect to the instrument.

   You see the display of the oscilloscope and can use the menus, dialogs, SmartGrid and all operating means of the display.

17.5 Remote control

Remote control automates the operation of the MXO 5 using SCPI commands, scripts and programs.

For general information on remote control of Rohde & Schwarz products via SCPI, refer to www.rohde-schwarz.com/rc-via-scpi.

The following sections describe the specific basics of remote control. Definitions specified in the SCPI standard are not provided.

SCPI commands are listed and described in Section 18, "Remote control commands", on page 1047.

- Remote control interfaces and protocols....1034
- Starting and stopping remote control....1036

17.5.1 Remote control interfaces and protocols

The MXO 5 supports the following interfaces for remote control:

- LAN interface with HiSLIP protocol, VXI-11 protocol or raw socket.
  See Section 17.5.1.1, "LAN interface", on page 1034.
- USB TMC interface (USB Test & Measurement Class), allows test instruments to be connected to and controlled by a computer via a standard USB cable. A VISA installation is required.
  See Section 17.5.1.2, "USB interface", on page 1036.

17.5.1.1 LAN interface

To be integrated in a LAN, the instrument is equipped with a LAN interface, consisting of a connector, a network interface card and protocols. The interface details are given in the specifications.

For remote control via a network, the PC and the instrument must be connected via the LAN interface to a common network with TCP/IP network protocol. They are connected using a commercial RJ-45 cable (shielded or unshielded twisted-pair category 5 or better). The TCP/IP network protocol and the associated network services are preconfigured on the instrument. Software for instrument control and the VISA program library must be installed on the controller.

The MXO 5 supports the following ways of LAN communication:

- HiSLIP protocol (high-speed LAN interface protocol): recommended protocol for remote control via LAN, successor of VXI-11.
- VXI-11 protocol: first LAN-based protocol, developed for test and measurement instruments communication as a replacement for the expensive GPIB equipment.
- Raw socket: universal I/O protocol, usually over the port 5025. No need for VISA installation. Communication without control channel, hence there is no support for events like Service Request (SRQ) or Device Clear (DCL).

HiSLIP protocol

The high-speed LAN instrument protocol (HiSLIP) was defined by the IVI Foundation and adopted by the LXI Consortium as the recommended LAN protocol.

The HiSLIP protocol uses two TCP sockets for a single connection - one for fast data transfer, the other for non-sequential control commands (e.g. `Device Clear` or `SRQ`).

HiSLIP has the following characteristics:

- High performance as with raw socket network connections.

- Compatible IEEE 488.2 support for message exchange protocol, device clear, serial poll, remote/local, trigger, and service request.
- It uses a single IANA-registered port (4880), which simplifies the configuration of firewalls.
- It supports simultaneous access of multiple users by providing versatile locking mechanisms.
- Usable for IPv6 or IPv4 networks.

Note that HiSLIP data is sent to the device using the "fire and forget" method with immediate return. A successful return of a VISA operation such as `viWrite()` does not ensure that the instrument has finished or started the requested command. It only indicates that the command has been delivered to the TCP/IP buffers.

VXI-11 protocol

The VXI-11 standard is based on the open network computing remote procedure call (ONC RPC) protocol, which in turn relies on TCP/IP at the network/transport layer. The TCP/IP network protocol and the associated network services are preconfigured.

TCP/IP ensures connection-oriented communication, where the order of the exchanged messages is adhered to and interrupted links are identified. With this protocol, messages cannot be lost.

Raw socket mode

With raw socket communication, the instrument communicates directly with the TCP transport layer. A VISA library is not required, but VISA offers an option to open a raw socket session. Service requests and status byte polling are not supported in the raw socket mode.

TCP/IP raw socket connections for SCPI commands use port 5025. Terminate all commands with a line feed (LF).

IP address (VISA resource string) for LAN connections

Only the IP address or a valid DNS host name is required to set up the connection. The host address is part of the "VISA resource string" used by programs to identify and control the target application. The VISA resource string has the form:

- **HiSLIP protocol**
  `TCPIP::<host address>::hislip0[,<port>][::INSTR]`
  Examples:
  IP address is *192.1.2.3*, resource string: `TCPIP::192.1.2.3::hislip0`
  Instrument name is *RSRT1*, resource string: `TCPIP::RSRT1::hislip0`.
  DNS host name is *MXO 5-123456*, resource string:
  `TCPIP::MXO 5-123456::hislip0`.
- **VXI-11 protocol**
  `TCPIP::<host address>[::inst0][::INSTR]`
  Examples
  IP address is *192.1.2.3*, resource string: `TCPIP::192.1.2.3`
  Instrument name is *RSRT1*, resource string: `TCPIP::RSRT1`.
  DNS host name is *MXO 5-123456*, resource string: `TCPIP::MXO 5-123456`.

- **Raw socket communication**
  `TCPIP::<host address>::<port>::SOCKET`
  Example
  TCPIP::192.1.2.3::5025::SOCKET

Where:

- `host address` identifies the MXO 5 in the network, usually the IP address. If the LAN is supported by a DNS server, the host name can be used instead of the IP address. The DNS server (Domain Name System server) translates the host name to the IP address.
- `hislip0` indicates the HiSLIP protocol.
- `inst0` is the default LAN device name. VISA supports several devices running on the instrument. On MXO 5, only one device is configured, so the LAN device name can be omitted.
- `INSTR` specifies a VISA resource of the type INSTR. By default, the VISA resource name control is set to the INSTR class.
- `port` is the port number, for raw socket communication, port 5025 is used.

17.5.1.2 USB interface

For remote control using USB TMC, the controller PC and the instrument are connected over the USB type B interface.

A VISA installation is required, because it contains the necessary USB drivers to be able to connect and communicate with the instrument.

USB resource string

`USB::<vendor ID>::<product ID>::<serial number>[::INSTR]`

- <vendor ID> is the manufacturer ID for Rohde & Schwarz.
- <product ID> is the product identification of the instrument.
- <serial number> is the individual serial number of the instrument.
- [::INSTR] indicates the instrument resource class (optional).

17.5.2 Starting and stopping remote control

17.5.2.1 Starting a remote control session

When you switch on the instrument or start the firmware, it is always in manual operation state ("local" state).

► To start the remote control:

- Send a command from the controller.
- VXI-11 protocol (LAN or USB interface): Use `&GTR` interface message.

While remote control is active, the settings are optimized for maximum measurement speed; the display is switched off.

Operation via the front panel is disabled.

On the screen, two buttons appear in the upper left corner: "Local" and "View".

17.5.2.2 Using the display during remote control

You can observe the screen while a remote control script is executed. Displaying the results of script execution is helpful for program test purposes but tends to slow down the measurement. Therefore it is recommended that you switch off the display in real measurement applications where a tested program script is to be executed repeatedly.

► To switch on the display, do one of the following:

- Tap the "View" button in the upper left corner of the screen.
- Use the `SYSTem:DISPlay:UPDate ON` command.

► To switch off the display, do one of the following:

- Tap the "View" button again.
- Use the `SYSTem:DISPlay:UPDate OFF` command.

17.5.2.3 Returning to manual operation

The MXO 5 switches back to manual operation when the remote connection is closed. Besides, you can return to manual operation manually or via remote control.

► To return to manual operation:

- Tap the "Local" button in the upper left corner of the screen.
- VXI-11 protocol: Use `&GTL` interface message.

17.6 Remote control - status reporting system

The status reporting system stores all information on the current operating state of the instrument, and on errors that have occurred. This information is stored in the status registers and in the error queue. Both can be queried via `STATus...` commands.

17.6.1 Hierarchy of status registers

As shown in the following figure, the status information is of hierarchical structure.

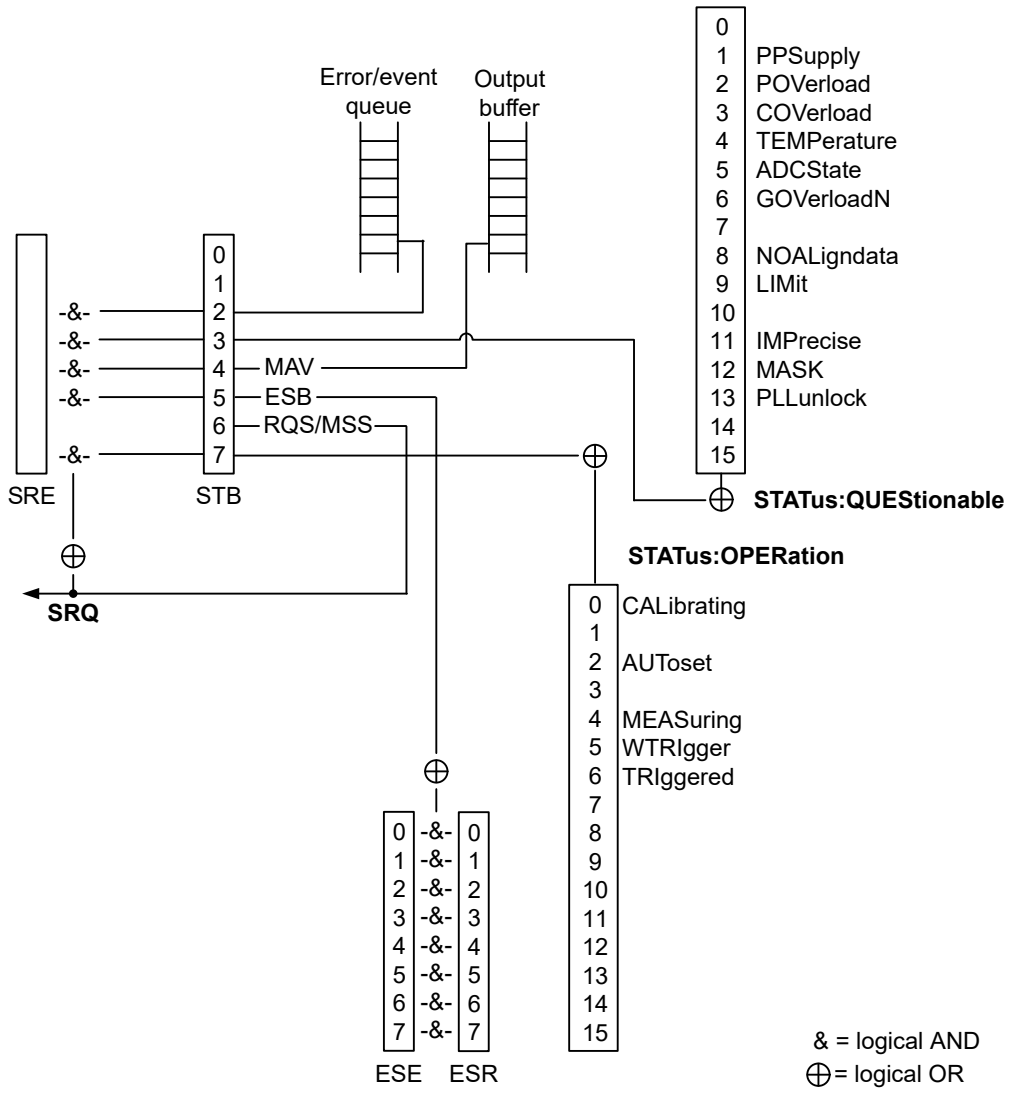

Figure 17-2: Overview of the status registers hierarchy

- **STB, SRE**
  The STatus Byte (`STB`) register and its associated mask register Service Request Enable (`SRE`) form the highest level of the status reporting system. The `STB` provides a rough overview of the instrument status, collecting the information of the lower-level registers.
- **ESR and SCPI registers**
  The STB receives its information from the following registers:
  - The Event Status Register (`ESR`) with the associated mask register standard Event Status Enable(`ESE`).
  - The `STATus:OPERation` and `STATus:QUEStionable` registers are defined by SCPI and contain detailed information on the instrument.
- **Output buffer**

The output buffer contains the messages that the instrument returns to the controller. It is not part of the status reporting system but determines the value of the MAV bit in the STB and thus is represented in the overview.

All status registers have the same internal structure.

17.6.2 Structure of a SCPI status register

The STATus:OPERation and the STATus:QUEStionable SCPI status registers consists of five parts.

The individual bits are independent of each other, i.e. each hardware status is assigned a bit number, which is valid for all five parts. Bit 15 (the most significant bit) is set to zero for all parts. Thus, the contents of the register parts can be processed by the controller as positive integers.

Description of the five status register parts

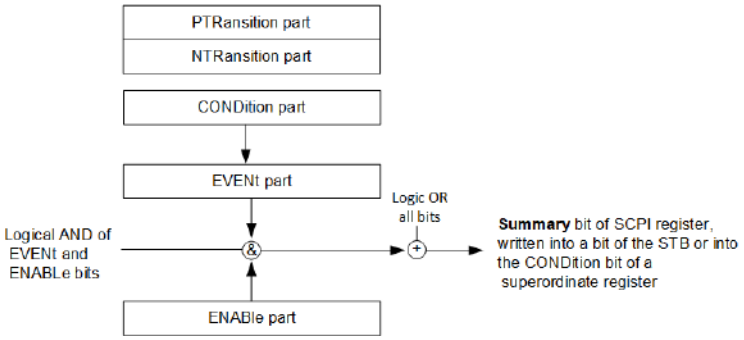

The five parts of a SCPI status register have different properties and functions:

- **CONDition**
  The CONDition part reflects the current instrument status. For summary bits, the CONDition bit mirrors the sum of the enabled EVENt bits of the next lower register.
  This register part can only be read, but not written into or cleared. Its contents are not affected by reading.
- **PTRansition / NTRansition**
  The two transition register parts define which state transition of the CONDition part (none, 0 to 1, 1 to 0 or both) is stored in the EVENt part.
  The **Positive-TRansition** part acts as a transition filter. When a bit of the CONDition part is changed from 0 to 1, the associated PTR bit decides whether the EVENt bit is set to 1.
  - PTR bit =1: the EVENt bit is set.
  - PTR bit =0: the EVENt bit is not set.

  All positive transitions are enabled by default.
  This part can be written into and read as required. Its contents are not affected by reading.

The **Negative-TRansition** part also acts as a transition filter. When a bit of the CONDition part is changed from 1 to 0, the associated NTR bit decides whether the EVENt bit is set to 1.

– NTR bit =1: the EVENt bit is set.

– NTR bit =0: the EVENt bit is not set.

All negative transitions are disabled by default.
This part can be written into and read as required. Its contents are not affected by reading.

- **EVENt**
  The EVENt part indicates whether an event has occurred since the last reading. It is the "memory" of the condition part. It allows you to detect the occurrence of events reliably, even if they have changed the state of the CONDition bit for a very brief interval. It only indicates events passed on by the transition filters.
  This part can only be read by the user. **Reading the register clears it.**
- **ENABle**
  The ENABle part determines whether the associated EVENt bit contributes to the summary bit (see below). Each bit of the EVENt part is "ANDed" with the associated ENABle bit (symbol '&'). The results of all logical operations of this part are passed on to the summary bit via an "OR" function (symbol '+').
  ENABle bit = 0: the associated EVENt bit does not contribute to the summary bit
  ENABle bit = 1: if the associated EVENt bit is "1", the summary bit is set to "1" as well.
  This part can be written into and read by the user as required. Its contents are not affected by reading.

17.6.3 Contents of the status registers

17.6.3.1 Status byte (STB) and service request enable register (SRE)

The STatus Byte (STB) is already defined in IEEE 488.2. It provides a rough overview of the instrument status by collecting the pieces of information of the lower registers. A special feature is that bit 6 acts as the sum bit of the remaining bits of the status byte.

The STB can thus be compared with the CONDition part of an SCPI register and assumes the highest level within the SCPI hierarchy.

The STB is read using the command *STB? or a serial poll.

The STatus Byte (STB) is linked to the Service Request Enable (SRE) register. Each bit of the STB is assigned a bit in the SRE. Bit 6 of the SRE is ignored. If a bit is set in the SRE and the associated bit in the STB changes from 0 to 1, a service request (SRQ) is generated. The SRE can be set using the command *SRE and read using the command *SRE?.

Table 17-1: Meaning of the bits used in the status byte

Bit No.	Meaning
0...1	Not used
2	Error Queue not empty The bit is set when an entry is made in the error queue. If this bit is enabled by the SRE, each entry of the error queue generates a service request. Thus an error can be recognized and specified in greater detail by polling the error queue. The poll provides an informative error message. This procedure is to be recommended since it considerably reduces the problems involved with remote control.
3	QUEStionable status register summary bit The bit is set if an `EVENt` bit is set in the `QUEStionable` status register and the associated `ENABle` bit is set to 1. A set bit indicates a questionable instrument status, which can be specified in greater detail by querying the `STATus:QUEStionable` status register.
4	MAV bit (message available) The bit is set if a message is available in the output queue which can be read. This bit can be used to enable data to be automatically read from the instrument to the controller.
5	ESB bit Sum bit of the event status register. It is set if one of the bits in the event status register is set and enabled in the event status enable register. Setting of this bit indicates a serious error which can be specified in greater detail by polling the event status register.
6	MSS bit (main status summary bit) The bit is set if the instrument triggers a service request. This is the case if one of the other bits of this registers is set together with its mask bit in the service request enable register SRE.
7	`STATus:OPERation` status register summary bit The bit is set if an `EVENt` bit is set in the `OPERation` status register and the associated `ENABle` bit is set to 1. A set bit indicates that the instrument is just performing an action. The type of action can be determined by querying the `STATus:OPERation` status register.

17.6.3.2 Event status register (ESR) and event status enable register (ESE)

The ESR is defined in IEEE 488.2. It can be compared with the `EVENt` part of a SCPI register. The event status register can be read out using command `*ESR?`.

The ESE corresponds to the `ENABle` part of a SCPI register. If a bit is set in the ESE and the associated bit in the ESR changes from 0 to 1, the ESB bit in the STB is set.

The ESE register can be set using the command `*ESE` and read using the command `*ESE?`.

Table 17-2: Meaning of the bits used in the event status register

Bit No.	Meaning
0	Operation complete This bit is set on receipt of the command `*OPC` exactly when all previous commands have been executed.
1	Not used

Bit No.	Meaning
2	Query error This bit is set if the controller wants to read data from the instrument without having sent a query. It is also set if the controller does not fetch requested data and sends new instructions to the instrument instead. The cause is often a query that is faulty and hence cannot be executed.
3	Device-dependent error This bit is set if a device-dependent error occurs. An error message with a number between -300 and -399 or a positive error number, which denotes the error in greater detail, is entered into the error queue.
4	Execution error This bit is set if a received command is syntactically correct but cannot be performed for other reasons. An error message with a number between -200 and -300, which denotes the error in greater detail, is entered into the error queue.
5	Command error This bit is set if a command is received, which is undefined or syntactically incorrect. An error message with a number between -100 and -200, which denotes the error in greater detail, is entered into the error queue.
6	User request This bit is set when the instrument is switched over to manual control.
7	Power on (supply voltage on) This bit is set when you turn on the instrument.

17.6.3.3 STATus:OPERation register

In the `CONDition` part, this register contains information on which actions the instrument is executing. In the `EVENt` part, it contains information on which actions the instrument has executed since the last reading.

It can be read using the commands `STATus:OPERation:CONDition?` or `STATus:OPERation[:EVENt]?`, see also Section 18.22.2, "STATus:OPERation register", on page 2303.

Table 17-3: Bits in the STATus:OPERation register

Bit No.	Meaning
0	`CALibrating` This bit is set as long as the instrument is performing a self-alignment.
1	Not used
2	`AUToset` This bit is set while the instrument is performing an auto setup.
3	Not used
4	`MEASuring` The bit is set as long as an acquisition - sampling and postprocessing - is running. In run continuous mode, the bit is always set.

Bit No.	Meaning
5	WTRIgger Available only for single acquisitions or the first acquisition of continuous acquisitions. The wait for trigger status bit indicates that the instrument is ready to trigger, and the pre-trigger time is expired. The bit is set for as long as a measurement is running.
6	TRIggered Available only for single acquisitions or the first acquisition of continuous acquisitions. The triggered status bit indicates that the instrument has been triggered.
7 - 15	Not used

17.6.3.4 STATus:QUEStionable register

This register contains specific information on instrument operation and signal reliability. It can be read using the commands `STATus:QUEStionable:CONDition?` and `STATus:QUEStionable[:EVENt]?`.

The remote commands for the STATus:QUEStionable register are described in Section 18.22, "Status reporting", on page 2301.

Table 17-4: Bits in the STATus:QUEStionable register

Bit No.		Meaning
0	-	For future use.
1	PPSupply	This bit is set if probe power supply overload occurs.
2	POVerload	This bit is set if a probe overload occurs.
3	COVerload	This bit is set if a questionable channel overload occurs.
4	TEMPerature	This bit is set if a questionable temperature occurs.
5	ADCState	The bit is set if the signal is clipped on the upper or lower edge of the screen overflow of the ADC occurs.
6	GOVerload	This bit is set if a generator overload occurs.
7	-	For future use.
8	NOALigndata	This bit is set if no alignment data is available - the instrument is uncalibrated.
9	LIMit	For future use.
10	-	For future use.
11	IMPRecise	This bit is set if the magnitude of the signal is too low to get reliable measurement results.
12	MASK	This bit is set if a mask is violated.

Bit No.		Meaning
13	PLLunlock	This bit is set if a phase-locked loop process is unlocked. There are two reasons: ● external reference is missing or defect ● hardware defect of internal PLL
14	-	For future use.

17.6.3.5 Application of the status reporting system

The purpose of the status reporting system is to monitor the status of one or several instruments in a test system. In particular, it monitors continuous measurements to detect errors in the signal. The controller must receive and evaluate the information of all devices.

The following standard methods are used:

- **Service request**: An SRQ is initiated by the instrument.
- Query of a **specific register** by commands
- Query of the **error queue**

These methods are described in the following sections.

Service request

The instrument can send a service request (SRQ) to the controller. Usually, this service request initiates an interrupt at the controller, to which the control program can react appropriately.

An SRQ is initiated if one or several of bits 2, 3, 4, 5 or 7 of the STB are set and enabled in the SRE. Each of these bits combines the information of a lower-level register, the error queue or the output buffer.

The ENABle parts of the status registers can be set such that arbitrary bits in an arbitrary status register initiate an SRQ. To use service requests effectively, set all bits to "1" in the mask registers SRE and ESE.

The SRQ is the only possibility for the instrument to become active on its own. Configure the instrument so that it initiates a service request if errors occur. And ensure that your program reacts appropriately to service requests.

Query of a register

The STB and ESR registers contain 8 bits, the SCPI registers 16 bits. The contents of a status register are specified and transferred as a single decimal number. Therefore, each bit is assigned a weighted value. The decimal number is calculated as the sum of the weighted values of all bits in the register that are set to 1.

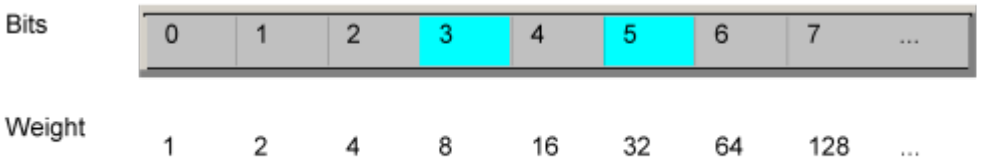

Example:

The decimal value 40 = 32 + 8 indicates that bits no. 3 and 5 in the status register (e.g. the `QUEStionable` status summary bit and the `ESB` bit in the `STatus` byte) are set.

17.6.4 Error queue

Each error state in the instrument leads to an entry in the error queue.

The error queue should be queried after every SRQ in the controller program as the entries describe the cause of an error more precisely than the status registers. Especially in the test phase of a controller program the error queue should be queried regularly since faulty commands from the controller to the instrument are recorded there as well.

17.6.5 Reset values of the status reporting system

The following table contains the commands and events that reset the status reporting system. Only `*RST` and `SYSTem:PRESet` change the functional instrument settings, all others do not.

`DCL` means Device clear and is a GPIB interface command. The command aborts the processing of the commands received and sets the command processing software to a defined initial state and does not change the instrument settings. In a VISA implementation, viClear translates to the DCL interface command.

All other commands are explained in the "Remote control commands" section.

Table 17-5: Resets of the status reporting system

Event	`DCL` **(GPIB)** **viClear (VISA)** **Device clear**	`*RST` **or** `SYSTem:PRESet`	`STATus:PRESet`	`*CLS` **Clear status**
Clear STB, ESR	-	-	-	yes
Clear SRE, ESE	-	-	-	-
Clear EVENt parts of the registers	-	-	-	yes
Clear ENABle parts of all OPERation and QUEStionable registers; Fill ENABle parts of all other registers with "1".	-	-	yes	-

Event	`DCL` **(GPIB)** **viClear (VISA)** **Device clear**	`*RST` **or** `SYSTem:PRESet`	`STATus:PRESet`	`*CLS` **Clear status**
Fill PTRansition parts with "1"; Clear NTRansition parts	-	-	yes	-
Clear error queue	-	-	-	yes
Clear output buffer	yes	1)	1)	1)
Clear command processing and input buffer	yes	-	-	-
1) The first command in a command line that immediately follows a <PROGRAM MESSAGE TERMINATOR> clears the output buffer.				

18 Remote control commands

This section describes all remote commands available for MXO 5 and provides examples and information on how to use the commands.

For general information on remote control of Rohde & Schwarz products via SCPI, refer to www.rohde-schwarz.com/rc-via-scpi.

See also Section 17.5, "Remote control", on page 1033 and Section 17.6, "Remote control - status reporting system", on page 1037 for further information on remote control.

The descriptions of the remote commands assume a MXO 5 with the highest available bandwidth and number of channels. Depending on your model, some of the available command ranges can differ from the values stated in the following sections.

18.1 Conventions used in remote command description

The basics of SCPI command structure, syntax and command parameters are explained in www.rohde-schwarz.com/rc-via-scpi.

SCPI-confirmed commands are explicitly marked in the command descriptions. Commands without SCPI label are instrument-specific. However, their syntax follows SCPI rules.

The following conventions are used in the remote command descriptions:

- *Command usage*
  If not specified otherwise, commands can be used both for setting and for querying parameters.
  If a command can be used for setting or querying only, or if it initiates an event, the usage is stated explicitly.
- *Parameter usage*
  If not specified otherwise, a parameter can be used to set a value, and it is the result of a query.
  Parameters required only for setting are indicated as "Setting parameters".
  Parameters required only to refine a query are indicated as "Query parameters".
  Parameters that are only returned as the result of a query are indicated as "Return values".
- *Conformity*
  Commands that are taken from the SCPI standard are indicated as "SCPI confirmed". All commands used by the MXO 5 follow the SCPI syntax rules.
- *Asynchronous commands*
  A command which does not automatically finish executing before the next command starts executing (overlapping command) is indicated as an "Asynchronous command".
- *Reset values (*RST)*

Default parameter values that are used directly after resetting the instrument (`*RST` command) are indicated as "*RST" values, if available.

- *Default unit*
  The default unit is used for numeric values if no other unit is provided with the parameter.

18.2 Finding the appropriate command

In the following sections, the commands are sorted according to the menu and dialog structure.

A list of all commands in alphabetical order is given in the "List of Commands" at the end of this documentation.

To find the appropriate command for a setting easily, you can use the context help:

1. Enable the "Help" icon on the toolbar.



2. Tap the parameter for which you need information.

   The "Help" window opens and displays the comprehensive description and the corresponding remote command.

3. Tap the remote command link to open the command description.

18.3 Error messages on remote commands

The systerm returns error codes and messages if it cannot execute a command, or if there is no valid result.

Error message	Description
-131, "Invalid suffix"	The measurement with the used suffix is not configured, and similar situations.
-221, "Settings conflict“	The command is not available with current settings. If you change the related settings, the command might work.
-394; "Overload detected"	The result is not trustworthy because the data is not in the ADC range.
-395; "Value not set"	Message is returned, e.g. for a measurement results when the acquisition isn’t complete. It is the default for results after preset or when relevant settings have changed.
-396; "Invalid data"	The acquisition is complete, but some requirements are not met that are required to calculate the result.

Error message	Description
-397; "Not available"	The command is not available due to hardware restrictions, missing option, inappropriate probe is connected, and other misfits.
-398; "Operation aborted"	
-399; "Operation failed"	

18.4 Frequently used parameters and suffixes

This chapter describes in general those parameters and suffixes that are used in several subsystems.

18.4.1 Waveform parameter

Many commands require one of the waveforms to be specified as source. The following table lists all waveforms. For each command using a waveform parameter, the available waveforms are specified in the command description.

Waveform	Description
C1 | C2 | ... | C8 CHAN1 = C1, CHAN2 = C2, CHAN3 = C3, CHAN4 = C4 , CHAN5 = C5, CHAN6 = C6, CHAN7 = C7, CHAN8 = C8	Analog channel waveforms
M1 | M2 | ... | M8	Math waveforms
R1 | R2 | ... | R8	Reference waveforms
XY1 | XY2 | XY3 | XY4	XY-waveforms
SBUS1 | SBUS2 | SBUS3 | SBUS4	Serial buses
D0 | D1 | D2 | ... | D14 | D15	Digital channels
PBUS1 | PBUS2 | PBUS3 | PBUS4	Digital buses
TRK1 | TRK2 | TRK3 | ... | TRK24	Track waveforms
O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11	Analog channels of ScopeSync-connected oscilloscopes. Up to 7 oscilloscope connections can be configured: O2, O3, O4, ... , O8. One of these configurations can be activated at a time.
SPECMAXH1 | SPECMINH1 | SPECNORM1 | SPECAVER1 | SPECMAXH2 | SPECMINH2 | SPECNORM2 | SPECAVER2 | SPECMAXH3 | SPECMINH3 | SPECNORM3 | SPECAVER3 | SPECMAXH4 | SPECMINH4 | SPECNORM4 | SPECAVER4	Spectrum traces: SPECMAXH : Spectrum max hold SPECMINH: Spectrum min hold SPECNORM: Spectrum normal SPECAVER: Spectrum average
PA1QPOWER | PA2QPOWER | ... | PA6QPOWER	Power waveforms of power quality analysis

Waveform	Description
PA1HPOWER1 | PA2HPOWER1 | ... | PA6HPO-WER1|	Power waveforms of power harmonics analysis, only available for standards EN 61000-3-2 Class C and EN 61000-3-2 Class D
PA1SPOWER | PA2SPOWER | ... | PA6SPOWER	Power waveforms of switching loss analysis
PA1IPOWER | PA2IPOWER | ... | PA6IPOWER	Input power waveforms of power efficiency analysis
PA1OPOWER1 | PA2OPOWER1 | ... | PA6OPO-WER1 | PA1OPOWER2 | PA2OPOWER2 | ... | PA6OPOWER2 | PA1OPOWER3 | PA2OPOWER3 | ... | PA6OPOWER3	Output power waveforms of power efficiency analy-sis
PA1TOPOWER | PA2TOPOWER | ... | PA6TOP-OWER	Total power waveforms of efficieny analysis, requires more than 4 channels
PA1SOA | PA2SOA | ... | PA6SOA	Waveform of power safe operating area (SOA) analysis
PTHREE1QPOWER1 | PTHREE2QPOWER1 | ... | PTHREE6QPOWER1 | PTHREE1QPOWER2 | PTHREE2QPOWER2 | ... | PTHREE6QPOWER2 | PTHREE1QPOWER3 | PTHREE2QPOWER3 | ... | PTHREE6QPOWER3 | PTHREE1QTPOWER | PTHREE2QTPOWER | ... | PTHREE6QTPOWER	Power waveforms of 3-phase power quality analysis
PTHREE1HPOWER1 | PTHREE2HPOWER1 | ... | PTHREE6HPOWER1 | PTHREE1HPOWER2 | PTHREE2HPOWER2 | ... | PTHREE6HPOWER2 | PTHREE1HPOWER3 | PTHREE2HPOWER3 | ... | PTHREE6HPOWER3 | PTHREE1HTPOWER | PTHREE2HTPOWER | ... | PTHREE6HTPOWER	Power waveforms of 3-phase power harmonics analysis, only available for standards EN 61000-3-2 Class C and EN 61000-3-2 Class D
PTHREE1EIP1 | PTHREE2EIP1 | ... | PTHREE6EIP1 | PTHREE1EIP2 | PTHREE2EIP2 | ... | PTHREE6EIP2 | PTHREE1EIP3 | PTHREE2EIP3 |... | PTHREE6EIP3 | PTHREE1EITP | PTHREE2EITP | ... | PTHREE6EITP	Input power waveforms of 3-phase power efficiency analysis
PTHREE1EOP1 | PTHREE2EOP1 | ... | PTHREE6EOP1 | PTHREE1EOP2 | PTHREE2EOP2 | ... | PTHREE6EOP2 | PTHREE1EOP3 | PTHREE2EOP3 |... | PTHREE6EOP3 | PTHREE1EOTP | PTHREE2EOTP | ... | PTHREE6EOTP	Output power waveforms of 3-phase power effi-ciency analysis
FREF1 | FREF2 | FREF3 | FREF4	References of frequency analysis waveforms
EYE1 | EYE2 | ... | EYE8	Eye diagrams

18.4.2 Slope parameter

The slope parameter is used with several trigger and search condition commands.

Slope	Description
POSitive	Rising edge, which is a positive voltage change.
NEGative	Falling edge, which is a negative voltage change.
EITHer	Rising as well as the falling edge.

18.4.3 Polarity parameter

The polarity parameter is used with several trigger and search condition commands.

Polarity	Description
POSitive	Positive going pulses.
NEGative	Negative going pulses.
EITHer	Both positive and negative going pulses.

18.5 Programming examples

18.5.1 SmartGrid layout with zoom

The following example uses 3 sine waves, all with frequency 20 MHz and an amplitude of ±0.4 V. The vertical scale is 100 mV/div, the time scale is 20 ns/div.

In the example, 2 layouts are created, waveforms are assigned, and zoom and spectrum are added.

For a description of the commands, see:

- Section 18.8.3, "SmartGrid", on page 1067
- Section 18.12.1, "Zoom", on page 1202
- Section 18.16.1, "Spectrum setup", on page 1309

```
//Prepare: 3 channel signals.
//Enable C1, C2 and C3.
CHAN1:STAT 1
CHAN2:STAT 1
CHAN3:STAT 1
```

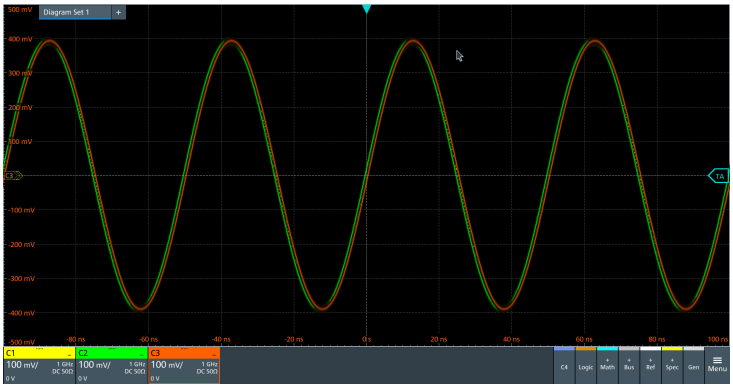

```
//Create new diagrams for C2 and C3.
//Assign sources C2 and C3 to these diagrams.
LAY:DIAG2:ENAB 1
LAY:DIAG2:SOUR C2
LAY:DIAG3:ENAB 1
LAY:DIAG3:SOUR C3
//Create new node (node 2) and assign new diagrams to that node
//Place C2 on top, C3 at bottom
LAY:NODE2:ENAB 1
LAY:NODE2:CHIL1:CONT:TYPE DIAG
LAY:NODE2:CHIL1:CONT:ID 2
LAY:NODE2:CHIL2:CONT:TYPE DIAG
LAY:NODE2:CHIL2:CONT:ID 3
LAY:NODE2:STYP VERT
//Insert node 2 into the base node (initial node)
//Diagram1 is initially located at child 1
LAY:NODE1:CHIL2:CONT:TYPE NODE
LAY:NODE1:CHIL2:CONT:ID 2
//Place both nodes side by side
LAY:NODE1:STYP HOR
```

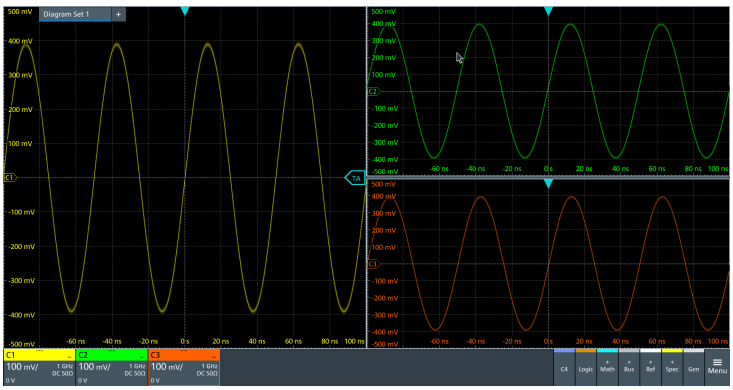

```
//Add zoom to C3. The zoom is located in diagram 3.
LAY:ZOOM:ENAB 1
LAY:ZOOM:SOUR 3
```

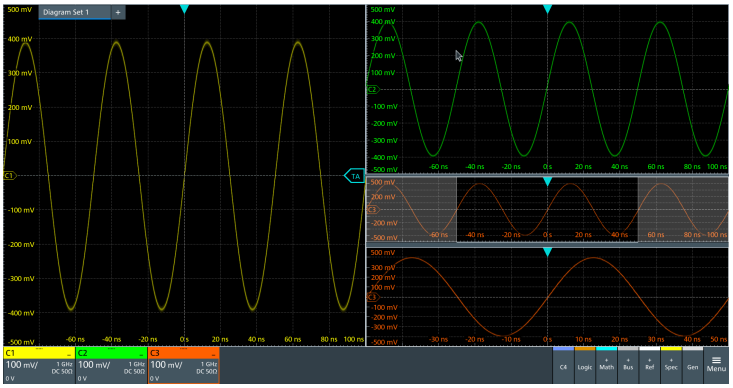

```
//Add a second layout with C1 and spectrum of C1.
//By default, the new layout is empty.
LAY2:ENAB 1
```

```
//Assign C1 to layout 2.
LAY2:DIAG1:SOUR C1
```

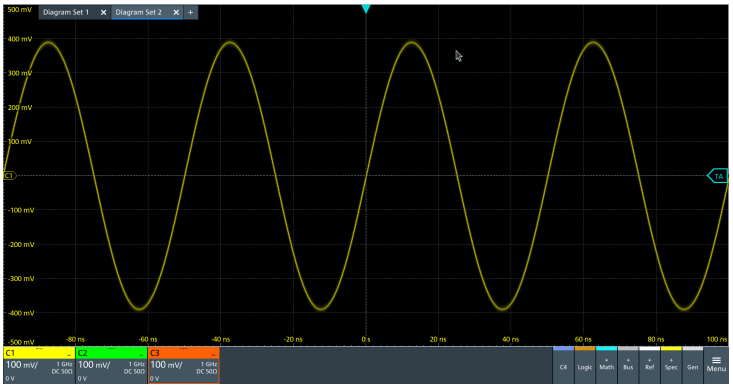

```
//Turn on spectrum of C1.
//By default, the spectrum is set below its analog source, and into the next
//free diagram (here diagram 2).
CALC:SPEC:STAT 1
CALC:SPEC:FREQ:CENT 20e6
CALC:SPEC:FREQ:SPAN 4e6
CALC:SPEC:FREQ:SCAL 15
```

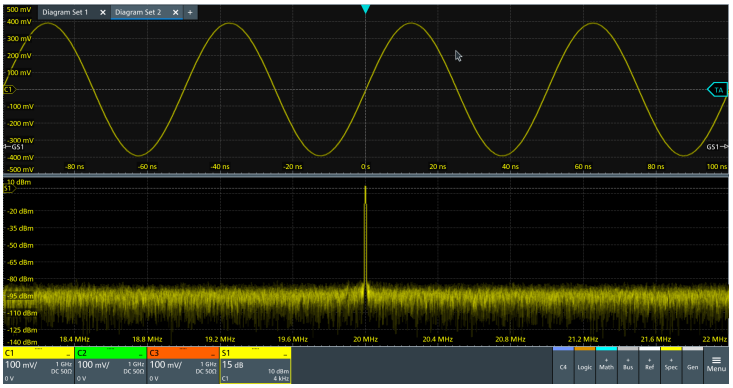

```
//Set C1 and spectrum side by side by changing the split type.
LAY2:NODE1:STYP HOR
```

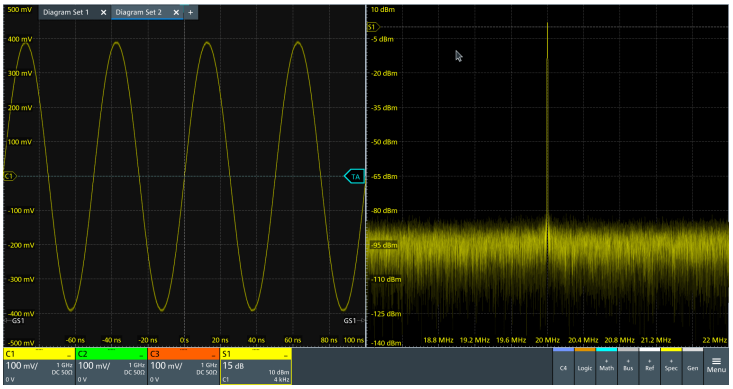

```
//Add zoom to spectrum. The zoom is located in layout 2, in diagram 2.
LAY2:ZOOM:ENAB 1
LAY2:ZOOM:SOUR 2
```

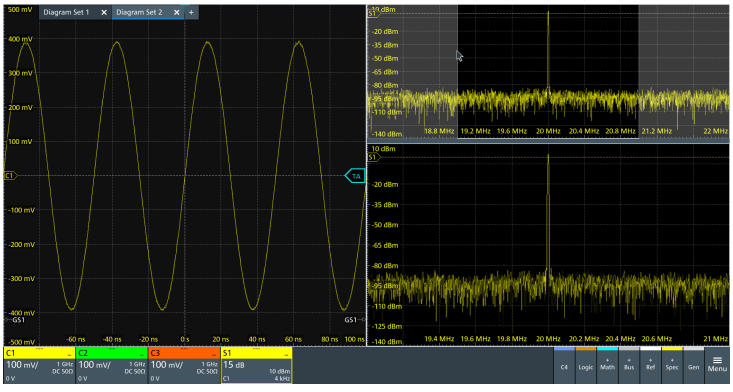

```
//Change zoom area.
LAY2:ZOOM:HOR:MODE REL
LAY2:ZOOM:HOR:REL:START 48
LAY2:ZOOM:HOR:REL:STOP 52
```

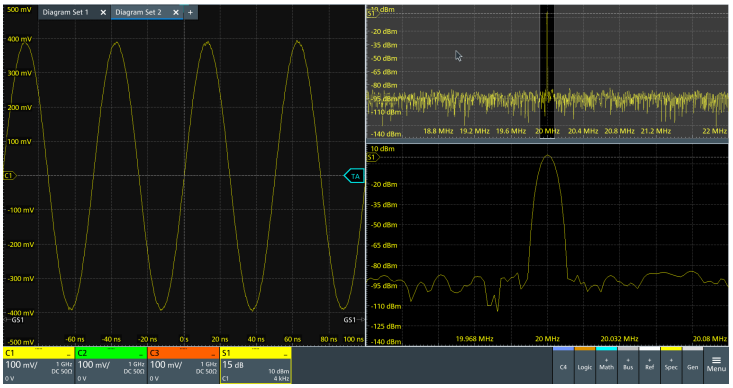

```
//Switch back to first layout (Tab 1).
LAY1:SACT
```

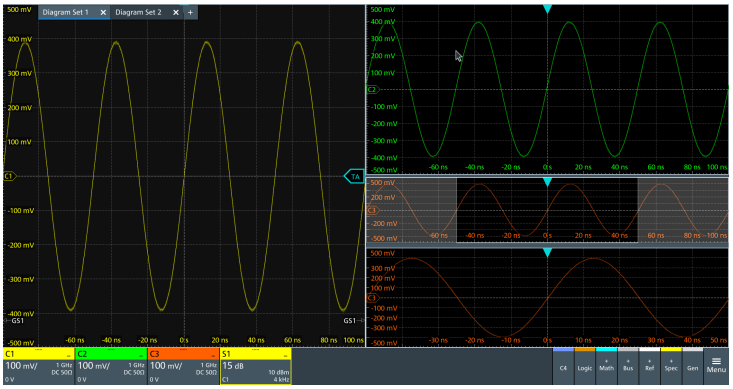

18.5.2 Creating a mask

The example creates a segment in mask 1 and defines the positions of the corner points.

```
:MTESt:ADD                      //Create mask 1
:MTESt:SEGMent:ADD              //Create segment 1 in mask 1
:MTESt:SEGMent:POINt:ADD        //Add 4 points at coordinate 0;0
:MTESt:SEGMent:POINt:ADD
:MTESt:SEGMent:POINt:ADD
:MTESt:SEGMent:POINt:ADD
:MTESt:SEGMent:POINt:COUNt?     //Query the number of points
-->4
:MTESt:SEGMent:POINt:X -60NS    //Set the coordinates of point 1
:MTESt:SEGMent:POINt:Y 50 MV
:MTESt:SEGMent:POINt2:X -40NS   //Set the coordinates of point 2
:MTESt:SEGMent:POINt2:Y -50 MV
:MTESt:SEGMent:POINt3:X -20NS   //Set the coordinates of point 3
:MTESt:SEGMent:POINt4:Y 100 MV  //Set the coordinates of point 4, X = 0
```

18.5.3 Saving screenshots to file

The example saves three display images in png format to the files `Print.png`, `Print_001.png`, and `Print_002.png` on USB flash drive in the directory `/run/media/usb/<MyDriveName>`. For <MyDriveName>, use the name that was defined when formatting of the USB flash drive. To get a correct screenshot, turn on the display first.

Command description in: Section 18.13.8, "Screenshots", on page 1250.

In the following example `*OPC` prevents overlapping execution of asynchronous commands.

► Connect a USB flash drive.

```
SYST:DISP:UPD ON
HCOP:DEST MMEM
HCOP:DEV:LANG PNG
*OPC?
MMEM:NAME '/run/media/usb/<MyDriveName>/Print.png'
HCOP:IMMediate; *OPC?
HCOP:IMM:NEXT; *OPC?
HCOP:IMM:NEXT; *OPC?
```

18.5.4 Data transfer in roll mode

The example shows the effects of `EXPort:WAVeform:SCOPe` and `ACQuire:ROLLmode:OSCapture` in roll mode.

Sample rate mode and record length mode are set to AUTO, and the record length is 10 M points.

```
ACQuire:SRATe:MODE AUTO
ACQuire:POINts:MODE AUTO
ACQuire:POINts?
--> 10000000
ACQuire:ROLLmode:OSCapture OFF
CHANnel1:DATA:HEADer?
--> -5,4.999999,10000000,1     //10 M points of data are transferred
ACQuire:ROLLmode:OSCapture ON
EXPort:WAVeform:SCOPe DISP     //Export of the displayed data
CHANnel1:DATA:HEADer?
--> -5,4.999999,10000000,1     //10 M points of data are transferred
EXPort:WAVeform:SCOPe ALL      //Export of all data
CHANnel1:DATA:HEADer?
--> -31.702346,4.99999999,36702346,1   //36.7 M points of data are transferred
```

18.6 Common commands

Common commands are described in the IEEE 488.2 (IEC 625-2) standard. These commands have the same effect and are employed in the same way on different devices. The headers of these commands consist of "*" followed by three letters. Many common commands are related to the Status Reporting System.

Available common commands:

*CAL? 1057
*CLS 1057
*IDN? 1057
*OPC 1058
*OPT? 1058
*RCL 1058
*RST 1058
*SAV 1059
*SRE 1059
*STB? 1059
*TRG 1059
*TST? 1060
*WAI 1060

***CAL?**

Starts a self-alignment of the instrument, and then queries a status response. Return values ≠ 0 indicate an error.

Return values:

<State> 0: no error
1: alignment failed
2: not aligned, e.g. init
3: device needs longer warmup time before selfalignment can start
4: input signal connected during selfalignment

Usage: Query only

***CLS**

Clear status

Sets the status byte (STB), the standard event register (ESR) and the `EVENt` part of the `QUEStionable` and the `OPERation` registers to zero. The command does not alter the mask and transition parts of the registers. It clears the output buffer.

Usage: Setting only

***IDN?**

Identification

Returns the instrument identification.

Return values:

<ID> "Rohde&Schwarz,<device type>,<part number>/<serial number>,<firmware version>"

Example: `Rohde&Schwarz,MXO5,1802.1008k08/100222,2.00.0.2`
Model assignment:

Usage: Query only

Manual operation: See "Instrument" on page 88

***OPC**

Operation complete

Sets bit 0 in the event status register when all preceding commands have been executed. This bit can be used to initiate a service request. The query writes a "1" into the output buffer when all preceding commands have been executed, which is useful for command synchronization.

***OPT?**

Option identification query

Queries the options included in the instrument. For a list of all available options and their description, refer to the specifications document.

Return values:

<Options> The query returns a list of options. The options are returned at fixed positions in a comma-separated string. A zero is returned for options that are not installed.

Usage: Query only

***RCL** <Number>

Recall

Loads the instrument settings from an intermediate memory identified by the specified number. The instrument settings can be stored to this memory using the command `*SAV` with the associated number.

The stored instrument settings do not include waveform generator settings.

It also activates the instrument settings which are stored in a file and loaded using `MMEMory:LOAD:STATe`.

***RST**

Reset

Sets the instrument to a default status. The default settings are indicated in the description of commands. Default settings are fixed, they are *not* changed by user-defined preset.

The command does not affect the waveform generator settings. To reset the generator, use `WGENerator<wg>:PRESet`.

Usage: Setting only

***SAV** <Number>

Save

Stores the current instrument settings under the specified number in an intermediate memory. The settings can be recalled using the command `*RCL` with the associated number.

Waveform generator settings are not included.

To transfer the stored instrument settings in a file, use the command `:MMEM:STOR:STAT`.

***SRE** <Contents>

Service request enable

Sets the service request enable register to the indicated value. This command determines under which conditions a service request is triggered.

Parameters:

<Contents> Contents of the service request enable register in decimal form. Bit 6 (MSS mask bit) is always 0.

Range: 0 to 255

***STB?**

Status byte query

Reads the contents of the status byte in decimal form.

Usage: Query only

***TRG**

Trigger

Triggers all actions waiting for a trigger event. In particular, *TRG generates a manual trigger signal. This common command complements the commands of the `TRIGger` subsystem.

`*TRG` corresponds to the `INITiate:IMMediate` command.

Usage: Event

***TST?**

Self-test query

Initiates self-tests of the instrument and returns an error code.

Return values:

<ErrorCode> **integer > 0 (in decimal format)**
An error occurred.

0
No errors occurred.

Usage: Query only

Manual operation: See "Run tests" on page 119

***WAI**

Wait to continue

Prevents servicing of the subsequent commands until all preceding commands have been executed and all signals have settled (see also command synchronization and `*OPC`).

Usage: Event

18.7 General remote settings

This section describes commands that affect many other remote commands in different applications of the MXO 5.

FORMat[:DATA] 1060
FORMat:BORDer 1061
FORMat:BPATtern 1062
SYSTem:DISPlay:UPDate 1062
SYSTem:DISPlay:MESSage:STATe 1062
SYSTem:DISPlay:MESSage[:TEXT] 1063

FORMat[:DATA] [<Format>],[<Length>]

Selects the data type that is used for transmission of data from analog channels, math and reference waveforms, and some measurement results from the instrument to the controlling computer.

For INT and REAL formats, use `FORMat:BORDer` to set the byte order.

If you need physical data (e.g. in Volt or Ampere) for further analysis, use the floating point formats (REAL) for export. No data conversion is needed.

Parameters:

<Format>,<Length> ASCii | REAL,32 | REAL,64 | INT,8 | INT,16 | INT,32

ASCii
Data values are returned in ASCII format as a list of comma-separated values in floating point format. The length can be omitted. It is 0, which means that the instrument selects the number of digits to be returned. The query returns both values (`ASC,0`).

REAL,32
Physical data in single precision, 32 bit floating point format. The data is stored as binary data (Definite Length Block Data according to IEEE 488.2). Each waveform value is formatted in the 32-Bit IEEE 754 floating point format.
The schema of the result string is as follows:
`#41024<value1><value2>…<value n>`, with:
`#4` = number of digits (= 4 in the example) of the following number
`1024` = number of following data bytes (= 1024 in the example)
`<value>` = 4-byte floating point values
For large data (≥ 1 GB), the result string starts with "#(data length)". The number inside the parentheses indicates the real data length in bytes.

REAL,64
Double precision, 64 bit floating point format.

INT,8 | INT,16 | INT,32
Signed integer data with length 8 bit, 16 bit, or 32 bit.
The result string has the same schema as the REAL format.
For INT,16, you can set the byte order using the command.
For digital channel data, math and histogram data, INT formats are not available.

*RST: ASCii

Example:
```
FORMat:DATA REAL,32
FORMat:DATA?
REAL,32
```

Usage: SCPI confirmed
Asynchronous command

Manual operation: See "Transfer data format" on page 94

FORMat:BORDer <ByteOrder>

Sets the endianness.

The command is only relevant for data in integer and float format.

Parameters:
<ByteOrder> LSBFirst | MSBFirst

LSB first: little endian, least significant byte first
MSB first: big endian, most significant byte first

*RST: LSBFirst

Example: A number in INT32 format is 439041101, which is hex 1A2B3C4D.
With LSBFirst (default), 4D 3C 2B 1A is returned.
With MSBFirst, 1A 2B 3C 4D is returned.

Usage: Asynchronous command

FORMat:BPATtern <BtPattFmt>

Sets the number format for remote bit pattern queries on serial protocols.

Parameters:
<BtPattFmt> DEC | HEX | OCT | BIN | ASCII | ASCii | STRG
*RST: HEX

Usage: Asynchronous command

Manual operation: See "Bit pattern format" on page 94

SYSTem:DISPlay:UPDate <DisplayUpdate>

Defines whether the display is updated while the instrument is in the remote state.
If the display is switched off, the normal GUI is replaced by a static image while the instrument is in the remote state. Switching off the display can speed up the measurement. OFF is the recommended state.

Parameters:
<DisplayUpdate> OFF | ON
`ON| 1`: The display is shown and updated during remote control.
`OFF| 0`: The display shows a static image during remote control.
*RST: OFF

Example: `SYSTem:DISPlay:UPDate 1`
Switch on the display update.

Usage: Asynchronous command

SYSTem:DISPlay:MESSage:STATe <DispMessSt>

Enables and disables the display of an additional text in remote control.

To define the text, use `SYSTem:DISPlay:MESSage[:TEXT]`.

Parameters:
<DispMessSt> OFF | ON
*RST: OFF

Usage: Asynchronous command

SYSTem:DISPlay:MESSage[:TEXT] <DisplayMessage>

Defines an additional text that is displayed during remote control operation.

To enable the text display, use `SYSTem:DISPlay:MESSage:STATe`.

Parameters:
<DisplayMessage>

Usage: Asynchronous command

18.8 Instrument setup

- System 1063
- Network drive mapping 1065
- SmartGrid 1067
- Toolbar 1073
- Annotations 1074
- Appearance 1086
- Display 1091
- Save/Recall 1094
- Preset 1097
- Maintenance 1098

18.8.1 System

SYSTem:COMMunicate:NET[:HOSTname] 1063
SYSTem:DATE 1064
SYSTem:EXIT 1064
SYSTem:FW:FILepath 1064
SYSTem:PRESet 1064
SYSTem:SHUTdown 1065
SYSTem:FW:STARt 1065
SYSTem:TIME 1065

SYSTem:COMMunicate:NET[:HOSTname] <Hostname>

Sets the host name of the instrument, which is required when configuring a network. After changing the host name, you have to reboot the instrument.

The query `SYSTem:COMMunicate:NET:HOSTname?` returns the currently defined host name.

Parameters:
<Hostname> String parameter

Usage: Asynchronous command

Manual operation: See "Host name" on page 89

SYSTem:DATE <Year>,<Month>,<Day>

Sets the date of the internal calendar.

Parameters:

<Year> Year, to be entered as a four-digit number (including the century and millennium information)
Range: 2012 to 2099
Increment: 1
*RST: 2012

<Month> Range: 1 (January) to 12 (December)
Increment: 1
*RST: 1

<Day> Range: 1 to maximum number of days in the specified month
Increment: 1
*RST: 1

Example: `SYSTem:DATE?`
Returned value: `2022,09,28`

Usage: Asynchronous command

SYSTem:EXIT

Starts the shutdown of the firmware.

Usage: Setting only
Asynchronous command

SYSTem:FW:FILepath <FilePath>

Sets the path and the filename of the firmware installation file.

Parameters:

<FilePath> String with path and filename

Usage: SCPI confirmed
Asynchronous command

SYSTem:PRESet

Resets the instrument to the default state, has the same effect as `*RST`.

Usage: Setting only
SCPI confirmed
Asynchronous command

Manual operation: See "Factory preset" on page 114

SYSTem:SHUTdown

Starts the shutdown of the instrument (firmware and operating system).

Usage: Setting only
Asynchronous command

SYSTem:FW:STARt

Starts the firmware update. Before starting, make sure that the correct path is set with `SYSTem:FW:FILepath`.

Usage: Event
SCPI confirmed
Asynchronous command

SYSTem:TIME <Hours>,<Minutes>,<Seconds>

Returns the current time of the clock.

Parameters:

<Hours>	Range:	0 to 24
	Increment:	1
	*RST:	1
<Minutes>	Range:	0 to 59
	Increment:	1
	*RST:	1
<Seconds>	Range:	0 to 59
	Increment:	1
	*RST:	1

Usage: Asynchronous command

18.8.2 Network drive mapping

MMEMory:NDRive<m>:CONNect 1065
MMEMory:NDRive<m>:DCONnect 1066
MMEMory:NDRive<m>:LPATh 1066
MMEMory:NDRive<m>:NPATh 1066
MMEMory:NDRive<m>:PWORd 1066
MMEMory:NDRive<m>:UNAMe 1067

MMEMory:NDRive<m>:CONNect

Connects the remote network folder to the local folder.

Suffix:

<m>	1 to 8, index of the network drive

Usage: Event
Asynchronous command

Manual operation: See "Connect, Disconnect, Connection state" on page 94

MMEMory:NDRive<m>:DCONnect

Disconnects the remote network folder from the local folder.

Suffix:
<m> 1 to 8, index of the network drive

Usage: Event
Asynchronous command

Manual operation: See "Connect, Disconnect, Connection state" on page 94

MMEMory:NDRive<m>:LPATh <LocalPath>

Sets the local folder on the MXO 5, to which the network folder is mapped. With this name, you can access the connected folder on the instrument.

Suffix:
<m> 1 to 8, index of the network drive

Parameters:
<LocalPath> String with the path of the local folder

Usage: Asynchronous command

Manual operation: See "Local folder" on page 93

MMEMory:NDRive<m>:NPATh <FilePath>

Sets the network folder that is mapped to the local folder.

Suffix:
<m> 1 to 8, index of the network drive

Parameters:
<FilePath> String with the full path in UNC syntax, for example, `\\net1\data\team1\osc`.

Usage: Asynchronous command

Manual operation: See "Network folder" on page 93

MMEMory:NDRive<m>:PWORd <Password>

Sets the password that is used to access the network folder.

Note that the SCPI protocol is NOT encrypted, so the password can be read on the network. Use the password at your own risk.

Suffix:
<m> 1 to 8, index of the network drive

Setting parameters:
<Password> String with the password

Usage: Setting only
Asynchronous command

Manual operation: See "User name, Password" on page 93

MMEMory:NDRive<m>:UNAMe <UserName>

Sets the user name that is used to access the network folder.

Suffix:
<m> 1 to 8, index of the network drive

Parameters:
<UserName> String with the user name

Usage: Asynchronous command

Manual operation: See "User name, Password" on page 93

18.8.3 SmartGrid

The following `LAYout` commands configure the SmartGrid. In manual operation, you configure the SmartGrid by drag and drop.See Section 4.7, "Rohde & Schwarz SmartGrid", on page 74.

Table 18-1: Terms and definitions of SmartGrid configuration

Term	Definition
Layout	A layout is a SmartGrid configuration. Several layouts can exist but only one layout is active. By default, layouts are named "Tab <n>" on the display.
Children	A child is an area where data (data table, result table) or waveforms (diagram) are displayed. A node can also be a child. A child can be empty.
Node	A node consists of one or two children. A node is created by default with one child that has content.
Diagram	A diagram displays waveforms, the graphical visualization of data.

LAYout<ly>:COUNt? 1068
LAYout<ly>[:ENABle] 1068
LAYout<ly>:ACTive 1068
LAYout<ly>:SACTive 1069
LAYout<ly>:LABel 1069
LAYout<ly>:DIAGram<da>:COUNt? 1069
LAYout<ly>:DIAGram<da>[:ENABle] 1069
LAYout<ly>:DIAGram<da>:SOURce 1070
LAYout<ly>:DIAGram<da>:LABel 1070

LAYout<ly>:NODE<no>:COUNt? 1070
LAYout<ly>:NODE<no>[:ENABle] 1071
LAYout<ly>:NODE<no>:CHILdren<o>:CONTent<p>:ID 1071
LAYout<ly>:NODE<no>:CHILdren<o>:CONTent<p>:TYPE 1071
LAYout<ly>:NODE<no>:RATio 1072
LAYout<ly>:NODE<no>:STYPe 1072
LAYout<ly>:RESult<n>:HORizontal:RATio 1072
LAYout<ly>:RESult<n>:VERTical:RATio 1073
LAYout<ly>:RPOSition 1073

LAYout<ly>:COUNt?

Returns the number of available layouts, i.e. SmartGrid configurations. By default, they named "Diagram Set" on the display.

You can query the maximum number of layouts with `LAYout:COUNt? MAX`.

Suffix:
<ly> Irrelevant, omit the suffix.

Return values:
<Count> Number of SmartGrid configurations

Usage: Query only
Asynchronous command

LAYout<ly>[:ENABle] <State>

Creates a new SmartGrid configuration and sets it active.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

Parameters:
<State> OFF | ON

Example: See Section 18.5.1, "SmartGrid layout with zoom", on page 1051.

Usage: Asynchronous command

LAYout<ly>:ACTive <ActiveKey>

Sets the active SmartGrid configuration. The query returns the index of the active layout.

Suffix:
<ly> Irrelevant, omit the suffix.

Parameters:
<ActiveKey> Index of the active layout

Usage: Asynchronous command

LAYout<ly>:SACTive

Activates the specified SmartGrid configuration. The command has the same effect as `LAYout<ly>:ACTive` but it has no query, and the active layout is specified by the suffix.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

Example: See Section 18.5.1, "SmartGrid layout with zoom", on page 1051.

Usage: Setting only
Asynchronous command

LAYout<ly>:LABel <Label>

Defines a name for the specified layout (SmartGrid configuration).

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

Parameters:
<Label> String with the layout name

Usage: Asynchronous command

LAYout<ly>:DIAGram<da>:COUNt?

Returns the number of diagrams in a specified layout.

You can query the maximum number of diagrams with `LAYout<ly>:DIAGram:COUNt? MAX`.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<da> Irrelevant, omit the suffix.

Return values:
<Count> Number of diagrams

Usage: Query only
Asynchronous command

LAYout<ly>:DIAGram<da>[:ENABle] <State>

Creates and displays a specified diagram in a specified layout. OFF deletes the diagram.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<da> 1 to 8, index of the diagram

Parameters:
<State> OFF | ON

Example: See Section 18.5.1, "SmartGrid layout with zoom", on page 1051.

Usage: Asynchronous command

LAYout<ly>:DIAGram<da>:SOURce <SignalKeys>

Assigns the waveforms to a diagram.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<da> 1 to 8, index of the diagram

Parameters:
<SignalKeys> String with a comma-separated list of waveforms, e.g. `"C1, C2, M1"`

Example: See Section 18.5.1, "SmartGrid layout with zoom", on page 1051.

Usage: Asynchronous command

LAYout<ly>:DIAGram<da>:LABel <Label>

Defines a name for the specified diagram in a specified layout.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<da> 1 to 8, index of the diagram

Parameters:
<Label> String with the diagram name

Usage: Asynchronous command

LAYout<ly>:NODE<no>:COUNt?

Returns the maximum number of nodes that can be defined. This number is the maximum value for the node suffix.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<no> Irrelevant, omit the suffix.

Return values:
<Count> Maximum value for the node suffix

Usage: Query only
Asynchronous command

LAYout<ly>:NODE<no>[:ENABle] <State>

Creates the specified node in the specified layout. OFF deletes the node and its children.

The query returns whether the specified node exists (1) or not (0).

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<no> Index of the node

Parameters:
<State> OFF | ON

Example: See Section 18.5.1, "SmartGrid layout with zoom", on page 1051.

Usage: Asynchronous command

LAYout<ly>:NODE<no>:CHILdren<o>:CONTent<p>:ID <ID>

Sets the content ID, the number of the specified content type.

For example, the "Diagram5" has Type=DIAGRAM and ID=5.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<no> Index of the node

<o> 1 | 2, child index

<p> Irrelevant, omit the suffix.

Parameters:
<ID> Numeric value

Example: See Section 18.5.1, "SmartGrid layout with zoom", on page 1051.

Usage: Asynchronous command

LAYout<ly>:NODE<no>:CHILdren<o>:CONTent<p>:TYPE <Type>

Sets the content type for a specified child in a specified node: diagram, result table, another node, or empty.

For example, the "Diagram5" has Type=DIAGRAM and ID=5.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<no> Index of the node

<o> 1 | 2, child index

<p> Irrelevant, omit the suffix.

Parameters:

<Type> NONE | DIAG | DIAGRAM | RES | RESULT | NODE
DIAG = DIAGRAM, RES = RESULT
*RST: NONE

Example: See Section 18.5.1, "SmartGrid layout with zoom", on page 1051.

Usage: Asynchronous command

LAYout<ly>:NODE<no>:RATio <SplitRatio>

Sets the size ratio of the two children in the specified node.

Suffix:

<ly> 1 to 8, index of the SmartGrid layout

<no> Index of the node

Parameters:

<SplitRatio> Size ratio of the children. 0.5 assigns 50% of the node size to each child. 0.3 assigns 30% to child 1% and 70% to child 2.
Range: 0 to 1
Increment: 0.0001
*RST: 0.5

Usage: Asynchronous command

LAYout<ly>:NODE<no>:STYPe <SplitType>

Creates a second child (e.g. diagram) in the node if only one child exists, and sets the splitting of the node. If two children exist, only the splitting is set.

Suffix:

<ly> 1 to 8, index of the SmartGrid layout

<no> Index of the node

Parameters:

<SplitType> HOR | HORizontal | VERT | VERTical
HOR = HORizontal, VERT = VERTical
*RST: NONE

Example: See Section 18.5.1, "SmartGrid layout with zoom", on page 1051.

Usage: Asynchronous command

LAYout<ly>:RESult<n>:HORizontal:RATio <SplitRatio>

Sets the horizontal ratio between the cursor result table and the measurement result table inside the result display container if the results are displayed at the bottom.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<n> Suffix is irrelevant, index of the result container

Parameters:
<SplitRatio> Range: 0 to 1
Increment: 0.0001
*RST: 0.8

Usage: Asynchronous command

LAYout<ly>:RESult<n>:VERTical:RATio <SplitRatio>

Sets the vertical ratio between the cursor result table and the other measurement results inside the result display container if the results are displayed on the right or left.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<n> Suffix is irrelevant, index of the result container

Parameters:
<SplitRatio> Range: 0 to 1
Increment: 0.0001
*RST: 0.8

Usage: Asynchronous command

LAYout<ly>:RPOSition <ResultPosition>

Defines the position of the result container inside the layout.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

Parameters:
<ResultPosition> BOTT | BOTTOM | LEFT | RIGH | RIGHT
*RST: NONE

Usage: Asynchronous command

18.8.4 Toolbar

DISPlay:TOOLbar:COUNt? 1073
DISPlay:TOOLbar:DESelect 1074
DISPlay:TOOLbar:RESTore 1074

DISPlay:TOOLbar:COUNt?

Returns the number of tools that are currently assigned to the toolbar.

Return values:

<ToolCount> Range: 0 to 100
Increment: 1
*RST: 8

Usage: Query only
Asynchronous command

DISPlay:TOOLbar:DESelect

Removes all tools from the toolbar.

Usage: Setting only
SCPI confirmed
Asynchronous command

DISPlay:TOOLbar:RESTore

Resets the toolbar to the factory configuration.

Usage: Setting only
SCPI confirmed
Asynchronous command

18.8.5 Annotations

The following `DISPlay:ANNotation` commands configure the annotations. With these commands you can select the type of annotation you want to add, define its value, position and color.

Defining the position of the annotation

With some of the following commands, you can define the position of the annotation on the screen. When defining the position, consider the following:

- A position is defined with two elements. The first element refers to the X dimension and the second to the Y dimension.
- The minimum position (0,0) is the lower left corner of the SmartGrid.

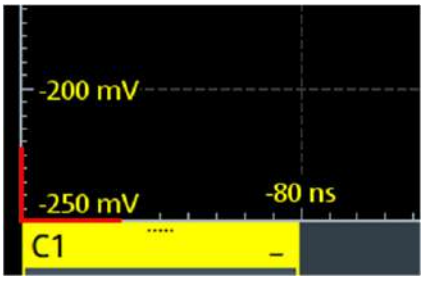

- The maximum position (100,100) is the upper right corner of the SmartGrid.

- The position is defined in percent with a range from 0 to 100. The minimum increment is 0.01.
- An annotation element cannot be moved outside the SmartGrid, the position is limited depending on the size of the annotation element.

Color catalog

When using annotations, you can select their color from a list of predefined colors. The following table gives an overview on the available colors and their command parameter name.

Table 18-2: Color catalog for annotations

Color	Color command parameter	Description
	WHITe	White
	LGRay	Light gray
	MGRay	Middle gray
	GRAY	Gray
	DGRay	Dark gray
	RED	Red
	DORange	Dark orange
	ORANge	Orange
	LORange	Light orange
	YELLow	Yellow

Color	Color command parameter	Description
	DGReen	Dark green
	GREen	Green
	LGReen	Light green
	LBLue	Light blue
	BLUE	Blue
	PINK	Pink
	LPINk	Light pink
	TURQuoise	Turquoise
	LPURple	Light purple
	PURPle	Purple

18.8.5.1 General settings

DISPlay:ANNotation:CLEar 1076
DISPlay:ANNotation:COLor<m>:CATalog? 1076
DISPlay:ANNotation:TRANsparency 1077

DISPlay:ANNotation:CLEar

Removes all existing annotations.

Usage: Setting only
Asynchronous command

DISPlay:ANNotation:COLor<m>:CATalog?

Returns the list of possible colors, see Color catalog for annotations.

Suffix:
<m> Irrelevant, omit the suffix.

Return values:

<ColorCatalog> WHITe | LGRay | MGRay | GRAY | DGRay | RED | DORange | ORANge | LORange | YELLow | DAGReen | GREen | LIGReen | LBLue | BLUE | PINK | LPINk | TURQuoise | LPURple | PURPle

Returned as comma-separated values:
WHIT,LGR,MGR,GRAY,DGR,RED,DOR,ORAN,LOR,YELL,DAGR,GRE,LIGR,LBL,BLUE,PINK,LPIN,TURQ,LPUR,PURP

Usage: Query only
Asynchronous command

DISPlay:ANNotation:TRANsparency <Transparency>

Sets a transparency of all annotations. For high transparency values, you can see the waveform display in the background. For lower transparency values, readability of the annotation improves.

Parameters:

<Transparency>
Range: 0 to 90
Increment: 1
*RST: 0

Usage: Asynchronous command

18.8.5.2 Rectangle

DISPlay:ANNotation:RECTangle<m>:CLEar 1077
DISPlay:ANNotation:RECTangle<m>:COLor 1077
DISPlay:ANNotation:RECTangle<m>:HEIGht 1078
DISPlay:ANNotation:RECTangle<m>:HORizontal:POSition 1078
DISPlay:ANNotation:RECTangle<m>:REMove 1078
DISPlay:ANNotation:RECTangle<m>:VERTical:POSition 1079
DISPlay:ANNotation:RECTangle<m>:WIDTh 1079
DISPlay:ANNotation:RECTangle<m>[:VALue] 1079

DISPlay:ANNotation:RECTangle<m>:CLEar

Deletes all rectangle annotations.

Suffix:

<m> Irrelevant, omit the suffix.

Usage: Setting only
Asynchronous command

DISPlay:ANNotation:RECTangle<m>:COLor <Type>

Sets the color of the indicated rectangle annotation.

Suffix:
<m> 1 to <number of rectangle annotations>
Index of the rectangle annotation

Parameters:
<Type> WHITe | LGRay | MGRay | GRAY | DGRay | RED | DORange | ORANge | LORange | YELLow | DAGReen | GREen | LIGReen | LBLue | BLUE | PINK | LPINk | TURQuoise | LPURple | PURPle

See Color catalog for annotations.

Usage: Asynchronous command

DISPlay:ANNotation:RECTangle<m>:HEIGht <Height>

Sets the height (vertical size) of the rectangle annotation.

Suffix:
<m> 1 to <number of rectangle annotations>
Index of the rectangle annotation

Parameters:
<Height> In % of the screen.

Range: 0 to 100
Increment: 1
0 results in an invisible rectangle, 100 takes the complete height of the screen.

Usage: Asynchronous command

DISPlay:ANNotation:RECTangle<m>:HORizontal:POSition <HorizontalPos>

Sets the horizontal position of the left edge of the rectangle annotation. See also Defining the position of the annotation.

Suffix:
<m> 1 to <number of rectangle annotations>
Index of the rectangle annotation

Parameters:
<HorizontalPos> In % of the screen

Range: 0 to 99

Usage: Asynchronous command

DISPlay:ANNotation:RECTangle<m>:REMove

Removes the specified rectangle annotation from the screen.

Suffix:
<m> 1 to <number of rectangle annotations>
Index of the rectangle annotation

Usage: Setting only
Asynchronous command

DISPlay:ANNotation:RECTangle<m>:VERTical:POSition <VerticalPos>

Sets the vertical position of the lower edge of the rectangle annotation. See also Defining the position of the annotation.

Suffix:
<m> 1 to <number of rectangle annotations>
Index of the rectangle annotation

Parameters:
<VerticalPos> In % of the screen
Range: 0 to 99

Usage: Asynchronous command

DISPlay:ANNotation:RECTangle<m>:WIDTh <Width>

Sets the width (horizontal size) of the rectangle annotation.

Suffix:
<m> 1 to <number of rectangle annotations>
Index of the rectangle annotation

Parameters:
<Width> In % of the screen
Range: 0 to 100
Increment: 1
0 results in an invisible rectangle, 100 takes the complete width of the screen.

Usage: Asynchronous command

DISPlay:ANNotation:RECTangle<m>[:VALue] [<HorizontalPos>],[<VerticalPos>], [<Width>],[<Height>]

Adds a new rectangle annotation, or replaces the annotation if it already exists. If no parameters are defined, the default values are used.

All parameters are given in % of the screen.

Suffix:
<m> *
Index of the created rectangle annotation

Parameters:
<HorizontalPos> Range: 0 to 99

<VerticalPos> Range: 0 to 99

<Width> Range: 0 to 100

<Height> Range: 0 to 100

Usage: Asynchronous command

18.8.5.3 Arrow

DISPlay:ANNotation:ARRow<m>:CLEar....1080
DISPlay:ANNotation:ARRow<m>:COLor....1080
DISPlay:ANNotation:ARRow<m>:DIRection....1080
DISPlay:ANNotation:ARRow<m>:HEIGht....1081
DISPlay:ANNotation:ARRow<m>:HORizontal:POSition....1081
DISPlay:ANNotation:ARRow<m>:REMove....1081
DISPlay:ANNotation:ARRow<m>:VERTical:POSition....1082
DISPlay:ANNotation:ARRow<m>:WIDTh....1082
DISPlay:ANNotation:ARRow<m>[:VALue]....1082

DISPlay:ANNotation:ARRow<m>:CLEar

Deletes all arrow annotations.

Suffix:
<m> Irrelevant, omit the suffix.

Usage: Setting only
Asynchronous command

DISPlay:ANNotation:ARRow<m>:COLor <Type>

Sets the color of the indicated arrow annotation.

Suffix:
<m> 1 to <number of arrow annotations>
Index of the arrow annotation

Parameters:
<Type> WHITe | LGRay | MGRay | GRAY | DGRay | RED | DORange | ORANge | LORange | YELLow | DAGReen | GREen | LIGReen | LBLue | BLUE | PINK | LPINk | TURQuoise | LPURple | PURPle

See Color catalog for annotations.

Usage: Asynchronous command

DISPlay:ANNotation:ARRow<m>:DIRection <Type>

Sets the direction of the indicated arrow annotation from starting point to arrow tip.

Suffix:
<m> 1 to <number of arrow annotations>
Index of the arrow annotation

Parameters:
<Type> TLEFt | TRIGht | BLEFt | BRIGht

TLEFt: to top left
TRIGht: to top right
BLEFt: to bottom left
BRIGht: to bottom right

Usage: Asynchronous command

DISPlay:ANNotation:ARRow<m>:HEIGht <Height>

Sets the height (vertical size) of the arrow annotation.

Suffix:
<m> 1 to <number of arrow annotations>
Index of the arrow annotation

Parameters:
<Height> In % of the screen.
Range: 0 to 100
Increment: 1
0 results in an invisible rectangle, 100 takes the complete height of the screen.

Usage: Asynchronous command

DISPlay:ANNotation:ARRow<m>:HORizontal:POSition <HorizontalPos>

Sets the horizontal position of the left point of the arrow annotation. See also Defining the position of the annotation.

Suffix:
<m> 1 to <number of arrow annotations>
Index of the arrow annotation

Parameters:
<HorizontalPos> In % of the screen
Range: 0 to 99

Usage: Asynchronous command

DISPlay:ANNotation:ARRow<m>:REMove

Removes the specified arrow annotation from the screen.

Suffix:
<m> 1 to <number of arrow annotations>
Index of the arrow annotation

Usage: Setting only
Asynchronous command

DISPlay:ANNotation:ARRow<m>:VERTical:POSition <VerticalPos>

Sets the vertical position of the lower point of the arrow annotation. See also Defining the position of the annotation.

Suffix:
<m> 1 to <number of arrow annotations>
Index of the arrow annotation

Parameters:
<VerticalPos> In % of the screen
Range: 0 to 99

Usage: Asynchronous command

DISPlay:ANNotation:ARRow<m>:WIDTh <Width>

Sets the width (horizontal size) of the arrow annotation.

Suffix:
<m> 1 to <number of arrow annotations>
Index of the arrow annotation

Parameters:
<Width> In % of the screen
Range: 0 to 100
Increment: 1
0 results in an invisible rectangle, 100 takes the complete width of the screen.

Usage: Asynchronous command

DISPlay:ANNotation:ARRow<m>[:VALue] [<HorizontalPos>],[<VerticalPos>], [<Width>],[<Height>]

Adds a new arrow annotation, or replaces the annotation if it already exists. If no parameters are defined, the default values are used.

All parameters are given in % of the screen.

Suffix:
<m> *
Index of the created arrow annotation

Parameters:
<HorizontalPos> Range: 0 to 99
<VerticalPos> Range: 0 to 99
<Width> Range: 0 to 100
<Height> Range: 0 to 100

Usage: Asynchronous command

18.8.5.4 Text

DISPlay:ANNotation:TEXT<m>:CLEar 1083
DISPlay:ANNotation:TEXT<m>:COLor 1083
DISPlay:ANNotation:TEXT<m>:FONTsize 1083
DISPlay:ANNotation:TEXT<m>:HORizontal:POSition 1084
DISPlay:ANNotation:TEXT<m>:REMove 1084
DISPlay:ANNotation:TEXT<m>:VERTical:POSition 1084
DISPlay:ANNotation:TEXT<m>[:VALue] 1084

DISPlay:ANNotation:TEXT<m>:CLEar

Deletes all text annotations.

Suffix:
<m> Irrelevant, omit the suffix.

Usage: Setting only
Asynchronous command

DISPlay:ANNotation:TEXT<m>:COLor <Type>

Sets the color of the indicated text annotation.

Suffix:
<m> 1 to <number of text annotations>
Index of the text annotation

Parameters:
<Type> WHITe | LGRay | MGRay | GRAY | DGRay | RED | DORange | ORANge | LORange | YELLow | DAGReen | GREen | LIGReen | LBLue | BLUE | PINK | LPINk | TURQuoise | LPURple | PURPle

See Color catalog for annotations.

Usage: Asynchronous command

DISPlay:ANNotation:TEXT<m>:FONTsize <Fontsize>

Sets the font size of the text.

Suffix:
<m> 1 to <number of text annotations>
Index of the text annotation

Parameters:
<Fontsize> Range: 12 to 30
Default unit: px

Usage: Asynchronous command

DISPlay:ANNotation:TEXT<m>:HORizontal:POSition <HorizontalPos>

Sets the horizontal position of the left edge of the text annotation. See also Defining the position of the annotation.

Suffix:
<m> 1 to <number of text annotations>
Index of the text annotation

Parameters:
<HorizontalPos> In % of the screen
Range: 0 to 99

Usage: Asynchronous command

DISPlay:ANNotation:TEXT<m>:REMove

Removes the specified text annotation from the screen.

Suffix:
<m> 1 to <number of text annotations>
Index of the text annotation

Usage: Setting only
Asynchronous command

DISPlay:ANNotation:TEXT<m>:VERTical:POSition <VerticalPos>

Sets the vertical position of the lower edge of the text annotation. See also Defining the position of the annotation.

Suffix:
<m> 1 to <number of text annotations>
Index of the text annotation

Parameters:
<VerticalPos> In % of the screen
Range: 0 to 99

Usage: Asynchronous command

DISPlay:ANNotation:TEXT<m>[:VALue] [<Text>]

Adds a new text annotation or replaces the text value of an already existing text annotation.

Suffix:
<m> *
Index of the created text annotation

Parameters:
<Text> String with the annotation text

Usage: Asynchronous command

18.8.5.5 Draw

DISPlay:ANNotation:PLINe<m>:CLEar....1085
DISPlay:ANNotation:PLINe<m>:COLor....1085
DISPlay:ANNotation:PLINe<m>:EXTend....1085
DISPlay:ANNotation:PLINe<m>:REMove....1086
DISPlay:ANNotation:PLINe<m>[:VALue]....1086

DISPlay:ANNotation:PLINe<m>:CLEar

Deletes all draw annotations.

Suffix:
<m> Irrelevant, omit the suffix.

Usage: Setting only
Asynchronous command

DISPlay:ANNotation:PLINe<m>:COLor <Type>

Sets the color of the indicated draw annotation.

Suffix:
<m> 1 to <number of draw annotations>
Index of the drawn annotation.

Parameters:
<Type> WHITe | LGRay | MGRay | GRAY | DGRay | RED | DORange | ORANge | LORange | YELLow | DAGReen | GREen | LIGReen | LBLue | BLUE | PINK | LPINk | TURQuoise | LPURple | PURPle

See Color catalog for annotations.

Usage: Asynchronous command

DISPlay:ANNotation:PLINe<m>:EXTend [<x>],[<y>]

Expands the drawn item with a segment. The x and y position of the existing endpoint is the start point of the new segment. The segments are always straight lines.

Suffix:
<m> 1 to <number of draw annotations>
Index of the draw annotation

Setting parameters:
<x> Horizontal position of the endpoint of the new segment

<y> Vertical position of the endpoint of the new segment

Usage: Setting only
Asynchronous command

DISPlay:ANNotation:PLINe<m>:REMove

Removes the specified draw annotation from the screen.

Suffix:
<m> 1 to <number of draw annotations>
Index of the draw annotation

Usage: Setting only
Asynchronous command

DISPlay:ANNotation:PLINe<m>[:VALue] <x1>,<y1>,<x2>,<y2>,[<xn>]

Adds a new draw annotation, or replaces the annotation if it already exists. If no parameters are defined, the default values are used.

All parameters are given in % of the screen.

Suffix:
<m> *
Index of the created draw annotation

Parameters:
<x1> Horizontal position of the start point of the new line

<y1> Vertical position of the start point of the new line

<x2> Horizontal position of the endpoint of the new line

<y2> Vertical position of the endpoint of the new line

<xn> Vertical or horizontal position of extension points. For each point, you need two values, first the horizontal and second the vertical value. All values are separated by commas.

Usage: Asynchronous command

18.8.6 Appearance

- Waveform colors 1086
- Grid appearance 1088
- Dialog appearance 1090
- Measurement appearance 1091
- Peak list appearance 1091

18.8.6.1 Waveform colors

DISPlay:COLor:SIGNal:CATalog? 1087
DISPlay:COLor:SIGNal:COLor 1087
DISPlay:COLor:SIGNal:ASSign 1087
DISPlay:COLor:SIGNal:USE 1088

DISPlay:COLor:SIGNal:CATalog?

Returns a list of valid signal names. The signal names are needed in other DISPlay:COLor commands to set the <Signal> parameter.

Return values:

<Signals> Comma-separated list of signal names, see Section 18.4.1, "Waveform parameter", on page 1049

Usage: Query only
Asynchronous command

DISPlay:COLor:SIGNal:COLor <Signal>,<Value>
DISPlay:COLor:SIGNal:COLor? <Signal>

Sets the color of the selected waveform.

Parameters:

<Value> Decimal value of the ARGB color. Use the color dialog box on the instrument to get the hex value of the color, and convert the hex value to a decimal value.
0 is fully transparent black.
4278190080 (dec) = FF000000 (hex) is opaque black.
4294967295 (dec) = FFFFFFFF (hex) is opaque white.
To reset the color to its default, use `DISPlay:COLor:SIGNal:COLor <Signal>,DEF`.

Parameters for setting and query:

<Signal> Signal name as returned by `DISPlay:COLor:SIGNal:CATalog?`.

Usage: Asynchronous command

Manual operation: See "Color" on page 102

DISPlay:COLor:SIGNal:ASSign <Signal>,<ColorTable>
DISPlay:COLor:SIGNal:ASSign? <Signal>

Assigns a color table to the source waveform instead of a dedicated color.

Parameters:

<ColorTable> String with the name of the color table.
Valid values are: `"FalseColors"`, `"Spectrum"`, `"SingleEvent"` and `"Temperature"`.

Parameters for setting and query:

<Signal> Signal name as returned by `DISPlay:COLor:SIGNal:CATalog?`.

Usage: Asynchronous command

Manual operation: See "Assigned color table" on page 101

DISPlay:COLor:SIGNal:USE <Signal>,<State>
DISPlay:COLor:SIGNal:USE? <Signal>

If enabled, the selected waveform is displayed according to its assigned color table.

If disabled, the selected color is displayed, and the intensity of the signal color varies according to the cumulative occurrence of the values.

The setting is not available for digital channels and parallel buses.

Parameters:
<State> OFF | ON

Parameters for setting and query:
<Signal> Signal name as returned by `DISPlay:COLor:SIGNal:CATalog?`.

Usage: Asynchronous command

Manual operation: See "Use color table" on page 101

18.8.6.2 Grid appearance

DISPlay:DIAGram:CROSshair 1088
DISPlay:DIAGram:FINegrid 1088
DISPlay:DIAGram:GRID 1089
DISPlay:DIAGram:LABels 1089
DISPlay:DIAGram:XPDivlabel 1089
DISPlay:DIAGram:XFIXed 1089
DISPlay:DIAGram:YFIXed 1090

DISPlay:DIAGram:CROSshair <Crosshair>

If selected, a crosshair is displayed in the diagram area. A crosshair allows you to select a specific data point by its coordinates.

Parameters:
<Crosshair> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Show crosshair" on page 104

DISPlay:DIAGram:FINegrid <ShowFineScale>

If selected, the crosshair is displayed as a ruler with scale markers. If disabled, the crosshair is shown as dashed lines.

Parameters:
<ShowFineScale> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Show fine grid scale" on page 104

DISPlay:DIAGram:GRID <Show>

If selected, a grid is displayed in the diagram area. A grid helps you associate a specific data point to its exact value on the x- or y-axis.

Parameters:
<Show> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Show grid" on page 104

DISPlay:DIAGram:LABels <ShowLabels>

If selected, labels mark values on the x- and y-axes in specified intervals in the diagram.

Parameters:
<ShowLabels> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Show labels" on page 104

DISPlay:DIAGram:XPDivlabel <ShowDivLabelX>

If selected, the time scale value is shown at the diagram bottom instead of the horizontal grid labels. For example, 10 ns/div is shown instead of the values 0, 10, 20, 30... ns.

Parameters:
<ShowDivLabelX> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show div label (x)" on page 104

DISPlay:DIAGram:XFIXed <XGridFixed>

If enabled, the vertical grid lines remain in their position when the horizontal position is changed. Only the values at the grid lines are adapted.

Parameters:
<XGridFixed> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Keep X-grid fixed" on page 104

DISPlay:DIAGram:YFIXed <YGridFixed>

If enabled, the horizontal grid lines remain in their position when the position of the curve is changed. Only the values at the grid lines are adapted.

Fixed horizontal grid lines correspond to the behavior of traditional oscilloscopes.

Parameters:

<YGridFixed> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Keep Y-grid fixed" on page 104

18.8.6.3 Dialog appearance

DISPlay:DIALog:FONTsize....1090
DISPlay:DIALog:TRANsparency....1090
DISPlay:RESult:FONTsize....1090

DISPlay:DIALog:FONTsize <DialogFontSize>

Sets the font size of the text in dialog boxes.

Parameters:

<DialogFontSize> Range: 16 to 25
Increment: 1
*RST: 21

Usage: Asynchronous command

Manual operation: See "Font size (Dialog)" on page 106

DISPlay:DIALog:TRANsparency <DialogTransp>

Sets the transparency of the dialog box background. For high transparency values, you can see the waveform display in the background, and possibly check the effect of the changed setting. For lower transparency values, readability in the dialog box improves.

Parameters:

<DialogTransp> Range: 0 to 70
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Transparency (Dialog)" on page 106

DISPlay:RESult:FONTsize <ResultFontSize>

Sets the font size of the text in result tables.

Parameters:

<ResultFontSize> Range: 16 to 25
Increment: 1
*RST: 21

Usage: Asynchronous command

Manual operation: See "Font size (Result dialog)" on page 106

18.8.6.4 Measurement appearance

DISPlay:MEASurements:LEVels <RefLevelValues>

If selected, the values of the reference levels are displayed.

Parameters:

<RefLevelValues> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show reference level values" on page 107

18.8.6.5 Peak list appearance

CALCulate:SPECtrum<sp>:PLISt:LABel:BORDer....1091

CALCulate:SPECtrum<sp>:PLISt:LABel:BORDer <LabelBorder>

Defines the layout of the labels, full border or none.

Suffix:

<sp> 1 to 4, index of the spectrum

Parameters:

<LabelBorder> NOBorder | FULL
`FULL`: Full border
*RST: FULL

Usage: Asynchronous command

Manual operation: See "Frame type" on page 107

18.8.7 Display

- Persistence....1092
- Signal....1093
- Backlight....1093
- Clear results....1094

18.8.7.1 Persistence

DISPlay:PERSistence:INFinite....1092
DISPlay:PERSistence:RESet....1092
DISPlay:PERSistence:TIME....1092
DISPlay:PERSistence[:STATe]....1092

DISPlay:PERSistence:INFinite <State>

If infinite persistence is enabled, each new waveform point remains on the screen until this option is disabled. Use infinite persistence to display rare events in the signal.

Parameters:

<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Infinite persistence" on page 109

DISPlay:PERSistence:RESet

Resets the display, removing all persistent waveform points.

Usage: Setting only
Asynchronous command

Manual operation: See "Reset" on page 109

DISPlay:PERSistence:TIME <Time>

Sets a time factor that controls how long the waveforms points fade away from the display. Thus, the MXO 5 emulates the persistence of analog phosphor screens.

Parameters:

<Time> Range: 0.05 to 50
Increment: 0.05
*RST: 0.05
Default unit: s

Usage: Asynchronous command

Manual operation: See "Time" on page 109

DISPlay:PERSistence[:STATe] <State>

If enabled, each new data point in the diagram area remains on the screen for the duration defined using `DISPlay:PERSistence:TIME`, or as long as `DISPlay:PERSistence:INFinite` is enabled.

If disabled, the signal value is only displayed as long as it actually occurs.

Parameters:
<State> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Enable" on page 109

18.8.7.2 Signal

DISPlay:INTensity 1093
DISPlay:DIAGram:STYLe 1093

DISPlay:INTensity <Intensity>

The intensity determines the strength of the waveform line in the diagram. Enter a percentage between 0 (not visible) and 100% (strong). The default value is 50%.

Parameters:
<Intensity> Range: 0 to 100
Increment: 1
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "Intensity" on page 110

DISPlay:DIAGram:STYLe <Style>

Selects the style in which the waveform is displayed.

Parameters:
<Style> VECTors | DOTS

VECTors
The individual data points are connected by a line.

DOTS
Only the individual data points are displayed.

*RST: VECTors

Usage: Asynchronous command

Manual operation: See "Waveform style" on page 110

18.8.7.3 Backlight

DISPlay:BACKlight[:BRIGtness] 1094
DISPlay:BACKlight:DIMMing 1094

DISPlay:BACKlight[:BRIGtness] <LCDIntensity>

Sets the background luminosity of the touchscreen.

Parameters:

<LCDIntensity>
Range: 5 to 100
Increment: 1
*RST: 90
Default unit: %

Usage: Asynchronous command

Manual operation: See "Brightness" on page 111

DISPlay:BACKlight:DIMMing <InactiveTime>

Selects a time, after which the monitor brightness is reduced, if the instrument was inactive. Remote control of the instrument is also considered as an activity.

Parameters:

<InactiveTime>
OFF | T1Minute | T2Minutes | T3Minutes | T5Minutes | T10Minutes | T15Minutes | T20Minutes | T25Minutes | T30Minutes | T45Minutes | T1Hour | T2Hours | T3Hours | T4Hours

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Dimm on user inactivity" on page 111

18.8.7.4 Clear results

DISPlay:CLR

Deletes all measurement results including all waveforms and statistics.

Usage: Setting only
Asynchronous command

Manual operation: See "Clear" on page 69

18.8.8 Save/Recall

18.8.8.1 Autonaming

MMEMory:AUTonaming:PREFix 1095
MMEMory:AUTonaming:TIME 1095
MMEMory:AUTonaming:INDex 1095
MMEMory:AUSave:ENABle 1095
MMEMory:AUSave:INTerval 1095

MMEMory:AUTonaming:USERtext 1096
MMEMory:AUTonaming:DEFaultpath 1096
MMEMory:AUTonaming:RESall 1096
MMEMory:AUTonaming:RESPath 1096
MMEMory:AUTonaming:TEXT 1096

MMEMory:AUTonaming:PREFix <MainNmeStemSt>
MMEMory:AUTonaming:TIME <DateTime>
MMEMory:AUTonaming:INDex <NameIndex>

Includes or excludes the prefix/ date/time /index in the filename pattern for automatic filename generation. This name is used as the default filename.

The prefix indicates the type of data that is saved, for example, RefCurve, Settings.

Parameters:

<NameIndex> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Index" on page 121

MMEMory:AUSave:ENABle <EnableAutosave>

Enables the automatic saving of the waveform. You can set the autosave interval with `MMEMory:AUSave:INTerval`.

Parameters:

<EnableAutosave> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Enable autosave" on page 121

MMEMory:AUSave:INTerval <AutosaveIntvl>

Defines the time interval for the automatic saving of the waveform, if `MMEMory:AUSave:ENABle` is set to `ON`.

Parameters:

<AutosaveIntvl> Range: 1 to 360000
Increment: 1
*RST: 300
Default unit: s

Usage: Asynchronous command

Manual operation: See "Enable autosave" on page 121

MMEMory:AUTonaming:USERtext <State>

If enabled, inserts the specified user text after the prefix.

You can define the text with `MMEMory:AUTonaming:TEXT`.

Parameters:

<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "User text" on page 120

MMEMory:AUTonaming:DEFaultpath <Path>

Sets the path where data and settings files are stored. On the instrument, all user data is written to `/home/storage/userData`. You can create subfolders in this folder.

Parameters:

<Path> String parameter

Usage: Asynchronous command

Manual operation: See "Default path for all file operations" on page 121

MMEMory:AUTonaming:RESall

Resets all autonaming settings to the default value, including the path.

Usage: Setting only
Asynchronous command

Manual operation: See "Reset path" on page 121

MMEMory:AUTonaming:RESPath

Resets the path for file operations to the factory default path.

Usage: Setting only
Asynchronous command

Manual operation: See "Reset path" on page 121

MMEMory:AUTonaming:TEXT <NameString>

Defines a text that can be included in the autonaming pattern.

Parameters:

<NameString> String parameter

Usage: Asynchronous command

Manual operation: See "User text" on page 120

18.8.9 Preset

USERdefined:PRESet:NAME 1097
USERdefined:PRESet:OPEN 1097
USERdefined:PRESet:SAVE 1097
USERdefined:PRESet[:ENABle] 1097

USERdefined:PRESet:NAME <Name>

Sets the path, the filename and the file format of the preset file.

Parameters:
<Name> String with path and filename with extension `.set`.

Example: `USERdefined:PRESet:NAME '/home/storage/userData/settings/Preset_SPI.set'`

Manual operation: See "Preset file selection" on page 113

USERdefined:PRESet:OPEN

Opens and loads the preset file that is defined with `USERdefined:PRESet:NAME`.

Usage: Event

Manual operation: See "Preset file selection" on page 113

USERdefined:PRESet:SAVE

Saves the current settings as a preset file. You define the storage location and filename with `USERdefined:PRESet:NAME`.

Usage: Event

Manual operation: See "Save, Open" on page 114

USERdefined:PRESet[:ENABle] <Name>

If enabled, the settings from the selected saveset are restored when the [Preset] key is pressed.

If disabled, [Preset] sets the instrument to the factory defaults.

The saveset to be used as preset file is defined with `USERdefined:PRESet:NAME`.

Parameters:
<Name> OFF | ON
*RST: OFF

Manual operation: See "Enable user-defined preset" on page 113

18.8.10 Maintenance

Use also:

- `*CAL?` on page 1057
- `*TST?` on page 1060

CALibration[:ALL] 1098
CALibration:DATE? 1098
CALibration:TIME? 1098
CALibration:RESult? 1099
SERVice:REPort 1099
SYSTem:APUP 1099

CALibration[:ALL]

`Calibration:ALL` starts the self-alignment process without returning status information. To get the status, use the commands of the operation status register.

`Calibration:ALL?` starts the self-alignment process and returns information on the state of the self-alignment. (Same as `*CAL?`).

The process can take several minutes. Consider your timeout settings.

Return values:
<Result> Numeric status indicator. Return values ≠ 0 indicate an error.

Usage: Asynchronous command

CALibration:DATE?

Returns the date of the last self-alignment.

Return values:
<Date>

Usage: Query only
Asynchronous command

Manual operation: See "Date, Time, Overall alignment state" on page 116

CALibration:TIME?

Returns the time of the last self-alignment.

Return values:
<Time>

Usage: Query only
Asynchronous command

Manual operation: See "Date, Time, Overall alignment state" on page 116

CALibration:RESult?

Returns the result of the last self-alignment and the current alignment status. In remote mode, `*CAL?` provides more detailed information.

Return values:
<ResultState> PASSed | FAILed | NOALigndata
*RST: FAILed

Usage: Query only
Asynchronous command

Manual operation: See "Date, Time, Overall alignment state" on page 116

SERVice:REPort

Creates a service report.

The service report is a ZIP file with a complete bug report, all relevant setup information, reporting and log files, alignment files, and the instrument configuration.

If a USB flash drive is connected, the report is saved on the USB flash drive. Otherwise, the report is saved in the user data folder `/home/storage/userData`.

Usage: Event
Asynchronous command

Manual operation: See "Create report" on page 119

SYSTem:APUP <AutoPowerUp>

If enabled, the instrument powers up automatically when it is connected to the mains voltage.

Parameters:
<AutoPowerUp> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Auto power up" on page 118

18.9 Acquisition and waveform setup

18.9.1 Starting and stopping acquisition

Use the following commands to start and stop acquisitions.

RUNCont....1100
RUN....1100

RUNSingle 1100
SINGle 1100
STOP 1100

RUNCont
RUN

Starts the continuous acquisition.

Usage: Setting only
Asynchronous command

Manual operation: See "[Run / Stop]" on page 49

RUNSingle
SINGle

Starts a defined number of acquisition cycles. The number of cycles is set with `ACQuire:COUNt`.

Usage: Setting only
Asynchronous command

Manual operation: See "[Single]" on page 49

STOP

Stops the running acquisition.

Usage: Event
Asynchronous command

Manual operation: See "[Run / Stop]" on page 49

18.9.2 Horizontal setup

AUToscale 1100
TIMebase:SCALe 1101
TIMebase:RANGe 1101
TIMebase:DIVisions? 1101
TIMebase:HORizontal:POSition 1101
TIMebase:REFerence 1102

AUToscale

Performs an autoset process: analyzes the enabled channel signals, and obtains appropriate horizontal, vertical, and trigger settings to display stable waveforms.

Rohde & Schwarz does not recommend using the autoset in remote control. To adjust the oscilloscope remotely, especially for automated testing applications, use the remote commands that adjust the horizontal, vertical and trigger settings.

Usage: Event
Asynchronous command

TIMebase:SCALe <TimebaseScale>

Sets the horizontal scale, the time per division, for all waveforms in the time domain, for example, channel and math waveforms.

Parameters:
<TimebaseScale> Range: 200E-12 to 10E+3
Increment: 1E-12
*RST: 20E-9
Default unit: s/div

Usage: Asynchronous command

Manual operation: See "[Scale]" on page 51

TIMebase:RANGe <TimebaseRange>

Sets the time of one acquisition, which is the time across the 10 divisions of the diagram: *Acquisition time = Time scale * 10 divisions*.

Parameters:
<TimebaseRange> Range: 2E-9 to 100E+3
Increment: 1E-12
*RST: 200E-9
Default unit: s

Usage: Asynchronous command

Manual operation: See "Timebase range" on page 124

TIMebase:DIVisions?

Returns the number of horizontal divisions on the screen. The number cannot be changed.

Return values:
<HorizDivCnt> *RST: 10

Usage: Query only
Asynchronous command

TIMebase:HORizontal:POSition <Position>

Defines the time distance between the reference point and the trigger point, which is the zero point of the diagram. The horizontal position is also known as trigger offset.

Parameters:

<Position>
Range: -9.95E+6 to 1E+26
Increment: 1E-12
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "[Position]" on page 50

TIMebase:REFerence <RescaleCtrPos>

Sets the position of the reference point in % of the screen. It defines which part of the waveform is shown.

Parameters:

<RescaleCtrPos>
Range: 0 to 100
Increment: 1
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "Reference point" on page 125

18.9.3 Roll mode

TIMebase:ROLL:ENABle....1102
TIMebase:ROLL:MTIMe....1102
ACQuire:ROLLmode:OSCapture....1103
ACQuire:ROLLmode:POINts?....1103
TIMebase:ROLL:STATe?....1103

TIMebase:ROLL:ENABle <Mode>

Selects, if the roll mode is started automatically by the instrument or if it is turned off.

Parameters:

<Mode>
AUTO | OFF
*RST: AUTO

Usage: Asynchronous command

Manual operation: See "Mode" on page 126

TIMebase:ROLL:MTIMe <MinAcquTime>

Sets the minimum acquisition time for the automatic start of the roll mode.

Parameters:

<MinAcquTime> Range: 0.5 to 100000
Increment: 1
*RST: 2
Default unit: s

Usage: Asynchronous command

Manual operation: See "Start roll time" on page 126

ACQuire:ROLLmode:OSCapture <OffScreenCapture>

If enabled, the analyzable waveform in roll mode is extended. You can run the roll mode, stop the acquisition after some time, and analyze the data that is on the display and in the unvisible area on the left.

Parameters:

<OffScreenCapture> OFF | ON
*RST: OFF

Example: See Section 18.5.4, "Data transfer in roll mode", on page 1056.

Usage: Asynchronous command

Manual operation: See "Off screen capture" on page 127

ACQuire:ROLLmode:POINts?

Returns the record length of the roll mode. In roll mode, the complete record is always captured, independently of the displayed waveform.

To process and analyze the complete roll waveform, enable `ACQuire:ROLLmode:OSCapture`.

Return values:

<RecordLength> Range: 0 to 18446744073709551615
Increment: 1
*RST: 0
Default unit: pts

Usage: Query only
Asynchronous command

Manual operation: See "Off screen capture" on page 127

TIMebase:ROLL:STATe?

Returns the status of the roll mode.

Return values:

<State> OFF | ON
*RST: OFF

Usage: Query only
Asynchronous command

Manual operation: See "Mode" on page 126

18.9.4 Acquisition setup

This section describes all remote commands for acquisition.

ACQuire:AVAilable?....1104
ACQuire:AVERage?....1104
ACQuire:COUNt....1105
ACQuire:CURRent?....1105
ACQuire:INTerpolate....1105
ACQuire:POINts[:VALue]....1106
ACQuire:POINts:ARATe?....1106
ACQuire:POINts:MAXimum....1106
ACQuire:POINts:MODE....1106
ACQuire:POMemory?....1107
ACQuire:RESolution?....1107
ACQuire:RLReal?....1108
ACQuire:SRATe[:VALue]....1108
ACQuire:SRATe:MINimum....1108
ACQuire:SRATe:MODE....1108
ACQuire:SRReal?....1109
ACQuire:TYPE....1109

ACQuire:AVAilable?

Number of acquisitions that is saved in the memory and available for history viewing. It is also the number of acquisitions in a fast segmentation acquisition series.

Return values:
<AcquisitionCount> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

Manual operation: See "Available acqs" on page 247

ACQuire:AVERage?

Returns the current number of acquired waveforms that contribute to the average.

Return values:
<CurrAverageCount> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

Manual operation: See "Current average count" on page 134

ACQuire:COUNt <MaxAcqCnt>

Sets the acquisition and average count, which has a double effect:

- It sets the number of waveforms acquired with `RUNSingle`.
- It defines the number of waveforms used to calculate the average waveform.

Parameters:

<MaxAcqCnt>
Range: 1 to 16777215
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "N-single/avg count" on page 133

ACQuire:CURRent?

Returns the current number of acquisitions that have been acquired.

Return values:

<CurrAcqCnt>
Range: 0 to 18446744073709551615
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

ACQuire:INTerpolate <IntpolMd>

Selects the interpolation method.

Parameters:

<IntpolMd>
SINX | LINear | SMHD

LINear
Linear interpolation between two adjacent sample points

SINX
Interpolation with a sin(x)/x function.

SMHD
Sample/Hold causes a histogram-like interpolation.

*RST: SINX

Usage: Asynchronous command

Manual operation: See "Interpolation" on page 134

ACQuire:POINts[:VALue] <RecordLength>

Sets the record length, if `ACQuire:POINts:MODE` is set to `MANual`.

Parameters:

<RecordLength>
Range: 1000 to 1E+9
Increment: 2
*RST: 1000
Default unit: pts

Usage: Asynchronous command

Manual operation: See "Record length" on page 133

ACQuire:POINts:ARATe?

Returns the sample rate of the ADC, before waveform processing. The result is the interleaved sample rate or the non-interleaved one, depending on the channel usage.

Return values:

<ADCSampleRate>
Range: 5 Gsample/s (interleaved), 2,5 Gsample/s (non-interleaved)
Default unit: Hz

Usage: Query only
Asynchronous command

ACQuire:POINts:MAXimum <RecLengthLimit>

Sets the maximum record length, if `ACQuire:POINts:MODE` is set to `AUTO`.

Parameters:

<RecLengthLimit>
Range: 1000 to 1E+9
Increment: 2
*RST: 10E+6
Default unit: pts

Usage: Asynchronous command

Manual operation: See "Record length limit" on page 133

ACQuire:POINts:MODE <RecLengthMode>

Selects the mode of the waveform record length adjustment.

The record length is the number of waveform samples that are stored in one waveform record after processing, including interpolation. It determines the length of the displayed waveform.

Parameters:

<RecLengthMode> AUTO | MANual

AUTO
Record length is determined automatically and changes due to instrument internal adjustments.

MANual
The waveform record length is defined with `ACQuire:POINts[:VALue]`.

*RST: AUTO

Usage: Asynchronous command

Manual operation: See "RL mode" on page 132

ACQuire:POMemory?

The command returns 1 if the memory is not sufficient to process the data with the current settings. To solve the problem, reduce the record length or use automatic record length setting.

Return values:
<OutOfMemory> OFF | ON
*RST: OFF

Usage: Query only
Asynchronous command

Manual operation: See "Record length" on page 133

ACQuire:RESolution? [<MIN | MAX>]

Returns the current resolution.

The resolution is the time between two waveform samples in the waveform record. It considers the processing of the captured samples including interpolation. A fine resolution with low values produces a more precise waveform record. The resolution is the reciprocal of the sample rate.

You can query the minimum and maximum values with `<command>? MIN` and `<command>? MAX`.

Return values:
<Resolution> Range: 1E-15 to 100
Increment: 1E-11
*RST: 200E-12
Default unit: s

Usage: Query only
Asynchronous command

Manual operation: See "Resolution" on page 133

ACQuire:RLReal?

Returns the internal record length used by the acquisition system.

Return values:

<HWRecordLength> Range: 2 to 4294967295
Increment: 1
*RST: 1000
Default unit: pts

Usage: Query only
Asynchronous command

ACQuire:SRATe[:VALue] <SampleRate>

Sets the number of waveform points per second if `ACQuire:SRATe:MODE` is set to MANual.

Parameters:

<SampleRate> Range: 2 to 5E+12
Increment: 1
*RST: 5E+9
Default unit: Sa/s

Usage: Asynchronous command

Manual operation: See "Sample rate" on page 132

ACQuire:SRATe:MINimum <SampleRateMin>

Sets the minimum sample rate if `ACQuire:SRATe:MODE` is set to `AUTO`.

Parameters:

<SampleRateMin> Range: 2 to 5E+12
Increment: 1
*RST: 2
Default unit: Sa/s

Usage: Asynchronous command

Manual operation: See "Min. sample rate" on page 132

ACQuire:SRATe:MODE <SampleRateMode>

Defines how the sample rate is set.

The sample rate considers the samples of the ADC, and the processing of the captured samples including interpolation.

Parameters:

<SampleRateMode> AUTO | MANual

AUTO
Sample rate is determined automatically and changes due to instrument internal adjustments. You can set a minimum sample rate with `ACQuire:SRATe:MINimum`.

MANual
The sample rate is defined with `ACQuire:SRATe[:VALue]`.

*RST: AUTO

Usage: Asynchronous command

Manual operation: See "SR mode" on page 132

ACQuire:SRReal? [<MIN | MAX>]

Returns the sample rate of the waveform after HW processing. Interpolation is not considered. This value is shown in the acquisition label above the diagram.

You can query the minimum and maximum values with `<command>? MIN` and `<command>? MAX`.

Return values:
<HWSampleRate> Range: 2 to ADC sample rate
Increment: 1
*RST: 5E+9
Default unit: Sa/s

Usage: Query only
Asynchronous command

ACQuire:TYPE <AcquMode>

Sets how the waveform is built from the captured samples.

Parameters:
<AcquMode> SAMPle | PDETect | ENVelope | AVERage
*RST: SAMPle

Usage: Asynchronous command

Manual operation: See "Acquisition mode" on page 134

18.9.5 Vertical setup

The channel suffix <ch> selects the input channel that is affected by the command.

CHANnel<ch>:STATe 1110
CHANnel<ch>:SCALe 1110
CHANnel<ch>:RANGe 1110
CHANnel<ch>:OFFSet 1111
CHANnel<ch>:POSition 1111
CHANnel<ch>:COUPling 1112

CHANnel<ch>:INVert 1112
DISPlay:SIGNal:LABel 1112
CHANnel<ch>:SKEW:TIME 1113
CHANnel<ch>:BANDwidth 1113
CHANnel<ch>:EATScale 1114
CHANnel<ch>:EATTenuation 1114
CHANnel<ch>:IMPedance 1115

CHANnel<ch>:STATe <State>

Switches the selected channel signal on or off.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "[C<n>]" on page 52

CHANnel<ch>:SCALe <Scale>

Sets the vertical scale, which defines the displayed amplitude of the selected waveform.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<Scale> Range: 0.001 to 1
Increment: 0.001
*RST: 0.05
Default unit: Depends on the connected probe

Usage: Asynchronous command

Manual operation: See "[Scale]" on page 53

CHANnel<ch>:RANGe <Range>

Sets the voltage range across the 10 vertical divisions of the diagram. The command is an alternative to `CHANnel<ch>:SCALe`.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:

<Range>
Range: 0.01 to 10
Increment: 0.01
*RST: 0.5
Default unit: V/div

Usage: Asynchronous command

CHANnel<ch>:OFFSet <Offset>

Sets the offset voltage, which corrects an offset-affected signal. The vertical center of the selected channel is shifted by the offset value and the signal is repositioned within the diagram.

Suffix:

<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:

<Offset>
Range: -1 to 1
Increment: 0.01
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "[Position]" on page 52

CHANnel<ch>:POSition <Position>

Moves the selected signal up or down in the diagram. While the offset sets a voltage, position is a graphical setting given in divisions. The visual effect is the same as for offset.

Suffix:

<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:

<Position>
Positive values move up the waveform, negative values move it down.

Range: -5 to 5
Increment: 0.02
*RST: 0
Default unit: div

Usage: Asynchronous command

Manual operation: See "[Position]" on page 52

CHANnel<ch>:COUPling <UserCoupling>

Sets the connection of the channel signal, i.e. the input impedance (termination) and a filter (coupling). The command determines what part of the signal is used for waveform analysis and triggering.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<UserCoupling> DC | DCLimit | AC

DC
Connection with 50 Ω termination, passes both DC and AC components of the signal.

DCLimit
Connection with 1 MΩ termination, passes both DC and AC components of the signal.

AC
Connection with 1 MΩ termination through DC capacitor, removes DC and very low-frequency components. The waveform is centered on zero volts.

*RST: Instrument specific

Usage: Asynchronous command

Manual operation: See "Coupling" on page 141

CHANnel<ch>:INVert <InvertChannel>

Turns the inversion of the signal amplitude on or off. To invert means to reflect the voltage values of all signal components against the ground level.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<InvertChannel> OFF | ON

ON: inverted waveform
OFF: normal waveform

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Invert channel" on page 142

DISPlay:SIGNal:LABel <Signal>,<Label>

Defines and assigns a label to the specified channel waveform.

Parameters:
<Label> String with the waveform label

Setting parameters:
<Signal> C1 | C2 | ... | C8

Usage: Asynchronous command

Manual operation: See "Label" on page 142

CHANnel<ch>:SKEW:TIME <Offset>

Sets a skew value to compensate for the delay of the measurement setup or from the circuit specifics that the instrument cannot compensate automatically. It affects only the selected input channel.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<Offset>
Range: -100E-9 to 100E-9
Increment: 1E-13
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "Skew" on page 142

CHANnel<ch>:BANDwidth <BandwidthLimit>

Sets the bandwidth limit. The specified bandwidth indicates the range of frequencies that the instrument can acquire and display accurately with less than 3 dB attenuation. Frequencies above the limit are removed from the signal, and noise is reduced.

To set the bandwidth, use one of the <BandwidthLimit> values. The query returns always a numeric result.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Setting parameters:

<BandwidthLimit> FULL | B20 | B50 | B100 | B200 | B350 | B500 | B700 | B1G | B1G5

Availability depends on the maximum bandwidth of the instrument and installed bandwidth extension options. Instead of the given values, you can also set the corresponding numeric value in Hz.

FULL sets the bandwidth to the maximum bandwidth of the instrument. Bandwidth extension options are considered.
All other values set a bandwidth limit lower than the maximum. The number indicates the bandwidth limit in MHz.

Return values:

<Result> Numeric result in Hz

Usage: Asynchronous command

Manual operation: See "Bandwidth" on page 143

CHANnel<ch>:EATScale <ExtAttScl>

Sets the attenuation scale for an external divider: linear or logarithmic.

Suffix:

<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:

<ExtAttScl> LIN | LOG

*RST: LIN

Usage: Asynchronous command

Manual operation: See "External Attenuation: Scale, Attenuation" on page 144

CHANnel<ch>:EATTenuation <ExtAtt>

Consider a voltage divider that is part of the DUT before the measuring point. The external attenuation is included in the measurement, and the instrument shows the results that would be measured before the divider. External attenuation can be used with all probes.

Suffix:

<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:

<ExtAtt> Values depend on the selected scale (`CHANnel<ch>:EATScale` on page 1114) and the unit of the waveform. See "External Attenuation: Scale, Attenuation" on page 144. Limits below are for linear scale.

Range: 0.005 to 1000000
Increment: 0.01
*RST: 1

Usage: Asynchronous command

Manual operation: See "External Attenuation: Scale, Attenuation" on page 144

CHANnel<ch>:IMPedance <Impedance>

Sets the impedance of the connected probe for power calculations and measurements.

Suffix:

<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:

<Impedance>
Range: 0.1 to 100000
Increment: 1
*RST: 50
Default unit: Ω

Usage: Asynchronous command

Manual operation: See "Impedance" on page 144

18.9.6 Probes

This section describes all remote commands for probes.

- Common probe settings 1115
- Settings for active voltage probes 1120
- Settings for modular probes 1127
- Settings for current probes 1130
- Optical isolated probes 1132
- Probe adapter R&S RT-Z2T 1135
- Probe attributes 1136
- Probe at external trigger input 1139

18.9.6.1 Common probe settings

The probe suffix <ch> selects the input channel to which the probe is connected.

PROBe<ch>:SETup:ATTenuation[:AUTO]? 1116
PROBe<ch>:SETup:ATTenuation:MANual 1116
PROBe<ch>:SETup:ATTenuation:MODE 1116
PROBe<ch>:SETup:ATTenuation:DEFProbe 1117

PROBe<ch>:SETup:ATTenuation:UNIT....1118
PROBe<ch>:SETup:BANDwidth?....1118
PROBe<ch>:SETup:OFFSet:TOMean....1118
PROBe<ch>:SETup:OFFSet:AZERo....1119
PROBe<ch>:SETup:OFFSet:USEautozero....1119
PROBe<ch>:SETup:NAME?....1119
PROBe<ch>:SETup:STATe?....1120
PROBe<ch>:SETup:TYPE?....1120

PROBe<ch>:SETup:ATTenuation[:AUTO]?

Returns the attenuation of a detected or predefined probe.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<Attenuation> Range: 0.0002 to 1000
Increment: 0.1
*RST: 1
Default unit: V/V

Usage: Query only
Asynchronous command

Manual operation: See "Attenuation" on page 146

PROBe<ch>:SETup:ATTenuation:MANual <Attenuation>

Sets the attenuation for an unknown probe.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<Attenuation> Range: 0.0001 to 10000
Increment: 0.1
*RST: 1
Default unit: V/V

Usage: Asynchronous command

Manual operation: See "Attenuation" on page 146

PROBe<ch>:SETup:ATTenuation:MODE <AttenuationMode>

Set the mode to MANual if the instrument does not detect the passive probe.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:

<AttenuationMode> AUTO | MANual

*RST: AUTO

Usage: Asynchronous command

PROBe<ch>:SETup:ATTenuation:DEFProbe <PredefinedProbe>

Selects one of the predefined probes, or a user-defined probe.

Suffix:

<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:

<PredefinedProbe> NONE | ZC10 | ZC20 | ZC30 | ZD01A100 | ZD01A1000 | HZ15 | HZ17 | RTZ25C1 | ZZ80 | ZS10L | ZD02 | ZD08 | ZC02100 | ZC021000 | ZC03 | ZD002A10 | ZD002A100 | ZD003A20 | ZD003A200 | ZC3110 | ZC311 | ZC3101 | ZH03 | ZP1X | CWT15 | CWT30 | CWTMN1 | CMN50HF3 | CMN50HF15 | CMN50HF30 | CMN50HF015 | CMN50HF06 | CWTUM015 | CWTUM06 | CWTUM1 | V1V1 | V10V1 | V100V1 | V200V1 | V1000V1 | V1A1000 | V1A100 | V1A10 | V1A1 | USER

ZC10 | ZC20 | ZC30 | ZC03
Current probes

ZD02 | ZD08 | ZD01A100 | ZD01A1000 | ZD002A10 | ZD002A100 | ZD003A20 | ZD003A200
Active differential probes, attenuation ratio according to the setting on the probe.
A100 = 100:1
A1000 = 1000:1

HZ15 | HZ17
Near field probes (EMI)

ZC02100 | ZC021000 | ZC3110 | ZC311 | ZC3101
Current probes 100 A/V or 1000 A/V according to the setting on the probe.

CWT15 | CWT30 | CWTMN1 |CWTUM015 | CWTUM06 | CWTUM1 | CMN50HF3 | CMN50HF15 | CMN50HF30 | CMN50HF015 | CMN50HF06
PEM Rogowski probes

ZZ80 | ZH03 | ZP1X |
Passive probes

V1V1 | V10V1 | V100V1 | V200V1 | V1000V1 | V1A1000 | V1A100 | V1A10 | V1A1
Common gain and attenuation settings if the probe type is not in the list.

USER
Probe is not detected and not known to the instrument. Set unit and attenuation manually.

*RST: NONE

Usage: Asynchronous command

Manual operation: See "Predefined probe, Type and Name of the probe" on page 146

PROBe<ch>:SETup:ATTenuation:UNIT <Unit>

Returns the unit of the connected probe if the probe is detected or predefined. For unknown probes, you can select the required unit.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<Unit> V | A | W

Voltage probe (V), current probe (A), power probe (W)

*RST: V

Usage: Asynchronous command

Manual operation: See "Vertical unit" on page 146

PROBe<ch>:SETup:BANDwidth?

Returns the bandwidth of the connected probe.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<Bandwidth> Range: 10000 to 20000000000
Increment: 10
*RST: 1500000000
Default unit: Hz

Usage: Query only
Asynchronous command

Manual operation: See "Probe bandwidth" on page 146

PROBe<ch>:SETup:OFFSet:TOMean

Compensates automatically for a DC component of the input signal using the result of a background mean measurement.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Usage: Event
Asynchronous command

Manual operation: See "Set offset to mean" on page 147

PROBe<ch>:SETup:OFFSet:AZERo

Measures the zero error of the probe. Short the signal pin and the ground pin together, then send the command.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Usage: Event
Asynchronous command

Manual operation: See "AutoZero, Use AutoZero" on page 147

PROBe<ch>:SETup:OFFSet:USEautozero <UseAutoZeroOffset>

Corrects the zero error of the probe. The zero error is detected with `PROBe<ch>:SETup:OFFSet:AZERo`.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<UseAutoZeroOffset> OFF | ON
*RST: OFF

Example:
```
PROB2:SET:OFFS:AZER
PROB2:SET:OFFS:USE ON
```
Detects the zero error and uses it for correction.

Usage: Asynchronous command

Manual operation: See "AutoZero, Use AutoZero" on page 147

PROBe<ch>:SETup:NAME?

Queries the name of the probe.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<Name> Name string

Usage: Query only
Asynchronous command

Manual operation: See "Predefined probe, Type and Name of the probe" on page 146

PROBe<ch>:SETup:STATe?

Queries if the probe at the specified input channel is active (detected) or not active (not detected). To switch the probe on, use `CHANnel<ch>:STATe`.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<State> DETected | NDETected
*RST: NDETected

Usage: Query only
Asynchronous command

Manual operation: See "Predefined probe, Type and Name of the probe" on page 146

PROBe<ch>:SETup:TYPE?

Queries the class of the probe.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<Type> String containing the probe class, e.g. None (no probe detected), passive, current, active diff., active single-ended.

Usage: Query only
Asynchronous command

Manual operation: See "Predefined probe, Type and Name of the probe" on page 146

18.9.6.2 Settings for active voltage probes

The probe suffix <ch> selects the input channel to which the probe is connected.

PROBe<ch>:SETup:MODE 1121
PROBe<ch>:SETup:ACCoupling 1122
PROBe<ch>:SETup:CMOFfset 1122
PROBe<ch>:SETup:DISPlaydiff 1122
PROBe<ch>:SETup:EPATtenuator 1123
PROBe<ch>:PMETer:STATe 1123
PROBe<ch>:PMETer:RESults:SINGle? 1123
PROBe<ch>:PMETer:RESults:COMMon? 1124
PROBe<ch>:PMETer:RESults:DIFFerential? 1124

PROBe<ch>:PMETer:RESults:NEGative?....1125
PROBe<ch>:PMETer:RESults:POSitive?....1125
PROBe<ch>:SETup:ADVanced:AUDioverload....1125
PROBe<ch>:SETup:ADVanced:FILTer....1126
PROBe<ch>:SETup:ADVanced:RANGe....1126
PROBe<ch>:SETup:ADVanced:PMToffset....1126

PROBe<ch>:SETup:MODE <Mode>

The micro button is located on the probe head. Pressing this button, you initiate an action on the instrument directly from the probe. The button is disabled during internal automatic processes, for example, during self-alignment, autoset, and level detection.

Select the action that you want to start from the probe.

Suffix:

<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:

<Mode> RCONtinuous | RSINgle | AUToset | AZERo | OTMean | SITFile | NOACtion | FTRiglevel | PRSetup

RCONtinuous
Run continuous: the acquisition is running as long as the probe button is pressed.

RSINgle
Run single: starts a defined number of acquisitions (same as [Single] key).

AUToset
Starts the autoset procedure.

AZERo
AutoZero: performs an automatic correction of the zero error.

OTMean
Set offset to mean: performs an automatic compensation for a DC component of the input signal.

SITFile
Save image to file: saves the display image in a file.

NOACtion
Nothing is started on pressing the micro button.

FTRiglevel
Sets the trigger level automatically to *0.5 * (MaxPeak – MinPeak)*. The function is not available for an external trigger source.

PRSetup
Opens the "Probes Setup" dialog box.

*RST: RCONtinuous

Usage: Asynchronous command

Manual operation: See "MicroButton" on page 149

PROBe<ch>:SETup:ACCoupling <ProbeCouplingAC>

Enables AC coupling in R&S RT-ZPR power rail probes, which removes DC and very low-frequency components. The R&S RT-ZPR probe requires 50 Ω input termination, for which the channel AC coupling is not available. The probe setting allows AC coupling also at 50 Ω inputs.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<ProbeCouplingAC> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "AC Coupling" on page 152

PROBe<ch>:SETup:CMOFfset <CMOffset>

Sets the common-mode offset to compensate for a common DC voltage that is applied to both input sockets (referenced to the ground socket). The setting is available for Rohde & Schwarz differential probes and for modular probes in CM measurement mode.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<CMOffset> Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "CM offset" on page 150

PROBe<ch>:SETup:DISPlaydiff <DisplayDiff>

Selects the voltage to be measured by the R&S ProbeMeter of differential active probes:

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<DisplayDiff> DIFFerential | SINGleended

DIFFerential
Measures differential and common mode voltages

SINGleended
Measures the voltage between the positive/negative signal socket and the ground.

*RST: DIFFerential

Usage: Asynchronous command

Manual operation: See "Display" on page 151

PROBe<ch>:SETup:EPATtenuator <ProbeAttenuator>

If you use an external attenuator together with one of the differential active probes R&S RT-ZD10/20/30, select the attenuator used to include its attenuation in the measurements.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<ProbeAttenuator> NONE | ZA15 | ZA100

*RST: NONE

Usage: Asynchronous command

Manual operation: See "Probe attenuator" on page 151

PROBe<ch>:PMETer:STATe <State>

Activates the integrated R&S ProbeMeter on probes with Rohde & Schwarz probe interface.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<State> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "ProbeMeter" on page 149

PROBe<ch>:PMETer:RESults:SINGle?

Returns the R&S ProbeMeter measurement result of single-ended active Rohde & Schwarz probes, the voltage measured between the probe tip and the ground.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:

<Result> Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 0
Default unit: V

Usage: Query only
Asynchronous command

Manual operation: See "ProbeMeter" on page 149

PROBe<ch>:PMETer:RESults:COMMon?

Returns the R&S ProbeMeter measurement result of differential active R&S probes: the common mode voltage, which is the mean voltage between the signal sockets and the ground socket.

Suffix:

<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:

<Result> Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 0
Default unit: V

Usage: Query only
Asynchronous command

Manual operation: See "ProbeMeter" on page 149

PROBe<ch>:PMETer:RESults:DIFFerential?

Returns the R&S ProbeMeter measurement result of differential active Rohde & Schwarz probes, the differential voltage - the voltage between the positive and negative signal sockets.

Suffix:

<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:

<Result> Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 0
Default unit: V

Usage: Query only
Asynchronous command

Manual operation: See "ProbeMeter" on page 149

PROBe<ch>:PMETer:RESults:NEGative?

Returns the R&S ProbeMeter measurement result of differential active R&S probes, the voltage that is measured between the negative signal socket and the ground.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<Result> Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 0
Default unit: V

Usage: Query only
Asynchronous command

Manual operation: See "ProbeMeter" on page 149

PROBe<ch>:PMETer:RESults:POSitive?

Returns the R&S ProbeMeter measurement result of differential active R&S probes: the voltage that is measured between the positive signal socket and the ground.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<Result> Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 0
Default unit: V

Usage: Query only
Asynchronous command

Manual operation: See "ProbeMeter" on page 149

PROBe<ch>:SETup:ADVanced:AUDioverload <Sound>

Activates the acoustic overrange warning in the probe control box. The command is relevant for R&S RT-ZHD probes.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<Sound> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Audible overrange" on page 154

PROBe<ch>:SETup:ADVanced:FILTer <State>

Activates the lowpass filter in the probe control box. The filter frequency depends on the probe type and is indicated on the probe control box.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<State> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Bandwidth limit" on page 154

PROBe<ch>:SETup:ADVanced:RANGe <ProbeRange>

Sets the voltage range of an R&S RT-ZHD probe.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<ProbeRange> AUTO | MHIGh | MLOW

AUTO
The voltage range is set with `CHANnel<ch>:SCALe`.

MHIGh
Sets the higher voltage range of the connected probe. To query the value, use `PROBe<ch>:SETup:ATTenuation[:AUTO]?`.

MLOW
Sets the lower voltage range of the connected probe. To query the value, use `PROBe<ch>:SETup:ATTenuation[:AUTO]?`.

*RST: AUTO

Usage: Asynchronous command

Manual operation: See "Range" on page 154

PROBe<ch>:SETup:ADVanced:PMToffset

Sets the measured ProbeMeter value as offset. Thus, the value is considered in measurements.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Usage: Setting only
Asynchronous command

Manual operation: See "Set offset to ProbeMeter value, ProbeMeter to offset" on page 152

18.9.6.3 Settings for modular probes

PROBe<ch>:SETup:PRMode 1127
PROBe<ch>:SETup:CMOFfset 1128
PROBe<ch>:SETup:DMOFfset 1128
PROBe<ch>:SETup:NOFFset 1128
PROBe<ch>:SETup:POFFset 1129
PROBe<ch>:SETup:TERM:ADJust 1129
PROBe<ch>:SETup:TERM:MEASure? 1129
PROBe<ch>:SETup:TERM:MODE 1130
PROBe<ch>:SETup:TERM:STATe 1130

PROBe<ch>:SETup:PRMode <MeasMode>

Sets the measurement mode of modular probes.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<PrbMeasMd> DMODe | CMODe | PMODe | NMODe

DMODe
Differential mode input voltage (V_{dm}), the voltage between the positive and negative input terminal.

CMODe
Common mode input voltage (V_{cm}), the mean voltage between the positive and negative input terminal vs. ground.

PMODe
Positive single-ended input voltage (V_p). the voltage between the positive input terminal and ground.

NMODe
Negative single-ended input voltage (V_N). the voltage between the negative input terminal and ground.

*RST: DMODe

Usage: Asynchronous command

Manual operation: See "Probe mode" on page 157

PROBe<ch>:SETup:CMOFfset <CMOffset>

Sets the common-mode offset to compensate for a common DC voltage that is applied to both input sockets (referenced to the ground socket). The setting is available for Rohde & Schwarz differential probes and for modular probes in CM measurement mode.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<CMOffset>
Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "CM offset" on page 150

PROBe<ch>:SETup:DMOFfset <DMOffset>

Sets the differential offset to compensate a DC voltage applied between the positive (V_p) and the negative (V_n) input terminal at the probe tip.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<DMOffset>
Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "DM offset, CM offset, P offset, N offset" on page 158

PROBe<ch>:SETup:NOFFset <NOffset>

Sets the negative offset to compensate a DC voltage applied to the negative input terminal (V_n) referenced to ground.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<NOffset>
Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "DM offset, CM offset, P offset, N offset" on page 158

PROBe<ch>:SETup:POFFset <POffset>

Sets the positive offset to compensate a DC voltage applied to the positive input terminal (V_p) referenced to ground.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<POffset>
Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "DM offset, CM offset, P offset, N offset" on page 158

PROBe<ch>:SETup:TERM:ADJust <VoltageAdj>

Activates control of the termination voltage.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<VoltageAdj>
Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "Adjustment" on page 159

PROBe<ch>:SETup:TERM:MEASure?

Returns the measured common mode voltage.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<VoltageMeas>
Range: -1E+26 to 1E+26
Increment: 0.01
*RST: 0
Default unit: V

Usage: Query only
Asynchronous command

Manual operation: See "Measurement" on page 159

PROBe<ch>:SETup:TERM:MODE <Mode>

Selects the voltage that is used for termination.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<Mode> AUTO | MANual

AUTO: the instrument uses the measured common mode voltage for termination.
MANual: enter the voltage to be used for termination with `PROBe<ch>:SETup:TERM:ADJust`.

*RST: AUTO

Usage: Asynchronous command

Manual operation: See "Mode" on page 159

PROBe<ch>:SETup:TERM:STATe <VoltageState>

Activates control of the termination voltage.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<VoltageState> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "State" on page 159

18.9.6.4 Settings for current probes

The probe suffix <ch> selects the input channel to which the probe is connected.

PROBe<ch>:SETup:GAIN:AUTO? 1131
PROBe<ch>:SETup:GAIN:MANual 1131
PROBe<ch>:SETup:DEGauss 1131
PROBe<ch>:SETup:OFFSet:ZADJust 1132
PROBe<ch>:SETup:OFFSet:STPRobe 1132

PROBe<ch>:SETup:GAIN:AUTO?

Returns the gain of a detected or predefined current probe.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<Gain> Range: 0.001 to 5000
Increment: 0.1
*RST: 1
Default unit: A/V

Usage: Query only
Asynchronous command

Manual operation: See "Gain, Manual gain" on page 155

PROBe<ch>:SETup:GAIN:MANual <Gain>

Sets the gain for an unknown current probe.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<Gain> Range: 0.0001 to 10000
Increment: 0.0001
*RST: 1
Default unit: V/V

Usage: Asynchronous command

Manual operation: See "Gain, Manual gain" on page 155

PROBe<ch>:SETup:DEGauss

Demagnetizes the core if it has been magnetized by switching the power on and off, or by an excessive input. Always carry out demagnetizing before measurement.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Usage: Event
Asynchronous command

Manual operation: See "DeGauss" on page 155

PROBe<ch>:SETup:OFFSet:ZADJust <ZeroAdjustValue>

Set the waveform to zero position. It corrects the effect of a voltage offset or temperature drift. To set the value by the instrument, use `PROBe<ch>:SETup:OFFSet:AZERo`.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<ZroAdjVal>
Range: -100 to 100
Increment: 0.1
*RST: 0
Default unit: %

Usage: Asynchronous command

Manual operation: See "Zero adjust" on page 156

PROBe<ch>:SETup:OFFSet:STPRobe

Saves the zero adjust value in the probe box. If you connect the probe to another channel or to another Rohde & Schwarz oscilloscope, the value is read out again, and you can use the probe without further adjustment.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Usage: Event
Asynchronous command

Manual operation: See "Save to probe" on page 156

18.9.6.5 Optical isolated probes

The commands of this section are relevant for optical isolated probes. The commands are available in firmware version 2.2 and higher.

PROBe<ch>:SETup:ADVanced:UNIT 1132
PROBe<ch>:SETup:ADVanced:PMToffset 1133
PROBe<ch>:SETup:LASer:STATe? 1133
PROBe<ch>:SETup:ALIGnment:GAIN:EXECute 1134
PROBe<ch>:SETup:ALIGnment:ZERO:EXECute 1134
PROBe<ch>:SETup:ALIGnment:WRITe 1134
PROBe<ch>:SETup:ADVanced:RDEFaults 1134
PROBe<ch>:SETup:TIPModel:NAME? 1135
PROBe<ch>:SETup:TIPModel:INFO? 1135

PROBe<ch>:SETup:ADVanced:UNIT <SelectUnit>

Sets the unit of the R&S RT-ZISO signal.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<SelectUnit> V | A | W
*RST: V

Usage: Asynchronous command

Manual operation: See "Select input unit" on page 160

PROBe<ch>:SETup:ADVanced:PMToffset

Sets the measured ProbeMeter value as offset. Thus, the value is considered in measurements.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Usage: Setting only
Asynchronous command

Manual operation: See "Set offset to ProbeMeter value, ProbeMeter to offset" on page 152

PROBe<ch>:SETup:LASer:STATe?

Returns the current status of the laser.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<LaserState> 1 | 2 | 3

1
The laser is working.

2
The laser needs service, but is still working.

3
Defective laser, send to your Rohde & Schwarz service center.

*RST: 1

Usage: Query only
Asynchronous command

Manual operation: See "Laser state" on page 161

PROBe<ch>:SETup:ALIGnment:GAIN:EXECute

Corrects the zero point error and the gain error of the R&S RT-ZISO probe.

To write the alignment result to the non-volatile flash of the probe, use `PROBe<ch>:SETup:ALIGnment:WRITe`.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Usage: Event
Asynchronous command

Manual operation: See "Gain/Zero-error alignment" on page 162

PROBe<ch>:SETup:ALIGnment:ZERO:EXECute

Performs a self-alignment and corrects the zero point error of the R&S RT-ZISO probe.

To write the alignment result to the non-volatile flash of the probe, use `PROBe<ch>:SETup:ALIGnment:WRITe`.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Usage: Event
Asynchronous command

Manual operation: See "Zero-error alignment" on page 162

PROBe<ch>:SETup:ALIGnment:WRITe

The command writes the alignment result to the non-volatile flash of the probe.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Usage: Event
Asynchronous command

PROBe<ch>:SETup:ADVanced:RDEFaults

Resets the zero point and gain error correction to the factory default values.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Usage: Event
Asynchronous command

Manual operation: See "Restore default values" on page 162

PROBe<ch>:SETup:TIPModel:NAME?

Returns the name of the tip module that is connected to the R&S RT-ZISO probe at the specified channel.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<ProbeTipModel> UNKNOWN | Z101 | Z201 | Z202 | Z203 | Z301 | Z302 | NONE
*RST: NONE

Usage: Query only
Asynchronous command

PROBe<ch>:SETup:TIPModel:INFO?

Return detailed information on the tip module that is connected to a R&S RT-ZISO probe.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<TipInfo> Comma-separated list of tip module attributes: Name, Type, PartNumber, SerialNumber, InputCapacity, InputImpedance, InputMin, InputMax, OffsetMin, OffsetMax, Unit, Bandwidth, Attenuation.

Usage: Query only
Asynchronous command

18.9.6.6 Probe adapter R&S RT-Z2T

PROBe<ch>:SETup:ADAPter 1135
PROBe<ch>:SETup:ATTenuation:TDEFprobe 1136

PROBe<ch>:SETup:ADAPter <Type>

Selects the adapter. The query returns the identified adapter type.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<Type> NONE | Z2T
*RST: NONE

Usage: Asynchronous command

PROBe<ch>:SETup:ATTenuation:TDEFprobe <TekPredefProbe>

Selects the Tektronix probe that is connected to the R&S RT-Z2T adapter.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<TekPredefProbe> NONE | P5205A50 | P5205A500 | P5210A100 | P5210A1000 | P6205 | P6241 | P6243 | P6245 | P6246A1 | P6246A10 | P6247A1 | P6247A10 | P6248A1 | P6248A10 | P6249 | P6250A5 | P6250A50 | P6251A5 | P6251A50 | P6701B | P6703B | P6711 | P6713 | TCP202

*RST: NONE

Example:
```
PROBe2:SETup:ADAPter
<-- Z2T
PROBe2:SETup:ATTenuation:TDEFprobe P5205A50
```

Checks the adapter state on channel 2, and selects the probe P5205A50.

Usage: Asynchronous command

18.9.6.7 Probe attributes

PROBe<ch>:ID:PARTnumber? 1136
PROBe<ch>:ID:PRDate? 1136
PROBe<ch>:ID:SRNumber? 1137
PROBe<ch>:ID:SWVersion? 1137
PROBe<ch>:SETup:CAPacitance? 1137
PROBe<ch>:SETup:DCRange:MAX? 1138
PROBe<ch>:SETup:DCRange:MIN? 1138
PROBe<ch>:SETup:IMPedance? 1138

PROBe<ch>:ID:PARTnumber?

Queries the Rohde & Schwarz part number of the probe.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<PartNumber> Part number in a string.

Usage: Query only
Asynchronous command

PROBe<ch>:ID:PRDate?

Queries the production date of the probe.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<ProductionDate> Date in a string.

Usage: Query only
Asynchronous command

PROBe<ch>:ID:SRNumber?

Queries the serial number of the probe.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<SerialNo> Serial number in a string.

Usage: Query only
Asynchronous command

PROBe<ch>:ID:SWVersion?

Queries the version of the probe firmware.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<Softwareversion> Version number in a string.

Usage: Query only
Asynchronous command

PROBe<ch>:SETup:CAPacitance?

Queries the input capacitance of the probe.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<InputCapacity> Range: 1E-13 to 1E-07
Default unit: F

Usage: Query only
Asynchronous command

PROBe<ch>:SETup:DCRange:MAX?

Returns the maximum value of the dynamic DC range.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<DynDCrangeMax> Range: -1E+26 to 1E+26
Increment: 1E-12
*RST: 0
Default unit: V

Usage: Query only
Asynchronous command

PROBe<ch>:SETup:DCRange:MIN?

Returns the minimum value of the dynamic DC range.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<DynDCrangeMin> Range: -1E+26 to 1E+26
Increment: 1E-12
*RST: 0
Default unit: V

Usage: Query only
Asynchronous command

PROBe<ch>:SETup:IMPedance?

Queries the termination of the probe.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<InputImpedance> Range: 0 to 1E+9
Default unit: Ω

Usage: Query only
Asynchronous command

18.9.6.8 Probe at external trigger input

TRPRobe:SETup:ATTenuation:UNIT?....1139
TRPRobe:SETup:ATTenuation[:AUTO]?....1139
TRPRobe:SETup:NAME?....1139
TRPRobe:SETup:STATe?....1139
TRPRobe:SETup:TYPE?....1140

TRPRobe:SETup:ATTenuation:UNIT?

Returns the unit of the probe that is connected to the external trigger input.

Return values:

<PrbAttUnt> V | A | W
*RST: V

Usage: Query only
Asynchronous command

TRPRobe:SETup:ATTenuation[:AUTO]?

Returns the attenuation of the probe that is connected to the external trigger input.

Return values:

<PrbAttMdAuto> Range: 0.001 to 1000
Increment: 0.1
*RST: 1
Default unit: V/V

Usage: Query only
Asynchronous command

TRPRobe:SETup:NAME?

Returns the name of the probe that is connected to the external trigger input.

Return values:

<Name> String parameter

Usage: Query only
Asynchronous command

TRPRobe:SETup:STATe?

Returns the state of the probe that is connected to the external trigger input.

Return values:

<State> DETected | NDETected
*RST: NDETected

Usage: Query only
Asynchronous command

TRPRobe:SETup:TYPE?

Returns the type of the probe that is connected to the external trigger input.

Return values:
<Type> String parameter

Usage: Query only
Asynchronous command

18.9.7 Fast segmentation

ACQuire:SEGMented:MAX <MaxAcqs>

If ON, the instrument acquires the maximum number of segments that can be stored in the memory. The maximum number depends on the current sample rate and record length settings.

If OFF, define the number of segments in a fast segmentation cycle with `ACQuire:COUNt`.

Parameters:
<MaxAcqs> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Acquire maximum" on page 136

ACQuire:SEGMented:STATe <State>

If fast segmentation is enabled, the acquisitions are performed as fast as possible, without processing and displaying the waveforms. When acquisition has been stopped, the data is processed and the latest waveform is displayed. Older waveforms are stored in segments. You can display and analyze the segments using the history.

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Fast segmentation" on page 136

18.9.8 High definition mode

HDEFinition:BFTYpe 1141
HDEFinition:BWIDth 1141
HDEFinition:RESolution? 1141
HDEFinition:STATe 1141

HDEFinition:BFTYpe <BwFilterCharacteristics>

Selects the filter that is used to reduce the bandwidth:

Parameters:

<BwFilterCharacteristics> GAUSsian | BESSel | BRICwall

*RST: BRICwall

Usage: Asynchronous command

Manual operation: See "Filter characteristics" on page 137

HDEFinition:BWIDth <Bandwidth>

Sets the filter bandwidth for the high definition mode.

Parameters:

<Bandwidth>
Range: 1000 to 500E+6
Increment: 1000
*RST: 100E+6
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Bandwidth" on page 137

HDEFinition:RESolution?

Displays the resulting vertical resolution in high definition mode. The higher the filter bandwidth, the lower the resolution.

Return values:

<Resolution>
Range: 0 to 18
Increment: 0.1
*RST: 0
Default unit: bit

Usage: Query only
Asynchronous command

Manual operation: See "Resolution in bits" on page 138

HDEFinition:STATe <State>

Enables high definition mode, which increases the numeric resolution of the waveform signal.

Parameters:

<State> OFF | ON

`ON`: high definition mode
`OFF`: normal oscilloscope mode

*RST: OFF

Usage: Asynchronous command

Manual operation: See "State" on page 137

18.9.9 Waveform data export

To transfer the waveform data to a remote computer, use:

- `CHANnel<ch>:DATA:HEADer?` on page 1254
- `CHANnel<ch>:DATA[:VALues]?` on page 1255

For fast export of several waveforms at once, use `EXPort:WAVeform:DATA[:VALues]?` on page 1263.

For export of waveform data to file, see Section 18.13.4, "Waveform data: export to file", on page 1240.

18.9.10 Reference clock

SENSe[:ROSCillator]:OUTPut[:ENABle] <ReferenceOutput>

Sends the used reference clock signal to the Ref Out 10 MHz connector.

Parameters:

<ReferenceOutput> OFF | ON

*RST: OFF

Usage: SCPI confirmed
Asynchronous command

Manual operation: See "Reference output: Enable" on page 128

SENSe[:ROSCillator]:OUTPut:FREQuency?

Returns the frequency of the output reference signal.

Return values:

<OutputFreq> Range: 10 MHz
Default unit: Hz

Usage: Query only
SCPI confirmed
Asynchronous command

Manual operation: See "Output frequency" on page 128

SENSe[:ROSCillator]:SOURce <RefSource>

Selects the source of the reference clock: internal reference signal of the OCXO, or an external reference signal.

Parameters:

<RefSource> INTernal | EXTernal

*RST: INTernal

Usage: Asynchronous command

Manual operation: See "Active clock: Source" on page 128

18.10 Trigger

Trigger commands use several suffixes.

LEVel<n>, NOISe<m>

The suffix indicates the analog channel for which the command takes effect. C1 has suffix 1, C2 has suffix 2, and so on.

Event<ev>

The suffix indicates the sequence step, for which the command takes effect when you trigger on a sequence. If you trigger on a single event, the suffix = 1 and can be omitted.

- 1 = A-trigger
- 2 = B-trigger
- 3 = R-trigger (reset event)

Asynchronous commands

Some of the commands in the following section are asynchronous. An overlapping or asynchronous command does not automatically finish executing before the next command starts executing. If overlapping commands must be executed in a defined order, e.g. to avoid wrong measurement results, they must be serviced sequentially.

To prevent an overlapping execution of commands, one of the commands `*OPC`, `*OPC?` or `*WAI` can be used after the command or a command set.

For more information, see:

- www.rohde-schwarz.com/rc-via-scpi, section "Command sequence and synchronization"

18.10.1 Common trigger settings

TRIGger:MEVents:MODE....1144
TRIGger:EVENt<ev>:TYPE....1144
TRIGger:EVENt<ev>:LEVel<n>[:VALue]....1144
TRIGger:FINDlevel....1145
TRIGger:EVENt<ev>:SOURce....1145

TRIGger:MEVents:MODE <Class>

Selects, if you want to trigger on a single event, or on a series of events.

Parameters:

<Class> SINGle | SEQuence
*RST: SINGle

Usage: Asynchronous command

Manual operation: See "Trigger on" on page 169

TRIGger:EVENt<ev>:TYPE <Type>

Selects the trigger type. In a trigger sequence, the trigger type is set for each condition.

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:

<Type> EDGE | GLITch | WIDTh | RUNT | WINDow | TIMeout | INTerval | SLEWrate | ANEDge | SETHold | STATe | PATTern

ANEDge = analog edge trigger is the only trigger type if the extern trigger source is used.
For SETHold, also DATatoclock can be used.

*RST: EDGE

Usage: Asynchronous command

Manual operation: See "Type" on page 170

TRIGger:EVENt<ev>:LEVel<n>[:VALue] <Level>

Sets the trigger level for the specified event and source (channel).

If the trigger source is serial bus, the trigger level is set by the thresholds in the protocol configuration.

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

<n> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:

<Level> Range: -10 to 10
Increment: 0.001
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "[Level]" on page 49

TRIGger:FINDlevel

Sets the trigger level automatically to *0.5 * (MaxPeak – MinPeak)*.

In a trigger sequence, "Find level" affects all active events of the sequence (A, B, and R event).

Usage: Event
Asynchronous command

Manual operation: See "Find level" on page 171

TRIGger:EVENt<ev>:SOURce <SourceDetailed>

Selects the source of the trigger signal for the selected trigger event. The trigger source works even if it is not displayed in a diagram.

Available sources depend on the trigger sequence setting. If you trigger on a single event, all inputs can be used as trigger source. If you trigger on a sequence, only analog channels can be set as trigger source for A, B, and R-events.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<SourceDetailed> **C1 | C2 | ... | C8**
Available for single event, and A, B and R-events in a trigger sequence

EXTernanalog | LINE |
Available for single event (suffix 1)

D0 | D1 | D2 | ... | D14 | D15
Digital channels, require MSO option. Available for single event (suffix 1)

SBUS1 | SBUS2 | SBUS3 | SBUS4
Available if one or more serial protocol options are installed. If the hardware trigger is supported for a protocol, triggering on single event is possible with hardware trigger settings. For all protocols, the software trigger is supported in a "A → Serial bus" (event 2).

*RST: C1

Usage: Asynchronous command

Manual operation: See "Source" on page 169

18.10.2 Trigger sequence

TRIGger:MEVents:AEVents 1146
TRIGger:MEVents:SEQuence<se>:COUNt 1146
TRIGger:MEVents:SEQuence<se>:DELay 1146

TRIGger:MEVents:SEQuence<se>:RESet:EVENt....1147
TRIGger:MEVents:SEQuence<se>:RESet:TIMeout:TIME....1147
TRIGger:MEVents:SEQuence<se>:RESet:TIMeout[:ENABle]....1147

TRIGger:MEVents:AEVents <Type>

Selects the type of the trigger sequence.

Parameters:

<Type> AONLy | ABR | AZ | ASB

AONLy = single event, same as `TRIGger:MEVents:MODE SINGle`
ABR = sequence A → B → R
AZ = sequence A → Zone trigger
ASB = sequence A → Serial bus

*RST: AONLy

Usage: Asynchronous command

Manual operation: See "Trigger sequence" on page 172

TRIGger:MEVents:SEQuence<se>:COUNt <Events>

Sets the number of B-trigger conditions to be fulfilled after an A-trigger. The last B-trigger causes the trigger event. The waiting time for B-triggers can be restricted with a reset condition: timeout or reset event.

Suffix:

<se> 1..3
2

Parameters:

<Events> Range: 1 to 2147483647
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "B event count" on page 173

TRIGger:MEVents:SEQuence<se>:DELay <Delay>

Sets the time that the instrument waits after an A-trigger until it recognizes B-triggers.

Suffix:

<se> 1

Parameters:

<Delay> Range: 0 to 50
Increment: 1E-12
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "Delay" on page 173

TRIGger:MEVents:SEQuence<se>:RESet:EVENt <State>

If enabled, the trigger sequence is restarted by the R-trigger condition if the specified number of B-triggers does not occur before the R-trigger conditions are fulfilled.

Suffix:
<se> 3

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Enable reset event" on page 173

TRIGger:MEVents:SEQuence<se>:RESet:TIMeout:TIME <ResetTimeout>

The time the instrument waits for the number of B-events specified using `TRIGger:MEVents:SEQuence<se>:COUNt`, before the sequence is restarted with the A-trigger.

Suffix:
<se> Irrelevant, omit the suffix.

Parameters:
<ResetTimeout> Range: 0 to 50
Increment: 1E-12
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "Enable reset by time, Reset timeout" on page 173

TRIGger:MEVents:SEQuence<se>:RESet:TIMeout[:ENABle] <State>

If set to ON, the instrument waits for the time defined using `TRIGger:MEVents:SEQuence<se>:RESet:TIMeout:TIME` for the specified number of B-events. If no trigger occurs during that time, the sequence is restarted with the A-event.

Suffix:
<se> Irrelevant, omit the suffix.

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Enable reset by time, Reset timeout" on page 173

18.10.3 Edge trigger

TRIGger:EVENt<ev>:EDGE:SLOPe 1148
TRIGger:ANEDge:LEVel 1148
TRIGger:ANEDge:COUPling 1148
TRIGger:ANEDge:FILTer 1149
TRIGger:ANEDge:CUToff:HIGHpass 1149
TRIGger:ANEDge:CUToff:LOWPass 1149
TRIGger:ANEDge:NREJect 1150

TRIGger:EVENt<ev>:EDGE:SLOPe <Slope>

Sets the edge direction for the trigger.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<Slope> POSitive | NEGative | EITHer
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Slope" on page 174

TRIGger:ANEDge:LEVel <ExtTrigLev>

Sets the trigger level for the external trigger source.

Parameters:
<ExtTrigLev> Range: - 5 to 5
Default unit: V

Usage: Asynchronous command

Manual operation: See "Level" on page 170

TRIGger:ANEDge:COUPling <Coupling>

Sets the connection of the external trigger signal, i.e. the input impedance and a termination. The coupling determines what part of the signal is used for triggering.

Parameters:
<Coupling> DC | DCLimit | AC

DC
Connection with 50 Ω termination, passes both DC and AC components of the signal.

DCLimit
Connection with 1 MΩ termination, passes both DC and AC components of the signal.

AC
Connection with 1 MΩ termination through DC capacitor, removes DC and very low-frequency components. The waveform is centered on zero volts.

*RST: DCLimit

Usage: Asynchronous command

Manual operation: See "Coupling" on page 176

TRIGger:ANEDge:FILTer <Filter>

Selects the filter mode for the external trigger signal.

Parameters:
<Filter> OFF | LFReject | RFReject

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Filter, Cut-off" on page 176

TRIGger:ANEDge:CUToff:HIGHpass <CutOffFreq>

Frequencies below the cutoff frequency are rejected, higher frequencies pass the filter.

Parameters:
<CutOffFreq> KHZ5 | KHZ50

KHZ5 = 5 kHz
KHZ50 = 50 kHz

*RST: KHZ50

Usage: Asynchronous command

Manual operation: See "Filter, Cut-off" on page 176

TRIGger:ANEDge:CUToff:LOWPass <CutOffFreq>

Frequencies higher than the cutoff frequency are rejected, lower frequencies pass the filter.

Parameters:
<CutOffFreq> KHZ50 | MHZ50

KHZ50 = 50 kHz
MHZ50 = 50 MHz

*RST: KHZ50

Usage: Asynchronous command

Manual operation: See "Filter, Cut-off" on page 176

TRIGger:ANEDge:NREJect <NoiseReject>

Enables an automatic hysteresis on the trigger level to avoid unwanted trigger events caused by noise.

Parameters:
<NoiseReject> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Trigger noise reject" on page 176

18.10.4 Glitch trigger

TRIGger:EVENt<ev>:GLITch:POLarity....1150
TRIGger:EVENt<ev>:GLITch:RANGe....1150
TRIGger:EVENt<ev>:GLITch:WIDTh....1151

TRIGger:EVENt<ev>:GLITch:POLarity <Polarity>

Sets the polarity of a pulse, which is the direction of the first pulse slope.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<Polarity> POSitive | NEGative | EITHer
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Polarity" on page 177

TRIGger:EVENt<ev>:GLITch:RANGe <RangeMode>

Selects which glitches are identified: shorter or longer than the width specified using `TRIGger:EVENt<ev>:GLITch:WIDTh`.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<RangeMode> SHORter | LONGer

SHORter
Glitches shorter than the specified width are identified.

LONGer
Glitches longer than the specified width are identified.

*RST: SHORter

Usage: Asynchronous command

Manual operation: See "Range" on page 177

TRIGger:EVENt<ev>:GLITch:WIDTh <Width>

Sets the length of a glitch. The instrument triggers on pulses shorter or longer than this value, depending on the value set with `TRIGger:EVENt<ev>:GLITch:RANGe`.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<Width>
Range: 1E-10 to 10000
Increment: 0.0001
*RST: 1E-09
Default unit: s

Usage: Asynchronous command

Manual operation: See "Width" on page 177

18.10.5 Width trigger

TRIGger:EVENt<ev>:WIDTh:DELTa 1151
TRIGger:EVENt<ev>:WIDTh:POLarity 1151
TRIGger:EVENt<ev>:WIDTh:RANGe 1152
TRIGger:EVENt<ev>:WIDTh:WIDTh 1152

TRIGger:EVENt<ev>:WIDTh:DELTa <WidthDelta>

Defines a range around the width value.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<WidthDelta>
Range: 0 to 432
Increment: 5E-10
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "±Delta" on page 179

TRIGger:EVENt<ev>:WIDTh:POLarity <Polarity>

Sets the polarity of a pulse, which is the direction of the first pulse slope.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<Polarity> POSitive | NEGative | EITHer
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Polarity" on page 179

TRIGger:EVENt<ev>:WIDTh:RANGe <RangeMode>

Selects how the range of a pulse width is defined.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<RangeMode> WITHin | OUTSide | SHORter | LONGer
*RST: WITHin

Usage: Asynchronous command

Manual operation: See "Range" on page 179

TRIGger:EVENt<ev>:WIDTh:WIDTh <Width>

Depending on the values of `TRIGger:EVENt<ev>:WIDTh:RANGe` the width sets:

- For the ranges `Within` and `Outside`, the width defines the center of a time range which is defined by the limits "±Delta" (see `TRIGger:EVENt<ev>:WIDTh:DELTa`).
- For the ranges `Shorter` and `Longer`, it defines the maximum and minimum time lapse, respectively.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<Width> Range: 1E-10 to 10000
Increment: 1E-07
*RST: 5E-09
Default unit: s

Usage: Asynchronous command

Manual operation: See "Width" on page 179

18.10.6 Runt trigger

TRIGger:EVENt<ev>:LEVel<n>:RUNT:LOWer....1153
TRIGger:EVENt<ev>:LEVel<n>:RUNT:UPPer....1153
TRIGger:EVENt<ev>:RUNT:DELTa....1153

TRIGger:EVENt<ev>:RUNT:POLarity 1154
TRIGger:EVENt<ev>:RUNT:RANGe 1154
TRIGger:EVENt<ev>:RUNT:WIDTh 1155

TRIGger:EVENt<ev>:LEVel<n>:RUNT:LOWer <Level>

Sets the lower voltage limit.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

<n> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<Level>
Range: -10 to 10
Increment: 0.001
*RST: -0.1
Default unit: V

Usage: Asynchronous command

Manual operation: See "Lower level" on page 181

TRIGger:EVENt<ev>:LEVel<n>:RUNT:UPPer <Level>

Sets the upper voltage limit.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

<n> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<Level>
Range: -10 to 10
Increment: 0.001
*RST: 0.1
Default unit: V

Usage: Asynchronous command

Manual operation: See "Upper level" on page 180

TRIGger:EVENt<ev>:RUNT:DELTa <WidthDelta>

Defines a range around the runt width specified using `TRIGger:EVENt<ev>:RUNT:WIDTh`.

Available if `TRIGger:EVENt<ev>:RUNT:RANGe` is set to `WITHin` or `OUTSide`.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:

<WidthDelta>
Range: 1E-10 to 864
Increment: 1E-07
*RST: 1E-10
Default unit: s

Usage: Asynchronous command

Manual operation: See "±Delta" on page 181

TRIGger:EVENt<ev>:RUNT:POLarity <Polarity>

Sets the polarity of a pulse, which is the direction of the first pulse slope.

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:

<Polarity> POSitive | NEGative | EITHer
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Polarity" on page 177

TRIGger:EVENt<ev>:RUNT:RANGe <Mode>

Defines the time limit of the runt pulse in relation to the `TRIGger:EVENt<ev>:RUNT:WIDTh` and `TRIGger:EVENt<ev>:RUNT:DELTa` settings.

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:

<Mode> ANY | LONGer | SHORter | WITHin | OUTSide

ANY
Triggers on all runts fulfilling the level condition, without time limitation.

LONGer
Triggers on runts longer than the given runt width.

SHORter
Triggers on runts shorter than the given runt width.

WITHin
Triggers if the runt length is inside a given time range. The range is defined by runt width and ±Delta.

OUTSide
Triggers if the runt length is outside a given time range. The range is defined by runt width and ±Delta.

*RST: ANY

Usage: Asynchronous command

Manual operation: See "Range" on page 181

TRIGger:EVENt<ev>:RUNT:WIDTh <Width>

Defines the upper or lower voltage threshold.

It is not available if `TRIGger:EVENt<ev>:RUNT:RANGe` is set to `ANY`.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<Width>
Range: 1E-10 to 10000
Increment: 1E-07
*RST: 5E-09
Default unit: s

Usage: Asynchronous command

Manual operation: See "Runt width" on page 181

18.10.7 Window trigger

TRIGger:EVENt<ev>:LEVel<n>:WINDow:LOWer....1155
TRIGger:EVENt<ev>:LEVel<n>:WINDow:UPPer....1155
TRIGger:EVENt<ev>:WINDow:DELTa....1156
TRIGger:EVENt<ev>:WINDow:RANGe....1156
TRIGger:EVENt<ev>:WINDow:TIME....1157
TRIGger:EVENt<ev>:WINDow:WIDTh....1157

TRIGger:EVENt<ev>:LEVel<n>:WINDow:LOWer <Level>

Sets the lower voltage limit.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

<n> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<Level>
Range: -10 to 10
Increment: 0.001
*RST: -0.1
Default unit: V

Usage: Asynchronous command

Manual operation: See "Lower level" on page 183

TRIGger:EVENt<ev>:LEVel<n>:WINDow:UPPer <Level>

Sets the upper voltage limit.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

<n> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<Level>
Range: 0 to 1000
Increment: 1E-06
*RST: 0.1
Default unit: V

Usage: Asynchronous command

Manual operation: See "Upper level" on page 182

TRIGger:EVENt<ev>:WINDow:DELTa <WidthDelta>

Defines a range around the width value.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<WidthDelta>
Range: 0 to 432
Increment: 5E-10
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "±Delta" on page 183

TRIGger:EVENt<ev>:WINDow:RANGe <RangeMode>

Selects how the signal run is compared with the window.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<RangeMode> ENTer | EXIT | WITHin | OUTSide

ENTer
Triggers when the signal crosses the upper or lower level and thus enters the window made up of these two levels.

EXIT
Triggers when the signal leaves the window.

WITHin
Triggers if the signal stays between the upper and lower level for a specified time. The time is defined with `TRIGger:EVENt<ev>:WINDow:TIME`.

OUTSide
Triggers if the signal stays above the upper level or below the lower level for a specified time. The time is defined with `TRIGger:EVENt<ev>:WINDow:TIME`.

*RST: ENTer

Usage: Asynchronous command

Manual operation: See "Vertical condition" on page 182

TRIGger:EVENt<ev>:WINDow:TIME <TimeRangeMode>

Available for `TRIGger:EVENt<ev>:WINDow:RANGe` = `WITHin` and `OUTSide`.

Selects how the time limit of the window is defined.

You can specify the width with `TRIGger:EVENt<ev>:WINDow:WIDTh` and the delta with `TRIGger:EVENt<ev>:WINDow:DELTa`.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<TimeRangeMode> WITHin | OUTSide | SHORter | LONGer

WITHin
Triggers if the signal stays inside or outside the vertical window limits at least for the time *Width - Delta* and for *Width + Delta* at the most.

OUTSide
"Outside" is the opposite definition of "Within". The instrument triggers if the signal stays inside or outside the vertical window limits for a time shorter than *Width - Delta* or longer than *Width + Delta*.

SHORter
Triggers if the signal crosses vertical limits before the specified width time is reached.

LONGer
Triggers if the signal crosses vertical limits before the specified width time is reached.

*RST: WITHin

Usage: Asynchronous command

Manual operation: See "Time condition" on page 183

TRIGger:EVENt<ev>:WINDow:WIDTh <Width>

Depending on the values of `TRIGger:EVENt<ev>:WINDow:RANGe` the width sets:

- For the ranges `Within` and `Outside`, the width defines the center of a time range. The range is defined by the limits "±Delta", see `TRIGger:EVENt<ev>:WINDow:DELTa`.
- For the ranges `Shorter` and `Longer`, it defines the maximum and minimum time lapse, respectively.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<Width> Range: 1E-10 to 10000
Increment: 1E-07
*RST: 5E-09
Default unit: s

Usage: Asynchronous command

Manual operation: See "Width" on page 183

18.10.8 Timeout trigger

TRIGger:EVENt<ev>:TIMeout:RANGe 1158
TRIGger:EVENt<ev>:TIMeout:TIME 1158

TRIGger:EVENt<ev>:TIMeout:RANGe <TimeoutMode>

Sets the relation of the signal level to the trigger level for the timeout trigger.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<TimeoutMode> HIGH | LOW | EITHer
HIGH = stays high, the signal level stays above the trigger level.
LOW = stays low, the signal level stays below the trigger level.
EITHer = stays high or low.
*RST: HIGH

Usage: Asynchronous command

Manual operation: See "Range" on page 184

TRIGger:EVENt<ev>:TIMeout:TIME <Time>

Sets the time limit for the timeout at which the instrument triggers.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:

<Time>
Range: 1E-10 to 10000
Increment: 1E-07
*RST: 1E-07
Default unit: s

Usage: Asynchronous command

Manual operation: See "Time" on page 184

18.10.9 Interval trigger

TRIGger:EVENt<ev>:INTerval:DELTa 1159
TRIGger:EVENt<ev>:INTerval:RANGe 1159
TRIGger:EVENt<ev>:INTerval:SLOPe 1160
TRIGger:EVENt<ev>:INTerval:WIDTh 1160

TRIGger:EVENt<ev>:INTerval:DELTa <WidthDelta>

Sets a range around the interval width value specified with `TRIGger:EVENt<ev>:INTerval:WIDTh`.

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:

<WidthDelta>
Range: 0 to 10
Increment: 1E-07
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "±Delta" on page 186

TRIGger:EVENt<ev>:INTerval:RANGe <RangeMode>

Defines the range of an interval in relation to the interval width specified using `TRIGger:EVENt<ev>:INTerval:WIDTh` and `TRIGger:EVENt<ev>:INTerval:DELTa`.

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:

<RangeMode> WITHin | OUTSide | SHORter | LONGer

WITHin
Triggers on pulses inside a given range. The range is defined by the interval width ±delta.

OUTSide
Triggers on pulses outside a given range. The range is defined by the interval width ±delta.

SHORter
Triggers on pulses shorter than the given interval width.

LONGer
Triggers on pulses longer than the given interval width.

*RST: OUTSide

Usage: Asynchronous command

Manual operation: See "Range" on page 185

TRIGger:EVENt<ev>:INTerval:SLOPe <Slope>

Sets the edge for the trigger. You can analyze the interval between positive edges or between negative edges.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<Slope> POSitive | NEGative | EITHer
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Slope" on page 185

TRIGger:EVENt<ev>:INTerval:WIDTh <Width>

Sets the time between two pulses for the interval trigger.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<Width> Range: 1E-10 to 10000
Increment: 1E-07
*RST: 5E-09
Default unit: s

Usage: Asynchronous command

Manual operation: See "Interv. width" on page 186

18.10.10 Slew rate trigger

TRIGger:EVENt<ev>:LEVel<n>:SLEW:LOWer 1161
TRIGger:EVENt<ev>:LEVel<n>:SLEW:UPPer 1161
TRIGger:EVENt<ev>:SLEW:DELTa 1161
TRIGger:EVENt<ev>:SLEW:RANGe 1162
TRIGger:EVENt<ev>:SLEW:RATE 1162
TRIGger:EVENt<ev>:SLEW:SLOPe 1163

TRIGger:EVENt<ev>:LEVel<n>:SLEW:LOWer <Level>

Sets the lower voltage threshold. When the signal crosses this level, the slew rate measurement starts or stops depending on the selected slope.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

<n> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<Level>
Range: -10 to 10
Increment: 0.001
*RST: -0.1
Default unit: V

Usage: Asynchronous command

Manual operation: See "Lower level" on page 187

TRIGger:EVENt<ev>:LEVel<n>:SLEW:UPPer <Level>

Sets the upper voltage threshold. When the signal crosses this level, the slew rate measurement starts or stops depending on the selected slope.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

<n> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<Level>
Range: -10 to 10
Increment: 0.001
*RST: 0.1
Default unit: V

Usage: Asynchronous command

Manual operation: See "Upper level" on page 187

TRIGger:EVENt<ev>:SLEW:DELTa <TimeDelta>

Defines a time range around the given slew rate.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<TimeDelta>
Range: 0 to 10
Increment: 1E-07
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "±Delta" on page 188

TRIGger:EVENt<ev>:SLEW:RANGe <RangeMode>

Selects how the time limit for the slew rate is defined. The time measurement starts when the signal crosses the first trigger level - the upper or lower limit depending on the selected slope. The measurement stops when the signal crosses the second level.

You can select the rate with `TRIGger:EVENt<ev>:SLEW:RATE` and set the delta with `TRIGger:EVENt<ev>:SLEW:DELTa`.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<RangeMode> INSRange | OUTRange | LTHan | GTHan

INSRange
Triggers on pulses inside a given range. The range is defined by the slew rate ±delta.

OUTRange
Triggers on pulses outside a given range. The range is defined by the slew rate ±delta.

LTHan
Triggers on pulses shorter than the given slew rate.

GTHan
Triggers on pulses longer than the given slew rate.

*RST: GTHan

Usage: Asynchronous command

Manual operation: See "Range" on page 188

TRIGger:EVENt<ev>:SLEW:RATE <Time>

For `TRIGger:EVENt<ev>:SLEW:RANGe` = `INSRange` and `OUTRange`, the slew rate defines the center of a range which is defined by the limits "±Delta".

For `TRIGger:EVENt<ev>:SLEW:RANGe` = `LTHan` and `GTHan`, the slew rate defines the maximum and minimum slew rate limits, respectively. When the signal crosses this level, the slew rate measurement starts or stops depending on the selected slope (see `TRIGger:EVENt<ev>:SLEW:SLOPe`).

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<Time>
Range: 1E-10 to 10000
Increment: 1E-07
*RST: 1E-10
Default unit: s

Usage: Asynchronous command

Manual operation: See "Slew rate" on page 188

TRIGger:EVENt<ev>:SLEW:SLOPe <Slope>

Sets the edge direction for the trigger.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<Slope> POSitive | NEGative | EITHer
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Slope" on page 187

18.10.11 Setup & Hold

TRIGger:EVENt<ev>:SETHold:CSOurce:EDGE 1163
TRIGger:EVENt<ev>:SETHold:CSOurce:LEVel 1163
TRIGger:EVENt<ev>:SETHold:CSOurce[:VALue] 1164
TRIGger:EVENt<ev>:SETHold:HTIMe 1164
TRIGger:EVENt<ev>:SETHold:STIMe 1164

TRIGger:EVENt<ev>:SETHold:CSOurce:EDGE <ClockEdge>

Sets the edge of the clock signal. Edge and level define the time reference point.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<ClockEdge> POSitive | NEGative | EITHer
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Clock edge" on page 189

TRIGger:EVENt<ev>:SETHold:CSOurce:LEVel <ClockLevel>

Sets the voltage level for the clock signal.

Both the clock level and the clock edge define the starting point for calculation of the setup and hold time.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:

<ClockLevel>
Range: -10 to 10
Increment: 0.001
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "Clock level" on page 190

TRIGger:EVENt<ev>:SETHold:CSOurce[:VALue] <ClockSource>

Selects the input channel of the clock signal.

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:

<ClockSource> C1 | C2 | ... | C8

The following values are also accepted:
C1 = CHAN1 = CHANnel1, C2 = CHAN2 = CHANnel2,
C3 = CHAN3 = CHANnel3, C4 = CHAN4 = CHANnel4

*RST: C1

Usage: Asynchronous command

Manual operation: See "Clock source" on page 189

TRIGger:EVENt<ev>:SETHold:HTIMe <HoldTime>

Sets the minimum time **after** the clock edge while the data signal must stay steady above or below the data level.

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:

<HoldTime>
Range: -9.9999E-08 to 1E-07
Increment: 1E-09
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "Hold time" on page 190

TRIGger:EVENt<ev>:SETHold:STIMe <SetupTime>

Sets the minimum time **before** the clock edge while the data signal must stay steady above or below the data level.

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:

<SetupTime>
Range: -9.9999E-08 to 1E-07
Increment: 1E-09
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "Setup time" on page 190

18.10.12 State trigger

TRIGger:EVENt<ev>:STATe:QUALify:ANALog:CHAN<n>:HLX 1165
TRIGger:EVENt<ev>:STATe:QUALify:LOGic 1165
TRIGger:EVENt<ev>:STATe:SLOPe 1166
TRIGger:EVENt<ev>:STATe:QUALify:DIGital:LOGic 1166
TRIGger:EVENt<ev>:STATe:QUALify:DIGital:CHAN<n>:HLX 1166

TRIGger:EVENt<ev>:STATe:QUALify:ANALog:CHAN<n>:HLX <HLX>

Set the state for each channel. For the state trigger, the clock source is indicated and does not get a state.

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

<n> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:

<HLX> HIGH | LOW | DONTcare

State of the individual channels

*RST: DONTcare

Example:

```
TRIG:EVEN1:SOUR C1
TRIG:EVEN1:SLOP POS
TRIG:EVEN1:STAT:QUAL:ANAL:CHAN2:HLX HIGH
TRIG:EVEN1:STAT:QUAL:ANAL:CHAN3:HLX LOW
TRIG:EVEN1:STAT:QUAL:ANAL:CHAN4:HLX HIGH
TRIG:EVEN1:STAT:QUAL:LOG AND
```

Usage: Asynchronous command

Manual operation: See "Source: channel states" on page 194

TRIGger:EVENt<ev>:STATe:QUALify:LOGic <StateOperator>

Defines the logic combination of the channels and their states.

Suffix:

<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<StateOperator> AND | OR
*RST: AND

Usage: Asynchronous command

Manual operation: See "Logic Operator" on page 194

TRIGger:EVENt<ev>:STATe:SLOPe <Slope>

Sets the edge direction for the trigger.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<Slope> POSitive | NEGative | EITHer
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Slope" on page 191

TRIGger:EVENt<ev>:STATe:QUALify:DIGital:LOGic <Logic>

Defines the logic combination of the channels and their states.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<Logic> AND | OR
*RST: AND

Usage: Asynchronous command

Manual operation: See "Logic Operator" on page 194

TRIGger:EVENt<ev>:STATe:QUALify:DIGital:CHAN<n>:HLX <HLX>

Sets the required state for each digital channel that is used for triggering.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event
<n> 0 to 15, index of the logic channel

Parameters:
<HLX> HIGH | LOW | DONTcare
*RST: DONTcare

Usage: Asynchronous command

Manual operation: See "Source: channel states" on page 195

18.10.13 Pattern trigger

TRIGger:EVENt<ev>:PATTern:QUALify:ANALog:CHAN<n>:HLX 1167
TRIGger:EVENt<ev>:PATTern:QUALify:DIGital:CHAN<n>:HLX 1167
TRIGger:EVENt<ev>:PATTern:QUALify:LOGic 1167
TRIGger:EVENt<ev>:PATTern:QUALify:DIGital:LOGic 1168
TRIGger:EVENt<ev>:PATTern:QUALify:SOURces 1168

TRIGger:EVENt<ev>:PATTern:QUALify:ANALog:CHAN<n>:HLX <HLX>

Set the state for each channel. For the state trigger, the clock source is indicated and does not get a state.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

<n> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<HLX> HIGH | LOW | DONTcare
State of the individual channels
*RST: DONTcare

Example:
```
TRIG:EVEN1:PATT:QUAL:ANAL:CHAN1:HLX LOW
TRIG:EVEN1:PATT:QUAL:ANAL:CHAN2:HLX HIGH
TRIG:EVEN1:PATT:QUAL:ANAL:CHAN3:HLX LOW
TRIG:EVEN1:PATT:QUAL:ANAL:CHAN4:HLX HIGH
TRIG:EVEN1:PATT:QUAL:LOG AND
```

Usage: Asynchronous command

Manual operation: See "Source: channel states" on page 194

TRIGger:EVENt<ev>:PATTern:QUALify:DIGital:CHAN<n>:HLX <HLX>

Sets the required state for each digital channel that is used for triggering.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

<n> 0 to 15, index of the logic channel

Parameters:
<HLX> HIGH | LOW | DONTcare
*RST: DONTcare

Usage: Asynchronous command

Manual operation: See "Source: channel states" on page 195

TRIGger:EVENt<ev>:PATTern:QUALify:LOGic <StateOperator>

Defines the logic combination of the channels and their states.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<StateOperator> AND | OR
*RST: AND

Usage: Asynchronous command

Manual operation: See "Logic Operator" on page 194

TRIGger:EVENt<ev>:PATTern:QUALify:DIGital:LOGic <Logic>

Defines the logic combination of the channels and their states.

Suffix:
<ev> 1..3

Parameters:
<Logic> AND | OR
*RST: AND

Usage: Asynchronous command

Manual operation: See "Logic Operator" on page 194

TRIGger:EVENt<ev>:PATTern:QUALify:SOURces <StateSources>

Selects if the source of the trigger for the pattern type is an analog or digital channel.

Suffix:
<ev> 1 = A-trigger, 2 = B-trigger, 3 = reset event

Parameters:
<StateSources> ANALog | DIGital
*RST: ANALog

Usage: Asynchronous command

Manual operation: See "State sources" on page 192

18.10.14 Trigger mode, holdoff

TRIGger:MODE 1169
TRIGger:FORCe 1169
TRIGger:HOLDoff:MODE 1169
TRIGger:HOLDoff:AUTotime? 1170
TRIGger:HOLDoff:SCALing 1170
TRIGger:HOLDoff:EVENts 1171
TRIGger:HOLDoff:MAX 1171
TRIGger:HOLDoff:MIN 1171
TRIGger:HOLDoff:TIME 1171

TRIGger:MODE <TriggerMode>

Sets the trigger mode which determines the behavior of the instrument with and without a trigger event.

Parameters:

<TriggerMode> AUTO | NORMal | FREerun

AUTO
The instrument triggers repeatedly after a time interval if the trigger conditions are not fulfilled. If a real trigger occurs, it takes precedence. The time interval depends on the time base.

NORMal
The instrument acquires a waveform only if a trigger occurs.

FREerun
The instrument triggers after a very short time interval - faster than in AUTO mode. Real triggers are ignored.

*RST: AUTO

Usage: Asynchronous command

Manual operation: See "[Auto Norm]" on page 49

TRIGger:FORCe

Provokes an immediate single acquisition. Force the trigger if the acquisition is running in normal mode and no valid trigger occurs. Thus, you can confirm that a signal is available and use the waveform display to determine how to trigger on it.

Usage: Setting only
Asynchronous command

Manual operation: See "Force trigger" on page 197

TRIGger:HOLDoff:MODE <Mode>

Selects the method to define the holdoff condition.

The trigger holdoff defines when the next trigger after the current will be recognized. Thus, it affects the next trigger to occur after the current one. Holdoff helps to obtain stable triggering when the oscilloscope is triggering on undesired events.

Holdoff settings are not available if the trigger source is an external trigger input or serial bus, and if you trigger on a sequence of events.

Parameters:

<Mode> TIME | EVENts | RANDom | AUTO | OFF

TIME
Defines the holdoff directly as a time period. The next trigger occurs only after the holdoff time has passed, which is defined using `TRIGger:HOLDoff:TIME`).

EVENts
Defines the holdoff as a number of trigger events. The next trigger occurs only when this number of events is reached. The number of triggers to be skipped is defined with `TRIGger:HOLDoff:EVENts`.

RANDom
Defines the holdoff as a random time limited by `TRIGger:HOLDoff:MIN` and `TRIGger:HOLDoff:MAX`. For each acquisition cycle, the instrument selects a new random holdoff time from the specified range.

AUTO
The holdoff time is calculated automatically based on the current horizontal scale.

OFF
No holdoff

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Holdoff mode" on page 197

TRIGger:HOLDoff:AUTotime?

Returns the resulting holdoff time, if `TRIGger:HOLDoff:MODE` is set to `AUTO`: *Auto time = Auto time scaling * Horizontal scale*. The auto time scaling factor is defined with `TRIGger:HOLDoff:SCALing`.

Return values:
<AutoTime>
Range: 1E-07 to 10
Increment: 0.0002
*RST: 0.001
Default unit: s

Usage: Query only
Asynchronous command

Manual operation: See "Holdoff mode" on page 197

TRIGger:HOLDoff:SCALing <AutoTimeScl>

Sets the auto time scaling factor that the horizontal scale is multipied with, if `TRIGger:HOLDoff:MODETRIGger:HOLDoff:MODETRIGger:HOLDoff:MODE` is set to `AUTO`.
*Auto time = Auto time scaling * Horizontal scale*

The next trigger occurs only after this time has passed.

Parameters:
<AutoTimeScl>
Range: 0.001 to 1000
Increment: 1
*RST: 0.5

Usage: Asynchronous command

Manual operation: See "Holdoff mode" on page 197

TRIGger:HOLDoff:EVENts <Events>

Defines the number of triggers to be skipped, if `TRIGger:HOLDoff:MODETRIGger:HOLDoff:MODETRIGger:HOLDoff:MODE` is set to `EVENts`. The next trigger only occurs when this number of events is reached.

Parameters:

<Events>
Range: 1 to 2147483647
Increment: 10
*RST: 1

Usage: Asynchronous command

Manual operation: See "Holdoff mode" on page 197

TRIGger:HOLDoff:MAX <RandomMaxTime>

Defines the upper limit for the random time holdoff, if `TRIGger:HOLDoff:MODE TRIGger:HOLDoff:MODETRIGger:HOLDoff:MODE` is set to `RANDom`.

Parameters:

<RandomMaxTime>
Range: 1E-07 to 10
Increment: 0.0002
*RST: 0.002
Default unit: s

Usage: Asynchronous command

Manual operation: See "Holdoff mode" on page 197

TRIGger:HOLDoff:MIN <RandomMinTime>

Defines the lower limit for the random time holdoff, if `TRIGger:HOLDoff:MODE TRIGger:HOLDoff:MODETRIGger:HOLDoff:MODE` is set to `RANDom`.

Parameters:

<RandomMinTime>
Range: 1E-07 to 5
Increment: 0.0002
*RST: 0.001
Default unit: s

Usage: Asynchronous command

Manual operation: See "Holdoff mode" on page 197

TRIGger:HOLDoff:TIME <Time>

Defines the holdoff time period, if `TRIGger:HOLDoff:MODE` is set to `TIME`. The next trigger occurs only after this time has passed.

Parameters:

<Time>
Range: 1E-07 to 10
Increment: 0.0002
*RST: 0.001
Default unit: s

Usage: Asynchronous command

Manual operation: See "Holdoff mode" on page 197

18.10.15 Hysteresis

TRIGger:NOISe<m>:ABSolute....1172
TRIGger:NOISe<m>:EFFective?....1172
TRIGger:NOISe<m>:MODE....1173
TRIGger:NOISe<m>:PERDivision....1173
TRIGger:NOISe<m>:RELative....1173
TRIGger:NOISe<m>[:STATe]....1174

TRIGger:NOISe<m>:ABSolute <Absolute>

Defines a range in absolute values around the trigger level. If the signal oscillates inside this range and thus crosses the trigger level, no trigger event occurs.

Suffix:

<m> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:

<Absolute>
Range: 0 to 10000000
Increment: 0.001
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "Absolute hysteresis" on page 199

TRIGger:NOISe<m>:EFFective?

Returns the hysteresis that is set by the instrument in automatic hysteresis mode.

Suffix:

<m> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:

<Effective> numeric value

Range: 0 to 10000000
Increment: 0.001
*RST: 0
Default unit: V

Usage: Query only
Asynchronous command

Manual operation: See "HW hysteresis" on page 199

TRIGger:NOISe<m>:MODE <Mode>

Selects whether the hysteresis is defined in absolute or relative values. The setting is available only in manual hysteresis mode.

Suffix:
<m> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<Mode> ABS | REL
*RST: ABS

Usage: Asynchronous command

Manual operation: See "Hysteresis mode" on page 199

TRIGger:NOISe<m>:PERDivision <InDivision>

Defines a range in divisions around the trigger level in division units. If the signal oscillates inside this range and crosses the trigger level thereby, no trigger event occurs.

Suffix:
<m> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<InDivision> Range: 0 to 5
Increment: 0.01
*RST: 0
Default unit: div

Usage: Asynchronous command

Manual operation: See "Relative hysteresis" on page 200

TRIGger:NOISe<m>:RELative <Relative>

Defines a range in divisions around the trigger level as percentage. If the signal oscillates inside this range and crosses the trigger level thereby, no trigger event occurs.

Suffix:
<m> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:

<Relative>
Range: 0 to 50
Increment: 1
*RST: 0
Default unit: %

Usage: Asynchronous command

Manual operation: See "Relative hysteresis" on page 200

TRIGger:NOISe<m>[:STATe] <Mode>

Selects how the hysteresis is set.

Suffix:

<m> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:

<Mode> AUTO | MANual

AUTO
Automatic mode is the recommended mode. The hysteresis is set by the instrument to reject the internal noise of the instrument.

MANual
The hysteresis is defined with `TRIGger:NOISe<m>:ABSolute` or `TRIGger:NOISe<m>:RELative`.

*RST: AUTO

Usage: Asynchronous command

18.10.16 Channel filter

TRIGger:FILTermode 1174
TRIGger:LFReject 1175
TRIGger:RFReject 1175

TRIGger:FILTermode <Mode>

Selects the filter mode for the trigger channel.

Parameters:

<Mode> OFF | LFReject | RFReject

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Trigger filter mode" on page 200

TRIGger:LFReject <Bandwidth>

Sets the limit frequency limit for the highpass filter of the trigger signal. Frequencies lower than this value are rejected, higher frequencies pass the filter.

Parameters:

<Bandwidth>
Range: 50 kHz
*RST: 50 kHz
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "LF reject BW" on page 200

TRIGger:RFReject <Bandwidth>

Sets the limit frequency limit for the lowpass filter of the trigger signal. Frequencies higher than this value are rejected, lower frequencies pass the filter.

Parameters:

<Bandwidth>
Range: 1E+3 to 500E+6
Increment: 1000
*RST: 1E+6
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "RF reject BW" on page 201

18.10.17 Actions on trigger

TRIGger:ACTions:BEEP 1175
TRIGger:ACTions:OUT:STATe 1176
TRIGger:ACTions:OUT:SOURce 1176
TRIGger:ACTions:OUT:DELay 1176
TRIGger:ACTions:OUT:PLENgth 1176
TRIGger:ACTions:OUT:POLarity 1177
TRIGger:ACTions:SCReenshot 1177
TRIGger:ACTions:SRESults 1177
TRIGger:ACTions:STOP 1178
TRIGger:ACTions:WFMSave 1178

TRIGger:ACTions:BEEP <Beep>

Generates a beep sound if the command is set to `TRIGger`.

Parameters:

<Beep>
NOACtion | TRIGger
*RST: NOACtion

Usage: Asynchronous command

Manual operation: See "Beep" on page 201

TRIGger:ACTions:OUT:STATe <State>

Activates the outgoing pulse on the [Trigger Out] connector on the rear panel.

If ON, a pulse is sent out each time when a trigger occurs.

Parameters:

<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Trigger out pulse" on page 202

TRIGger:ACTions:OUT:SOURce <SignalSource>

Defines when the trigger out signal is initiated: at the trigger point, when waiting for the trigger, or when the post-trigger time is finished.

Parameters:

<SignalSource> TRIG | TRIGGER | POST | POSTTRIGGER | WAIT | WAITTRIGGER
TRIG = TRIGGER, POST = POSTTRIGGER, WAIT = WAIT-TRIGGER
*RST: TRIG

Usage: Asynchronous command

Manual operation: See "Signal source" on page 203

TRIGger:ACTions:OUT:DELay <Delay>

Defines the delay of the first pulse edge to the trigger point. The minimum delay is 600 ns.

Parameters:

<Delay> Range: 8E-07 to 1
Increment: 4E-09
*RST: 8E-07
Default unit: s

Usage: Asynchronous command

Manual operation: See "Delay" on page 203

TRIGger:ACTions:OUT:PLENgth <PulseLength>

Sets the length of the trigger out pulse.

Parameters:

<PulseLength>
Range: 1.6E-08 to 0.05
Increment: 1.6E-08
*RST: 9.6E-08
Default unit: s

Usage: Asynchronous command

Manual operation: See "Pulse length" on page 203

TRIGger:ACTions:OUT:POLarity <Polarity>

Sets the polarity of the trigger out pulse, which is the direction of the first pulse edge.

Parameters:

<Polarity>
POSitive | NEGative
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Polarity" on page 203

TRIGger:ACTions:SCReenshot <SaveScreenshot>

Saves a screenshot at each trigger if the command is set to `TRIGger`.

To configure the screenshot settings, use the commands described in Section 18.13.8, "Screenshots", on page 1250.

Parameters:

<SaveScreenshot>
NOACtion | TRIGger
*RST: NOACtion

Usage: Asynchronous command

Manual operation: See "Screenshot" on page 202

TRIGger:ACTions:SRESults <SaveResults>

Saves the selected result to file at each trigger if the command is set to `TRIGger`.

To define the path and file names, use the EXPort:WAVeform:AUTonaming:* commands:

- `EXPort:WAVeform:AUTonaming:NAME` on page 1240
- `EXPort:WAVeform:AUTonaming:PATH` on page 1240
- `EXPort:WAVeform:AUTonaming:TYPE` on page 1241

Parameters:

<SaveResults>
NOACtion | TRIGger
*RST: NOACtion

Usage: Asynchronous command

Manual operation: See "Save results" on page 202

TRIGger:ACTions:STOP <StopAcq>

Stops the running acquisition if the command is set to `TRIGger`.

Parameters:
<StopAcq> NOACtion | TRIGger
*RST: NOACtion

Usage: Asynchronous command

Manual operation: See "Stop acq" on page 201

TRIGger:ACTions:WFMSave <SaveWfm>

Saves the waveform data to file at each trigger if the command is set to `TRIGger`.

To define the path and file names, use the EXPort:WAVeform:AUTonaming:* commands:

- `EXPort:WAVeform:AUTonaming:NAME` on page 1240
- `EXPort:WAVeform:AUTonaming:PATH` on page 1240
- `EXPort:WAVeform:AUTonaming:TYPE` on page 1241

Parameters:
<SaveWfm> NOACtion | TRIGger
*RST: NOACtion

Usage: Asynchronous command

Manual operation: See "Save wfm" on page 202

18.10.18 Zone trigger

Zone trigger commands are available since FW version 2.2.x.x.

ZONE<m>:ADD ... 1179
TRIGger:ZONE:EXPRession[:DEFine] ... 1179
ZONE<m>:ACOMbination ... 1179
ZONE<m>:AREA<n>:ADD ... 1180
ZONE<m>:AREA<n>:COUNt? ... 1180
ZONE<m>:AREA<n>:INTersect ... 1180
ZONE<m>:AREA<n>:LABel ... 1180
ZONE<m>:AREA<n>:VALid? ... 1181
ZONE<m>:AREA<n>:POINt<o>:ADD ... 1181
ZONE<m>:AREA<n>:POINt<o>:COUNt? ... 1181
ZONE<m>:AREA<n>:POINt<o>:REMove ... 1182
ZONE<m>:AREA<n>:POINt<o>:X ... 1182
ZONE<m>:AREA<n>:POINt<o>:Y ... 1182
ZONE<m>:AREA<n>:POINt<o>:VALid? ... 1183

ZONE<m>:AREA<n>:REMove 1183
ZONE<m>:AREA<n>:STATe 1183
ZONE<m>:COUNt? 1184
ZONE<m>:DIAGram 1184
TRIGger:ZONE:HISTory 1184
ZONE<m>:REMove 1184
ZONE<m>:SOURce 1185
ZONE<m>[:VISible] 1185

ZONE<m>:ADD

Adds a new trigger zone.

Suffix:
<m> 1 to 4, index of the zone

Usage: Setting only
Asynchronous command

Manual operation: See "Add zone, ⊞" on page 211

TRIGger:ZONE:EXPRession[:DEFine] <LogicExpression>

Defines the zone trigger. The available operators for the combination between the zones are `AND | NOT | OR | XOR`.

Parameters:
<LogicExpression> String with the logical expression

Example: Prerequisite: Zone1 and Zone2 are defined.

```
TRIGger:ZONE:EXPRession 'Zone1 and Zone2'
TRIGger:ZONE:EXPRession?
<-- Zone1 and Zone2
```

Usage: Asynchronous command

Manual operation: See "[Zone]" on page 50

ZONE<m>:ACOMbination <AreaCombination>

Sets the logic combination that applies to all areas in the indicated zone.

Suffix:
<m> 1 to 4, index of the zone

Parameters:
<AreaCombination> AND | OR
*RST: AND

Usage: Asynchronous command

Manual operation: See "Area" on page 211

ZONE<m>:AREA<n>:ADD

Adds a new area to the trigger zone.

Suffix:
<m> 1 to 4, index of the zone

<n> 1 to 8, index of the zone area

Usage: Setting only
Asynchronous command

Manual operation: See "Area" on page 211

ZONE<m>:AREA<n>:COUNt?

Returns the number of the defined areas in the zone.

`ZONE<m>:AREA:COUNt? MAX` returns the maximum number of areas that can be created.

Suffix:
<m> 1 to 4, index of the zone

<n> Irrelevant, omit the suffix.

Return values:
<Count> Number of defined zone areas

Usage: Query only
Asynchronous command

Manual operation: See "Area" on page 211

ZONE<m>:AREA<n>:INTersect <Intersection>

Defines if the signal must intersect the zone to allow the instrument to trigger, or if it must not intersect the zone.

Suffix:
<m> 1 to 4, index of the zone

<n> 1 to 8, index of the zone area

Parameters:
<Intersection> MUST | NOT
*RST: MUST

Usage: Asynchronous command

Manual operation: See "Area" on page 211

ZONE<m>:AREA<n>:LABel <Label>

Defines a label for the selected area.

Suffix:
<m> 1 to 4, index of the zone

<n> 1 to 8, index of the zone area

Parameters:
<Label>

Usage: Asynchronous command

Manual operation: See "Area" on page 211

ZONE<m>:AREA<n>:VALid?

Checks the validity of the indicated zone area. The area is invalid if one of its points is invalid. See Figure 7-13.

Suffix:
<m> 1 to 4, index of the zone

<n> 1 to 8, index of the zone area

Return values:
<Valid> OFF | ON

*RST: ON

Usage: Query only
Asynchronous command

ZONE<m>:AREA<n>:POINt<o>:ADD

Adds a new point to the area at the indicated point index.

To define the coordinates of the point, use `ZONE<m>:AREA<n>:POINt<o>:X` and `ZONE<m>:AREA<n>:POINt<o>:Y`.

Suffix:
<m> 1 to 4, index of the zone

<n> 1 to 8, index of the zone area

<o> 1 to 16, index of the zone area point

Usage: Setting only
Asynchronous command

ZONE<m>:AREA<n>:POINt<o>:COUNt?

Queries the number of the defined points in the area.

`ZONE<m>:AREA<n>:POINt:COUNt? MAX` returns the maximum number of points that can be created.

Suffix:
<m> 1 to 4, index of the zone

<n> 1 to 8, index of the zone area

<o> Irrelevant, omit the suffix.

Return values:

<Count> Range: 0 to 16

Usage: Query only
Asynchronous command

ZONE<m>:AREA<n>:POINt<o>:REMove

Removes the selected point from the area.

Suffix:

<m> 1 to 4, index of the zone

<n> 1 to 8, index of the zone area

<o> 1 to 16, index of the zone area point

Usage: Setting only
Asynchronous command

ZONE<m>:AREA<n>:POINt<o>:X <X>

Sets the horizontal X coordinates for the selected point of the area.

Suffix:

<m> 1 to 4, index of the zone

<n> 1 to 8, index of the zone area

<o> 1 to 16, index of the zone area point

Parameters:

<X> Range: -1E+26 to 1E+26
Increment: 1E-06
*RST: 0
Default unit: s

Usage: Asynchronous command

ZONE<m>:AREA<n>:POINt<o>:Y <Y>

Sets the vertical Y coordinates for the selected point of the area.

Suffix:

<m> 1 to 4, index of the zone

<n> 1 to 8, index of the zone area

<o> 1 to 16, index of the zone area point

Parameters:

<Y> Range: -1E+26 to 1E+26
Increment: 1E-06
*RST: 0
Default unit: V

Usage: Asynchronous command

ZONE<m>:AREA<n>:POINt<o>:VALid?

Checks the validity of the selected point. See Figure 7-13.

Suffix:

<m> 1 to 4, index of the zone

<n> 1 to 8, index of the zone area

<o> 1 to 16, index of the zone area point

Return values:

<Valid> OFF | ON
*RST: ON

Usage: Query only
Asynchronous command

ZONE<m>:AREA<n>:REMove

Removes the selected area from the trigger zone.

Suffix:

<m> 1 to 4, index of the zone

<n> 1 to 8, index of the zone area

Usage: Setting only
Asynchronous command

Manual operation: See "Delete icon" on page 212

ZONE<m>:AREA<n>:STATe <State>

Enables the selected area.

Suffix:

<m> 1 to 4, index of the zone

<n> 1 to 8, index of the zone area

Parameters:

<State> OFF | ON
*RST: ON

Usage: Asynchronous command

ZONE<m>:COUNt? <Count>

Returns the number of zones.

`ZONE:COUNt? MAX` returns the maximum number of zones that can be created.

Suffix:
<m> Irrelevant, omit the suffix.

Return values:
<Count> Number of defined zones

Usage: Query only
Asynchronous command

ZONE<m>:DIAGram <SignDiagKey>

Selects the diagram on which the zone trigger is applied, for example layoutset1 diagram1 (`L1_D1`).

For more information about the SmartGrid definition, see Section 18.8.3, "SmartGrid", on page 1067.

Suffix:
<m> 1 to 4, index of the zone

Parameters:
<SignDiagKey> String that indicates the layout set and the diagram, e.g. "L1_D1".

Usage: Asynchronous command

TRIGger:ZONE:HISTory <ApplyToHistory>

Applies the zone trigger condition to the acquisitions that are stored in the history memory. Thus, you can filter the history of waveforms on zone conditions.

Parameters:
<ApplyToHistory> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Apply zone trigger to history" on page 214

ZONE<m>:REMove

Removes the selected trigger zone.

Suffix:
<m> 1 to 4, index of the zone

Usage: Setting only
Asynchronous command

Manual operation: See "Delete icon" on page 212

ZONE<m>:SOURce <Source>

Sets the source of the zone trigger.

Suffix:
<m> 1 to 4, index of the zone

Parameters:
<Source> NONE | C1 | C2 | ... | C8 | M1 | M2 | ... | M8 | XY1 | XY2 | XY3 | XY4 | SPECNORM1 | SPECNORM2 | SPECNORM3 | SPECNORM4

Usage: Asynchronous command

Manual operation: See "Source" on page 211

ZONE<m>[:VISible] <DisplayState>

Enables the display of the zone on the screen.

Suffix:
<m> 1 to 4, index of the zone

Parameters:
<DisplayState> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Display" on page 211

18.11 Signal configuration

18.11.1 Reference levels

- Reference level settings 1185
- Reference level results 1190

18.11.1.1 Reference level settings

REFLevel<rl>:ENABle 1186
REFLevel<rl>:LMODe 1186
REFLevel<rl>:AUTO:MODE 1186
REFLevel<rl>:ABSolute:HYSTeresis 1187
REFLevel<rl>:ABSolute:LLEVel 1187
REFLevel<rl>:ABSolute:MLEVel 1187

REFLevel<rl>:ABSolute:ULEVel....1188
REFLevel<rl>:RELative:HYSTeresis....1188
REFLevel<rl>:RELative:LOWer....1188
REFLevel<rl>:RELative:MIDDle....1189
REFLevel<rl>:RELative:MODE....1189
REFLevel<rl>:RELative:UPPer....1189

REFLevel<rl>:ENABle <First>

Enables the specified reference level.

Suffix:
<rl> 1 to 8, index of the reference level set

Parameters:
<First> OFF | ON

Usage: Asynchronous command

Manual operation: See "RLx" on page 216

REFLevel<rl>:LMODe <LevelMode>

Defines if the reference level is set in absolute or relative values.

Suffix:
<rl> 1 to 8, index of the reference level set

Parameters:
<LevelMode> ABS | REL
*RST: REL

Usage: Asynchronous command

Manual operation: See "Level mode" on page 216

REFLevel<rl>:AUTO:MODE <AutoLevelMode>

Defines the high and low signal levels from which the reference levels are derived.

Suffix:
<rl> 1 to 8, index of the reference level set

Parameters:
<AutoLevelMode> AUTO | PPRobability | MPRobability | ABSolutepeak

AUTO
Auto select absolute probability: most suitable signal levels

PPRobability
Peak probability: signal levels with the highest probability value

MPRobability
Mean probability: signal levels with mean probability

ABSolutepeak
Absolute peak: absolute peak signal levels

*RST: AUTO

Usage: Asynchronous command

Manual operation: See "Auto level mode" on page 217

REFLevel<rl>:ABSolute:HYSTeresis <HystAbs>

Defines a hysteresis for the middle reference level. A rise or fall from the middle reference value that does not exceed the hysteresis is rejected as noise.

Suffix:
<rl> 1 to 8, index of the reference level set

Parameters:
<HystAbs>
Range: 0 to 1E+26
Increment: 0.001
*RST: 0.005
Default unit: V

Usage: Asynchronous command

Manual operation: See "Hysteresis" on page 217

REFLevel<rl>:ABSolute:LLEVel <LowerLevel>

Sets the lower reference level in absolute values. This is required, e.g., to determine a fall.

Suffix:
<rl> 1 to 8, index of the reference level set

Parameters:
<LowerLevel>
Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "Upper level, Middle level, Lower level" on page 216

REFLevel<rl>:ABSolute:MLEVel <MiddleLevel>

Sets the middle reference level in absolute values.

Suffix:
<rl> 1 to 8, index of the reference level set

Parameters:
<MiddleLevel>
Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "Upper level, Middle level, Lower level" on page 216

REFLevel<rl>:ABSolute:ULEVel <UpperLevel>

Sets the upper reference level in absolute values. This is required to determine a rise.

Suffix:
<rl> 1 to 8, index of the reference level set

Parameters:
<UpperLevel>
Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "Upper level, Middle level, Lower level" on page 216

REFLevel<rl>:RELative:HYSTeresis <HystRel>

Defines a hysteresis for the middle reference level. A rise or fall from the middle reference value that does not exceed the hysteresis is rejected as noise.

Suffix:
<rl> 1 to 8, index of the reference level set

Parameters:
<HystRel>
Range: 0 to 50
Increment: 1
*RST: 10
Default unit: %

Usage: Asynchronous command

Manual operation: See "Hysteresis" on page 217

REFLevel<rl>:RELative:LOWer <LowRefLevRel>

Sets the lower relative reference level if `REFLevel<rl>:RELative:MODE` is set to `USER`.

Suffix:
<rl> 1 to 8, index of the reference level set

Parameters:
<LowRefLevRel>
Range: -100 to 200
Increment: 1
*RST: 10
Default unit: %

Usage: Asynchronous command

Manual operation: See "Upper level, Middle level,Lower level" on page 217

REFLevel<rl>:RELative:MIDDle <MidRefLevRel>

Sets the middle relative reference level if `REFLevel<rl>:RELative:MODE` is set to `USER`.

Suffix:
<rl> 1 to 8, index of the reference level set

Parameters:
<MidRefLevRel>
Range: -100 to 200
Increment: 1
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "Upper level, Middle level,Lower level" on page 217

REFLevel<rl>:RELative:MODE <RelativeLevels>

The lower, middle and upper reference levels, defined as percentages of the high signal level.

Suffix:
<rl> 1 to 8, index of the reference level set

Parameters:
<RelativeLevels> FIVE | TEN | TWENty | USER

FIVE
5/50/95

TEN
10/50/90

TWENty
20/50/80

USER
Set the reference levels to individual values with `REFLevel<rl>:RELative:LOWer`, `REFLevel<rl>:RELative:MIDDle`, and `REFLevel<rl>:RELative:UPPer`.

*RST: TEN

Usage: Asynchronous command

Manual operation: See "Relative levels" on page 217

REFLevel<rl>:RELative:UPPer <UppRefLevRel>

Sets the upper relative reference level if `REFLevel<rl>:RELative:MODE` is set to `USER`.

Suffix:
<rl> 1 to 8, index of the reference level set

Parameters:
<UppRefLevRel>
Range: -100 to 200
Increment: 1
*RST: 90
Default unit: %

Usage: Asynchronous command

Manual operation: See "Upper level, Middle level,Lower level" on page 217

18.11.1.2 Reference level results

MEASurement<mg>:REFLevel<rl>:RESult:LOWer?....1190
MEASurement<mg>:REFLevel<rl>:RESult:MIDDle?....1190
MEASurement<mg>:REFLevel<rl>:RESult:UPPer?....1190
MEASurement<mg>:REFLevel<rl>:RESult:SIGHigh?....1190
MEASurement<mg>:REFLevel<rl>:RESult:SIGLow?....1190

MEASurement<mg>:REFLevel<rl>:RESult:LOWer?
MEASurement<mg>:REFLevel<rl>:RESult:MIDDle?
MEASurement<mg>:REFLevel<rl>:RESult:UPPer?

Return the lower, middle, and upper reference level, respectively.

Suffix:
<mg> 1 to 24, index of the measurement

<rl> Irrelevant, omit the suffix.

Return values:
<Value>
Range: -1E+26 to 1E+26
Increment: 0
*RST: 0

Usage: Query only
Asynchronous command

MEASurement<mg>:REFLevel<rl>:RESult:SIGHigh?
MEASurement<mg>:REFLevel<rl>:RESult:SIGLow?

Return the high and low signal level, respectively.

Suffix:
<mg> 1 to 24, index of the measurement

<rl> Irrelevant, omit the suffix.

Return values:
<SignalValue>
Range: -1E+26 to 1E+26
Increment: 0
*RST: 0

Usage: Query only
Asynchronous command

18.11.2 Gate

GATE<g>:ENABle 1191
GATE<g>:GCOupling 1191
GATE<g>:CURSor 1192
GATE<g>:ZDIagram 1192
GATE<g>:MODE 1192
GATE<g>:ABSolute:STARt 1193
GATE<g>:ABSolute:STOP 1193
GATE<g>:RELative:STARt 1193
GATE<g>:RELative:STOP 1193
GATE<g>:SHOW 1193

GATE<g>:ENABle <First>

Enables the gate.

Suffix:
<g> 1 to 8, index of the gate

Parameters:
<First> OFF | ON

Usage: Asynchronous command

Manual operation: See "Add" on page 218

GATE<g>:GCOupling <CouplingMode>

The gate coupling mode selects how the gate area is defined.

Suffix:
<g> 1 to 8, index of the gate

Parameters:
<CouplingMode> MANual | CURSor | ZOOM | SPECtrum

MANual
Manually define the gate with a user-defined start and stop values.

CURSor
Cursor coupling is available if a cursor is defined. The gate area is defined by the cursor lines of an active cursor measurement.

ZOOM
Zoom coupling is available if a zoom is defined. The gate area is defined identically to the zoom area - if you change the zoom, the gate changes as well.

SPECtrum
Spectrum coupling is available if a spectrum is enabled.

*RST: MANual

Usage: Asynchronous command

Manual operation: See "Coupling mode" on page 218

GATE<g>:CURSor <Cursor>

Available for `GATE<g>:GCOupling` = `CURSor`.

Selects the cursor set to be used for measurement gating. The gate area is defined by the cursor lines.

Suffix:
<g> 1 to 8, index of the gate

Parameters:
<Cursor> CURSOR1 | CURSor1 | CURSOR2 | CURSor2 | CURSOR3 | CURSor3 | CURSOR4 | CURSor4

Usage: Asynchronous command

Manual operation: See "Coupling mode" on page 218

GATE<g>:ZDIagram <SignalSource>,[<SignalSource2>]

Available for `GATE<g>:GCOupling` = `ZOOM`.

The gate area is defined identically to the zoom area for the selected zoom diagram.

Suffix:
<g> 1 to 8, index of the gate

Parameters:
<SignalSource>

<SignalSource2>

Usage: Asynchronous command

Manual operation: See "Coupling mode" on page 218

GATE<g>:MODE <Mode>

Selects if the gate settings are configured using absolute or relative values.

Suffix:
<g> 1 to 8, index of the gate

Parameters:
<Mode> ABS | REL

*RST: ABS

Usage: Asynchronous command

Manual operation: See "Mode, Start, Stop" on page 219

GATE<g>:ABSolute:STARt <Start>
GATE<g>:ABSolute:STOP <Stop>

Define the absolute start and end values for the gate, respectively.

Available, if `GATE<g>:GCOupling` = `MANUal` and `GATE<g>:MODE` =`ABS`.

Suffix:
<g> 1 to 8, index of the gate

Parameters:
<Stop>
Range: -1E+26 to 1E+26
Increment: 0.01
*RST: 0.01
Default unit: Depends on the underlying waveform

Usage: Asynchronous command

Manual operation: See "Mode, Start, Stop" on page 219

GATE<g>:RELative:STARt <RelativeStart>
GATE<g>:RELative:STOP <RelativeStop>

Define the relative start and end values for the gate, respectively.

Available, if `GATE<g>:GCOupling` = `MANUal` and `GATE<g>:MODE` =`REL`.

Suffix:
<g> 1 to 8, index of the gate

Parameters:
<RelativeStop>
Range: 0 to 100
Increment: 0.1
*RST: 100
Default unit: %

Usage: Asynchronous command

Manual operation: See "Mode, Start, Stop" on page 219

GATE<g>:SHOW <DisplayState>

If enabled, the gate area is indicated in the source diagram.

Suffix:
<g> 1 to 8, index of the gate

Parameters:
<DisplayState> OFF | ON
*RST: ON

Usage: Asynchronous command

18.11.3 Timing reference

TREFerence<m>:CDR:SOFTware:ALGorithm 1194
TREFerence<m>:CDR:SOFTware:BWIDth 1194
TREFerence<m>:CDR:SOFTware:CFRequency:CRSYnc 1195
TREFerence<m>:CDR:SOFTware:PLL:DAMPing 1195
TREFerence<m>:CDR:SOFTware:PLL:ORDer 1195
TREFerence<m>:CDR:SOFTware:SREStimate 1196
TREFerence<m>:CDR:SOFTware:PLL:SYNC 1196
TREFerence<m>:CDR:SOFTware:RELBwidth 1196
TREFerence<m>:CDR:SOFTware:SELResults 1197
TREFerence<m>:CLK:FACTor 1197
TREFerence<m>:CLK:FREQuency 1197
TREFerence<m>:CLK:OFFSet 1198
TREFerence<m>:CLK:REFLevel 1198
TREFerence<m>:EDGE 1198
TREFerence<m>:ENABle 1199
TREFerence<m>:GATE 1199
TREFerence<m>:REFLevel 1199
TREFerence<m>:RFLSet 1200
TREFerence<m>:SOURce 1200
TREFerence<m>:STATe? 1200
TREFerence<m>:SYMRate 1200
TREFerence<m>:TYPE 1201
TRFS:COUNt? 1201

TREFerence<m>:CDR:SOFTware:ALGorithm <Algorithm>

Sets the software algorithm that is used for software clock data recovery.

Suffix:
<m> 1...4, index of the timing reference

Parameters:
<Algorithm> CFRequency | PLL | FF | PLLRlock

CFRequency: constant frequency
PLL: phase-locked loop control system
FF: feed forward
PLLRlock: PLL which is locked at the acquisition start.

*RST: PLLRlock

Usage: Asynchronous command

Manual operation: See "Algorithm" on page 223

TREFerence<m>:CDR:SOFTware:BWIDth <Bandwidth>

Sets the PLL bandwidth. It defines the part of the spectrum that the PLL can follow during synchronization.

Suffix:
<m> 1...4, index of the timing reference

Parameters:
<Bandwidth> Range: 20000 to Device specific: DoubleVal(uso::db::wfa::IDeviceConstDataWFA::DOUBLE_ITEM::MaxDeviceBandwidth)
Increment: 10
*RST: 599880
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Bandwidth" on page 224

TREFerence<m>:CDR:SOFTware:CFRequency:CRSYnc <ClockResync>

Enables continuous synchronization of the clock with the data signal.

Suffix:
<m> 1...4, index of the timing reference

Parameters:
<ClockResync> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Clock resync" on page 223

TREFerence<m>:CDR:SOFTware:PLL:DAMPing <Damping>

Sets the damping factor, which is only relevant for second order PLL.

Suffix:
<m> 1...4, index of the timing reference

Parameters:
<Damping> Range: 0.5 to 2
Increment: 0.01
*RST: 0.7

Usage: Asynchronous command

Manual operation: See "Damping" on page 224

TREFerence<m>:CDR:SOFTware:PLL:ORDer <PLLOrder>

Sets the order of the PLL: first or second order. PLL of higher order can compensate for more complex jitter behavior.

Suffix:
<m> 1...4, index of the timing reference

Parameters:
<PLLOrder> FIRSt | SECond
*RST: SECond

Usage: Asynchronous command

Manual operation: See "Order" on page 224

TREFerence<m>:CDR:SOFTware:SREStimate

Starts a software algorithm to detect the symbol rate for the selected source automatically.

Suffix:
<m> 1...4, index of the timing reference

Usage: Event
Asynchronous command

Manual operation: See "Estimate symbol rate" on page 223

TREFerence<m>:CDR:SOFTware:PLL:SYNC <InitialPhase>

Defines the phase reference for the first clock edge.

Suffix:
<m> 1...4, index of the timing reference

Parameters:
<InitialPhase> SAMPle | DATaedge
SAMPle: the first clock edge matches the first sample of the waveform at the left border of the display.
DATaedge: the first clock edge matches the first edge of the data signal.
*RST: DATaedge

Usage: Asynchronous command

Manual operation: See "Initial phase sync" on page 224

TREFerence<m>:CDR:SOFTware:RELBwidth <RelBw>

Sets the relative bandwidth, that is the ratio of the nominal bit rate to the PLL bandwidth.

Suffix:
<m> 1...4, index of the timing reference

Parameters:
<RelBw> Range: 1 to 10000
Increment: 1
*RST: 1667

Usage: Asynchronous command

Manual operation: See "Rel. bandwidth" on page 224

TREFerence<m>:CDR:SOFTware:SELResults <Results>

Selects when the CDR algorithm returns clock edges.

Suffix:
<m> 1...4, index of the timing reference

Parameters:
<Results> ALL | LOCKed | AISYnc

ALL: all clock edges are used.
AISYnc = LOCKed: the clock edges of the synchronization time are discarded; results are gathered after initial synchronization of the CDR.

*RST: ALL

Usage: Asynchronous command

Manual operation: See "Selected results" on page 224

TREFerence<m>:CLK:FACTor <Multiplier>

Sets a value for the clock multiplier if `TREFerence<m>:TYPE CLOCk` is set. The muliplier is the ratio of an internal clock rate to the externally supplied clock. It defines the number of samples per clock interval.

Suffix:
<m> 1...4, index of the timing reference

Parameters:
<Multiplier> Range: 1 to 100
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Clock multiplier" on page 221

TREFerence<m>:CLK:FREQuency <Frequency>

Sets the frequency of the clock signal if `TREFerence<m>:TYPE CLOCk` is set.

Suffix:
<m> 1...4, index of the timing reference

Parameters:
<Frequency> Range: 1000 to Device specific: DoubleVal(uso::db::wfa::IDeviceConstDataWFA::DOUBLE_ITEM::MaxDeviceBandwidth)
Increment: 10
*RST: 500000000
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Clock frequency" on page 220

TREFerence<m>:CLK:OFFSet <Offset>

Sets the offset between the clock edge and the data edge if `TREFerence<m>:TYPE CLOCk` is set.

Suffix:
<m> 1...4, index of the timing reference

Parameters:
<Offset>
Range: -1000 to 1000
Increment: 0.01
*RST: 0
Default unit: UI

Usage: Asynchronous command

Manual operation: See "Clock offset" on page 221

TREFerence<m>:CLK:REFLevel <ReferenceLevel>

Selects the reference level that is used for the timing reference if the indicated timing reference uses an explicit click signal.

Suffix:
<m> 1...4, index of the timing reference

Parameters:
<ReferenceLevel> UPPer | MIDDle | LOWer
*RST: MIDDle

Usage: Asynchronous command

Manual operation: See "Reference level" on page 220

TREFerence<m>:EDGE <Edge>

Sets the clock edges that are used for measurements if `TREFerence<m>:TYPE CLOCk` is set for the indicated measurement.

Sets the data edges for clock data recovery if `TREFerence<m>:TYPE SCDR` is set for the indicated measurement.

Suffix:
<m> 1...4, index of the timing reference

Parameters:
<Edge> POSitive | NEGative | EITHer

POSitive
The positive clock slope can be used, for example, for single data rate (SDR) signals with bit start at the positive clock edge.

NEGative
The negative clock slope can be used, for example, for SDR signals with bit start at the negative clock edge.

EITHer
Can be used for double data rate (DDR) signals and clock edges. For data edges, it is the most common setting.

*RST: EITHer

Usage: Asynchronous command

Manual operation: See "Clock edges" on page 221

TREFerence<m>:ENABle <TimeRef>

Adds the indicated timing reference (ON) or removes it (OFF).

Suffix:
<m> 1...4, index of the timing reference

Parameters:
<TimeRef> OFF | ON

Usage: Asynchronous command

TREFerence<m>:GATE <Gate>

Sets the gate for the timing reference. Enable and configure a gate before you assign it (`GATE<g>:ENABle` =`ON`).

The query returns 0, if no gate is assigned.

Suffix:
<m> 1...4, index of the timing reference

Parameters:
<Gate> Number of the gate to be used

Usage: Asynchronous command

TREFerence<m>:REFLevel <ReferenceLevel>

Selects the reference level that is used for the timing reference if the indicated timing reference uses an explicit click signal.

Suffix:
<m> 1...4, index of the timing reference

Parameters:
<ReferenceLevel> UPPer | MIDDle | LOWer

*RST: MIDDle

Usage: Asynchronous command

TREFerence<m>:RFLSet <RefLevelSet>

Selects the set of reference levels that is used for the timing reference measurements.

Suffix:
<m> 1...4, index of the timing reference

Parameters:
<RefLevelSet> 1 to 8, index of the reference level set
Number of the reference level set. Define the reference level set before you use it.

Usage: Asynchronous command

Manual operation: See "Reference levels" on page 219

TREFerence<m>:SOURce <Source>

Selects the clock source if `TREFerence<m>:TYPE CLOCk` is set.

Sets the data source for clock data recovery if `TREFerence<m>:TYPE SCDR` is set for the indicated measurement.

Suffix:
<m> 1...4, index of the timing reference

Parameters:
<Source> C1 | C2 | ... | C8 | D0 | D1 | D2 | ... | D14 | D15 | M1 | M2 | ... | M8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11

Usage: Asynchronous command

Manual operation: See "Source" on page 220

TREFerence<m>:STATe?

Returns if the specified timing reference is used by an application, e.g. by jitter measurements.

Suffix:
<m> 1...4, index of the timing reference

Return values:
<State> OFF | ON
*RST: OFF

Usage: Query only
Asynchronous command

TREFerence<m>:SYMRate <SymbolRate>

Sets the symbol rate of the data signal for the indicated timing reference.

Suffix:
<m> 1...4, index of the timing reference

Parameters:

<SymbolRate> Range: 100000 to 5000000000
Increment: 10
*RST: 1000000000
Default unit: Bd

Usage: Asynchronous command

Manual operation: See "Symbol rate" on page 221

TREFerence<m>:TYPE <Type>

Defines the origin of the clock signal - either an existing clock signal or waveform, or a clock generated by clock data recovery (CDR).

Suffix:

<m> 1...4, index of the timing reference

Parameters:

<Type> CLOCk | SCDR

CLOCk: explicit clock signal
SCDR: software CDR

*RST: SCDR

Usage: Asynchronous command

Manual operation: See "Type" on page 219

TRFS:COUNt?

Returns the number of defined timing references.

Return values:

<Count> Range: 1 to 4

Usage: Query only
Asynchronous command

18.12 Waveform analysis

Some of the commands in the following section are asynchronous. An overlapping or asynchronous command does not automatically finish executing before the next command starts executing. If overlapping commands must be executed in a defined order, e.g. to avoid wrong measurement results, they must be serviced sequentially.

To prevent an overlapping execution of commands, one of the commands `*OPC`, `*OPC?` or `*WAI` can be used after the command or a command set.

For more information, see:

- www.rohde-schwarz.com/rc-via-scpi, section "Command sequence and synchronization"

- Zoom....1202
- Mathematics....1211
- History....1215
- Reference waveforms....1218
- Waveform histograms....1227

18.12.1 Zoom

LAYout<ly>:ZOOM<zo>[:ENABle]....1202
LAYout<ly>:ZOOM<zo>:COUNt?....1203
LAYout<ly>:ZOOM<zo>:DIAG?....1203
LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:POSition....1203
LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:SPAN....1204
LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:STARt....1204
LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:STOP....1204
LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:WIDTh....1205
LAYout<ly>:ZOOM<zo>:HORizontal:MODE....1205
LAYout<ly>:ZOOM<zo>:HORizontal:RELative:POSition....1205
LAYout<ly>:ZOOM<zo>:HORizontal:RELative:SPAN....1206
LAYout<ly>:ZOOM<zo>:HORizontal:RELative:STARt....1206
LAYout<ly>:ZOOM<zo>:HORizontal:RELative:STOP....1206
LAYout<ly>:ZOOM<zo>:HORizontal:RELative:WIDTh....1207
LAYout<ly>:ZOOM<zo>:SOURce....1207
LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:POSition....1207
LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:RANGe....1208
LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:SPAN....1208
LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:STARt....1208
LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:STOP....1208
LAYout<ly>:ZOOM<zo>:VERTical:MODE....1209
LAYout<ly>:ZOOM<zo>:VERTical:RELative:POSition....1209
LAYout<ly>:ZOOM<zo>:VERTical:RELative:STARt....1209
LAYout<ly>:ZOOM<zo>:VERTical:RELative:STOP....1210
LAYout<ly>:ZOOM<zo>:VERTical:RELative:WIDTh....1210
LAYout<ly>:ZOOM<zo>:VERTical:RELative:SPAN....1210
LAYout<ly>:ZOOM<zo>:SSCReen....1211

LAYout<ly>:ZOOM<zo>[:ENABle] <State>

Enables the zoom.

Suffix:

<ly> 1 to 8, index of the SmartGrid layout

<zo> 1 to 8, index of the zoom

Parameters:

<State> OFF | ON

Example: See Section 18.5.1, "SmartGrid layout with zoom", on page 1051.

Usage: Asynchronous command

Manual operation: See "State" on page 227

LAYout<ly>:ZOOM<zo>:COUNt?

Returns the max number of available zooms.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<zo> 1 to 8, index of the zoom

Return values:
<Count>

Usage: Query only
Asynchronous command

LAYout<ly>:ZOOM<zo>:DIAG?

Returns the index of the diagram that shows the zoomed waveform.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<zo> 1 to 8, index of the zoom

Return values:
<ZoomDiagramKey> String wiht the index of the zoom diagram, e.g. "9".

Usage: Query only
Asynchronous command

LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:POSition <Center>

Defines the x-value of the centerpoint of the zoom area in absolute values.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<zo> 1 to 8, index of the zoom

Parameters:
<Center> Range: -1E+26 to 1E+26
Increment: 0.01
*RST: 0
Default unit: Depends on the underlying waveform

Usage: Asynchronous command

Manual operation: See "Position range" on page 228

LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:SPAN <Span>

Defines the width of the zoom area in absolute values.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<zo> 1 to 8, index of the zoom

Parameters:
<Span> Range: 0 to 1E+26
Increment: 0.01
*RST: 0.02
Default unit: Depends on the underlying waveform

Usage: Asynchronous command

Manual operation: See "Position range" on page 228

LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:STARt <Start>

Defines the lower limit of the zoom area on the x-axis in absolute values.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<zo> 1 to 8, index of the zoom

Parameters:
<Start> Range: -1E+26 to 1E+26
Increment: 0.01
*RST: -0.01
Default unit: Depends on the underlying waveform

Usage: Asynchronous command

Manual operation: See "Start Stop" on page 228

LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:STOP <Stop>

Defines the upper limit of the zoom area on the x-axis in absolute values.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<zo> 1 to 8, index of the zoom

Parameters:
<Stop> Range: -1E+26 to 1E+26
Increment: 0.01
*RST: 0.01
Default unit: Depends on the underlying waveform

Usage: Asynchronous command

Manual operation: See "Start Stop" on page 228

LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:WIDTh <Span>

Defines the width of the zoom area in absolute values.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<zo> 1 to 8, index of the zoom

Parameters:
<Span> Range: 0 to 1E+26
Increment: 0.01
*RST: 0.02
Default unit: Depends on the underlying waveform

Usage: Asynchronous command

LAYout<ly>:ZOOM<zo>:HORizontal:MODE <Mode>

Defines if absolute or relative values are used to specify the x-axis values. Since the zoom area refers to the active signal, relative values ensure that the zoom area remains the same.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<zo> 1 to 8, index of the zoom

Parameters:
<Mode> ABS | REL
*RST: ABS

Example: See Section 18.5.1, "SmartGrid layout with zoom", on page 1051.

Usage: Asynchronous command

Manual operation: See "Mode" on page 229

LAYout<ly>:ZOOM<zo>:HORizontal:RELative:POSition <RelativeCenter>

Defines the x-value of the centerpoint of the zoom area in relative values.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<zo> 1 to 8, index of the zoom

Parameters:
<RelativeCenter> Relative position of the centerpoint (x-value)
Range: 0 to 100
Increment: 0.1
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "Position range" on page 228

LAYout<ly>:ZOOM<zo>:HORizontal:RELative:SPAN <RelativeSpan>

Defines the width of the zoom area in relative values.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<zo> 1 to 8, index of the zoom

Parameters:
<RelativeSpan>
Range: 1E-15 to 100
Increment: 0.1
*RST: 1
Default unit: %

Usage: Asynchronous command

Manual operation: See "Position range" on page 228

LAYout<ly>:ZOOM<zo>:HORizontal:RELative:STARt <RelativeStart>

Defines the lower limit of the zoom area on the x-axis in relative values.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<zo> 1 to 8, index of the zoom

Parameters:
<RelativeStart>
Range: 0 to 100
Increment: 0.1
*RST: 0
Default unit: %

Example: See Section 18.5.1, "SmartGrid layout with zoom", on page 1051.

Usage: Asynchronous command

Manual operation: See "Start Stop" on page 228

LAYout<ly>:ZOOM<zo>:HORizontal:RELative:STOP <RelativeStop>

Defines the upper limit of the zoom area on the x-axis in relative values.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<zo> 1 to 8, index of the zoom

Parameters:

<RelativeStop>
Range: 0 to 100
Increment: 0.1
*RST: 100
Default unit: %

Example: See Section 18.5.1, "SmartGrid layout with zoom", on page 1051.

Usage: Asynchronous command

Manual operation: See "Start Stop" on page 228

LAYout<ly>:ZOOM<zo>:HORizontal:RELative:WIDTh <RelativeSpan>

Defines the width of the zoom area in relative values.

Suffix:

<ly> 1 to 8, index of the SmartGrid layout

<zo> 1 to 8, index of the zoom

Parameters:

<RelativeSpan>
Range: 1E-15 to 100
Increment: 0.1
*RST: 1
Default unit: %

Usage: Asynchronous command

LAYout<ly>:ZOOM<zo>:SOURce <Diagrams>

Indicates which of the waveform diagrams is selected for zooming. The number is displayed on the screen in the middle of each diagram.

Suffix:

<ly> 1 to 8, index of the SmartGrid layout

<zo> 1 to 8, index of the zoom

Parameters:

<Diagrams> Index of the diagram that is zoomed.

Example: See Section 18.5.1, "SmartGrid layout with zoom", on page 1051.

Usage: Asynchronous command

Manual operation: See "Diagram" on page 227

LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:POSition <Center>

Defines the y-value of the centerpoint of the zoom area in absolute values.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<zo> 1 to 8, index of the zoom

Parameters:
<Center> Range: -1E+26 to 1E+26
Increment: 0.01
*RST: 0.01

Usage: Asynchronous command

Manual operation: See "Position range" on page 228

LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:RANGe <Span>
LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:SPAN <Span>

Defines the height of the zoom area in absolute values.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<zo> 1 to 8, index of the zoom

Parameters:
<Span> Range: 0 to 1E+26
Increment: 0.01
*RST: 0.01

Usage: Asynchronous command

Manual operation: See "Position range" on page 228

LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:STARt <Start>

Defines the lower limit of the zoom area on the y-axis in absolute values.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<zo> 1 to 8, index of the zoom

Parameters:
<Start> Range: -1E+26 to 1E+26
Increment: 0.01
*RST: 0.01

Usage: Asynchronous command

Manual operation: See "Start Stop" on page 228

LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:STOP <Stop>

Defines the upper limit of the zoom area on the y-axis in absolute values.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<zo> 1 to 8, index of the zoom

Parameters:
<Stop> Range: -1E+26 to 1E+26
Increment: 0.01
*RST: 0.01

Usage: Asynchronous command

Manual operation: See "Start Stop" on page 228

LAYout<ly>:ZOOM<zo>:VERTical:MODE <Mode>

Defines if absolute or relative values are used to specify the y-axis values. Since the zoom area refers to the active signal, relative values ensure that the zoom area remains the same.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<zo> 1 to 8, index of the zoom

Parameters:
<Mode> ABS | REL
*RST: REL

Usage: Asynchronous command

Manual operation: See "Mode" on page 229

LAYout<ly>:ZOOM<zo>:VERTical:RELative:POSition <RelativeCenter>

Defines the y-value of the centerpoint of the zoom area in relative values.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<zo> 1 to 8, index of the zoom

Parameters:
<RelativeCenter> Range: 0 to 100
Increment: 0.1
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "Position range" on page 228

LAYout<ly>:ZOOM<zo>:VERTical:RELative:STARt <RelativeStart>

Defines the lower limit of the zoom area on the y-axis in relative values.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<zo> 1 to 8, index of the zoom

Parameters:
<RelativeStart>
Range: 0 to 100
Increment: 0.1
*RST: 0
Default unit: %

Usage: Asynchronous command

Manual operation: See "Start Stop" on page 228

LAYout<ly>:ZOOM<zo>:VERTical:RELative:STOP <RelativeStop>

Defines the upper limit of the zoom area on the x-axis, in relative values.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<zo> 1 to 8, index of the zoom

Parameters:
<RelativeStop>
Range: 0 to 100
Increment: 0.1
*RST: 100
Default unit: %

Usage: Asynchronous command

Manual operation: See "Start Stop" on page 228

LAYout<ly>:ZOOM<zo>:VERTical:RELative:WIDTh <RelativeSpan>
LAYout<ly>:ZOOM<zo>:VERTical:RELative:SPAN <RelativeSpan>

Defines the height of the zoom area in relative values.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<zo> 1 to 8, index of the zoom

Parameters:
<RelativeSpan>
Range: 1E-15 to 100
Increment: 0.1
*RST: 100
Default unit: %

Usage: Asynchronous command

Manual operation: See "Position range" on page 228

LAYout<ly>:ZOOM<zo>:SSCReen

Sets the zoom area to the whole screen.

Suffix:
<ly> 1 to 8, index of the SmartGrid layout

<zo> 1 to 8, index of the zoom

Usage: Setting only
Asynchronous command

Manual operation: See "Set to screen" on page 228

18.12.2 Mathematics

To transfer the math waveform data to a remote computer, use:

- `CALCulate:MATH<m>:DATA:HEADer?` on page 1257
- `CALCulate:MATH<m>:DATA[:VALues]?` on page 1258
- `CALCulate:MATH<m>:DATA:STYPe?` on page 1258

For fast export of several waveforms at once, use `EXPort:WAVeform:DATA[:VALues]?` on page 1263.

For export of waveform data to file, see Section 18.13.4, "Waveform data: export to file", on page 1240.

CALCulate:MATH<m>:STATe 1211
CALCulate:MATH<m>[:EXPRession][:DEFine] 1211
CALCulate:MATH<m>:LABel 1213
CALCulate:MATH<m>:VERTical:SCALe[:VALue] 1213
CALCulate:MATH<m>:UNIT 1213
CALCulate:MATH<m>:VERTical:OFFSet 1214
CALCulate:MATH<m>:ENVSelection 1214
CALCulate:MATH<m>:VERTical:SCALe:MODE 1214

CALCulate:MATH<m>:STATe <First>

Activates the selected Math channel and displays the defined math waveforms.

Suffix:
<m> 1 to 8, index of the math waveform

Parameters:
<First> OFF | ON

Usage: Asynchronous command

Manual operation: See "State" on page 232

CALCulate:MATH<m>[:EXPRession][:DEFine] <Expression>

Defines the math expression to be calculated for the specified math channel.

Operation	<Expression>	Comment
Addition	"C1+C2"	
Subtraction	"C1-C2"	
Multiplication	"C1*C2"	
Division	"C1/C2"	0/0 = 0 +1 / 0 = Clip+ -1 / 0 = Clip-
Inverting	"-C1"	
Absolute value	"Abs(C1)"	
Derivation	"Derivation(C1,NoiseReject)"	NoiseReject can get any value between 1 and 5000 points Default = 50
Integral	"Integral(C1)"	
Logarithm (based on 10)	"Log(C1)"	Uses the absolute value of the source in calculation. Log(0) = Clip -
Natural logarithm (based on e)	"Ln(C1)"	Uses the absolute value of the source in calculation. Log(0) = Clip -
Binary logarithm (based on 2)	"Ld(C1)"	Uses the absolute value of the source in calculation. Log(0) = Clip -
Square	"Pow(C1)"	
Square root	"Sqrt(C1)"	Uses the absolute value of the source in calculation.
Rescale	"Rescale(C1,a,b)"	a = scale, default = 1 b = offset, default = 0
FIR	"FIR(Type,C1,Cut-Off,Characteristics)" Examples: "FIR(highpass,C1,10000000,Gaussian)" "FIR(lowpass,C1,10000000,rectangle)"	Type = lowpass, highpass Cut-Off = limit frequency Characteristics = Gaussian, rectangle Cut-Off can get any value between 4 GHz and 1 kHz

Suffix:
<m> 1 to 8, index of the math waveform

Parameters:
<Expression> String with regular expression for calculation

Example: `CALC:MATH 'C1*C2'`
Defines the multiplication of waveforms channel 1 and channel 2.

Usage: Asynchronous command

Manual operation: See "Operator" on page 233

CALCulate:MATH<m>:LABel <Label>

Defines a label for the selected math waveform.

Suffix:
<m> 1 to 8, index of the math waveform

Parameters:
<Label> String with the label

Example:
```
CALCulate:MATH3:LABel 'M3AddC1C2'
```

Usage: Asynchronous command

Manual operation: See "Label" on page 232

CALCulate:MATH<m>:VERTical:SCALe[:VALue] <VerticalScale>

Sets the scale of the y-axis in the math function diagram. The value is defined as "<unit> per division", e.g. *50 mV/div*. In this case, the horizontal grid lines are displayed in intervals of 50 mV.

Suffix:
<m> 1 to 8, index of the math waveform

Parameters:
<VerticalScale>
Range: 1E-12 to 100E+12
Increment: 1E-05
*RST: 0.5
Default unit: V

Usage: Asynchronous command

Manual operation: See "[Scale]" on page 53

CALCulate:MATH<m>:UNIT <UserUnit>

Sets a user-defined unit for the math operation.

Suffix:
<m> 1 to 8, index of the math waveform

Parameters:
<UserUnit> String with the base unit

Example:
```
CALCulate:MATH:UNIT 'A'
```

Usage: Asynchronous command

Manual operation: See "Unit" on page 242

CALCulate:MATH<m>:VERTical:OFFSet <VerticalOffset>

Sets a voltage offset to adjust the vertical position of the math function on the screen. Negative values move the waveform up, positive values move it down.

Suffix:
<m> 1 to 8, index of the math waveform

Parameters:
<VerticalOffset> Range: -100E12 to 100E12
Increment: 0.01
*RST: 0
Default unit: div

Usage: Asynchronous command

Manual operation: See "Vertical offset" on page 242

CALCulate:MATH<m>:ENVSelection <EnvelopeCurve>

Selects the upper or lower part of the input waveform for mathematic calculation, or a combination of both.

Suffix:
<m> 1 to 8, index of the math waveform

Parameters:
<EnvelopeCurve> MIN | MAX | BOTH
*RST: BOTH

Usage: Asynchronous command

Manual operation: See "Envelope wfm selection" on page 234

CALCulate:MATH<m>:VERTical:SCALe:MODE <VertSclMd>

Sets how the vertical scale is adapted to the current measurement results. By default, scaling is done automatically to provide an optimal display. However, if necessary, you can define scaling values manually to suit your requirements.

Suffix:
<m> 1 to 8, index of the math waveform

Parameters:
<VertSclMd> MANual | AUTO
*RST: AUTO

Usage: Asynchronous command

Manual operation: See "Scale mode" on page 242

18.12.3 History

ACQuire:HISTory:CURRent....1215
ACQuire:HISTory:ISODate?....1215
ACQuire:HISTory:PLAY....1215
ACQuire:HISTory:REPLay....1216
ACQuire:HISTory:STARt....1216
ACQuire:HISTory:STOP....1216
ACQuire:HISTory:TPACq....1216
ACQuire:HISTory:TSABsolute?....1217
ACQuire:HISTory:TSDate?....1217
ACQuire:HISTory:TSRelative?....1217
ACQuire:HISTory:TSRReference?....1218
ACQuire:HISTory[:STATe]....1218

ACQuire:HISTory:CURRent <CurrentAcqIndex>

Accesses a particular acquisition in the memory to display it, or to save it. The newest acquisition always has the index "0". Older acquisitions have a negative index.

Parameters:

<CurrentAcqIndex>
Range: -2147483648 to 0
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Current acq" on page 246

ACQuire:HISTory:ISODate?

Returns the absolute date and time of the acquisition that is selected in history view in ISO 8601 format. The same format is used in the header of exported waveform data files.

See also: `ACQuire:HISTory:CURRent`).

Return values:

<DateTimeISO8601> String with absolute date and time in this order: year, month, day, hour, minutes, seconds, and milliseconds.

Example:

```
ACQ:HIST:ISOD?
<-- "2024-10-02T10:11:09.603208067"
```

Usage: Query only
Asynchronous command

ACQuire:HISTory:PLAY

Starts and stops the replay of the history waveforms.

Usage: Event
Asynchronous command

Manual operation: See "Player" on page 246

ACQuire:HISTory:REPLay <AutoRepeat>

If enabled, the replay of the history waveform sequence repeats automatically.

Otherwise, the replay stops at the stop index set with `ACQuire:HISTory:STOP` on page 1216.

Parameters:

<AutoRepeat> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Auto repeat" on page 248

ACQuire:HISTory:STARt <StartAcqIndex>

Sets the index of the first (oldest) acquisition to be displayed or exported. The index is always negative.

Parameters:

<StartAcqIndex> Range: -2147483648 to 0
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Start acq" on page 246

ACQuire:HISTory:STOP <StopAcqIndex>

Sets the index of the last (newest) acquisition to be displayed or exported. The newest acquisition of the complete acquisition series always has the index "0".

Parameters:

<StopAcqIndex> Range: -2147483648 to 0
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Stop acq" on page 246

ACQuire:HISTory:TPACq <TimePerAcq>

Sets the display time for one acquisition. The shorter the time, the faster the replay is.

Parameters:

<TimePerAcq>
Range: 4E-05 to 10
Increment: 1
*RST: 0.05
Default unit: s

Usage: Asynchronous command

Manual operation: See "Display time" on page 246

ACQuire:HISTory:TSABsolute?

Returns the absolute daytime of the selected acquisition (`ACQuire:HISTory:CURRent`).

For automatic parsing of the time, use `ACQuire:HISTory:ISODate?`.

Return values:

<TimeAbsString> String containing the time and unit

Example:

```
ACQ:HIST:TSAB?
<-- "10:11 9,603.208.067 s"
```

Usage: Query only
Asynchronous command

Manual operation: See "Time stamp" on page 247

ACQuire:HISTory:TSDate?

Returns the date of the selected acquisition (`ACQuire:HISTory:CURRent`).

For automatic parsing of the time, use `ACQuire:HISTory:ISODate?`.

Return values:

<DateAbsString> String parameter with acquisition date

Example:

```
ACQ:HIST:TSD?
<-- "2024:10:02"    //02 Oct 2024
```

Usage: Query only
Asynchronous command

Manual operation: See "Time stamp" on page 247

ACQuire:HISTory:TSRelative?

Returns the relative time of the current acquisition - the time difference to the newest acquisition (index = 0).

See also: `ACQuire:HISTory:CURRent`.

Return values:

<TimeRelativ> Range: -1E+26 to 1E+26
Increment: 1
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

Manual operation: See "Time stamp" on page 247

ACQuire:HISTory:TSRReference?

Returns the relative time of the currently selected acquisition and the internal reference time (horizontal alignment) in history view in relation to the acquisition with index 0.

Return values:

<TimeRelIntRef> Range: -1E+26 to 1E+26
Increment: 1
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

Manual operation: See "Time stamp" on page 247

ACQuire:HISTory[:STATe] <State>

Enables the history mode and allows you to save history waveforms to file.

Parameters:

<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show history" on page 245

18.12.4 Reference waveforms

- Setup....1218
- Scaling....1222
- Reference waveform data export....1226

18.12.4.1 Setup

REFCurve<rc>:ABORt....1219
REFCurve<rc>:CLEar....1219
REFCurve<rc>:NAME....1219
REFCurve<rc>:OFFSet....1220

REFCurve<rc>:OPEN....1220
REFCurve<rc>:RESTore....1220
REFCurve<rc>:SAVE....1220
REFCurve<rc>:SOURce....1221
REFCurve<rc>:STATe....1222
REFCurve<rc>:UPDate....1222

REFCurve<rc>:ABORt

Aborts a running reference waveform export, which was started with `REFCurve<rc>:SAVE`, or a running reference waveform update, which was started with `REFCurve<rc>:UPDate`.

Suffix:
<rc> 1 to 8, index of the reference waveform

Usage: Event
Asynchronous command

Manual operation: See "Save as" on page 253

REFCurve<rc>:CLEar

Deletes the selected reference waveform. It disappears from the display, and its memory is deleted.

Suffix:
<rc> 1 to 8, index of the reference waveform

Usage: Setting only
Asynchronous command

Manual operation: See "Clear" on page 253

REFCurve<rc>:NAME <Name>

Defines the path, filename and extension of the reference waveform file to be loaded, saved or deleted.

For supported file types, see "Supported file formats" on page 249.

Suffix:
<rc> 1 to 8, index of the reference waveform

Parameters:
<Name> String with path, filename and extension

Usage: Asynchronous command

Manual operation: See "Save as" on page 253

REFCurve<rc>:OFFSet <VerticalOffset>

The vertical offset moves the reference waveform vertically. Enter a value with the unit of the waveform.

Suffix:
<rc> 1 to 8, index of the reference waveform

Parameters:
<VerticalOffset> Range: -1E+26 to 1E+26
Increment: 1E-06
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "Vertical offset" on page 256

REFCurve<rc>:OPEN

Loads the reference waveform file selected by `REFCurve<rc>:NAME`.

Suffix:
<rc> 1 to 8, index of the reference waveform

Usage: Event
Asynchronous command

Manual operation: See "Open" on page 253

REFCurve<rc>:RESTore

Applies the original settings of the reference waveform to the horizontal and vertical settings of the selected waveform.

Suffix:
<rc> 1 to 8, index of the reference waveform

Usage: Setting only
Asynchronous command

Manual operation: See "Restore settings" on page 255

REFCurve<rc>:SAVE

Saves the reference waveform to the file selected by `REFCurve<rc>:NAME`.

Suffix:
<rc> 1 to 8, index of the reference waveform

Usage: Event
Asynchronous command

Manual operation: See "Save as" on page 253

REFCurve<rc>:SOURce <Source>

Selects the source waveform from the active waveforms, e.g. input channels, math waveforms, or spectrum.

Suffix:
<rc> 1 to 8, index of the reference waveform

Parameters:
<Source> C1 | C2 | ... | C8 | M1 | M2 | ... | M8 | R1 | R2 | ... | R8 | SPECMAXH1 | SPECMINH1 | SPECNORM1 | SPECAVER1 | SPECMAXH2 | SPECMINH2 | SPECNORM2 | SPECAVER2 | SPECMAXH3 | SPECMINH3 | SPECNORM3 | SPECAVER3 | SPECMAXH4 | SPECMINH4 | SPECNORM4 | SPECAVER4 | TRK1 | TRK2 | TRK3 | ... | TRK24 | PA1QPOWER | PA2QPOWER | ... | PA6QPOWER | PA1HPOWER1 | PA2HPOWER1 | ... | PA6HPOWER1| | PA1SPOWER | PA2SPOWER | ... | PA6SPOWER | PA1SOA | PA2SOA | ... | PA6SOA | PA1IPOWER | PA2IPOWER | ... | PA6IPOWER | PA1OPOWER1 | PA2OPOWER1 | ... | PA6OPOWER1 | PA1OPOWER2 | PA2OPOWER2 | ... | PA6OPOWER2 | PA1OPOWER3 | PA2OPOWER3 | ... | PA6OPOWER3 | PTHREE1QPOWER1 | PTHREE2QPOWER1 | ... | PTHREE6QPOWER1 | PTHREE1QPOWER2 | PTHREE2QPOWER2 | ... | PTHREE6QPOWER2 | PTHREE1QPOWER3 | PTHREE2QPOWER3 | ... | PTHREE6QPOWER3 | PTHREE1QTPOWER | PTHREE2QTPOWER | ... | PTHREE6QTPOWER | PTHREE1HPOWER1 | PTHREE2HPOWER1 | ... | PTHREE6HPOWER1 | PTHREE1HPOWER2 | PTHREE2HPOWER2 | ... | PTHREE6HPOWER2 | PTHREE1HPOWER3 | PTHREE2HPOWER3 | ... | PTHREE6HPOWER3 | PTHREE1HTPOWER | PTHREE2HTPOWER | ... | PTHREE6HTPOWER | PTHREE1EIP1 | PTHREE2EIP1 | ... | PTHREE6EIP1 | PTHREE1EIP2 | PTHREE2EIP2 | ... | PTHREE6EIP2 | PTHREE1EIP3 | PTHREE2EIP3 |... | PTHREE6EIP3 | PTHREE1EITP | PTHREE2EITP | ... | PTHREE6EITP | PTHREE1EOP1 | PTHREE2EOP1 | ... | PTHREE6EOP1 | PTHREE1EOP2 | PTHREE2EOP2 | ... | PTHREE6EOP2 | PTHREE1EOP3 | PTHREE2EOP3 |... | PTHREE6EOP3 | PTHREE1EOTP | PTHREE2EOTP | ... | PTHREE6EOTP | PA1TOPOWER | PA2TOPOWER | ... | PA6TOPOWER | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11

Usage: Asynchronous command

Manual operation: See "Source" on page 252

REFCurve<rc>:STATe <State>

Enables the display of the reference waveform in the diagram. Before you can display it, create the reference waveform.

Suffix:
<rc> 1 to 8, index of the reference waveform

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show" on page 252

REFCurve<rc>:UPDate

Copies the selected source waveform with all its settings to the memory of the reference waveform. If there is a previously defined reference waveform in this memory, it is updated by the current source waveform. If the acquisition is running, the reference waveform is a snapshot.

Suffix:
<rc> 1 to 8, index of the reference waveform

Usage: Event
Asynchronous command

Manual operation: See "Create/Update" on page 253

18.12.4.2 Scaling

REFCurve<rc>:AXIS[:XMODe] ... 1222
REFCurve<rc>:SCALe ... 1223
REFCurve<rc>:POSition ... 1223
REFCurve<rc>:HMODe ... 1223
REFCurve<rc>:RESCale:HORizontal:FACTor ... 1224
REFCurve<rc>:RESCale:HORizontal:OFFSet ... 1224
REFCurve<rc>:RESCale:HORizontal:STATe ... 1224
REFCurve<rc>:RESCale:VERTical:FACTor ... 1225
REFCurve<rc>:RESCale:VERTical:OFFSet ... 1225
REFCurve<rc>:RESCale:VERTical:STATe ... 1225
REFCurve<rc>:TOORiginal ... 1226
REFCurve<rc>:VMODe ... 1226

REFCurve<rc>:AXIS[:XMODe] <XAxisMode>

Defines the scaling method for the frequency (x-axis) of the reference curve.

Suffix:
<rc> 1 to 8, index of the reference waveform

Parameters:
<XAxisMode> LIN | LOG
`LIN`: Linear scaling
`LOG`: Logarithmic scaling
*RST: LIN

Usage: Asynchronous command

REFCurve<rc>:SCALe <VerticalScale>

Sets the vertical scale, which defines the displayed amplitude of the selected waveform.

Suffix:
<rc> 1 to 8, index of the reference waveform

Parameters:
<VerticalScale> Range: 1E-15 to 1E+26
Increment: 1E-05
*RST: 0.5
Default unit: Unit of the source waveform

Usage: Asynchronous command

Manual operation: See "[Scale]" on page 53

REFCurve<rc>:POSition <VertPosi>

Available, if `REFCurve<rc>:VMODe` is set to `INDependent`.

Moves the reference waveform up or down in the diagram.

Suffix:
<rc> 1 to 8, index of the reference waveform

Parameters:
<VertPosi> Range: -1E+26 to 1E+26
Increment: 0.02
*RST: 0
Default unit: div

Usage: Asynchronous command

Manual operation: See "Vertical position" on page 256

REFCurve<rc>:HMODe <HorizontalMode>

Selects the coupling of horizontal settings.

Suffix:
<rc> 1 to 8, index of the reference waveform

Parameters:
<HorizontalMode> ORIGinal | COUPled

ORIGinal
Horizontal scaling and reference point of the source waveform are used.

COUPled
The current horizontal settings of the diagram are used.

*RST: ORIGinal

Usage: Asynchronous command

Manual operation: See "Mode" on page 257

REFCurve<rc>:RESCale:HORizontal:FACTor <ScaleFactor>

Sets the horizontal scale factor. A factor greater than 1 stretches the waveform horizontally, a factor lower than 1 compresses the curve.

Suffix:
<rc> 1 to 8, index of the reference waveform

Parameters:
<ScaleFactor>
Range: 1E-14 to 100000000000000
Increment: 0.1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Scale factor" on page 257

REFCurve<rc>:RESCale:HORizontal:OFFSet <Offset>

Moves the waveform horizontally. Enter a value with a time unit suitable for the time scale of the diagram.

Positive values shift the waveform to the right, negative values shift it to the left.

Suffix:
<rc> 1 to 8, index of the reference waveform

Parameters:
<Offset>
Range: -5000000 to 5000000
Increment: 0.01
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "Horizontal offset" on page 258

REFCurve<rc>:RESCale:HORizontal:STATe <State>

If enabled, the horizontal offset and factor are applied to the reference waveform.

Stretching and offset change the display of the waveform independent of the horizontal settings of the source waveform and of the horizontal diagram settings.

Suffix:
<rc> 1 to 8, index of the reference waveform

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Enable" on page 257

REFCurve<rc>:RESCale:VERTical:FACTor <ScaleFactor>

Sets the vertical scale factor. A factor greater than 1 stretches the waveform vertically, a factor lower than 1 compresses the curve.

Suffix:
<rc> 1 to 8, index of the reference waveform

Parameters:
<ScaleFactor> Range: -100000000 to 100000000
Increment: 0.1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Scale factor" on page 257

REFCurve<rc>:RESCale:VERTical:OFFSet <Offset>

The vertical offset moves the reference waveform vertically. Enter a value with the unit of the waveform.

Like vertical offset of a channel waveform, the offset of a reference waveform is subtracted from the measured value. Negative values shift the waveform up, positive values shift it down.

Suffix:
<rc> 1 to 8, index of the reference waveform

Parameters:
<Offset> Range: -100000000 to 100000000
Increment: 1E-06
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "Vertical offset" on page 257

REFCurve<rc>:RESCale:VERTical:STATe <State>

If enabled, the vertical offset and factor are applied to the reference waveform.

Stretching and offset change the display of the waveform independent of the vertical scale and position.

Suffix:
<rc> 1 to 8, index of the reference waveform

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Enable" on page 257

REFCurve<rc>:TOORiginal

Available, if `REFCurve<rc>:VMODe` is set to `INDependent`.

Restores the original vertical settings of the reference waveform.

Suffix:
<rc> 1 to 8, index of the reference waveform

Usage: Setting only
Asynchronous command

Manual operation: See "Set to original" on page 255

REFCurve<rc>:VMODe <VerticalMode>

Selects the coupling of vertical settings.

Suffix:
<rc> 1 to 8, index of the reference waveform

Parameters:
<VerticalMode> COUPled | INDependent

COUPled
Vertical position and scale of the source are used.

INDependent
Scaling and position can be set specific to the reference waveform.

*RST: INDependent

Usage: Asynchronous command

Manual operation: See "Vertical mode" on page 255

18.12.4.3 Reference waveform data export

Commands to transmit the data of reference waveforms are the following:

- `REFCurve<rc>:DATA:HEADer?` on page 1256
- `REFCurve<rc>:DATA[:VALues]?` on page 1257

- REFCurve<rc>:DATA:STYPe? on page 1257

Commands for saving waveform data to a file are described in Section 18.13.4, "Waveform data: export to file", on page 1240.

18.12.5 Waveform histograms

- Histogram settings 1227
- Window settings 1229
- Histogram data transfer 1231

18.12.5.1 Histogram settings

HISTogram<m>:ADD

Creates a new histogram with the specified index.

Suffix:
<m> 1...8, index of the histogram

Usage: Setting only
Asynchronous command

HISTogram<m>:COUNt? <Count>

Returns the number of created histograms.

You can query the minimum and maximum values with `<command>? MIN` and `<command>? MAX`.

Suffix:
<m> Irrelevant, omit the suffix.

Return values:
<Count> Counted number of histograms

Usage: Query only
Asynchronous command

HISTogram<m>:ENABle <State>

Enables or disables the histogram evaluation and display. The histogram settings are kept until the histogram is deleted.

Suffix:
<m> 1...8, index of the histogram

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "State" on page 260

HISTogram<m>:MODE <Mode>

Defines the type of histogram.

Suffix:
<m> 1...8, index of the histogram

Parameters:
<Mode> VERTical | HORizontal

VERTical
A vertical histogram has horizontal bars that show the occurence of amplitude, or vertical values.

HORizontal
A horizontal histogram has vertical bars that show the occurrence of a sample at a given time on the x-axis.

*RST: VERTical

Usage: Asynchronous command

Manual operation: See "Mode" on page 260

HISTogram<m>:REMove

Deletes the specified histogram.

Suffix:
<m> 1...8, index of the histogram

Usage: Setting only
Asynchronous command

HISTogram<m>:RESet

Restarts the calculation of the selected histogram.

To reset all histograms and measurements, use `DISPlay:CLR`.

Suffix:
<m> 1...8, index of the histogram

Usage: Setting only
Asynchronous command

Manual operation: See "Reset" on page 260

HISTogram<m>:SOURce <Source>

Defines the source of the histogram.

Suffix:
<m> 1...8, index of the histogram

Parameters:

<Source> C1 | C2 | ... | C8 | M1 | M2 | ... | M8 | R1 | R2 | ... | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11

Usage: Asynchronous command

Manual operation: See "Source" on page 260

18.12.5.2 Window settings

HISTogram<m>:WINDow:ENABle....1229
HISTogram<m>:WINDow:HORizontal:MODE....1229
HISTogram<m>:WINDow:VERTical:MODE....1229
HISTogram<m>:WINDow:HORizontal:ABSolute:POSition....1230
HISTogram<m>:WINDow:HORizontal:ABSolute:SPAN....1230
HISTogram<m>:WINDow:HORizontal:ABSolute:STARt....1230
HISTogram<m>:WINDow:HORizontal:ABSolute:STOP....1230
HISTogram<m>:WINDow:HORizontal:RELative:POSition....1230
HISTogram<m>:WINDow:HORizontal:RELative:SPAN....1230
HISTogram<m>:WINDow:HORizontal:RELative:STARt....1230
HISTogram<m>:WINDow:HORizontal:RELative:STOP....1230
HISTogram<m>:WINDow:VERTical:ABSolute:POSition....1231
HISTogram<m>:WINDow:VERTical:ABSolute:SPAN....1231
HISTogram<m>:WINDow:VERTical:ABSolute:STARt....1231
HISTogram<m>:WINDow:VERTical:ABSolute:STOP....1231
HISTogram<m>:WINDow:VERTical:RELative:POSition....1231
HISTogram<m>:WINDow:VERTical:RELative:SPAN....1231
HISTogram<m>:WINDow:VERTical:RELative:STARt....1231
HISTogram<m>:WINDow:VERTical:RELative:STOP....1231

HISTogram<m>:WINDow:ENABle <State>

When you use a histogram window, the analyzed part of the source waveform is limited vertically and horizontally.

Suffix:

<m> 1...8, index of the histogram

Parameters:

<State> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Use window" on page 261

HISTogram<m>:WINDow:HORizontal:MODE <Mode>
HISTogram<m>:WINDow:VERTical:MODE <Mode>

The commands define whether the window limits are entered as absolute or relative values, in horizontal and vertical direction.

Suffix:
<m> 1...8, index of the histogram

Parameters:
<Mode> ABS | REL
*RST: ABS

Usage: Asynchronous command

Manual operation: See "Mode" on page 261

HISTogram<m>:WINDow:HORizontal:ABSolute:POSition <Value>
HISTogram<m>:WINDow:HORizontal:ABSolute:SPAN <Value>
HISTogram<m>:WINDow:HORizontal:ABSolute:STARt <Value>
HISTogram<m>:WINDow:HORizontal:ABSolute:STOP <Value>

Set the horizontal window limits as absolute values. Enter the unit of the horizontal axis together with the value.

Suffix:
<m> 1...8, index of the histogram

Parameters:
<Value> Range: -1E+26 to 1E+26
Increment: 0.01
*RST: 0 for position, 0.02 for span, -0.01 for start and 0.01 for stop

Usage: Asynchronous command

Manual operation: See "Start, Stop, Range, Position" on page 261

HISTogram<m>:WINDow:HORizontal:RELative:POSition <Value>
HISTogram<m>:WINDow:HORizontal:RELative:SPAN <Value>
HISTogram<m>:WINDow:HORizontal:RELative:STARt <Value>
HISTogram<m>:WINDow:HORizontal:RELative:STOP <Value>

Set the horizontal window limits as relative values in % of the diagram width.

Suffix:
<m> 1...8, index of the histogram

Parameters:
<Value> Range: 0 for position, start and stop, 1E-15 for span to 100
Increment: 0.1
*RST: position: 50, span: 1, start: 0, stop: 100
Default unit: %

Usage: Asynchronous command

Manual operation: See "Relative start, Relative stop, Relative range, Relative position" on page 262

HISTogram<m>:WINDow:VERTical:ABSolute:POSition <Value>
HISTogram<m>:WINDow:VERTical:ABSolute:SPAN <Value>
HISTogram<m>:WINDow:VERTical:ABSolute:STARt <Value>
HISTogram<m>:WINDow:VERTical:ABSolute:STOP <Value>

Set the vertical window limits as absolute values. Enter the unit of the vertical axis together with the value.

Suffix:
<m> 1...8, index of the histogram

Parameters:
<Value>
Range: -1E+26 to 1E+26
Increment: 0.01
*RST: 0 for position, 0.02 for span, -0.01 for start and 0.01 for stop

Usage: Asynchronous command

Manual operation: See "Start, Stop, Range, Position" on page 262

HISTogram<m>:WINDow:VERTical:RELative:POSition <Value>
HISTogram<m>:WINDow:VERTical:RELative:SPAN <Value>
HISTogram<m>:WINDow:VERTical:RELative:STARt <Value>
HISTogram<m>:WINDow:VERTical:RELative:STOP <Value>

Set the vertical window limits as relative values in % of the diagram height.

Suffix:
<m> 1...8, index of the histogram

Parameters:
<Value>
Range: 0 for position, start and stop, 1E-15 for span to 100
Increment: 0.1
*RST: position: 50, span: 1, start: 0, stop: 100
Default unit: %

Usage: Asynchronous command

Manual operation: See "Start, Stop, Range, Position" on page 262

18.12.5.3 Histogram data transfer

To transfer the waveform histogram data to a remote computer, use:

- `EXPort:HISTogram<m>:DATA:HEADer?` on page 1262
- `EXPort:HISTogram<m>:DATA[:VALues]?` on page 1263

For export of histogram data to file, see Section 18.13.5, "Histogram data: export to file", on page 1245.

18.13 Data management

Some of the commands in the following section are asynchronous. An overlapping or asynchronous command does not automatically finish executing before the next command starts executing. If overlapping commands must be executed in a defined order, e.g. to avoid wrong measurement results, they must be serviced sequentially.

To prevent an overlapping execution of commands, one of the commands `*OPC`, `*OPC?` or `*WAI` can be used after the command or a command set.

For more information, see:

- www.rohde-schwarz.com/rc-via-scpi, section "Command sequence and synchronization"

18.13.1 Instrument settings

The Mass MEMory subsystem provides commands to access the storage media and to save and reload instrument settings.

File and directory names

The <file_name> and <directory_name> parameters are strings. Some commands use a fixed directory; for others the <file_name> can contain the complete path including the drive name and all subdirectories. If no complete path is specified, the file location is relative to the current directory, queried with `MMEMory:CDIRectory?`. The filename itself may contain the period as a separator for extensions.

File and directory names can be chosen according to Windows™ conventions. All letters and numbers are allowed, as well as the special characters "_", "^", "$", "~", "!", "#", "%", "&", "-", "{", "}", "(", ")", "@" and "`". Reserved filenames are CON, AUX, COM1, ..., COM4, LPT1, ..., LPT3, NUL and PRN.

The use of wildcards ? and * is not allowed.

MMEMory:DRIVes? 1233
MMEMory:DCATalog? 1233
MMEMory:DCATalog:LENGth? 1233
MMEMory:CDIRectory 1234
MMEMory:MDIRectory 1234
MMEMory:RDIRectory 1234
MMEMory:CATalog? 1234
MMEMory:CATalog:LENGth? 1235
MMEMory:COPY 1235
MMEMory:MOVE 1236
MMEMory:DELete 1236
MMEMory:DATA 1236
MMEMory:ATTRibute 1237
MMEMory:SAV 1237
MMEMory:RCL 1238
MMEMory:STORe:STATe 1238

MMEMory:LOAD:STATe....1238
MMEMory:GENerator:RCL....1238
MMEMory:GENerator:SAV....1239

MMEMory:DRIVes?

Returns the path list of available drives.

Return values:

<Drive> List of strings, for example:
Instrument only: `"/home/storage/userData"`
Instrument with connected USB flash drive:
`"/home/storage/userData","/run/media/usb/<MyDriveName>/MYD`
. MYDATA is the partition name, which is also shown in the file explorer.
Instrument with connected USB flash drive:
`"/home/storage/userData","/run/media/usb/<MyDriveName>/8AF`
. 8AF8-3EBA is an example ID. ID is used if the partition does not have a name, or the name cannot be read.

Usage: Query only

MMEMory:DCATalog? [<PathName>]

Returns the subdirectories of the current or of a specified directory.

Query parameters:

<PathName> String parameter to specify the directory. If the directory is omitted, the command queries the contents of the current directory, to be set and queried with `MMEMory:CDIRectory`.

Return values:

<FileEntry> Names of the subdirectories separated by colons. The first two strings are related to the parent directory.

Example: `MMEM:DCAT?`

Usage: Query only

MMEMory:DCATalog:LENGth? [<PathName>]

Returns the number of subdirectories of the current or of a specified directory. The number includes the parent directory strings "." and ".." and corresponds to the number of strings returned by the `MMEMory:DCATalog?` command.

Query parameters:

<PathName> String parameter to specify the directory. If the directory is omitted, the command queries the contents of the current directory, to be set and queried with `MMEMory:CDIRectory`.

Return values:

<FileEntryCount> Number of parent directories and subdirectories.

Example: `MMEM:DCAT:LENG?`
`5`

Usage: Query only

MMEMory:CDIRectory [<DirectoryName>]

Changes the default directory for file access.

Parameters:
<DirectoryName> String parameter to specify the directory.
*RST: "\"

Example: `MMEM:CDIR '/home/storage/userData/Waveforms'`

Usage: SCPI confirmed

MMEMory:MDIRectory <DirectoryName>

Creates a new directory with the specified name.

Setting parameters:
<DirectoryName> String parameter to specify the new directory. If the path consists of several subdirectories, the complete tree is created if necessary.

Example: `MMEM:MDIR '/home/storage/userData/Waveforms'`

Usage: Setting only

MMEMory:RDIRectory <DirectoryName>

Deletes the specified directory.

Setting parameters:
<DirectoryName> String parameter to specify the directory to be deleted.
This directory must be empty, otherwise it is not deleted.

Example: `MMEM:RDIR '/home/storage/userData/Test'`

Usage: Setting only

MMEMory:CATalog? [<PathName>][, <Format>]

Returns a list of files contained in the specified directory. The result corresponds to the number of files returned by the MMEMory:CATalog:LENgth command.

Query parameters:
<PathName> String parameter to specify the directory. If the directory is omitted, the command queries directory specified with `MMEMory:CDIRectory`.

<Format> ALL | WTIMe

ALL: Extended result including file, date, time and attributes
WTIMe: Extended result including file, date, time

Return values:

<UsedMemory> Total amount of storage currently used in the directory, in bytes.

<FreeMemory> Total amount of storage available in the directory, in bytes.

<FileEntry> All files and subdirectories of the directory are listed with their filename, format and size in bytes. The first two strings are related to the parent directory.

Example:

```
MMEM:CAT? '/home/storage/userData'
529479,1831777894400,".,DIR,0",",.,DIR,0",
"Backup,DIR,0","CSS,DIR,0","DATEN,DIR,0",
"Commands.jar,BIN,529479","FAVORITES,DIR,0",
"LOG,DIR,0","DATA,DIR,0","test,DIR,0",
"TotalCMD,DIR,0"
```

Usage: Query only
SCPI confirmed

MMEMory:CATalog:LENGth? [<PathName>]

Returns the number of files and subdirectories of the current or specified directory. The number includes the parent directory strings "." and ".." and it corresponds to the number of <FileEntry> strings returned by the `MMEMory:CATalog?` command.

Query parameters:

<PathName> String parameter, directory to be queried. If the directory is omitted, the current directory is queried, specified with `MMEMory:CDIRectory`.

Return values:

<Count> Number of files and subdirectories including parent directory entries.

Example:

```
MMEM:CDIR '/home/storage/userData'
MMEM:CAT:LENG?
11
```

Usage: Query only

MMEMory:COPY <FileSource>[, <FileDestination>]

Copies an existing file to a new file.

Setting parameters:

<FileSource> String parameter. Contains name and path of the file to be copied. Wildcards (* and ?) are allowed.

<FileDestination> String parameter. Contains name and path of the new file. If the file already exists, it is overwritten without notice. If no file destination is specified, the source file is written to the current directory specified with MMEMory:CDIRectory.

Usage: Setting only
SCPI confirmed

MMEMory:MOVE <FileSource>, <FileDestination>

Moves the specified file to a new location on the same drive and renames it.

Setting parameters:

<FileSource> String parameter, contains name and path of the file to be copied.
Wildcards (* and ?) are allowed. Therefore, specify a directory for <FileDestination>. Renaming is not possible.

<FileDestination> String parameter. Contains name and path of the new file. If no path is specified, the <FileSource> directory is used - the file is renamed.

Usage: Setting only
SCPI confirmed

MMEMory:DELete <FileName>

Removes the specified file/files. To delete directories, use MMEMory:RDIRectory.

Setting parameters:

<FileName> String parameter to specify the name and directory of the file to be removed. Wildcards (* and ?) are allowed.
If no path is defined, the current directory is used, specified with MMEMory:CDIRectory.

Example: `MMEM:DEL '*.CFG'`
Deletes all CFG files from the current directory.

Usage: Setting only
SCPI confirmed

MMEMory:DATA <FileName>, <Data>
MMEMory:DATA? <FileName>

Stores data in the specified file to the storage location specified using MMEMory:CDIRectory.

Parameters:

<Data> <block>

488.2 block data format. The delimiter EOI must be selected to achieve correct data transfer.
The block begins with character '#'. The next digit is the length of the length information, followed by this given number of digits providing the number of bytes in the following binary data.

Parameters for setting and query:

<FileName> String parameter, the name of the file the data is stored to.

Example: `MMEM:DATA 'abc.txt', #216This is the file`
#2: the length information has two digits.
16: the binary data has 16 bytes.

Example: `MMEM:DATA? 'abc.txt'`
Returns the data from file `abc.txt`.

MMEMory:ATTRibute <FileName>, <Attributes>
MMEMory:ATTRibute? <FileName>

Sets file attributes for the specified file/files. The command can be used for files only.

Setting parameters:

<Attributes> String with attributes and setting information.
'+' before the attribute: sets the attribute
'-' before the attribute: deletes the attribute
'R': read only
'H': hidden file

Parameters for setting and query:

<FileName> String parameter, contains name and path of the file. Wildcards (* and ?) are allowed.

Return values:

<FileEntry> String containing: "<file_name>,<file_attributes>"

MMEMory:SAV <FileDestination>

Stores the current instrument settings to the specified file.

Waveform generator settings are not included.

This command has the same effect as the combination of `*SAV` and `MMEMory:STORe:STATe`.

Parameters:

<FileDestination> String parameter specifying path and filename of the target file. Wildcards are not allowed.

Usage: Event

MMEMory:RCL <FileSource>

Restores the instrument settings from the specified file.

The stored instrument settings do not include waveform generator settings.

This command has the same effect as the combination of `MMEMory:LOAD:STATe` and `*RCL`.

Parameters:

'<FileSource>' String parameter specifying the path and filename of the source file. Wildcards are not allowed.

Usage: Event

MMEMory:STORe:STATe <MemoryNumber>, <FileName>

Stores the instrument settings from the specified internal memory to the specified file. To store the current instrument settings to the internal memory, use `*SAV` first.

Setting parameters:

<MemoryNumber> Number of the internal memory

Range: 1 to 99

<FileName> String parameter specifying the complete path and filename of the source file.

Usage: Setting only

MMEMory:LOAD:STATe <MemoryNumber>, <FileName>

Loads the instrument settings from the specified file to the specified internal memory. After the file has been loaded, the settings must be activated using a `*RCL` command.

Setting parameters:

<MemoryNumber> Number of the internal memory

Range: 1 to 99

<FileName> String parameter specifying the complete path and filename of the source file.

Usage: Setting only

MMEMory:GENerator:RCL <FilePath>

Restores the waveform generator settings from the specified file.

Parameters:

<FilePath> String parameter specifying the path and filename of the settings file.

Usage: Asynchronous command

MMEMory:GENerator:SAV <FilePath>

Stores the current waveform generator settings to the specified file.

Parameters:

<FilePath> String parameter specifying path and filename of the settings file.

Usage: Asynchronous command

18.13.2 Saveset

SAVeset:CONFig:PREView <IncludePreview>

If set to `OFF`, the saveset is stored without the preview image to reduce the file size.

Use the command each time before you save a saveset.

Parameters:

<IncludePreview> OFF | ON

*RST: ON

Usage: Asynchronous command

SAVeset:CONFig:UPReferences <UserSettings>

If ON, the user-specific display settings for the toolbar, waveform colors and diagram presentation are included in the saveset file. The setting affects the saving and the recall actions.

Parameters:

<UserSettings> OFF | ON

*RST: OFF

Usage: Asynchronous command

18.13.3 Generator saveset

GENerator:RCL <filePath>

Restores the waveform generator from the specified file.

Parameters:

<filePath> String parameter specifying the path and filename of the source file.

Usage: Asynchronous command

GENerator:SAV <filePath>

Stores the current waveform generator settings to the specified file.

Parameters:
<filePath> String parameter specifying path and filename of the target file.

Usage: Asynchronous command

18.13.4 Waveform data: export to file

EXPort:WAVeform:ABORt ... 1240
EXPort:WAVeform:AUTonaming:NAME ... 1240
EXPort:WAVeform:AUTonaming:PATH ... 1240
EXPort:WAVeform:AUTonaming:TYPE ... 1241
EXPort:WAVeform:CURSorset ... 1241
EXPort:WAVeform:GATE ... 1241
EXPort:WAVeform:NAME ... 1241
EXPort:WAVeform:SAVE ... 1242
EXPort:WAVeform:SCOPe ... 1242
EXPort:WAVeform:SOURce ... 1243
EXPort:WAVeform:STARt ... 1244
EXPort:WAVeform:STOP ... 1245

EXPort:WAVeform:ABORt

Aborts a running waveform export, which was started with `EXPort:WAVeform:SAVE`.

Usage: Event
Asynchronous command

EXPort:WAVeform:AUTonaming:NAME <FileName>

Sets a name for the waveform file, without extension. The name is extended with a time stamp when the file is saved.

The setting is used for automatic saving actions, for example, saving on trigger or mask violation. It has **no** effect on `EXPort:WAVeform:SAVE`.

Parameters:
<FileName> String with the filename.

Usage: Asynchronous command

Manual operation: See "File name base" on page 478

EXPort:WAVeform:AUTonaming:PATH <FolderPath>

Sets the directory where the waveform file is saved. For local storage, the path is always `/home/storage/userData`.

The setting is used for automatic saving actions, for example, saving on trigger or mask violation. It has **no** effect on `EXPort:WAVeform:SAVE`.

Parameters:
<FolderPath> String with the path.

Usage: Asynchronous command

Manual operation: See "<Folder>" on page 478

EXPort:WAVeform:AUTonaming:TYPE <FileExtension>

Sets the file type of the waveform file.

The setting is used for automatic saving actions, for example, saving on trigger or mask violation. It has **no** effect on `EXPort:WAVeform:SAVE`.

Parameters:

<FileExtension> CSV | REF | ZIP | H5

*RST: REF

Usage: Asynchronous command

Manual operation: See "File extension" on page 478

EXPort:WAVeform:CURSorset <Cursorset>

Sets the cursor set to be used for limited data export if `EXPort:WAVeform:SCOPe` is set to `CURSor`.

Parameters:

<Cursorset> CURSOR1 | CURSor1 | CURSOR2 | CURSor2 | CURSOR3 | CURSor3 | CURSOR4 | CURSor4

Usage: Asynchronous command

Manual operation: See "Export mode" on page 477

EXPort:WAVeform:GATE <Gate>

Selects the gate to be used for limited data export if `EXPort:WAVeform:SCOPe` is set to `GATE`.

Parameters:

<Gate> Number of the gate to be applied to exported data.

Usage: Asynchronous command

Manual operation: See "Export mode" on page 477

EXPort:WAVeform:NAME <name>

Sets the path, the filename and the file format of the export file. The setting is used for save-as operations that do not use the autonaming settings.

Parameters:

<name> String with path and filename with extension `.ref`, `.csv`, `.zip`, or `.h5`. Extension `.ref` is provided for single waveform export only, while `.zip` is for export of multiple waveforms in REF format. CSV can be used for export of single waveforms, and multiple analog channels.
For local storage, the path is always `/home/storage/userData`.

Example:

```
EXP:WAV:NAME '/home/storage/userData/Export_C1.csv'
EXP:WAV:SCOP DISP
EXP:WAV:SAVE
```

Saves the visible waveform data of channel 1 in xml format to `/home/storage/userData/Export_C1.csv`.

Usage: Asynchronous command

Manual operation: See "Save As" on page 478

EXPort:WAVeform:SAVE

Saves the waveform to the file specified with `EXPort:WAVeform:NAME`.

Usage: Event
Asynchronous command

Manual operation: See "Save As" on page 478

EXPort:WAVeform:SCOPe <Scope>

Defines the part of the waveform record that has to be stored.

Parameters:

<Scope> DISPlay | ALL | CURSor | GATE | MANual

DISPlay
Waveform data that is displayed in the diagram.

ALL
Complete waveform, which is usually longer than the displayed waveform.

CURSor
Data between the cursor lines if a cursor measurement is defined for the source waveform.

GATE
Data included in the measurement gate if a gated measurement is defined for the source waveform.

MANual
Saves the data between user-defined start and stop values to be set with `EXPort:WAVeform:STARt` and `EXPort:WAVeform:STOP`.

*RST: DISPlay

Example: See Section 18.5.4, "Data transfer in roll mode", on page 1056.

Usage: Asynchronous command

Manual operation: See "Export mode" on page 477

EXPort:WAVeform:SOURce <Sources>

Selects the waveform or waveforms to be exported to file.

Parameters:

<Sources> Comma-separated list of waveforms

Possible waveform sources are:
Analog signals: C1,C2,...,C8
Digital signals: D0,D1,D2,...,D15
Math waveforms: M1,M2,M3,M4,M5
Reference waveforms: R1,R2,R3,R4
Spectrum
traces: SPECMAXH1,SPECMINH1,SPECNORM1,SPECAVER1,SPECMAXH2,SPECMINH2,SPECNORM2,SPECAVER2,SPECMAXH3,SPECMINH3,SPECNORM3,SPECAVER3,SPECMAXH4,SPECMINH4,SPECNORM4,SPECAVER4
Tracks: TRK1,TRK2,TRK3, ...,TRK24
Analog channels of connected scopes (ScopeSync):
O<n>C1,O<n>C2, ... ,O<n>C8 (<n> = 2 to 11)
Power waveforms: PA1QPOWER | PA2QPOWER | ... | PA6QPOWER | PA1HPOWER1 | PA2HPOWER1 | ... | PA6HPOWER1| | PA1SPOWER | PA2SPOWER | ... | PA6SPOWER | PA1IPOWER | PA2IPOWER | ... | PA6IPOWER | PA1OPOWER1 | PA2OPOWER1 | ... | PA6OPOWER1 | PA1OPOWER2 | PA2OPOWER2 | ... | PA6OPOWER2 | PA1OPOWER3 | PA2OPOWER3 | ... | PA6OPOWER3 | PA1TOPOWER | PA2TOPOWER | ... | PA6TOPOWER | PA1SOA | PA2SOA | ... | PA6SOA

3-phase power waveforms: PTHREE1QPOWER1 | PTHREE2QPOWER1 | ... | PTHREE6QPOWER1 | PTHREE1QPOWER2 | PTHREE2QPOWER2 | ... | PTHREE6QPOWER2 | PTHREE1QPOWER3 | PTHREE2QPOWER3 | ... | PTHREE6QPOWER3 | PTHREE1QTPOWER | PTHREE2QTPOWER | ... | PTHREE6QTPOWER | PTHREE1HPOWER1 | PTHREE2HPOWER1 | ... | PTHREE6HPOWER1 | PTHREE1HPOWER2 | PTHREE2HPOWER2 | ... | PTHREE6HPOWER2 | PTHREE1HPOWER3 | PTHREE2HPOWER3 | ... | PTHREE6HPOWER3 | PTHREE1HTPOWER | PTHREE2HTPOWER | ... | PTHREE6HTPOWER | PTHREE1EIP1 | PTHREE2EIP1 | ... | PTHREE6EIP1 | PTHREE1EIP2 | PTHREE2EIP2 | ... | PTHREE6EIP2 | PTHREE1EIP3 | PTHREE2EIP3 |... | PTHREE6EIP3 | PTHREE1EITP | PTHREE2EITP | ... | PTHREE6EITP | PTHREE1EOP1 | PTHREE2EOP1 | ... | PTHREE6EOP1 | PTHREE1EOP2 | PTHREE2EOP2 | ... | PTHREE6EOP2 | PTHREE1EOP3 | PTHREE2EOP3 |... | PTHREE6EOP3 | PTHREE1EOTP | PTHREE2EOTP | ... | PTHREE6EOTP

Example:

```
EXP:WAV:NAME '/home/storage/userData/Export_C2.csv'
EXPort:WAVeform:SOURce C2
EXP:WAV:SCOP DISP
EXP:WAV:SAVE
```

Exports the data of channel 2 to a CSV file.

Example:

```
EXP:WAV:NAME '/home/storage/userData/Export_multi.zip'
EXPort:WAVeform:SOURce C1,C2,SPECNORM1,SPECAVER1
EXP:WAV:SCOP DISP
EXP:WAV:SAVE
```

Exports the data of channel 1, channel 2, normal and average spectrum traces to a zip file.

Usage: Asynchronous command

Manual operation: See "Source" on page 476

EXPort:WAVeform:STARt <Start>

Sets the start time value of the waveform section for export, if `EXPort:WAVeform:SCOPe` on page 1242 is set to `Manual`.

Parameters:

<Start>

Range: -1E+26 to 1E+26
Increment: 0.01
*RST: 0.01
Default unit: s

Usage: Asynchronous command

Manual operation: See "Export mode" on page 477

EXPort:WAVeform:STOP <Stop>

Sets the end time value of the waveform section for export, if `EXPort:WAVeform:SCOPe` on page 1242 is set to `Manual`.

Parameters:

<Stop>
Range: -1E+26 to 1E+26
Increment: 0.01
*RST: 0.01
Default unit: s

Usage: Asynchronous command

Manual operation: See "Export mode" on page 477

18.13.5 Histogram data: export to file

You can export the data of waveform histograms, and the data of histograms on measurement results. One histogram per file can be exported.

EXPort:HMEasurement<m>:NORMalize....1245
EXPort:HISTogram<m>:NORMalize....1245
EXPort:HMEasurement<m>:NAME....1245
EXPort:HISTogram<m>:NAME....1245
EXPort:HMEasurement<m>:SAVE....1246
EXPort:HISTogram<m>:SAVE....1246

EXPort:HMEasurement<m>:NORMalize <Normalization>
EXPort:HISTogram<m>:NORMalize <Normalization>

If normalization is off, the number of samples in a given bin is exported as integer values. With normalization, the ratio of samples in a given bin to the sum of all samples is exported as float value. The sum of all normalized values is 1.

The command affects all histogram exports.

Suffix:

<m> Irrelevant, omit the suffix.

Parameters:

<Normalization> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Normalization" on page 494

EXPort:HMEasurement<m>:NAME <SaveAsPath>
EXPort:HISTogram<m>:NAME <SaveAsPath>

Sets the path, the filename and the file format of the export file for histogram. The command affects all histogram exports.

Suffix:
<m> Irrelevant, omit the suffix.

Parameters:
<SaveAsPath> String with path and file name with extension `.csv`.

Usage: Asynchronous command

Manual operation: See "Save settings" on page 494

EXPort:HMEasurement<m>:SAVE

Saves the histogram on the results of the specified measurement to file. The target file is set using `EXPort:HMEasurement<m>:NAME`.

Suffix:
<m> 1 to 24, index of the measurement

Usage: Event
Asynchronous command

Manual operation: See "Save settings" on page 494

EXPort:HISTogram<m>:SAVE

Saves the specified histogram to file. The target file is set using `EXPort:HISTogram<m>:NAME` on page 1245.

Suffix:
<m> 1...8, index of the histogram

Usage: Event
Asynchronous command

Manual operation: See "Save settings" on page 494

18.13.6 Sessions

SESSion:LOAD[:EXECute] 1246
SESSion:SAVE:ABORt 1247
SESSion:SAVE:CHANnel 1247
SESSion:SAVE:REFerence 1247
SESSion:SAVE[:EXECute] 1247
SESSion:USERpref 1248

SESSion:LOAD[:EXECute] <Filepath>

Loads a session file.

To reload also user-specific display settings (if included in the session file), set `SESSion:USERpref ON`.

Setting parameters:
<Filepath> String parameter specifying path and filename of the session file.

Usage: Setting only
Asynchronous command

Manual operation: See "Open" on page 500

SESSion:SAVE:ABORt

Stops the saving process of a session file.

Usage: Setting only
Asynchronous command

Manual operation: See "Save settings" on page 499

SESSion:SAVE:CHANnel <ChWfms>

Includes the channel waveform data in the session file.

Parameters:
<ChWfms> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Channel waveforms" on page 498

SESSion:SAVE:REFerence <RefWfms>

Includes the reference waveform data in the session file.

Parameters:
<RefWfms> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Reference waveforms" on page 498

SESSion:SAVE[:EXECute] <Filepath>

Saves the current session with selected content to the specified file.

Setting parameters:
<Filepath> String parameter specifying path and filename of the target file.

Usage: Setting only
Asynchronous command

Manual operation: See "Save settings" on page 499

SESSion:USERpref <UserSettings>

If ON, the user-specific display settings for the toolbar, waveform colors and diagram presentation are included in the session file. The setting affects the saving and the recall actions.

Parameters:

<UserSettings> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Toolbar, color and diagram settings" on page 498

18.13.7 Results

EXPort:RESult:AUTonaming:NAME 1248
EXPort:RESult:AUTonaming:PATH 1248
EXPort:RESult:AUTonaming:TYPE 1249
EXPort:RESult:NAME 1249
EXPort:RESult:SAVE 1249
EXPort:RESult:SELect:CURSor 1249
EXPort:RESult:SELect:MEASurement 1249
EXPort:RESult:SELect:PLISt 1250

EXPort:RESult:AUTonaming:NAME <FileName>

Sets a name for the result file, without extension. The name is extended with a time stamp when the file is saved.

The setting is used for automatic saving actions, for example, saving on trigger or mask violation. It has **no** effect on `EXPort:RESult:SAVE`.

Parameters:

<FileName> String with the filename.

Usage: Asynchronous command

Manual operation: See "File name base" on page 496

EXPort:RESult:AUTonaming:PATH <FolderPath>

Sets the directory where the waveform file is saved. For local storage, the path is always `/home/storage/userData`.

The setting is used for automatic saving actions, for example, saving on trigger or mask violation. It has **no** effect on `EXPort:RESult:SAVE`.

Parameters:

<FolderPath> String with the path.

Usage: Asynchronous command

Manual operation: See "<Folder>" on page 495

EXPort:RESult:AUTonaming:TYPE <FileExtension>

Sets the file type of the waveform file.

The setting is used for automatic saving actions, for example, saving on trigger or mask violation. It has **no** effect on `EXPort:RESult:SAVE`.

Parameters:
<FileExtension> CSV

Usage: Asynchronous command

Manual operation: See "File extension" on page 496

EXPort:RESult:NAME <FilePath>

Sets the path, the filename and the file format of the export file.

Parameters:
<FilePath> String with path and file name with extension `.csv`.

Usage: Asynchronous command

Manual operation: See "Save As" on page 496

EXPort:RESult:SAVE

Saves the results to file. The target file is set using `EXPort:RESult:NAME`. To select the results to be exported, use `EXPort:RESult:SELect:CURSor` and `EXPort:RESult:SELect:MEASurement`.

Usage: Event
Asynchronous command

Manual operation: See "Save As" on page 496

EXPort:RESult:SELect:CURSor <CursorResult>

Includes the current cursor results in the export file.

Parameters:
<CursorResult> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Save results name" on page 495

EXPort:RESult:SELect:MEASurement <MeasResult>

Includes the current automatic measurement results in the export file.

Parameters:
<MeasResult> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Save results name" on page 495

EXPort:RESult:SELect:PLISt <SpectrumPeakList>

Includes the peak list results in the export file.

Parameters:
<SpectrumPeakList> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Save results name" on page 495

18.13.8 Screenshots

The `HCOPy` subsystem and some other commands control the output of display information for documentation purposes. The instrument allows two independent output configurations which can be set separately with the suffix.

Note that the remote mode is intended for maximum performance. Therefore, the display does not follow the remote commands constantly. To get a correct screenshot, turn the display on using `SYSTem:DISPlay:UPDate`.

HCOPy:DESTination<m>....1250
MMEMory:NAME....1251
HCOPy:DEVice<m>:LANGuage....1251
HCOPy:DEVice<m>:INVerse....1251
HCOPy:IMMediate<m>:NEXT....1252
HCOPy:IMMediate<m>....1252
HCOPy:ISBA....1252
HCOPy:SSD....1253
HCOPy:WBKG....1253
HCOPy:DATA?....1253

HCOPy:DESTination<m> <medium>

Selects the output medium: file or clipboard.

Suffix:
<m> 1..2
Selects the output configuration.

Parameters:

<medium> MMEM | CLIPBOARD

`MMEM`: saves image to a file.
`CLIPBOARD`: directs the image to the clipboard.

*RST: MMEM

Usage: Asynchronous command

Manual operation: See "<Folder>" on page 504

MMEMory:NAME <FileName>

Defines the filename for a screenshot that is stored to a file.

Parameters:

<FileName> String parameter specifying path and filename of the screenshot.

Example: See Section 18.5.3, "Saving screenshots to file", on page 1056.

Usage: SCPI confirmed
Asynchronous command

Manual operation: See "File name base" on page 504

HCOPy:DEVice<m>:LANGuage <FileFormat>

Defines the file format for output of the screenshot to file.

To set the output to file, use `HCOPy:DESTination<m>` with parameter `MMEM`.

Suffix:

<m> 1..2
Selects the output configuration.

Parameters:

<FileFormat> PNG | JPG

*RST: PNG

Usage: Asynchronous command

Manual operation: See "File extension" on page 504

HCOPy:DEVice<m>:INVerse <InverseColor>

Inverts the colors of the output, i.e. a dark waveform is shown on a white background.

See also `HCOPy:WBKG` and White background.

Suffix:

<m> 1..2
Selects the output configuration.

Parameters:
<InverseColor> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Inverse color" on page 503

HCOPy:IMMediate<m>:NEXT

Starts the output of the next display image, depending on the `HCOPy:DESTination<m>` destination setting.

If the screenshot is saved to a file, the file name used in the last saving process is automatically counted up to the next unused name. To define the file name, use `MMEMory:NAME`.

Suffix:
<m> 1..2
Selects the output configuration.

Example: See Section 18.5.3, "Saving screenshots to file", on page 1056.

Usage: Asynchronous command

Manual operation: See "Save" on page 504

HCOPy:IMMediate<m>

Starts the immediate output of the display image, depending on the `HCOPy:DESTination<m>` destination setting.

To define the file name, use `MMEMory:NAME`. Existing files are overwritten by the `HCOP:IMMM` command.

To get a correct screenshot of the diagrams, results, and dialog boxes, turn on the display using `SYSTem:DISPlay:UPDate`.

Suffix:
<m> 1..2
Selects the output configuration.

Example: See Section 18.5.3, "Saving screenshots to file", on page 1056.

Usage: Event
Asynchronous command

Manual operation: See "Save" on page 504

HCOPy:ISBA <IncludeSignBarScpi>

If enabled, the screenshot shows the signal bar below the diagram area.

Parameters:
<IncludeSignBarScpi>OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Include signal bar" on page 503

HCOPy:SSD <ShowSetupDialog>

If enabled, the currently open dialog box is included in the screenshot.

Parameters:
<ShowSetupDialog> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show setup dialog" on page 503

HCOPy:WBKG <WhiteBackground>

Inverts the background color, so you can picture waveforms with normal waveform colors on white background.

If both `HCOPy:WBKG` and `HCOPy:DEVice<m>:INVerse` are ON, the instrument inverts the background twice, and it appears black.

Parameters:
<WhiteBackground> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "White background" on page 503

HCOPy:DATA?

Creates a PNG screenshot and returns the data of the image file in a binary data stream. When receiving the data, write them into a PNG file which you can open later.

Usage: Query only
Asynchronous command

18.13.9 Data transfer to remote computer

The commands in this section return the data of waveform points or histogram bins for transmission from the instrument to the controlling computer. The data can be used in MATLAB, for example.

Usually, for each waveform type a `...:HEADer` command and a `....:VALue` command are available. For some waveforms, additional commands provided. For fast export of several waveforms at once, you can use `EXPort:WAVeform:DATA[:VALues]?`.

<Offset> and <Length> parameters in ...DATA[:VALues] commands

Without parameters, the complete waveform is retrieved. Using the offset and length parameters, data can be retrieved in smaller portions, which makes the command faster. If you send only one parameter, it is interpreted as offset, and the data is retrieved from offset to the end of the waveform.

- <Offset>:
  Number of offset waveform points to be skipped. The range is 0 to m, and the limit is *n* + *m* <= *record length*.
- <Length>:
  Number of waveform points to be retrieved. The range is 0 to n, and the limit is *n* + *m* <= *record length*.

CHANnel<ch>:DATA:HEADer? 1254
CHANnel<ch>:DATA[:VALues]? 1255
REFCurve<rc>:DATA:HEADer? 1256
REFCurve<rc>:DATA[:VALues]? 1257
REFCurve<rc>:DATA:STYPe? 1257
CALCulate:MATH<m>:DATA:HEADer? 1257
CALCulate:MATH<m>:DATA[:VALues]? 1258
CALCulate:MATH<m>:DATA:STYPe? 1258
CALCulate:SPECtrum<sp>:WAVeform:AVERage:DATA:HEADer? 1258
CALCulate:SPECtrum<sp>:WAVeform:MAXimum:DATA:HEADer? 1258
CALCulate:SPECtrum<sp>:WAVeform:MINimum:DATA:HEADer? 1258
CALCulate:SPECtrum<sp>:WAVeform:NORMal:DATA:HEADer? 1258
CALCulate:SPECtrum<sp>:WAVeform:AVERage:DATA[:VALues]? 1259
CALCulate:SPECtrum<sp>:WAVeform:MAXimum:DATA[:VALues]? 1259
CALCulate:SPECtrum<sp>:WAVeform:MINimum:DATA[:VALues]? 1259
CALCulate:SPECtrum<sp>:WAVeform:NORMal:DATA[:VALues]? 1259
CALCulate:SPECtrum<sp>:WAVeform:NORMal:DATA:FRAMe<fr>[:VALues]? 1259
DIGital<m>:DATA:HEADer? 1260
DIGital<m>:DATA[:VALues]? 1260
PBUS<pb>:DATA:FORMat 1261
PBUS<pb>:DATA:HEADer? 1261
PBUS<pb>:DATA[:VALues]? 1261
EXPort:HMEasurement<m>:DATA:HEADer? 1262
EXPort:HISTogram<m>:DATA:HEADer? 1262
EXPort:HMEasurement<m>:DATA[:VALues]? 1263
EXPort:HISTogram<m>:DATA[:VALues]? 1263
EXPort:WAVeform:DATA[:VALues]? 1263

CHANnel<ch>:DATA:HEADer?

Returns the header of channel waveform data, the attributes of the waveform.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<XStart> 1. header value: time of the first sample in s

<XStop> 2. header value: time of the last sample in s

<RecordLength> 3. header value: record length, number of samples

<ValuesPerSample> 4. header value: number of values per sample. For most waveforms, the result is 1. For peak detect and envelope waveforms, it is 2. If the number is 2, the number of returned values is twice the number of samples (record length).

Example:
```
CHAN1:DATA:HEAD?
-1E-07,9.980000000000001E-08,1000,1
```
Start time of the data is -1E-07 = 100 ns, and end time of the data is 9.980000000000001E-08 = 99.8 ns. The data stream has 1000 values with one value per sample.

Usage: Query only
Asynchronous command

CHANnel<ch>:DATA[:VALues]? [<Offset>[,<Length>]]

Returns the data of the specified channel waveform.

To set the export format, use `FORMat[:DATA]` on page 1060.

Suffix:
<ch> 1 to 8, depending on instrument model. Index of the analog channel.

Query parameters:
<Offset>, <Length> See "<Offset> and <Length> parameters in ...DATA[:VALues] commands" on page 1254.

Return values:
<Data> List of values according to the format and content settings.

Example: Retrieve the complete channel 1 waveform, only Y-values:
```
FORM ASC
CHAN1:DATA?
<-- -0.125000,-0.123016,-0.123016,-0.123016,-0.123016,-0.123016,...
```

Example: Retrieve the first 10 values of the waveform:
```
CHANnel:DATA:VALues? 0,10
<-- -0.10079051554203,-0.098814234137535,-0.098814234137535,
    -0.096837945282459,-0.094861663877964,-0.094861663877964,
    -0.092885382473469,-0.090909093618393,-0.090909093618393,
    -0.088932812213898
```

Example: Skip 5 samples and retrieve the next 5 samples:

```
CHANnel:DATA:VALues? 5,5
<-- -0.094861663877964,-0.092885382473469,-0.090909093618393,
    -0.090909093618393,-0.088932812213898
```

Usage: Query only
Asynchronous command

REFCurve<rc>:DATA:HEADer?

Returns header information on the reference waveform, the attributes of the waveform.

The information depends on the waveform domain, it is different for time domain and frequency domain reference waveforms. See:

- `CHANnel<ch>:DATA:HEADer?` on page 1254
- `CALCulate:SPECtrum<sp>:WAVeform:NORMal:DATA:HEADer?` on page 1258

Suffix:

<rc> 1 to 8, index of the reference waveform

Return values:

<XStart> 1. header value: time of the first sample in s for a time domain signal, or start frequency of the first spectrum bin in Hz for a frequency domain signal

<XStop> 2. header value: time of the last sample in s for a time domain signal, or start frequency of the last spectrum bin in Hz for a frequency domain signal

<RecordLength> 3. header value: record length of the waveform in samples or bins

<ValuesPerSample> 4. header value: number of values per sample or bin. The number depends on the source waveform from which the reference waveform was created.

Example: Time domain signal:

```
REFC:DATA:HEAD?
-1E-07,9.980000000000001E-08,1000,1
```

Start time of the data is -1E-07= -100 ns and stop time of the data is 9.980000000000001E-08= 99.8 ns. The data stream has 1000 values with one value per sample.

Example: Frequency domain signal:

```
REFC:DATA:HEAD?
549316.1734194756,1999450683.360919,2621,1
```

Start frequency of the first spectrum bin is 549316.1734194756 = ~ 549.3 kHz and start frequency of the last spectrum bin is 1999450683.360919 = ~ 1.999 GHz. The data stream has 2621 values with one value per bin.

Usage: Query only
Asynchronous command

REFCurve<rc>:DATA[:VALues]? [<Offset>[,<Length>]]

Returns the data of the specified reference waveform.

To set the export format, use `FORMat[:DATA]` on page 1060.

Suffix:
<rc> 1 to 8, index of the reference waveform

Query parameters:
<Offset>, <Length> See "<Offset> and <Length> parameters in ...DATA[:VALues] commands" on page 1254.

Return values:
<Data> List of values according to the format and content settings.

Usage: Query only
Asynchronous command

REFCurve<rc>:DATA:STYPe?

Returns the type of the source signal from which the reference waveform was created.

Suffix:
<rc> 1 to 8, index of the reference waveform

Return values:
<SignalType> NONE | CHANNEL | MATH | TRACK | REFERENCE | SPECTRUM | FRA_REF

Usage: Query only
Asynchronous command

CALCulate:MATH<m>:DATA:HEADer?

Returns the header of math waveform data, the attributes of the waveform.

Suffix:
<m> 1 to 8, index of the math waveform

Return values:
<XStart> 1. header value: time of the first sample in s

<XStop> 2. header value: time of the last sample in s

<RecordLength> 3. header value: record length of the waveform in samples

<ValuesPerSample> 4. header value: number of values per sample. For most waveforms, the result is 1. For peak detect and envelope waveforms, it is 2. If the number is 2, the number of returned values is twice the number of samples (record length).

Example: `CALC:MATH1:DATA:HEAD?`
`-1E-07,9.980000000000001E-08,1000,1`
Start time of the data is -1E-07 = 100 ns, and end time of the data is 9.980000000000001E-08 = 99.8 ns. The data stream has 1000 values with one value per sample.

Usage: Query only
Asynchronous command

CALCulate:MATH<m>:DATA[:VALues]? [<Offset>[,<Length>]]

Returns the data of the specified math waveform.

To set the export format, use `FORMat[:DATA]`.

Suffix:
<m> 1 to 8, index of the math waveform

Query parameters:
<Offset>, <Length> See "<Offset> and <Length> parameters in ...DATA[:VALues] commands" on page 1254.

<Length> Number of waveform points to be retrieved.

Example: `:CALC:MATH1:DATA:VAL? 100,10`
Returns 10 points from the start index 100.

Usage: Query only
Asynchronous command

CALCulate:MATH<m>:DATA:STYPe?

Returns the signal type of the math waveform.

Suffix:
<m> 1 to 8, index of the math waveform

Return values:
<SignalType> MATH

Usage: Query only
Asynchronous command

CALCulate:SPECtrum<sp>:WAVeform:AVERage:DATA:HEADer?
CALCulate:SPECtrum<sp>:WAVeform:MAXimum:DATA:HEADer?
CALCulate:SPECtrum<sp>:WAVeform:MINimum:DATA:HEADer?
CALCulate:SPECtrum<sp>:WAVeform:NORMal:DATA:HEADer?

Returns the header of spectrum data, the attributes of the waveform.

Suffix:
<sp> 1 to 4, index of the spectrum

Return values:
<XStart> 1. header value: start frequency of the first spectrum bin in Hz

<XStop> 2. header value: start frequency of the last spectrum bin in Hz

<RecordLength> 3. header value: record length of the waveform in bins

<ValuesPerSample> 4. header value: the number of values per bin is always = 1.

Example:
```
CALC:SPEC1:WAV:NORM:DATA:HEAD?
549316.1734194756,1999450683.360919,2621,1
```
Start frequency of the first spectrum bin is 549316.1734194756 = ~ 549.3 kHz. Start frequency of the last spectrum bin is 1999450683.360919 = ~ 1.999 GHz. The data stream has 2621 values with one value per bin.

Usage: Query only
Asynchronous command

CALCulate:SPECtrum<sp>:WAVeform:AVERage:DATA[:VALues]?
[<Offset>[,<Length>]]
CALCulate:SPECtrum<sp>:WAVeform:MAXimum:DATA[:VALues]?
[<Offset>[,<Length>]]
CALCulate:SPECtrum<sp>:WAVeform:MINimum:DATA[:VALues]?
[<Offset>[,<Length>]]
CALCulate:SPECtrum<sp>:WAVeform:NORMal:DATA[:VALues]?
[<Offset>[,<Length>]]

Returns the data of the specified spectrum trace.

To set the export format, use `FORMat[:DATA]` on page 1060.

Suffix:
<sp> 1 to 4, index of the spectrum

Query parameters:
<Offset>, <Length> See "<Offset> and <Length> parameters in ...DATA[:VALues] commands" on page 1254.

Return values:
<Data> List of values according to the format and content settings.

Usage: Query only
Asynchronous command

CALCulate:SPECtrum<sp>:WAVeform:NORMal:DATA:FRAMe<fr>[:VALues]?
[<Offset>[,<Length>]]

Returns the data of the normal spectrum trace of the specified frame.

To set the export format, use `FORMat[:DATA]` on page 1060.

Suffix:
<sp> 1 to 4, index of the spectrum

<fr> 1..*
Index of the frame

Query parameters:

<Offset>, <Length> See "<Offset> and <Length> parameters in ...DATA[:VALues] commands" on page 1254.

Return values:

<Data> List of values according to the format and content settings.

Usage: Query only
Asynchronous command

DIGital<m>:DATA:HEADer?

Returns the header of digital channel data, the attributes of the waveform.

Suffix:

<m> 0 to 15, index of the logic channel

Return values:

<XStart> 1. header value: time of the first sample in s

<XStop> 2. header value: time of the last sample in s

<RecordLength> 3. header value: record length of the waveform in samples

<ValuesPerSample> 4. header value: number of values per sample. For digital data, the result is always 1.

Example:
```
DIG3:DATA:HEAD?
-1E-07,9.980000000000001E-08,1000,1
```
Start time of the data is -1E-07 = -100 ns, and end time of the data is 9.980000000000001E-08= 99.8 ns. The data stream has 1000 values with one value per sample.

Usage: Query only
Asynchronous command

DIGital<m>:DATA[:VALues]? [<Offset>[,<Length>]]

Returns the data of the specified digital channel.

Suffix:

<m> 0..15
Selects the digital channel.

Query parameters:

<Offset>, <Length> See "<Offset> and <Length> parameters in ...DATA[:VALues] commands" on page 1254.

Return values:

<Data> List of values according to the format and content settings.

Usage: Query only
Asynchronous command

PBUS<pb>:DATA:FORMat <DataFormat>

Sets the data format of bus values, which are displayed in the decode table and on the comb bus display.

It also sets the format for the number representation for remote data transfer with `PBUS<pb>:DATA[:VALues]?`.

Suffix:
<pb> 1 to 4, index of the logic group

Parameters:
<DataFormat> HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG
*RST: HEX

Usage: Asynchronous command

Manual operation: See "Data format" on page 989

PBUS<pb>:DATA:HEADer?

Returns the header data of the indicated bus, the attributes of the data.

See also `DIGital<m>:DATA:HEADer?`.

Suffix:
<pb> 1 to 4, index of the logic group

Return values:
<XStart> 1. header value: time of the first sample in s

<XStop> 2. header value: time of the last sample in s

<RecordLength> 3. header value: record length of the waveform in samples

<ValuesPerSample> 4. header value: number of values per sample. For digital data, the result is always 1.

Usage: Query only
Asynchronous command

Manual operation: See "Data format" on page 989

PBUS<pb>:DATA[:VALues]? [<Offset>[,<Length>]]

Returns the data of the specified logic bus.

Without parameters, the complete waveform is retrieved. Using the offset and length parameters, data can be retrieved in smaller portions, which makes the command faster. If you send only one parameter, it is interpreted as offset, and the data is retrieved from offset to the end of the waveform.

Requirements:

- `PBUS<pb>:STATe` is set to `ON`.
- `PBUS<pb>:DISPlay:SHBU` is set to `ON`.

- A number format is set with `PBUS<pb>:DATA:FORMat`.

Suffix:
<pb> 1 to 4, index of the logic group

Query parameters:
<Offset>, <Length> See "<Offset> and <Length> parameters in ...DATA[:VALues] commands" on page 1254.

Return values:
<Data> List of values according to the format and content settings.

Example:
```
PBUS:STAT ON
PBUS:DISP:SHBU ON
PBUS:DISP:BTYP COMB
PBUS:DATA:FORMat HEX
PBUS:DATA:VAL?
```

Usage: Query only
Asynchronous command

Manual operation: See "Data format" on page 989

EXPort:HMEasurement<m>:DATA:HEADer?
EXPort:HISTogram<m>:DATA:HEADer?

Returns the header of the histogram data, the attributes of the waveform histogram or of the histogram on measurement results.

Suffix:
<m> 1 to 24, index of the measurement
or 1...8, index of the histogram

Return values:
<Start> 1. header value: start value. For measurement results in the measurement unit, for vertical waveform histogram in the waveform unit, for horizontal waveform histogram in s.

<End> 2. header value: end value, same units as for the start value.

<HistogrLength> 3. header value: number of histogram bins

Example:
```
EXP:HIST3:DATA:HEAD?
-0.250244,0.250122,1024
```
Start value of the histogram is about -250 mV, and end value is about 250 mV. The data stream has 1024 values, one value for each bin.

Usage: Query only
Asynchronous command

EXPort:HMEasurement<m>:DATA[:VALues]?
EXPort:HISTogram<m>:DATA[:VALues]?

Returns the data of the specified waveform histogram or of the histogram on measurement results.

To set the export format, use `FORMat[:DATA]`. For histogram data, only ASCii and REAL,32 and REAL,64 are supported. The normalization setting is considered: `EXPort:HISTogram<m>:NORMalize` or `EXPort:HMEasurement<m>:NORMalize`.

Suffix:
<m> 1 to 24, index of the measurement
or 1...8, index of the histogram

Return values:
<Data> Comma-separated list of values according to the format setting.

Usage: Query only
Asynchronous command

EXPort:WAVeform:DATA[:VALues]?

Starts a fast export of the selected waveforms for use in automated analysis systems. There is no corresponding `...:DATA:HEADer` command. Offset and length parameters are not available.

Select the waveforms for export with `EXPort:WAVeform:SOURce`, and the data scope with `EXPort:WAVeform:SCOPe`.

The data stream contains the pure data of the exported sources. The order of the sources can be read with `EXPort:WAVeform:SOURce?`. The order is predefined and independent of the setting order to ensure the same order for the same selection of waveforms.

Fast export is possible at low record length, depending on the instrument and active functionality. If fast export is not possible, you can export the single signals.

Parameters:
<Values> Binary format: stream of bytes, without delimiter
ASCII: comma-separated value list

Example: The following waveforms are active and acquired: C1, C2 and SPECNORM1.
Determine the number of values per waveform:

```
CHANnel1:WAVeform:DATA:HEADer? --> 1000 values
CHANnel2:WAVeform:DATA:HEADer?      --> 1000 values
CALCulate:SPECtrum1:WAVeform:NORMal:DATA:HEADer? --> 2867 values
```

Fast export of all waveforms at once as float values:

```
FORMat:DATA REAL, 32
EXPort:WAVeform:SOURce C2,C1,SPECNORM1
EXPort:WAVeform:SOURce?      --> C1,C2,SPECNORM1
EXPort:WAVeform:DATA:VALues?
--> data stream of 1000 values C1, then 1000 values C2, then 2867 values
```

If the fast export fails, use the export of single waveforms:

```
CHANnel1:WAVeform:DATA:VALues?
CHANnel2:WAVeform:DATA:VALues?
CALCulate:SPECtrum1:WAVeform:NORMal:DATA:VALues?
```

Usage: Query only
Asynchronous command

18.14 Automatic measurements

This section contains all remote commands to set up automatic measurements and to analyze the measurement results.

Measurement suffix <mg>

The suffix <mg> indicates the number of the measurement for which the command takes effect.

18.14.1 General settings

MEASurement<mg>:ACTive....1265
MEASurement<mg>:COUNt?....1265
MEASurement<mg>[:ENABle]....1265
MEASurement<mg>:SOURce....1265
MEASurement<mg>:FSRC....1266
MEASurement<mg>:SSRC....1267
MEASurement<mg>:MAIN....1267
MEASurement<mg>:GATE....1268
MEASurement<mg>:STATistics:RESet....1268
MEASurement<mg>:CLEar....1268
MEASurement<mg>:DISPlay:RESults....1268
MEASurement<mg>:DISPlay:REFLevel<rl>:LEVels....1269
MEASurement<mg>:ENVSelect....1269

MEASurement<mg>:ACTive <First>

Activates or deactivates the indicated measurement.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<First> OFF | ON

Usage: Asynchronous command

Manual operation: See "Add" on page 280

MEASurement<mg>:COUNt?

Returns the maximum number of measurements, which is the maximum value for the <mg> suffix.

Suffix:
<mg> Irrelevant, omit the suffix.

Return values:
<Count> Maximum number of measurements

Usage: Query only
Asynchronous command

MEASurement<mg>[:ENABle] <First>

Selects the indicated measurement.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<First> OFF | ON

Usage: Asynchronous command

Manual operation: See "Add" on page 280

MEASurement<mg>:SOURce <SignalSource>,[<SignalSource2>]

Sets the source of the measurement.

The source must fit the selected measurement type. For example, histogram measurements require a waveform histogram as source, and protocol measurements require a serial bus.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:

<SignalSource> NONE | C1 | C2 | ... | C8 | D0 | D1 | D2 | ... | D14 | D15 | M1 | M2 | ... | M8 | TRK1 | TRK2 | TRK3 | ... | TRK24 | HWAVeform1 | HWAVeform2 | ... | HWAVeform8 | PA1QPOWER | PA2QPOWER | ... | PA6QPOWER | PA1HPOWER1 | PA2HPOWER1 | ... | PA6HPOWER1| | PA1SPOWER | PA2SPOWER | ... | PA6SPOWER | PA1SOA | PA2SOA | ... | PA6SOA | PA1IPOWER | PA2IPOWER | ... | PA6IPOWER | PA1OPOWER1 | PA2OPOWER1 | ... | PA6OPOWER1 | PA1OPOWER2 | PA2OPOWER2 | ... | PA6OPOWER2 | PA1OPOWER3 | PA2OPOWER3 | ... | PA6OPOWER3 | PTHREE1QPOWER1 | PTHREE2QPOWER1 | ... | PTHREE6QPOWER1 | PTHREE1QPOWER2 | PTHREE2QPOWER2 | ... | PTHREE6QPOWER2 | PTHREE1QPOWER3 | PTHREE2QPOWER3 | ... | PTHREE6QPOWER3 | PTHREE1QTPOWER | PTHREE2QTPOWER | ... | PTHREE6QTPOWER | PTHREE1HPOWER1 | PTHREE2HPOWER1 | ... | PTHREE6HPOWER1 | PTHREE1HPOWER2 | PTHREE2HPOWER2 | ... | PTHREE6HPOWER2 | PTHREE1HPOWER3 | PTHREE2HPOWER3 | ... | PTHREE6HPOWER3 | PTHREE1HTPOWER | PTHREE2HTPOWER | ... | PTHREE6HTPOWER | PTHREE1EIP1 | PTHREE2EIP1 | ... | PTHREE6EIP1 | PTHREE1EIP2 | PTHREE2EIP2 | ... | PTHREE6EIP2 | PTHREE1EIP3 | PTHREE2EIP3 |... | PTHREE6EIP3 | PTHREE1EITP | PTHREE2EITP | ... | PTHREE6EITP | PTHREE1EOP1 | PTHREE2EOP1 | ... | PTHREE6EOP1 | PTHREE1EOP2 | PTHREE2EOP2 | ... | PTHREE6EOP2 | PTHREE1EOP3 | PTHREE2EOP3 |... | PTHREE6EOP3 | PTHREE1EOTP | PTHREE2EOTP | ... | PTHREE6EOTP | PA1TOPOWER | PA2TOPOWER | ... | PA6TOPOWER | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11

<SignalSource2> Same as <SignalSource>

Usage: Asynchronous command

Manual operation: See "Source" on page 279

MEASurement<mg>:FSRC <Source>

Defines the first measurement source.

The command is an alternative to `MEASurement<mg>:SOURce`.

Suffix:

<mg> 1 to 24, index of the measurement

Parameters:

<Source> See `MEASurement<mg>:SOURce` on page 1265.

Usage: Asynchronous command

MEASurement<mg>:SSRC <Source2>

Defines the second measurement source.

The command is an alternative to `MEASurement<mg>:SOURce`.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<Source2> See `MEASurement<mg>:SOURce` on page 1265.

Usage: Asynchronous command

Manual operation: See "Source 2, Clock source" on page 291

MEASurement<mg>:MAIN <MeasType>

Defines the measurement type that is assigned to the indicated measurement. To query the result, use `MEASurement<mg>:RESult[:ACTual]?` on page 1286.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<MeasType>

Amplitude/time measurements
HIGH | LOW | AMPLitude | MAXimum | MINimum | PDELta | MEAN | RMS | STDDev | CRESt | POVershoot | NOVershoot | AREA | RTIMe | FTIMe | PPULse | NPULse | PERiod | FREQuency | PDCYcle | NDCYcle | CYCarea | CYCMean | CYCRms | CYCStddev | CYCCrest | CAMPlitude | CMAXimum | CMINimum | CPDelta | PULCnt | DELay | PHASe | BWIDth | EDGecount | SETup | HOLD | SHT | SHR | DTOTrigger | SLERising | SLEFalling

Jitter measurements
CCJitter | NCJitter | CCWidth | CCDutycycle | TIE | UINTerval | DRATe | SKWDelay | SKWPhase
Require option R&S MXO5-K12.

Measurements on waveform histograms
WCOunt | HSAMples | HPEak | PEAK | UPEakvalue | LPEakvalue | HMAXimum | HMINimum | MEDian | MAXMin | HMEan | HSTDdev | M1STddev | M2STddev | M3STddev | MKPositive | MKNegative

Measurements for serial protocols
F2F | T2F | F2T | FLDValue | MBITrate | SBITrate | BIDLe | GAP | FCNT | FEC | FER | CFER | RSERr
Require option R&S MXO5-K500.

Eye measurements
ERPercent | ERDB | EHEight | EWIDth | ETOP | EBASe | QFACtor | RMSNoise | SNRatio | DCDistortion | ERTime | EFTime | EBRate | EAMPlitude | PPJitter | STDJitter | RMSJitter | CPPercent
Require option R&S MXO5-K136.

Usage: Asynchronous command

Manual operation: See "Select measurements" on page 280

MEASurement<mg>:GATE <Gate>

Sets the gate of the indicated measurement. Enable a gate before you assign a measurement to it (`GATE<g>:ENABle` =`ON`).

The query returns 0, if no gate is assigned.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<Gate> Number of the gate to be used

Usage: Asynchronous command

Manual operation: See "Gate" on page 282

MEASurement<mg>:STATistics:RESet
MEASurement<mg>:CLEar

Deletes the results of the specified measurement.

Suffix:
<mg> 1 to 24, index of the measurement

Usage: Setting only
Asynchronous command

Manual operation: See "Clear results" on page 281

MEASurement<mg>:DISPlay:RESults <ResultLines>

Enables the measurement annotations for the selected measurement. These annotations are, for example, periods, maximum and minimum values, relevant reference levels, and more.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<ResultLines> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Display result lines" on page 282

MEASurement<mg>:DISPlay:REFLevel<rl>:LEVels <DisplayLevels>

Displays the reference levels of the indicated measurement.

Suffix:
<mg> 1 to 24, index of the measurement

<rl> Irrelevant, omit the suffix.
Reference level set is assigned to the measurement.

Parameters:
<DisplayLevels> OFF | ON

*RST: OFF

Usage: Asynchronous command

MEASurement<mg>:ENVSelect <EnvelopeCurve>

Relevant only for measurements on envelope waveforms. It selects the envelope to be used for measurement.

Prerequisites:

- `ACQuire:TYPE` is set to `ENVElope`.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<EnvelopeCurve> MIN | MAX | BOTH

MIN
Measures on the lower envelope.

MAX
Measures on the upper envelope.

BOTH
The envelope is ignored, and the waveform is measured as usual.

*RST: BOTH

Usage: Asynchronous command

Manual operation: See "Envelope" on page 289

18.14.2 Settings for amplitude/time measurements

MEASurement<mg>:AMPTime:CSLope 1270
MEASurement<mg>:AMPTime:ESLope 1270
MEASurement<mg>:AMPTime:PTCount 1270
MEASurement<mg>:AMPTime:PSLope 1271
MEASurement<mg>:AMPTime:DELay<n>:DIRection 1271

MEASurement<mg>:AMPTime:DTOTrigger<n>:SLOPe 1271
MEASurement<mg>:AMPTime:DELay<n>:SLOPe 1272
MEASurement<mg>:AMPTime:PHASe:UNIT 1272
MEASurement<mg>:REFLevel<rl>:REFerence 1272

MEASurement<mg>:AMPTime:CSLope <SetHoldClkSlp>

Sets the edge of the clock from which the setup and hold times are measured.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<SetHoldClkSlp> POSitive | NEGative | EITHer
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Clock slope" on page 291

MEASurement<mg>:AMPTime:ESLope <EdgesSlope>

Sets the edge direction to be counted: rising edges, falling edges, or both. The setting is only relevant for edge count measurement `MEASurement<mg>:MAIN` is set to `EDGecount`.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<EdgesSlope> POSitive | NEGative | EITHer
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Edges slope" on page 290

MEASurement<mg>:AMPTime:PTCount <PulseCount>

Sets the number of positive pulses for the pulse train measurement. It measures the duration of N positive pulses from the rising edge of the first pulse to the falling edge of the N-th pulse.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<PulseCount> Range: 1 to 2147483647
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Pulse count" on page 289

MEASurement<mg>:AMPTime:PSLope <PulsesSlope>

Sets the first slope of the pulses to be counted. The setting is only relevant for pulse count and pulse train measurements (`MEASurement<mg>:MAIN` is set to `PULCnt` or `PULSetrain`.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<PulsesSlope> POSitive | NEGative | EITHer
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Pulse slope" on page 290

MEASurement<mg>:AMPTime:DELay<n>:DIRection <EdgeCountDir>

Selects the direction for counting slopes for each source: from the beginning of the waveform, or from the end.

Suffix:
<mg> 1 to 24, index of the measurement

<n> 1..2
Selects the source number.

Parameters:
<EdgeCountDir> FRFI | FRLA
`FRFI` - FRom FIrst, counting starts with the first edge of the waveform.
`FRLA` - FRom LAst, counting starts with the last edge of the waveform.
*RST: FRFI

Usage: Asynchronous command

Manual operation: See "Direction" on page 292

MEASurement<mg>:AMPTime:DTOTrigger<n>:SLOPe <DlyTrigSlp>

Sets the edge direction to be used for delay measurement.

Suffix:
<mg> 1 to 24, index of the measurement

<n> 1..2
Selects the source number.

Parameters:
<DlyTrigSlp> POSitive | NEGative | EITHer
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Delay to trigger measurement settings" on page 292

MEASurement<mg>:AMPTime:DELay<n>:SLOPe <Slope>

Sets the edge of each source, between which the delay is measured.

Suffix:
<mg> 1 to 24, index of the measurement

<n> 1..2
Selects the source number.

Parameters:
<Slope> POSitive | NEGative | EITHer
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Slope" on page 292

MEASurement<mg>:AMPTime:PHASe:UNIT <PhaseMode>

Selects the unit of the oase: degrees or radians.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<PhaseMode> DEGRees | RADians
*RST: DEGRees

Usage: Asynchronous command

Manual operation: See "Phase unit" on page 292

MEASurement<mg>:REFLevel<rl>:REFerence <RefLevSet>

Selects the set of reference levels that is used for the measurement and for the indicated measurement source. Each source of the measurement can have its own reference level set.

Suffix:
<mg> 1 to 24, index of the measurement

<rl> 1..2
Measurement source, to which the reference level set is applied. For most measurements, one source is needed. For delay measurements, for example, two measurement sources are required, and each source can have its own reference levels.

Parameters:

<RefLevSet> Number of the reference level set. Define the reference level set before you use it.

Example:

```
MEASurement1:MAIN DELay
MEASurement1:SOURce C1,C2
MEASurement1:REFLevel1:REFerence 1
MEASurement1:REFLevel2:REFerence 2
```

Measurement 1 is a delay measurement on channel 1 and channel 2. C1 is the first source and uses reference level set 1 (RL1). C2 is the second source and uses reference level set 2 (RL2).

Usage: Asynchronous command

Manual operation: See "Reference levels" on page 281

18.14.3 Settings for histogram measurements

MEASurement<mg>:HISTogram:PROBability:LIMit....1273
MEASurement<mg>:HISTogram:PROBability:TYPE....1273

MEASurement<mg>:HISTogram:PROBability:LIMit <Limit>

Defines a range around the probability marker.

The setting is relevant hor histogram measurements: `MEASurement<mg>:MAIN` on page 1267 is set to `MKPositive` or `MKNegative`.

Suffix:

<mg> 1 to 24, index of the measurement

Parameters:

<Limit>

Range: 0 to 100
Increment: 10
*RST: 10
Default unit: %

Usage: Asynchronous command

Manual operation: See "Probability limit" on page 296

MEASurement<mg>:HISTogram:PROBability:TYPE <Marker>

Defines the marker position in the probability domain.

The setting is relevant hor histogram measurements: `MEASurement<mg>:MAIN` on page 1267 is set to `MKPositive` or `MKNegative`.

Suffix:

<mg> 1 to 24, index of the measurement

Parameters:

<Marker> PEAK | UPPK | LWPK | MAXimum | MINimum | MEDian | MEAN

PEAK
The y-value with the maximum sample value in the histogram

UPPK
Upper peak, the y-value at the maximum sample value in the upper half of the histogram

LWPK
Lower peak: the y-value at the maximum sample value in the lower half of the histogram

MAXimum
The highest y-value with a probability > 0

MINimum
The lowest y-value with a probability > 0

MEDian
The lowest y-value with a probability > 0

MEAN
The weighted arithmetic average of the histogram

*RST: PEAK

Usage: Asynchronous command

Manual operation: See "Marker" on page 296

18.14.4 Settings for jitter measurements

Jitter measurements require option R&S MXO5-K12.

MEASurement<mg>:JITTer:NCYCles....1274
MEASurement<mg>:JITTer:POLarity....1275
MEASurement<mg>:JITTer:REFLevel<rl>....1275
MEASurement<mg>:JITTer:RELPolarity....1276
MEASurement<mg>:JITTer:SLOPe....1276
MEASurement<mg>:JITTer:TREF....1277
MEASurement<mg>:JITTer:UNIT....1277

MEASurement<mg>:JITTer:NCYCles <NumberCycles>

Sets the number of periods (cycles) that are accumulated to measure the N-cycle jitter.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<NumberCycles> Range: 1 to 4294967295
Increment: 1
*RST: 2

Usage: Asynchronous command

Manual operation: See "Number of cycles" on page 300

MEASurement<mg>:JITTer:POLarity <Polarity>

For cycle-cycle width and the cycle-cycle duty cycle measurements, the command sets the polarity of pulses for which the pulse width is measured: POSitive or NEGative. `MEASurement<mg>:MAIN` is set to measurements CCWidth | CCDutycycle.

For skew delay and skew phase measurements, the command sets the edge of the first waveform from which the measurements starts: POSitive, NEGative or EITHer. `MEASurement<mg>:MAIN` is set to measurements SKWDelay | SKWPhase.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<Polarity> POSitive | NEGative | EITHer
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Pulse polarity" on page 299

MEASurement<mg>:JITTer:REFLevel<rl> <ReferenceLevel>

Selects the reference level that is used for the measurement and for the indicated measurement source. Each source of the measurement can have its own reference level .

Suffix:
<mg> 1 to 24, index of the measurement

<rl> 1..2
Measurement source, to which the reference level set is applied. For most measurements, one source is needed. For delay measurements, for example, two measurement sources are required, and each source can have its own reference levels.

Parameters:
<ReferenceLevel> UPPer | MIDDle | LOWer
*RST: MIDDle

Example:
```
MEASurement1:MAIN SKWDelay
MEASurement1:SOURce C1,C2
MEASurement1:JITTer:REFLevel1 MIDDle
MEASurement1:JITTer:REFLevel2 UPPer
```

Measurement 1 is a skew delay measurement on channel 1 and channel 2. C1 is the first source and uses the middle reference level. C2 is the second source and uses the upper reference level.

Usage: Asynchronous command

Manual operation: See "Reference level" on page 300

MEASurement<mg>:JITTer:RELPolarity <RelPolarity>

Sets the edge of the second waveform relative to the first waveform.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<RelPolarity> MATChing | INVerse

MATChing
Measures from positive to positive edge or from negative to negative edge.

INVerse
Measures from positive to negative edge or from negative to positive edge.

*RST: MATChing

Usage: Asynchronous command

Manual operation: See "Relative polarity" on page 300

MEASurement<mg>:JITTer:SLOPe <Slope>

For cycle-cycle jitter, N-cycle jitter, and cycle-cycle duty cycle measurements, the setting selects the slope at which the periods and thus the jitter is measured: FIRSt, POSitive, NEGative or EITHer. `MEASurement<mg>:MAIN` is set to measurements CCJitter | NCJitter | CCDutycycle.

For time-interval error measurements, the command sets the edges of the data signal that are used for measurements: POSitive, NEGative or EITHer. `MEASurement<mg>:MAIN` is set to TIE.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<Slope> FIRSt | POSitive | NEGative | EITHer

*RST: FIRSt

<Slope> FIRSt | POSitive | NEGative | EITHer

FIRSt
Measures the period from the first edge that is found, no matter of its direction.

POSitive
Measures the period at positive going edges.

NEGative
Measures the period at negative going edges.

EITHer
Measures the period at both positive and negative going edges. This option is useful, for example, to check the clock stability of a double data rate clock.

*RST: FIRSt

Usage: Asynchronous command

Manual operation: See "Cycle begin, Slope" on page 299

MEASurement<mg>:JITTer:TREF <TimingReference>

Selects the timing reference, which is one of the available clock configurations. The timing reference must be defined before it can be used.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<TimingReference> Range: 1 to 4

Usage: Asynchronous command

Manual operation: See "Timing reference" on page 302

MEASurement<mg>:JITTer:UNIT <Unit>

Sets the unit for data rate measurements.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<Unit> BIT_S | HZ
*RST: BIT_S

Usage: Asynchronous command

Manual operation: See "Unit" on page 302

18.14.5 Default settings for eye measurements

Measurement defaults are available for eye measurements, which require option R&S MXO5-K136.

MDEFaults:SETTings<m>:EYE:ALGorithm <MeasLevAlgorithm>

Selects the algorithm, which defines how to compute the top and base levels and the corresponding sigma values.

Suffix:
<m> 1 to 8, index of the default measurement configuration

Parameters:
<MeasLevAlgorithm> MEAN | PEAK | INNPeak | OUTPeak

MEAN
Mean value of the histogram. The Sigma value is the standard deviation of the histogram.

PEAK
Maximum peak of the histogram. Only values corresponding to this peak are used to compute sigma.

INNPeak
Inner peak of the histogram. Only values corresponding to this peak are used to compute sigma.

OUTPeak
Outer peak of the histogram. Only values corresponding to this peak are used to compute sigma.

*RST: MEAN

Usage: Asynchronous command

Manual operation: See "Algorithm" on page 305

MDEFaults:SETTings<m>:EYE:COUNt?

Returns the number of available default sets.

Suffix:
<m> Irrelevant, omit the suffix.

Return values:
<Count> Number of default sets

Usage: Query only
Asynchronous command

MDEFaults:SETTings<m>:EYE:ENABle <Item>

Activates the specified set of default settings.

Suffix:
<m> 1 to 8, index of the default measurement configuration

Parameters:
<Item> OFF | ON

Usage: Asynchronous command

MDEFaults:SETTings<m>:EYE:RELative:STARt <MeasWindowStart>

Defines the global start time for the eye measurements.

Suffix:
<m> 1 to 8, index of the default measurement configuration

Parameters:

<MeasWindowStart> Start time of the window in % of the difference of the eye crossings. Tcrossing1 relates to 0 %, and Tcrossing2 relates to 100 %.

Range: 1 to 99
Increment: 1
*RST: 40
Default unit: %

Usage: Asynchronous command

Manual operation: See "Start, Stop" on page 305

MDEFaults:SETTings<m>:EYE:RELative:STOP <RelTimeStpLevMeasWind>

Defines the global stop time for the eye measurements.

Suffix:

<m> 1 to 8, index of the default measurement configuration

Parameters:

<RelTimeStpLevMeasWind> Stop time of the window in % of the difference of the eye crossings. Tcrossing1 relates to 0 %, and Tcrossing2 relates to 100 %.

Range: 1 to 99
Increment: 1
*RST: 60
Default unit: %

Usage: Asynchronous command

Manual operation: See "Start, Stop" on page 305

MDEFaults:SETTings<m>:EYE:THReshold <MeasLevThres>

Sets the threshold that is used to separate peaks. Two peaks are separated if they are split by a valley of height *Threshold * Maximal_histogram_value*.

Suffix:

<m> 1 to 8, index of the default measurement configuration

Parameters:

<MeasLevThres>

Range: 1 to 99
Increment: 1
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "Threshold" on page 305

18.14.6 Settings for eye measurements

Eye measurements require option R&S MXO5-K136.

MEASurement<mg>:EYE:ABSolute:STARt <AbsoluteStart>

Sets the absolute start value for the selected algorithm for eye height and eye width measurements.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<AbsoluteStart>
Range: -1E+26 to 1E+26
Increment: 0.1
*RST: -2.5E-09
Default unit: s

Usage: Asynchronous command

Manual operation: See "Start, Stop (for eye height, eye width)" on page 308

MEASurement<mg>:EYE:ABSolute:STOP <AbsoluteStop>

Sets the absolute stop value for the selected algorithm for eye height and eye width measurements.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<AbsoluteStop>
Range: -1E+26 to 1E+26
Increment: 0.1
*RST: 2.5E-09
Default unit: s

Usage: Asynchronous command

Manual operation: See "Start, Stop (for eye height, eye width)" on page 308

MEASurement<mg>:EYE:ALGorithm <Algorithm>

Selects the algorithm for the measurement of the eye height and eye width.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<Algorithm> ACTHeight | MAXHeight | ACTWidth | AWMWindow | MAXWidth | TSIGma

TSIGma
Three sigma: The eye height is measured with the settings defined with MDEFaults:Settings:EYE commands.
The eye width is measured at the crossing level.

ACTHeight
The actual height is the vertical distance between the top and the bottom of the eye opening at the sampling point. The default window is 40% - 60% of the eye period. Specific start and stop values are used for calculation.

ACTWidth
The eye width is measured at the crossing level. Refers to "Crossing level" in the GUI.

MAXHeight
The maximum height is the theoretical maximum vertical distance between the highest possible 1 level and the lowest possible 0 level. The default measurement window is 40% - 60% of the eye period. Specific start and stop values are used for maximum calculation.

MAXWidth
The maximum width of an eye diagram is the maximum horizontal distance between the points where the ideal eye opening crosses the decision threshold level. Specific start and stop values are used for maximum calculation.

AWMWindow
The eye width is measured as the horizontal distance between the points where the eye opening crosses the threshold level. Specific start and stop values are used for calculation.

*RST: TSIGma

Usage: Asynchronous command

Manual operation: See "Algorithm (for eye height, eye width)" on page 307

MEASurement<mg>:EYE:DEFSettings <CommonDefaults>

Selects the default measurement configuration.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<CommonDefaults> Number of the default measurement configuration to be used.

Usage: Asynchronous command

Manual operation: See "Default settings" on page 304

MEASurement<mg>:EYE:LEVel <RelativeLevel>

Defines the relative level for the jitter measurements on eye diagrams if `MEASurement<mg>:EYE:USELevel` on page 1283 is ON. The setting also defines the level for duty cycle distortion measurement.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:

<RelativeLevel>
Range: 1 to 99
Increment: 1
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "Level (jitter, duty cycle)" on page 308

MEASurement<mg>:EYE:MODE <Mode>

Selects between absolute and relative values for the eye measurement-specific start and stop values.

Suffix:

<mg> 1 to 24, index of the measurement

Parameters:

<Mode> ABS | REL
*RST: REL

Usage: Asynchronous command

Manual operation: See "Mode (for eye height, eye width)" on page 308

MEASurement<mg>:EYE:RELative:STARt <RelativeStart>

Sets the relative start value for the selected algorithm of eye height and eye width measurements.

For rise time and fall time eye measurements, the command sets the offset before the first eye crossing (local start level). Only values inside the specified horizontal range are considered for the measurements.

Suffix:

<mg> 1 to 24, index of the measurement

Parameters:

<RelativeStart> The value refers to one unit interval for rise and fall time measurements.
For eye width, the value refers to the eye top and base levels.
For eye height, the value refers to the eye crossings.
Range: 1 to 99
Increment: 1
*RST: 40
Default unit: %

Usage: Asynchronous command

Manual operation: See "Start, Stop (eye height and width, rise/fall time)" on page 308

MEASurement<mg>:EYE:RELative:STOP <RelativeStop>

Sets the relative stop value for the selected algorithm of eye height and eye width measurements.

For rise time and fall time eye measurements, the command sets the offset after the first eye crossing (local stop level). Only values inside the specified horizontal range are considered for the measurements.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<RelativeStop> The value refers to one unit interval for rise and fall time measurements.
For eye width, the value refers to the eye top and base levels.
For eye height, the value refers to the eye crossings.

Range: 1 to 99
Increment: 1
*RST: 60
Default unit: %

Usage: Asynchronous command

Manual operation: See "Start, Stop (eye height and width, rise/fall time)" on page 308

MEASurement<mg>:EYE:USELevel <UseLevel>

If ON, you can define a user-defined level for the jitter measurements on eye diagrams with `MEASurement<mg>:EYE:LEVel`.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<UseLevel> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Use level (jitter)" on page 308

18.14.7 Settings for protocol measurements

Protocol measurements require option R&S MXO5-K500, and at least one serial protocol option.

MEASurement<mg>:PROTocol:FNAMe....1284
MEASurement<mg>:PROTocol:FDName....1284
MEASurement<mg>:PROTocol:FDValue....1284

MEASurement<mg>:PROTocol:F2Name 1284
MEASurement<mg>:PROTocol:FD2Name 1285
MEASurement<mg>:PROTocol:FD2Value 1285

MEASurement<mg>:PROTocol:FNAMe <FrameName>

Sets or queries the name of the frame or the frame type, at which the oscilloscope executes or starts the measurement.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<FrameName>

Usage: Asynchronous command

Manual operation: See "Frame Type" on page 312

MEASurement<mg>:PROTocol:FDName <FieldName>

Sets or queries the name of the field or the field type, at which the oscilloscope executes or starts the measurement.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<FieldName>

Usage: Asynchronous command

Manual operation: See "Field Type" on page 312

MEASurement<mg>:PROTocol:FDValue <FieldValue>

Sets or queries the one or more values of the field, at which the oscilloscope executes or starts the measurement.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<FieldValue> List of comma-separated values

Usage: Asynchronous command

Manual operation: See "Field Value" on page 312

MEASurement<mg>:PROTocol:F2Name <Frame2Name>

Sets or queries the name of the frame or the frame type, at which the oscilloscope ends the measurement in a "From" - "To" condition.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<Frame2Name>

Usage: Asynchronous command

Manual operation: See "Frame Type" on page 312

MEASurement<mg>:PROTocol:FD2Name <Field2Name>

Sets or queries the name of the field or the field type, at which the oscilloscope ends the measurement in a "From" - "To" condition.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<Field2Name>

Usage: Asynchronous command

Manual operation: See "Field Type" on page 312

MEASurement<mg>:PROTocol:FD2Value <Field2Value>

Sets or queries the one or more values of the field, at which the oscilloscope ends the measurement in a "From" - "To" condition.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<Field2Value> List of comma-separated values

Usage: Asynchronous command

Manual operation: See "Field Value" on page 312

18.14.8 Results

MEASurement<mg>:RESult[:ACTual]?....1286
MEASurement<mg>:RESult:AVG?....1286
MEASurement<mg>:RESult:EVTCount?....1286
MEASurement<mg>:RESult:NPEak?....1286
MEASurement<mg>:RESult:PPEak?....1286
MEASurement<mg>:RESult:RMS?....1286
MEASurement<mg>:RESult:WFMCount?....1286
MEASurement<mg>:RESult:RSTDdev?....1286
MEASurement<mg>:RESult:STDDev?....1286
MEASurement<mg>:RESult:STARt?....1286
MEASurement<mg>:RESult:STOP?....1286

MEASurement<mg>:RESult:EVENts:COUNt?....1287
MEASurement<mg>:RESult:EVENts:STARt?....1287
MEASurement<mg>:RESult:EVENts:STOP?....1287
MEASurement<mg>:RESult:EVENts:VALue?....1288

MEASurement<mg>:RESult[:ACTual]?
MEASurement<mg>:RESult:AVG?
MEASurement<mg>:RESult:EVTCount?
MEASurement<mg>:RESult:NPEak?
MEASurement<mg>:RESult:PPEak?
MEASurement<mg>:RESult:RMS?
MEASurement<mg>:RESult:WFMCount?
MEASurement<mg>:RESult:RSTDdev?
MEASurement<mg>:RESult:STDDev?

Return the statistic results of the specified measurement. The measurement type is defined with `MEASurement<mg>:MAIN`.

- [:ACTual]: current measurement result
- AVG: arithmetic mean of the measurement results
- EVTCount: number of measurement results in the measurement
- NPEak: negative peak value of the measurement results
- PPEak: positive peak value of the measurement results
- RMS: RMS value of the measurement results
- STDDev: standard deviation of the measurement results
- RSTDdev: relative standard deviation (*STDDev / AVG*)
- WFMCount: number of measured waveforms

Suffix:
<mg> 1 to 24, index of the measurement

Return values:
<Result> Numeric result value

Usage: Query only
Asynchronous command

MEASurement<mg>:RESult:STARt?
MEASurement<mg>:RESult:STOP?

Return the start and stop times of the specified measurement. The parameter defines the measurement. If no parameter is specified, the result of the main measurement is returned. The main measurement is defined using `MEASurement<mg>:MAIN`.

Suffix:
<mg> 1 to 24, index of the measurement

Return values:
<Stop> Range: -1E+26 to 1E+26
Increment: 0
*RST: 0

Usage: Query only
Asynchronous command

MEASurement<mg>:RESult:EVENts:COUNt?

Returns the number of measured events in one acquisition.

The command is relevant for measurements of all events, see MEASurement<mg>:MULTiple.

Suffix:
<mg> 1 to 24, index of the measurement

Return values:
<Count> Number of events

Usage: Query only
Asynchronous command

MEASurement<mg>:RESult:EVENts:STARt? <EventIndex>

Returns the start time of the indicated measured event.

The command is relevant for measurements of all events, see MEASurement<mg>:MULTiple.

Suffix:
<mg> 1 to 24, index of the measurement

Setting parameters:
<EventIndex> Index number of the measured event.

Return values:
<EventStart> Range: -1E+26 to 1E+26
Increment: 0
*RST: 0

Usage: Query only
Asynchronous command

MEASurement<mg>:RESult:EVENts:STOP? <EventIndex>

Returns the end time of the indicated measured event.

The command is relevant for measurements of all events, see MEASurement<mg>:MULTiple.

Suffix:
<mg> 1 to 24, index of the measurement

Setting parameters:
<EventIndex> Index number of the measured event.

Return values:

<EventStop> Range: -1E+26 to 1E+26
Increment: 0
*RST: 0

Usage: Query only
Asynchronous command

MEASurement<mg>:RESult:EVENts:VALue? <MeasResEvtIdx>

Returns the measured value of the indicated measured event.

The command is relevant for measurements of all events, see `MEASurement<mg>:MULTiple`.

Suffix:

<mg> 1 to 24, index of the measurement

Setting parameters:

<EventIndex> Index number of the measured event.

Return values:

<EventValue> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

18.14.9 Statistics

MEASurement<mg>:STATistics:ARESet....1288
MEASurement<mg>:STATistics[:ENABle]....1288
MEASurement<mg>:MULTiple....1289
MEASurement<mg>:MNOMeas....1289

MEASurement<mg>:STATistics:ARESet

Resets the statistics for all measurements.

Suffix:

<mg> Irrelevant, omit the suffix.

Usage: Setting only
Asynchronous command

Manual operation: See "Clear results" on page 316

MEASurement<mg>:STATistics[:ENABle] <GlobalEnable>

Enables statistics calculation for all measurements.

Suffix:
<mg> Irrelevant, omit the suffix.

Parameters:
<GlobalEnable> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Statistics" on page 316

MEASurement<mg>:MULTiple <GlobalMeassAll>

If ON, the measurement is performed repeatedly if the measured parameter occurs several times inside the acquisition or defined gate. All results are included in evaluation, e.g. in statistics. To set the number of results to be considered, use `MEASurement<mg>:MNOMeas`.

Suffix:
<mg> Irrelevant, omit the suffix.

Parameters:
<GlobalMeassAll> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Measure all events" on page 316

MEASurement<mg>:MNOMeas <MaxMeasPerAcq>

Sets the maximum number of measurements per acquisition if `MEASurement<mg>:MULTiple` is on. The setting affects all measurements.

Suffix:
<mg> Irrelevant, omit the suffix.

Parameters:
<MaxMeasPerAcq> Range: 2 to 1E6
Increment: 1
*RST: 1E6

Usage: Asynchronous command

Manual operation: See "Max. No. of events" on page 316

18.14.10 Tracks

MEASurement<mg>:TRACk[:STATe] 1290
MEASurement<mg>:TRACk:AUTO 1290
MEASurement<mg>:TRACk:CONTiunous 1290
MEASurement<mg>:TRACk:OFFSet 1290

MEASurement<mg>:TRACk:SCALe 1291
MEASurement<mg>:TRACk:DATA:HEADer? 1291
MEASurement<mg>:TRACk:DATA[:VALues]? 1292

MEASurement<mg>:TRACk[:STATe] <State>

Enables or disables the track for the selected measurement.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "State" on page 318

MEASurement<mg>:TRACk:AUTO

Sets the vertical scale and the offset of the track, so that the complete height of the diagram is used.

Suffix:
<mg> 1 to 24, index of the measurement

Usage: Event
Asynchronous command

Manual operation: See "Fit to screen" on page 318

MEASurement<mg>:TRACk:CONTiunous <AutoScale>

Performs an automatic scaling whenever the track does not fit in the diagram during the measurement period.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<AutoScale> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Auto scale" on page 318

MEASurement<mg>:TRACk:OFFSet <VerticalOffset>

Sets or queries the offset of the track waveform.

If `MEASurement<mg>:TRACk:CONTiunous` is ON, use the command to query the current value.

If MEASurement<mg>:TRACk:CONTiunous is OFF, the command sets the offset.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<VerticalOffset> Range: -1E+26 to 1E+26
Increment: 1E-06
*RST: 0
Default unit: div

Usage: Asynchronous command

Manual operation: See "Meas offset" on page 318

MEASurement<mg>:TRACk:SCALe <VerticalScale>

Sets or queries the vertical scale of the track diagram.

If MEASurement<mg>:TRACk:CONTiunous is ON, use the command to query the current value.

If MEASurement<mg>:TRACk:CONTiunous is OFF, the command sets the scale.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<VerticalScale> Range: 1E-26 to 1E+26
Increment: 1E-05
*RST: 0.5
Default unit: V/div

Usage: Asynchronous command

Manual operation: See "Meas scale" on page 318

MEASurement<mg>:TRACk:DATA:HEADer?

Returns the header of track data, the attributes of the waveform.

Suffix:
<mg> 1 to 24, index of the measurement

Return values:
<XStart> 1. header value: time of the first track value in s

<XStop> 2. header value: time of the last track value in s

<RecordLength> 3. header value: number of measured events = number of points in the track waveform

<ValuesPerSample> 4. header value: number of values per sample. For tracks, the result is always 1.

Example: `MEAS1:TRAC:DATA:HEAD?`
`-1E-07,9.980000000000001E-08,1000,1`
Start time of the data is -1E-07 = -100 ns, and end time of the data is 9.980000000000001E-08= 99.8 ns. The data stream has 1000 values with one value per sample, inn other words, the track waveform has 1000 points.

Usage: Query only
Asynchronous command

MEASurement<mg>:TRACk:DATA[:VALues]? [<Offset>[,<Length>]]

Returns the data of the indicated track waveform for transmission from the instrument to the controlling computer. The data can be used in MATLAB, for example.

Without parameters, the complete waveform is retrieved. Using the offset and length parameters, data can be retrieved in smaller portions, which makes the command faster. If you send only one parameter, it is interpreted as offset, and the data is retrieved from offset to the end of the waveform.

Suffix:
<mg> 1 to 24, index of the measurement

Query parameters:
<Offset> Number of offset track points, which are ignored in the data transfer.

[<Length>] Number of track points to be retrieved.

Return values:
<Data> List of values according to the format and content settings.

Usage: Query only
Asynchronous command

18.14.11 Histograms on measurement results

To transfer the histogram data to a remote computer, use:

- `EXPort:HMEasurement<m>:DATA:HEADer?` on page 1262
- `EXPort:HMEasurement<m>:DATA[:VALues]?` on page 1263

For export of histogram data to file, see Section 18.13.5, "Histogram data: export to file", on page 1245.

MEASurement<mg>:STATistics:HISTogram:AUToscale....1293
MEASurement<mg>:STATistics:HISTogram[:ENABle]....1293
MEASurement<mg>:STATistics:HISTogram:HBINs....1293
MEASurement<mg>:STATistics:HISTogram:HORizontal:OFFSet....1293
MEASurement<mg>:STATistics:HISTogram:HORizontal:SCALe....1294
MEASurement<mg>:STATistics:HISTogram:RESet....1294

MEASurement<mg>:STATistics:HISTogram:AUToscale <AutoScaleMode>

If ON, the range on the x-axis is continuously adjusted to the measured values. If OFF, you can set the offset and the scale of the histogram with `MEASurement<mg>:STATistics:HISTogram:HORizontal:OFFSet` and `MEASurement<mg>:STATistics:HISTogram:HORizontal:SCALe`.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<AutoScaleMode> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Auto scale" on page 323

MEASurement<mg>:STATistics:HISTogram[:ENABle] <State>

Enables the histogram for the specified measurement.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "State" on page 323

MEASurement<mg>:STATistics:HISTogram:HBINs <NrBinsUser>

Sets the number of bins to be displayed in the histogram of the specified measurement.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<NrBinsUser> Range: Possible values: 10, 25, 50, 100, 250, 500, 1000, 2000
*RST: 250

Usage: Asynchronous command

Manual operation: See "Number of bins" on page 323

MEASurement<mg>:STATistics:HISTogram:HORizontal:OFFSet <Center>

Sets the center value of the histogram on the x-axis, which is the measurement result in the middle of the histogram.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<Center> Range: -1E+26 to 1E+26
Increment: 0.01
*RST: 0
Default unit: Specify the unit with the value.

Example:
```
MEASurement:STATistics:HISTogram:HORizontal:
OFFSet 3mV
```

Usage: Asynchronous command

Manual operation: See "Offset" on page 323

MEASurement<mg>:STATistics:HISTogram:HORizontal:SCALe <Scale>

Sets the horizontal scale of the histogram.

Suffix:
<mg> 1 to 24, index of the measurement

Parameters:
<Scale> Range: 0 to INF
Increment: 0.1
*RST: 1
Default unit: Specify the unit with the value.

Usage: Asynchronous command

Manual operation: See "Scale" on page 324

MEASurement<mg>:STATistics:HISTogram:RESet

Resets the cumulation of measurement results, all bins are set to zero.

Suffix:
<mg> 1 to 24, index of the measurement

Usage: Setting only
Asynchronous command

Manual operation: See "Reset" on page 323

18.15 Cursor measurements

Some of the commands in the following section are asynchronous. An overlapping or asynchronous command does not automatically finish executing before the next command starts executing. If overlapping commands must be executed in a defined order, e.g. to avoid wrong measurement results, they must be serviced sequentially.

To prevent an overlapping execution of commands, one of the commands `*OPC`, `*OPC?` or `*WAI` can be used after the command or a command set.

For more information, see:

- www.rohde-schwarz.com/rc-via-scpi, section "Command sequence and synchronization"

- Cursor setup....1295
- Cursor results....1305
- Peak search using cursors....1306
- Cursor appearance....1308

18.15.1 Cursor setup

CURSor<cu>:AOFF....1295
CURSor<cu>:COUNt?....1296
CURSor<cu>:STATe....1296
CURSor<cu>:FUNCtion....1296
CURSor<cu>:SMODe....1297
CURSor<cu>:SOURce....1297
CURSor<cu>:USSource....1299
CURSor<cu>:SSOurce....1299
CURSor<cu>:X1Position....1299
CURSor<cu>:X2Position....1300
CURSor<cu>:Y1Position....1300
CURSor<cu>:Y2Position....1301
CURSor<cu>:SSCReen....1301
CURSor<cu>:TRACking[:STATe]....1302
CURSor<cu>:LABel....1302
CURSor<cu>:HORizontal<n>:LABel....1302
CURSor<cu>:VERTical<n>:LABel....1303
CURSor<cu>:DISPlay:VALues....1303
CURSor<cu>:SIAD....1303
CURSor<cu>:XCOupling....1304
CURSor<cu>:YCOupling....1304
CURSor<cu>:X1ENvelope....1304
CURSor<cu>:X2ENvelope....1304

CURSor<cu>:AOFF

Switches all cursors off.

Suffix:

<cu> Irrelevant, omit the suffix.

Usage: Setting only
Asynchronous command

CURSor<cu>:COUNt?

Returns the maximum number of cursor sets, which is the maximum value for the cursor suffix.

Suffix:
<cu> Irrelevant, omit the suffix.

Return values:
<Count> Maximum number of cursor sets

Usage: Query only
Asynchronous command

CURSor<cu>:STATe <State>

Enables the selected cursor measurement.

Suffix:
<cu> 1 to 4, index of the cursor set

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show cursor" on page 268

CURSor<cu>:FUNCtion <Type>

Defines the cursor type to be used for the measurement.

Suffix:
<cu> 1 to 4, index of the cursor set

Parameters:
<Type> VERTical | HORizontal | PAIRed

HORizontal
A pair of horizontal cursor lines. Not available for measurements on multiple sources.

VERTical
A pair of vertical cursor lines. Not available for measurements on multiple sources.

PAIRed
Both vertical and horizontal cursor line pairs.

*RST: PAIRed

Usage: Asynchronous command

Manual operation: See "Type" on page 269

CURSor<cu>:SMODe <SourceMode>

Selects the number of sources that you want to measure.

Suffix:
<cu> 1 to 4, index of the cursor set

Parameters:
<SourceMode> SINGle | SECond | MSOurce

SINGle
The cursor lines are set on one waveform. Select the source with `CURSor<cu>:SOURce`.

SECond
The cursor lines are set on two waveforms. To set the second souce, use `CURSor<cu>:SSOurce`.

MSOurce
Multiple waveforms are selected to be measured with one cursor set. Activates `CURSor<cu>:TRACking[:STATe]` and sets `CURSor<cu>:FUNCtion` to PAIRed. Select the sources with `CURSor<cu>:SOURce`.

*RST: SINGle

Usage: Asynchronous command

Manual operation: See "Source mode" on page 269

CURSor<cu>:SOURce <Signal>

Selects the cursor source or multiple sources, which are the waveforms to be measured. The query returns the waveforms sorted by category and number.

Suffix:
<cu> 1 to 4, index of the cursor set

Parameters:

<Signal> C1,C2,...,C8,D0,D1,D2,...,D15,M1,M2,M3,M4,M5,R1,R2,R3,R4, SPECMAXH1,SPECMINH1,SPECNORM1,SPECAVER1,SPECMAXH2,SPECMINH2,SPECNORM2,SPECAVER2,SPECMAXH3,SPECMINH3,SPECNORM3,SPECAVER3,SPECMAXH4,SPECMINH4,SPECNORM4,SPECAVER4, TRK1,TRK2,TRK3, ...,TRK24,PBUS1,PBUS2,PBUS3,PBUS4,XY1,XY2,XY3,XY4 | PA1QPOWER,PA2QPOWER,...,PA6QPOWER,PA1HPOWER1,PA2HPOWER1,...,PA6HPOWER1,PA1SPOWER,PA2SPOWER,...,PA6SPOWER,PA1SOA,PA2SOA,...,PA6SOA,PA1IPOWER,PA2IPOWER,...,PA6IPOWER,PA1OPOWER1,PA2OPOWER1,...,PA6OPOWER1,PA1OPOWER2,PA2OPOWER2,...,PA6OPOWER2,PA1OPOWER3,PA2OPOWER3,...,PA6OPOWER3,PTHREE1HPOWER1,PTHREE2HPOWER1,...,PTHREE6HPOWER1, PTHREE1HPOWER2,PTHREE2HPOWER2,...,PTHREE6HPOWER2, PTHREE1HPOWER3,PTHREE2HPOWER3,...,THREE6HPOWER3, PTHREE1HTPOWER,PTHREE2HTPOWER,...,PTHREE6HTPOWER, PTHREE1QPOWER1,PTHREE2QPOWER1,...,PTHREE6QPOWER1, PTHREE1QPOWER2,PTHREE2QPOWER2,...,PTHREE6QPOWER2, PTHREE1QPOWER3,PTHREE2QPOWER3,...,PTHREE6QPOWER3, PTHREE1QTPOWER,PTHREE2QTPOWER,...,PTHREE6QTPOWER, PTHREE1EIPOWER1,PTHREE2EIPOWER1,...,PTHREE6EIPOWER1, PTHREE1EIPOWER2,PTHREE2EIPOWER2,...,PTHREE6EIPOWER2, PTHREE1EIPOWER3,PTHREE2EIPOWER3,...,PTHREE6EIPOWER3, PTHREE1EITPOWER,PTHREE2EITPOWER,...,PTHREE6EITPOWER,PTHREE1EOPOWER1,PTHREE2EOPOWER1,...,PTHREE6EOPOWER1, PTHREE1EOPOWER2,PTHREE2EOPOWER2,...,PTHREE6EOPOWER2, PTHREE1EOPOWER3,PTHREE2EOPOWER3,...,PTHREE6EOPOWER3, PTHREE1EOTPOWER,PTHREE2EOTPOWER,...,PTHREE6EOTPOWER | PA1TOPOWER,PA2TOPOWER,...,PA6TOPOWER | O<n>C1,O<n>C2, ... ,O<n>C8 (<n> = 2 to 11) | EYE1 | EYE2 | ... | EYE8

Comma-separated list of waveforms.

Example: `CURSor:SOURce C1`

Sets channel 1 as cursor source and changes `CURSor<cu>:SMODe` to SINGle if MSOurce was set before.

Example: `CURSor:SOURce C1,M1,C3`
`CURSor:SOURce? --> C1,C3,M1`
Sets channel 1, 3 and math 1 as cursor sources and changes `CURSor<cu>:SMODe` to MSOurce if SINGle was set before.
Activates `CURSor<cu>:TRACking[:STATe]` for the specified cursor set.

Usage: Asynchronous command

Manual operation: See "Source" on page 269

CURSor<cu>:USSource <UseSource2>

Enables the second cursor source. To select the second source, use `CURSor<cu>:SSOurce`.

The command has the same effect as `CURSor<cu>:SMODe SECond`.

Suffix:
<cu> 1 to 4, index of the cursor set

Parameters:
<UseSource2> OFF | ON

Usage: Asynchronous command

CURSor<cu>:SSOurce <Source2>

Selects the second cursor source.

Suffix:
<cu> 1 to 4, index of the cursor set

Parameters:
<Source2> One of the possible cursor sources, see `CURSor<cu>:SOURce`.

Usage: Asynchronous command

Manual operation: See "Source 2" on page 269

CURSor<cu>:X1Position <X1Position>

Defines the position of the left vertical cursor line.

Suffix:
<cu> 1 to 4, index of the cursor set

Parameters:
<X1Position>
Range: -1E+26 to 1E+26
Increment: 0.1
*RST: depends on time scale, at 25% of the time axis
Default unit: s

Usage: Asynchronous command

Manual operation: See "X1 position, X2 position" on page 270

CURSor<cu>:X2Position <X2Position>

Defines the position of the right vertical cursor line.

Suffix:
<cu> 1 to 4, index of the cursor set

Parameters:
<X2Position>
Range: -1E+26 to 1E+26
Increment: 0.1
*RST: depends on time scale, at 75% of the time axis
Default unit: s

Usage: Asynchronous command

Manual operation: See "X1 position, X2 position" on page 270

CURSor<cu>:Y1Position [<Signal>]

The command usage depends on the setting of `CURSor<cu>:SMODe`.

In single source and second source mode, the command sets or queries the position of the lower horizontal cursor line. The <Signal> parameter is irrelevant. If `CURSor<cu>:TRACking[:STATe]` is enabled, the Y-positions are set automatically, and the query returns the measurement result.

In multiple source mode, tracking is always on. The command is used as query only, and you specify the signal for which you want to get the value.

Suffix:
<cu> 1 to 4, index of the cursor set

Parameters:
<Value> Y-position of the first horizontal cursor line.

Query parameters:
<Signal> Only relevant for `CURSor<cu>:SMODe MSource`. One of the sources that are specified with `CURSor<cu>:SOURce`.

Example:
```
CURSor2:SMODe SINGle
CURSor2:FUNCtion PAIRed
CURSor2:TRACking ON
CURSor2:Y1Position?
--> 0.123859
```

In single source mode with active tracking, the command returns the Y-value.

Example:
```
CURSor:SMODe SINGle
CURSor:FUNCtion PAIRed
CURSor:TRACking OFF
CURSor:Y1Position 0.15
```
In single source mode with disabled tracking, the command sets the Y-value.

Example:
```
CURSor2:SMODe MSOurce
CURSor2:Y1Position? C1
--> 0.123859
```
In multiple source mode, tracking is always active. The command returns the Y-value for the specified source.

Usage: Asynchronous command

Manual operation: See "Y1 position, Y2 position" on page 270

CURSor<cu>:Y2Position [<Signal>]

Defines or queries the position of the upper horizontal cursor line.The command works in the same way as `CURSor<cu>:Y1Position`.

Suffix:
<cu> 1 to 4, index of the cursor set

Parameters:
<Value> Y-position of the second horizontal cursor line.

Query parameters:
<Signal> Only relevant for `CURSor<cu>:SMODe MSource`. One of the sources that are specified with `CURSor<cu>:SOURce`.

Usage: Asynchronous command

Manual operation: See "Y1 position, Y2 position" on page 270

CURSor<cu>:SSCReen

Resets the cursors to their initial positions. Reset is helpful if the cursors have disappeared from the display or need to be moved for a larger distance.

Suffix:
<cu> 1 to 4, index of the cursor set

Usage: Setting only
Asynchronous command

Manual operation: See "Place on display" on page 271

CURSor<cu>:TRACking[:STATe] <TrackCurve>

If enabled, the horizontal cursor lines follow the waveform. The function is available if both horizontal and vertical cursors are displayed (`CURSor<cu>:FUNCtion PAIRed`).

The function is not available for measurements on eyes (R&S MXO5-K136).

Suffix:
<cu> 1 to 4, index of the cursor set

Parameters:
<TrackCurve> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Track waveform" on page 270

CURSor<cu>:LABel <ShowLabel>

Shows the cursor labels in the diagram.

Suffix:
<cu> 1 to 4, index of the cursor set

Parameters:
<ShowLabel> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show label" on page 272

CURSor<cu>:HORizontal<n>:LABel <Label>

Defines the label to be displayed with the horizontal cursor lines. By default, the cursors are labeled as Cu1.1, Cu1.2, Cu2.1, ...

Suffix:
<cu> 1 to 4, index of the cursor set

<n> 1..2
Number of the cursor line

Parameters:
<Label> String with the cursor label

Example:
```
CURSor1:HORizontal1:LABel 'Cu1H1'
CURSor1:HORizontal2:LABel "Cu1H2"
```

Usage: Asynchronous command

Manual operation: See "Horizontal cursor 1, Horizontal cursor 2" on page 272

CURSor<cu>:VERTical<n>:LABel <Label>

Defines the label to be displayed with the vertical cursor lines. By default, the cursors are labeled as Cu1.1, Cu1.2, Cu2.1, ...

Suffix:
<cu> 1 to 4, index of the cursor set

<n> 1..2
Number of the cursor line

Parameters:
<Label> String with the cursor label

Example:
```
CURSor2:VERTical1:LABel 'Cu2V1'
CURSor2:VERTical2:LABel "Cu2V2"
```

Usage: Asynchronous command

Manual operation: See "Vertical cursor 1, Vertical cursor 2" on page 272

CURSor<cu>:DISPlay:VALues <AddValuesLabel>

Shows the measured values in the cursor labels.

Suffix:
<cu> 1 to 4, index of the cursor set

Parameters:
<AddValuesLabel> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show values" on page 272

CURSor<cu>:SIAD <ShwInAllDiags>

Shows the enabled cursor measurements in all active diagrams of the time domain.

In the spectrum domain, the setting is disabled. The cursors are shown only on the source spectrum of the measurement.

Suffix:
<cu> 1 to 4, index of the cursor set

Parameters:
<ShwInAllDiags> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Show in all diagrams" on page 271

CURSor<cu>:XCOupling <Coupling>

Defines the positioning mode of the vertical cursor.

Suffix:
<cu> 1 to 4, index of the cursor set

Parameters:
<Coupling> OFF | ON

ON
Moving one cursor line moves the other cursor line too. The cursor lines always remain a fixed distance.

OFF
Each cursor line is positioned independently.

*RST: OFF

Usage: Asynchronous command

Manual operation: See "X, Y" on page 271

CURSor<cu>:YCOupling <Coupling>

Defines the positioning mode of the horizontal cursor. If the horizontal cursor lines track the waveform, the y coupling is irrelevant (`CURSor<cu>:TRACking[:STATe]` is `ON`).

Suffix:
<cu> 1 to 4, index of the cursor set

Parameters:
<Coupling> OFF | ON

ON
Moving one cursor line moves the other cursor line too. The cursor lines always remain a fixed distance.

OFF
Each cursor line is positioned independently.

*RST: OFF

Usage: Asynchronous command

Manual operation: See "X, Y" on page 271

CURSor<cu>:X1ENvelope <EnvelopeSelect>
CURSor<cu>:X2ENvelope <EnvelopeSelect>

Define which horizontal cursor is positioned to the maximum and which to the minimum envelope values.

Prerequisites:

- `ACQuire:TYPE` is set to `ENVElope` or `PDETect`.
- `CURSor<cu>:TRACking[:STATe]` is set to `ON`.
- `CURSor<cu>:FUNCtion` is set to `PAIRed`.

Suffix:
<cu> 1 to 4, index of the cursor set

Parameters:
<EnvelopeSelect> MIN | MAX

MIN
The horizontal cursor is set to the crossing point of the vertical cursor with the minimum waveform envelope.

MAX
The horizontal cursor is set to the crossing point of the vertical cursor with the maximum waveform envelope.

*RST: MAX

Usage: Asynchronous command

Manual operation: See "Envelope 1, Envelope 2" on page 270

18.15.2 Cursor results

CURSor<cu>:XDELta[:VALue]?....1305
CURSor<cu>:XDELta:INVerse?....1305
CURSor<cu>:YDELta[:VALue]?....1306
CURSor<cu>:YDELta:SLOPe?....1306

CURSor<cu>:XDELta[:VALue]?

Queries the delta value (distance) of two vertical cursor lines.

Suffix:
<cu> 1 to 4, index of the cursor set

Return values:
<Delta> Range: -1E+26 to 1E+26
Increment: 0.1
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

CURSor<cu>:XDELta:INVerse?

Queries the inverse value of the delta value (distance) of the two vertical cursor lines.

Suffix:
<cu> 1 to 4, index of the cursor set

Return values:
<DeltaInverse> Range: -1E+26 to 1E+26
Increment: 0.1
*RST: 0
Default unit: Hz

Usage: Query only
Asynchronous command

CURSor<cu>:YDELta[:VALue]? [<SignalValue>]

Returns the delta value (distance) of the two horizontal cursor lines.

In multiple source mode, specify the signal for which you want to get the value.

Suffix:
<cu> 1 to 4, index of the cursor set

Query parameters:
<Signal> Only relevant for `CURSor<cu>:SMODe MSource`. One of the sources that are specified with `CURSor<cu>:SOURce`.

Return values:
<Value> Inverse value of the delta value of the two horizontal cursor lines.

Usage: Query only
Asynchronous command

CURSor<cu>:YDELta:SLOPe? [<SignalValue>]

Returns the inverse value of the voltage difference, the reciprocal of the vertical distance of two horizontal cursor lines: *1/ΔV*.

In multiple source mode, specify the signal for which you want to get the value.

Suffix:
<cu> 1 to 4, index of the cursor set

Query parameters:
<Signal> Only relevant for `CURSor<cu>:SMODe MSource`. One of the sources that are specified with `CURSor<cu>:SOURce`.

Return values:
<Value> Inverse value of the delta value of the two cursor lines.

Usage: Query only
Asynchronous command

18.15.3 Peak search using cursors

CURSor<cu>:FFT:SETCenter....1307
CURSor<cu>:FFT:TOCenter....1307
CURSor<cu>:MAXimum[:PEAK]....1307
CURSor<cu>:MAXimum:LEFT....1307
CURSor<cu>:MAXimum:RIGHt....1307
CURSor<cu>:MAXimum:NEXT....1308
CURSor<cu>:PEXCursion....1308

CURSor<cu>:FFT:SETCenter

Sets the center frequency to the frequency value that is measured at cursor line Cu1.

Suffix:
<cu> 1 to 4, index of the cursor set

Usage: Setting only
Asynchronous command

Manual operation: See "Set center frequency to" on page 273

CURSor<cu>:FFT:TOCenter

Sets the vertical cursor line Cu1 to the center frequency.

Suffix:
<cu> 1 to 4, index of the cursor set

Usage: Setting only
Asynchronous command

Manual operation: See "Center frequency" on page 273

CURSor<cu>:MAXimum[:PEAK]

Sets both cursors to the absolute peak value.

Suffix:
<cu> 1 to 4, index of the cursor set

Usage: Event
Asynchronous command

Manual operation: See "Absolute peak" on page 273

CURSor<cu>:MAXimum:LEFT

Cursor 2 is set to the next peak to the left of the current position.

Suffix:
<cu> 1 to 4, index of the cursor set

Usage: Event
Asynchronous command

Manual operation: See "Next peak left" on page 273

CURSor<cu>:MAXimum:RIGHt

Cursor 2 is set to the next peak to the right of the current position.

Suffix:
<cu> 1 to 4, index of the cursor set

Usage: Event
Asynchronous command

Manual operation: See "Next peak right" on page 273

CURSor<cu>:MAXimum:NEXT

Cursor 2 is set to the next smaller absolute peak from the current position.

Suffix:
<cu> 1 to 4, index of the cursor set

Usage: Event
Asynchronous command

Manual operation: See "Next peak" on page 273

CURSor<cu>:PEXCursion <Value>

Sets the minimum level by which the waveform must rise or fall so that it will be identified as a maximum or a minimum by the search functions.

Suffix:
<cu> 1 to 4, index of the cursor set

Parameters:
<Value>

Usage: Asynchronous command

Manual operation: See "Peak excursion" on page 274

18.15.4 Cursor appearance

CURSor<cu>:STYLe <Style>

Defines how the cursor is displayed in the diagram.

Suffix:
<cu> 1 to 4, index of the cursor set

Parameters:
<Style> LINes | LRHombus | VLRHombus | RHOMbus

LINes
The cursors are displayed as lines.

LRHombus
The cursors are displayed as lines. The intersections of the cursors with the waveforms are displayed by rhombus-shaped points.

VLRHombus
The cursors are displayed only as vertical lines. The intersections of the cursors with the waveforms are displayed by rhombus-shaped points.

RHOMbus
The intersections of the cursors with the waveforms are displayed by rhombus-shaped points.

*RST: LINes

Usage: Asynchronous command

Manual operation: See "Cursor style" on page 268

18.16 Spectrum analysis

18.16.1 Spectrum setup

CALCulate:SPECtrum<sp>:COUPling[:ENABle] 1310
CALCulate:SPECtrum<sp>:COUPling:FROM 1310
CALCulate:SPECtrum<sp>:COUPling:MODE 1310
CALCulate:SPECtrum<sp>:FREQuency:BANDwidth[:RESolution]:ADJusted? 1311
CALCulate:SPECtrum<sp>:FREQuency:BANDwidth[:RESolution]:AUTO 1311
CALCulate:SPECtrum<sp>:FREQuency:BANDwidth[:RESolution]:RATio 1311
CALCulate:SPECtrum<sp>:FREQuency:BANDwidth[:RESolution][:VALue] 1312
CALCulate:SPECtrum<sp>:FREQuency:CENTer 1312
CALCulate:SPECtrum<sp>:FREQuency:SCALe 1312
CALCulate:SPECtrum<sp>:FREQuency:SPAN 1313
CALCulate:SPECtrum<sp>:FREQuency:STARt 1313
CALCulate:SPECtrum<sp>:FREQuency:STOP 1313
CALCulate:SPECtrum<sp>:FREQuency:WINDow:TYPE 1314
CALCulate:SPECtrum<sp>:MAGNitude:LEVel 1315
CALCulate:SPECtrum<sp>:MAGNitude:RANGe 1315
CALCulate:SPECtrum<sp>:MAGNitude:SCALe 1315
CALCulate:SPECtrum<sp>:PRESet 1315
CALCulate:SPECtrum<sp>:SOURce 1316
CALCulate:SPECtrum<sp>:STATe 1316
CALCulate:SPECtrum<sp>:THReshold 1317
CALCulate:SPECtrum<sp>:PEXCursion 1317
CALCulate:SPECtrum<sp>:WAVeform:AVERage:COUNt 1317
CALCulate:SPECtrum<sp>:WAVeform:AVERage:ENABle 1318
CALCulate:SPECtrum<sp>:WAVeform:MAXimum:ENABle 1318
CALCulate:SPECtrum<sp>:WAVeform:MINimum:ENABle 1318
CALCulate:SPECtrum<sp>:WAVeform:NORMal[:ENABle] 1318

CALCulate:SPECtrum<sp>:COUPling[:ENABle] <Enable>

Activates the settings coupling for the specified spectrum.

`CALCulate:SPECtrum<sp>:COUPling:FROM` selects the spectrum whose settings you want to use.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<Enable> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Coupling: Enable, Couple from" on page 334

CALCulate:SPECtrum<sp>:COUPling:FROM <Spectrum>

Selects the spectrum whose settings are used for the spectrum specified in the suffix if `CALCulate:SPECtrum<sp>:COUPling[:ENABle]` is ON.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<Spectrum> Number of the source spectrum

Usage: Asynchronous command

Manual operation: See "Coupling: Enable, Couple from" on page 334

CALCulate:SPECtrum<sp>:COUPling:MODE <ScaleMode>

By default, the vertical scale is adapted to the current measurement results automatically to provide an optimal display. However, if necessary, you can define scaling values manually to suit your requirements.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<ScaleMode> MANual | AUTO

AUTO
Vertical scale is set automatically.

MANual
Set the vertical scale with `CALCulate:SPECtrum<sp>:MAGNitude:SCALe` and `CALCulate:SPECtrum<sp>:MAGNitude:RANGe`.

*RST: AUTO

Usage: Asynchronous command

Manual operation: See "Scale mode" on page 333

CALCulate:SPECtrum<sp>:FREQuency:BANDwidth[:RESolution]:ADJusted?

Queries the effective resolution bandwidth.

Suffix:
<sp> 1 to 4, index of the spectrum

Return values:
<AdjResBW> Range: 0 to 200E+9
Increment: 0.01
*RST: 0
Default unit: Hz

Usage: Query only
Asynchronous command

CALCulate:SPECtrum<sp>:FREQuency:BANDwidth[:RESolution]:AUTO
<AutoRBW>

Couples the frequency span to the "RBW" setting.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<AutoRBW> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Auto RBW" on page 331

CALCulate:SPECtrum<sp>:FREQuency:BANDwidth[:RESolution]:RATio
<SpanRBWRatio>

Defines the coupling ratio for Span/RBW.

Available, if `CALCulate:SPECtrum<sp>:FREQuency:BANDwidth[:RESolution]:AUTO` is set to `ON`.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<SpanRBWRatio> Range: 10 to 10000
Increment: 1
*RST: 1000

Usage: Asynchronous command

Manual operation: See "Span/RBW" on page 331

CALCulate:SPECtrum<sp>:FREQuency:BANDwidth[:RESolution][:VALue] <RBW>

Queries or defines the used resolution bandwidth.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<RBW> Range: 0.0002 to 2000000
Increment: 0.01
*RST: 2000000
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "RBW" on page 332

CALCulate:SPECtrum<sp>:FREQuency:CENTer <Center>

Defines the position of the displayed frequency range, which is (Center - Span/2) to (Center + Span/2). The width of the range is defined using the frequency span setting.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<Center> Range: -1E+26 to 1E+26
Increment: 0.01
*RST: 0
Default unit: HZ

Usage: Asynchronous command

Manual operation: See "[Position]" on page 50

CALCulate:SPECtrum<sp>:FREQuency:SCALe <XAxisMode>

Defines the scaling method for the frequency axis (x-axis) of the spectrogram.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<XAxisMode> LIN | LOG

`LIN`: linear scaling
`LOG`: logarithmic scaling

*RST: LIN

Usage: Asynchronous command

Manual operation: See "Frequency axis" on page 334

CALCulate:SPECtrum<sp>:FREQuency:SPAN <Span>

The span is specified in Hertz and defines the width of the displayed frequency range, which is (Center - Span/2) to (Center + Span/2). The position of the span is defined using the "Center" setting.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<Span>
Range: 0 to 1E+26
Increment: 0.01
*RST: 0.02
Default unit: HZ

Usage: Asynchronous command

Manual operation: See "[Scale]" on page 51

CALCulate:SPECtrum<sp>:FREQuency:STARt <Start>

Defines the start frequency of the displayed frequency span.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<Start>
Range: -1E+26 to 1E+26
Increment: 0.01
*RST: -0.01
Default unit: HZ

Usage: Asynchronous command

Manual operation: See "Start" on page 331

CALCulate:SPECtrum<sp>:FREQuency:STOP <Stop>

Sets the stop frequency of the displayed frequency span.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<Stop>
Range: -1E+26 to 1E+26
Increment: 0.01
*RST: 0.01
Default unit: HZ

Usage: Asynchronous command

Manual operation: See "Stop" on page 331

CALCulate:SPECtrum<sp>:FREQuency:WINDow:TYPE <WindowFunction>

Selects the window type. Windowing helps minimize the discontinuities at the end of the measured signal interval and thus reduces the effect of spectral leakage, increasing the frequency resolution.

Various different window functions are provided in the MXO 5 to suit different input signals. Each of the window functions has specific characteristics, including some advantages and some trade-offs. Consider these characteristics carefully to find the optimum solution for the measurement task.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<WindowFunction> RECTangular | HAMMing | HANN | BLACkharris | GAUSsian | FLATTOP2 | KAISerbessel

RECTangular
The rectangular window has the best frequency resolution, but a poor amplitude accuracy and is recommended for separating two tones with almost equal amplitudes and a small frequency distance.

HAMMing
The Hamming window is bell shaped and has a good frequency resolution and fair amplitude accuracy. It is recommended for frequency response measurements and sine waves, periodic signals and narrowband noise.

HANN
The Hann window is bell shaped and has a slightly worse frequency resolution but smaller sidelobe level than the Hamming window. The applications are the same.

BLACkharris
The Blackman window is bell shaped and has a poor frequency resolution, but very good amplitude accuracy. It is recommended mainly for signals with single frequencies to detect harmonics.

GAUSsian
Good frequency resolution and best magnitude resolution, recommended for weak signals and short duration

FLATTOP2
The flat top window has a poor frequency resolution, but the best amplitude accuracy and the sharpest sidelobe. It is recommended for accurate single tone amplitude measurements.

KAISerbessel
The kaiser-bessel window has a fair frequency resolution and good amplitude accuracy, and a very high sidelobe level. It is recommended for separating two tones with differing amplitudes and a small frequency distance.

*RST: BLACkharris

Usage: Asynchronous command

Manual operation: See "Window type" on page 332

CALCulate:SPECtrum<sp>:MAGNitude:LEVel <VerticalMax>

Sets the maximum displayed value on the vertical scale.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<VerticalMax> Range: -1E+26 to 1000000000000000
Increment: 1
*RST: 10

Usage: Asynchronous command

Manual operation: See "Vertical maximum" on page 334

CALCulate:SPECtrum<sp>:MAGNitude:RANGe <VerticalRange>

Sets the range of the spectrum values to be displayed.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<VerticalRange> Range: 0 to 1000000000000000
Increment: 0.01
*RST: 100

Usage: Asynchronous command

Manual operation: See "Vertical range" on page 334

CALCulate:SPECtrum<sp>:MAGNitude:SCALe <Unit>

Sets the unit for the y-axis.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<Unit> LINear | DB | DBM | DBV | DBUV | DBS | DBHZ
*RST: DBM

Usage: Asynchronous command

Manual operation: See "Magnitude unit" on page 334

CALCulate:SPECtrum<sp>:PRESet

Presets the spectrum measurement.

Suffix:
<sp> 1 to 4, index of the spectrum

Usage: Setting only
Asynchronous command

Manual operation: See "Spectrum preset" on page 333

CALCulate:SPECtrum<sp>:SOURce <Source>

Selects the source for the spectrum.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<Source> C1 | C2 | ... | C8 | M1 | M2 | ... | M8 | R1 | R2 | ... | R8 | TRK1 | TRK2 | TRK3 | ... | TRK24 | PA1QPOWER | PA2QPOWER | ... | PA6QPOWER | PA1SPOWER | PA2SPOWER | ... | PA6SPOWER | PTHREE1QPOWER1 | PTHREE2QPOWER1 | ... | PTHREE6QPOWER1 | PTHREE1QPOWER2 | PTHREE2QPOWER2 | ... | PTHREE6QPOWER2 | PTHREE1QPOWER3 | PTHREE2QPOWER3 | ... | PTHREE6QPOWER3 | PTHREE1QTPOWER | PTHREE2QTPOWER | ... | PTHREE6QTPOWER | PTHREE1HPOWER1 | PTHREE2HPOWER1 | ... | PTHREE6HPOWER1 | PTHREE1HPOWER2 | PTHREE2HPOWER2 | ... | PTHREE6HPOWER2 | PTHREE1HPOWER3 | PTHREE2HPOWER3 | ... | PTHREE6HPOWER3 | PTHREE1HTPOWER | PTHREE2HTPOWER | ... | PTHREE6HTPOWER | PTHREE1EIP1 | PTHREE2EIP1 | ... | PTHREE6EIP1 | PTHREE1EIP2 | PTHREE2EIP2 | ... | PTHREE6EIP2 | PTHREE1EIP3 | PTHREE2EIP3 |... | PTHREE6EIP3 | PTHREE1EITP | PTHREE2EITP | ... | PTHREE6EITP | PTHREE1EOP1 | PTHREE2EOP1 | ... | PTHREE6EOP1 | PTHREE1EOP2 | PTHREE2EOP2 | ... | PTHREE6EOP2 | PTHREE1EOP3 | PTHREE2EOP3 |... | PTHREE6EOP3 | PTHREE1EOTP | PTHREE2EOTP | ... | PTHREE6EOTP | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11

Usage: Asynchronous command

Manual operation: See "Source" on page 330

CALCulate:SPECtrum<sp>:STATe <State>

Enables the spectrum.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:

<State> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Display" on page 330

CALCulate:SPECtrum<sp>:THReshold <Threshold>

Sets an absolute threshold as an additional condition for the peak search. Only peaks that exceed the threshold are detected.

Suffix:

<sp> 1 to 4, index of the spectrum

Parameters:

<Threshold>
Range: -500 to 500
Increment: 1
*RST: -70
Default unit: dBm

Usage: Asynchronous command

Manual operation: See "Threshold" on page 274

CALCulate:SPECtrum<sp>:PEXCursion <PeakExcursion>

Defines a minimum level value by which the waveform must drop left and right of the local maximum to be listed as a peak. Enter a peak excursion value to omit close by peaks and list just the highest peak.

Suffix:

<sp> 1 to 4, index of the spectrum

Parameters:

<PeakExcursion>
Range: 0 to 100
Increment: 1
*RST: 5
Default unit: dB

Usage: Asynchronous command

Manual operation: See "Peak excursion" on page 274

CALCulate:SPECtrum<sp>:WAVeform:AVERage:COUNt <AverageCount>

Sets the number of segments used for the averaging of the spectrum.

Suffix:

<sp> 1 to 4, index of the spectrum

Parameters:

<AverageCount>	Range:	2 to 65534
	Increment:	1
	*RST:	1000

Usage: Asynchronous command

Manual operation: See "Traces" on page 332

CALCulate:SPECtrum<sp>:WAVeform:AVERage:ENABle <Enable>

Enables the average trace.

Suffix:

<sp> 1 to 4, index of the spectrum

Parameters:

<Enable> OFF | ON

Usage: Asynchronous command

Manual operation: See "Traces" on page 332

CALCulate:SPECtrum<sp>:WAVeform:MAXimum:ENABle <Enable>

Enables the maximum trace.

Suffix:

<sp> 1 to 4, index of the spectrum

Parameters:

<Enable> OFF | ON

Usage: Asynchronous command

Manual operation: See "Traces" on page 332

CALCulate:SPECtrum<sp>:WAVeform:MINimum:ENABle <Enable>

Enables the minimum trace.

Suffix:

<sp> 1 to 4, index of the spectrum

Parameters:

<Enable> OFF | ON

Usage: Asynchronous command

Manual operation: See "Traces" on page 332

CALCulate:SPECtrum<sp>:WAVeform:NORMal[:ENABle] <Enable>

Enables the normal spectrum trace.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<Enable> OFF | ON

Usage: Asynchronous command

Manual operation: See "Traces" on page 332

18.16.2 Spectrum gate

CALCulate:SPECtrum<sp>:GATE:POSition....1319
CALCulate:SPECtrum<sp>:GATE:STARt....1319
CALCulate:SPECtrum<sp>:GATE:STOP....1320
CALCulate:SPECtrum<sp>:GATE:WIDTh....1320

CALCulate:SPECtrum<sp>:GATE:POSition <Center>

Sets the position of the displayed frequency range.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<Center>
Range: -1E+26 to 1E+26
Increment: 0.01
*RST: 0
Default unit: HZ

Usage: Asynchronous command

Manual operation: See "Position" on page 335

CALCulate:SPECtrum<sp>:GATE:STARt <Start>

Sets the starting value for the gate.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<Start>
Range: -1E+26 to 1E+26
Increment: 0.01
*RST: -0.01
Default unit: HZ

Usage: Asynchronous command

Manual operation: See "Start" on page 335

CALCulate:SPECtrum<sp>:GATE:STOP <Stop>

Sets the end value for the gate.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<Stop>
Range: -1E+26 to 1E+26
Increment: 0.01
*RST: 0.01
Default unit: HZ

Usage: Asynchronous command

Manual operation: See "Stop" on page 335

CALCulate:SPECtrum<sp>:GATE:WIDTh <Span>

Defines the width of the displayed gate.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<Span>
Range: 0 to 1E+26
Increment: 0.01
*RST: 0.02
Default unit: HZ

Usage: Asynchronous command

Manual operation: See "Width" on page 335

18.16.3 Peak list

CALCulate:SPECtrum<sp>:PLISt:COUNt? 1321
CALCulate:SPECtrum<sp>:PLISt[:STATe] 1321
CALCulate:SPECtrum<sp>:PLISt:MAXCount 1321
CALCulate:SPECtrum<sp>:PLISt:MODE 1321
CALCulate:SPECtrum<sp>:PLISt:SOURce 1322
CALCulate:SPECtrum<sp>:PLISt:SPOW 1322
CALCulate:SPECtrum<sp>:PLISt:RESult[:VALue]? 1322
CALCulate:SPECtrum<sp>:PLISt:SORT:COLumn 1323
CALCulate:SPECtrum<sp>:PLISt:SORT:ORDer 1323
CALCulate:SPECtrum<sp>:PLISt:LABel:FREQuency[:STATe] 1323
CALCulate:SPECtrum<sp>:PLISt:LABel:MAXCount 1323
CALCulate:SPECtrum<sp>:PLISt:LABel:INVert 1324
CALCulate:SPECtrum<sp>:PLISt:LABel:MAXCount 1324
CALCulate:SPECtrum<sp>:PLISt:LABel[:STATe] 1324

CALCulate:SPECtrum<sp>:PLISt:COUNt?

Returns the current number of peak list results.

Suffix:
<sp> 1 to 4, index of the spectrum

Return values:
<Count>

Usage: Query only
Asynchronous command

CALCulate:SPECtrum<sp>:PLISt[:STATe] <ShowTable>

Enables the display of the peak table.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<ShowTable> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Peak table" on page 337

CALCulate:SPECtrum<sp>:PLISt:MAXCount <MaxNoRess>

Sets the maximum number of measurement results that are listed in the result table.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<MaxNoRess> Range: 1 to 1000
Increment: 1
*RST: 10

Usage: Asynchronous command

Manual operation: See "Max results" on page 338

CALCulate:SPECtrum<sp>:PLISt:MODE <ResultMode>

Selects how the measurement results are displayed.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<ResultMode> ABS | REL
*RST: ABS

Usage: Asynchronous command

Manual operation: See "Result mode" on page 338

CALCulate:SPECtrum<sp>:PLISt:SOURce <Source>

Selects the source of the peak table. You can select one of the traces that is enabled with Traces.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<Source> SPECMAXH1 | SPECMINH1 | SPECNORM1 | SPECAVER1 | SPECMAXH2 | SPECMINH2 | SPECNORM2 | SPECAVER2 | SPECMAXH3 | SPECMINH3 | SPECNORM3 | SPECAVER3 | SPECMAXH4 | SPECMINH4 | SPECNORM4 | SPECAVER4

Usage: Asynchronous command

Manual operation: See "Source" on page 339

CALCulate:SPECtrum<sp>:PLISt:SPOW <ShowPeaks>

Displays a box with a description for each detected peak in the spectrum, including the magnitude.

If `CALCulate:SPECtrum<sp>:PLISt:LABel:FREQuency[:STATe]` is `ON`, the frequency values are also displayed.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<ShowPeaks> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Peak on waveform" on page 337

CALCulate:SPECtrum<sp>:PLISt:RESult[:VALue]?

Returns the current peak list measurement results.

Suffix:
<sp> 1 to 4, index of the spectrum

Return values:
<Value> Comma-separated list of results

Usage: Query only
Asynchronous command

CALCulate:SPECtrum<sp>:PLISt:SORT:COLumn <ResultColumn>

Sorts the results in the spectrum peak list table either according to the frequency or according to the value.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<ResultColumn> FREQ | VAL
*RST: FREQ

Usage: Asynchronous command

CALCulate:SPECtrum<sp>:PLISt:SORT:ORDer <ResultOrder>

Defines if the spectrum peak list results are sorted in an ascending (increasing) or descending (decreasing) order.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<ResultOrder> ASC | DESC
ASC: ascending
DESC: descending
*RST: ASC

Usage: Asynchronous command

CALCulate:SPECtrum<sp>:PLISt:LABel:FREQuency[:STATe] <ShowFrequency>

Includes the frequency of the detected peak in the diagram labels.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<ShowFrequency> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Show frequency" on page 339

CALCulate:SPECtrum<sp>:PLISt:LABel:MAXCount <MaxNumberPeaks>

Sets the maximum number of measurement results that are listed in the result table.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:

<MaxNumberPeaks> Range: 1 to 100
Increment: 1
*RST: 10

Usage: Asynchronous command

CALCulate:SPECtrum<sp>:PLISt:LABel:INVert <Inverse>

Inverts the colors of the peak list labels, the peak boxes are shown with a white background.

Suffix:

<sp> 1 to 4, index of the spectrum

Parameters:

<Inverse> OFF | ON
*RST: OFF

Usage: Asynchronous command

CALCulate:SPECtrum<sp>:PLISt:LABel:MAXCount <MaxNumberPeaks>

Sets the maximum number of measurement results that are listed in the result table.

Suffix:

<sp> 1 to 4, index of the spectrum

Parameters:

<MaxNumberPeaks> Range: 1 to 100
Increment: 1
*RST: 10

Usage: Asynchronous command

CALCulate:SPECtrum<sp>:PLISt:LABel[:STATe] <ShowLabels>

Displays the labels in the peak list diagram.

Suffix:

<sp> 1 to 4, index of the spectrum

Parameters:

<ShowLabels> OFF | ON
*RST: ON

Usage: Asynchronous command

18.16.4 Spectrum with frames and overlap

CALCulate:SPECtrum<sp>:OVERlap:ENABle....1325
CALCulate:SPECtrum<sp>:OVERlap:FACTor:VALue....1325
CALCulate:SPECtrum<sp>:OVERlap:FACTor:ADJusted?....1325
CALCulate:SPECtrum<sp>:OVERlap:FCOunt:LIMit:ENABle....1326
CALCulate:SPECtrum<sp>:OVERlap:FCOunt:VALue....1326
CALCulate:SPECtrum<sp>:OVERlap:FCOunt:ADJusted?....1326
CALCulate:SPECtrum<sp>:OVERlap:FWIDth?....1327

CALCulate:SPECtrum<sp>:OVERlap:ENABle <State>

Activates the use of frames and overlap to create the FFT spectrum.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Enable" on page 339

CALCulate:SPECtrum<sp>:OVERlap:FACTor:VALue <OverlapFactor>

Defines the minimum factor by which two neighboring frames overlap.

Suffix:
<sp> 1 to 4, index of the spectrum

Parameters:
<OverlapFactor> Range: 0 to 90
Increment: 1
*RST: 20
Default unit: %

Usage: Asynchronous command

Manual operation: See "Overlap factor" on page 340

CALCulate:SPECtrum<sp>:OVERlap:FACTor:ADJusted?

Returns the adjusted overlap factor that is used for calculation. It is based on the given minimum overlap factor and the current settings.

Suffix:
<sp> 1 to 4, index of the spectrum

Return values:

<AdjOverlapFact> Range: 0 to 100
Increment: 1
*RST: 20
Default unit: %

Usage: Query only
Asynchronous command

Manual operation: See "Overlap factor" on page 340

CALCulate:SPECtrum<sp>:OVERlap:FCOunt:LIMit:ENABle <LimitNumberFFT>

Limits the number of FFTs that are done per acquisition. To set the number of FFTs, use `CALCulate:SPECtrum<sp>:OVERlap:FCOunt:VALue`.

Suffix:

<sp> 1 to 4, index of the spectrum

Parameters:

<LimitNumberFFT> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Limit # of FFTs" on page 339

CALCulate:SPECtrum<sp>:OVERlap:FCOunt:VALue <FFTPerAcq>

Sets the number of frames to be used for FFT with `CALCulate:SPECtrum<sp>:OVERlap:FCOunt:LIMit:ENABle` set ON.

Suffix:

<sp> 1 to 4, index of the spectrum

Parameters:

<FFTPerAcq> Range: 1 to 4294967295
Increment: 1
*RST: 1000

Usage: Asynchronous command

Manual operation: See "FFTs per acq." on page 340

CALCulate:SPECtrum<sp>:OVERlap:FCOunt:ADJusted?

Returns the adjusted number of frames that is used for FFT calculation.

Suffix:

<sp> 1 to 4, index of the spectrum

Return values:

<AdjFFTPerAcq> Range: 1 to 4294967295
Increment: 1
*RST: 1000

Usage: Query only
Asynchronous command

Manual operation: See "FFTs per acq." on page 340

CALCulate:SPECtrum<sp>:OVERlap:FWIDth?

Returns the frame width.

Suffix:

<sp> 1 to 4, index of the spectrum

Return values:

<FrameWidth> Range: 1E-16 to 10000
Increment: 1
*RST: 1
Default unit: s

Usage: Query only
Asynchronous command

Manual operation: See "Frame width" on page 340

18.16.5 Data export of spectrum waveforms

For each of the spectrum traces, a dedicated command is available. You find the commands in Section 18.13.9, "Data transfer to remote computer", on page 1253. For a description of the traces, see "Traces" on page 332.

For fast export of several waveforms at once, use `EXPort:WAVeform:DATA[:VALues]?` on page 1263.

For export of spectrum data to file, see Section 18.13.4, "Waveform data: export to file", on page 1240.

18.17 Applications

18.17.1 Mask testing

Some of the commands in the following section are asynchronous. An overlapping or asynchronous command does not automatically finish executing before the next command starts executing. If overlapping commands must be executed in a defined order, e.g. to avoid wrong measurement results, they must be serviced sequentially.

To prevent an overlapping execution of commands, one of the commands `*OPC`, `*OPC?` or `*WAI` can be used after the command or a command set.

For more information, see:

- www.rohde-schwarz.com/rc-via-scpi, section "Command sequence and synchronization"

- Mask test definition 1328
- Polygon definition 1331
- Auto mask definition 1334
- Actions 1337
- Results 1339

18.17.1.1 Mask test definition

MTESt<m>:ADD 1328
MTESt<m>:COUNt? 1328
MTESt<m>:DIAGram 1329
MTESt<m>:IMEXport:NAME 1329
MTESt<m>:IMEXport:OPEN 1329
MTESt<m>:IMEXport:SAVE 1329
MTESt<m>:REMove 1330
MTESt<m>:SOURce 1330
MTESt<m>:STATe 1330
MTESt<m>:VISible 1330

MTESt<m>:ADD

Creates a mask test with the indicated index.

Suffix:
<m> 1 to 8, index of the mask

Example: See Section 18.5.2, "Creating a mask", on page 1055.

Usage: Setting only
Asynchronous command

Manual operation: See "Add mask" on page 344

MTESt<m>:COUNt?

Returns the number of masks.

`MTESt:COUNt? MAX` returns the maximum number of masks that can be created.

Suffix:
<m> Irrelevant, omit the suffix.

Return values:
<Count> Number of defined masks

Usage: Query only
Asynchronous command

MTESt<m>:DIAGram <DiagramKey>

Sets the layout and the diagram where the mask is located and the test runs.

Suffix:
<m> 1 to 8, index of the mask

Parameters:
<DiagramKey> String with the layout-diagram key.

Example:
```
:MTESt:DIAGram?
-->"L1_D1"
```

Usage: Asynchronous command

MTESt<m>:IMEXport:NAME <Name>

Sets the path, the filename and the file format of the mask file.

Suffix:
<m> 1 to 8, index of the mask

Parameters:
<Name> String with path and file name with extension `.xml`.

Example:
```
MTES2:IMEX:NAME
'/home/storage/userData/Masks/MyMask2.xml'
```
File and path definition for mask test 2.

Usage: Asynchronous command

Manual operation: See "Save mask" on page 345

MTESt<m>:IMEXport:OPEN

Opens and loads the mask selected by `MTESt<m>:IMEXport:NAME`.

Suffix:
<m> 1 to 8, index of the mask

Usage: Event
Asynchronous command

Manual operation: See "Open" on page 345

MTESt<m>:IMEXport:SAVE

Saves the mask test to the file selected by `MTESt<m>:IMEXport:NAME`.

Suffix:
<m> 1 to 8, index of the mask

Usage: Event
Asynchronous command

Manual operation: See "Save mask" on page 345

MTESt<m>:REMove

Deletes the selected mask.

Suffix:
<m> 1 to 8, index of the mask

Usage: Setting only
Asynchronous command

MTESt<m>:SOURce <Source>

Selects the waveform to be tested against the mask. For auto mask definition, it is also the waveform from which the mask is created.

Suffix:
<m> 1 to 8, index of the mask

Parameters:
<Source> C1 | C2 | ... | C8 | M1 | M2 | ... | M8 | XY1 | XY2 | XY3 | XY4 | SPECNORM1 | SPECNORM2 | SPECNORM3 | SPECNORM4 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11 | EYE1 | EYE2 | ... | EYE8

Usage: Asynchronous command

Manual operation: See "Source" on page 345

MTESt<m>:STATe <State>

Activates or deactivates the mask test.

Suffix:
<m> 1 to 8, index of the mask

Parameters:
<State> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Enable test" on page 344

MTESt<m>:VISible <DisplayState>

Displays all mask segments of the selected mask in the diagrams, or hides them.

Suffix:
<m> 1 to 8, index of the mask

Parameters:
<DisplayState> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Display" on page 344

18.17.1.2 Polygon definition

MTESt<m>:SEGMent<n>:ADD....1331
MTESt<m>:SEGMent<n>:COUNt?....1331
MTESt<m>:SEGMent<n>:POINt<o>:ADD....1332
MTESt<m>:SEGMent<n>:POINt<o>:COUNt?....1332
MTESt<m>:SEGMent<n>:POINt<o>:REMove....1332
MTESt<m>:SEGMent<n>:POINt<o>:VALid?....1333
MTESt<m>:SEGMent<n>:POINt<o>:X....1333
MTESt<m>:SEGMent<n>:POINt<o>:Y....1333
MTESt<m>:SEGMent<n>:REMove....1334
MTESt<m>:SEGMent<n>:VALid?....1334

MTESt<m>:SEGMent<n>:ADD

Adds a new segment to the selected mask. The segment has no points, use `MTESt<m>:SEGMent<n>:POINt<o>:ADD` to add the points.

Suffix:

<m> 1 to 8, index of the mask

<n> 1 to 8, index of the segment
Omit the suffix to use the next free suffix.

Example: See Section 18.5.2, "Creating a mask", on page 1055.

Usage: Setting only
Asynchronous command

Manual operation: See "Add segment" on page 346

MTESt<m>:SEGMent<n>:COUNt?

Returns the number of segments that belong to the indicated mask.

`MTESt<m>:SEGMent:COUNt? MAX` returns the maximum number of segments that can be created.

Suffix:

<m> 1 to 8, index of the mask

<n> Irrelevant, omit the suffix.

Return values:

<Count> Number of defined masks

Usage: Query only
Asynchronous command

MTESt<m>:SEGMent<n>:POINt<o>:ADD

Adds a corner point to the selected mask segment at the next free suffix. The new point has the coordinates 0;0.

Suffix:
<m> 1 to 8, index of the mask

<n> 1 to 8, index of the segment

<o> 1 to *, index of the segment point

Example: See Section 18.5.2, "Creating a mask", on page 1055.

Usage: Setting only
Asynchronous command

Manual operation: See "Add +" on page 347

MTESt<m>:SEGMent<n>:POINt<o>:COUNt?

Returns the number of points that was added to the indicated mask segment.

You can query the maximum value with `<command>? MAX`.

Suffix:
<m> 1 to 8, index of the mask

<n> 1 to 8, index of the segment

<o> Irrelevant, omit the suffix.

Parameters:
<Count> Number of defined points

Example: See Section 18.5.2, "Creating a mask", on page 1055.

Usage: Query only
Asynchronous command

Manual operation: See "Add +" on page 347

MTESt<m>:SEGMent<n>:POINt<o>:REMove

Deletes the indicated corner point of the mask segment.

Suffix:
<m> 1 to 8, index of the mask

<n> 1 to 8, index of the segment

<o> 1 to *, index of the segment point

Usage: Setting only
Asynchronous command

Manual operation: See "Delete, Delete all" on page 348

MTESt<m>:SEGMent<n>:POINt<o>:VALid?

Checks the validity of the selected point. See "Polygon masks" on page 342.

Suffix:

<m> 1 to 8, index of the mask

<n> 1 to 8, index of the segment

<o> 1 to *, index of the segment point

Return values:

<Valid> OFF | ON

ON = valid
OFF = invalid

*RST: ON

Usage: Query only
Asynchronous command

MTESt<m>:SEGMent<n>:POINt<o>:X <X>

Sets the horizontal position of the selected corner point.

Suffix:

<m> 1 to 8, index of the mask

<n> 1 to 8, index of the segment

<o> 1 to *, index of the segment point

Parameters:

<X> Range: -1E+26 to 1E+26
Increment: 1E-06
*RST: 0
Default unit: s

Example: See Section 18.5.2, "Creating a mask", on page 1055.

Usage: Asynchronous command

Manual operation: See "Point, X, Y" on page 347

MTESt<m>:SEGMent<n>:POINt<o>:Y <Y>

Sets the vertical position of the selected corner point.

Suffix:

<m> 1 to 8, index of the mask

<n> 1 to 8, index of the segment

<o> 1 to *, index of the segment point

Parameters:

<Y> Range: -1E+26 to 1E+26
Increment: 1E-06
*RST: 0
Default unit: V

Example: See Section 18.5.2, "Creating a mask", on page 1055.

Usage: Asynchronous command

Manual operation: See "Point, X, Y" on page 347

MTESt<m>:SEGMent<n>:REMove

Deletes the specified mask segment.

Suffix:

<m> 1 to 8, index of the mask

<n> 1 to 8, index of the segment

Usage: Setting only
Asynchronous command

Manual operation: See "Delete, Delete all" on page 348

MTESt<m>:SEGMent<n>:VALid?

Checks the validity of the indicated segment. The segment is invalid if one of its points is invalid. See "Polygon masks" on page 342.

Suffix:

<m> 1 to 8, index of the mask

<n> 1 to 8, index of the segment

Return values:

<Valid> OFF | ON

ON = valid
OFF = invalid

*RST: ON

Usage: Query only
Asynchronous command

18.17.1.3 Auto mask definition

MTESt<m>:AUTomask:UPDate....1335
MTESt<m>:AUTomask:XTOLerance:DIVisions....1335
MTESt<m>:AUTomask:XTOLerance:PHYSical....1335
MTESt<m>:AUTomask:YTOLerance:DIVisions....1336
MTESt<m>:AUTomask:YTOLerance:PHYSical....1336
MTESt<m>:AUTomask:XTUNit....1336

MTESt<m>:AUTomask:YTUNit 1336
MTESt<m>:AUTomask:VALues:BOTTom? 1337
MTESt<m>:AUTomask:VALues:TOP? 1337

MTESt<m>:AUTomask:UPDate

Creates or updates the upper and lower mask limit from the envelope of the selected source by copying the waveform data. See also: `MTESt<m>:SOURce` on page 1330.

Suffix:
<m> 1 to 8, index of the mask

Usage: Event
Asynchronous command

Manual operation: See "Create/Update" on page 348

MTESt<m>:AUTomask:XTOLerance:DIVisions <HorizTol>

Sets the width of the mask in horizontal direction in divisions, and sets `MTESt<m>:AUTomask:XTUNit` to `DIVisions`.

Suffix:
<m> 1 to 8, index of the mask

Parameters:
<HorizTol> Tolerance value in divisions. The overall mask width is twice the specified value.

Range: 0 to 10
Increment: 0.01
*RST: 0.2

Usage: Asynchronous command

Manual operation: See "Tolerance (Horizontal)" on page 349

MTESt<m>:AUTomask:XTOLerance:PHYSical <HorizTol>

Sets the width of the mask in horizontal direction in the unit of the horizontal axis, and sets `MTESt<m>:AUTomask:XTUNit` to `PHYSical`.

Suffix:
<m> 1 to 8, index of the mask

Parameters:
<HorizTol> Tolerance value in the physical unit of the x-axis. The overall mask width is twice the specified value.

Range: 0 to 10
Increment: 0.01
*RST: 0.2

Usage: Asynchronous command

Manual operation: See "Tolerance (Horizontal)" on page 349

MTESt<m>:AUTomask:YTOLerance:DIVisions <VertTol>

Sets the height of the mask in vertical direction in divisions, and sets `MTESt<m>:AUTomask:YTUNit` to `DIVisions`.

Suffix:
<m> 1 to 8, index of the mask

Parameters:
<VertTol> Tolerance value in divisions. The overall mask height is twice the specified value.

Range: 0 to 10
Increment: 0.01
*RST: 0.2

Usage: Asynchronous command

Manual operation: See "Tolerance (Vertical)" on page 349

MTESt<m>:AUTomask:YTOLerance:PHYSical <VertTol>

Sets the height of the mask in vertical direction in the unit of the vertical axis, and sets `MTESt<m>:AUTomask:YTUNit` to `PHYSical`.

Suffix:
<m> 1 to 8, index of the mask

Parameters:
<VertTol> Tolerance value in the physical unit of the y-axis. The overall mask height is twice the specified value.

Range: 0 to 10
Increment: 0.01
*RST: 0.2

Usage: Asynchronous command

Manual operation: See "Tolerance (Vertical)" on page 349

MTESt<m>:AUTomask:XTUNit <HorizTolUnt>
MTESt<m>:AUTomask:YTUNit <VertTolUnt>

Set the unit of the mask tolerance in horizontal and vertical direction: divisions or in the unit of the corresponding axis.

Suffix:
<m> 1 to 8, index of the mask

Parameters:
<VertTolUnt> DIVisions | PHYSical

*RST: DIVisions

Usage: Asynchronous command

Manual operation: See "Unit" on page 349

MTESt<m>:AUTomask:VALues:BOTTom?

Returns the points of the lower mask limit.

Suffix:
<m> 1 to 8, index of the mask

Return values:
<Points> Comma-separated list of values
Range: -INF to INF
Increment: 0.01
*RST: 0

Usage: Query only
Asynchronous command

MTESt<m>:AUTomask:VALues:TOP?

Returns the points of the upper mask limit.

Suffix:
<m> 1 to 8, index of the mask

Return values:
<Points> Comma-separated list of values
Range: -INF to INF
Increment: 0.01
*RST: 0

Usage: Query only
Asynchronous command

18.17.1.4 Actions

MTESt<m>:ONViolation:BEEP 1337
MTESt<m>:ONViolation:SCReenshot 1338
MTESt<m>:ONViolation:SRESults 1338
MTESt<m>:ONViolation:STOP 1338
MTESt<m>:ONViolation:TRIGgerout 1339
MTESt<m>:ONViolation:WFMSave 1339

MTESt<m>:ONViolation:BEEP <Beep>

Generates a beep sound if the command is set to `SUCCess` or `VIOLation`.

Suffix:
<m> 1 to 8, index of the mask

Parameters:
<Beep> NOACtion | SUCCess | VIOLation
*RST: NOACtion

Usage: Asynchronous command

Manual operation: See "Beep" on page 350

MTESt<m>:ONViolation:SCReenshot <SaveScreenshot>

Saves the waveform data to file if the command is set to `SUCCess` or `VIOLation`.

To configure the screenshot settings, use the commands described in Section 18.13.8, "Screenshots", on page 1250.

Suffix:
<m> 1 to 8, index of the mask

Parameters:
<SaveScreenshot> NOACtion | SUCCess | VIOLation
*RST: NOACtion

Usage: Asynchronous command

Manual operation: See "Screenshot" on page 351

MTESt<m>:ONViolation:SRESults <SaveResults>

Saves the selected results to file if the command is set to `SUCCess` or `VIOLation`.

To define the path and file names, use the EXPort:RESult:AUTonaming:* commands:

- `EXPort:RESult:AUTonaming:NAME` on page 1248
- `EXPort:RESult:AUTonaming:PATH` on page 1248
- `EXPort:RESult:AUTonaming:TYPE` on page 1249

Suffix:
<m> 1 to 8, index of the mask

Parameters:
<SaveResults> NOACtion | SUCCess | VIOLation
*RST: NOACtion

Usage: Asynchronous command

Manual operation: See "Save results" on page 351

MTESt<m>:ONViolation:STOP <StopAcq>

Stops the running acquisition if the command is set to `SUCCess` or `VIOLation`.

Suffix:
<m> 1 to 8, index of the mask

Parameters:
<StopAcq> NOACtion | SUCCess | VIOLation
*RST: NOACtion

Usage: Asynchronous command

Manual operation: See "Stop acq" on page 350

MTESt<m>:ONViolation:TRIGgerout <TrigOutPls>

Sends an outgoing pulse to the [Trigger Out] connector if the command is set to `SUCCess` or `VIOLation`.

To configure the pulse, user the following commands:

- `TRIGger:ACTions:OUT:SOURce` on page 1176
- `TRIGger:ACTions:OUT:POLarity` on page 1177
- `TRIGger:ACTions:OUT:DELay` on page 1176
- `TRIGger:ACTions:OUT:PLENgth` on page 1176

Suffix:
<m> 1 to 8, index of the mask

Parameters:
<TrigOutPls> NOACtion | SUCCess | VIOLation
*RST: NOACtion

Usage: Asynchronous command

Manual operation: See "Trigger out pulse" on page 351

MTESt<m>:ONViolation:WFMSave <SaveWfm>

Saves the waveform data to file if the command is set to `SUCCess` or `VIOLation`.

To define the path and file names, use the EXPort:WAVeform:AUTonaming:* commands:

- `EXPort:WAVeform:AUTonaming:NAME` on page 1240
- `EXPort:WAVeform:AUTonaming:PATH` on page 1240
- `EXPort:WAVeform:AUTonaming:TYPE` on page 1241

Suffix:
<m> 1 to 8, index of the mask

Parameters:
<SaveWfm> NOACtion | SUCCess | VIOLation
*RST: NOACtion

Usage: Asynchronous command

Manual operation: See "Save wfm" on page 350

18.17.1.5 Results

MTESt<m>:RESult:COUNt:FWAVeforms? 1340
MTESt<m>:RESult:COUNt:PWAVeforms? 1340
MTESt<m>:RESult:COUNt:WAVeforms? 1340
MTESt<m>:RESult:FRATe? 1340
MTESt<m>:RESult[:RESult]? 1341

MTESt<m>:RESult:COUNt:FWAVeforms?

Returns the number of failed acquisitions.

Suffix:
<m> 1 to 8, index of the mask

Return values:
<AcqsFailed> Range: 0 to 10000000000000
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

Manual operation: See "Failed acq." on page 343

MTESt<m>:RESult:COUNt:PWAVeforms?

Returns the number of acquisitions that passed the test successfully.

Suffix:
<m> 1 to 8, index of the mask

Return values:
<AcqsPassed> Range: 0 to 10000000000000
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

Manual operation: See "Passed acq." on page 343

MTESt<m>:RESult:COUNt:WAVeforms?

Returns the number of tested acquisitions.

Suffix:
<m> 1 to 8, index of the mask

Return values:
<AcqsCompleted> Range: 0 to 10000000000000
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

Manual operation: See "Total acq." on page 343

MTESt<m>:RESult:FRATe?

Returns the fail rate, the ratio of failed acquisitions to the number of tested acquisitions.

Suffix:
<m> 1 to 8, index of the mask

Return values:
<FailRate> Range: -1E+26 to 1E+26
Increment: 0
*RST: 0
Default unit: %

Usage: Query only
Asynchronous command

Manual operation: See "Fail rate" on page 343

MTESt<m>:RESult[:RESult]?

Returns the overall test result.

Suffix:
<m> 1 to 8, index of the mask

Return values:
<TestResult> PASS | FAIL
*RST: PASS

Usage: Query only
Asynchronous command

Manual operation: See "Result" on page 343

18.17.2 Frequency response and impedance analyses (options R&S MXO5-K36/K337)

- Settings....1341
- Generator settings....1348
- Amplitude profile....1349
- Diagram settings....1351
- Calibration settings for frequency response analysis....1354
- Analysis results....1355
- Reference waveforms....1360
- Export of analysis data....1364

18.17.2.1 Settings

FRANalysis:AUToscale....1342
FRANalysis:AUToscale:RESult[:ENABle]....1342
FRANalysis:ENABle....1342
FRANalysis:FREQuency:MODE....1343
FRANalysis:FREQuency:STARt....1343
FRANalysis:FREQuency:STOP....1343
FRANalysis:HDEFinition[:ENABle]....1343

FRANalysis:IMPedance[:MODE] 1344
FRANalysis:INPut[:SOURce] 1344
FRANalysis:MEASurement:DELay:STATe 1344
FRANalysis:MEASurement:DELay:MODE 1344
FRANalysis:MEASurement:DELay[:TIME] 1345
FRANalysis:MEASurement:DELay:PERiod[:NUMBer] 1345
FRANalysis:MEASurement:POINt[:DISPlay] 1345
FRANalysis:MEASurement:RBW 1346
FRANalysis:MODE 1346
FRANalysis:OUTPut[:SOURce] 1346
FRANalysis:PHASe:MAXimum 1346
FRANalysis:POINts:LOGarithmic 1347
FRANalysis:POINts:MODE 1347
FRANalysis:POINts:TOTal 1347
FRANalysis:REPeat 1348
FRANalysis:RESet 1348
FRANalysis:STATe 1348

FRANalysis:AUToscale <AutoScale>

Enables the auto scaling function for each measurement.

Parameters:

<AutoScale> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Auto scale" on page 367

FRANalysis:AUToscale:RESult[:ENABle] <State>

If ON, the scaling of the plot diagram is adjusted when new measurement results are determined.

Parameters:

<State> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Auto scale result" on page 367

FRANalysis:ENABle <State>

Enables the frequency response analysis application.

If the frequency response analysis is disabled, the instrument does not accept any `FRANalysis` command.

You can start the analysis with `FRANalysis:STATe`.

Parameters:
<State> OFF | ON

Usage: Asynchronous command

FRANalysis:FREQuency:MODE <FrequencyMode>

Selects between single frequency and sweep analysis.

Parameters:
<FrequencyMode> SWEep | SINGle
*RST: SWEep

Usage: Asynchronous command

Manual operation: See "Frequency mode" on page 362

FRANalysis:FREQuency:STARt <StartFrequency>

Sets the start frequency of the sweep.

Parameters:
<StartFrequency> Range: 0.01 to 100E+6
Increment: 1
*RST: 100
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Start, Stop" on page 362

FRANalysis:FREQuency:STOP <StopFrequency>

Sets the stop frequency of the sweep.

Parameters:
<StopFrequency> Range: 0.01 to 100E+6
Increment: 1
*RST: 10000
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Start, Stop" on page 362

FRANalysis:HDEFinition[:ENABle] <HDMode>

Disables the HD mode, which is active by default. In particular, disable the HD mode if you analyze switching peaks.

Parameters:
<HDMode> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "HD mode" on page 368

FRANalysis:IMPedance[:MODE] <MeasMode>

Selects the measurement method for the impedance analysis.

Parameters:

<MeasMode> SHUNt | SERies | VCURrent

SHUNt: Shunt through
SERies: Series through
VCURrent: Voltage current

*RST: SERies

Manual operation: See "Measure type" on page 362

FRANalysis:INPut[:SOURce] <InputChannel>

Sets the channel for the input signal of the DUT.

Parameters:

<InputChannel> C1 | C2 | ... | C8

*RST: C1

Usage: Asynchronous command

Manual operation: See "Input" on page 361

FRANalysis:MEASurement:DELay:STATe <MeasDelay>

Enables the measurement delay.

Parameters:

<MeasDelay> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Meas. delay mode, Delay time, Delay period" on page 367

FRANalysis:MEASurement:DELay:MODE <MeasDelayMode>

Selects the delay mode.

Parameters:

<MeasDelayMode> TIME | PERiod

*RST: TIME

Usage: Asynchronous command

Manual operation: See "Meas. delay mode, Delay time, Delay period" on page 367

FRANalysis:MEASurement:DELay[:TIME] <MeasDelayTime>

Sets a time delay, that the system waits before measuring the next point of the plot. This is helpful in systems that need more time to adapt to the new frequency, for example if filters with significant time group delays are present.

The settings takes effect if if `FRANalysis:MEASurement:DELay:STATe` = `ON` and `FRANalysis:MEASurement:DELay:MODE` = `PERiod`.

Parameters:

<MeasDelayTime>
Range: 0 to 10
Increment: 0.001
*RST: 0
Default unit: s

Example:

```
FRANalysis:MEASurement:DELay:STATe ON
FRANalysis:MEASurement:DELay:MODE TIME
FRANalysis:MEASurement:DELay 0.005
```

Usage: Asynchronous command

Manual operation: See "Meas. delay mode, Delay time, Delay period" on page 367

FRANalysis:MEASurement:DELay:PERiod[:NUMBer] <MeasDelayPeriod>

Sets a period delay, which the system waits before measuring the next point of the plot.

The settings takes effect if if `FRANalysis:MEASurement:DELay:STATe` = `ON` and `FRANalysis:MEASurement:DELay:MODE` = `PERiod`.

Parameters:

<MeasDelayPeriod>
Range: 0.01 to 1000
Increment: 0.01
*RST: 1

Example:

```
FRANalysis:MEASurement:DELay:STATe ON
FRANalysis:MEASurement:DELay:MODE PERiod
FRANalysis:MEASurement:DELay:PERiod 0.05
```

Usage: Asynchronous command

Manual operation: See "Meas. delay mode, Delay time, Delay period" on page 367

FRANalysis:MEASurement:POINt[:DISPlay] <Points>

Enables the display of the measurement points for the frequency response analysis.

Parameters:

<Points>
OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Display points" on page 368

FRANalysis:MEASurement:RBW <RBW>

Sets the resolution bandwidth, which determines the number of measurements that are used for creating the plot.

Parameters:

<RBW> HIGH | MID | LOW
*RST: HIGH

Usage: Asynchronous command

Manual operation: See "RBW" on page 367

FRANalysis:MODE <ApplicationMd>

Selects the application mode.

- "Gain/phase": Frequency response analysis (option R&S MXO5-K36)
- "Impedance": Impedance analysis (option R&S MXO5-K337)

Parameters:

<ApplicationMd> GPHase | IMPedance
*RST: GPHase

Usage: Asynchronous command

Manual operation: See "Mode" on page 361

FRANalysis:OUTPut[:SOURce] <OutputChannel>

Sets the channel for the output signal of the DUT.

Parameters:

<OutputChannel> C1 | C2 | ... | C8
*RST: C2

Usage: Asynchronous command

Manual operation: See "Output" on page 362

FRANalysis:PHASe:MAXimum <MaxPhase>

Sets the upper boundary of the vertical phase window.

The lower boundary is given by "Maximum phase" - 360°.

By default, the "Maximum phase" is set to 180° for a phase window ranging from -180° to 180° accordingly.

Only available for frequency response analysis.

Parameters:

<MaxPhase>
Range: 0 to 360
Increment: 1
*RST: 180
Default unit: °

Usage: Asynchronous command

Manual operation: See "Maximum phase" on page 366

FRANalysis:POINts:LOGarithmic <PtsPerDecade>

Selects the number of points that are measured per decade, if `FRANalysis:POINts:MODE` is set to `DECade`.

Parameters:

<PtsPerDecade>
Range: 10 to 500
Increment: 1
*RST: 10

Usage: Asynchronous command

Manual operation: See "Points" on page 362

FRANalysis:POINts:MODE <PointsMode>

Selects, if the number of points for the FRA are measured as total or per decade.

You can set the number of points with `FRANalysis:POINts:TOTal`/ `FRANalysis:POINts:LOGarithmic`.

Parameters:

<PointsMode>
TOTal | DECade
*RST: DECade

Usage: Asynchronous command

Manual operation: See "Points" on page 362

FRANalysis:POINts:TOTal <TotalPoints>

Set the total number of points for the FRA analysis, if `FRANalysis:POINts:MODE` on page 1347 is set to `TOTal`.

Parameters:

<TotalPoints>
Range: 10 to 5000
Increment: 1
*RST: 100

Usage: Asynchronous command

Manual operation: See "Points" on page 362

FRANalysis:REPeat <Repeat>

Repeats the measurement, using the same parameters.

Parameters:
<Repeat> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Repeat" on page 363

FRANalysis:RESet

Resets the frequency response analysis.

Usage: Setting only
Asynchronous command

FRANalysis:STATe <Value>

Starts the frequency response analysis.

Parameters:
<Value> RUN | STOP | OFF

Usage: Asynchronous command

Manual operation: See "Run" on page 363

18.17.2.2 Generator settings

FRANalysis:AMPLitude:MODE 1348
FRANalysis:GENerator[:CHANnel] 1349
FRANalysis:GENerator:AMPLitude 1349
FRANalysis:GENerator:LOAD 1349

FRANalysis:AMPLitude:MODE <AmplitudeMode>

Selects, if the amplitude is a constant value (`FRANalysis:GENerator:AMPLitude`) or is defined as an amplitude profile.

Parameters:
<AmplitudeMode> CONStant | PROFile
*RST: CONStant

Usage: Asynchronous command

Manual operation: See "Amplitude mode" on page 363

FRANalysis:GENerator[:CHANnel] <GenCh>

Selects the built-in generator to start a frequency sweep for a defined frequency range.

Parameters:

<GenCh> GEN1 | GEN2 | BOTH

BOTH: only available for impedance analysis, synchronizes the generators.

*RST: GEN1

Usage: Asynchronous command

Manual operation: See "Generator" on page 363

FRANalysis:GENerator:AMPLitude <GenAmplitude>

Sets a fixed amplitude for the generated signal.

Parameters:

<GenAmplitude> Range: 0.01 to 12
Increment: 0.1
*RST: 1
Default unit: Vpp

Usage: Asynchronous command

Manual operation: See "Amplitude" on page 364

FRANalysis:GENerator:LOAD <GenLoad>

Selects the generator voltage display for 50Ω or high impedance load.

Parameters:

<GenLoad> FIFTy | HIZ

`HIZ`: high input impedance

*RST: FIFTy

Usage: Asynchronous command

Manual operation: See "User load" on page 364

18.17.2.3 Amplitude profile

FRANalysis:AMPLitude:PROFile:APOint 1350
FRANalysis:AMPLitude:PROFile:COUNt 1350
FRANalysis:AMPLitude:PROFile:MODE 1350
FRANalysis:AMPLitude:PROFile:POINt<m>:AMPLitude 1350
FRANalysis:AMPLitude:PROFile:POINt<m>:FREQuency 1350
FRANalysis:AMPLitude:PROFile:POINt<m>:REMove 1351
FRANalysis:AMPLitude:PROFile:SORT 1351

FRANalysis:AMPLitude:PROFile:APOint

Adds a new step to the amplitude profile.

Usage: Setting only
Asynchronous command

Manual operation: See "Add" on page 365

FRANalysis:AMPLitude:PROFile:COUNt <Value>

Sets the number of defined points for the amplitude profile.

Parameters:
<Value>

Usage: Asynchronous command

Manual operation: See "Add" on page 365

FRANalysis:AMPLitude:PROFile:MODE <VoltageChange>

Selects if the voltage change is done as a single step or as a ramp.

Parameters:
<VoltageChange> SINGle | RAMP
*RST: SINGle

Usage: Asynchronous command

Manual operation: See "Voltage change" on page 365

FRANalysis:AMPLitude:PROFile:POINt<m>:AMPLitude <Amplitude>

Sets the amplitude for the selected point.

Suffix:
<m> Index of the amplitude profile point

Parameters:
<Amplitude> Range: 0 to 5.995
Increment: 0.1
*RST: 1
Default unit: Vpp

Usage: Asynchronous command

Manual operation: See "Step start freq, Amplitude" on page 365

FRANalysis:AMPLitude:PROFile:POINt<m>:FREQuency <Frequency>

Sets the start frequency for the selected point.

Suffix:
<m> Index of the amplitude profile point

Parameters:
<Frequency> Range: 0.01 to 100E6
Increment: 1
*RST: 100
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Step start freq, Amplitude" on page 365

FRANalysis:AMPLitude:PROFile:POINt<m>:REMove

Removes the specified step from the amplitude profile.

Suffix:
<m> 1..*, step index

Usage: Setting only
Asynchronous command

Manual operation: See "Delete" on page 365

FRANalysis:AMPLitude:PROFile:SORT

Sorts the steps in the amplitude table by frequency, starting with the lowest frequency.

Usage: Setting only
Asynchronous command

Manual operation: See "Sort" on page 365

18.17.2.4 Diagram settings

FRANalysis:AMPLitude:ENABle ... 1352
FRANalysis:AMPLitude:OFFSet ... 1352
FRANalysis:AMPLitude:SCALe ... 1352
FRANalysis:GAIN:ENABle ... 1352
FRANalysis:GAIN:OFFSet ... 1352
FRANalysis:GAIN:SCALe ... 1353
FRANalysis:IMPedance:ENABle ... 1353
FRANalysis:IMPedance:SCALe ... 1353
FRANalysis:IMPedance:STARt ... 1353
FRANalysis:IMPedance:STOP ... 1353
FRANalysis:PHASe:ENABle ... 1354
FRANalysis:PHASe:OFFSet ... 1354
FRANalysis:PHASe:SCALe ... 1354

FRANalysis:AMPLitude:ENABle <State>

Enables the amplitude signal for the frequency response analysis. You can then define the amplitude profile of the signal.

Parameters:

<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Amplitude mode" on page 363

FRANalysis:AMPLitude:OFFSet <VerticalOffset>

Sets a vertical offset of the amplitude waveform.

Parameters:

<VerticalOffset> Range: -100 to 100
Increment: 0.01
*RST: 5
Default unit: Vpp

Usage: Asynchronous command

FRANalysis:AMPLitude:SCALe <VerticalScale>

Sets the vertical scale for the amplitude waveform.

Parameters:

<VerticalScale> Range: 0.01 to 10
Increment: 0.01
*RST: 0.5
Default unit: Vpp/div

Usage: Asynchronous command

FRANalysis:GAIN:ENABle <State>

Enables the gain waveform for the frequency response analysis.

Parameters:

<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

FRANalysis:GAIN:OFFSet <VerticalOffset>

Sets a vertical offset of the gain waveform.

Parameters:

<VerticalOffset> Range: -2000 to 2000
Increment: 0.001
*RST: 10
Default unit: dB

Usage: Asynchronous command

Manual operation: See "Vertical offset" on page 369

FRANalysis:GAIN:SCALe <VerticalScale>

Sets the vertical scale for the gain waveform.

Parameters:

<VerticalScale> Range: 0.1 to 20
Increment: 1
*RST: 10
Default unit: dB/div

Usage: Asynchronous command

Manual operation: See "Vertical scale" on page 369

FRANalysis:IMPedance:ENABle <State>

Enables the impedance waveform for the impedance analysis.

Parameters:

<State> OFF | ON
*RST: OFF

FRANalysis:IMPedance:SCALe <Mode>

Sets the scale mode for the impedance trace.

Parameters:

<Mode> LIN | LOG
*RST: LOG

Usage: Asynchronous command

Manual operation: See "Vertical scale" on page 369

FRANalysis:IMPedance:STARt <Value>
FRANalysis:IMPedance:STOP <Value>

Set the lower and upper value of the vertical scale for the impedance trace.

Parameters:

<Value>
Range: 2E-09 to 1000000000
Increment: 1
*RST: 1000
Default unit: Ω

Usage: Asynchronous command

Manual operation: See "Vertical start, Vertical stop" on page 369

FRANalysis:PHASe:ENABle <State>

Enables the phase waveform for the frequency response analysis.

Parameters:

<State>
OFF | ON
*RST: OFF

Usage: Asynchronous command

FRANalysis:PHASe:OFFSet <VerticalOffset>

Sets a vertical offset of the phase waveform.

Parameters:

<VerticalOffset>
Range: -10000 to 10000
Increment: 0.001
*RST: 0
Default unit: °

Usage: Asynchronous command

Manual operation: See "Vertical offset" on page 369

FRANalysis:PHASe:SCALe <VerticalScale>

Sets the vertical scale for the phase waveform.

Parameters:

<VerticalScale>
Range: 1 to 180
Increment: 1
*RST: 36
Default unit: °/div

Usage: Asynchronous command

Manual operation: See "Vertical scale" on page 369

18.17.2.5 Calibration settings for frequency response analysis

FRANalysis:CALibration:CALibration....1355
FRANalysis:CALibration:RESult?....1355
FRANalysis:CALibration:STATe....1355

FRANalysis:CALibration:CALibration

Runs a calibration sequence.

Usage: Event

Manual operation: See "Start calibration" on page 372

FRANalysis:CALibration:RESult?

Returns the result of the calibration.

Return values:

<States> PASS | FAIL | RUN | NOAL

`PASS`: the calibration is successful.
`FAIL`: the calibration failed.
`RUN`: a calibration cycle is running.
`NOAL`: no active calibration.

*RST: NOAL

Usage: Query only

Manual operation: See "Start calibration" on page 372

FRANalysis:CALibration:STATe <UseCalData>

If ON, the user calibration data is used for the frequency response analysis.

Parameters:

<UseCalData> OFF | ON

*RST: OFF

Manual operation: See "Use calibration data" on page 372

18.17.2.6 Analysis results

FRANalysis:MARGin:GAIN:FREQuency? 1356
FRANalysis:MARGin:GAIN:VALue? 1356
FRANalysis:MARGin:PHASe:FREQuency? 1356
FRANalysis:MARGin:PHASe:VALue? 1356
FRANalysis:MARGin:STATe 1356
FRANalysis:MARKer<m>:FREQuency 1357
FRANalysis:MARKer<m>:IMPedance? 1357
FRANalysis:MARKer<m>:GAIN? 1357
FRANalysis:MARKer<m>:PHASe? 1357
FRANalysis:MARKer<m>:DIFFerence:FREQuency? 1357
FRANalysis:MARKer<m>:DIFFerence:IMPedance? 1358
FRANalysis:MARKer<m>:DIFFerence:GAIN? 1358
FRANalysis:MARKer<m>:DIFFerence:PHASe? 1358
FRANalysis:MARKer<m>:INDex? 1358

FRANalysis:MARKer<m>:SSCReen 1359
FRANalysis:MARKer<m>:STATe 1359
FRANalysis:RESult:STATe 1359

FRANalysis:MARGin:GAIN:FREQuency?

Returns the frequency of the gain margin.

Return values:
<Frequency>

Usage: Query only
Asynchronous command

FRANalysis:MARGin:GAIN:VALue?

Returns the value of the gain margin.

Return values:
<Phase>

Usage: Query only
Asynchronous command

FRANalysis:MARGin:PHASe:FREQuency?

Returns the frequency of the phase margin.

Return values:
<Frequency>

Usage: Query only
Asynchronous command

FRANalysis:MARGin:PHASe:VALue?

Returns the value of the phase margin.

Return values:
<Phase>

Usage: Query only
Asynchronous command

FRANalysis:MARGin:STATe <Margins>

Enables the display of the margin table for the frequency response analysis.

Parameters:
<Margins> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Margin" on page 368

FRANalysis:MARKer<m>:FREQuency <Frequency>

Sets the frequency for the specified marker, which defines the horizontal marker position.

Suffix:
<m> 1..2
Selects the marker number.

Parameters:
<Frequency> Numeric value in Hz

Usage: Asynchronous command

FRANalysis:MARKer<m>:IMPedance?

Returns the impedance for the specified marker.

Suffix:
<m> 1..2
Selects the marker number.

Usage: Query only
Asynchronous command

FRANalysis:MARKer<m>:GAIN?

Returns the gain for the specified marker.

Suffix:
<m> 1..2
Selects the marker number.

Usage: Query only
Asynchronous command

FRANalysis:MARKer<m>:PHASe?

Returns the phase value for the specified marker.

Suffix:
<m> 1..2
Selects the marker number.

Usage: Query only
Asynchronous command

FRANalysis:MARKer<m>:DIFFerence:FREQuency?

Returns the delta value of the frequency between the two markers.

Suffix:
<m> Irrelevant, omit the suffix.

Return values:
<DeltaFrequency>

Usage: Query only
Asynchronous command

FRANalysis:MARKer<m>:DIFFerence:IMPedance?

Returns the delta value of the impedance between the two markers.

Suffix:
<m> Irrelevant, omit the suffix.

Return values:
<DeltaImpedance>

Usage: Query only
Asynchronous command

FRANalysis:MARKer<m>:DIFFerence:GAIN?

Returns the delta value of the gain between the two markers.

Suffix:
<m> Irrelevant, omit the suffix.

Return values:
<DeltaGain>

Usage: Query only
Asynchronous command

FRANalysis:MARKer<m>:DIFFerence:PHASe?

Returns the delta value of the phase between the two markers.

Suffix:
<m> Irrelevant, omit the suffix.

Return values:
<DeltaPhase>

Usage: Query only
Asynchronous command

FRANalysis:MARKer<m>:INDex?

Returns the point index in the plot where the specified marker is positioned.

Suffix:
<m> 1..2
Selects the marker number.

Return values:
<Index> The lowest index is 0, which corresponds to line 1 in the result table.
PointIndex = # in result table - 1

Usage: Query only
Asynchronous command

FRANalysis:MARKer<m>:SSCReen

Resets the markers to their initial positions. Reset is helpful if the markers have disappeared from the display or need to be moved for a larger distance.

Suffix:
<m> Irrelevant, omit the suffix.

Usage: Setting only
Asynchronous command

FRANalysis:MARKer<m>:STATe <Markers>

Activates the display of the marker table and the markers in the plot.

Suffix:
<m> Irrelevant, omit the suffix.

Parameters:
<Markers> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Markers" on page 368

FRANalysis:RESult:STATe <Table>

Enables the display of the result table for the FRA.

Parameters:
<Table> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Result table" on page 368

18.17.2.7 Reference waveforms

FRANalysis:REFCurve<rc>:CLEar....1360
FRANalysis:REFCurve<rc>:DATA?....1360
FRANalysis:REFCurve<rc>:ENABle....1360
FRANalysis:REFCurve<rc>:NAME....1361
FRANalysis:REFCurve<rc>:OFFSet....1361
FRANalysis:REFCurve<rc>:OPEN....1361
FRANalysis:REFCurve<rc>:SAVE....1362
FRANalysis:REFCurve<rc>:SCALe....1362
FRANalysis:REFCurve<rc>:SOURce....1362
FRANalysis:REFCurve<rc>:TOORiginal....1362
FRANalysis:REFCurve<rc>:UPDate....1363
FRANalysis:REFCurve<rc>:VMODe....1363
FRANalysis:MARKer<m>:REFerence<rc>?....1363
FRANalysis:MARKer<m>:DIFFerence:REFerence<rc>?....1363

FRANalysis:REFCurve<rc>:CLEar

Deletes the selected reference waveform. It disappears from the display, and its memory is deleted.

Suffix:
<rc> 1...4, index of the reference waveform

Usage: Setting only
Asynchronous command

Manual operation: See "Clear" on page 376

FRANalysis:REFCurve<rc>:DATA?

Returns the data of the specified reference waveform.

Suffix:
<rc> 1...4, index of the reference waveform

Return values:
<Data> Comma-separated values

Usage: Query only
Asynchronous command

FRANalysis:REFCurve<rc>:ENABle <State>

Enables the display of the reference waveform in the diagram. Before you can display it, create the reference waveform.

Suffix:
<rc> 1...4, index of the reference waveform

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Display" on page 375

FRANalysis:REFCurve<rc>:NAME <Name>

Defines the name of the reference waveform file to be loaded, saved or deleted.

Suffix:
<rc> 1...4, index of the reference waveform

Parameters:
<Name> String with the file path, filename and extension.

Usage: Asynchronous command

Manual operation: See "Save as" on page 376

FRANalysis:REFCurve<rc>:OFFSet <VerticalOffset>

The vertical offset moves the reference waveform vertically. Enter a value with the unit of the waveform.

Suffix:
<rc> 1...4, index of the reference waveform

Parameters:
<VerticalOffset> Range: -100 to 100
Increment: 1
*RST: 5

Usage: Asynchronous command

Manual operation: See "Vertical offset" on page 378

FRANalysis:REFCurve<rc>:OPEN

Loads the reference waveform file selected by `FRANalysis:REFCurve<rc>:NAME`.

Suffix:
<rc> 1...4, index of the reference waveform

Usage: Event
Asynchronous command

Manual operation: See "Open" on page 376

FRANalysis:REFCurve<rc>:SAVE

Saves the FRA reference waveform to the file defined by `FRANalysis:REFCurve<rc>:NAME`.

Suffix:
<rc> 1...4, index of the reference waveform

Usage: Event
Asynchronous command

Manual operation: See "Save as" on page 376

FRANalysis:REFCurve<rc>:SCALe <VerticalScale>

Sets the vertical scale, which defines the displayed amplitude of the selected waveform.

Suffix:
<rc> 1...4, index of the reference waveform

Parameters:
<VerticalScale> Range: -100 to 100
Increment: 1
*RST: 0.5

Usage: Asynchronous command

Manual operation: See "Vertical scale" on page 377

FRANalysis:REFCurve<rc>:SOURce <Source>

Selects the source waveform of the reference.

Suffix:
<rc> 1...4, index of the reference waveform

Parameters:
<Source> FGAin | FPHase | FIMP | FREF1 | FREF2 | FREF3 | FREF4

Usage: Asynchronous command

Manual operation: See "Source" on page 375

FRANalysis:REFCurve<rc>:TOORiginal

Restores the original vertical settings of the reference waveform.

Suffix:
<rc> 1...4, index of the reference waveform

Usage: Setting only
Asynchronous command

Manual operation: See "Set to original" on page 377

FRANalysis:REFCurve<rc>:UPDate

Copies the selected source waveform with all its settings to the memory of the reference waveform. If there is a previously defined reference waveform in this memory, it is updated by the current source waveform.

Suffix:
<rc> 1...4, index of the reference waveform

Usage: Event
Asynchronous command

Manual operation: See "Create/Update" on page 376

FRANalysis:REFCurve<rc>:VMODe <VerticalMode>

Selects the type of vertical settingsfor the reference waveform.

Suffix:
<rc> 1...4, index of the reference waveform

Parameters:
<VerticalMode> COUPled | INDependent

COUPled
Vertical position and scale of the source are used.

INDependent
Scaling and position can be set specific to the reference waveform.

*RST: COUPled

Usage: Asynchronous command

Manual operation: See "Vertical mode" on page 377

FRANalysis:MARKer<m>:REFerence<rc>?

Returns the vertical value of the reference waveform at the specified marker.

Suffix:
<m> 1..2
Selects the marker number.

<rc> 1...4, index of the reference waveform

Usage: Query only
Asynchronous command

FRANalysis:MARKer<m>:DIFFerence:REFerence<rc>?

Returns the difference between the two markers on the reference waveform. If no marker values are exist, or they are invalid, an execution erroris returned.

Suffix:
<m> Irrelevant, omit the suffix.

<rc> 1...4, index of the reference waveform

Return values:
<DeltaReference> Value of the difference

Usage: Query only
Asynchronous command

18.17.2.8 Export of analysis data

EXPort:RESult:SELect:FRA:MARGin 1364
EXPort:RESult:SELect:FRA:MARKer 1364
EXPort:RESult:SELect:FRA:RESult 1364
FRANalysis:GAIN:DATA? 1365
FRANalysis:FREQuency:DATA? 1365
FRANalysis:IMPedance:DATA? 1365
FRANalysis:PHASe:DATA? 1366

EXPort:RESult:SELect:FRA:MARGin <MarginResult>

If enabled, includes the margin results in the results export file of the FRA.

Parameters:
<MarginResult> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "FRA results" on page 373

EXPort:RESult:SELect:FRA:MARKer <MarkerResult>

If enabled, includes the marker results in the results export file of the FRA.

Parameters:
<MarkerResult> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "FRA results" on page 373

EXPort:RESult:SELect:FRA:RESult <Result>

If enabled, includes the frequency response analysis results, including the frequency, gain, phase and amplitude, in the results export file of the FRA.

Parameters:
<Result> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "FRA results" on page 373

FRANalysis:GAIN:DATA?

Returns the data of the gain as a list of comma-separated values in dB.

Return values:
<Data> Comma-separated list of values

Example:
```
FRAN:GAIN:DATA?
```
Result:
```
0.4381956630254851,0.4593246383252179,
0.461895233375762,0.4570717993766185,
0.4623802509651942,0.4533450898899926,
0.4408194360143725,0.4221600784741697,
0.4483342212879299,0.4473558449908476,
0.4915016244058707
```

Usage: Query only
Asynchronous command

FRANalysis:FREQuency:DATA?

Returns the data of the frequency points for which gain and phase have been calculated as a list of comma-separated values in Hz.

Return values:
<Data> Comma-separated list of values

Example:
```
FRAN:FREQ:DATA?
```
Result:
```
-0.07463742650985239,-0.09417628145200041,
-0.1457021392091207,-0.1914790795969807,
-0.2494368612845221,-0.3415108478964939,
-0.4350150706042513,-0.5673151547214843,
-0.7363486980048108,-0.9055923620805615,
-1.0829557075417
```

Usage: Query only
Asynchronous command

FRANalysis:IMPedance:DATA?

Returns the impedance results as a list of comma-separated values in Ohm.

Return values:
<Data> Comma-separated list of values

Usage: Query only

FRANalysis:PHASe:DATA?

Returns the data of the phase as a list of comma-separated values in degree.

Return values:

<Data> Comma-separated list of values

Example:

```
FRAN:PHAS:DATA?
```

Result:

```
-0.07463742650985239,-0.09417628145200041,
-0.1457021392091207,-0.1914790795969807,
-0.2494368612845221,-0.3415108478964939,
-0.4350150706042513,-0.5673151547214843,
-0.7363486980048108,-0.9055923620805615,
-1.0829557075417
```

Usage: Query only
Asynchronous command

18.17.3 Power analysis (option R&S MXO5-K31)

Some of the commands in the following section are asynchronous. An overlapping or asynchronous command does not automatically finish executing before the next command starts executing. If overlapping commands must be executed in a defined order, e.g. to avoid wrong measurement results, they must be serviced sequentially.

To prevent an overlapping execution of commands, one of the commands `*OPC`, `*OPC?` or `*WAI` can be used after the command or a command set.

For more information, see:

- www.rohde-schwarz.com/rc-via-scpi, section "Command sequence and synchronization"

Overview of statistic results

The remote commands for the power analysis measurements can retrieve statistic results. The abbreviations in the commands have the following meaning:

Command	Description
`POWer<m>:xxx:RESult:nnn:[:ACTual]?`	Current measurement result
`POWer<m>:xxx:RESult:nnn::AVERage?`	Average of the measurement results
`POWer<m>:xxx:RESult:nnn::EVTCount?`	Number of calculated measurement results (periods)
`POWer<m>:xxx:RESult:nnn:RMS?`	RMS value of the measurement results
`POWer<m>:xxx:RESult:nnn::PPEak?`	Positive peak value of the measurement results
`POWer<m>:xxx:RESult:nnn::NPEak?`	Negative peak value of the measurement results

Command	Description
POWer<m>:xxx:RESult:xxx::STDDev?	Standard deviation of the measurement results
POWer<m>:xxx:RESult:nnn::WFMCount?	Number of calculated waveforms

- General settings....1367
- Power quality....1369
- Power harmonics....1382
- Switching loss....1391
- Turn on/off time....1401
- Power efficiency....1405
- Safe operating area (SOA)....1412
- Power waveform....1422
- Reference level....1425
- Power analysis data....1431

18.17.3.1 General settings

POWer<m>[:ENABle]....1367
POWer<m>:TYPE....1367
POWer<m>:ASKew[:EXECute]....1368
EXPort:RESult:SELect:POWer<m>....1368
POWer<m>:EFFiciency:STATistics[:ENABle]....1368
POWer<m>:SWITching:STATistics:ENABle....1368
POWer<m>:QUALity:STATistics[:ENABle]....1368
POWer<m>:EFFiciency:STATistics:RESet....1369
POWer<m>:SWITching:STATistics:RESet....1369
POWer<m>:QUALity:STATistics:RESet....1369
POWer<m>:EFFiciency:STATistics:WFMCount?....1369
POWer<m>:SWITching:STATistics:WFMCount?....1369
POWer<m>:QUALity:STATistics:WFMCount?....1369

POWer<m>[:ENABle] <State>

Enables the power measurement instance.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<State> OFF | ON

Usage: Asynchronous command

Manual operation: See "+ Add" on page 382

POWer<m>:TYPE <Type>

Sets the type for the respective power analysis measurement.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<Type> QUALity | HARMonics | SWITching | ONOFf | EFFiciency | SOA
SWITching = switching loss
ONOFf = turn on/off time
SOA = safe operating area

Example: `POW1:TYPE QUAL`
Sets the first power analysis measurement to quality.

Usage: Asynchronous command

Manual operation: See "+ Add" on page 382

POWer<m>:ASKew[:EXECute]

Performs auto deskew adjustment.

Suffix:
<m> Irrelevant, omit the suffix.

Usage: Event
Asynchronous command

Manual operation: See "Auto deskew" on page 383

EXPort:RESult:SELect:POWer<m> <ExportResults>

If enabled, includes the results of selected power analysis measurement in the results export file.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<ExportResults> OFF | ON
*RST: OFF

Usage: Asynchronous command

POWer<m>:EFFiciency:STATistics[:ENABle] <State>
POWer<m>:SWITching:STATistics:ENABle <State>
POWer<m>:QUALity:STATistics[:ENABle] <State>

The commands activate statistical calculation for the selected power measurement. Make sure that the suffix matches the selected power measurement.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<State> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Statistics" on page 387

POWer<m>:EFFiciency:STATistics:RESet
POWer<m>:SWITching:STATistics:RESet
POWer<m>:QUALity:STATistics:RESet

The commands restart statistical calculation for the selected power measurement. Make sure that the suffix matches the selected power measurement.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Usage: Setting only
Asynchronous command

Manual operation: See "Clear results" on page 387

POWer<m>:EFFiciency:STATistics:WFMCount?
POWer<m>:SWITching:STATistics:WFMCount?
POWer<m>:QUALity:STATistics:WFMCount?

Return the number of waveforms included in the selected power analysis. Make sure that the suffix matches the selected power measurement.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<WaveformCount> Number of analyzed waveforms.

Usage: Query only
Asynchronous command

Manual operation: See "Statistics" on page 387

18.17.3.2 Power quality

- Power quality setup....1369
- Power quality measurement display....1371
- Power quality results....1374

Power quality setup

POWer<m>:QUALity:SOURce:CURRent....1370
POWer<m>:QUALity:SOURce[:VOLTage]....1370
POWer<m>:QUALity:SOURce:CYCLe....1370

POWer<m>:QUALity:FREQuency[:VALue]....1370
POWer<m>:QUALity:FREQuency:USER....1371
POWer<m>:QUALity:GATE....1371

POWer<m>:QUALity:SOURce:CURRent <CurrentSource>

Selects the current source waveform. Analog channels and math waveforms can be used.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<CurrentSource> C1 | C2 | ... | C8 | M1 | M2 | ... | M8

Usage: Asynchronous command

Manual operation: See "Current" on page 386

POWer<m>:QUALity:SOURce[:VOLTage] <VoltageSource>

Selects the voltage source waveform. Analog channels and math waveforms can be used.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<VoltageSource> C1 | C2 | ... | C8 | M1 | M2 | ... | M8

Usage: Asynchronous command

Manual operation: See "Voltage" on page 386

POWer<m>:QUALity:SOURce:CYCLe <CycleSource>

Selects if voltage or current is used for the cycle measurement.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<CycleSource> VOLTage | CURRent
*RST: VOLTage

Usage: Asynchronous command

Manual operation: See "Cycle source" on page 386

POWer<m>:QUALity:FREQuency[:VALue] <FundamFreq>

Sets the input frequency of the source signal in Hz.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<FundamFreq> F50 | F60 | F400 | USER | AUTO
*RST: F50

Usage: Asynchronous command

Manual operation: See "Fund. frequency" on page 386

POWer<m>:QUALity:FREQuency:USER <FundamentalFreq>

Sets the user-defined frequency, if `POWer<m>:QUALity:FREQuency[:VALue]` is set to `USER`.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<FundamentalFreq> Range: 10 to 1000000
Increment: 1
*RST: 50
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Fund. frequency" on page 386

POWer<m>:QUALity:GATE <Gate>

Selects the gate that is used for limiting the range of the power quality measurement.

Enable the gate before you assign a measurement to it (`GATE<g>:ENABle` =`ON`).

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<Gate> Number of the gate to be used

Usage: Asynchronous command

Power quality measurement display

POWer<m>:QUALity:DISPlay:CURRent:CREStfactor <ShwCurrCrest>

Enables the current crest factor measurement for the power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<ShwCurrCrest> OFF | ON
*RST: ON

Usage: Asynchronous command

POWer<m>:QUALity:DISPlay:CURRent:PEAK <ShwCurrPeak>

Enables the current peak measurement for the power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<ShwCurrPeak> OFF | ON
*RST: ON

Usage: Asynchronous command

POWer<m>:QUALity:DISPlay:CURRent:RMS <ShowCurrentRMS>

Enables the current RMS measurement for the power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<ShowCurrentRMS> OFF | ON
*RST: ON

Usage: Asynchronous command

POWer<m>:QUALity:DISPlay:POWer:ACTive <ShwActPow>

Enables the active power measurement for the power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<ShwActPow> OFF | ON
*RST: ON

Usage: Asynchronous command

POWer<m>:QUALity:DISPlay:POWer:APParent <ShwApparentPow>

Enables the apparent power measurement for the power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<ShwApparentPow> OFF | ON
*RST: ON

Usage: Asynchronous command

POWer<m>:QUALity:DISPlay:POWer:PFACtor <ShwPowFact>

Enables the power factor measurement for the power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<ShwPowFact> OFF | ON
*RST: ON

Usage: Asynchronous command

POWer<m>:QUALity:DISPlay:POWer:PHASe <ShowPhase>

Enables the power phase measurement for the power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<ShowPhase> OFF | ON
*RST: ON

Usage: Asynchronous command

POWer<m>:QUALity:DISPlay:POWer:REACtive <ShwReactivePow>

Enables the reactive power measurement for the power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<ShwReactivePow> OFF | ON
*RST: ON

Usage: Asynchronous command

POWer<m>:QUALity:DISPlay:VOLTage:CRESTfactor <ShwVoltageCrest>

Enables the voltage crest factor measurement for the power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<ShwVoltageCrest> OFF | ON
*RST: ON

Usage: Asynchronous command

POWer<m>:QUALity:DISPlay:VOLTage:FREQuency <ShwVoltageFreq>

Enables the voltage frequency measurement for the power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<ShwVoltageFreq> OFF | ON
*RST: ON

Usage: Asynchronous command

POWer<m>:QUALity:DISPlay:VOLTage:PEAK <ShwVoltagePeak>

Enables the voltage peak value measurement for the power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<ShwVoltagePeak> OFF | ON
*RST: ON

Usage: Asynchronous command

POWer<m>:QUALity:DISPlay:VOLTage:RMS <ShowVoltageRMS>

Enables the voltage RMS measurement for the power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<ShowVoltageRMS> OFF | ON
*RST: ON

Usage: Asynchronous command

Power quality results

See "Overview of statistic results" on page 1366.

POWer<m>:QUALity:RESult:CURRent:CRESTfactor[:ACTual]? 1376
POWer<m>:QUALity:RESult:CURRent:CRESTfactor:AVERage? 1376
POWer<m>:QUALity:RESult:CURRent:CRESTfactor:EVTCount? 1376
POWer<m>:QUALity:RESult:CURRent:CRESTfactor:NPEak? 1376
POWer<m>:QUALity:RESult:CURRent:CRESTfactor:PPEak? 1376
POWer<m>:QUALity:RESult:CURRent:CRESTfactor:RMS? 1376
POWer<m>:QUALity:RESult:CURRent:CRESTfactor:WFMCount? 1376
POWer<m>:QUALity:RESult:CURRent:CRESTfactor:STDDev? 1376
POWer<m>:QUALity:RESult:CURRent:PEAK[:ACTual]? 1377
POWer<m>:QUALity:RESult:CURRent:PEAK:AVERage? 1377

POWer<m>:QUALity:RESult:CURRent:PEAK:EVTCount? 1377
POWer<m>:QUALity:RESult:CURRent:PEAK:NPEak? 1377
POWer<m>:QUALity:RESult:CURRent:PEAK:PPEak? 1377
POWer<m>:QUALity:RESult:CURRent:PEAK:RMS? 1377
POWer<m>:QUALity:RESult:CURRent:PEAK:WFMCount? 1377
POWer<m>:QUALity:RESult:CURRent:PEAK:STDDev? 1377
POWer<m>:QUALity:RESult:CURRent:RMS[:ACTual]? 1377
POWer<m>:QUALity:RESult:CURRent:RMS:AVERage? 1377
POWer<m>:QUALity:RESult:CURRent:RMS:EVTCount? 1377
POWer<m>:QUALity:RESult:CURRent:RMS:NPEak? 1377
POWer<m>:QUALity:RESult:CURRent:RMS:PPEak? 1377
POWer<m>:QUALity:RESult:CURRent:RMS:RMS? 1377
POWer<m>:QUALity:RESult:CURRent:RMS:WFMCount? 1377
POWer<m>:QUALity:RESult:CURRent:RMS:STDDev? 1377
POWer<m>:QUALity:RESult:POWer:ACTive[:ACTual]? 1378
POWer<m>:QUALity:RESult:POWer:ACTive:AVERage? 1378
POWer<m>:QUALity:RESult:POWer:ACTive:EVTCount? 1378
POWer<m>:QUALity:RESult:POWer:ACTive:NPEak? 1378
POWer<m>:QUALity:RESult:POWer:ACTive:PPEak? 1378
POWer<m>:QUALity:RESult:POWer:ACTive:RMS? 1378
POWer<m>:QUALity:RESult:POWer:ACTive:WFMCount? 1378
POWer<m>:QUALity:RESult:POWer:ACTive:STDDev? 1378
POWer<m>:QUALity:RESult:POWer:APParent[:ACTual]? 1378
POWer<m>:QUALity:RESult:POWer:APParent:AVERage? 1378
POWer<m>:QUALity:RESult:POWer:APParent:EVTCount? 1378
POWer<m>:QUALity:RESult:POWer:APParent:NPEak? 1378
POWer<m>:QUALity:RESult:POWer:APParent:PPEak? 1378
POWer<m>:QUALity:RESult:POWer:APParent:RMS? 1378
POWer<m>:QUALity:RESult:POWer:APParent:WFMCount? 1378
POWer<m>:QUALity:RESult:POWer:APParent:STDDev? 1378
POWer<m>:QUALity:RESult:POWer:PFACtor[:ACTual]? 1379
POWer<m>:QUALity:RESult:POWer:PFACtor:AVERage? 1379
POWer<m>:QUALity:RESult:POWer:PFACtor:EVTCount? 1379
POWer<m>:QUALity:RESult:POWer:PFACtor:NPEak? 1379
POWer<m>:QUALity:RESult:POWer:PFACtor:PPEak? 1379
POWer<m>:QUALity:RESult:POWer:PFACtor:RMS? 1379
POWer<m>:QUALity:RESult:POWer:PFACtor:WFMCount? 1379
POWer<m>:QUALity:RESult:POWer:PFACtor:STDDev? 1379
POWer<m>:QUALity:RESult:POWer:PHASe[:ACTual]? 1379
POWer<m>:QUALity:RESult:POWer:PHASe:AVERage? 1379
POWer<m>:QUALity:RESult:POWer:PHASe:EVTCount? 1379
POWer<m>:QUALity:RESult:POWer:PHASe:NPEak? 1379
POWer<m>:QUALity:RESult:POWer:PHASe:PPEak? 1379
POWer<m>:QUALity:RESult:POWer:PHASe:RMS? 1379
POWer<m>:QUALity:RESult:POWer:PHASe:WFMCount? 1379
POWer<m>:QUALity:RESult:POWer:PHASe:STDDev? 1379
POWer<m>:QUALity:RESult:POWer:REACtive[:ACTual]? 1380
POWer<m>:QUALity:RESult:POWer:REACtive:AVERage? 1380
POWer<m>:QUALity:RESult:POWer:REACtive:EVTCount? 1380
POWer<m>:QUALity:RESult:POWer:REACtive:NPEak? 1380

POWer<m>:QUALity:RESult:POWer:REACtive:PPEak? 1380
POWer<m>:QUALity:RESult:POWer:REACtive:RMS? 1380
POWer<m>:QUALity:RESult:POWer:REACtive:WFMCount? 1380
POWer<m>:QUALity:RESult:POWer:REACtive:STDDev? 1380
POWer<m>:QUALity:RESult:VOLTage:CRESt factor[:ACTual]? 1380
POWer<m>:QUALity:RESult:VOLTage:CRESt factor:AVERage? 1380
POWer<m>:QUALity:RESult:VOLTage:CRESt factor:EVTCount? 1380
POWer<m>:QUALity:RESult:VOLTage:CRESt factor:NPEak? 1380
POWer<m>:QUALity:RESult:VOLTage:CRESt factor:PPEak? 1380
POWer<m>:QUALity:RESult:VOLTage:CRESt factor:RMS? 1380
POWer<m>:QUALity:RESult:VOLTage:CRESt factor:WFMCount? 1380
POWer<m>:QUALity:RESult:VOLTage:CRESt factor:STDDev? 1380
POWer<m>:QUALity:RESult:VOLTage:FREQuency[:ACTual]? 1380
POWer<m>:QUALity:RESult:VOLTage:FREQuency:AVERage? 1380
POWer<m>:QUALity:RESult:VOLTage:FREQuency:EVTCount? 1380
POWer<m>:QUALity:RESult:VOLTage:FREQuency:NPEak? 1380
POWer<m>:QUALity:RESult:VOLTage:FREQuency:PPEak? 1381
POWer<m>:QUALity:RESult:VOLTage:FREQuency:RMS? 1381
POWer<m>:QUALity:RESult:VOLTage:FREQuency:WFMCount? 1381
POWer<m>:QUALity:RESult:VOLTage:FREQuency:STDDev? 1381
POWer<m>:QUALity:RESult:VOLTage:PEAK[:ACTual]? 1381
POWer<m>:QUALity:RESult:VOLTage:PEAK:AVERage? 1381
POWer<m>:QUALity:RESult:VOLTage:PEAK:EVTCount? 1381
POWer<m>:QUALity:RESult:VOLTage:PEAK:NPEak? 1381
POWer<m>:QUALity:RESult:VOLTage:PEAK:PPEak? 1381
POWer<m>:QUALity:RESult:VOLTage:PEAK:RMS? 1381
POWer<m>:QUALity:RESult:VOLTage:PEAK:WFMCount? 1381
POWer<m>:QUALity:RESult:VOLTage:PEAK:STDDev? 1381
POWer<m>:QUALity:RESult:VOLTage:RMS[:ACTual]? 1381
POWer<m>:QUALity:RESult:VOLTage:RMS:AVERage? 1381
POWer<m>:QUALity:RESult:VOLTage:RMS:EVTCount? 1381
POWer<m>:QUALity:RESult:VOLTage:RMS:NPEak? 1381
POWer<m>:QUALity:RESult:VOLTage:RMS:PPEak? 1381
POWer<m>:QUALity:RESult:VOLTage:RMS:RMS? 1381
POWer<m>:QUALity:RESult:VOLTage:RMS:WFMCount? 1382
POWer<m>:QUALity:RESult:VOLTage:RMS:STDDev? 1382

POWer<m>:QUALity:RESult:CURRent:CRESt factor[:ACTual]?
POWer<m>:QUALity:RESult:CURRent:CRESt factor:AVERage?
POWer<m>:QUALity:RESult:CURRent:CRESt factor:EVTCount?
POWer<m>:QUALity:RESult:CURRent:CRESt factor:NPEak?
POWer<m>:QUALity:RESult:CURRent:CRESt factor:PPEak?
POWer<m>:QUALity:RESult:CURRent:CRESt factor:RMS?
POWer<m>:QUALity:RESult:CURRent:CRESt factor:WFMCount?
POWer<m>:QUALity:RESult:CURRent:CRESt factor:STDDev?

Returns the current crest factor, the *Peak value / RMS value* for the power quality analysis.

For details on the statistics, see "Overview of statistic results" on page 1366.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<StdDev> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:QUALity:RESult:CURRent:PEAK[:ACTual]?
POWer<m>:QUALity:RESult:CURRent:PEAK:AVERage?
POWer<m>:QUALity:RESult:CURRent:PEAK:EVTCount?
POWer<m>:QUALity:RESult:CURRent:PEAK:NPEak?
POWer<m>:QUALity:RESult:CURRent:PEAK:PPEak?
POWer<m>:QUALity:RESult:CURRent:PEAK:RMS?
POWer<m>:QUALity:RESult:CURRent:PEAK:WFMCount?
POWer<m>:QUALity:RESult:CURRent:PEAK:STDDev?

Returns the current peak value, the highest measured magnitude value for the power quality analysis.

For details on the statistics, see "Overview of statistic results" on page 1366.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<StdDev> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:QUALity:RESult:CURRent:RMS[:ACTual]?
POWer<m>:QUALity:RESult:CURRent:RMS:AVERage?
POWer<m>:QUALity:RESult:CURRent:RMS:EVTCount?
POWer<m>:QUALity:RESult:CURRent:RMS:NPEak?
POWer<m>:QUALity:RESult:CURRent:RMS:PPEak?
POWer<m>:QUALity:RESult:CURRent:RMS:RMS?
POWer<m>:QUALity:RESult:CURRent:RMS:WFMCount?
POWer<m>:QUALity:RESult:CURRent:RMS:STDDev?

Returns the root mean square of the current for the power quality analysis.

For details on the statistics, see "Overview of statistic results" on page 1366.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:

<StdDev> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:QUALity:RESult:POWer:ACTive[:ACTual]?
POWer<m>:QUALity:RESult:POWer:ACTive:AVERage?
POWer<m>:QUALity:RESult:POWer:ACTive:EVTCount?
POWer<m>:QUALity:RESult:POWer:ACTive:NPEak?
POWer<m>:QUALity:RESult:POWer:ACTive:PPEak?
POWer<m>:QUALity:RESult:POWer:ACTive:RMS?
POWer<m>:QUALity:RESult:POWer:ACTive:WFMCount?
POWer<m>:QUALity:RESult:POWer:ACTive:STDDev?

Returns the active power for the power quality analysis.

For details on the statistics, see "Overview of statistic results" on page 1366.

Suffix:

<m> 1 to 6, index of the power analysis measurement

Return values:

<StdDev> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:QUALity:RESult:POWer:APParent[:ACTual]?
POWer<m>:QUALity:RESult:POWer:APParent:AVERage?
POWer<m>:QUALity:RESult:POWer:APParent:EVTCount?
POWer<m>:QUALity:RESult:POWer:APParent:NPEak?
POWer<m>:QUALity:RESult:POWer:APParent:PPEak?
POWer<m>:QUALity:RESult:POWer:APParent:RMS?
POWer<m>:QUALity:RESult:POWer:APParent:WFMCount?
POWer<m>:QUALity:RESult:POWer:APParent:STDDev?

Returns the apparent power for the power quality analysis.

For details on the statistics, see "Overview of statistic results" on page 1366.

Suffix:

<m> 1 to 6, index of the power analysis measurement

Return values:

<StdDev> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:QUALity:RESult:POWer:PFACtor[:ACTual]?
POWer<m>:QUALity:RESult:POWer:PFACtor:AVERage?
POWer<m>:QUALity:RESult:POWer:PFACtor:EVTCount?
POWer<m>:QUALity:RESult:POWer:PFACtor:NPEak?
POWer<m>:QUALity:RESult:POWer:PFACtor:PPEak?
POWer<m>:QUALity:RESult:POWer:PFACtor:RMS?
POWer<m>:QUALity:RESult:POWer:PFACtor:WFMCount?
POWer<m>:QUALity:RESult:POWer:PFACtor:STDDev?

Returns the power factor for the power quality analysis.

For details on the statistics, see "Overview of statistic results" on page 1366.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<StdDev> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:QUALity:RESult:POWer:PHASe[:ACTual]?
POWer<m>:QUALity:RESult:POWer:PHASe:AVERage?
POWer<m>:QUALity:RESult:POWer:PHASe:EVTCount?
POWer<m>:QUALity:RESult:POWer:PHASe:NPEak?
POWer<m>:QUALity:RESult:POWer:PHASe:PPEak?
POWer<m>:QUALity:RESult:POWer:PHASe:RMS?
POWer<m>:QUALity:RESult:POWer:PHASe:WFMCount?
POWer<m>:QUALity:RESult:POWer:PHASe:STDDev?

Returns the phase for the power quality analysis.

For details on the statistics, see "Overview of statistic results" on page 1366.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<StdDev> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:QUALity:RESult:POWer:REACtive[:ACTual]?
POWer<m>:QUALity:RESult:POWer:REACtive:AVERage?
POWer<m>:QUALity:RESult:POWer:REACtive:EVTCount?
POWer<m>:QUALity:RESult:POWer:REACtive:NPEak?
POWer<m>:QUALity:RESult:POWer:REACtive:PPEak?
POWer<m>:QUALity:RESult:POWer:REACtive:RMS?
POWer<m>:QUALity:RESult:POWer:REACtive:WFMCount?
POWer<m>:QUALity:RESult:POWer:REACtive:STDDev?

Returns the reactive power for the power quality analysis.

For details on the statistics, see "Overview of statistic results" on page 1366.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<StdDev> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:QUALity:RESult:VOLTage:CRESTfactor[:ACTual]?
POWer<m>:QUALity:RESult:VOLTage:CRESTfactor:AVERage?
POWer<m>:QUALity:RESult:VOLTage:CRESTfactor:EVTCount?
POWer<m>:QUALity:RESult:VOLTage:CRESTfactor:NPEak?
POWer<m>:QUALity:RESult:VOLTage:CRESTfactor:PPEak?
POWer<m>:QUALity:RESult:VOLTage:CRESTfactor:RMS?
POWer<m>:QUALity:RESult:VOLTage:CRESTfactor:WFMCount?
POWer<m>:QUALity:RESult:VOLTage:CRESTfactor:STDDev?

Returns the voltage crest factor, the *Peak value / RMS value* for the power quality analysis.

For details on the statistics, see "Overview of statistic results" on page 1366.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<StdDev> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:QUALity:RESult:VOLTage:FREQuency[:ACTual]?
POWer<m>:QUALity:RESult:VOLTage:FREQuency:AVERage?
POWer<m>:QUALity:RESult:VOLTage:FREQuency:EVTCount?
POWer<m>:QUALity:RESult:VOLTage:FREQuency:NPEak?

POWer<m>:QUALity:RESult:VOLTage:FREQuency:PPEak?
POWer<m>:QUALity:RESult:VOLTage:FREQuency:RMS?
POWer<m>:QUALity:RESult:VOLTage:FREQuency:WFMCount?
POWer<m>:QUALity:RESult:VOLTage:FREQuency:STDDev?

Returns the voltage frequency value for the power quality analysis.

For details on the statistics, see "Overview of statistic results" on page 1366.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<StdDev> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:QUALity:RESult:VOLTage:PEAK[:ACTual]?
POWer<m>:QUALity:RESult:VOLTage:PEAK:AVERage?
POWer<m>:QUALity:RESult:VOLTage:PEAK:EVTCount?
POWer<m>:QUALity:RESult:VOLTage:PEAK:NPEak?
POWer<m>:QUALity:RESult:VOLTage:PEAK:PPEak?
POWer<m>:QUALity:RESult:VOLTage:PEAK:RMS?
POWer<m>:QUALity:RESult:VOLTage:PEAK:WFMCount?
POWer<m>:QUALity:RESult:VOLTage:PEAK:STDDev?

Returns the voltage peak value, the highest measured magnitude value for the power quality analysis.

For details on the statistics, see "Overview of statistic results" on page 1366.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<StdDev> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:QUALity:RESult:VOLTage:RMS[:ACTual]?
POWer<m>:QUALity:RESult:VOLTage:RMS:AVERage?
POWer<m>:QUALity:RESult:VOLTage:RMS:EVTCount?
POWer<m>:QUALity:RESult:VOLTage:RMS:NPEak?
POWer<m>:QUALity:RESult:VOLTage:RMS:PPEak?
POWer<m>:QUALity:RESult:VOLTage:RMS:RMS?

POWer<m>:QUALity:RESult:VOLTage:RMS:WFMCount?
POWer<m>:QUALity:RESult:VOLTage:RMS:STDDev?

Returns the root mean square of the voltage for the power quality analysis.

For details on the statistics, see "Overview of statistic results" on page 1366.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<StdDev> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

18.17.3.3 Power harmonics

- Power harmonics setup....1382
- Power harmonics results....1387

Power harmonics setup

POWer<m>:HARMonics:SOURce:CURRent....1382
POWer<m>:HARMonics:SOURce[:VOLTage]....1383
POWer<m>:HARMonics:STANdard....1383
POWer<m>:HARMonics:REVision....1383
POWer<m>:HARMonics:FREQuency:EN....1384
POWer<m>:HARMonics:FREQuency:MIL....1384
POWer<m>:HARMonics:FREQuency:RTCA....1384
POWer<m>:HARMonics:DISPlay:HARMonics[:DISPlay]....1385
POWer<m>:HARMonics:DISPlay:BARGraph:VERTical:SCALe:TYPE....1385
POWer<m>:HARMonics:DISPlay:HARMonics:STARt[:VALue]....1385
POWer<m>:HARMonics:DISPlay:HARMonics:STOP[:VALue]....1385
POWer<m>:HARMonics:RPOWer[:MODE]....1386
POWer<m>:HARMonics:RPOWer:USER....1386
POWer<m>:HARMonics:PFACtor:USER....1386
POWer<m>:HARMonics:PFACtor[:MODE]....1387

POWer<m>:HARMonics:SOURce:CURRent <CurrentSource>

Sets the channel for the current source input of the power harmonics analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<CurrentSource> C1 | C2 | ... | C8 | M1 | M2 | ... | M8

Usage: Asynchronous command

Manual operation: See "Current" on page 393

POWer<m>:HARMonics:SOURce[:VOLTage] <VoltageSource>

Sets the channel for the voltage source input of the power harmonics analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<VoltageSource> C1 | C2 | ... | C8 | M1 | M2 | ... | M8

Usage: Asynchronous command

Manual operation: See "Voltage" on page 393

POWer<m>:HARMonics:STANdard <Standard>

Sets a standard for the current harmonic measurement.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<Standard> ENA | ENB | ENC | END | MIL | RTCA

`ENA`: EN 61000-3-2 Class A
`ENB`: EN 61000-3-2 Class B
`ENC`: EN 61000-3-2 Class C
`END`: EN 61000-3-2 Class D
`MIL`: MIL-STD-1399
`RTCA`: RTCA DO-160

*RST: ENA

Usage: Asynchronous command

Manual operation: See "Standard" on page 393

POWer<m>:HARMonics:REVision <Revision>

Selects the revision of the EN61000 standard, if `POWer<m>:HARMonics:STANdard` is set to `ENA / ENB / ENC / END`.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<Revision> REV2011 | REV2019

*RST: REV2019

Usage: Asynchronous command

Manual operation: See "Standard" on page 393

POWer<m>:HARMonics:FREQuency:EN <FundFreqEN61000>

Sets the fundamental frequency of the input signal for the EN61000 standard, if `POWer<m>:HARMonics:STANdard` is set to `ENA / ENB / ENC / END`.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<FundFreqEN61000> F50 | F60 | AUTO

`F50`: 50 Hz
`F60`: 60 Hz
`AUTO`: automatically set

*RST: AUTO

Usage: Asynchronous command

Manual operation: See "Fund. frequency" on page 394

POWer<m>:HARMonics:FREQuency:MIL <FundFreqMIL>

Sets the fundamental frequency of the input signal for the MIL standard, if `POWer<m>:HARMonics:STANdard` is set to `MIL`.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<FundFreqMIL> F60 | F400

`F60`: 60 Hz
`F400`: 400 Hz

*RST: F60

Usage: Asynchronous command

Manual operation: See "Fund. frequency" on page 394

POWer<m>:HARMonics:FREQuency:RTCA <FundamFreqRTCA>

Sets the fundamental frequency of the input signal for the RTCA standard, if `POWer<m>:HARMonics:STANdard` is set to `RTCA`.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<FundFreqRTCA> F400 | NVF | WVF

`F400`: 400 Hz
`NVF`
`WVF`

*RST: F400

Usage: Asynchronous command

Manual operation: See "Fund. frequency" on page 394

POWer<m>:HARMonics:DISPlay:HARMonics[:DISPlay] <DispedHarmonics>

Selects which harmonics are displayed in the bar graph: all, odd even or depending on the standard definition.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<DispedHarmonics> ALL | EVEN | ODD | STANdard
*RST: STANdard

Usage: Asynchronous command

Manual operation: See "Displ. harmonics" on page 395

POWer<m>:HARMonics:DISPlay:BARGraph:VERTical:SCALe:TYPE <Scaling>

Selects a logarithmic or linear scale for the display for the harmonics bar graph.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<Scaling> LIN | LOG
*RST: LIN

Usage: Asynchronous command

Manual operation: See "Scale type" on page 395

POWer<m>:HARMonics:DISPlay:HARMonics:STARt[:VALue] <BarGraphStart>

Sets the first harmonic to be shown in the bar graph.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<BarGraphStart> Range: 1 to 37
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Start harmonic, Max harmonic" on page 395

POWer<m>:HARMonics:DISPlay:HARMonics:STOP[:VALue] <BarGraphStop>

Sets the last harmonic to be shown in the bar graph.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<BarGraphStop> Range: 3 to 40
Increment: 1
*RST: 40

Usage: Asynchronous command

Manual operation: See "Start harmonic, Max harmonic" on page 395

POWer<m>:HARMonics:RPOWer[:MODE] <ActPowMd>

Available if `POWer<m>:HARMonics:STANdard` is set to `END`.

Selects if the power factor is defined automatically, or a user-defined value is used (`POWer<m>:HARMonics:RPOWer:USER`).

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<ActPowMd> AUTO | USER
*RST: AUTO

Usage: Asynchronous command

Manual operation: See "Real power, Power" on page 394

POWer<m>:HARMonics:RPOWer:USER <UsrActPow>

Selects the revision of the EN61000 standard, if `POWer<m>:HARMonics:STANdard` is set to `END` and `POWer<m>:HARMonics:RPOWer:USER` is set to `USER`.

Sets a user-defined power value.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<UsrActPow> Range: 0 to 10000
Increment: 1
*RST: 100
Default unit: W

Usage: Asynchronous command

Manual operation: See "Real power, Power" on page 394

POWer<m>:HARMonics:PFACtor:USER <UsrPowFact>

Available if `POWer<m>:HARMonics:STANdard` is set to `ENC` and `POWer<m>:HARMonics:PFACtor[:MODE]` is set to `USER`.

Sets a user-defined power factor.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<UsrPowFact>
Range: 0 to 100
Increment: 1
*RST: 100
Default unit: %

Usage: Asynchronous command

Manual operation: See "Power factor" on page 394

POWer<m>:HARMonics:PFACtor[:MODE] <PowFactMd>

Available if `POWer<m>:HARMonics:STANdard` is set to `ENC`.

Selects if the power factor is defined automatically, or a user-defined value is used (`POWer<m>:HARMonics:PFACtor:USER`).

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<PowFactMd>
AUTO | USER
*RST: AUTO

Usage: Asynchronous command

Manual operation: See "Power factor" on page 394

Power harmonics results

POWer<m>:HARMonics:AVAilable? 1387
POWer<m>:HARMonics:MEASurement:FREQuency[:ACTual]? 1388
POWer<m>:HARMonics:MEASurement:POWer:ACTive[:ACTual]? 1388
POWer<m>:HARMonics:MEASurement:THDFundament[:ACTual]? 1388
POWer<m>:HARMonics:MEASurement:THDRms[:ACTual]? 1388
POWer<m>:HARMonics:RESult<n>:VIOLation? 1389
POWer<m>:HARMonics:RESult<n>[:FREQuency]? 1389
POWer<m>:HARMonics:RESult<n>:MAGNitude:PERCent:MAXimum? 1389
POWer<m>:HARMonics:RESult<n>:MAGNitude:PERCent:MINimum? 1389
POWer<m>:HARMonics:RESult<n>:MAGNitude:PERCent[:ACTual]? 1390
POWer<m>:HARMonics:RESult<n>:MAGNitude:RMS:MAXimum? 1390
POWer<m>:HARMonics:RESult<n>:MAGNitude:RMS:MINimum? 1390
POWer<m>:HARMonics:RESult<n>:MAGNitude:RMS[:ACTual]? 1391

POWer<m>:HARMonics:AVAilable?

Returns the number of measured harmonics.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<Count>

Usage: Query only
Asynchronous command

POWer<m>:HARMonics:MEASurement:FREQuency[:ACTual]?

Returns the frequency of measured harmonics.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:HARMonics:MEASurement:POWer:ACTive[:ACTual]?

Returns the active power. Only available, if `POWer<m>:HARMonics:STANdard` on page 1383 is set to `ENC / END`.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Usage: Query only
Asynchronous command

POWer<m>:HARMonics:MEASurement:THDFundament[:ACTual]?

Returns the total harmonic distortion relative to fundamental (THDF).

Suffix:
<m> 1 to 6, index of the power analysis measurement

Usage: Query only
Asynchronous command

POWer<m>:HARMonics:MEASurement:THDRms[:ACTual]?

Returns the total harmonic distortion relative to the RMS amplitude (THD RMS).

Suffix:
<m> 1 to 6, index of the power analysis measurement

Usage: Query only
Asynchronous command

POWer<m>:HARMonics:RESult<n>:VIOLation?

Queries if the value of n-th harmonic is within the defined limit for the current measurement.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...n, index of the harmonics

Return values:
<Harmonic>

Usage: Query only
Asynchronous command

POWer<m>:HARMonics:RESult<n>[:FREQuency]?

Returns the frequency of the n-th harmonic.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...n, index of the harmonics

Return values:
<Harmonic>

Usage: Query only
Asynchronous command

POWer<m>:HARMonics:RESult<n>:MAGNitude:PERCent:MAXimum?

Returns the maximum magnitude of the n-th harmonic in percent.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...n, index of the harmonics

Return values:
<Harmonic>

Usage: Query only
Asynchronous command

POWer<m>:HARMonics:RESult<n>:MAGNitude:PERCent:MINimum?

Returns the minimum magnitude of the n-th harmonic in percent.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...n, index of the harmonics

Return values:
<Harmonic>

Usage: Query only
Asynchronous command

POWer<m>:HARMonics:RESult<n>:MAGNitude:PERCent[:ACTual]?

Returns the magnitude of the n-th harmonic in percent.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...n, index of the harmonics

Return values:
<Harmonic>

Usage: Query only
Asynchronous command

POWer<m>:HARMonics:RESult<n>:MAGNitude:RMS:MAXimum?

Returns the maximum magnitude of the n-th harmonic in RMS.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...n, index of the harmonics

Return values:
<Harmonic>

Usage: Query only
Asynchronous command

POWer<m>:HARMonics:RESult<n>:MAGNitude:RMS:MINimum?

Returns the minimum magnitude of the n-th harmonic in RMS.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...n, index of the harmonics

Return values:
<Harmonic>

Usage: Query only
Asynchronous command

POWer<m>:HARMonics:RESult<n>:MAGNitude:RMS[:ACTual]?

Returns the magnitude of the n-th harmonic in RMS.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...n, index of the harmonics

Return values:
<Harmonic>

Usage: Query only
Asynchronous command

18.17.3.4 Switching loss

- Switching loss setup....1391
- Switching loss display....1394
- Switching loss results....1396

Switching loss setup

POWer<m>:SWITching:SOURce:CURRent....1391
POWer<m>:SWITching:SOURce[:VOLTage]....1392
POWer<m>:SWITching:DISPlay:TYPE....1392
POWer<m>:SWITching:REGion:TOTal[:STARt]....1392
POWer<m>:SWITching:REGion:TON[:STARt]....1392
POWer<m>:SWITching:REGion:TON:STOP....1392
POWer<m>:SWITching:REGion:CONDuction[:STARt]....1392
POWer<m>:SWITching:REGion:CONDuction:STOP....1393
POWer<m>:SWITching:REGion:TOFF[:STARt]....1393
POWer<m>:SWITching:REGion:TOFF:STOP....1393
POWer<m>:SWITching:REGion:NCONduction[:STARt]....1393
POWer<m>:SWITching:REGion:NCONduction:STOP....1394
POWer<m>:SWITching:REGion:TOTal:STOP....1394

POWer<m>:SWITching:SOURce:CURRent <SourceCurrent>

Selects the current source waveform. Analog channels and math waveforms can be used.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<SourceCurrent> C1 | C2 | ... | C8 | M1 | M2 | ... | M8

Usage: Asynchronous command

Manual operation: See "Current" on page 400

POWer<m>:SWITching:SOURce[:VOLTage] <SourceVoltage>

Selects the voltage source waveform. Analog channels and math waveforms can be used.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<SourceVoltage> C1 | C2 | ... | C8 | M1 | M2 | ... | M8

Usage: Asynchronous command

Manual operation: See "Voltage" on page 400

POWer<m>:SWITching:DISPlay:TYPE <Unit>

Selects the measurement type: power or energy.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<Unit> POWer | ENERgy
*RST: POWer

Usage: Asynchronous command

Manual operation: See "Unit" on page 400

POWer<m>:SWITching:REGion:TOTal[:STARt] <T1Position>
POWer<m>:SWITching:REGion:TON[:STARt] <T1Position>

Sets the start time for the turn on area in relation to the trigger point. This value is also the start time of the total switching cycle.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<T1Position> Range: -500 to 500
Increment: 1E-09
*RST: -1E-06
Default unit: s

Usage: Asynchronous command

Manual operation: See "T<n> position" on page 400

POWer<m>:SWITching:REGion:TON:STOP <T2Position>
POWer<m>:SWITching:REGion:CONDuction[:STARt] <T2Position>

Sets the start time for the conduction area in relation to the trigger point. This value is also end time of the turn on area.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<T2Position>
Range: -500 to 500
Increment: 1E-09
*RST: 1E-06
Default unit: s

Usage: Asynchronous command

Manual operation: See "T<n> position" on page 400

POWer<m>:SWITching:REGion:CONDuction:STOP <T3Position>
POWer<m>:SWITching:REGion:TOFF[:STARt] <T3Position>

Sets the start time for the turn off area in relation to the trigger point. This value is also the end time of the conduction area.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<T3Position>
Range: -500 to 500
Increment: 1E-09
*RST: 5E-06
Default unit: s

Usage: Asynchronous command

Manual operation: See "T<n> position" on page 400

POWer<m>:SWITching:REGion:TOFF:STOP <T4Position>
POWer<m>:SWITching:REGion:NCONduction[:STARt] <T4Position>

Sets the start time for the non-conduction area in relation to the trigger point. This value is also the end time of the turn off area.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<T4Position>
Range: -500 to 500
Increment: 1E-09
*RST: 6E-06
Default unit: s

Usage: Asynchronous command

Manual operation: See "T<n> position" on page 400

POWer<m>:SWITching:REGion:NCONduction:STOP <T5Position>
POWer<m>:SWITching:REGion:TOTal:STOP <T5Position>

Sets the end time for the non-conduction area in relation to the trigger point. This value is also the end of the total switching cycle.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<T5Position>
Range: -500 to 500
Increment: 1E-09
*RST: 1E-05
Default unit: s

Usage: Asynchronous command

Manual operation: See "T<n> position" on page 400

Switching loss display

POWer<m>:SWITching:DISPlay:CONDuction[:ENABle] 1394
POWer<m>:SWITching:DISPlay:NCONduction[:ENABle] 1394
POWer<m>:SWITching:DISPlay:TOFF[:ENABle] 1394
POWer<m>:SWITching:DISPlay:TON[:ENABle] 1394
POWer<m>:SWITching:DISPlay:CONDuction:COLor 1395
POWer<m>:SWITching:DISPlay:NCONduction:COLor 1395
POWer<m>:SWITching:DISPlay:TOFF:COLor 1395
POWer<m>:SWITching:DISPlay:TON:COLor 1395
POWer<m>:SWITching:DISPlay:TOTal[:ENABle] 1395
POWer<m>:SWITching:DISPlay:LABel[:ENABle] 1395

POWer<m>:SWITching:DISPlay:CONDuction[:ENABle] <Show>
POWer<m>:SWITching:DISPlay:NCONduction[:ENABle] <Show>
POWer<m>:SWITching:DISPlay:TOFF[:ENABle] <Show>
POWer<m>:SWITching:DISPlay:TON[:ENABle] <Show>

The commands enable the measurements of the conduction area, non-conduction area, turn off area and turn on area, respectively. Results of enabled mesurements are shown in the result table.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<Show> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Turn on" on page 401

POWer<m>:SWITching:DISPlay:CONDuction:COLor <Color>
POWer<m>:SWITching:DISPlay:NCONduction:COLor <Color>
POWer<m>:SWITching:DISPlay:TOFF:COLor <Color>
POWer<m>:SWITching:DISPlay:TON:COLor <Color>

The commands set the display color of the conduction area, non-conduction area, turn off area and turn on area, respectively.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<Color> Decimal value of the ARGB color. Use the color dialog on the instrument to get the hex value of the color, and convert the hex value to a decimal value.
0 is fully transparent black.
4278190080 (dec) = FF000000 (hex) is opaque black.
4294967295 (dec) = FFFFFFFF (hex) is opaque white.

Range: 0 to 4294967295
Increment: 1

Usage: Asynchronous command

Manual operation: See "Turn on" on page 401

Reset values:

Conduction	2030010343
Non-conduction	2023358259
Turn off	2030002176
Turn on	2026077439

POWer<m>:SWITching:DISPlay:TOTal[:ENABle] <ShowTotal>

Enables the measurements of the total switching cycle.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<ShowTotal> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Total" on page 402

POWer<m>:SWITching:DISPlay:LABel[:ENABle] <ShowLabel>

Displays the names of the switching cycle areas.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<ShowLabel> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Area label" on page 402

Switching loss results

See "Overview of statistic results" on page 1366.

POWer<m>:SWITching:RESult:CONDuction:ENERgy[:ACTual]? 1397
POWer<m>:SWITching:RESult:CONDuction:POWer[:ACTual]? 1397
POWer<m>:SWITching:RESult:NCONduction:ENERgy[:ACTual]? 1397
POWer<m>:SWITching:RESult:NCONduction:POWer[:ACTual]? 1397
POWer<m>:SWITching:RESult:TOFF:ENERgy[:ACTual]? 1397
POWer<m>:SWITching:RESult:TOFF:POWer[:ACTual]? 1398
POWer<m>:SWITching:RESult:TON:ENERgy[:ACTual]? 1398
POWer<m>:SWITching:RESult:TON:POWer[:ACTual]? 1398
POWer<m>:SWITching:RESult:TOTal:ENERgy[:ACTual]? 1398
POWer<m>:SWITching:RESult:TOTal:POWer[:ACTual]? 1398
POWer<m>:SWITching:RESult:CONDuction:ENERgy:AVERage? 1398
POWer<m>:SWITching:RESult:CONDuction:POWer:AVERage? 1398
POWer<m>:SWITching:RESult:NCONduction:ENERgy:AVERage? 1398
POWer<m>:SWITching:RESult:NCONduction:POWer:AVERage? 1398
POWer<m>:SWITching:RESult:TOFF:ENERgy:AVERage? 1398
POWer<m>:SWITching:RESult:TOFF:POWer:AVERage? 1398
POWer<m>:SWITching:RESult:TON:ENERgy:AVERage? 1398
POWer<m>:SWITching:RESult:TON:POWer:AVERage? 1398
POWer<m>:SWITching:RESult:TOTal:ENERgy:AVERage? 1398
POWer<m>:SWITching:RESult:TOTal:POWer:AVERage? 1398
POWer<m>:SWITching:RESult:CONDuction:ENERgy:EVTCount? 1398
POWer<m>:SWITching:RESult:CONDuction:POWer:EVTCount? 1398
POWer<m>:SWITching:RESult:NCONduction:ENERgy:EVTCount? 1398
POWer<m>:SWITching:RESult:NCONduction:POWer:EVTCount? 1398
POWer<m>:SWITching:RESult:TOFF:ENERgy:EVTCount? 1398
POWer<m>:SWITching:RESult:TOFF:POWer:EVTCount? 1398
POWer<m>:SWITching:RESult:TON:ENERgy:EVTCount? 1398
POWer<m>:SWITching:RESult:TON:POWer:EVTCount? 1398
POWer<m>:SWITching:RESult:TOTal:ENERgy:EVTCount? 1399
POWer<m>:SWITching:RESult:TOTal:POWer:EVTCount? 1399
POWer<m>:SWITching:RESult:CONDuction:ENERgy:NPEak? 1399
POWer<m>:SWITching:RESult:CONDuction:POWer:NPEak? 1399
POWer<m>:SWITching:RESult:NCONduction:ENERgy:NPEak? 1399
POWer<m>:SWITching:RESult:NCONduction:POWer:NPEak? 1399
POWer<m>:SWITching:RESult:TOFF:ENERgy:NPEak? 1399
POWer<m>:SWITching:RESult:TOFF:POWer:NPEak? 1399
POWer<m>:SWITching:RESult:TON:ENERgy:NPEak? 1399

POWer<m>:SWITching:RESult:TON:POWer:NPEak? 1399
POWer<m>:SWITching:RESult:TOTal:ENERgy:NPEak? 1399
POWer<m>:SWITching:RESult:TOTal:POWer:NPEak? 1399
POWer<m>:SWITching:RESult:CONDuction:ENERgy:PPEak? 1399
POWer<m>:SWITching:RESult:CONDuction:POWer:PPEak? 1399
POWer<m>:SWITching:RESult:NCONduction:ENERgy:PPEak? 1399
POWer<m>:SWITching:RESult:NCONduction:POWer:PPEak? 1399
POWer<m>:SWITching:RESult:TOFF:ENERgy:PPEak? 1399
POWer<m>:SWITching:RESult:TOFF:POWer:PPEak? 1399
POWer<m>:SWITching:RESult:TON:ENERgy:PPEak? 1399
POWer<m>:SWITching:RESult:TON:POWer:PPEak? 1399
POWer<m>:SWITching:RESult:TOTal:ENERgy:PPEak? 1400
POWer<m>:SWITching:RESult:TOTal:POWer:PPEak? 1400
POWer<m>:SWITching:RESult:CONDuction:ENERgy:RMS? 1400
POWer<m>:SWITching:RESult:CONDuction:POWer:RMS? 1400
POWer<m>:SWITching:RESult:NCONduction:ENERgy:RMS? 1400
POWer<m>:SWITching:RESult:NCONduction:POWer:RMS? 1400
POWer<m>:SWITching:RESult:TOFF:ENERgy:RMS? 1400
POWer<m>:SWITching:RESult:TOFF:POWer:RMS? 1400
POWer<m>:SWITching:RESult:TON:ENERgy:RMS? 1400
POWer<m>:SWITching:RESult:TON:POWer:RMS? 1400
POWer<m>:SWITching:RESult:TOTal:ENERgy:RMS? 1400
POWer<m>:SWITching:RESult:TOTal:POWer:RMS? 1400
POWer<m>:SWITching:RESult:CONDuction:ENERgy:STDDev? 1400
POWer<m>:SWITching:RESult:CONDuction:POWer:STDDev? 1400
POWer<m>:SWITching:RESult:NCONduction:ENERgy:STDDev? 1400
POWer<m>:SWITching:RESult:NCONduction:POWer:STDDev? 1400
POWer<m>:SWITching:RESult:TOFF:ENERgy:STDDev? 1400
POWer<m>:SWITching:RESult:TOFF:POWer:STDDev? 1400
POWer<m>:SWITching:RESult:TON:ENERgy:STDDev? 1400
POWer<m>:SWITching:RESult:TON:POWer:STDDev? 1400
POWer<m>:SWITching:RESult:TOTal:ENERgy:STDDev? 1401
POWer<m>:SWITching:RESult:TOTal:POWer:STDDev? 1401
POWer<m>:SWITching:RESult:CONDuction:ENERgy:WFMCount? 1401
POWer<m>:SWITching:RESult:CONDuction:POWer:WFMCount? 1401
POWer<m>:SWITching:RESult:NCONduction:ENERgy:WFMCount? 1401
POWer<m>:SWITching:RESult:NCONduction:POWer:WFMCount? 1401
POWer<m>:SWITching:RESult:TOFF:ENERgy:WFMCount? 1401
POWer<m>:SWITching:RESult:TOFF:POWer:WFMCount? 1401
POWer<m>:SWITching:RESult:TON:ENERgy:WFMCount? 1401
POWer<m>:SWITching:RESult:TON:POWer:WFMCount? 1401
POWer<m>:SWITching:RESult:TOTal:ENERgy:WFMCount? 1401
POWer<m>:SWITching:RESult:TOTal:POWer:WFMCount? 1401

POWer<m>:SWITching:RESult:CONDuction:ENERgy[:ACTual]?
POWer<m>:SWITching:RESult:CONDuction:POWer[:ACTual]?
POWer<m>:SWITching:RESult:NCONduction:ENERgy[:ACTual]?
POWer<m>:SWITching:RESult:NCONduction:POWer[:ACTual]?
POWer<m>:SWITching:RESult:TOFF:ENERgy[:ACTual]?

POWer<m>:SWITching:RESult:TOFF:POWer[:ACTual]?
POWer<m>:SWITching:RESult:TON:ENERgy[:ACTual]?
POWer<m>:SWITching:RESult:TON:POWer[:ACTual]?
POWer<m>:SWITching:RESult:TOTal:ENERgy[:ACTual]?
POWer<m>:SWITching:RESult:TOTal:POWer[:ACTual]?

Return the current result value of the selected measurement type.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:SWITching:RESult:CONDuction:ENERgy:AVERage?
POWer<m>:SWITching:RESult:CONDuction:POWer:AVERage?
POWer<m>:SWITching:RESult:NCONduction:ENERgy:AVERage?
POWer<m>:SWITching:RESult:NCONduction:POWer:AVERage?
POWer<m>:SWITching:RESult:TOFF:ENERgy:AVERage?
POWer<m>:SWITching:RESult:TOFF:POWer:AVERage?
POWer<m>:SWITching:RESult:TON:ENERgy:AVERage?
POWer<m>:SWITching:RESult:TON:POWer:AVERage?
POWer<m>:SWITching:RESult:TOTal:ENERgy:AVERage?
POWer<m>:SWITching:RESult:TOTal:POWer:AVERage?

Return the average value of the selected measurement type if statistics are enabled.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<Average> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:SWITching:RESult:CONDuction:ENERgy:EVTCount?
POWer<m>:SWITching:RESult:CONDuction:POWer:EVTCount?
POWer<m>:SWITching:RESult:NCONduction:ENERgy:EVTCount?
POWer<m>:SWITching:RESult:NCONduction:POWer:EVTCount?
POWer<m>:SWITching:RESult:TOFF:ENERgy:EVTCount?
POWer<m>:SWITching:RESult:TOFF:POWer:EVTCount?
POWer<m>:SWITching:RESult:TON:ENERgy:EVTCount?
POWer<m>:SWITching:RESult:TON:POWer:EVTCount?

POWer<m>:SWITching:RESult:TOTal:ENERgy:EVTCount?
POWer<m>:SWITching:RESult:TOTal:POWer:EVTCount?

Return the number of calculated measurement results of the selected measurement type if statistics are enabled.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<Count> Range: 0 to 4000000000
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:SWITching:RESult:CONDuction:ENERgy:NPEak?
POWer<m>:SWITching:RESult:CONDuction:POWer:NPEak?
POWer<m>:SWITching:RESult:NCONduction:ENERgy:NPEak?
POWer<m>:SWITching:RESult:NCONduction:POWer:NPEak?
POWer<m>:SWITching:RESult:TOFF:ENERgy:NPEak?
POWer<m>:SWITching:RESult:TOFF:POWer:NPEak?
POWer<m>:SWITching:RESult:TON:ENERgy:NPEak?
POWer<m>:SWITching:RESult:TON:POWer:NPEak?
POWer<m>:SWITching:RESult:TOTal:ENERgy:NPEak?
POWer<m>:SWITching:RESult:TOTal:POWer:NPEak?

Return the negative peak value (minimum) of the selected measurement type if statistics are enabled.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<MinPeak> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:SWITching:RESult:CONDuction:ENERgy:PPEak?
POWer<m>:SWITching:RESult:CONDuction:POWer:PPEak?
POWer<m>:SWITching:RESult:NCONduction:ENERgy:PPEak?
POWer<m>:SWITching:RESult:NCONduction:POWer:PPEak?
POWer<m>:SWITching:RESult:TOFF:ENERgy:PPEak?
POWer<m>:SWITching:RESult:TOFF:POWer:PPEak?
POWer<m>:SWITching:RESult:TON:ENERgy:PPEak?
POWer<m>:SWITching:RESult:TON:POWer:PPEak?

POWer<m>:SWITching:RESult:TOTal:ENERgy:PPEak?
POWer<m>:SWITching:RESult:TOTal:POWer:PPEak?

Return the positive peak value (maximum) of the selected measurement type if statistics are enabled.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<MaxPeak> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:SWITching:RESult:CONDuction:ENERgy:RMS?
POWer<m>:SWITching:RESult:CONDuction:POWer:RMS?
POWer<m>:SWITching:RESult:NCONduction:ENERgy:RMS?
POWer<m>:SWITching:RESult:NCONduction:POWer:RMS?
POWer<m>:SWITching:RESult:TOFF:ENERgy:RMS?
POWer<m>:SWITching:RESult:TOFF:POWer:RMS?
POWer<m>:SWITching:RESult:TON:ENERgy:RMS?
POWer<m>:SWITching:RESult:TON:POWer:RMS?
POWer<m>:SWITching:RESult:TOTal:ENERgy:RMS?
POWer<m>:SWITching:RESult:TOTal:POWer:RMS?

Return the RMS value of the selected measurement type if statistics are enabled.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<RMS> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:SWITching:RESult:CONDuction:ENERgy:STDDev?
POWer<m>:SWITching:RESult:CONDuction:POWer:STDDev?
POWer<m>:SWITching:RESult:NCONduction:ENERgy:STDDev?
POWer<m>:SWITching:RESult:NCONduction:POWer:STDDev?
POWer<m>:SWITching:RESult:TOFF:ENERgy:STDDev?
POWer<m>:SWITching:RESult:TOFF:POWer:STDDev?
POWer<m>:SWITching:RESult:TON:ENERgy:STDDev?
POWer<m>:SWITching:RESult:TON:POWer:STDDev?

POWer<m>:SWITching:RESult:TOTal:ENERgy:STDDev?
POWer<m>:SWITching:RESult:TOTal:POWer:STDDev?

Return the standard deviation of the selected measurement type if statistics are enabled.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<StdDev> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:SWITching:RESult:CONDuction:ENERgy:WFMCount?
POWer<m>:SWITching:RESult:CONDuction:POWer:WFMCount?
POWer<m>:SWITching:RESult:NCONduction:ENERgy:WFMCount?
POWer<m>:SWITching:RESult:NCONduction:POWer:WFMCount?
POWer<m>:SWITching:RESult:TOFF:ENERgy:WFMCount?
POWer<m>:SWITching:RESult:TOFF:POWer:WFMCount?
POWer<m>:SWITching:RESult:TON:ENERgy:WFMCount?
POWer<m>:SWITching:RESult:TON:POWer:WFMCount?
POWer<m>:SWITching:RESult:TOTal:ENERgy:WFMCount?
POWer<m>:SWITching:RESult:TOTal:POWer:WFMCount?

Return the number of calculated waveforms of the selected measurement type if statistics are enabled.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<WaveformsCount> Range: 0 to 4000000000
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

18.17.3.5 Turn on/off time

- Turn on/off setup 1401
- Turn on/off display 1404
- Turn on/off results 1405

Turn on/off setup

POWer<m>:ONOFf:INPut:AC:ABSolute[:VALue] 1402
POWer<m>:ONOFf:INPut:DC:ABSolute[:VALue] 1402
POWer<m>:ONOFf:INPut:TYPE 1402

POWer<m>:ONOFf:INPut[:SOURce]....1403
POWer<m>:ONOFf:ONUMber....1403
POWer<m>:ONOFf:OUTPut<n>:DC:ABSolute[:VALue]....1403
POWer<m>:ONOFf:OUTPut<n>:DISPlay:RESult[:ENABle]....1403
POWer<m>:ONOFf:OUTPut<n>[:SOURce]....1404
POWer<m>:ONOFf[:TYPE]....1404

POWer<m>:ONOFf:INPut:AC:ABSolute[:VALue] <InputACThreshold>

Sets the threshold for the AC input signal.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<InputACThreshold> Range: 0 to 1E+26
Increment: 0.001
*RST: 1
Default unit: V

Usage: Asynchronous command

Manual operation: See "AC threshold" on page 407

POWer<m>:ONOFf:INPut:DC:ABSolute[:VALue] <InputDCThreshold>

Sets the threshold for the DC input signal.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<InputDCThreshold> Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 1
Default unit: V

Usage: Asynchronous command

Manual operation: See "DC threshold" on page 406

POWer<m>:ONOFf:INPut:TYPE <InputType>

Selects whether the input signal is AC or CD.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<InputType> DC | AC
*RST: DC

Usage: Asynchronous command

Manual operation: See "Input type" on page 406

POWer<m>:ONOFf:INPut[:SOURce] <InputSource>

Selects the source waveform of the input signal.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<InputSource> C1 | C2 | ... | C8 | M1 | M2 | ... | M8

Usage: Asynchronous command

Manual operation: See "Input source" on page 406

POWer<m>:ONOFf:ONUMber <OutputCount>

Sets the number of outputs to be used in the measurement.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<OutputCount>

Usage: Asynchronous command

POWer<m>:ONOFf:OUTPut<n>:DC:ABSolute[:VALue] <OutDCThreshold>

Sets the threshold for the selected output signal.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1..3, index of the output signal (4-channel instrument).
1..7, index of the output signal (8-channel instrument).

Parameters:
<OutDCThreshold> Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 1
Default unit: V

Usage: Asynchronous command

Manual operation: See "DC threshold" on page 407

POWer<m>:ONOFf:OUTPut<n>:DISPlay:RESult[:ENABle] <Enable>

Activates the indicated output line.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1..3, index of the output signal (4-channel instrument).
1..7, index of the output signal (8-channel instrument).

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Enable output" on page 407

POWer<m>:ONOFf:OUTPut<n>[:SOURce] <OutputSource>

Selects the channel of the output signal. All analog channels except for the input channel can be used. Each channel can be used only once.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1..3, index of the output signal (4-channel instrument).
1..7, index of the output signal (8-channel instrument).

Parameters:
<OutputSource> C1 | C2 | ... | C8 | M1 | M2 | ... | M8

Example: `POW2:ONOF:OUTP3 C4`
Sets the 3rd output to channel 4.

Usage: Asynchronous command

Manual operation: See "Output source" on page 407

POWer<m>:ONOFf[:TYPE] <Mode>

Selects the turn on or turn off measurement.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<Mode> TON | TOFF
*RST: TON

Usage: Asynchronous command

Manual operation: See "Mode" on page 406

Turn on/off display

POWer<m>:ONOFf:OUTPut<n>:DISPlay:RLINe[:ENABle] <Display>

Enables the result lines for the selected output.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1..3, index of the output signal (4-channel instrument).
1..7, index of the output signal (8-channel instrument).

Parameters:

<Display> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Result line <n>" on page 408

Turn on/off results

POWer<m>:ONOFf:RESult<n>:TIME[:ACTual]?

Returns the measured turn-on time or turn-off time of the specified input-output pair.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> 1..*
Index of the output signal.

Return values:

<Time> Range: -1E+26 to 1E+26
Increment: 0.1
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.17.3.6 Power efficiency

- Efficiency setup 1405
- Efficiency gate 1408
- Efficiency display 1408
- Efficiency results 1409

Efficiency setup

POWer<m>:EFFiciency:INPut<n>:CURRent[:SOURce] 1405
POWer<m>:EFFiciency:INPut<n>:VOLTage[:SOURce] 1406
POWer<m>:EFFiciency:INPut<n>[:TYPE] 1406
POWer<m>:EFFiciency:ONUMber? 1406
POWer<m>:EFFiciency:OUTPut<n>:CURRent[:SOURce] 1407
POWer<m>:EFFiciency:OUTPut<n>:VOLTage[:SOURce] 1407
POWer<m>:EFFiciency:OUTPut<n>[:TYPE] 1407

POWer<m>:EFFiciency:INPut<n>:CURRent[:SOURce] <SourceCurrent>

Selects the current source waveform of the input line.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

Parameters:
<SourceCurrent> C1 | C2 | ... | C8 | M1 | M2 | ... | M8

Usage: Asynchronous command

Manual operation: See "Current (Input)" on page 411

POWer<m>:EFFiciency:INPut<n>:VOLTage[:SOURce] <SourceVoltage>

Selects the voltage source waveform of the input line.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

Parameters:
<SourceVoltage> C1 | C2 | ... | C8 | M1 | M2 | ... | M8

Usage: Asynchronous command

Manual operation: See "Voltage (Input)" on page 411

POWer<m>:EFFiciency:INPut<n>[:TYPE] <Type>

Selects the type of the current flow: AC or DC.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

Parameters:
<Type> DC | AC
*RST: DC

Usage: Asynchronous command

Manual operation: See "Input type" on page 411

POWer<m>:EFFiciency:ONUMber? [MAX]

Returns the number of available outputs.

You can query the maximum value with `<command>? MAX`.

The maximum number of output lines is *Number of channels / 2 - 1*.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<OutputCount> Number of outputs

Usage: Query only
Asynchronous command

POWer<m>:EFFiciency:OUTPut<n>:CURRent[:SOURce] <SourceCurrent>

Selects the current source waveform of the selected output line.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1..3, output index
Suffix >1 requires an instrument with more than 4 channels.

Parameters:
<SourceCurrent> C1 | C2 | ... | C8 | M1 | M2 | ... | M8

Usage: Asynchronous command

Manual operation: See "Current (Output)" on page 412

POWer<m>:EFFiciency:OUTPut<n>:VOLTage[:SOURce] <SourceVoltage>

Selects the voltage source waveform of the selected output line.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1..3, output index
Suffix >1 requires an instrument with more than 4 channels.

Parameters:
<SourceVoltage> C1 | C2 | ... | C8 | M1 | M2 | ... | M8

Usage: Asynchronous command

Manual operation: See "Voltage (Output)" on page 412

POWer<m>:EFFiciency:OUTPut<n>[:TYPE] <Type>

Selects the type of the current flow: AC or DC.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1..3, output index
Suffix >1 requires an instrument with more than 4 channels.

Parameters:
<Type> DC | AC
*RST: DC

Usage: Asynchronous command

Manual operation: See "Output type" on page 412

Efficiency gate

POWer<m>:EFFiciency:GATE <Gate>

Sets the gate for the specified efficiency analysis. Configure the gate before you can assign it. Make sure that the suffix matches the power effciency measurement.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<Gate> 0 to 8, index of the assigned gate. The value 0 indicates that no gate is assigned.

Usage: Asynchronous command

Efficiency display

POWer<m>:EFFiciency:DISPlay:RESult:OUTPut<n>:EFFiciency[:ENABle] 1408
POWer<m>:EFFiciency:DISPlay:RESult:OUTPut<n>:POWer[:ENABle] 1408
POWer<m>:EFFiciency:DISPlay:RESult:TOTal<n>:EFFiciency[:ENABle] 1408
POWer<m>:EFFiciency:DISPlay:RESult:TOTal<n>:OPOWer[:ENABle] 1408

POWer<m>:EFFiciency:DISPlay:RESult:OUTPut<n>:EFFiciency[:ENABle] <Show>
POWer<m>:EFFiciency:DISPlay:RESult:OUTPut<n>:POWer[:ENABle] <Show>

The commands enable the power and efficiency measurements of the selected output line.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1..3, output index
Suffix >1 requires an instrument with more than 4 channels.

Parameters:
<Show> OFF | ON
*RST: ON

Usage: Asynchronous command

POWer<m>:EFFiciency:DISPlay:RESult:TOTal<n>:EFFiciency[:ENABle] <Show>
POWer<m>:EFFiciency:DISPlay:RESult:TOTal<n>:OPOWer[:ENABle] <Show>

The commands enable the total power and efficiency measurements of the selected output line. These measurements require an instrument with more than 4 channels.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

Parameters:

<Show> OFF | ON

*RST: ON

Usage: Asynchronous command

Efficiency results

See "Overview of statistic results" on page 1366.

POWer<m>:EFFiciency:RESult:INPut:POWer[:ACTual]?....1409
POWer<m>:EFFiciency:RESult:TOTal:EFFiciency[:ACTual]?....1409
POWer<m>:EFFiciency:RESult:TOTal:OPOWer[:ACTual]?....1409
POWer<m>:EFFiciency:RESult:INPut:POWer:AVERage?....1410
POWer<m>:EFFiciency:RESult:TOTal:EFFiciency:AVERage?....1410
POWer<m>:EFFiciency:RESult:TOTal:OPOWer:AVERage?....1410
POWer<m>:EFFiciency:RESult:INPut:POWer:EVTCount?....1410
POWer<m>:EFFiciency:RESult:TOTal:EFFiciency:EVTCount?....1410
POWer<m>:EFFiciency:RESult:TOTal:OPOWer:EVTCount?....1410
POWer<m>:EFFiciency:RESult:INPut:POWer:NPEak?....1410
POWer<m>:EFFiciency:RESult:TOTal:EFFiciency:NPEak?....1410
POWer<m>:EFFiciency:RESult:TOTal:OPOWer:NPEak?....1410
POWer<m>:EFFiciency:RESult:INPut:POWer:PPEak?....1411
POWer<m>:EFFiciency:RESult:TOTal:EFFiciency:PPEak?....1411
POWer<m>:EFFiciency:RESult:TOTal:OPOWer:PPEak?....1411
POWer<m>:EFFiciency:RESult:INPut:POWer:RMS?....1411
POWer<m>:EFFiciency:RESult:TOTal:EFFiciency:RMS?....1411
POWer<m>:EFFiciency:RESult:TOTal:OPOWer:RMS?....1411
POWer<m>:EFFiciency:RESult:INPut:POWer:STDDev?....1411
POWer<m>:EFFiciency:RESult:TOTal:EFFiciency:STDDev?....1411
POWer<m>:EFFiciency:RESult:TOTal:OPOWer:STDDev?....1411
POWer<m>:EFFiciency:RESult:INPut:POWer:WFMCount?....1412
POWer<m>:EFFiciency:RESult:TOTal:EFFiciency:WFMCount?....1412
POWer<m>:EFFiciency:RESult:TOTal:OPOWer:WFMCount?....1412

POWer<m>:EFFiciency:RESult:INPut:POWer[:ACTual]?
POWer<m>:EFFiciency:RESult:TOTal:EFFiciency[:ACTual]?
POWer<m>:EFFiciency:RESult:TOTal:OPOWer[:ACTual]?

Return the current result value for input power, total efficiency and total output power.

Suffix:

<m> 1 to 6, index of the power analysis measurement

Return values:

<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:EFFiciency:RESult:INPut:POWer:AVERage?
POWer<m>:EFFiciency:RESult:TOTal:EFFiciency:AVERage?
POWer<m>:EFFiciency:RESult:TOTal:OPOWer:AVERage?

Return the average value for input power, total efficiency and total output power if statistics are enabled.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<Average> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:EFFiciency:RESult:INPut:POWer:EVTCount?
POWer<m>:EFFiciency:RESult:TOTal:EFFiciency:EVTCount?
POWer<m>:EFFiciency:RESult:TOTal:OPOWer:EVTCount?

Return the number of calculated measurement results for input power, total efficiency and total output power if statistics are enabled.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<Count> Range: 0 to 4000000000
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:EFFiciency:RESult:INPut:POWer:NPEak?
POWer<m>:EFFiciency:RESult:TOTal:EFFiciency:NPEak?
POWer<m>:EFFiciency:RESult:TOTal:OPOWer:NPEak?

Return the negative peak value (minimum) for input power, total efficiency and total output power if statistics are enabled.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<MinPeak> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:EFFiciency:RESult:INPut:POWer:PPEak?
POWer<m>:EFFiciency:RESult:TOTal:EFFiciency:PPEak?
POWer<m>:EFFiciency:RESult:TOTal:OPOWer:PPEak?

Return the npositive peak value (maximum) for input power, total efficiency and total output power if statistics are enabled.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<MaxPeak> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:EFFiciency:RESult:INPut:POWer:RMS?
POWer<m>:EFFiciency:RESult:TOTal:EFFiciency:RMS?
POWer<m>:EFFiciency:RESult:TOTal:OPOWer:RMS?

Return the RMS value for input power, total efficiency and total output power if statistics are enabled.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<RMS> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:EFFiciency:RESult:INPut:POWer:STDDev?
POWer<m>:EFFiciency:RESult:TOTal:EFFiciency:STDDev?
POWer<m>:EFFiciency:RESult:TOTal:OPOWer:STDDev?

Return the standard deviation for input power, total efficiency and total output power if statistics are enabled.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<StdDev> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:EFFiciency:RESult:INPut:POWer:WFMCount?
POWer<m>:EFFiciency:RESult:TOTal:EFFiciency:WFMCount?
POWer<m>:EFFiciency:RESult:TOTal:OPOWer:WFMCount?

Return the number of calculated waveforms for input power, total efficiency and total output power if statistics are enabled.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<WaveformsCount> Range: 0 to 4000000000
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

18.17.3.7 Safe operating area (SOA)

- SOA setup....1412
- SOA mask....1413
- SOA actions....1419
- SOA results....1421

SOA setup

POWer<m>:SOA:MTESt<n>:IMEXport:NAME <Name>

Sets the path, the filename and the file format of the mask file.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

Parameters:
<Name> String with path and file name with extension `.xml`.

Usage: Asynchronous command

Manual operation: See "Save mask" on page 417

POWer<m>:SOA:MTESt<n>:IMEXport:OPEN

Opens and loads the mask selected by `POWer<m>:SOA:MTESt<n>:IMEXport:NAME`.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

Usage: Event
Asynchronous command

Manual operation: See "Open" on page 418

POWer<m>:SOA:MTESt<n>:IMEXport:SAVE

Saves the mask test to the file selected by `POWer<m>:SOA:MTESt<n>:IMEXport:NAME`.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

Usage: Event
Asynchronous command

Manual operation: See "Save mask" on page 417

POWer<m>:SOA:SOURce:CURRent <SourceCurrent>

Selects the current source waveform. Analog channels and math waveforms can be used.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<SourceCurrent> C1 | C2 | ... | C8 | M1 | M2 | ... | M8

Usage: Asynchronous command

Manual operation: See "Current" on page 417

POWer<m>:SOA:SOURce:VOLTage <SourceVoltage>

Selects the voltage source waveform. Analog channels and math waveforms can be used.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<SourceVoltage> C1 | C2 | ... | C8 | M1 | M2 | ... | M8

Usage: Asynchronous command

Manual operation: See "Voltage" on page 417

SOA mask

POWer<m>:SOA:LIMit:APPLy 1414
POWer<m>:SOA:LIMit:IMAX 1414
POWer<m>:SOA:LIMit:PMAX 1414
POWer<m>:SOA:LIMit:VMAX 1415
POWer<m>:SOA:MTESt<n>:SEGMent<o>:ADD 1415

POWer<m>:SOA:MTESt<n>:SEGMent<o>:COUNt? 1415
POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:ADD 1416
POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:COUNt? 1416
POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:REMove 1417
POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:VALid? 1417
POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:X 1417
POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:Y 1418
POWer<m>:SOA:MTESt<n>:SEGMent<o>:REMove 1418

POWer<m>:SOA:LIMit:APPLy

Generates a mask using the given maximum values. The result is mask segment in the first quadrant of the XY-diagram.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Usage: Setting only
Asynchronous command

Manual operation: See "Generate mask" on page 420

POWer<m>:SOA:LIMit:IMAX <CurrentMax>

Sets the maximum current for the mask.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<CurrentMax>
Range: 0 to 1E+26
Increment: 0.001
*RST: 1
Default unit: A

Usage: Asynchronous command

Manual operation: See "I max" on page 419

POWer<m>:SOA:LIMit:PMAX <PowerMax>

Sets the maximum power for the mask.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<PowerMax>
Range: 0 to 1E+26
Increment: 0.001
*RST: 50
Default unit: W

Usage: Asynchronous command

Manual operation: See "P max" on page 420

POWer<m>:SOA:LIMit:VMAX <VoltageMax>

Sets the maximum voltage for the mask.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<VoltageMax>
Range: 0 to 1E+26
Increment: 0.001
*RST: 100
Default unit: V

Usage: Asynchronous command

Manual operation: See "U max" on page 419

POWer<m>:SOA:MTESt<n>:SEGMent<o>:ADD

Adds a new segment to the SOA mask. Consider the order of the segments (1, 2, 3, 4) and use the next free segment index. If the specified segment index already exists, the given number is ignored and the new segment gets the next free index.

The new segment has no points. Use `POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:ADD` to add the points.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

<o> 1...4, index of the segment.

Usage: Setting only
Asynchronous command

Manual operation: See "Add segment" on page 419

POWer<m>:SOA:MTESt<n>:SEGMent<o>:COUNt?

Returns the number of segments that belong to the SOA mask.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

<o> Irrelevant, omit the suffix.

Return values:

<Count> Number of the mask segments

Range: 0 to 1
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

Manual operation: See "Add segment" on page 419

POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:ADD

Adds a corner point to the selected mask segment at the next free suffix. The new point has the coordinates 0;0.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

<o> 1...4, index of the segment.

<p> Index is ignored.

Usage: Setting only
Asynchronous command

Manual operation: See "Add segment" on page 419

POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:COUNt? [MAX]

Returns the number of points that was added to the indicated mask segment.

You can query the maximum value with `<command>? MAX`.

Suffix:

<m> 1..*

<n> *

<o> *

<p> *

Return values:

<Count> Number of defined points

Usage: Query only
Asynchronous command

Manual operation: See "Add segment" on page 419

POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:REMove

Deletes the specified corner point of the mask segment. When a point is deleted, the remaining points are reordered similar to segment deletion (`POWer<m>:SOA:MTESt<n>:SEGMent<o>:REMove`).

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

<o> 1...4, index of the segment.

<p> 1...9, point index

Usage: Setting only
Asynchronous command

Manual operation: See "Add segment" on page 419

POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:VALid?

Checks the validity of the selected point.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

<o> 1...4, index of the segment.

<p> 1...9, point index

Return values:

<Valid> OFF | ON

ON = valid
OFF = invalid

*RST: ON

Usage: Query only
Asynchronous command

Manual operation: See "Add segment" on page 419

POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:X <X>

Sets the horizontal position of the selected point.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

<o> 1...4, index of the segment.

<p> 1...4, index of the segment.

Parameters:

<X>
Range: -1E+26 to 1E+26
Increment: 1E-06
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "Point, X, Y" on page 347

POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:Y <Y>

Sets the vertical position of the selected point.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

<o> 1...4, index of the segment.

<p> 1...4, index of the segment.

Parameters:

<Y>
Range: -1E+26 to 1E+26
Increment: 1E-06
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "Point, X, Y" on page 347

POWer<m>:SOA:MTESt<n>:SEGMent<o>:REMove

Deletes the specified mask segment. When a segment is deleted, the remaining segments are reordered. For example, there are 3 segments (1, 2, 3). When you delete segment 2, then segment 3 gets the index 2.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

<o> 1...4, index of the segment.

Usage: Setting only
Asynchronous command

Manual operation: See "Add segment" on page 419

SOA actions

POWer<m>:SOA:MTESt<n>:ONViolation:BEEP 1419
POWer<m>:SOA:MTESt<n>:ONViolation:SCReenshot 1419
POWer<m>:SOA:MTESt<n>:ONViolation:STOP 1419
POWer<m>:SOA:MTESt<n>:ONViolation:TRIGgerout 1420
POWer<m>:SOA:MTESt<n>:ONViolation:WFMSave 1420

POWer<m>:SOA:MTESt<n>:ONViolation:BEEP <Beep>

Generates a beep sound if the command is set to `SUCCess` or `VIOLation`.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

Parameters:
<Beep> NOACtion | SUCCess | VIOLation
*RST: NOACtion

Usage: Asynchronous command

Manual operation: See "Beep" on page 350

POWer<m>:SOA:MTESt<n>:ONViolation:SCReenshot <SaveScreenshot>

Saves the waveform data to file if the command is set to `SUCCess` or `VIOLation`.

To configure the screenshot settings, use the commands described in Section 18.13.8, "Screenshots", on page 1250.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

Parameters:
<SaveScreenshot> NOACtion | SUCCess | VIOLation
*RST: NOACtion

Usage: Asynchronous command

Manual operation: See "Screenshot" on page 351

POWer<m>:SOA:MTESt<n>:ONViolation:STOP <StopAcq>

Stops the running acquisition if the command is set to `SUCCess` or `VIOLation`.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

Parameters:
<StopAcq> NOACtion | SUCCess | VIOLation
*RST: NOACtion

Usage: Asynchronous command

Manual operation: See "Stop acq" on page 350

POWer<m>:SOA:MTESt<n>:ONViolation:TRIGgerout <TrigOutPls>

Sends an outgoing pulse to the [Trigger Out] connector if the command is set to `SUCCess` or `VIOLation`.

To configure the pulse, user the following commands:

- `TRIGger:ACTions:OUT:SOURce` on page 1176
- `TRIGger:ACTions:OUT:POLarity` on page 1177
- `TRIGger:ACTions:OUT:DELay` on page 1176
- `TRIGger:ACTions:OUT:PLENgth` on page 1176

Suffix:
<m> 1 to 6, index of the power analysis measurement
<n> Irrelevant, omit the suffix.

Parameters:
<TrigOutPls> NOACtion | SUCCess | VIOLation
*RST: NOACtion

Usage: Asynchronous command

Manual operation: See "Trigger out pulse" on page 351

POWer<m>:SOA:MTESt<n>:ONViolation:WFMSave <SaveWfm>

Saves the waveform data to file if the command is set to `SUCCess` or `VIOLation`.

To define the path and file names, use the EXPort:WAVeform:AUTonaming:* commands:

- `EXPort:WAVeform:AUTonaming:NAME` on page 1240
- `EXPort:WAVeform:AUTonaming:PATH` on page 1240
- `EXPort:WAVeform:AUTonaming:TYPE` on page 1241

Suffix:
<m> 1 to 6, index of the power analysis measurement
<n> Irrelevant, omit the suffix.

Parameters:
<SaveWfm> NOACtion | SUCCess | VIOLation
*RST: NOACtion

Usage: Asynchronous command

Manual operation: See "Save wfm" on page 350

SOA results

POWer<m>:SOA:RESult<n>:COUNt:FWAVeforms? 1421
POWer<m>:SOA:RESult<n>:COUNt:PWAVeforms? 1421
POWer<m>:SOA:RESult<n>:COUNt:WAVeforms? 1421
POWer<m>:SOA:RESult<n>:FRATe? 1422
POWer<m>:SOA:RESult<n>[:RESult]? 1422

POWer<m>:SOA:RESult<n>:COUNt:FWAVeforms?

Returns the number of acquisitions that have failed the mask test, they hit the mask limits.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

Return values:
<AcqsFailed> Range: 0 to 10000000000000
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:SOA:RESult<n>:COUNt:PWAVeforms?

Returns the number of acquisitions that have passed the mask test without violation.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

Return values:
<AcqsPassed> Range: 0 to 10000000000000
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:SOA:RESult<n>:COUNt:WAVeforms?

Returns the number of tested acquisitions (waveforms).

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

Return values:
<AcqsCompleted> Range: 0 to 10000000000000
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

POWer<m>:SOA:RESult<n>:FRATe?

Returns the ratio of failed acquisitions to the number of tested acquisitions.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

Return values:
<FailRate> *RST: 0
Default unit: %

Usage: Query only
Asynchronous command

POWer<m>:SOA:RESult<n>[:RESult]?

Returns the summary test status.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

Return values:
<TestResult> PASS | FAIL
*RST: PASS

Usage: Query only
Asynchronous command

18.17.3.8 Power waveform

POWer<m>:EFFiciency:DISPlay:WAVeform:INPut<n>:POWer[:ENABle] 1423
POWer<m>:EFFiciency:DISPlay:WAVeform:OUTPut<n>:POWer[:ENABle] 1423
POWer<m>:EFFiciency:DISPlay:WAVeform:TOTal<n>:OPOWer[:ENABle] 1423
POWer<m>:HARMonics:DISPlay:POWer:WAVeform:ENABle 1423
POWer<m>:QUALity:DISPlay:POWer:WAVeform:ENABle 1423
POWer<m>:SWITching:DISPlay:POWer:WAVeform[:ENABle] 1423
POWer<m>:EFFiciency:INPut<n>:POWer:VERTical:OFFSet 1423
POWer<m>:EFFiciency:OUTPut<n>:POWer:VERTical:OFFSet 1423
POWer<m>:EFFiciency:TOTal<n>:OPOWer:VERTical:OFFSet 1423
POWer<m>:HARMonics:POWer:VERTical:OFFSet 1423
POWer<m>:QUALity:POWer:VERTical:OFFSet 1423

POWer<m>:SWITching:POWer:VERTical:OFFSet....1423
POWer<m>:EFFiciency:INPut<n>:POWer:VERTical:SCALe:MODE....1424
POWer<m>:EFFiciency:OUTPut<n>:POWer:VERTical:SCALe:MODE....1424
POWer<m>:EFFiciency:TOTal<n>:OPOWer:VERTical:SCALe:MODE....1424
POWer<m>:HARMonics:POWer:VERTical:SCALe:MODE....1424
POWer<m>:QUALity:POWer:VERTical:SCALe:MODE....1424
POWer<m>:SWITching:POWer:VERTical:SCALe:MODE....1424
POWer<m>:EFFiciency:INPut<n>:POWer:VERTical:SCALe[:VALue]....1424
POWer<m>:EFFiciency:OUTPut<n>:POWer:VERTical:SCALe[:VALue]....1424
POWer<m>:EFFiciency:TOTal<n>:OPOWer:VERTical:SCALe[:VALue]....1424
POWer<m>:HARMonics:POWer:VERTical:SCALe[:VALue]....1424
POWer<m>:QUALity:POWer:VERTical:SCALe[:VALue]....1424
POWer<m>:SWITching:POWer:VERTical:SCALe[:VALue]....1424

POWer<m>:EFFiciency:DISPlay:WAVeform:INPut<n>:POWer[:ENABle] <State>
POWer<m>:EFFiciency:DISPlay:WAVeform:OUTPut<n>:POWer[:ENABle] <State>
POWer<m>:EFFiciency:DISPlay:WAVeform:TOTal<n>:OPOWer[:ENABle] <State>
POWer<m>:HARMonics:DISPlay:POWer:WAVeform:ENABle <State>
POWer<m>:QUALity:DISPlay:POWer:WAVeform:ENABle <State>
POWer<m>:SWITching:DISPlay:POWer:WAVeform[:ENABle] <State>

Displays or hides the specified power waveform.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> INPut and TOTal index: omit the suffix. OUTPut index: 1 to 3 (suffix >1 requires an instrument with more than 4 channels).

Parameters:

<State> OFF | ON

Usage: Asynchronous command

Manual operation: See "Display" on page 426

POWer<m>:EFFiciency:INPut<n>:POWer:VERTical:OFFSet <VerticalOffset>
POWer<m>:EFFiciency:OUTPut<n>:POWer:VERTical:OFFSet <VerticalOffset>
POWer<m>:EFFiciency:TOTal<n>:OPOWer:VERTical:OFFSet <VerticalOffset>
POWer<m>:HARMonics:POWer:VERTical:OFFSet <VerticalOffset>
POWer<m>:QUALity:POWer:VERTical:OFFSet <VerticalOffset>
POWer<m>:SWITching:POWer:VERTical:OFFSet <VerticalOffset>

Sets the vertical offset of the power waveform if the relevant `POWer<m>:*:POWer:VERTical:SCALe:MODE` command is set to `MANual`.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> INPut and TOTal index: omit the suffix. OUTPut index: 1 to 3 (suffix >1 requires an instrument with more than 4 channels).

Parameters:

<VerticalOffset> Range: -100000000000000 to 100000000000000
Increment: 0.01
*RST: 0
Default unit: div

Usage: Asynchronous command

Manual operation: See "Offset" on page 427

POWer<m>:EFFiciency:INPut<n>:POWer:VERTical:SCALe:MODE <VertSclMd>
POWer<m>:EFFiciency:OUTPut<n>:POWer:VERTical:SCALe:MODE <VertSclMd>
POWer<m>:EFFiciency:TOTal<n>:OPOWer:VERTical:SCALe:MODE <VertSclMd>
POWer<m>:HARMonics:POWer:VERTical:SCALe:MODE <VertSclMd>
POWer<m>:QUALity:POWer:VERTical:SCALe:MODE <VertSclMd>
POWer<m>:SWITching:POWer:VERTical:SCALe:MODE <VertSclMd>

Selects the scaling mode for display of the power waveform.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> INPut and TOTal index: omit the suffix. OUTPut index: 1 to 3 (suffix >1 requires an instrument with more than 4 channels).

Parameters:

<VertSclMd> MANual | AUTO

AUTO
The instrument selects the most appropriate scale.

MANual
You can change the vertical scale and offset.

*RST: AUTO

Usage: Asynchronous command

Manual operation: See "Scale mode" on page 427

POWer<m>:EFFiciency:INPut<n>:POWer:VERTical:SCALe[:VALue] <VerticalScale>
POWer<m>:EFFiciency:OUTPut<n>:POWer:VERTical:SCALe[:VALue] <VerticalScale>
POWer<m>:EFFiciency:TOTal<n>:OPOWer:VERTical:SCALe[:VALue] <VerticalScale>
POWer<m>:HARMonics:POWer:VERTical:SCALe[:VALue] <VerticalScale>
POWer<m>:QUALity:POWer:VERTical:SCALe[:VALue] <VerticalScale>
POWer<m>:SWITching:POWer:VERTical:SCALe[:VALue] <VerticalScale>

Sets the vertical scale of the power waveform if the relevant `POWer<m>:*:POWer:VERTical:SCALe:MODE` command is set to `MANual`.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> INPut and TOTal index: omit the suffix. OUTPut index: 1 to 3 (suffix >1 requires an instrument with more than 4 channels).

Parameters:

<VerticalScale>
Range: 1E-12 to 100000000000000
Increment: 1E-05
*RST: 0.5
Default unit: V

Usage: Asynchronous command

Manual operation: See "Scale" on page 427

18.17.3.9 Reference level

POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:HYSTeresis....1426
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:HYSTeresis....1426
POWer<m>:HARMonics:REFLevel<rl>:ABSolute:HYSTeresis....1426
POWer<m>:QUALity:REFLevel<rl>:ABSolute:HYSTeresis....1426
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:LLEVel....1426
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:LLEVel....1426
POWer<m>:HARMonics:REFLevel<rl>:ABSolute:LLEVel....1426
POWer<m>:QUALity:REFLevel<rl>:ABSolute:LLEVel....1426
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:MLEVel....1427
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:MLEVel....1427
POWer<m>:HARMonics:REFLevel<rl>:ABSolute:MLEVel....1427
POWer<m>:QUALity:REFLevel<rl>:ABSolute:MLEVel....1427
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:ULEVel....1427
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:ULEVel....1427
POWer<m>:HARMonics:REFLevel<rl>:ABSolute:ULEVel....1427
POWer<m>:QUALity:REFLevel<rl>:ABSolute:ULEVel....1427
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:LMODe....1428
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:LMODe....1428
POWer<m>:HARMonics:REFLevel<rl>:LMODe....1428
POWer<m>:QUALity:REFLevel<rl>:LMODe....1428
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:HYSTeresis....1428
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:HYSTeresis....1428
POWer<m>:HARMonics:REFLevel<rl>:RELative:HYSTeresis....1428
POWer<m>:QUALity:REFLevel<rl>:RELative:HYSTeresis....1428
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:LOWer....1428
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:LOWer....1428
POWer<m>:HARMonics:REFLevel<rl>:RELative:LOWer....1429
POWer<m>:QUALity:REFLevel<rl>:RELative:LOWer....1429
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:MIDDle....1429
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:MIDDle....1429
POWer<m>:HARMonics:REFLevel<rl>:RELative:MIDDle....1429
POWer<m>:QUALity:REFLevel<rl>:RELative:MIDDle....1429
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:MODE....1429
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:MODE....1429
POWer<m>:HARMonics:REFLevel<rl>:RELative:MODE....1430
POWer<m>:QUALity:REFLevel<rl>:RELative:MODE....1430

POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:UPPer....1430
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:UPPer....1430
POWer<m>:HARMonics:REFLevel<rl>:RELative:UPPer....1430
POWer<m>:QUALity:REFLevel<rl>:RELative:UPPer....1430

POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:HYSTeresis <HystAbs>
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:HYSTeresis <HystAbs>
POWer<m>:HARMonics:REFLevel<rl>:ABSolute:HYSTeresis <HystAbs>
POWer<m>:QUALity:REFLevel<rl>:ABSolute:HYSTeresis <HystAbs>

Defines a hysteresis for the middle reference level. A rise or fall from the middle reference value that does not exceed the hysteresis is rejected as noise.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<rl> Irrelevant, omit the suffix.

<n> INPut index: omit the suffix. OUTPut index: 1 to 3 (suffix >1 requires an instrument with more than 4 channels).

Parameters:

<HystAbs>
Range: 0 to 1E+26
Increment: 0.001
*RST: 0.005
Default unit: V

Usage: Asynchronous command

Manual operation: See "Hysteresis" on page 425

POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:LLEVel <LowerLevel>
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:LLEVel <LowerLevel>
POWer<m>:HARMonics:REFLevel<rl>:ABSolute:LLEVel <LowerLevel>
POWer<m>:QUALity:REFLevel<rl>:ABSolute:LLEVel <LowerLevel>

Sets the lower reference level in absolute values. This is required, e.g., to determine a fall.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<rl> Irrelevant, omit the suffix.

<n> INPut index: omit the suffix. OUTPut index: 1 to 3 (suffix >1 requires an instrument with more than 4 channels).

Parameters:

<LowerLevel>
Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "Upper level, Middle level, Lower level" on page 422

POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:MLEVel <MiddleLevel>
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:MLEVel <MiddleLevel>
POWer<m>:HARMonics:REFLevel<rl>:ABSolute:MLEVel <MiddleLevel>
POWer<m>:QUALity:REFLevel<rl>:ABSolute:MLEVel <MiddleLevel>

Sets the middle reference level in absolute values.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<rl> Irrelevant, omit the suffix.

<n> INPut index: omit the suffix. OUTPut index: 1 to 3 (suffix >1 requires an instrument with more than 4 channels).

Parameters:
<MiddleLevel>
Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "Upper level, Middle level, Lower level" on page 422

POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:ULEVel <UpperLevel>
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:ULEVel <UpperLevel>
POWer<m>:HARMonics:REFLevel<rl>:ABSolute:ULEVel <UpperLevel>
POWer<m>:QUALity:REFLevel<rl>:ABSolute:ULEVel <UpperLevel>

Sets the upper reference level in absolute values. This is required to determine a rise.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<rl> Irrelevant, omit the suffix.

<n> INPut index: omit the suffix. OUTPut index: 1 to 3 (suffix >1 requires an instrument with more than 4 channels).

Parameters:
<UpperLevel>
Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "Upper level, Middle level, Lower level" on page 422

POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:LMODe <LevelMode>
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:LMODe <LevelMode>
POWer<m>:HARMonics:REFLevel<rl>:LMODe <LevelMode>
POWer<m>:QUALity:REFLevel<rl>:LMODe <LevelMode>

Defines if the reference level is set in absolute or relative values.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<rl> Irrelevant, omit the suffix.

<n> INPut index: omit the suffix. OUTPut index: 1 to 3 (suffix >1 requires an instrument with more than 4 channels).

Parameters:
<LevelMode> ABS | REL
*RST: REL

Usage: Asynchronous command

Manual operation: See "Level mode" on page 422

POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:HYSTeresis <HystRel>
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:HYSTeresis <HystRel>
POWer<m>:HARMonics:REFLevel<rl>:RELative:HYSTeresis <HystRel>
POWer<m>:QUALity:REFLevel<rl>:RELative:HYSTeresis <HystRel>

Defines a hysteresis for the middle reference level. A rise or fall from the middle reference value that does not exceed the hysteresis is rejected as noise.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<rl> Irrelevant, omit the suffix.

<n> INPut index: omit the suffix. OUTPut index: 1 to 3 (suffix >1 requires an instrument with more than 4 channels).

Parameters:
<HystRel> Range: 0 to 50
Increment: 1
*RST: 10
Default unit: %

Usage: Asynchronous command

Manual operation: See "Hysteresis" on page 425

POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:LOWer <LowRefLevRel>
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:LOWer <LowRefLevRel>

POWer<m>:HARMonics:REFLevel<rl>:RELative:LOWer <LowRefLevRel>
POWer<m>:QUALity:REFLevel<rl>:RELative:LOWer <LowRefLevRel>

Sets the lower relative reference level if `POWer<m>:QUALity:REFLevel<rl>:RELative:MODE` is set to `USER`.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<rl> Irrelevant, omit the suffix.

<n> INPut index: omit the suffix. OUTPut index: 1 to 3 (suffix >1 requires an instrument with more than 4 channels).

Parameters:

<LowRefLevRel>
Range: -100 to 200
Increment: 1
*RST: 10
Default unit: %

Usage: Asynchronous command

Manual operation: See "Upper level, Middle level,Lower level" on page 424

POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:MIDDle <MidRefLevRel>
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:MIDDle <MidRefLevRel>
POWer<m>:HARMonics:REFLevel<rl>:RELative:MIDDle <MidRefLevRel>
POWer<m>:QUALity:REFLevel<rl>:RELative:MIDDle <MidRefLevRel>

Sets the middle relative reference level if `POWer<m>:QUALity:REFLevel<rl>:RELative:MODE` is set to `USER`.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<rl> Irrelevant, omit the suffix.

<n> INPut index: omit the suffix. OUTPut index: 1 to 3 (suffix >1 requires an instrument with more than 4 channels).

Parameters:

<MidRefLevRel>
Range: -100 to 200
Increment: 1
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "Upper level, Middle level,Lower level" on page 424

POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:MODE <RelativeLevels>
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:MODE <RelativeLevels>

POWer<m>:HARMonics:REFLevel<rl>:RELative:MODE <RelativeLevels>
POWer<m>:QUALity:REFLevel<rl>:RELative:MODE <RelativeLevels>

The lower, middle and upper reference levels, defined as percentages of the high signal level.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<rl> Irrelevant, omit the suffix.

<n> INPut index: omit the suffix. OUTPut index: 1 to 3 (suffix >1 requires an instrument with more than 4 channels).

Parameters:

<RelativeLevels> FIVE | TEN | TWENty | USER

FIVE
5/50/95

TEN
10/50/90

TWENty
20/50/80

USER
Set the reference levels to individual values with `POWer<m>:QUALity:REFLevel<rl>:RELative:LOWer`, `POWer<m>:QUALity:REFLevel<rl>:RELative:MIDDle`, and `POWer<m>:QUALity:REFLevel<rl>:RELative:UPPer`.

*RST: TEN

Usage: Asynchronous command

Manual operation: See "Relative levels" on page 423

POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:UPPer <UppRefLevRel>
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:UPPer <UppRefLevRel>
POWer<m>:HARMonics:REFLevel<rl>:RELative:UPPer <UppRefLevRel>
POWer<m>:QUALity:REFLevel<rl>:RELative:UPPer <UppRefLevRel>

Sets the upper relative reference level if `POWer<m>:QUALity:REFLevel<rl>:RELative:MODE` on page 1430 is set to `USER`.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<rl> Irrelevant, omit the suffix.

<n> INPut index: omit the suffix. OUTPut index: 1 to 3 (suffix >1 requires an instrument with more than 4 channels).

Parameters:

<UppRefLevRel>
Range: -100 to 200
Increment: 1
*RST: 90
Default unit: %

Usage: Asynchronous command

Manual operation: See "Upper level, Middle level,Lower level" on page 424

18.17.3.10 Power analysis data

This section describes the commands for exporting power analysis measurement data.

POWer<m>:EFFiciency:INPut<n>:POWer:DATA:HEADer?....1431
POWer<m>:EFFiciency:OUTPut<n>:POWer:DATA:HEADer?....1431
POWer<m>:EFFiciency:TOTal<n>:OPOWer:DATA:HEADer?....1431
POWer<m>:HARMonics:POWer:DATA:HEADer?....1431
POWer<m>:QUALity:POWer:DATA:HEADer?....1431
POWer<m>:SWITching:POWer:DATA:HEADer?....1431
POWer<m>:EFFiciency:INPut<n>:POWer:DATA[:VALues]?....1432
POWer<m>:EFFiciency:OUTPut<n>:POWer:DATA[:VALues]?....1432
POWer<m>:EFFiciency:TOTal<n>:OPOWer:DATA[:VALues]?....1432
POWer<m>:HARMonics:POWer:DATA[:VALues]?....1432
POWer<m>:QUALity:POWer:DATA[:VALues]?....1432
POWer<m>:SWITching:POWer:DATA[:VALues]?....1432

POWer<m>:EFFiciency:INPut<n>:POWer:DATA:HEADer?
POWer<m>:EFFiciency:OUTPut<n>:POWer:DATA:HEADer?
POWer<m>:EFFiciency:TOTal<n>:OPOWer:DATA:HEADer?
POWer<m>:HARMonics:POWer:DATA:HEADer?
POWer<m>:QUALity:POWer:DATA:HEADer?
POWer<m>:SWITching:POWer:DATA:HEADer?

Returns the header of the power analysis waveform data. The header contains the attributes of the waveform.

For power harmonics measurements, data is only available if `POWer<m>:HARMonics:STANdard` is set to `ENC` or `END`.

Suffix:

<m> 1 to 6, index of the power analysis measurement

Return values:

<XStart> 1. header value: start time in s

<XStop> 2. header value: end time in s

<RecordLength> 3. header value: record length of the waveform in samples

<ValuesPerSample> 4. header value: number of values per sample. For power quality measurements, the value is 1.

Usage: Query only
Asynchronous command

POWer<m>:EFFiciency:INPut<n>:POWer:DATA[:VALues]? [<Offset>[,<Length>]]
POWer<m>:EFFiciency:OUTPut<n>:POWer:DATA[:VALues]? [<Offset>[,<Length>]]
POWer<m>:EFFiciency:TOTal<n>:OPOWer:DATA[:VALues]? [<Offset>[,<Length>]]
POWer<m>:HARMonics:POWer:DATA[:VALues]? [<Offset>[,<Length>]]
POWer<m>:QUALity:POWer:DATA[:VALues]? [<Offset>[,<Length>]]
POWer<m>:SWITching:POWer:DATA[:VALues]? [<Offset>[,<Length>]]

Returns the data of the power analysis waveform points for transmission from the instrument to the controlling computer.

Without parameters, the complete waveform is retrieved. Using the offset and length parameters, data can be retrieved in smaller portions, which makes the command faster. If you send only one parameter, it is interpreted as offset, and the data is retrieved from offset to the end of the waveform.

To set the export format, use `FORMat[:DATA]`.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Query parameters:
<Offset> Number of offset waveform points to be skipped.

<Length> Number of waveform points to be retrieved.

Return values:
<Data> List of comma-separated values according to the format and content settings.

Usage: Query only
Asynchronous command

18.17.4 3-phase power analysis (option R&S MXO5-K333)

Some of the commands in the following section are asynchronous. An overlapping or asynchronous command does not automatically finish executing before the next command starts executing. If overlapping commands must be executed in a defined order, e.g. to avoid wrong measurement results, they must be serviced sequentially.

To prevent an overlapping execution of commands, one of the commands `*OPC`, `*OPC?` or `*WAI` can be used after the command or a command set.

For more information, see:

- www.rohde-schwarz.com/rc-via-scpi, section "Command sequence and synchronization"

- 3-phase general settings 1433
- 3-phase power quality 1434
- 3-phase power harmonics 1448
- 3-phase power efficiency 1455

- 3-phase power sources....1460
- 3-phase power waveform....1464
- 3-phase reference level....1468
- 3-phase power analysis data....1473

18.17.4.1 3-phase general settings

P3PHase<m>[:ENABle]....1433
P3PHase<m>:TYPE....1433
EXPort:RESult:SELect:P3PHase<m>....1433

P3PHase<m>[:ENABle] <State>

Enables the 3-phase power measurement instance.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<State> OFF | ON

Usage: Asynchronous command

Manual operation: See "+ Add" on page 429

P3PHase<m>:TYPE <Type>

Sets the type for the respective 3-phase power analysis measurement.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<Type> P3Quality | P3Harmonics | P3EFficiency

P3Quality = 3-phase power quality
P3Harmonics = 3-phase power harmonics
P3EFficiency = 3-phase power efficiency

Example: `P3PH1:TYPE P3Q`
Sets the first power analysis measurement to quality.

Usage: Asynchronous command

Manual operation: See "+ Add" on page 429

EXPort:RESult:SELect:P3PHase<m> <ExportResults>

If enabled, includes the results of selected 3-phase power analysis measurement in the results export file.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<ExportResults> OFF | ON
*RST: OFF

Usage: Asynchronous command

18.17.4.2 3-phase power quality

- 3-phase power quality setup 1434
- 3-phase phasor diagram 1435
- 3-phase power quality measurement display 1436
- 3-phase power quality results 1440

3-phase power quality setup

P3PHase<m>:QUALity:FREQuency[:VALue] 1434
P3PHase<m>:QUALity:FREQuency:USER 1434

P3PHase<m>:QUALity:FREQuency[:VALue] <FundamFreq>

Sets the input frequency of the source signal in Hz.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<FundamFreq> F50 | F60 | F400 | USER | AUTO
*RST: AUTO

Usage: Asynchronous command

Manual operation: See "Fund. frequency" on page 439

P3PHase<m>:QUALity:FREQuency:USER <UsrFundamFreq>

Sets the horizontal timebase to control the time scale of the waveform display.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<UsrFundamFreq> Range: 10 to 1000000
Increment: 1
*RST: 50
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "User Frequency" on page 439

3-phase phasor diagram

P3PHase<m>:QUALity:PHASor[:ENABle] 1435
P3PHase<m>:QUALity:PHASor:VOLTage:OFFSet 1435
P3PHase<m>:QUALity:PHASor:CURRent:OFFSet 1435
P3PHase<m>:QUALity:PHASor:VOLTage:MAXimum 1435
P3PHase<m>:QUALity:PHASor:CURRent:MAXimum 1435
P3PHase<m>:QUALity:PHASor:FSCReen 1436

P3PHase<m>:QUALity:PHASor[:ENABle] <State>

Enables the phasor measurement for the 3-phase power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "State" on page 440

P3PHase<m>:QUALity:PHASor:VOLTage:OFFSet <VoltageOffset>
P3PHase<m>:QUALity:PHASor:CURRent:OFFSet <CurrentOffset>

Sets the inner point of the phasor diagram.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<CurrentOffset>
Range: -100000 to 100000
Increment: 0.1
*RST: 0
Default unit: A

Usage: Asynchronous command

Manual operation: See "Offset" on page 440

P3PHase<m>:QUALity:PHASor:VOLTage:MAXimum <VoltageMaximum>
P3PHase<m>:QUALity:PHASor:CURRent:MAXimum <CurrentMaximum>

Sets the outer circumference of the phasor diagram.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<CurrentMaximum>
Range: -100000 to 100000
Increment: 0.1
*RST: 3
Default unit: A

Usage: Asynchronous command

Manual operation: See "Maximum" on page 441

P3PHase<m>:QUALity:PHASor:FSCReen

Selects the most appropriate scale for the voltage and current phasors.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Usage: Setting only
Asynchronous command

Manual operation: See "Fit to Screen" on page 441

3-phase power quality measurement display

P3PHase<m>:QUALity:DISPlay:CURRent:CREStfactor<n>[:ENABle] 1436
P3PHase<m>:QUALity:DISPlay:CURRent:PEAK<n>[:ENABle] 1436
P3PHase<m>:QUALity:DISPlay:CURRent:RMS<n>[:ENABle] 1437
P3PHase<m>:QUALity:DISPlay:POWer<n>:ACTive[:ENABle] 1437
P3PHase<m>:QUALity:DISPlay:POWer<n>:APParent[:ENABle] 1437
P3PHase<m>:QUALity:DISPlay:POWer<n>:PFACtor[:ENABle] 1438
P3PHase<m>:QUALity:DISPlay:POWer<n>:PHASe[:ENABle] 1438
P3PHase<m>:QUALity:DISPlay:POWer<n>:REACtive[:ENABle] 1438
P3PHase<m>:QUALity:DISPlay:VOLTage:CREStfactor<n>[:ENABle] 1439
P3PHase<m>:QUALity:DISPlay:VOLTage:FREQuency<n>[:ENABle] 1439
P3PHase<m>:QUALity:DISPlay:VOLTage:PEAK<n>[:ENABle] 1439
P3PHase<m>:QUALity:DISPlay:VOLTage:RMS<n>[:ENABle] 1439

P3PHase<m>:QUALity:DISPlay:CURRent:CREStfactor<n>[:ENABle]
<DisplayState>

Enables the current crest factor measurement for individual phases for the 3-phase power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Parameters:
<DisplayState> OFF | ON
*RST: ON

Usage: Asynchronous command

P3PHase<m>:QUALity:DISPlay:CURRent:PEAK<n>[:ENABle] <DisplayState>

Enables the current peak value measurement for individual phases for the 3-phase power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Parameters:
<DisplayState> OFF | ON

*RST: ON

Usage: Asynchronous command

P3PHase<m>:QUALity:DISPlay:CURRent:RMS<n>[:ENABle] <DisplayState>

Enables the current RMS measurement for individual phases for the 3-phase power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Parameters:
<DisplayState> OFF | ON

*RST: ON

Usage: Asynchronous command

P3PHase<m>:QUALity:DISPlay:POWer<n>:ACTive[:ENABle] <DisplayState>

Enables the active measurement for individual phases for the 3-phase power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Parameters:
<DisplayState> OFF | ON

*RST: ON

Usage: Asynchronous command

P3PHase<m>:QUALity:DISPlay:POWer<n>:APParent[:ENABle] <DisplayState>

Enables the apparent power measurement for individual phases for the 3-phase power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Parameters:
<DisplayState> OFF | ON
*RST: ON

Usage: Asynchronous command

P3PHase<m>:QUALity:DISPlay:POWer<n>:PFACtor[:ENABle] <DisplayState>

Enables the power factor measurement for individual phases for the 3-phase power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement
<n> 1...3, index of the individual phase

Parameters:
<DisplayState> OFF | ON
*RST: ON

Usage: Asynchronous command

P3PHase<m>:QUALity:DISPlay:POWer<n>:PHASe[:ENABle] <DisplayState>

Enables the power phase measurement for individual phases for the 3-phase power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement
<n> 1...3, index of the individual phase

Parameters:
<DisplayState> OFF | ON
*RST: ON

Usage: Asynchronous command

P3PHase<m>:QUALity:DISPlay:POWer<n>:REACtive[:ENABle] <DisplayState>

Enables the reactive power measurement for individual phases for the 3-phase power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement
<n> 1...3, index of the individual phase

Parameters:
<DisplayState> OFF | ON
*RST: ON

Usage: Asynchronous command

P3PHase<m>:QUALity:DISPlay:VOLTage:CREStfactor<n>[:ENABle]
<DisplayState>

Enables the voltage crest factor measurement for individual phases for the 3-phase power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Parameters:
<DisplayState> OFF | ON

*RST: ON

Usage: Asynchronous command

P3PHase<m>:QUALity:DISPlay:VOLTage:FREQuency<n>[:ENABle]
<DisplayState>

Enables the voltage frequency measurement for individual phases for the 3-phase power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Parameters:
<DisplayState> OFF | ON

*RST: ON

Usage: Asynchronous command

P3PHase<m>:QUALity:DISPlay:VOLTage:PEAK<n>[:ENABle] <DisplayState>

Enables the voltage peak value measurement for individual phases for the 3-phase power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Parameters:
<DisplayState> OFF | ON

*RST: ON

Usage: Asynchronous command

P3PHase<m>:QUALity:DISPlay:VOLTage:RMS<n>[:ENABle] <DisplayState>

Enables the voltage RMS measurement for individual phases for the 3-phase power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Parameters:
<DisplayState> OFF | ON
*RST: ON

Usage: Asynchronous command

3-phase power quality results

P3PHase<m>:QUALity:RESult:CSOurce:FREQuency<n>[:ACTual]?....1440
P3PHase<m>:QUALity:RESult:CURRent:CREStfactor<n>[:ACTual]?....1441
P3PHase<m>:QUALity:RESult:TOTal:CURRent:CREStfactor<n>[:ACTual]?....1441
P3PHase<m>:QUALity:RESult:CURRent:PEAK<n>[:ACTual]?....1441
P3PHase<m>:QUALity:RESult:TOTal:CURRent:PEAK<n>[:ACTual]?....1442
P3PHase<m>:QUALity:RESult:CURRent:RMS<n>[:ACTual]?....1442
P3PHase<m>:QUALity:RESult:TOTal:CURRent:RMS<n>[:ACTual]?....1442
P3PHase<m>:QUALity:RESult:POWer:ACTive<n>[:ACTual]?....1443
P3PHase<m>:QUALity:RESult:TOTal:POWer:ACTive<n>[:ACTual]?....1443
P3PHase<m>:QUALity:RESult:POWer:APParent<n>[:ACTual]?....1443
P3PHase<m>:QUALity:RESult:TOTal:POWer:APParent<n>[:ACTual]?....1443
P3PHase<m>:QUALity:RESult:POWer:PFACtor<n>[:ACTual]?....1444
P3PHase<m>:QUALity:RESult:TOTal:POWer:PFACtor<n>[:ACTual]?....1444
P3PHase<m>:QUALity:RESult:POWer:PHASe<n>[:ACTual]?....1444
P3PHase<m>:QUALity:RESult:TOTal:POWer:PHASe<n>[:ACTual]?....1445
P3PHase<m>:QUALity:RESult:POWer:REACtive<n>[:ACTual]?....1445
P3PHase<m>:QUALity:RESult:TOTal:POWer:REACtive<n>[:ACTual]?....1445
P3PHase<m>:QUALity:RESult:VOLTage:CREStfactor<n>[:ACTual]?....1446
P3PHase<m>:QUALity:RESult:TOTal:VOLTage:CREStfactor<n>[:ACTual]?....1446
P3PHase<m>:QUALity:RESult:VOLTage:PEAK<n>[:ACTual]?....1446
P3PHase<m>:QUALity:RESult:TOTal:VOLTage:PEAK<n>[:ACTual]?....1447
P3PHase<m>:QUALity:RESult:VOLTage:RMS<n>[:ACTual]?....1447
P3PHase<m>:QUALity:RESult:TOTal:VOLTage:RMS<n>[:ACTual]?....1447
P3PHase<m>:QUALity:PHASor:RESult:VOLTage<n>:ANGLe[:ACTual]?....1448

P3PHase<m>:QUALity:RESult:CSOurce:FREQuency<n>[:ACTual]?

Returns the cycle source frequency of each channel for the 3-phase power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:QUALity:RESult:CURRent:CREStfactor<n>[:ACTual]?

Returns the current crest factors for individual phases for the 3-phase power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Return values:
<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:QUALity:RESult:TOTal:CURRent:CREStfactor<n>[:ACTual]?

Returns the current total crest factor for the 3-phase power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

Return values:
<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:QUALity:RESult:CURRent:PEAK<n>[:ACTual]?

Returns the current peak values for individual phases for the 3-phase power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Return values:
<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:QUALity:RESult:TOTal:CURRent:PEAK<n>[:ACTual]?

Returns the total current peak values for the 3-phase power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

Return values:
<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:QUALity:RESult:CURRent:RMS<n>[:ACTual]?

Returns the current RMS values for individual phases for the 3-phase power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Return values:
<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:QUALity:RESult:TOTal:CURRent:RMS<n>[:ACTual]?

Returns the current total RMS for the 3-phase power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

Return values:
<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:QUALity:RESult:POWer:ACTive<n>[:ACTual]?

Returns the active power for individual phases for the 3-phase power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Return values:
<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:QUALity:RESult:TOTal:POWer:ACTive<n>[:ACTual]?

Returns the total active power for the 3-phase power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

Return values:
<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:QUALity:RESult:POWer:APParent<n>[:ACTual]?

Returns the apparent power for individual phases for the 3-phase power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Return values:
<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:QUALity:RESult:TOTal:POWer:APParent<n>[:ACTual]?

Returns the total apparent power for the 3-phase power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

Return values:
<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:QUALity:RESult:POWer:PFACtor<n>[:ACTual]?

Returns the power factor for individual phases for the 3-phase power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Return values:
<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:QUALity:RESult:TOTal:POWer:PFACtor<n>[:ACTual]?

Returns the total power factor for the 3-phase power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

Return values:
<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:QUALity:RESult:POWer:PHASe<n>[:ACTual]?

Returns the phase values for individual phases for the 3-phase power quality analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Return values:

<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:QUALity:RESult:TOTal:POWer:PHASe<n>[:ACTual]?

Returns the total phase value for the 3-phase power quality analysis.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

Return values:

<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:QUALity:RESult:POWer:REACtive<n>[:ACTual]?

Returns the reactive power for individual phases for the 3-phase power quality analysis.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Return values:

<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:QUALity:RESult:TOTal:POWer:REACtive<n>[:ACTual]?

Returns the total reactive power for the 3-phase power quality analysis.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

Return values:

<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:QUALity:RESult:VOLTage:CREStfactor<n>[:ACTual]?

Returns the voltage crest factors for individual phases for the 3-phase power quality analysis.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Return values:

<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:QUALity:RESult:TOTal:VOLTage:CREStfactor<n>[:ACTual]?

Returns the total voltage crest factor for the 3-phase power quality analysis.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

Return values:

<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:QUALity:RESult:VOLTage:PEAK<n>[:ACTual]?

Returns the voltage peak values for individual phases for the 3-phase power quality analysis.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Return values:

<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:QUALity:RESult:TOTal:VOLTage:PEAK<n>[:ACTual]?

Returns the total voltage peak value for the 3-phase power quality analysis.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

Return values:

<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:QUALity:RESult:VOLTage:RMS<n>[:ACTual]?

Returns the voltage RMS values for individual phases for the 3-phase power quality analysis.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Return values:

<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:QUALity:RESult:TOTal:VOLTage:RMS<n>[:ACTual]?

Returns the total voltage RMS value for the 3-phase power quality analysis.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> Irrelevant, omit the suffix.

Return values:

<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:QUALity:PHASor:RESult:VOLTage<n>:ANGLe[:ACTual]?

Returns the voltage angle of the selected phasor phase relative to phase 1.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Return values:

<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

18.17.4.3 3-phase power harmonics

- 3-phase power harmonics setup 1448
- 3-phase bar graph 1451
- 3-phase power harmonics results 1453

3-phase power harmonics setup

P3PHase<m>:HARMonics:STANdard 1448
P3PHase<m>:HARMonics:REVision 1449
P3PHase<m>:HARMonics:FREQuency:EN 1449
P3PHase<m>:HARMonics:FREQuency:MIL 1449
P3PHase<m>:HARMonics:PFACtor:MODE 1450
P3PHase<m>:HARMonics:PFACtor:USER 1450
P3PHase<m>:HARMonics:RPOWer:MODE 1450
P3PHase<m>:HARMonics:RPOWer:USER 1451

P3PHase<m>:HARMonics:STANdard <Limits>

Sets a standard for the current harmonic measurement.

Suffix:

<m> 1 to 6, index of the power analysis measurement

Parameters:

<Limits> ENA | ENB | ENC | END | MIL

`ENA`: EN 61000-3-2 Class A
`ENB`: EN 61000-3-2 Class B

ENC: EN 61000-3-2 Class C
END: EN 61000-3-2 Class D
MIL: MIL-STD-1399

*RST: ENA

Usage: Asynchronous command

Manual operation: See "Standard, Revision" on page 446

P3PHase<m>:HARMonics:REVision <Revision>

Selects the revision of the EN61000 standard, if P3PHase<m>:HARMonics:STANdard is set to ENA / ENB / ENC / END.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<Revision> REV2011 | REV2019

*RST: REV2019

Usage: Asynchronous command

Manual operation: See "Standard, Revision" on page 446

P3PHase<m>:HARMonics:FREQuency:EN <FundamFreqEN61000>

Sets the fundamental frequency of the input signal for the EN61000 standard, if P3PHase<m>:HARMonics:STANdard is set to ENA / ENB / ENC / END.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<FundamFreqEN61000> F50 | F60 | AUTO

*RST: AUTO

Usage: Asynchronous command

Manual operation: See "Fund. frequency" on page 447

P3PHase<m>:HARMonics:FREQuency:MIL <FundamFreqMIL>

Sets the fundamental frequency of the input signal for the MIL-STD-1399 standard, if P3PHase<m>:HARMonics:STANdard is set to MIL.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<FundamFreqMIL> F60 | F400

*RST: F60

Usage: Asynchronous command

Manual operation: See "Fund. frequency" on page 447

P3PHase<m>:HARMonics:PFACtor:MODE <PowFactMd>

Available if `P3PHase<m>:HARMonics:STANdard` is set to `ENC`.

Selects if the power factor is defined automatically, or a user-defined value is used (`P3PHase<m>:HARMonics:PFACtor:USER`).

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<PowFactMd> AUTO | USER
*RST: AUTO

Usage: Asynchronous command

Manual operation: See "Power factor" on page 447

P3PHase<m>:HARMonics:PFACtor:USER <UsrPowFact>

Available if `P3PHase<m>:HARMonics:STANdard` is set to `ENC` and `P3PHase<m>:HARMonics:PFACtor:MODE` is set to `USER`.

Sets a user-defined power factor.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<UsrPowFact> Range: 0 to 100
Increment: 1
*RST: 100
Default unit: %

Usage: Asynchronous command

Manual operation: See "Power factor" on page 447

P3PHase<m>:HARMonics:RPOWer:MODE <ActPowMd>

Available if `P3PHase<m>:HARMonics:STANdard` is set to `END`.

Selects if the power factor is defined automatically, or a user-defined value is used (`P3PHase<m>:HARMonics:RPOWer:USER`).

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<ActPowMd> AUTO | USER
*RST: AUTO

Usage: Asynchronous command

Manual operation: See "Real power, Power" on page 447

P3PHase<m>:HARMonics:RPOWer:USER <UsrActPow>

Available if `P3PHase<m>:HARMonics:STANdard` is set to `END` and `P3PHase<m>:HARMonics:RPOWer:USER` is set to `USER`.

Sets a user-defined real power value.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<UsrActPow>
Range: 0 to 10000
Increment: 1
*RST: 100
Default unit: W

Usage: Asynchronous command

Manual operation: See "Real power, Power" on page 447

3-phase bar graph

P3PHase<m>:HARMonics:DISPlay:BARGraph[:ENABle] 1451
P3PHase<m>:HARMonics:DISPlay:HARMonics[:DISPlay] 1451
P3PHase<m>:HARMonics:DISPlay:BARGraph:VERTical:SCALe:TYPE 1452
P3PHase<m>:HARMonics:DISPlay:HARMonics:STARt[:VALue] 1452
P3PHase<m>:HARMonics:DISPlay:HARMonics:STOP[:VALue] 1452

P3PHase<m>:HARMonics:DISPlay:BARGraph[:ENABle] <State>

Displays or hides the bar graph.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<State>
OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "State" on page 448

P3PHase<m>:HARMonics:DISPlay:HARMonics[:DISPlay] <DispedHarmonics>

Selects which harmonics are displayed in the bar graph: all, odd even or depending on the standard definition.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<DispedHarmonics> ALL | EVEN | ODD | STANdard
*RST: STANdard

Usage: Asynchronous command

Manual operation: See "Displ. harmonics" on page 448

P3PHase<m>:HARMonics:DISPlay:BARGraph:VERTical:SCALe:TYPE <Scaling>

Selects a logarithmic or linear scale for the display for the harmonics bar graph.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<Scaling> LIN | LOG
*RST: LIN

Usage: Asynchronous command

Manual operation: See "Scale type" on page 448

P3PHase<m>:HARMonics:DISPlay:HARMonics:STARt[:VALue] <BarGraphStart>

Sets the first harmonic to be shown in the bar graph.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<BarGraphStart> Range: 1 to 37
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Start harmonic" on page 448

P3PHase<m>:HARMonics:DISPlay:HARMonics:STOP[:VALue] <BarGraphStop>

Sets the last harmonic to be shown in the bar graph.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<BarGraphStop> Range: 3 to 40
Increment: 1
*RST: 40

Usage: Asynchronous command

Manual operation: See "Max harmonic" on page 448

3-phase power harmonics results

P3PHase<m>:HARMonics:AVAilable<n> 1453
P3PHase<m>:HARMonics:MEASurement:CSOurce:FREQuency<n>[:ACTual]? 1453
P3PHase<m>:HARMonics:MEASurement:POWer<n>:ACTive[:ACTual]? 1453
P3PHase<m>:HARMonics:MEASurement:THDFundament<n>[:ACTual]? 1454
P3PHase<m>:HARMonics:MEASurement:THDRms<n>[:ACTual]? 1454
P3PHase<m>:HARMonics:RESult<n>:VIOLation<o>? 1454
P3PHase<m>:HARMonics:RESult<n>[:FREQuency]? 1454
P3PHase<m>:HARMonics:RESult<n>:MAGNitude<o>:PERCent[:ACTual]? 1455
P3PHase<m>:HARMonics:RESult<n>:MAGNitude<o>:RMS[:ACTual]? 1455

P3PHase<m>:HARMonics:AVAilable<n>

Returns the number of measured harmonics for the individual phases.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Return values:
<Count>

Usage: Asynchronous command

P3PHase<m>:HARMonics:MEASurement:CSOurce:FREQuency<n>[:ACTual]?

Returns the cycle source frequency of each channel for the 3-phase power harmonics analysis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:HARMonics:MEASurement:POWer<n>:ACTive[:ACTual]?

Returns the active power for the individual phases.. Only available, if `P3PHase<m>:HARMonics:STANdard` is set to `ENC / END`.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Usage: Query only
Asynchronous command

P3PHase<m>:HARMonics:MEASurement:THDFundament<n>[:ACTual]?

Returns the total harmonic distortion relative to fundamental (THDF) for the individual phases.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Usage: Query only
Asynchronous command

P3PHase<m>:HARMonics:MEASurement:THDRms<n>[:ACTual]?

Returns the total harmonic distortion relative to the RMS amplitude (THD RMS) for the individual phases.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Usage: Query only
Asynchronous command

P3PHase<m>:HARMonics:RESult<n>:VIOLation<o>?

Queries if the value of o-th harmonic is within the defined limit for the current measurement for the individual phases.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

<o> 1...n, index of the harmonics

Return values:
<Harmonic>

Usage: Query only
Asynchronous command

P3PHase<m>:HARMonics:RESult<n>[:FREQuency]?

Returns the frequency of the n-th harmonic.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...n, index of the harmonics

Return values:
<Harmonic>

Usage: Query only
Asynchronous command

P3PHase<m>:HARMonics:RESult<n>:MAGNitude<o>:PERCent[:ACTual]?

Returns the magnitude of the o-th harmonic in percent for the individual phases.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

<o> 1...n, index of the harmonics

Return values:
<Harmonic>

Usage: Query only
Asynchronous command

P3PHase<m>:HARMonics:RESult<n>:MAGNitude<o>:RMS[:ACTual]?

Returns the magnitude of the o-th harmonic as RMS for the individual phases.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

<o> 1...n, index of the harmonics

Return values:
<Harmonic>

Usage: Query only
Asynchronous command

18.17.4.4 3-phase power efficiency

- 3-phase power efficiency setup....1455
- 3-phase power efficiency results....1456

3-phase power efficiency setup

P3PHase<m>:EFFiciency:STATistic:ENABle....1456
P3PHase<m>:EFFiciency:STATistic:RESet....1456
P3PHase<m>:EFFiciency:STATistic:WFMCount?....1456

P3PHase<m>:EFFiciency:STATistic:ENABle <EnabStatistics>

Enable the statistical calculation for the selected 3-phase efficiency measurement.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<EnabStatistics> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Statistics" on page 452

P3PHase<m>:EFFiciency:STATistic:RESet

Restarts the statistical calculation for the selected 3-phase efficiency measurement.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Usage: Setting only
Asynchronous command

Manual operation: See "Clear results" on page 453

P3PHase<m>:EFFiciency:STATistic:WFMCount?

Returns the number of waveforms included in the 3-phase efficiency measurement.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<WaveformCount>

Usage: Query only
Asynchronous command

Manual operation: See "Statistics" on page 452

3-phase power efficiency results

See "Overview of statistic results" on page 1366.

P3PHase<m>:EFFiciency:RESult:INPut<n>:TOTal:POWer[:ACTual]? 1457
P3PHase<m>:EFFiciency:RESult:OUTPut<n>:TOTal:POWer[:ACTual]? 1457
P3PHase<m>:EFFiciency:TOTal:EFFiciency:RESult[:ACTual]? 1457
P3PHase<m>:EFFiciency:RESult:INPut<n>:TOTal:POWer:AVERage? 1457
P3PHase<m>:EFFiciency:RESult:OUTPut<n>:TOTal:POWer:AVERage? 1457
P3PHase<m>:EFFiciency:TOTal:EFFiciency:RESult:AVERage? 1457
P3PHase<m>:EFFiciency:RESult:INPut<n>:TOTal:POWer:EVTCount? 1458
P3PHase<m>:EFFiciency:RESult:OUTPut<n>:TOTal:POWer:EVTCount? 1458
P3PHase<m>:EFFiciency:TOTal:EFFiciency:RESult:EVTCount? 1458

P3PHase<m>:EFFiciency:RESult:INPut<n>:TOTal:POWer:NPEak?....1458
P3PHase<m>:EFFiciency:RESult:OUTPut<n>:TOTal:POWer:NPEak?....1458
P3PHase<m>:EFFiciency:TOTal:EFFiciency:RESult:NPEak?....1458
P3PHase<m>:EFFiciency:RESult:INPut<n>:TOTal:POWer:PPEak?....1458
P3PHase<m>:EFFiciency:RESult:OUTPut<n>:TOTal:POWer:PPEak?....1458
P3PHase<m>:EFFiciency:TOTal:EFFiciency:RESult:PPEak?....1458
P3PHase<m>:EFFiciency:RESult:INPut<n>:TOTal:POWer:RMS?....1459
P3PHase<m>:EFFiciency:RESult:OUTPut<n>:TOTal:POWer:RMS?....1459
P3PHase<m>:EFFiciency:TOTal:EFFiciency:RESult:RMS?....1459
P3PHase<m>:EFFiciency:RESult:INPut<n>:TOTal:POWer:STDDev?....1459
P3PHase<m>:EFFiciency:RESult:OUTPut<n>:TOTal:POWer:STDDev?....1459
P3PHase<m>:EFFiciency:TOTal:EFFiciency:RESult:STDDev?....1459
P3PHase<m>:EFFiciency:RESult:INPut<n>:TOTal:POWer:WFMCount?....1459
P3PHase<m>:EFFiciency:RESult:OUTPut<n>:TOTal:POWer:WFMCount?....1459
P3PHase<m>:EFFiciency:TOTal:EFFiciency:RESult:WFMCount?....1459

P3PHase<m>:EFFiciency:RESult:INPut<n>:TOTal:POWer[:ACTual]?
P3PHase<m>:EFFiciency:RESult:OUTPut<n>:TOTal:POWer[:ACTual]?
P3PHase<m>:EFFiciency:TOTal:EFFiciency:RESult[:ACTual]?

Returns the current result value for the total input and output power and total efficiency.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<Actual> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:EFFiciency:RESult:INPut<n>:TOTal:POWer:AVERage?
P3PHase<m>:EFFiciency:RESult:OUTPut<n>:TOTal:POWer:AVERage?
P3PHase<m>:EFFiciency:TOTal:EFFiciency:RESult:AVERage?

Returns the average value for the total input and output power and total efficiency if statistics are enabled.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<Average> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:EFFiciency:RESult:INPut<n>:TOTal:POWer:EVTCount?
P3PHase<m>:EFFiciency:RESult:OUTPut<n>:TOTal:POWer:EVTCount?
P3PHase<m>:EFFiciency:TOTal:EFFiciency:RESult:EVTCount?

Returns the number of calculated measurement results for the total input and output power and total efficiency if statistics are enabled.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<Count> Range: 0 to 4000000000
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:EFFiciency:RESult:INPut<n>:TOTal:POWer:NPEak?
P3PHase<m>:EFFiciency:RESult:OUTPut<n>:TOTal:POWer:NPEak?
P3PHase<m>:EFFiciency:TOTal:EFFiciency:RESult:NPEak?

Returns the negative peak value (minimum) for the total input and output power and total efficiency if statistics are enabled.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<MinPeak> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:EFFiciency:RESult:INPut<n>:TOTal:POWer:PPEak?
P3PHase<m>:EFFiciency:RESult:OUTPut<n>:TOTal:POWer:PPEak?
P3PHase<m>:EFFiciency:TOTal:EFFiciency:RESult:PPEak?

Returns the npositive peak value (maximum) for the total input and output power and total efficiency if statistics are enabled.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<MaxPeak> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:EFFiciency:RESult:INPut<n>:TOTal:POWer:RMS?
P3PHase<m>:EFFiciency:RESult:OUTPut<n>:TOTal:POWer:RMS?
P3PHase<m>:EFFiciency:TOTal:EFFiciency:RESult:RMS?

Returns the RMS value for the total input and output power and total efficiency if statistics are enabled.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<RMS> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:EFFiciency:RESult:INPut<n>:TOTal:POWer:STDDev?
P3PHase<m>:EFFiciency:RESult:OUTPut<n>:TOTal:POWer:STDDev?
P3PHase<m>:EFFiciency:TOTal:EFFiciency:RESult:STDDev?

Returns the standard deviation for the total input and output power and total efficiency if statistics are enabled.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<StdDev> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0

Usage: Query only
Asynchronous command

P3PHase<m>:EFFiciency:RESult:INPut<n>:TOTal:POWer:WFMCount?
P3PHase<m>:EFFiciency:RESult:OUTPut<n>:TOTal:POWer:WFMCount?
P3PHase<m>:EFFiciency:TOTal:EFFiciency:RESult:WFMCount?

Returns the number of calculated waveforms for the total input and output power and total efficiency if statistics are enabled.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Return values:
<WaveformsCount> Range: 0 to 4000000000
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

18.17.4.5 3-phase power sources

P3PHase<m>:EFFiciency:INPut<n>:TYPE 1461
P3PHase<m>:EFFiciency:OUTPut<n>:TYPE 1461
P3PHase<m>:EFFiciency:INPut<n>:SOURce:WIRing 1461
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:WIRing 1461
P3PHase<m>:QUALity:SOURce:WIRing 1461
P3PHase<m>:HARMonics:SOURce:WIRing 1461
P3PHase<m>:QUALity:SOURce:INOut 1461
P3PHase<m>:HARMonics:SOURce:INOut 1461
P3PHase<m>:EFFiciency:INPut<n>:SOURce:LINes:W2V2a 1462
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:LINes:W2V2a 1462
P3PHase<m>:QUALity:SOURce:LINes:W2V2a 1462
P3PHase<m>:HARMonics:SOURce:LINes:W2V2a 1462
P3PHase<m>:EFFiciency:INPut<n>:SOURce:CURRent:W1V1a 1462
P3PHase<m>:EFFiciency:INPut<n>:SOURce:CURRent:W2V2a 1462
P3PHase<m>:EFFiciency:INPut<n>:SOURce:CURRent:W3V3a 1462
P3PHase<m>:EFFiciency:INPut<n>:SOURce:CURRent:W3VN3a 1462
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:CURRent:W1V1a 1462
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:CURRent:W2V2a 1462
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:CURRent:W3V3a 1462
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:CURRent:W3VN3a 1462
P3PHase<m>:QUALity:SOURce:CURRent:W2V2a 1462
P3PHase<m>:QUALity:SOURce:CURRent:W3V3a 1462
P3PHase<m>:QUALity:SOURce:CURRent:W3VN3a 1462
P3PHase<m>:HARMonics:SOURce:CURRent:W2V2a 1462
P3PHase<m>:HARMonics:SOURce:CURRent:W3V3a 1462
P3PHase<m>:HARMonics:SOURce:CURRent:W3VN3a 1462
P3PHase<m>:EFFiciency:INPut<n>:SOURce:VOLTage:W1V1a 1463
P3PHase<m>:EFFiciency:INPut<n>:SOURce:VOLTage:W2V2a 1463
P3PHase<m>:EFFiciency:INPut<n>:SOURce:VOLTage:W3V3a 1463
P3PHase<m>:EFFiciency:INPut<n>:SOURce:VOLTage:W3VN3a 1463
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:VOLTage:W1V1a 1463
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:VOLTage:W2V2a 1463
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:VOLTage:W3V3a 1463
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:VOLTage:W3VN3a 1463
P3PHase<m>:QUALity:SOURce:VOLTage:W2V2a 1463
P3PHase<m>:QUALity:SOURce:VOLTage:W3V3a 1463
P3PHase<m>:QUALity:SOURce:VOLTage:W3VN3a 1463
P3PHase<m>:HARMonics:SOURce:VOLTage:W2V2a 1463
P3PHase<m>:HARMonics:SOURce:VOLTage:W3V3a 1463
P3PHase<m>:HARMonics:SOURce:VOLTage:W3VN3a 1463
P3PHase<m>:EFFiciency:INPut<n>:SOURce:CYCLe:SOURce 1463
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:CYCLe:SOURce 1463
P3PHase<m>:QUALity:SOURce:CYCLe[:SOURce] 1463
P3PHase<m>:HARMonics:SOURce:CYCLe[:SOURce] 1463
P3PHase<m>:EFFiciency:INPut<n>:SOURce:CYCLe:FILTer 1464
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:CYCLe:FILTer 1464
P3PHase<m>:QUALity:SOURce:CYCLe:FILTer 1464
P3PHase<m>:HARMonics:SOURce:CYCLe:FILTer 1464

P3PHase<m>:EFFiciency:GATE....1464
P3PHase<m>:QUALity:GATE....1464

P3PHase<m>:EFFiciency:INPut<n>:TYPE <InputType>
P3PHase<m>:EFFiciency:OUTPut<n>:TYPE <InputType>

Selects the type of the current flow: AC or DC.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Parameters:
<InputType> DC | AC
*RST: AC

Usage: Asynchronous command

Manual operation: See "Type" on page 431

P3PHase<m>:EFFiciency:INPut<n>:SOURce:WIRing <Wiring>
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:WIRing <Wiring>
P3PHase<m>:QUALity:SOURce:WIRing <Wiring>
P3PHase<m>:HARMonics:SOURce:WIRing <Wiring>

Configures how your probes are connected to the three-phase device. It allows you to visualize the connections for proper setup. If you can only measure on four channels, select the "W2V2A" wiring.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<Wiring> W1V1A | W2V2A | W3V3A | W3VN3A
*RST: W3VN3A

Usage: Asynchronous command

Manual operation: See "Wiring" on page 431

P3PHase<m>:QUALity:SOURce:INOut <InputOutput>
P3PHase<m>:HARMonics:SOURce:INOut <InputOutput>

Configures whether the oscilloscope is configured to receive signals (input) for analysis, or to generate signals output) as a source for testing.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<InputOutput> INPut | OUTPut
*RST: INPut

Usage: Asynchronous command

Manual operation: See "Input/output" on page 432

P3PHase<m>:EFFiciency:INPut<n>:SOURce:LINes:W2V2a <InputSelcLines>
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:LINes:W2V2a <OutputSelcLines>
P3PHase<m>:QUALity:SOURce:LINes:W2V2a <Lines>
P3PHase<m>:HARMonics:SOURce:LINes:W2V2a <LineType>

Select the configuration for your probe setup.

Selects the gate that is used for limiting the range of the 3-phase power quality measurement.

This setting is only necessary, if you have configured `P3PHase<m>:HARMonics:SOURce:WIRing` =`W2V2A`.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<LineType> V12LV32L | V13LV23L | V21LV31L | V12LV23L

Usage: Asynchronous command

Manual operation: See "Select lines" on page 432

P3PHase<m>:EFFiciency:INPut<n>:SOURce:CURRent:W1V1a <Sources>
P3PHase<m>:EFFiciency:INPut<n>:SOURce:CURRent:W2V2a <Sources>
P3PHase<m>:EFFiciency:INPut<n>:SOURce:CURRent:W3V3a <Sources>
P3PHase<m>:EFFiciency:INPut<n>:SOURce:CURRent:W3VN3a <Sources>
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:CURRent:W1V1a <Sources>
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:CURRent:W2V2a <Sources>
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:CURRent:W3V3a <Sources>
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:CURRent:W3VN3a <Sources>
P3PHase<m>:QUALity:SOURce:CURRent:W2V2a <Sources>
P3PHase<m>:QUALity:SOURce:CURRent:W3V3a <Sources>
P3PHase<m>:QUALity:SOURce:CURRent:W3VN3a <Sources>
P3PHase<m>:HARMonics:SOURce:CURRent:W2V2a <Sources>
P3PHase<m>:HARMonics:SOURce:CURRent:W3V3a <Sources>
P3PHase<m>:HARMonics:SOURce:CURRent:W3VN3a <Sources>

Selects the current source waveform. Analog channels and math waveforms can be used.

Provide the sources as comma-separated values.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Parameters:
<Sources> C1 | C2 | ... | C8 | M1 | M2 | ... | M8 | R1 | R2 | ... | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11

Usage: Asynchronous command

Manual operation: See "Current" on page 433

P3PHase<m>:EFFiciency:INPut<n>:SOURce:VOLTage:W1V1a <Sources>
P3PHase<m>:EFFiciency:INPut<n>:SOURce:VOLTage:W2V2a <Sources>
P3PHase<m>:EFFiciency:INPut<n>:SOURce:VOLTage:W3V3a <Sources>
P3PHase<m>:EFFiciency:INPut<n>:SOURce:VOLTage:W3VN3a <Sources>
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:VOLTage:W1V1a <Sources>
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:VOLTage:W2V2a <Sources>
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:VOLTage:W3V3a <Sources>
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:VOLTage:W3VN3a <Sources>
P3PHase<m>:QUALity:SOURce:VOLTage:W2V2a <Sources>
P3PHase<m>:QUALity:SOURce:VOLTage:W3V3a <Sources>
P3PHase<m>:QUALity:SOURce:VOLTage:W3VN3a <Sources>
P3PHase<m>:HARMonics:SOURce:VOLTage:W2V2a <Sources>
P3PHase<m>:HARMonics:SOURce:VOLTage:W3V3a <Sources>
P3PHase<m>:HARMonics:SOURce:VOLTage:W3VN3a <Sources>

Selects the voltage source waveform. Analog channels and math waveforms can be used.

Provide the sources as comma-separated values.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Parameters:
<Sources> C1 | C2 | ... | C8 | M1 | M2 | ... | M8 | R1 | R2 | ... | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11

Usage: Asynchronous command

Manual operation: See "Voltage" on page 433

P3PHase<m>:EFFiciency:INPut<n>:SOURce:CYCLe:SOURce <CycleSource>
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:CYCLe:SOURce <CycleSource>
P3PHase<m>:QUALity:SOURce:CYCLe[:SOURce] <CycleSource>
P3PHase<m>:HARMonics:SOURce:CYCLe[:SOURce] <CycleSource>

Selects the channel (voltage source) to serve as the timing reference for data calculations across all sources when the periods are not aligned on the x-axis.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Parameters:
<CycleSource> C1 | C2 | ... | C8 | M1 | M2 | ... | M8 | R1 | R2 | ... | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11

Usage: Asynchronous command

Manual operation: See "Source" on page 434

P3PHase<m>:EFFiciency:INPut<n>:SOURce:CYCLe:FILTer
<DigFilterLowpassCutOffFreq>
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:CYCLe:FILTer
<DigFilterLowpassCutOffFreq>
P3PHase<m>:QUALity:SOURce:CYCLe:FILTer <DigFilterLowpassCutOffFreq>
P3PHase<m>:HARMonics:SOURce:CYCLe:FILTer <DigFilterLowpassCutOffFreq>

Configures a bandwidth limitation.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<DigFilterLowpassCutOffFreq> Range: 100 to 4000000000
Increment: 1000
*RST: 10000000
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Cut-off" on page 434

P3PHase<m>:EFFiciency:GATE <Gate>
P3PHase<m>:QUALity:GATE <Gate>

Selects the gate that is used for limiting the range of the 3-phase power quality and efficiency measurements.

Enable the gate before you assign a measurement to it (`GATE<g>:ENABle` =`ON`).

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<Gate> Number of the gate to be used

Usage: Asynchronous command

18.17.4.6 3-phase power waveform

P3PHase<m>:QUALity:DISPlay:POWer<n>:WAVeform[:ENABle] 1465
P3PHase<m>:HARMonics:DISPlay:POWer<n>:WAVeform[:ENABle] 1465
P3PHase<m>:EFFiciency:DISPlay:WAVeform:INPut:TOTal:POWer[:ENABle] 1465
P3PHase<m>:EFFiciency:DISPlay:WAVeform:OUTPut:TOTal:POWer[:ENABle] 1465
P3PHase<m>:QUALity:DISPlay:TOTal:POWer:WAVeform[:ENABle] 1465
P3PHase<m>:HARMonics:DISPlay:TOTal:POWer:WAVeform[:ENABle] 1465
P3PHase<m>:QUALity:POWer<n>:VERTical:OFFSet 1465
P3PHase<m>:HARMonics:POWer<n>:VERTical:OFFSet 1465
P3PHase<m>:EFFiciency:INPut<n>:TOTal:POWer:VERTical:OFFSet 1466
P3PHase<m>:EFFiciency:OUTPut<n>:TOTal:POWer:VERTical:OFFSet 1466
P3PHase<m>:QUALity:TOTal:POWer:VERTical:OFFSet 1466
P3PHase<m>:HARMonics:TOTal:POWer:VERTical:OFFSet 1466
P3PHase<m>:QUALity:POWer<n>:VERTical:SCALe:MODE 1466

P3PHase<m>:HARMonics:POWer<n>:VERTical:SCALe:MODE....1466
P3PHase<m>:EFFiciency:INPut<n>:TOTal:POWer:VERTical:SCALe:MODE....1467
P3PHase<m>:EFFiciency:OUTPut<n>:TOTal:POWer:VERTical:SCALe:MODE....1467
P3PHase<m>:QUALity:TOTal:POWer:VERTical:SCALe:MODE....1467
P3PHase<m>:HARMonics:TOTal:POWer:VERTical:SCALe:MODE....1467
P3PHase<m>:QUALity:POWer<n>:VERTical:SCALe[:VALue]....1467
P3PHase<m>:HARMonics:POWer<n>:VERTical:SCALe[:VALue]....1467
P3PHase<m>:EFFiciency:INPut<n>:TOTal:POWer:VERTical:SCALe[:VALue]....1467
P3PHase<m>:EFFiciency:OUTPut<n>:TOTal:POWer:VERTical:SCALe[:VALue]....1467
P3PHase<m>:QUALity:TOTal:POWer:VERTical:SCALe[:VALue]....1467
P3PHase<m>:HARMonics:TOTal:POWer:VERTical:SCALe[:VALue]....1467

P3PHase<m>:QUALity:DISPlay:POWer<n>:WAVeform[:ENABle] <State>
P3PHase<m>:HARMonics:DISPlay:POWer<n>:WAVeform[:ENABle] <State>

Displays or hides the specified power waveform.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Parameters:
<State> OFF | ON

Usage: Asynchronous command

Manual operation: See "Display individual phases" on page 435

P3PHase<m>:EFFiciency:DISPlay:WAVeform:INPut:TOTal:POWer[:ENABle] <State>
P3PHase<m>:EFFiciency:DISPlay:WAVeform:OUTPut:TOTal:POWer[:ENABle] <State>
P3PHase<m>:QUALity:DISPlay:TOTal:POWer:WAVeform[:ENABle] <State>
P3PHase<m>:HARMonics:DISPlay:TOTal:POWer:WAVeform[:ENABle] <State>

Displays or hides the total power waveform.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<State> OFF | ON

Usage: Asynchronous command

Manual operation: See "Display" on page 436

P3PHase<m>:QUALity:POWer<n>:VERTical:OFFSet <VerticalOffset>
P3PHase<m>:HARMonics:POWer<n>:VERTical:OFFSet <VerticalOffset>

Sets the vertical offset of the specified power waveform if the relevant `P3PHase<m>:*:POWer:VERTical:SCALe:MODE` command is set to `MANual`.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Parameters:
<VerticalOffset> Range: -100000000000000 to 100000000000000
Increment: 0.01
*RST: 0
Default unit: div

Usage: Asynchronous command

P3PHase<m>:EFFiciency:INPut<n>:TOTal:POWer:VERTical:OFFSet
<VerticalOffset>
P3PHase<m>:EFFiciency:OUTPut<n>:TOTal:POWer:VERTical:OFFSet
<VerticalOffset>
P3PHase<m>:QUALity:TOTal:POWer:VERTical:OFFSet <VerticalOffset>
P3PHase<m>:HARMonics:TOTal:POWer:VERTical:OFFSet <VerticalOffset>

Sets the vertical offset of the total power waveform if the relevant `P3PHase<m>:*:POWer:VERTical:SCALe:MODE` command is set to `MANual`.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<VerticalOffset> Range: -100000000000000 to 100000000000000
Increment: 0.01
*RST: 0
Default unit: div

Usage: Asynchronous command

Manual operation: See "Offset" on page 436

P3PHase<m>:QUALity:POWer<n>:VERTical:SCALe:MODE <VertSclMd>
P3PHase<m>:HARMonics:POWer<n>:VERTical:SCALe:MODE <VertSclMd>

Selects the scaling mode for display of the specific power waveform.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Parameters:
<VertSclMd> MANual | AUTO
*RST: AUTO

Usage: Asynchronous command

Manual operation: See "Mode" on page 435

P3PHase<m>:EFFiciency:INPut<n>:TOTal:POWer:VERTical:SCALe:MODE <VertSclMd>
P3PHase<m>:EFFiciency:OUTPut<n>:TOTal:POWer:VERTical:SCALe:MODE <VertSclMd>
P3PHase<m>:QUALity:TOTal:POWer:VERTical:SCALe:MODE <VertSclMd>
P3PHase<m>:HARMonics:TOTal:POWer:VERTical:SCALe:MODE <VertSclMd>

Selects the scaling mode for display of the total power waveform.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:
<VertSclMd> MANual | AUTO
*RST: AUTO

Usage: Asynchronous command

Manual operation: See "Mode" on page 436

P3PHase<m>:QUALity:POWer<n>:VERTical:SCALe[:VALue] <VerticalScale>
P3PHase<m>:HARMonics:POWer<n>:VERTical:SCALe[:VALue] <VerticalScale>

Sets the vertical scale of the specific power waveform if the relevant `P3PHase<m>:*:POWer:VERTical:SCALe:MODE` command is set to `MANual`.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Parameters:
<VerticalScale> Range: 1E-12 to 100000000000000
Increment: 1E-05
*RST: 0.5
Default unit: VA

Usage: Asynchronous command

Manual operation: See "Scale" on page 436

P3PHase<m>:EFFiciency:INPut<n>:TOTal:POWer:VERTical:SCALe[:VALue] <VerticalScale>
P3PHase<m>:EFFiciency:OUTPut<n>:TOTal:POWer:VERTical:SCALe[:VALue] <VerticalScale>
P3PHase<m>:QUALity:TOTal:POWer:VERTical:SCALe[:VALue] <VerticalScale>
P3PHase<m>:HARMonics:TOTal:POWer:VERTical:SCALe[:VALue] <VerticalScale>

Sets the vertical scale of the total power waveform if the relevant `P3PHase<m>:*:POWer:VERTical:SCALe:MODE` command is set to `MANual`.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Parameters:

<VerticalScale>

Range: 1E-12 to 100000000000000
Increment: 1E-05
*RST: 0.5
Default unit: V

Usage: Asynchronous command

Manual operation: See "Scale" on page 436

18.17.4.7 3-phase reference level

P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:HYSTeresis....1469
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:HYSTeresis....1469
P3PHase<m>:QUALity:REFLevel<rl>:ABSolute:HYSTeresis....1469
P3PHase<m>:HARMonics:REFLevel<rl>:ABSolute:HYSTeresis....1469
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:LLEVel....1469
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:LLEVel....1469
P3PHase<m>:QUALity:REFLevel<rl>:ABSolute:LLEVel....1469
P3PHase<m>:HARMonics:REFLevel<rl>:ABSolute:LLEVel....1469
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:MLEVel....1470
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:MLEVel....1470
P3PHase<m>:QUALity:REFLevel<rl>:ABSolute:MLEVel....1470
P3PHase<m>:HARMonics:REFLevel<rl>:ABSolute:MLEVel....1470
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:ULEVel....1470
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:ULEVel....1470
P3PHase<m>:QUALity:REFLevel<rl>:ABSolute:ULEVel....1470
P3PHase<m>:HARMonics:REFLevel<rl>:ABSolute:ULEVel....1470
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:LMODe....1470
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:LMODe....1470
P3PHase<m>:QUALity:REFLevel<rl>:LMODe....1470
P3PHase<m>:HARMonics:REFLevel<rl>:LMODe....1470
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:HYSTeresis....1471
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:HYSTeresis....1471
P3PHase<m>:QUALity:REFLevel<rl>:RELative:HYSTeresis....1471
P3PHase<m>:HARMonics:REFLevel<rl>:RELative:HYSTeresis....1471
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:LOWer....1471
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:LOWer....1471
P3PHase<m>:QUALity:REFLevel<rl>:RELative:LOWer....1471
P3PHase<m>:HARMonics:REFLevel<rl>:RELative:LOWer....1471
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:MIDDle....1472
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:MIDDle....1472
P3PHase<m>:QUALity:REFLevel<rl>:RELative:MIDDle....1472
P3PHase<m>:HARMonics:REFLevel<rl>:RELative:MIDDle....1472
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:MODE....1472
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:MODE....1472
P3PHase<m>:QUALity:REFLevel<rl>:RELative:MODE....1472
P3PHase<m>:HARMonics:REFLevel<rl>:RELative:MODE....1472
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:UPPer....1473

P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:UPPer....1473
P3PHase<m>:QUALity:REFLevel<rl>:RELative:UPPer....1473
P3PHase<m>:HARMonics:REFLevel<rl>:RELative:UPPer....1473

P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:HYSTeresis <HystAbs>
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:HYSTeresis <HystAbs>
P3PHase<m>:QUALity:REFLevel<rl>:ABSolute:HYSTeresis <HystAbs>
P3PHase<m>:HARMonics:REFLevel<rl>:ABSolute:HYSTeresis <HystAbs>

Defines a hysteresis for the middle reference level. A rise or fall from the middle reference value that does not exceed the hysteresis is rejected as noise.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<rl> Irrelevant, omit the suffix.

Parameters:
<HystAbs>
Range: 0 to 1E+26
Increment: 0.001
*RST: 0.005
Default unit: V

Usage: Asynchronous command

Manual operation: See "Hysteresis" on page 425

P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:LLEVel <LowerLevel>
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:LLEVel <LowerLevel>
P3PHase<m>:QUALity:REFLevel<rl>:ABSolute:LLEVel <LowerLevel>
P3PHase<m>:HARMonics:REFLevel<rl>:ABSolute:LLEVel <LowerLevel>

Sets the lower reference level in absolute values. This is required, e.g., to determine a fall.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<rl> Irrelevant, omit the suffix.

Parameters:
<LowerLevel>
Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "Upper level, Middle level, Lower level" on page 422

P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:MLEVel <MiddleLevel>
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:MLEVel <MiddleLevel>
P3PHase<m>:QUALity:REFLevel<rl>:ABSolute:MLEVel <MiddleLevel>
P3PHase<m>:HARMonics:REFLevel<rl>:ABSolute:MLEVel <MiddleLevel>

Sets the middle reference level in absolute values.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<rl> Irrelevant, omit the suffix.

Parameters:
<MiddleLevel> Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "Upper level, Middle level, Lower level" on page 422

P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:ULEVel <UpperLevel>
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:ULEVel <UpperLevel>
P3PHase<m>:QUALity:REFLevel<rl>:ABSolute:ULEVel <UpperLevel>
P3PHase<m>:HARMonics:REFLevel<rl>:ABSolute:ULEVel <UpperLevel>

Sets the upper reference level in absolute values. This is required to determine a rise.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<rl> Irrelevant, omit the suffix.

Parameters:
<UpperLevel> Range: -1E+26 to 1E+26
Increment: 0.001
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "Upper level, Middle level, Lower level" on page 422

P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:LMODe <LevelMode>
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:LMODe <LevelMode>
P3PHase<m>:QUALity:REFLevel<rl>:LMODe <LevelMode>
P3PHase<m>:HARMonics:REFLevel<rl>:LMODe <LevelMode>

Defines if the reference level is set in absolute or relative values.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<rl> Irrelevant, omit the suffix.

Parameters:
<LevelMode> ABS | REL
*RST: REL

Usage: Asynchronous command

Manual operation: See "Level mode" on page 422

P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:HYSTeresis <HystRel>
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:HYSTeresis <HystRel>
P3PHase<m>:QUALity:REFLevel<rl>:RELative:HYSTeresis <HystRel>
P3PHase<m>:HARMonics:REFLevel<rl>:RELative:HYSTeresis <HystRel>

Defines a hysteresis for the middle reference level. A rise or fall from the middle reference value that does not exceed the hysteresis is rejected as noise.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<rl> Irrelevant, omit the suffix.

Parameters:
<HystRel> Range: 0 to 50
Increment: 1
*RST: 10
Default unit: %

Usage: Asynchronous command

Manual operation: See "Hysteresis" on page 425

P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:LOWer <LowRefLevRel>
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:LOWer <LowRefLevRel>
P3PHase<m>:QUALity:REFLevel<rl>:RELative:LOWer <LowRefLevRel>
P3PHase<m>:HARMonics:REFLevel<rl>:RELative:LOWer <LowRefLevRel>

Sets the lower relative reference level if `P3PHase<m>:HARMonics:REFLevel<rl>:RELative:MODE` is set to `USER`.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<rl> Irrelevant, omit the suffix.

Parameters:

<LowRefLevRel>
Range: -100 to 200
Increment: 1
*RST: 10
Default unit: %

Usage: Asynchronous command

Manual operation: See "Upper level, Middle level,Lower level" on page 424

P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:MIDDle <MidRefLevRel>
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:MIDDle <MidRefLevRel>
P3PHase<m>:QUALity:REFLevel<rl>:RELative:MIDDle <MidRefLevRel>
P3PHase<m>:HARMonics:REFLevel<rl>:RELative:MIDDle <MidRefLevRel>

Sets the middle relative reference level if `P3PHase<m>:HARMonics:REFLevel<rl>:RELative:MODE` is set to `USER`.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<rl> Irrelevant, omit the suffix.

Parameters:

<MidRefLevRel>
Range: -100 to 200
Increment: 1
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "Upper level, Middle level,Lower level" on page 424

P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:MODE <RelativeLevels>
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:MODE <RelativeLevels>
P3PHase<m>:QUALity:REFLevel<rl>:RELative:MODE <RelativeLevels>
P3PHase<m>:HARMonics:REFLevel<rl>:RELative:MODE <RelativeLevels>

The lower, middle and upper reference levels, defined as percentages of the high signal level.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<rl> Irrelevant, omit the suffix.

Parameters:

<RelativeLevels> FIVE | TEN | TWENty | USER

FIVE
5/50/95

TEN
10/50/90

TWENty
20/50/80

USER
Set the reference levels to individual values with P3PHase<m>:HARMonics:REFLevel<rl>:RELative:LOWer, P3PHase<m>:HARMonics:REFLevel<rl>:RELative:MIDDle, and P3PHase<m>:HARMonics:REFLevel<rl>:RELative:UPPer.

*RST: TEN

Usage: Asynchronous command

Manual operation: See "Relative levels" on page 423

P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:UPPer <UppRefLevRel>
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:UPPer <UppRefLevRel>
P3PHase<m>:QUALity:REFLevel<rl>:RELative:UPPer <UppRefLevRel>
P3PHase<m>:HARMonics:REFLevel<rl>:RELative:UPPer <UppRefLevRel>

Sets the upper relative reference level if P3PHase<m>:HARMonics:REFLevel<rl>:RELative:MODE is set to USER.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<rl> Irrelevant, omit the suffix.

Parameters:
<UppRefLevRel>
Range: -100 to 200
Increment: 1
*RST: 90
Default unit: %

Usage: Asynchronous command

Manual operation: See "Upper level, Middle level,Lower level" on page 424

18.17.4.8 3-phase power analysis data

This section describes the commands for exporting 3-phase power analysis measurement data.

P3PHase<m>:QUALity:POWer<n>:DATA:HEADer? 1474
P3PHase<m>:HARMonics:POWer<n>:DATA:HEADer? 1474
P3PHase<m>:EFFiciency:INPut<n>:TOTal:POWer:DATA:HEADer? 1474
P3PHase<m>:EFFiciency:OUTPut<n>:TOTal:POWer:DATA:HEADer? 1474
P3PHase<m>:QUALity:TOTal:POWer:DATA:HEADer? 1474

P3PHase<m>:HARMonics:TOTal:POWer:DATA:HEADer?....1474
P3PHase<m>:QUALity:POWer<n>:DATA[:VALues]?....1475
P3PHase<m>:HARMonics:POWer<n>:DATA[:VALues]?....1475
P3PHase<m>:EFFiciency:INPut<n>:TOTal:POWer:DATA[:VALues]?....1475
P3PHase<m>:EFFiciency:OUTPut<n>:TOTal:POWer:DATA[:VALues]?....1475
P3PHase<m>:QUALity:TOTal:POWer:DATA[:VALues]?....1475
P3PHase<m>:HARMonics:TOTal:POWer:DATA[:VALues]?....1475

P3PHase<m>:QUALity:POWer<n>:DATA:HEADer?
P3PHase<m>:HARMonics:POWer<n>:DATA:HEADer?

Returns the header of the 3-phase power analysis waveform data for the individual phases. The header contains the attributes of the waveform.

For power harmonics measurements, data is only available if `P3PHase<m>:HARMonics:STANdard` is set to `ENC` or `END`.

Suffix:

<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Return values:

<XStart> 1. header value: start time in s

<XStop> 2. header value: end time in s

<RecordLength> 3. header value: record length of the waveform in samples

<ValsPerSmp> 4. header value: number of values per sample. For 3-phase power quality measurements, the value is 1.

Usage: Query only
Asynchronous command

P3PHase<m>:EFFiciency:INPut<n>:TOTal:POWer:DATA:HEADer?
P3PHase<m>:EFFiciency:OUTPut<n>:TOTal:POWer:DATA:HEADer?
P3PHase<m>:QUALity:TOTal:POWer:DATA:HEADer?
P3PHase<m>:HARMonics:TOTal:POWer:DATA:HEADer?

Returns the header of the 3-phase power analysis waveform data for the total phase. The header contains the attributes of the waveform.

For power harmonics measurements, data is only available if `P3PHase<m>:HARMonics:STANdard` is set to `ENC` or `END`.

Suffix:

<m> 1 to 6, index of the power analysis measurement

Return values:

<XStart> 1. header value: start time in s

<XStop> 2. header value: end time in s

<RecordLength> 3. header value: record length of the waveform in samples

<ValsPerSmp> 4. header value: number of values per sample. For 3-phase power quality measurements, the value is 1.

Usage: Query only
Asynchronous command

P3PHase<m>:QUALity:POWer<n>:DATA[:VALues]? [<Offset>],[<Length>]
P3PHase<m>:HARMonics:POWer<n>:DATA[:VALues]? [<Offset>],[<Length>]

Returns the individual phase data of the 3-phase power analysis waveform points for transmission from the instrument to the controlling computer.

Without parameters, the complete waveform is retrieved. Using the offset and length parameters, data can be retrieved in smaller portions, which makes the command faster. If you send only one parameter, it is interpreted as offset, and the data is retrieved from offset to the end of the waveform.

To set the export format, use `FORMat[:DATA]`.

Suffix:
<m> 1 to 6, index of the power analysis measurement

<n> 1...3, index of the individual phase

Query parameters:
<Offset> Number of offset waveform points to be skipped.

<Length> Number of waveform points to be retrieved.

Usage: Query only
Asynchronous command

P3PHase<m>:EFFiciency:INPut<n>:TOTal:POWer:DATA[:VALues]? [<Offset>], [<Length>]
P3PHase<m>:EFFiciency:OUTPut<n>:TOTal:POWer:DATA[:VALues]? [<Offset>], [<Length>]
P3PHase<m>:QUALity:TOTal:POWer:DATA[:VALues]? [<Offset>],[<Length>]
P3PHase<m>:HARMonics:TOTal:POWer:DATA[:VALues]? [<Offset>],[<Length>]

Returns the total phase data of the 3-phase power analysis waveform points for transmission from the instrument to the controlling computer.

Without parameters, the complete waveform is retrieved. Using the offset and length parameters, data can be retrieved in smaller portions, which makes the command faster. If you send only one parameter, it is interpreted as offset, and the data is retrieved from offset to the end of the waveform.

To set the export format, use `FORMat[:DATA]`.

Suffix:
<m> 1 to 6, index of the power analysis measurement

Query parameters:
<Offset> Number of offset waveform points to be skipped.

<Length> Number of waveform points to be retrieved.

Usage: Query only
Asynchronous command

18.17.5 Digital voltmeter

This section describes the commands for setting up and querying the results of the digital voltmeter.

METer:BANDwidth 1476
METer:DVMeter<m>:ENABle? 1476
METer:DVMeter<m>:ACRMs:ENABle 1477
METer:DVMeter<m>:ACRMs:RESult? 1477
METer:DVMeter<m>:DC:ENABle 1477
METer:DVMeter<m>:DC:RESult? 1477
METer:DVMeter<m>:DCRMs:ENABle 1478
METer:DVMeter<m>:DCRMs:RESult? 1478
METer:MTIMe 1478

METer:BANDwidth <Bandwidth>

Sets the filter bandwidth.

Parameters:
<Bandwidth> B20M | B10M | B5M | B2M | B1M | B500 | B200
`B20M`: 20 MHz
`B10M`: 10 MHz
`B5M`: 5 MHz
`B2M`: 2 MHz
`B1M`: 1 MHz
`B500`: 500 kHz
`B200`: 200 kHz
*RST: B20M

Usage: Asynchronous command

Manual operation: See "Filter bandwidth" on page 456

METer:DVMeter<m>:ENABle?

Queries the state of the voltmeter for the respective channel.

Suffix:
<m> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<State> OFF | ON
*RST: OFF

Usage: Query only
Asynchronous command

METer:DVMeter<m>:ACRMs:ENABle <ACRMSResults_St>

Enables the AC RMS voltmeter measurement for the respective channel.

Suffix:
<m> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<ACRMSResults_St> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Measurements" on page 456

METer:DVMeter<m>:ACRMs:RESult?

Returns the result of the AC RMS voltmeter measurement.

Suffix:
<m> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<Results_ACRMS> Range: -1E+26 to 1E+26
Increment: 0.1
*RST: 0
Default unit: V

Usage: Query only
Asynchronous command

Manual operation: See "Measurements" on page 456

METer:DVMeter<m>:DC:ENABle <DCResults_St>

Enables the DC voltmeter measurement for the respective channel.

Suffix:
<m> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<DCResults_St> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Measurements" on page 456

METer:DVMeter<m>:DC:RESult?

Returns the result of the DC voltmeter measurement.

Suffix:
<m> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<Results_DC> Range: -1E+26 to 1E+26
Increment: 0.1
*RST: 0
Default unit: V

Usage: Query only
Asynchronous command

Manual operation: See "Measurements" on page 456

METer:DVMeter<m>:DCRMs:ENABle <DCRMSResults_St>

Enables the DC RMS voltmeter measurement for the respective channel.

Suffix:
<m> 1 to 8, depending on instrument model. Index of the analog channel.

Parameters:
<DCRMSResults_St> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Measurements" on page 456

METer:DVMeter<m>:DCRMs:RESult?

Returns the result of the DC RMS voltmeter measurement.

Suffix:
<m> 1 to 8, depending on instrument model. Index of the analog channel.

Return values:
<Results_DCRMS> Range: -1E+26 to 1E+26
Increment: 0.1
*RST: 0
Default unit: V

Usage: Query only
Asynchronous command

Manual operation: See "Measurements" on page 456

METer:MTIMe <MeasTime>

Sets the measurement time. The time begins in the moment that a measurement is enabled.

Parameters:

<MeasTime>

Range: 0.05 to 1
Increment: 0.05
*RST: 0.5
Default unit: s

Usage: Asynchronous command

Manual operation: See "Measurement time" on page 456

18.17.6 XY-plot

XY<m>:SWAP 1479
XY<m>[:STATe] 1479
XY<m>:YSOurce 1479
XY<m>:XSOurce 1480

XY<m>:SWAP

Replaces the source of the x-axis with the source of the y-axis and vice versa.

Suffix:

<m> 1 to 4, index of the XY-plot

Usage: Setting only
Asynchronous command

Manual operation: See "Swap XY" on page 458

XY<m>[:STATe] <State>

Activates an XY-waveform.

Suffix:

<m> 1 to 4, index of the XY-plot

Parameters:

<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Display" on page 457

XY<m>:YSOurce <YSource>

Defines the signal source that supplies the y-values of the XY-diagram.

Suffix:

<m> 1 to 4, index of the XY-plot

Parameters:

<YSource> NONE | C1 | C2 | ... | C8 | M1 | M2 | ... | M8 | R1 | R2 | ... | R8 | TRK1 | TRK2 | TRK3 | ... | TRK24 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11

Usage: Asynchronous command

Manual operation: See "X-source, Y-source" on page 458

XY<m>:XSOurce <XSource>

Defines the signal source that supplies the x-values of the XY-diagram.

Suffix:

<m> 1 to 4, index of the XY-plot

Parameters:

<XSource> NONE | C1 | C2 | ... | C8 | M1 | M2 | ... | M8 | R1 | R2 | ... | R8 | TRK1 | TRK2 | TRK3 | ... | TRK24 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11

Usage: Asynchronous command

Manual operation: See "X-source, Y-source" on page 458

18.17.7 Eye analysis (option R&S MXO5-K136)

18.17.7.1 General settings

EYE<e>:DISPlay:PERSistence:INFinite....1480
EYE<e>:DISPlay:PERSistence:RESet....1481
EYE<e>:DISPlay:PERSistence:STATe....1481
EYE<e>:DISPlay:PERSistence:TIME....1481
EYE<e>:MSLices....1482
EYE<e>:QUALify:GATE....1482
EYE<e>:SAMTime....1482
EYE<e>:SOURce....1482
EYE<e>:STATe....1483
EYE<e>:TREFerence....1483

EYE<e>:DISPlay:PERSistence:INFinite <InfPersist>

If infinite persistence is ON, each new waveform point remains on the screen until this option is disabled, or the display is reset.

Suffix:

<e> 1 to 8, index of the eye

Parameters:

<InfPersist> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Infinite persistence" on page 463

EYE<e>:DISPlay:PERSistence:RESet

Resets the display, removing all waveform points.

Suffix:
<e> 1 to 8, index of the eye

Usage: Setting only
Asynchronous command

Manual operation: See "Reset" on page 463

EYE<e>:DISPlay:PERSistence:STATe <State>

If ON, each new data point in the diagram area remains on the screen for the duration that is defined using `EYE<e>:DISPlay:PERSistence:TIME`, or as long as `EYE<e>:DISPlay:PERSistence:INFinite` is ON.

If OFF, the waveform points are displayed only for the current acquisition.

Suffix:
<e> 1 to 8, index of the eye

Parameters:
<State> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Enable" on page 463

EYE<e>:DISPlay:PERSistence:TIME <Time>

Sets the time how long the eye points remain on the display.

Suffix:
<e> 1 to 8, index of the eye

Parameters:
<Time> Range: 0.05 to 50
Increment: 0.05
*RST: 0.05
Default unit: s

Usage: Asynchronous command

Manual operation: See "Time" on page 463

EYE<e>:MSLices <MaxSliceCount>

Sets the number of waveform slices for a single acquisition.

Suffix:
<e> 1 to 8, index of the eye

Parameters:
<MaxSliceCount> Range: 1 to 2500000
Increment: 1
*RST: 2000

Usage: Asynchronous command

Manual operation: See "Slices per acquisition" on page 461

EYE<e>:QUALify:GATE <Gate>

Selects the gate, which restricts the contributing slices in horizontal direction. Only the timestamps within the defined horizontal interval qualify for eye generation.

Enable and configure a gate before you assign it (`GATE<g>:ENABle` =`ON`). The query returns 0, if no gate is assigned.

Suffix:
<e> 1 to 8, index of the eye

Parameters:
<Gate> Number of the gate to be used

Usage: Asynchronous command

Manual operation: See "Gate" on page 464

EYE<e>:SAMTime <SamplingTime>

Sets a sampling time for the clock signal, an offset for the clock edge in relation to the bit start.

Suffix:
<e> 1 to 8, index of the eye

Parameters:
<SamplingTime> Range: 0 to 1
Increment: 0.0001
*RST: 0.5
Default unit: UI

Usage: Asynchronous command

Manual operation: See "Sampling time" on page 461

EYE<e>:SOURce <Source>

Selects the waveform from which the eye diagram is generated.

Suffix:
<e> 1 to 8, index of the eye

Parameters:
<Source> C1 | C2 | ... | C8 | M1 | M2 | ... | M8 | R1 | R2 | ... | R8

Usage: Asynchronous command

Manual operation: See "Source" on page 460

EYE<e>:STATe <State>

Activates or deactivates the eye diagram.

Suffix:
<e> 1 to 8, index of the eye

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Enable" on page 460

EYE<e>:TREFerence <TimingReference>

Selects the timing reference, which defines the reference signal and the method that are used to obtain the timing information required to slice the data source waveform.

Suffix:
<e> 1 to 8, index of the eye

Parameters:
<TimingReference> Range: 1 to 4

Usage: Asynchronous command

Manual operation: See "Timing reference" on page 460

18.17.7.2 Scale settings

EYE<e>:HORizontal:ABSolute:POSition....1484
EYE<e>:HORizontal:ABSolute:RANGe....1484
EYE<e>:HORizontal:UINTerval:POSition....1484
EYE<e>:HORizontal:UINTerval:RANGe....1484
EYE<e>:HORizontal:UNIT....1485
EYE<e>:VERTical:COUPle....1485
EYE<e>:VERTical:OFFSet....1485
EYE<e>:VERTical:POSition....1486
EYE<e>:VERTical:SCALe....1486

EYE<e>:HORizontal:ABSolute:POSition <HorizPosition>

Defines the position of the zero point in the diagram in seconds. The zero point is the alignment point on which the slice timestamps are superimposed.

Suffix:
<e> 1 to 8, index of the eye

Parameters:
<HorizPosition>
Range: -100 to 100
Increment: 1 ps
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "Position" on page 462

EYE<e>:HORizontal:ABSolute:RANGe <HorizRange>

Sets the time range that is covered by the eye diagram in absolute time values.

Suffix:
<e> 1 to 8, index of the eye

Parameters:
<HorizRange>
Range: 100 ps to 100 s
Increment: 4 ns
*RST: 2 ns
Default unit: s

Usage: Asynchronous command

Manual operation: See "Range" on page 462

EYE<e>:HORizontal:UINTerval:POSition <HorizPosition>

Defines the position of the zero point in the diagram in unit intervals. The zero point is the alignment point on which the slice timestamps are superimposed.

Suffix:
<e> 1 to 8, index of the eye

Parameters:
<HorizPosition>
Range: -100E+9 to 100E+9
Increment: -0.001
*RST: 0

Usage: Asynchronous command

Manual operation: See "Position" on page 462

EYE<e>:HORizontal:UINTerval:RANGe <HorizRange>

Sets the time range that is covered by the eye diagram in unit intervals.

Suffix:
<e> 1 to 8, index of the eye

Parameters:
<HorizRange> Range: 0.1 to 100E+9
Increment: 2
*RST: 2

Usage: Asynchronous command

Manual operation: See "Range" on page 462

EYE<e>:HORizontal:UNIT <HorizontalUnit>

Sets the method to define the horizontal scale of the eye diagram: as absolute time, or in unit intervals.

Suffix:
<e> 1 to 8, index of the eye

Parameters:
<HorizontalUnit> ATIMe | UI | UINTerval
UI = UINTerval
*RST: ATIMe

Usage: Asynchronous command

Manual operation: See "Mode" on page 461

EYE<e>:VERTical:COUPle <VertCoupling>

If ON, the vertical position and scale of the source are used.

Suffix:
<e> 1 to 8, index of the eye

Parameters:
<VertCoupling> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Couple to source" on page 462

EYE<e>:VERTical:OFFSet <Offset>

Defines the vertical offset in divisions if `EYE<e>:VERTical:COUPle` is OFF. If coupling is ON, the query returns the coupled value.

Suffix:
<e> 1 to 8, index of the eye

Parameters:

<Offset>
Range: -100E+12 to 100E+12
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "Offset" on page 462

EYE<e>:VERTical:POSition <VertPosition>

Defines the vertical position in divisions if `EYE<e>:VERTical:COUPle` is OFF. If coupling is ON, the query returns the coupled value.

Suffix:

<e> 1 to 8, index of the eye

Parameters:

<VertPosition>
Range: -1E+26 to 1E+26
Increment: 0.02
*RST: 0
Default unit: div

Usage: Asynchronous command

Manual operation: See "Position" on page 462

EYE<e>:VERTical:SCALe <Scale>

Defines the vertical scale in Volts per division if `EYE<e>:VERTical:COUPle` is OFF. If coupling is ON, the query returns the coupled value.

Suffix:

<e> 1 to 8, index of the eye

Parameters:

<Scale>
Range: 1E-12 to 100E+12
Increment: 4
*RST: 0.5
Default unit: V

Usage: Asynchronous command

Manual operation: See "Scale" on page 462

18.17.7.3 Filter settings

EYE<e>:FILTer:BPATtern:MODE 1487
EYE<e>:FILTer:BPATtern:NPRBits 1487
EYE<e>:FILTer:BPATtern:SEQuence 1487
EYE<e>:FILTer:RFLSet 1488
EYE<e>:FILTer:STATe 1488

EYE<e>:FILTer:BPATtern:MODE <Mode>

Selects which bits contribute to the eye generation.

Suffix:
<e> 1 to 8, index of the eye

Parameters:
<Mode> TBITs | NTBits | BPATtern

TBITs
Transition bits, only bits after a signal transition contribute (0 to 1, or 1 to 0).

NTBits
Non-transition bits, only bits without a preceding signal transition contribute (0 to 0, or 1 to 1).

BPATtern
Bit pattern, only bits contribute that match the pattern defined with `EYE<e>:FILTer:BPATtern:SEQuence` and `EYE<e>:FILTer:BPATtern:NPRBits`.

*RST: TBITs

Usage: Asynchronous command

Manual operation: See "Mode" on page 465

EYE<e>:FILTer:BPATtern:NPRBits <NumPrefixBits>

Sets the number of prefix bits if `EYE<e>:FILTer:BPATtern:MODE BPATtern`.

Suffix:
<e> 1 to 8, index of the eye

Parameters:
<NumPrefixBits> Number of bits before the center eye

Range: 0 to 15
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Prefix bits" on page 466

EYE<e>:FILTer:BPATtern:SEQuence <Sequence>

Defines the bit pattern if `EYE<e>:FILTer:BPATtern:MODE BPATtern`.

Suffix:
<e> 1 to 8, index of the eye

Parameters:
<Sequence> List of comma-separated bit values

Usage: Asynchronous command

Manual operation: See "Bit pattern" on page 466

EYE<e>:FILTer:RFLSet <RefLevSet>

Selects the reference level set that is used by the filter to obtain the bits.

Suffix:
<e> 1 to 8, index of the eye

Parameters:
<RefLevSet> Number of the reference level set

Usage: Asynchronous command

Manual operation: See "Reference levels" on page 465

EYE<e>:FILTer:STATe <State>

Applies the filter settings.

Suffix:
<e> 1 to 8, index of the eye

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Enable" on page 465

18.18 Protocols

- Configuration settings for all serial protocols 1489
- SPI (option R&S MXO5-K510) 1494
- QUAD-SPI (option R&S MXO5-K510) 1528
- OCTO-SPI (option R&S MXO5-K510) 1560
- I²C (option R&S MXO5-K510) 1591
- I3C (option R&S MXO5-K550) 1627
- D-PHY (option R&S MXO5-K580) 1660
- UART / RS-232 (option R&S MXO5- K510) 1695
- NRZ Clocked (option R&S MXO5-K510) 1728
- NRZ Unclocked (option R&S MXO5-K510) 1758
- Manchester (option R&S MXO5-K510) 1787
- 8b/10b (option R&S MXO5-K510) 1817
- CAN (option R&S MXO5-K520) 1844
- LIN (option R&S MXO5-K520) 1892
- SENT (option R&S MXO5-K520) 1925
- ARINC 429 (option R&S MXO5-K530) 1961
- MIL-1553 (option R&S MXO5-K530) 1989

- SpaceWire (option R&S MXO5-K530)..... 2018
- SPMI (option R&S MXO5-K550)..... 2045
- RFFE (option R&S MXO5-K550)..... 2076
- 10BASE-T1S (option R&S MXO5-K560)..... 2109
- 100BASE-T1 (option R&S MXO5-K560)..... 2140
- 1000BASE-T1 (option R&S MXO5-K560)..... 2171
- USB 1.1 (option R&S MXO5-K570)..... 2202
- USB 2.0 (option R&S MXO5-K570)..... 2233

18.18.1 Configuration settings for all serial protocols

18.18.1.1 General settings

SBUS<sb>[:STATe]..... 1489
SBUS<sb>:TYPE..... 1489
SBUS<sb>:FORMat..... 1491
SBUS<sb>:RESult..... 1491
SBUS<sb>:RMSBus..... 1492
SBUS<sb>:THReshold..... 1492
SBUS<sb>:ZCOupling..... 1492

SBUS<sb>[:STATe] <ProtocolState>

Enables the decoding of the specified bus.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<ProtocolState> OFF | ON

Usage: Asynchronous command

Manual operation: See "State" on page 509

SBUS<sb>:TYPE <Protocol Type>

Selects the bus type for analysis. The type of buses available depends on the installed options.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Protocol Type> I2C | I3C | SPI | QSPI | QSPI | UART | CAN | LIN | SENT | TNOS | MILS1553 | MILStd | ARIN429 | ARINc429 | SWIR | SWIRe | RFFE | SPMI | MANC | NRZC | NRZU | MDIO | DALI | USB1 | USB2 | USBHspeed | USBLow | USBFull | HBTO | TBTO | DPHY | EBTB | CSI | DSI

`SPI`: SPI protocol, see Section 18.18.2, "SPI (option R&S MXO5-K510)", on page 1494.
`OSPI`: Octo SPI protocol, see Section 18.18.4, "OCTO-SPI (option R&S MXO5-K510)", on page 1560.
`QSPI`: Quad SPI protocol, see Section 18.18.3, "QUAD-SPI (option R&S MXO5-K510)", on page 1528.
`I2C`: I²C protocol, see Section 18.18.5, "I²C (option R&S MXO5-K510)", on page 1591.
`I3C`: I3C protocol, see Section 18.18.6, "I3C (option R&S MXO5-K550)", on page 1627.
`UART`: UART protocol, see Section 18.18.8, "UART / RS-232 (option R&S MXO5- K510)", on page 1695.
`NRZC | MDIO`: NRZ clocked protocol, see Section 18.18.9, "NRZ Clocked (option R&S MXO5-K510)", on page 1728.
`NRZU`: NRZ unclocked protocol, see Section 18.18.10, "NRZ Unclocked (option R&S MXO5-K510)", on page 1758.
`MANC | DALI`: Manchester protocol, see Section 18.18.11, "Manchester (option R&S MXO5-K510)", on page 1787
`CAN`: CAN protocol, see Section 18.18.13, "CAN (option R&S MXO5-K520)", on page 1844.
`LIN`: LIN protocol, see Section 18.18.14, "LIN (option R&S MXO5-K520)", on page 1892.
`SENT`: SENT protocol, see Section 18.18.15, "SENT (option R&S MXO5-K520)", on page 1925.
`ARIN429 | ARINc429`: ARINC 429 protocol, see Section 18.18.16, "ARINC 429 (option R&S MXO5-K530)", on page 1961.
`MILS1553 | MILStd`: MIL-1553 protocol, see Section 18.18.17, "MIL-1553 (option R&S MXO5-K530)", on page 1989.
`SWIR | SWIRe`: SpaceWire protocol, see Section 18.18.18, "SpaceWire (option R&S MXO5-K530)", on page 2018.
`SPMI`: SPMI protocol, see Section 18.18.19, "SPMI (option R&S MXO5-K550)", on page 2045.
`RFFE`: RFFE protocol, see Section 18.18.20, "RFFE (option R&S MXO5-K550)", on page 2076.
`TNOS`: Ethernet 10BASE-T1S protocol, see Section 18.18.21, "10BASE-T1S (option R&S MXO5-K560)", on page 2109.
`HBTO`: Ethernet 100BASE-T1 protocol, see Section 18.18.22, "100BASE-T1 (option R&S MXO5-K560)", on page 2140.
`TBTO`: Ethernet 1000BASE-T1 protocol, see Section 18.18.23, "1000BASE-T1 (option R&S MXO5-K560)", on page 2171.
`EBTB`: 8b/10b protocol, see Section 18.18.12, "8b/10b (option R&S MXO5-K510)", on page 1817.
`DPHY | CSI | DSI`: D-PHY protocol, see Section 18.18.7, "D-PHY (option R&S MXO5-K580)", on page 1660.

`USB1 | USBLow | USBFull`: USB 1.1 protocol, see Section 18.18.24, "USB 1.1 (option R&S MXO5-K570)", on page 2202
`USB2 | USBHspeed`: USB 2.0 protocol, see Section 18.18.25, "USB 2.0 (option R&S MXO5-K570)", on page 2233

Usage: Asynchronous command

Manual operation: See "Protocol type" on page 509

SBUS<sb>:FORMat <DataFormat>

Sets the number format for decoded data values of the indicated serial bus. It defines the format in the decode table, and in the combs of the decoded signal on the screen.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DataFormat> HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG | DEC | SYMB | LIST | FLIN

HEX
Hexadecimal format

OCT
Octal format

BIN
Binary format

ASCII = ASCii
ASCII format

SIGN
Signed, e.g. 8 bits signed ranges from -128 to +127 decimal

DEC=USIG
Unsigned, e.g. 8 bits unsigned ranges from 0 to 255 decimal

LIST
Value list

FLIN
Linear function

*RST: HEX

Usage: Asynchronous command

Manual operation: See "Data format" on page 512

SBUS<sb>:RESult <ShwResTbl>

Enables a table with decoded data of the serial signal. The function requires the option for the analyzed protocol.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<ShwResTbl> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show decode table" on page 512

SBUS<sb>:RMSBus

Deletes the specified serial bus.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Add serial bus, Delete serial bus" on page 509

SBUS<sb>:THReshold <ShwThresLines>

If enabled, the threshold lines are displayed in the diagram.

The label of the threshold line is set according to the signal that it is referring to, see also Show threshold lines.

Suffix:
<sb> 1..4

Parameters:
<ShwThresLines> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show threshold lines" on page 510

SBUS<sb>:ZCOupling <ZoomCoupling>

If enabled, the protocol decode zoom and result table are synchronized.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<ZoomCoupling> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Zoom coupling" on page 513

18.18.1.2 Export results settings

SBUS<sb>:EXPResult:DETail 1493
SBUS<sb>:EXPResult:SAVE 1493
SBUS<sb>:EXPResult:TIME 1493
SBUS<sb>:EXPResult:EXTension 1494
SBUS<sb>:EXPResult:PATH 1494

SBUS<sb>:EXPResult:DETail <IncludeDetails>

If enabled, includes the detailed results for all frames in the export result file.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<IncludeDetails> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Include details" on page 528

SBUS<sb>:EXPResult:SAVE <FileName>

Saves the selected results to the indicated file.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Example:
```
SBUS1:EXPResult:SAVE
'/home/storage/userData/export_10base-t1s.csv'
```

Usage: Setting only
Asynchronous command

Manual operation: See "Save as" on page 529

SBUS<sb>:EXPResult:TIME <IncludeTiming>

If enabled, includes the frame timing in the export result file.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<IncludeTiming> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Include timing" on page 528

SBUS<sb>:EXPResult:EXTension <FileType>

Selects the file format.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<FileType> HTML | CSV | XML | PY

HTML
Hypertext markup language

CSV
Comma-separated values

XML
Extensible markup language

PY
Python

*RST: HTML

Usage: Asynchronous command

Manual operation: See "File type" on page 528

SBUS<sb>:EXPResult:PATH <Path>

Sets the path where the protocol export files are stored. On the instrument, the default path is `/home/storage/userData/Protocol`. You can create subfolders in this folder.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Path> String parameter

Usage: Asynchronous command

Manual operation: See "Save as" on page 529

18.18.2 SPI (option R&S MXO5-K510)

Before MXO 5 can accept the specific bus commands, make sure that:

- The decoding of the specified bus is enabled with `SBUS<sb>[:STATe]`.
- The bus is set to the correct type with `SBUS<sb>:TYPE`.

- Configuration....1495
- Filter....1502
- Format....1507
- Hardware trigger....1516
- Software trigger....1518
- Decode results....1524

18.18.2.1 Configuration

SBUS<sb>:SPI:BORDer....1495
SBUS<sb>:SPI:FRCondition....1495
SBUS<sb>:SPI:CSELect:HYSTeresis....1496
SBUS<sb>:SPI:CSELect:POLarity....1496
SBUS<sb>:SPI:CSELect:SOURce....1496
SBUS<sb>:SPI:CSELect:THReshold....1497
SBUS<sb>:SPI:MISO:HYSTeresis....1497
SBUS<sb>:SPI:MISO:POLarity....1497
SBUS<sb>:SPI:MISO:SOURce....1497
SBUS<sb>:SPI:MISO:THReshold....1498
SBUS<sb>:SPI:MOSI:HYSTeresis....1498
SBUS<sb>:SPI:MOSI:POLarity....1498
SBUS<sb>:SPI:MOSI:SOURce....1499
SBUS<sb>:SPI:MOSI:THReshold....1499
SBUS<sb>:SPI:SCLK:HYSTeresis....1499
SBUS<sb>:SPI:SCLK:SOURce....1499
SBUS<sb>:SPI:SCLK:THReshold....1500
SBUS<sb>:SPI:TIMeout....1500
SBUS<sb>:SPI:WSIZe....1500
SBUS<sb>:SPI:MISO:POSition....1501
SBUS<sb>:SPI:MISO:SCALe....1501
SBUS<sb>:SPI:MOSI:POSition....1501
SBUS<sb>:SPI:MOSI:SCALe....1501

SBUS<sb>:SPI:BORDer <BitOrder>

Selects the bit order, which determines if the data of the messages starts with MSB (most significant bit) or LSB (least significant bit).

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<BitOrder> LSBF | MSBF
*RST: MSBF

Usage: Asynchronous command

Manual operation: See "Bit order" on page 536

SBUS<sb>:SPI:FRCondition <FrameCondition>

Defines the start of a frame. A frame contains a number of successive words, at least one word.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<FrameCondition> CS | CLKTimeout

CS
Start and end of the frame is defined by the active state of the sub select signal, see `SBUS<sb>:SPI:CSELect:POLarity`.

CLKTimeout
Defines a timeout on the clock line SCLK as limiter between two frames. The timeout condition is used for SPI connections without a CS line.

*RST: CS

Usage: Asynchronous command

SBUS<sb>:SPI:CSELect:HYSTeresis <Hysteresis>

Sets a value for the hysteresis for the CS channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 537

SBUS<sb>:SPI:CSELect:POLarity <CSPolarity>

Selects if the transmitted signal for the respective line is active high (high = 1) or active low (low = 1).

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<CSPolarity> ACTLow | ACTHigh
*RST: ACTLow

Usage: Asynchronous command

Manual operation: See "Polarity: MOSI, MISO, CS" on page 536

SBUS<sb>:SPI:CSELect:SOURce <CSSource>

Sets the input channel of the CS line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<CSSource> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "SCLK,MOSI,MISO,CS" on page 535

SBUS<sb>:SPI:CSELect:THReshold <Threshold>

Sets a user-defined threshold value for the line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Threshold>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 537

SBUS<sb>:SPI:MISO:HYSTeresis <Hysteresis>

Sets a value for the hysteresis for the MISO channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 537

SBUS<sb>:SPI:MISO:POLarity <MISOPolarity>

Selects if the transmitted signal for the respective line is active high (high = 1) or active low (low = 1).

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<MISOPolarity> ACTLow | ACTHigh
*RST: ACTHigh

Usage: Asynchronous command

Manual operation: See "Polarity: MOSI, MISO, CS" on page 536

SBUS<sb>:SPI:MISO:SOURce <MISOSource>

Sets the input channel of the MISO line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<MISOSource> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "SCLK,MOSI,MISO,CS" on page 535

SBUS<sb>:SPI:MISO:THReshold <Threshold>

Sets a user-defined threshold value for the line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Threshold>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 537

SBUS<sb>:SPI:MOSI:HYSTeresis <Hysteresis>

Sets a value for the hysteresis for the MOSI channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 537

SBUS<sb>:SPI:MOSI:POLarity <MOSIPolarity>

Selects if the transmitted signal for the respective line is active high (high = 1) or active low (low = 1).

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<MOSIPolarity> ACTLow | ACTHigh
*RST: ACTHigh

Usage: Asynchronous command

Manual operation: See "Polarity: MOSI, MISO, CS" on page 536

SBUS<sb>:SPI:MOSI:SOURce <MOSISource>

Sets the input channel of the MOSI line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<MOSISource> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "SCLK,MOSI,MISO,CS" on page 535

SBUS<sb>:SPI:MOSI:THReshold <Threshold>

Sets a user-defined threshold value for the line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Threshold>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 537

SBUS<sb>:SPI:SCLK:HYSTeresis <Hysteresis>

Sets a value for the hysteresis for the SCLK channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 537

SBUS<sb>:SPI:SCLK:SOURce <SCLKSource>

Sets the input channel of the SCLK line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:

<SCLKSource> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "SCLK,MOSI,MISO,CS" on page 535

SBUS<sb>:SPI:SCLK:THReshold <Threshold>

Sets a user-defined threshold value for the line.

Suffix:

<sb> 1 to 4, index of the serial bus

Parameters:

<Threshold>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 537

SBUS<sb>:SPI:TIMeout <ClockTimeout>

Sets the minimum clock idle time if a timeout on the clock line SCLK is used as limiter between two frames.

Suffix:

<sb> 1 to 4, index of the serial bus

Parameters:

<ClockTimeout>
Range: 5E-08 to 10
Increment: 1E-06
*RST: 0.001
Default unit: s

Usage: Asynchronous command

Manual operation: See "Timeout" on page 536

SBUS<sb>:SPI:WSIZe <WordLength>

Sets the word length (or symbol size), which is the number of bits in a message. The maximum word length is 32 bit.

Suffix:

<sb> 1 to 4, index of the serial bus

Parameters:

<WordLength>
Range: 4 to 32
Increment: 1
*RST: 8

Usage: Asynchronous command

Manual operation: See "Word length" on page 536

SBUS<sb>:SPI:MISO:POSition <SPI MISO position>

Sets the vertical position of the MISO signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SPI MISO position>

Usage: Asynchronous command

SBUS<sb>:SPI:MISO:SCALe <SPI MISO scale>

Set the vertical scale of the MISO signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SPI MISO scale>

Usage: Asynchronous command

SBUS<sb>:SPI:MOSI:POSition <SPI MISO position>

Sets the vertical position of the MOSI signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SPI MISO position>

Usage: Asynchronous command

SBUS<sb>:SPI:MOSI:SCALe <SPI MOSI scale>

Set the vertical scale of the MOSI signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SPI MOSI scale>

Usage: Asynchronous command

18.18.2.2 Filter

There are two commands for each parameter, that you can use for defining the SPI settings.

For example, to set the *Frame type =MISO > Field =MISO >01100* value you can use one of the following commands:

- `SBUS:SPI:FILTer:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `SBUS:SPI:FILTer:DMIN "MISO", "MISO", 01100`
  Defines the parameter by using the frame and field name.

SBUS<sb>:SPI:FILTer:CHKall ... 1502
SBUS<sb>:SPI:FILTer:CLR ... 1503
SBUS<sb>:SPI:FILTer:INVert ... 1503
SBUS<sb>:SPI:FILTer:RST ... 1503
SBUS<sb>:SPI:FILTer:BIT ... 1503
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:BIT ... 1503
SBUS<sb>:SPI:FILTer:DMAX ... 1504
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:DMAX ... 1504
SBUS<sb>:SPI:FILTer:DMIN ... 1504
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:DMIN ... 1504
SBUS<sb>:SPI:FILTer:DOPerator ... 1504
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:DOPerator ... 1504
SBUS<sb>:SPI:FILTer:ERENable ... 1505
SBUS<sb>:SPI:FILTer:ERRor<n>:ENABle ... 1505
SBUS<sb>:SPI:FILTer:FIENable ... 1505
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:ENABle ... 1505
SBUS<sb>:SPI:FILTer:FRENable ... 1505
SBUS<sb>:SPI:FILTer:FRAMe<fr>:ENABle ... 1505
SBUS<sb>:SPI:FILTer:IMAX ... 1506
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:IMAX ... 1506
SBUS<sb>:SPI:FILTer:IMIN ... 1506
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:IMIN ... 1506
SBUS<sb>:SPI:FILTer:IOPerator ... 1507
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:IOPerator ... 1507

SBUS<sb>:SPI:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 538

SBUS<sb>:SPI:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 538

SBUS<sb>:SPI:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 538

SBUS<sb>:SPI:FILTer:RST

Presets the state of the selected frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 538

SBUS<sb>:SPI:FILTer:BIT <Frame>,<Field>,<Bit>
SBUS<sb>:SPI:FILTer:BIT? <Bit>
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 539

SBUS<sb>:SPI:FILTer:DMAX <Frame>,<Field>,<Data>
SBUS<sb>:SPI:FILTer:DMAX? <Data>
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORANGe`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 539

SBUS<sb>:SPI:FILTer:DMIN <Frame>,<Field>,<Data>
SBUS<sb>:SPI:FILTer:DMIN? <Data>
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 539

SBUS<sb>:SPI:FILTer:DOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:SPI:FILTer:DOPerator? <Operator>
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 539

SBUS<sb>:SPI:FILTer:ERENable <ErrorName>,<Enabler>
SBUS<sb>:SPI:FILTer:ERENable? <Enabler>
SBUS<sb>:SPI:FILTer:ERRor<n>:ENABle <Enable>

Defines the error type to be filtered on.

Suffix:

<sb> 1 to 4, index of the serial bus

<n> Index of the error

Parameters:

<Enable> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 540

SBUS<sb>:SPI:FILTer:FIENable <Frame>,<Field>,<Enabler>
SBUS<sb>:SPI:FILTer:FIENable? <Enabler>
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 539

SBUS<sb>:SPI:FILTer:FRENable <Frame>,<Enabler>
SBUS<sb>:SPI:FILTer:FRENable? <Enabler>
SBUS<sb>:SPI:FILTer:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 539

SBUS<sb>:SPI:FILTer:IMAX <Frame>,<Field>,<Data>
SBUS<sb>:SPI:FILTer:IMAX? <Data>
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if the operator is set to `INRange`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 539

SBUS<sb>:SPI:FILTer:IMIN <Frame>,<Field>,<Data>
SBUS<sb>:SPI:FILTer:IMIN? <Data>
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 539

SBUS<sb>:SPI:FILTer:IOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:SPI:FILTer:IOPerator? <Operator>
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 539

18.18.2.3 Format

This section describes the commands to specify and query frame formats for the "SPI" protocol.

SBUS<sb>:SPI:FORMat:SELect....1508
SBUS<sb>:SPI:FORMat:ADDFrame....1508
SBUS<sb>:SPI:FORMat:LOAD....1508
SBUS<sb>:SPI:FORMat:SAVE....1508
SBUS<sb>:SPI:FORMat:CLR....1509
SBUS<sb>:SPI:FORMat:FCOunt?....1509
SBUS<sb>:SPI:FORMat:FRAMe<fr>:ADDField....1509
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLDCount?....1509
SBUS<sb>:SPI:FORMat:FRAMe<fr>:NAME....1510
SBUS<sb>:SPI:FORMat:FRAMe<fr>:COLor....1510
SBUS<sb>:SPI:FORMat:FRAMe<fr>:TYPE....1510
SBUS<sb>:SPI:FORMat:FRAMe<fr>:ID1Field....1511
SBUS<sb>:SPI:FORMat:FRAMe<fr>:ID2Field....1511
SBUS<sb>:SPI:FORMat:FRAMe<fr>:ID3Field....1511
SBUS<sb>:SPI:FORMat:FRAMe<fr>:ID1Value....1511
SBUS<sb>:SPI:FORMat:FRAMe<fr>:ID2Value....1511
SBUS<sb>:SPI:FORMat:FRAMe<fr>:ID3Value....1511
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:NAME....1511
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:COLor....1511
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:FSTBit....1512
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:BITCount....1512
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:REPetition....1513
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:BITorder....1513
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:FORMat....1513
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:ADDValue....1514
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue....1515
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel....1515

SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:UNIT 1515
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:PARA 1516
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:PARB 1516

SBUS<sb>:SPI:FORMat:SELect <Select>

Enables the format configuration

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Select> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show format" on page 541

SBUS<sb>:SPI:FORMat:ADDFrame

Appendes a new frame format to the frame list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Add frame" on page 541

SBUS<sb>:SPI:FORMat:LOAD <FileName>

Loads a the specified XML file with a list of frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Open" on page 542

SBUS<sb>:SPI:FORMat:SAVE <FileName>

Saves the current list of frame formats to an XML file with the specified name.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Save as" on page 542

SBUS<sb>:SPI:FORMat:CLR

Erases from the volatile memory all field descriptions and frame formats that you have created.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Edit list" on page 541

SBUS<sb>:SPI:FORMat:FCOunt?

Returns the number of available frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Edit list" on page 541

SBUS<sb>:SPI:FORMat:FRAMe<fr>:ADDField

Appends a new field description to the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Usage: Setting only
Asynchronous command

Manual operation: See "Add field" on page 543

SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLDCount?

Returns the number of field descriptions available for the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:SPI:FORMat:FRAMe<fr>:NAME <Name>

Specifies the name for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Frame name" on page 542

SBUS<sb>:SPI:FORMat:FRAMe<fr>:COLor <Color>

Specifies the color for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4278255615

Usage: Asynchronous command

Manual operation: See "Frame color" on page 542

SBUS<sb>:SPI:FORMat:FRAMe<fr>:TYPE <Type>

Sets an original frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Type>

Usage: Asynchronous command

Manual operation: See "Frame type" on page 542

SBUS<sb>:SPI:FORMat:FRAMe<fr>:ID1Field <ID1Field>
SBUS<sb>:SPI:FORMat:FRAMe<fr>:ID2Field <ID2Field>
SBUS<sb>:SPI:FORMat:FRAMe<fr>:ID3Field <ID3Field>

Sets the identifying field type for the configured frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Field>

Usage: Asynchronous command

Manual operation: See "ID<n> field" on page 542

SBUS<sb>:SPI:FORMat:FRAMe<fr>:ID1Value <ID1Value>
SBUS<sb>:SPI:FORMat:FRAMe<fr>:ID2Value <ID2Value>
SBUS<sb>:SPI:FORMat:FRAMe<fr>:ID3Value <ID3Value>

Sets the value of the corresponding field type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Value>

Usage: Asynchronous command

Manual operation: See "ID<n> value" on page 542

SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:NAME <Name>

Specifies the name for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Field name" on page 543

SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:COLor <Color>

Specifies the color for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4294967040

Usage: Asynchronous command

Manual operation: See "Field color" on page 543

SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:FSTBit <FirstBit>

In order of transmission, sets the first bit of the specified field in the payload.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<FirstBit>

Range: 0 to 63
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "First bit" on page 543

SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:BITCount <BitCount>

Specifies the bit count, hence length, of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitCount>

Range: 1 to 64
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Bit count" on page 544

SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:REPetition <Repetition>

Sets the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Repetition> Range: 0 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Repetition" on page 544

SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:BITorder <BitOrder>

Specifies, in which order the algorithm evaluates the bits of the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitOrder> LSBF | MSBF

LSBF
Least significant bit first

MSBF
Most significant bit first

*RST: MSBF

Usage: Asynchronous command

Manual operation: See "Bit order" on page 544

SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:FORMat <NumericFormat>

Specifies the numerical format for the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<NumericFormat> HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG | DEC | LIST | FLIN

HEX
Hexadecimal format

OCT
Octal format

BIN
Binary format

ASCII = ASCii
ASCII format

SIGN
Signed, decimal format

DEC=USIG
Unsigned, decimal format

LIST
Value list

FLIN
Linear function

*RST: HEX

Usage: Asynchronous command

Manual operation: See "Numeric format" on page 544

SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:ADDValue

Creates a new hexagonal value for customization.

Available if `SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Related commands:

`SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue`

`SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel`

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Usage: Setting only
Asynchronous command

Manual operation: See "Add value" on page 545

SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue <Value>

Sets the hexagonal value to convert it into a labeled state.

Available if `SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:

<Value>
Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Value" on page 545

SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel <Label>

Sets the label to convert the corresponding hexagonal value to a labeled state.

Available if `SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:

<Label>

Usage: Asynchronous command

Manual operation: See "Label" on page 545

SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:UNIT <Unit>

Sets the unit for the linear function.

Available if `SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Unit>

Usage: Asynchronous command

Manual operation: See "Unit" on page 545

SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:PARA <ParameterA>
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:PARB <ParameterB>

Sets the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

Available if `SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<ParameterB>
Range: -1E+20 to 1E+20
Increment: 1E-12
*RST: 0

Usage: Asynchronous command

Manual operation: See "Parameter A,B" on page 545

18.18.2.4 Hardware trigger

Trigger commands for serial buses affect the current trigger source. Therefore, set the trigger source to the required serial bus with `TRIGger:EVENt<ev>:SOURce` before sending the bus-specific trigger commands.

TRIGger:SBHW:SPI:TYPE....1516
TRIGger:SBHW:SPI:PALignment....1517
TRIGger:SBHW:SPI:FCONdition....1517
TRIGger:SBHW:SPI:DPOSition....1517
TRIGger:SBHW:SPI:DMINpattern....1518

TRIGger:SBHW:SPI:TYPE <Type>

Selects the trigger type for SPI analysis.

Parameters:
<Type> FRSTart | FRENd | MOSI | MISO

FRSTart
Triggers on the beginning of the frame.

FRENd
Triggers on the end of the frame.

MOSI
Triggers on a specified data pattern in that is expected on the MOSI line.

MISO
Triggers on a specified data pattern in that is expected on the MISO line.

*RST: FRSTart

Usage: Asynchronous command

Manual operation: See "Type" on page 546

TRIGger:SBHW:SPI:PALignment <DataAlignment>

Defines how the specified data pattern is searched.

Parameters:
<DataAlignment> WORD | BIT

WORD
The pattern is matched only at word boundaries.

BIT
Bit-by-bit: the pattern can start at any position in the message.

*RST: WORD

Usage: Asynchronous command

Manual operation: See "Search mode" on page 547

TRIGger:SBHW:SPI:FCONdition <DataOperator>

Selects the operator for the MISO and MOSI pattern.

Parameters:
<DataOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Data" on page 547

TRIGger:SBHW:SPI:DPOSition <DataPosition>

Sets the number of bits or words to be ignored before the first bit or word of interest. The effect is defined by `TRIGger:SBHW:SPI:PALignment`.

Parameters:
<DataPosition> Range: 1 to 4096
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Position" on page 547

TRIGger:SBHW:SPI:DMINpattern <DataPattern>

Specifies a data bit pattern, or sets the start value of a pattern range.

Parameters:
<DataPattern>

Usage: Asynchronous command

Manual operation: See "Data" on page 547

18.18.2.5 Software trigger

There are two commands for each parameter, that you can use for defining the SPI settings.

For example, to set the *Frame type =MISO > Field =MISO >01100* value you can use one of the following commands:

- `TRIGger:SBSW:SPI:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `TRIGger:SBSW:SPI:DMIN "MISO", "MISO", 01100`
  Defines the parameter by using the frame and field name.

TRIGger:SBSW:SPI:CHKall ... 1519
TRIGger:SBSW:SPI:CLR ... 1519
TRIGger:SBSW:SPI:INVert ... 1519
TRIGger:SBSW:SPI:RST ... 1519
TRIGger:SBSW:SPI:FRENable ... 1519
TRIGger:SBSW:SPI:FRAMe<fr>:ENABle ... 1519
TRIGger:SBSW:SPI:BIT ... 1520
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:BIT ... 1520
TRIGger:SBSW:SPI:DMAX ... 1520
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:DMAX ... 1520
TRIGger:SBSW:SPI:DMIN ... 1520
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:DMIN ... 1520
TRIGger:SBSW:SPI:DOPerator ... 1521
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:DOPerator ... 1521
TRIGger:SBSW:SPI:FIENable ... 1521
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:ENABle ... 1521
TRIGger:SBSW:SPI:IMAX ... 1522
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:IMAX ... 1522
TRIGger:SBSW:SPI:IMIN ... 1522
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:IMIN ... 1522
TRIGger:SBSW:SPI:IOPerator ... 1522
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:IOPerator ... 1522
TRIGger:SBSW:SPI:ERENable ... 1523

TRIGger:SBSW:SPI:ERROr<m>:ENABle....1523
SBUS<sb>:SPI:SWTindex?....1523
SBUS<sb>:SPI:SWTTime?....1523

TRIGger:SBSW:SPI:CHKall

Enables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 548

TRIGger:SBSW:SPI:CLR

Disables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 548

TRIGger:SBSW:SPI:INVert

Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 548

TRIGger:SBSW:SPI:RST

Presets the state of the selected frames and error types for the software trigger.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 548

TRIGger:SBSW:SPI:FRENable <Frame>,<Enabler>
TRIGger:SBSW:SPI:FRENable? <Enabler>
TRIGger:SBSW:SPI:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 549

TRIGger:SBSW:SPI:BIT <Frame>,<Field>,<Bit>
TRIGger:SBSW:SPI:BIT? <Bit>
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 549

TRIGger:SBSW:SPI:DMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:SPI:DMAX? <Data>
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range for the software trigger, if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 549

TRIGger:SBSW:SPI:DMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:SPI:DMIN? <Data>
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 549

TRIGger:SBSW:SPI:DOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:SPI:DOPerator? <Operator>
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern of the software trigger in the selected field of the selected frame.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 549

TRIGger:SBSW:SPI:FIENable <Frame>,<Field>,<Enabler>
TRIGger:SBSW:SPI:FIENable? <Enabler>
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame of the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 549

TRIGger:SBSW:SPI:IMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:SPI:IMAX? <Data>
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range for the software trigger if the operator is set to `INRange`.

You can set the operator with `TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max>
Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 549

TRIGger:SBSW:SPI:IMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:SPI:IMIN? <Data>
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min>
Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 549

TRIGger:SBSW:SPI:IOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:SPI:IOPerator? <Operator>
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 549

TRIGger:SBSW:SPI:ERENable <ErrorName>,<Enabler>
TRIGger:SBSW:SPI:ERENable? <Enabler>
TRIGger:SBSW:SPI:ERRor<m>:ENABle <Enable>

Defines the error type for the software trigger.

Suffix:
<m> Index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 550

SBUS<sb>:SPI:SWTindex?

Queries the software trigger index.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Index> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:SPI:SWTTime?

Queries the software trigger time in seconds.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:

<Time> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.2.6 Decode results

SBUS<sb>:SPI:FCOunt? 1524
SBUS<sb>:SPI:FRAMe<fr>:BITRate? 1524
SBUS<sb>:SPI:FRAMe<fr>:DATA? 1525
SBUS<sb>:SPI:FRAMe<fr>:STARt? 1525
SBUS<sb>:SPI:FRAMe<fr>:STATus? 1525
SBUS<sb>:SPI:FRAMe<fr>:STOP? 1526
SBUS<sb>:SPI:FRAMe<fr>:WCOunt? 1526
SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:FMISo? 1526
SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:FMOSi? 1527
SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:MISO? 1527
SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:MOSI? 1527
SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:STARt? 1528
SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:STOP? 1528

SBUS<sb>:SPI:FCOunt?

Returns the number of decoded frames.

Suffix:

<sb> 1 to 4, index of the serial bus

Return values:

<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:SPI:FRAMe<fr>:BITRate?

Returns the bit rate of the specified frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<PrimaryBitRate> Increment: 1
*RST: 0
Default unit: bps

Usage: Query only
Asynchronous command

SBUS<sb>:SPI:FRAMe<fr>:DATA?

Returns the data words of the specified frame in comma-separated values.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameData> Comma-separated sequence of integer values (N, L1, R1,…, LN, RN). N is the number of word pairs in the frame, and {L1,R1}…{LN,RN} are the value pairs. The values Lx and Rx are associated with the MOSI and the MISO channel, respectively. If a channel is disabled, an empty value is returned.

Usage: Query only
Asynchronous command

SBUS<sb>:SPI:FRAMe<fr>:STARt?

Returns the start time of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:SPI:FRAMe<fr>:STATus?

Returns the overall state of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameState> OK | VOID | INComplete | LENGth

`OK`: the frame is valid.
`VOID`: the frame is empty.

INComplete: INComplete word. The word is cut off at the left or right side of the acquisition.
LENGth: The frame that was found has an unexpected length: there are either too few or too many bits in this frame.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:SPI:FRAMe<fr>:STOP?

Returns the end time of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:SPI:FRAMe<fr>:WCOunt?

Returns the number of words in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameWordCount> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:FMISo?

Returns the formatted value of the specified word on the MISO line.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<w> Index of the word

Return values:
<FormattedMISOVal>

Usage: Query only
Asynchronous command

SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:FMOSi?

Returns the formatted value of the specified word on the MOSI line.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<w> Index of the word

Return values:
<FormattedMOSIVal>

Usage: Query only
Asynchronous command

SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:MISO?

Returns the data value of the specified word on the MISO line.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<w> Index of the word

Return values:
<MISOValue> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:MOSI?

Returns the data value of the specified word on the MOSI line.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<w> Index of the word

Return values:

<MOSIValue> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:STARt?

Returns the start time of the specified data word.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<w> Index of the word

Return values:

<FrameWordStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:STOP?

Returns the end time of the specified data word.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<w> Index of the word

Return values:

<FrameWordStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.3 QUAD-SPI (option R&S MXO5-K510)

Before MXO 5 can accept the specific bus commands, make sure that:

- The decoding of the specified bus is enabled with `SBUS<sb>[:STATe]`.

- The bus is set to the correct type with `SBUS<sb>:TYPE`.

- Configuration....1529
- Filter....1538
- Format....1544
- Software trigger....1549
- Decode results....1555

18.18.3.1 Configuration

SBUS<sb>:QSPI:CSEL:HYSTeresis....1529
SBUS<sb>:QSPI:CSEL:POLarity....1530
SBUS<sb>:QSPI:CSEL:SOURce....1530
SBUS<sb>:QSPI:CSEL:THReshold....1530
SBUS<sb>:QSPI:INSTruction....1531
SBUS<sb>:QSPI:IOONe:HYSTeresis....1531
SBUS<sb>:QSPI:IOONe:POLarity....1531
SBUS<sb>:QSPI:IOONe:POSition....1531
SBUS<sb>:QSPI:IOONe:SCALe....1532
SBUS<sb>:QSPI:IOONe:SOURce....1532
SBUS<sb>:QSPI:IOONe:THReshold....1532
SBUS<sb>:QSPI:IOTHree:HYSTeresis....1532
SBUS<sb>:QSPI:IOTHree:POLarity....1533
SBUS<sb>:QSPI:IOTHree:POSition....1533
SBUS<sb>:QSPI:IOTHree:SCALe....1533
SBUS<sb>:QSPI:IOTHree:SOURce....1533
SBUS<sb>:QSPI:IOTHree:THReshold....1534
SBUS<sb>:QSPI:IOTWo:HYSTeresis....1534
SBUS<sb>:QSPI:IOTWo:POLarity....1534
SBUS<sb>:QSPI:IOTWo:POSition....1535
SBUS<sb>:QSPI:IOTWo:SCALe....1535
SBUS<sb>:QSPI:IOTWo:SOURce....1535
SBUS<sb>:QSPI:IOTWo:THReshold....1535
SBUS<sb>:QSPI:IOZero:HYSTeresis....1536
SBUS<sb>:QSPI:IOZero:POLarity....1536
SBUS<sb>:QSPI:IOZero:POSition....1536
SBUS<sb>:QSPI:IOZero:SCALe....1536
SBUS<sb>:QSPI:IOZero:SOURce....1537
SBUS<sb>:QSPI:IOZero:THReshold....1537
SBUS<sb>:QSPI:SCLK:HYSTeresis....1537
SBUS<sb>:QSPI:SCLK:POLarity....1537
SBUS<sb>:QSPI:SCLK:SOURce....1538
SBUS<sb>:QSPI:SCLK:THReshold....1538

SBUS<sb>:QSPI:CSEL:HYSTeresis <Hysteresis>

Sets a value for the hysteresis for the CS channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "CS/SCLK/IO<n> hysteresis" on page 556

SBUS<sb>:QSPI:CSEL:POLarity <CSPolarity>

Selects if the transmitted signal for the respective line is active high (high = 1) or active low (low = 1).

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<CSPolarity> ACTLow | ACTHigh
*RST: ACTLow

Usage: Asynchronous command

Manual operation: See "Polarity: CS, IO<n>" on page 554

SBUS<sb>:QSPI:CSEL:SOURce <CSSource>

Sets the input channel of the CS line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<CSSource> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "CS, SCLK, IO n" on page 554

SBUS<sb>:QSPI:CSEL:THReshold <Threshold>

Sets a user-defined threshold value for the line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Threshold>

Usage: Asynchronous command

Manual operation: See "CS/SCLK/IO<n> threshold" on page 555

SBUS<sb>:QSPI:INSTruction <Instruction>

Selects the instruction mode that defines how many lanes are used to transmit data.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Instruction> SINGle | DUAL | QUAD
*RST: SINGle

Usage: Asynchronous command

Manual operation: See "Instruction" on page 554

SBUS<sb>:QSPI:IOONe:HYSTeresis <Hysteresis>

Sets a value for the hysteresis for the IO1 line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "CS/SCLK/IO<n> hysteresis" on page 556

SBUS<sb>:QSPI:IOONe:POLarity <IO1Polarity>

Selects if the transmitted signal for the respective line is active high (high = 1) or active low (low = 1).

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<IO1Polarity> ACTLow | ACTHigh
*RST: ACTHigh

Usage: Asynchronous command

Manual operation: See "Polarity: CS, IO<n>" on page 554

SBUS<sb>:QSPI:IOONe:POSition <QUADSPI IO1 position>

Sets the vertical position of the IO1 signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<QUADSPI IO1 position>

Usage: Asynchronous command

SBUS<sb>:QSPI:IOONe:SCALe <QUADSPI IO1 scale>

Set the vertical scale of the IO1 signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<QUADSPI IO1 scale>

Usage: Asynchronous command

SBUS<sb>:QSPI:IOONe:SOURce <IO1Source>

Sets the input channel of the IO 1 line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<IO1Source> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "CS, SCLK, IO n" on page 554

SBUS<sb>:QSPI:IOONe:THReshold <Threshold>

Sets a user-defined threshold value for the line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Threshold>

Usage: Asynchronous command

Manual operation: See "CS/SCLK/IO<n> threshold" on page 555

SBUS<sb>:QSPI:IOTHree:HYSTeresis <Hysteresis>

Sets a value for the hysteresis for the IO0 line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "CS/SCLK/IO<n> hysteresis" on page 556

SBUS<sb>:QSPI:IOTHree:POLarity <IO3Polarity>

Selects if the transmitted signal for the respective line is active high (high = 1) or active low (low = 1).

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<IO3Polarity> ACTLow | ACTHigh
*RST: ACTHigh

Usage: Asynchronous command

Manual operation: See "Polarity: CS, IO<n>" on page 554

SBUS<sb>:QSPI:IOTHree:POSition <QUADSPI IO3 position>

Sets the vertical position of the IO3 signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<QUADSPI IO3 position>

Usage: Asynchronous command

SBUS<sb>:QSPI:IOTHree:SCALe <QUADSPI IO3 scale>

Set the vertical scale of the IO3 signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<QUADSPI IO3 scale>

Usage: Asynchronous command

SBUS<sb>:QSPI:IOTHree:SOURce <IO3Source>

Sets the input channel of the IO 3 line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<IO3Source> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "CS, SCLK, IO n" on page 554

SBUS<sb>:QSPI:IOTHree:THReshold <Threshold>

Sets a user-defined threshold value for the line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Threshold>

Usage: Asynchronous command

Manual operation: See "CS/SCLK/IO<n> threshold" on page 555

SBUS<sb>:QSPI:IOTWo:HYSTeresis <Hysteresis>

Sets a value for the hysteresis for the IO2 line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "CS/SCLK/IO<n> hysteresis" on page 556

SBUS<sb>:QSPI:IOTWo:POLarity <IO2Polarity>

Selects if the transmitted signal for the respective line is active high (high = 1) or active low (low = 1).

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<IO2Polarity> ACTLow | ACTHigh
*RST: ACTHigh

Usage: Asynchronous command

Manual operation: See "Polarity: CS, IO<n>" on page 554

SBUS<sb>:QSPI:IOTWo:POSition <QUADSPI IO2 position>

Sets the vertical position of the IO2 signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<QUADSPI IO2 position>

Usage: Asynchronous command

SBUS<sb>:QSPI:IOTWo:SCALe <QUADSPI IO2 scale>

Set the vertical scale of the IO2 signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<QUADSPI IO2 scale>

Usage: Asynchronous command

SBUS<sb>:QSPI:IOTWo:SOURce <IO2Source>

Sets the input channel of the IO 2 line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<IO2Source> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "CS, SCLK, IO n" on page 554

SBUS<sb>:QSPI:IOTWo:THReshold <Threshold>

Sets a value for the hysteresis for the IO2 line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Threshold>

Usage: Asynchronous command

Manual operation: See "CS/SCLK/IO<n> threshold" on page 555

SBUS<sb>:QSPI:IOZero:HYSTeresis <Hysteresis>

Sets a value for the hysteresis for the IO0 line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "CS/SCLK/IO<n> hysteresis" on page 556

SBUS<sb>:QSPI:IOZero:POLarity <IO0Polarity>

Selects if the transmitted signal for the respective line is active high (high = 1) or active low (low = 1).

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<IO0Polarity> ACTLow | ACTHigh
*RST: ACTHigh

Usage: Asynchronous command

Manual operation: See "Polarity: CS, IO<n>" on page 554

SBUS<sb>:QSPI:IOZero:POSition <QUADSPI IO0 position>

Sets the vertical position of the IO0 signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<QUADSPI IO0 position>

Usage: Asynchronous command

SBUS<sb>:QSPI:IOZero:SCALe <QUADSPI IO0 scale>

Set the vertical scale of the IO0 signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<QUADSPI IO0 scale>

Usage: Asynchronous command

SBUS<sb>:QSPI:IOZero:SOURce <IO0Source>

Sets the input channel of the IO 0 line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<IO0Source> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "CS, SCLK, IO n" on page 554

SBUS<sb>:QSPI:IOZero:THReshold <Threshold>

Sets a user-defined threshold value for the line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Threshold>

Usage: Asynchronous command

Manual operation: See "CS/SCLK/IO<n> threshold" on page 555

SBUS<sb>:QSPI:SCLK:HYSTeresis <Hysteresis>

Sets a value for the hysteresis for the SCLK channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "CS/SCLK/IO<n> hysteresis" on page 556

SBUS<sb>:QSPI:SCLK:POLarity <SCLKPolarity>

Sets the polarity for the clock line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SCLKPolarity> FALLing | RISing
*RST: RISing

Usage: Asynchronous command

Manual operation: See "SCLK SDR Polarity" on page 554

SBUS<sb>:QSPI:SCLK:SOURce <SCLKSource>

Sets the input channel of the SCLK clock line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SCLKSource> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "CS, SCLK, IO n" on page 554

SBUS<sb>:QSPI:SCLK:THReshold <Threshold>

Sets a user-defined threshold value for the line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Threshold>

Usage: Asynchronous command

Manual operation: See "CS/SCLK/IO<n> threshold" on page 555

18.18.3.2 Filter

There are two commands for each parameter, that you can use for defining the QUAD SPI settings.

For example, to set the *Frame type =Data > Field =Addr >01100* value you can use one of the following commands:

- `SBUS:QSPI:FILTer:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `SBUS:QSPI:FILTer:DMIN "Data", "Addr", 01100`
  Defines the parameter by using the frame and field name.

SBUS<sb>:QSPI:FILTer:CHKall....1539
SBUS<sb>:QSPI:FILTer:CLR....1539
SBUS<sb>:QSPI:FILTer:INVert....1539
SBUS<sb>:QSPI:FILTer:RST....1540
SBUS<sb>:QSPI:FILTer:BIT....1540

SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:BIT....1540
SBUS<sb>:QSPI:FILTer:DMAX....1540
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:DMAX....1540
SBUS<sb>:QSPI:FILTer:DMIN....1541
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:DMIN....1541
SBUS<sb>:QSPI:FILTer:DOPerator....1541
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:DOPerator....1541
SBUS<sb>:QSPI:FILTer:IMAX....1541
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:IMAX....1541
SBUS<sb>:QSPI:FILTer:IMIN....1542
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:IMIN....1542
SBUS<sb>:QSPI:FILTer:IOPerator....1542
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:IOPerator....1542
SBUS<sb>:QSPI:FILTer:ERENable....1543
SBUS<sb>:QSPI:FILTer:ERRor<n>:ENABle....1543
SBUS<sb>:QSPI:FILTer:FIENable....1543
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:ENABle....1543
SBUS<sb>:QSPI:FILTer:FRENable....1543
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:ENABle....1543

SBUS<sb>:QSPI:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 557

SBUS<sb>:QSPI:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 557

SBUS<sb>:QSPI:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 557

SBUS<sb>:QSPI:FILTer:RST

Presets the state of the selected frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 557

SBUS<sb>:QSPI:FILTer:BIT <Frame>,<Field>,<Bit>
SBUS<sb>:QSPI:FILTer:BIT? <Bit>
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 557

SBUS<sb>:QSPI:FILTer:DMAX <Frame>,<Field>,<Data>
SBUS<sb>:QSPI:FILTer:DMAX? <Data>
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORANGe`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 557

SBUS<sb>:QSPI:FILTer:DMIN <Frame>,<Field>,<Data>
SBUS<sb>:QSPI:FILTer:DMIN? <Data>
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 557

SBUS<sb>:QSPI:FILTer:DOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:QSPI:FILTer:DOPerator? <Operator>
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 557

SBUS<sb>:QSPI:FILTer:IMAX <Frame>,<Field>,<Data>
SBUS<sb>:QSPI:FILTer:IMAX? <Data>
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if the operator is set to `INRange`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 557

SBUS<sb>:QSPI:FILTer:IMIN <Frame>,<Field>,<Data>
SBUS<sb>:QSPI:FILTer:IMIN? <Data>
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 557

SBUS<sb>:QSPI:FILTer:IOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:QSPI:FILTer:IOPerator? <Operator>
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 557

SBUS<sb>:QSPI:FILTer:ERENable <ErrorName>,<Enabler>
SBUS<sb>:QSPI:FILTer:ERENable? <Enabler>
SBUS<sb>:QSPI:FILTer:ERRor<n>:ENABle <Enable>

Defines the error type to be filtered on.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 559

SBUS<sb>:QSPI:FILTer:FIENable <Frame>,<Field>,<Enabler>
SBUS<sb>:QSPI:FILTer:FIENable? <Enabler>
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 557

SBUS<sb>:QSPI:FILTer:FRENable <Frame>,<Enabler>
SBUS<sb>:QSPI:FILTer:FRENable? <Enabler>
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

18.18.3.3 Format

SBUS<sb>:QSPI:OPCode:APPend ... 1544
SBUS<sb>:QSPI:OPCode:DALL ... 1544
SBUS<sb>:QSPI:OPCode:DELete ... 1544
SBUS<sb>:QSPI:OPCode:RESet ... 1545
SBUS<sb>:QSPI:LDOPcode ... 1545
SBUS<sb>:QSPI:OPCode:SIZE? ... 1545
SBUS<sb>:QSPI:OPCode:ITEM<n>:ADBYtes ... 1545
SBUS<sb>:QSPI:OPCode:ITEM<n>:ADLanes ... 1546
SBUS<sb>:QSPI:OPCode:ITEM<n>:ALT ... 1546
SBUS<sb>:QSPI:OPCode:ITEM<n>:CODE ... 1546
SBUS<sb>:QSPI:OPCode:ITEM<n>:DATA ... 1547
SBUS<sb>:QSPI:OPCode:ITEM<n>:DDR ... 1547
SBUS<sb>:QSPI:OPCode:ITEM<n>:DMCYcles ... 1547
SBUS<sb>:QSPI:OPCode:ITEM<n>:DTLanes ... 1548
SBUS<sb>:QSPI:OPCode:ITEM<n>:NAME ... 1548
SBUS<sb>:QSPI:SVOP ... 1548

SBUS<sb>:QSPI:OPCode:APPend

Adds a new item to the opcode list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Add" on page 559

SBUS<sb>:QSPI:OPCode:DALL

Deletes all currently defined opcodes from the list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Delete all" on page 560

SBUS<sb>:QSPI:OPCode:DELete <Index>

Deletes the opcode with the selected index.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<Index>

Usage: Setting only
Asynchronous command

Manual operation: See "Delete" on page 559

SBUS<sb>:QSPI:OPCode:RESet

Resets the opcode fields to the predefined values.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Preset" on page 560

SBUS<sb>:QSPI:LDOPcode <FileName>

Loads an opcode file from the selected file.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Open, Save as" on page 560

SBUS<sb>:QSPI:OPCode:SIZE?

Sets the size of the opcode, hence the number of opcodes currently defined on the table in the "Format" tab of QUAD-SPI.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:QSPI:OPCode:ITEM<n>:ADBYtes <AddressBytes>

Sets the address byte. It specifies the location in the flash memory where the operation (e.g., read, write) is performed.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> Index of the opcode

Parameters:
<AddressBytes> Range: 0 to 4
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Address Bytes" on page 562

SBUS<sb>:QSPI:OPCode:ITEM<n>:ADLanes <AddressLanes>

Selects how many lines or lanes are used to send the address bytes to the flash memory.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> Index of the opcode

Parameters:
<AddressLanes> SINGle | DUAL | QUAD
*RST: SINGle

Usage: Asynchronous command

Manual operation: See "Address Lanes" on page 562

SBUS<sb>:QSPI:OPCode:ITEM<n>:ALT <Alt>

Enable, if an alternative field is available.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> Index of the opcode

Parameters:
<Alt> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Alternative Field" on page 562

SBUS<sb>:QSPI:OPCode:ITEM<n>:CODE <Opcode>

Sets the opcode value.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> Index of the opcode

Parameters:

<Opcode> Range: 0 to 255
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Opcode" on page 561

SBUS<sb>:QSPI:OPCode:ITEM<n>:DATA <Data>

Enable, if data is being transferred in the opcode operation.

Suffix:

<sb> 1 to 4, index of the serial bus

<n> Index of the opcode

Parameters:

<Data> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Data" on page 562

SBUS<sb>:QSPI:OPCode:ITEM<n>:DDR <DDR>

If enabled, the data is transferred on both the rising and falling edges of the clock signal. This setting effectively doubles the data transfer rate compared to a single data rate (SDR), which transfers data only on one clock edge.

Suffix:

<sb> 1 to 4, index of the serial bus

<n> Index of the opcode

Parameters:

<DDR> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "DDR" on page 561

SBUS<sb>:QSPI:OPCode:ITEM<n>:DMCYcles <DummyCycles>

Sets the number of dummy cycles. Dummy cycles are clock cycles inserted after the address or other command sequences but before data transfer begins. These cycles allow the flash memory device additional time to perform internal operations or latch onto the correct data to ensure accurate read or write operations.

Suffix:

<sb> 1 to 4, index of the serial bus

<n> Index of the opcode

Parameters:

<DummyCycles> Range: 0 to 255
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Dummy Cycles" on page 562

SBUS<sb>:QSPI:OPCode:ITEM<n>:DTLanes <DataLanes>

Selects how many lanes are used for the data transfer.

The data lanes refer to the physical connections through which data is transmitted between the main (typically a microcontroller) and the sub (typically a flash memory device). QUADSPI can utilize multiple data lines to increase the speed and efficiency of data transfer.

Suffix:

<sb> 1 to 4, index of the serial bus

<n> Index of the opcode

Parameters:

<DataLanes> SINGle | DUAL | QUAD
*RST: SINGle

Usage: Asynchronous command

Manual operation: See "Data Lanes" on page 562

SBUS<sb>:QSPI:OPCode:ITEM<n>:NAME <Name>

Sets the name for the Opcode.

Suffix:

<sb> 1 to 4, index of the serial bus

<n> Index of the opcode

Parameters:

<Name>

Usage: Asynchronous command

Manual operation: See "Name" on page 561

SBUS<sb>:QSPI:SVOP <FileName>

Saves the opcode file.

Suffix:

<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Open, Save as" on page 560

18.18.3.4 Software trigger

There are two commands for each parameter, that you can use for defining the QUAD SPI settings.

For example, to set the *Frame type =Data > Field =Addr >01100* value you can use one of the following commands:

- `TRIGger:SBSW:QSPI:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `TRIGger:SBSW:QSPI:DMIN "Data", "Addr", 01100`
  Defines the parameter by using the frame and field name.

TRIGger:SBSW:QSPI:CHKall....1549
TRIGger:SBSW:QSPI:CLR....1550
TRIGger:SBSW:QSPI:INVert....1550
TRIGger:SBSW:QSPI:RST....1550
TRIGger:SBSW:QSPI:FRENable....1550
TRIGger:SBSW:QSPI:FRAMe<fr>:ENABle....1550
TRIGger:SBSW:QSPI:BIT....1551
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:BIT....1551
TRIGger:SBSW:QSPI:DMAX....1551
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:DMAX....1551
TRIGger:SBSW:QSPI:DMIN....1551
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:DMIN....1551
TRIGger:SBSW:QSPI:DOPerator....1552
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:DOPerator....1552
TRIGger:SBSW:QSPI:FIENable....1552
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:ENABle....1552
TRIGger:SBSW:QSPI:IMAX....1552
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:IMAX....1552
TRIGger:SBSW:QSPI:IMIN....1553
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:IMIN....1553
TRIGger:SBSW:QSPI:IOPerator....1553
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:IOPerator....1553
TRIGger:SBSW:QSPI:ERENable....1554
TRIGger:SBSW:QSPI:ERRor<m>:ENABle....1554
SBUS<sb>:QSPI:SWTindex?....1554
SBUS<sb>:QSPI:SWTTime?....1554

TRIGger:SBSW:QSPI:CHKall

Enables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 563

TRIGger:SBSW:QSPI:CLR

Disables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 563

TRIGger:SBSW:QSPI:INVert

Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 563

TRIGger:SBSW:QSPI:RST

Presets the state of the selected frames and error types for the software trigger.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 563

TRIGger:SBSW:QSPI:FRENable <Frame>,<Enabler>
TRIGger:SBSW:QSPI:FRENable? <Enabler>
TRIGger:SBSW:QSPI:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 564

TRIGger:SBSW:QSPI:BIT <Frame>,<Field>,<Bit>
TRIGger:SBSW:QSPI:BIT? <Bit>
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 564

TRIGger:SBSW:QSPI:DMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:QSPI:DMAX? <Data>
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range for the software trigger, if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 564

TRIGger:SBSW:QSPI:DMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:QSPI:DMIN? <Data>
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 564

TRIGger:SBSW:QSPI:DOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:QSPI:DOPerator? <Operator>
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern of the software trigger in the selected field of the selected frame.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 564

TRIGger:SBSW:QSPI:FIENable <Frame>,<Field>,<Enabler>
TRIGger:SBSW:QSPI:FIENable? <Enabler>
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame of the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 564

TRIGger:SBSW:QSPI:IMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:QSPI:IMAX? <Data>
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range for the software trigger if the operator is set to `INRange`.

You can set the operator with `TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 564

TRIGger:SBSW:QSPI:IMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:QSPI:IMIN? <Data>
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 564

TRIGger:SBSW:QSPI:IOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:QSPI:IOPerator? <Operator>
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 564

TRIGger:SBSW:QSPI:ERENable <ErrorName>,<Enabler>
TRIGger:SBSW:QSPI:ERENable? <Enabler>
TRIGger:SBSW:QSPI:ERRor<m>:ENABle <Enable>

Defines the error type for the software trigger.

Suffix:
<m> Index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 566

SBUS<sb>:QSPI:SWTindex?

Queries the software trigger index.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Index> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:QSPI:SWTTime?

Queries the software trigger time in seconds.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Time> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.3.5 Decode results

SBUS<sb>:QSPI:FCOunt?....1555
SBUS<sb>:QSPI:FRAMe<fr>:ADDR?....1555
SBUS<sb>:QSPI:FRAMe<fr>:ALT?....1556
SBUS<sb>:QSPI:FRAMe<fr>:BITRate?....1556
SBUS<sb>:QSPI:FRAMe<fr>:DATA?....1556
SBUS<sb>:QSPI:FRAMe<fr>:FLDCount?....1556
SBUS<sb>:QSPI:FRAMe<fr>:FDATa?....1557
SBUS<sb>:QSPI:FRAMe<fr>:FLD<fl>:VALue?....1557
SBUS<sb>:QSPI:FRAMe<fr>:FLD<fl>:FVALue?....1557
SBUS<sb>:QSPI:FRAMe<fr>:FLD<fl>:LABel?....1558
SBUS<sb>:QSPI:FRAMe<fr>:FLD<fl>:STATe?....1558
SBUS<sb>:QSPI:FRAMe<fr>:ILBL?....1559
SBUS<sb>:QSPI:FRAMe<fr>:IVALue?....1559
SBUS<sb>:QSPI:FRAMe<fr>:TYPE?....1559
SBUS<sb>:QSPI:FRAMe<fr>:STARt?....1559
SBUS<sb>:QSPI:FRAMe<fr>:STATus?....1560
SBUS<sb>:QSPI:FRAMe<fr>:STOP?....1560

SBUS<sb>:QSPI:FCOunt?

Returns the number of decoded frames.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:QSPI:FRAMe<fr>:ADDR?

Returns the address of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameAddress> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:QSPI:FRAMe<fr>:ALT?

Retruns the value of the alternate byte for the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameAlt> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:QSPI:FRAMe<fr>:BITRate?

Returns the bit rate of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<PrimaryBitRate> Increment: 1
*RST: 0
Default unit: bps

Usage: Query only
Asynchronous command

SBUS<sb>:QSPI:FRAMe<fr>:DATA?

Returns the data of the specified frame in comma-separated values.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

<Values>

Usage: Query only
Asynchronous command

SBUS<sb>:QSPI:FRAMe<fr>:FLDCount?

Returns the field count for the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:QSPI:FRAMe<fr>:FDATa?

Returns the foramtted data value of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameData>

Usage: Query only
Asynchronous command

SBUS<sb>:QSPI:FRAMe<fr>:FLD<fl>:VALue?

Returns the value of the specified field of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Value> Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:QSPI:FRAMe<fr>:FLD<fl>:FVALue?

Returns the formatted value of the specified field.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<FormattedValue>

Usage: Query only
Asynchronous command

SBUS<sb>:QSPI:FRAMe<fr>:FLD<fl>:LABel?

Returns the label of the selected field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Label>

Usage: Query only
Asynchronous command

SBUS<sb>:QSPI:FRAMe<fr>:FLD<fl>:STATe?

Returns the state of the selected field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<State> OK | LENGth | OPCode | INComplete

OK
The field is valid.

LENGth
The field does not have the expected length.

OPCode
The opcode value is not found in your frame description list. See Section 14.3.4, "QUAD-SPI format configuration", on page 559.

INComplete
The field is not completely contained in the acquisition. The acquired part of the field is usually valid, but cannot always be trusted.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:QSPI:FRAMe<fr>:ILBL?

Returns the label of the instruction.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameLabel>

Usage: Query only
Asynchronous command

SBUS<sb>:QSPI:FRAMe<fr>:IVALue?

Returns the instruction mode value for the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrmInstruction> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:QSPI:FRAMe<fr>:TYPE?

Returns the type of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameType>

Usage: Query only
Asynchronous command

SBUS<sb>:QSPI:FRAMe<fr>:STARt?

Returns the start time of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:QSPI:FRAMe<fr>:STATus?

Returns the overall state of the specified frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameState> OK | LENGth | OPCode | INComplete

`OK`: the frame is valid.
`OPCode`: operation code.
`INComplete`: INComplete word. The word does not have the expected word length.
`LENGth`: The frame is not contained in the acquisition.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:QSPI:FRAMe<fr>:STOP?

Returns the end time of the specified frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.4 OCTO-SPI (option R&S MXO5-K510)

Before MXO 5 can accept the specific bus commands, make sure that:

- The decoding of the specified bus is enabled with `SBUS<sb>[:STATe]`.
- The bus is set to the correct type with `SBUS<sb>:TYPE`.

- Configuration....1561
- Filter....1568
- Format....1573
- Software trigger....1578
- Decode results....1584

18.18.4.1 Configuration

SBUS<sb>:OSPI:CSEL:HYSTeresis....1562
SBUS<sb>:OSPI:CSEL:POLarity....1562
SBUS<sb>:OSPI:CSEL:SOURce....1563
SBUS<sb>:OSPI:CSEL:THReshold....1563
SBUS<sb>:OSPI:MODE....1563
SBUS<sb>:OSPI:CK:HYSTeresis....1563
SBUS<sb>:OSPI:CK:SOURce....1564
SBUS<sb>:OSPI:CK:THReshold....1564
SBUS<sb>:OSPI:IOZero:HYSTeresis....1564
SBUS<sb>:OSPI:IOONe:HYSTeresis....1564
SBUS<sb>:OSPI:IOTWo:HYSTeresis....1564
SBUS<sb>:OSPI:IOTHree:HYSTeresis....1564
SBUS<sb>:OSPI:IOFR:HYSTeresis....1564
SBUS<sb>:OSPI:IOFV:HYSTeresis....1564
SBUS<sb>:OSPI:IOSX:HYSTeresis....1564
SBUS<sb>:OSPI:IOSV:HYSTeresis....1564
SBUS<sb>:OSPI:IOZero:POLarity....1565
SBUS<sb>:OSPI:IOONe:POLarity....1565
SBUS<sb>:OSPI:IOTWo:POLarity....1565
SBUS<sb>:OSPI:IOTHree:POLarity....1565
SBUS<sb>:OSPI:IOFR:POLarity....1565
SBUS<sb>:OSPI:IOFV:POLarity....1565
SBUS<sb>:OSPI:IOSX:POLarity....1565
SBUS<sb>:OSPI:IOSV:POLarity....1565
SBUS<sb>:OSPI:IOZero:POSition....1565
SBUS<sb>:OSPI:IOONe:POSition....1565
SBUS<sb>:OSPI:IOTWo:POSition....1565
SBUS<sb>:OSPI:IOTHree:POSition....1565
SBUS<sb>:OSPI:IOFR:POSition....1565
SBUS<sb>:OSPI:IOFV:POSition....1565
SBUS<sb>:OSPI:IOSX:POSition....1565
SBUS<sb>:OSPI:IOSV:POSition....1565
SBUS<sb>:OSPI:IOZero:SCALe....1565
SBUS<sb>:OSPI:IOONe:SCALe....1565
SBUS<sb>:OSPI:IOTWo:SCALe....1565
SBUS<sb>:OSPI:IOTHree:SCALe....1566
SBUS<sb>:OSPI:IOFR:SCALe....1566
SBUS<sb>:OSPI:IOFV:SCALe....1566
SBUS<sb>:OSPI:IOSX:SCALe....1566

SBUS<sb>:OSPI:IOSV:SCALe....1566
SBUS<sb>:OSPI:IOZero:SOURce....1566
SBUS<sb>:OSPI:IOONe:SOURce....1566
SBUS<sb>:OSPI:IOTWo:SOURce....1566
SBUS<sb>:OSPI:IOTHree:SOURce....1566
SBUS<sb>:OSPI:IOFR:SOURce....1566
SBUS<sb>:OSPI:IOFV:SOURce....1566
SBUS<sb>:OSPI:IOSX:SOURce....1566
SBUS<sb>:OSPI:IOSV:SOURce....1566
SBUS<sb>:OSPI:IOZero:THReshold....1566
SBUS<sb>:OSPI:IOONe:THReshold....1566
SBUS<sb>:OSPI:IOTWo:THReshold....1566
SBUS<sb>:OSPI:IOTHree:THReshold....1566
SBUS<sb>:OSPI:IOFR:THReshold....1566
SBUS<sb>:OSPI:IOFV:THReshold....1566
SBUS<sb>:OSPI:IOSX:THReshold....1566
SBUS<sb>:OSPI:IOSV:THReshold....1566
SBUS<sb>:OSPI:DS:HYSTeresis....1567
SBUS<sb>:OSPI:DS:SOURce....1567
SBUS<sb>:OSPI:DS:THReshold....1567

SBUS<sb>:OSPI:CSEL:HYSTeresis <Hysteresis>

Sets a value for the hysteresis for the CS channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "CS/CK/IO<n>/DS hysteresis" on page 573

SBUS<sb>:OSPI:CSEL:POLarity <CSPolarity>

Selects if the transmitted signal for the respective line is active high (high = 1) or active low (low = 1).

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<CSPolarity> ACTLow | ACTHigh
*RST: ACTLow

Usage: Asynchronous command

Manual operation: See "Polarity: CS, IO<n>" on page 571

SBUS<sb>:OSPI:CSEL:SOURce <CSSource>

Sets the input channel of the CS line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<CSSource> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "CS, SCLK, IO n" on page 571

SBUS<sb>:OSPI:CSEL:THReshold <Threshold>

Sets a user-defined threshold value for the line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Threshold>

Usage: Asynchronous command

Manual operation: See "CS/CK/IO<n>/DS threshold" on page 572

SBUS<sb>:OSPI:MODE <InstructionMd>

Selects the instruction mode that defines how many lanes are used to transmit data.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<InstructionMd> WR1S | WR2S | WR4S | WR8S | WR1D | WR2D | WR4D | WR8D

WR1S | WR2S | WR4S | WR8S
Number of lanes in single data rate mode

WR1D | WR2D | WR4D | WR8D
Number of lanes in dual data rate mode

*RST: WR1S

Usage: Asynchronous command

Manual operation: See "Instruction" on page 571

SBUS<sb>:OSPI:CK:HYSTeresis <Hysteresis>

Sets a value for the hysteresis for the clock line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "CS/CK/IO<n>/DS hysteresis" on page 573

SBUS<sb>:OSPI:CK:SOURce <CKSource>

Sets the input channel of the clock line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<CKSource> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "CS, SCLK, IO n" on page 571

SBUS<sb>:OSPI:CK:THReshold <Threshold>

Sets a user-defined threshold value for the line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Threshold>

Usage: Asynchronous command

Manual operation: See "CS/CK/IO<n>/DS threshold" on page 572

SBUS<sb>:OSPI:IOZero:HYSTeresis <Hysteresis>
SBUS<sb>:OSPI:IOONe:HYSTeresis <Hysteresis>
SBUS<sb>:OSPI:IOTWo:HYSTeresis <Hysteresis>
SBUS<sb>:OSPI:IOTHree:HYSTeresis <Hysteresis>
SBUS<sb>:OSPI:IOFR:HYSTeresis <Hysteresis>
SBUS<sb>:OSPI:IOFV:HYSTeresis <Hysteresis>
SBUS<sb>:OSPI:IOSX:HYSTeresis <Hysteresis>
SBUS<sb>:OSPI:IOSV:HYSTeresis <Hysteresis>

Sets a value for the hysteresis for the IO<n> line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "CS/CK/IO<n>/DS hysteresis" on page 573

SBUS<sb>:OSPI:IOZero:POLarity <IO0Polarity>
SBUS<sb>:OSPI:IOONe:POLarity <IO1Polarity>
SBUS<sb>:OSPI:IOTWo:POLarity <IO2Polarity>
SBUS<sb>:OSPI:IOTHree:POLarity <IO3Polarity>
SBUS<sb>:OSPI:IOFR:POLarity <IO4Polarity>
SBUS<sb>:OSPI:IOFV:POLarity <IO5Polarity>
SBUS<sb>:OSPI:IOSX:POLarity <IO6Polarity>
SBUS<sb>:OSPI:IOSV:POLarity <IO7Polarity>

Selects if the transmitted signal for the respective line is active high (high = 1) or active low (low = 1).

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<IO7Polarity> ACTLow | ACTHigh
*RST: ACTHigh

Usage: Asynchronous command

Manual operation: See "Polarity: CS, IO<n>" on page 571

SBUS<sb>:OSPI:IOZero:POSition <OCTOSPI IO0 position>
SBUS<sb>:OSPI:IOONe:POSition <OCTOSPI IO1 position>
SBUS<sb>:OSPI:IOTWo:POSition <OCTOSPI IO2 position>
SBUS<sb>:OSPI:IOTHree:POSition <OCTOSPI IO3 position>
SBUS<sb>:OSPI:IOFR:POSition <OCTOSPI IO4 position>
SBUS<sb>:OSPI:IOFV:POSition <OCTOSPI IO5 position>
SBUS<sb>:OSPI:IOSX:POSition <OCTOSPI IO6 position>
SBUS<sb>:OSPI:IOSV:POSition <OCTOSPI IO7 position>

Sets the vertical position of the IO<n> signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<OCTOSPI IO7 position>

Usage: Asynchronous command

SBUS<sb>:OSPI:IOZero:SCALe <OCTOSPI IO0 scale>
SBUS<sb>:OSPI:IOONe:SCALe <OCTOSPI IO1 scale>
SBUS<sb>:OSPI:IOTWo:SCALe <OCTOSPI IO2 scale>

SBUS<sb>:OSPI:IOTHree:SCALe <OCTOSPI IO3 scale>
SBUS<sb>:OSPI:IOFR:SCALe <OCTOSPI IO4 scale>
SBUS<sb>:OSPI:IOFV:SCALe <OCTOSPI IO5 scale>
SBUS<sb>:OSPI:IOSX:SCALe <OCTOSPI IO6 scale>
SBUS<sb>:OSPI:IOSV:SCALe <OCTOSPI IO7 scale>

Set the vertical scale of the IO<n> signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<OCTOSPI IO7 scale>

Usage: Asynchronous command

SBUS<sb>:OSPI:IOZero:SOURce <IO0Source>
SBUS<sb>:OSPI:IOONe:SOURce <IO1Source>
SBUS<sb>:OSPI:IOTWo:SOURce <IO2Source>
SBUS<sb>:OSPI:IOTHree:SOURce <IO3Source>
SBUS<sb>:OSPI:IOFR:SOURce <IO4Source>
SBUS<sb>:OSPI:IOFV:SOURce <IO5Source>
SBUS<sb>:OSPI:IOSX:SOURce <IO6Source>
SBUS<sb>:OSPI:IOSV:SOURce <IO7Source>

Sets the input channel of the IO<n> line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<IO7Source> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "CS, SCLK, IO n" on page 571

SBUS<sb>:OSPI:IOZero:THReshold <Threshold>
SBUS<sb>:OSPI:IOONe:THReshold <Threshold>
SBUS<sb>:OSPI:IOTWo:THReshold <Threshold>
SBUS<sb>:OSPI:IOTHree:THReshold <Threshold>
SBUS<sb>:OSPI:IOFR:THReshold <Threshold>
SBUS<sb>:OSPI:IOFV:THReshold <Threshold>
SBUS<sb>:OSPI:IOSX:THReshold <Threshold>
SBUS<sb>:OSPI:IOSV:THReshold <Threshold>

Sets a user-defined threshold value for the line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Threshold>

Usage: Asynchronous command

Manual operation: See "CS/CK/IO<n>/DS threshold" on page 572

SBUS<sb>:OSPI:DS:HYSTeresis <Hysteresis>

Sets a value for the hysteresis for the data strobe line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "CS/CK/IO<n>/DS hysteresis" on page 573

SBUS<sb>:OSPI:DS:SOURce <DSSource>

Sets the input channel of the data strobe line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DSSource> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "CS, SCLK, IO n" on page 571

SBUS<sb>:OSPI:DS:THReshold <Threshold>

Sets a user-defined threshold value for the line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Threshold>

Usage: Asynchronous command

Manual operation: See "CS/CK/IO<n>/DS threshold" on page 572

18.18.4.2 Filter

There are two commands for each parameter, that you can use for defining the OCTO-SPI settings.

For example, to set the *Frame type =Data > Field =Addr >01100* value you can use one of the following commands:

- `SBUS:OSPI:FILTer:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `SBUS:OSPI:FILTer:DMIN "Data", "Addr", 01100`
  Defines the parameter by using the frame and field name.

SBUS<sb>:OSPI:FILTer:CHKall....1568
SBUS<sb>:OSPI:FILTer:CLR....1569
SBUS<sb>:OSPI:FILTer:INVert....1569
SBUS<sb>:OSPI:FILTer:RST....1569
SBUS<sb>:OSPI:FILTer:BIT....1569
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:BIT....1569
SBUS<sb>:OSPI:FILTer:DMAX....1570
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:DMAX....1570
SBUS<sb>:OSPI:FILTer:DMIN....1570
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:DMIN....1570
SBUS<sb>:OSPI:FILTer:DOPerator....1570
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:DOPerator....1570
SBUS<sb>:OSPI:FILTer:IMAX....1571
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:IMAX....1571
SBUS<sb>:OSPI:FILTer:IMIN....1571
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:IMIN....1571
SBUS<sb>:OSPI:FILTer:IOPerator....1572
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:IOPerator....1572
SBUS<sb>:OSPI:FILTer:ERENable....1572
SBUS<sb>:OSPI:FILTer:ERRor<n>:ENABle....1572
SBUS<sb>:OSPI:FILTer:FIENable....1572
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:ENABle....1572
SBUS<sb>:OSPI:FILTer:FRENable....1573
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:ENABle....1573

SBUS<sb>:OSPI:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 574

SBUS<sb>:OSPI:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 574

SBUS<sb>:OSPI:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 574

SBUS<sb>:OSPI:FILTer:RST

Presets the state of the selected frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 574

SBUS<sb>:OSPI:FILTer:BIT <Frame>,<Field>,<Bit>
SBUS<sb>:OSPI:FILTer:BIT? <Bit>
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 575

SBUS<sb>:OSPI:FILTer:DMAX <Frame>,<Field>,<Data>
SBUS<sb>:OSPI:FILTer:DMAX? <Data>
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORANGe`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 575

SBUS<sb>:OSPI:FILTer:DMIN <Frame>,<Field>,<Data>
SBUS<sb>:OSPI:FILTer:DMIN? <Data>
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 575

SBUS<sb>:OSPI:FILTer:DOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:OSPI:FILTer:DOPerator? <Operator>
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 575

SBUS<sb>:OSPI:FILTer:IMAX <Frame>,<Field>,<Data>
SBUS<sb>:OSPI:FILTer:IMAX? <Data>
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if the operator is set to `INRange`.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 575

SBUS<sb>:OSPI:FILTer:IMIN <Frame>,<Field>,<Data>
SBUS<sb>:OSPI:FILTer:IMIN? <Data>
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 575

SBUS<sb>:OSPI:FILTer:IOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:OSPI:FILTer:IOPerator? <Operator>
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 575

SBUS<sb>:OSPI:FILTer:ERENable <ErrorName>,<Enabler>
SBUS<sb>:OSPI:FILTer:ERENable? <Enabler>
SBUS<sb>:OSPI:FILTer:ERRor<n>:ENABle <Enable>

Defines the error type to be filtered on.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 576

SBUS<sb>:OSPI:FILTer:FIENable <Frame>,<Field>,<Enabler>
SBUS<sb>:OSPI:FILTer:FIENable? <Enabler>
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 575

SBUS<sb>:OSPI:FILTer:FRENable <Frame>,<Enabler>
SBUS<sb>:OSPI:FILTer:FRENable? <Enabler>
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Enable> OFF | ON

*RST: ON

Usage: Asynchronous command

18.18.4.3 Format

SBUS<sb>:OSPI:OPCode:APPend ... 1573
SBUS<sb>:OSPI:OPCode:DALL ... 1574
SBUS<sb>:OSPI:OPCode:DELete ... 1574
SBUS<sb>:OSPI:OPCode:RESet ... 1574
SBUS<sb>:OSPI:LDOPcode ... 1574
SBUS<sb>:OSPI:SVOP ... 1575
SBUS<sb>:OSPI:OPCode:SIZE? ... 1575
SBUS<sb>:OSPI:OPCode:ITEM<n>:CODE ... 1575
SBUS<sb>:OSPI:OPCode:ITEM<n>:NAME ... 1575
SBUS<sb>:OSPI:OPCode:ITEM<n>:CMMode ... 1576
SBUS<sb>:OSPI:OPCode:ITEM<n>:CMEXtension ... 1576
SBUS<sb>:OSPI:OPCode:ITEM<n>:ADBYtes ... 1576
SBUS<sb>:OSPI:OPCode:ITEM<n>:ADMode ... 1577
SBUS<sb>:OSPI:OPCode:ITEM<n>:LACYcles ... 1577
SBUS<sb>:OSPI:OPCode:ITEM<n>:DTTYpe ... 1578
SBUS<sb>:OSPI:OPCode:ITEM<n>:DTMode ... 1578

SBUS<sb>:OSPI:OPCode:APPend

Adds a new item to the opcode list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Add" on page 576

SBUS<sb>:OSPI:OPCode:DALL

Deletes all currently defined opcodes from the list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Delete all" on page 577

SBUS<sb>:OSPI:OPCode:DELete <Index>

Deletes the opcode with the selected index.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<Index>

Usage: Setting only
Asynchronous command

Manual operation: See "Delete" on page 577

SBUS<sb>:OSPI:OPCode:RESet

Resets the opcode fields to the predefined values.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Preset" on page 577

SBUS<sb>:OSPI:LDOPcode <FileName>

Loads an opcode file from the selected file.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Open, Save as" on page 577

SBUS<sb>:OSPI:SVOP <FileName>

Saves the opcode file.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Open, Save as" on page 577

SBUS<sb>:OSPI:OPCode:SIZE?

Sets the size of the opcode, hence the number of opcodes currently defined on the table in the "Format" tab of "OCTO-SPI".

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:OSPI:OPCode:ITEM<n>:CODE <Opcode>

Sets the opcode value.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> Index of the opcode

Parameters:
<Opcode> Range: 0 to 255
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Command" on page 578

SBUS<sb>:OSPI:OPCode:ITEM<n>:NAME <Name>

Sets the name for the Opcode.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> Index of the opcode

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Name" on page 578

SBUS<sb>:OSPI:OPCode:ITEM<n>:CMMode <CmdExtensionMd>

Enable to send an extra extension byte immediately after the command opcode.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> Index of the opcode

Parameters:
<CmdExtensionMd> WR1S | WR2S | WR4S | WR8S | WR1D | WR2D | WR4D | WR8D

WR1S | WR2S | WR4S | WR8S
Number of lanes in single data rate mode

WR1D | WR2D | WR4D | WR8D
Number of lanes in dual data rate mode

*RST: WR8D

Usage: Asynchronous command

Manual operation: See "Command extension" on page 578

SBUS<sb>:OSPI:OPCode:ITEM<n>:CMEXtension <CmdExtension>

Selects how many lines are used for sending the command extension byte.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> Index of the opcode

Parameters:
<CmdExtension> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Cmd. ext.mode" on page 578

SBUS<sb>:OSPI:OPCode:ITEM<n>:ADBYtes <AddressBytes>

Sets the address byte. It specifies the location in the flash memory where the operation (e.g., read, write) is performed.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> Index of the opcode

Parameters:

<AddressBytes> Range: 0 to 5
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Address Bytes" on page 579

SBUS<sb>:OSPI:OPCode:ITEM<n>:ADMode <AddressMode>

Selects how many lines are used to send the address bytes to the flash memory.

Suffix:

<sb> 1..4

<n> *

Parameters:

<AddressMode> WR1S | WR2S | WR4S | WR8S | WR1D | WR2D | WR4D | WR8D

WR1S | WR2S | WR4S | WR8S
Number of lanes in single data rate mode

WR1D | WR2D | WR4D | WR8D
Number of lanes in dual data rate mode

*RST: WR8D

Usage: Asynchronous command

Manual operation: See "Address mode" on page 579

SBUS<sb>:OSPI:OPCode:ITEM<n>:LACYcles <LatencyCycles>

Sets the number of latancy cycles. Latency cycles are clock cycles inserted after the address or other command sequences but before data transfer begins.

Suffix:

<sb> 1 to 4, index of the serial bus

<n> Index of the opcode

Parameters:

<LatencyCycles> Range: 0 to 255
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Latency Cycles" on page 579

SBUS<sb>:OSPI:OPCode:ITEM<n>:DTTYpe <DataType>

Determines the direction of the data flow for the payload after the command and address are sent.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> Index of the opcode

Parameters:
<DataType> NONE | WRITe | READ

*RST: NONE

Usage: Asynchronous command

Manual operation: See "Data type" on page 579

SBUS<sb>:OSPI:OPCode:ITEM<n>:DTMode <DataMode>

Selects how many lines are used for the data transfer.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> Index of the opcode

Parameters:
<DataMode> WR1S | WR2S | WR4S | WR8S | WR1D | WR2D | WR4D | WR8D

WR1S | WR2S | WR4S | WR8S
Number of lanes in single data rate mode

WR1D | WR2D | WR4D | WR8D
Number of lanes in dual data rate mode

*RST: WR8D

Usage: Asynchronous command

Manual operation: See "Data mode" on page 579

18.18.4.4 Software trigger

There are two commands for each parameter, that you can use for defining the OCTO SPI settings.

For example, to set the *Frame type =Data > Field =Addr >01100* value you can use one of the following commands:

- `TRIGger:SBSW:OSPI:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `TRIGger:SBSW:OSPI:DMIN "Data", "Addr", 01100`
  Defines the parameter by using the frame and field name.

TRIGger:SBSW:OSPI:CHKall....1579
TRIGger:SBSW:OSPI:CLR....1579
TRIGger:SBSW:OSPI:INVert....1579
TRIGger:SBSW:OSPI:RST....1580
TRIGger:SBSW:OSPI:FRENable....1580
TRIGger:SBSW:OSPI:FRAMe<fr>:ENABle....1580
TRIGger:SBSW:OSPI:BIT....1580
TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:BIT....1580
TRIGger:SBSW:OSPI:DMAX....1581
TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:DMAX....1581
TRIGger:SBSW:OSPI:DMIN....1581
TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:DMIN....1581
TRIGger:SBSW:OSPI:DOPerator....1581
TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:DOPerator....1581
TRIGger:SBSW:OSPI:FIENable....1582
TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:ENABle....1582
TRIGger:SBSW:OSPI:IMAX....1582
TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:IMAX....1582
TRIGger:SBSW:OSPI:IMIN....1583
TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:IMIN....1583
TRIGger:SBSW:OSPI:IOPerator....1583
TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:IOPerator....1583
TRIGger:SBSW:OSPI:ERENable....1583
TRIGger:SBSW:OSPI:ERRor<m>:ENABle....1583
SBUS<sb>:OSPI:SWTindex?....1584
SBUS<sb>:OSPI:SWTTime?....1584

TRIGger:SBSW:OSPI:CHKall

Enables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 580

TRIGger:SBSW:OSPI:CLR

Disables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 580

TRIGger:SBSW:OSPI:INVert

Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 580

TRIGger:SBSW:OSPI:RST

Presets the state of the selected frames and error types for the software trigger.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 580

TRIGger:SBSW:OSPI:FRENable <Frame>,<Enabler>
TRIGger:SBSW:OSPI:FRENable? <Enabler>
TRIGger:SBSW:OSPI:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 581

TRIGger:SBSW:OSPI:BIT <Frame>,<Field>,<Bit>
TRIGger:SBSW:OSPI:BIT? <Bit>
TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 581

TRIGger:SBSW:OSPI:DMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:OSPI:DMAX? <Data>
TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range for the software trigger, if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 581

TRIGger:SBSW:OSPI:DMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:OSPI:DMIN? <Data>
TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 581

TRIGger:SBSW:OSPI:DOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:OSPI:DOPerator? <Operator>
TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern of the software trigger in the selected field of the selected frame.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:

<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 581

TRIGger:SBSW:OSPI:FIENable <Frame>,<Field>,<Enabler>
TRIGger:SBSW:OSPI:FIENable? <Enabler>
TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame of the software trigger.

Suffix:

<fr> Index of the frame

<fl> Index of the field

Parameters:

<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 581

TRIGger:SBSW:OSPI:IMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:OSPI:IMAX? <Data>
TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range for the software trigger if the operator is set to `INRange`.

You can set the operator with `TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 581

TRIGger:SBSW:OSPI:IMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:OSPI:IMIN? <Data>
TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 581

TRIGger:SBSW:OSPI:IOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:OSPI:IOPerator? <Operator>
TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 581

TRIGger:SBSW:OSPI:ERENable <ErrorName>,<Enabler>
TRIGger:SBSW:OSPI:ERENable? <Enabler>
TRIGger:SBSW:OSPI:ERRor<m>:ENABle <Enable>

Defines the error type for the software trigger.

Suffix:
<m> Index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 582

SBUS<sb>:OSPI:SWTindex?

Queries the software trigger index.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Index> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:OSPI:SWTTime?

Queries the software trigger time in seconds.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Time> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.4.5 Decode results

SBUS<sb>:OSPI:FCOunt? 1585
SBUS<sb>:OSPI:FRAMe<fr>:ADDR? 1585
SBUS<sb>:OSPI:FRAMe<fr>:ADFormatted? 1585
SBUS<sb>:OSPI:FRAMe<fr>:BITRate? 1585
SBUS<sb>:OSPI:FRAMe<fr>:DATA? 1586
SBUS<sb>:OSPI:FRAMe<fr>:FLDCount? 1586
SBUS<sb>:OSPI:FRAMe<fr>:FDATa? 1586
SBUS<sb>:OSPI:FRAMe<fr>:FLD<fl>:VALue? 1587
SBUS<sb>:OSPI:FRAMe<fr>:FLD<fl>:FVALue? 1587
SBUS<sb>:OSPI:FRAMe<fr>:FLD<fl>:LABel? 1587
SBUS<sb>:OSPI:FRAMe<fr>:FLD<fl>:STATe? 1588
SBUS<sb>:OSPI:FRAMe<fr>:CMD? 1588
SBUS<sb>:OSPI:FRAMe<fr>:CMDFormatted? 1588
SBUS<sb>:OSPI:FRAMe<fr>:CEXTension? 1589
SBUS<sb>:OSPI:FRAMe<fr>:CXFormatted? 1589
SBUS<sb>:OSPI:FRAMe<fr>:DCOunt? 1589

SBUS<sb>:OSPI:FRAMe<fr>:TYPE? 1590
SBUS<sb>:OSPI:FRAMe<fr>:STARt? 1590
SBUS<sb>:OSPI:FRAMe<fr>:STATus? 1590
SBUS<sb>:OSPI:FRAMe<fr>:STOP? 1591

SBUS<sb>:OSPI:FCOunt?

Returns the number of decoded frames.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:OSPI:FRAMe<fr>:ADDR?

Returns the address of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameAddress> Range: 0 to 281474976710655
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:OSPI:FRAMe<fr>:ADFormatted?

Returns the formatted address of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrmFormattedAddr>

Usage: Query only
Asynchronous command

SBUS<sb>:OSPI:FRAMe<fr>:BITRate?

Returns the bit rate of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<PrimaryBitRate> Range: 0 to 100000000000
Increment: 1
*RST: 0
Default unit: bps

Usage: Query only
Asynchronous command

SBUS<sb>:OSPI:FRAMe<fr>:DATA?

Returns the data of the specified frame in comma-separated values.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

<Values>

Usage: Query only
Asynchronous command

SBUS<sb>:OSPI:FRAMe<fr>:FLDCount?

Returns the field count for the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:OSPI:FRAMe<fr>:FDATa?

Returns the foramtted data value of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameData>

Usage: Query only
Asynchronous command

SBUS<sb>:OSPI:FRAMe<fr>:FLD<fl>:VALue?

Returns the value of the specified field of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Value> Range: 0 to 18446744073709551615
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:OSPI:FRAMe<fr>:FLD<fl>:FVALue?

Returns the formatted value of the specified field.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<FormattedValue>

Usage: Query only
Asynchronous command

SBUS<sb>:OSPI:FRAMe<fr>:FLD<fl>:LABel?

Returns the label of the selected field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Label>

Usage: Query only
Asynchronous command

SBUS<sb>:OSPI:FRAMe<fr>:FLD<fl>:STATe?

Returns the state of the selected field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<State> OK | LENGth | OPCode | INComplete

OK
The field is valid.

LENGth
The field does not have the expected length.

OPCode
The opcode value is not found in your frame description list. See Section 14.4.4, "OCTO-SPI format configuration", on page 576.

INComplete
The field is not completely contained in the acquisition. The acquired part of the field is usually valid, but cannot always be trusted.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:OSPI:FRAMe<fr>:CMD?

Returns the opcode of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameCommand> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:OSPI:FRAMe<fr>:CMDFormatted?

Returns the formatted opcode of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrmFormattedCmd>

Usage: Query only
Asynchronous command

SBUS<sb>:OSPI:FRAMe<fr>:CEXTension?

Returns the extension byte of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrmCmdExt> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:OSPI:FRAMe<fr>:CXFormatted?

Returns the formatted extension byte of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrmFormattedCmdExt>

Usage: Query only
Asynchronous command

SBUS<sb>:OSPI:FRAMe<fr>:DCOunt?

Returns the number of data payload frames.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameDataCount> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:OSPI:FRAMe<fr>:TYPE?

Returns the type of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameType>

Usage: Query only
Asynchronous command

SBUS<sb>:OSPI:FRAMe<fr>:STARt?

Returns the start time of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:OSPI:FRAMe<fr>:STATus?

Returns the overall state of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameState> OK | LENGth | OPCode | INComplete
`OK`: the frame is valid.
`OPCode`: operation code.

INComplete: INComplete word. The word does not have the expected word length.
LENGth: The frame is not contained in the acquisition.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:OSPI:FRAMe<fr>:STOP?

Returns the end time of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.5 I²C (option R&S MXO5-K510)

Before MXO 5 can accept the specific bus commands, make sure that:

- The decoding of the specified bus is enabled with SBUS<sb>[:STATe].
- The bus is set to the correct type with SBUS<sb>:TYPE.

- Configuration....1591
- Filter....1594
- Format....1600
- Hardware trigger....1609
- Software trigger....1613
- Decode results....1619

18.18.5.1 Configuration

SBUS<sb>:I2C:SCL:HYSTeresis....1592
SBUS<sb>:I2C:SCL:SOURce....1592
SBUS<sb>:I2C:SCL:THReshold....1592
SBUS<sb>:I2C:SDA:HYSTeresis....1592
SBUS<sb>:I2C:SDA:SOURce....1593
SBUS<sb>:I2C:SDA:THReshold....1593
SBUS<sb>:I2C:POSition....1593

SBUS<sb>:I2C:SCALe 1593
SBUS<sb>:I2C:SYMBols 1594
SBUS<sb>:I2C:NEWList 1594

SBUS<sb>:I2C:SCL:HYSTeresis <Hysteresis>

Sets a hysteresis value for the clock line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "SDA/SCL threshold, SDA/SCL hysteresis" on page 589

SBUS<sb>:I2C:SCL:SOURce SCLSource

Selects the waveform source of the clock line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
SCLSource C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "SCL source" on page 588

SBUS<sb>:I2C:SCL:THReshold <Threshold>

Sets a user-defined threshold value for the clock line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Threshold>

Usage: Asynchronous command

Manual operation: See "SDA/SCL threshold, SDA/SCL hysteresis" on page 589

SBUS<sb>:I2C:SDA:HYSTeresis <Hysteresis>

Sets a hysteresis value for the data line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "SDA/SCL threshold, SDA/SCL hysteresis" on page 589

SBUS<sb>:I2C:SDA:SOURce SDASource

Sets the source channel to which the data line is connected.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
SDASource C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "SDA source" on page 588

SBUS<sb>:I2C:SDA:THReshold <Threshold>

Sets a user-defined threshold value for the data line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Threshold>

Usage: Asynchronous command

Manual operation: See "SDA/SCL threshold, SDA/SCL hysteresis" on page 589

SBUS<sb>:I2C:POSition <Position>

Sets the vertical position of the I^2C signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Position>

Usage: Asynchronous command

SBUS<sb>:I2C:SCALe <Scale>

Set the vertical scale of the I^2C signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Scale>

Usage: Asynchronous command

SBUS<sb>:I2C:SYMBols <ShowSymbols>

Activates the symbol list to be used for decoding.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<ShowSymbols> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show symbols" on page 590

SBUS<sb>:I2C:NEWList <FileName>

Loads a symbol list file.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName> String parameter with path and file name.

Example:
```
SBUS1:I2C:NEWList
'/home/storage/userData/Protocol/I2C.csv'
SBUS1:I2C:SYMBols ON
```

Usage: Setting only
Asynchronous command

Manual operation: See "Show symbols" on page 590

18.18.5.2 Filter

There are two commands for each parameter, that you can use for defining the I2C settings.

For example, to set the *Frame type =WRITe > Field =Address >Data* value you can use one of the following commands:

- `SBUS:I2C:FILTer:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `SBUS:I2C:FILTer:DMIN "WRITe", "Address", 01100`

Defines the parameter by using the frame and field name.

SBUS<sb>:I2C:FILTer:CHKall ... 1595
SBUS<sb>:I2C:FILTer:CLR ... 1595
SBUS<sb>:I2C:FILTer:INVert ... 1596
SBUS<sb>:I2C:FILTer:RST ... 1596
SBUS<sb>:I2C:FILTer:FRENable ... 1596
SBUS<sb>:I2C:FILTer:FRAMe<fr>:ENABle ... 1596
SBUS<sb>:I2C:FILTer:DMAX ... 1596
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:DMAX ... 1596
SBUS<sb>:I2C:FILTer:DMIN ... 1597
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:DMIN ... 1597
SBUS<sb>:I2C:FILTer:DOPerator ... 1597
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:DOPerator ... 1597
SBUS<sb>:I2C:FILTer:ERENable ... 1598
SBUS<sb>:I2C:FILTer:ERRor<n>:ENABle ... 1598
SBUS<sb>:I2C:FILTer:IMAX ... 1598
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:IMAX ... 1598
SBUS<sb>:I2C:FILTer:IMIN ... 1598
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:IMIN ... 1598
SBUS<sb>:I2C:FILTer:IOPerator ... 1599
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:IOPerator ... 1599
SBUS<sb>:I2C:FILTer:BIT ... 1599
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:BIT ... 1599
SBUS<sb>:I2C:FILTer:FIENable ... 1599
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:ENABle ... 1599

SBUS<sb>:I2C:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 592

SBUS<sb>:I2C:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 592

SBUS<sb>:I2C:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 592

SBUS<sb>:I2C:FILTer:RST

Presets the state of the selected frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 592

SBUS<sb>:I2C:FILTer:FRENable <Frame>,<Enabler>
SBUS<sb>:I2C:FILTer:FRENable? <Enabler>
SBUS<sb>:I2C:FILTer:FRAMe<fr>:ENABle <Enable>

Enables or disables the specific frame to be filtered on.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 592

SBUS<sb>:I2C:FILTer:DMAX <Frame>,<Field>,<Data>
SBUS<sb>:I2C:FILTer:DMAX? <Data>
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `SBUS<sb>:I2C:FILTer:DOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 593

SBUS<sb>:I2C:FILTer:DMIN <Frame>,<Field>,<Data>
SBUS<sb>:I2C:FILTer:DMIN? <Data>
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 593

SBUS<sb>:I2C:FILTer:DOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:I2C:FILTer:DOPerator? <Operator>
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 593

SBUS<sb>:I2C:FILTer:ERENable <ErrorName>,<Enabler>
SBUS<sb>:I2C:FILTer:ERENable? <Enabler>
SBUS<sb>:I2C:FILTer:ERRor<n>:ENABle <Enable>

Defines the error type to be filtered on.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 594

SBUS<sb>:I2C:FILTer:IMAX <Frame>,<Field>,<Data>
SBUS<sb>:I2C:FILTer:IMAX? <Data>
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if the operator is set to `INRange`.

You can set the operator with `SBUS<sb>:I2C:FILTer:IOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 593

SBUS<sb>:I2C:FILTer:IMIN <Frame>,<Field>,<Data>
SBUS<sb>:I2C:FILTer:IMIN? <Data>
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 593

SBUS<sb>:I2C:FILTer:IOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:I2C:FILTer:IOPerator? <Operator>
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 593

SBUS<sb>:I2C:FILTer:BIT <Frame>,<Field>,<Bit>
SBUS<sb>:I2C:FILTer:BIT? <Bit>
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 593

SBUS<sb>:I2C:FILTer:FIENable <Frame>,<Field>,<Enabler>
SBUS<sb>:I2C:FILTer:FIENable? <Enabler>
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 593

18.18.5.3 Format

This section describes the commands to specify and query frame formats for the "I2C" protocol.

SBUS<sb>:I2C:FORMat:SELect....1601
SBUS<sb>:I2C:FORMat:ADDFrame....1601
SBUS<sb>:I2C:FORMat:LOAD....1601
SBUS<sb>:I2C:FORMat:SAVE....1601
SBUS<sb>:I2C:FORMat:CLR....1602
SBUS<sb>:I2C:FORMat:FCOunt?....1602
SBUS<sb>:I2C:FORMat:FRAMe<fr>:ADDField....1602
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLDCount?....1602
SBUS<sb>:I2C:FORMat:FRAMe<fr>:NAME....1603
SBUS<sb>:I2C:FORMat:FRAMe<fr>:COLor....1603
SBUS<sb>:I2C:FORMat:FRAMe<fr>:TYPE....1603
SBUS<sb>:I2C:FORMat:FRAMe<fr>:ID1Field....1603
SBUS<sb>:I2C:FORMat:FRAMe<fr>:ID2Field....1603
SBUS<sb>:I2C:FORMat:FRAMe<fr>:ID3Field....1603
SBUS<sb>:I2C:FORMat:FRAMe<fr>:ID1Value....1604
SBUS<sb>:I2C:FORMat:FRAMe<fr>:ID2Value....1604
SBUS<sb>:I2C:FORMat:FRAMe<fr>:ID3Value....1604
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:NAME....1604
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:COLor....1604
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:FSTBit....1605
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:BITCount....1605
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:REPetition....1605
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:BITorder....1606
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:FORMat....1606
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:ADDValue....1607
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue....1607
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel....1608
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:UNIT....1608
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:PARA....1609
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:PARB....1609

SBUS<sb>:I2C:FORMat:SELect <Select>

Enables the format configuration

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Asynchronous command

Manual operation: See "Show format" on page 594

SBUS<sb>:I2C:FORMat:ADDFrame

Appendes a new frame format to the frame list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Add frame" on page 594

SBUS<sb>:I2C:FORMat:LOAD <FileName>

Loads a the specified XML file with a list of frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Open" on page 595

SBUS<sb>:I2C:FORMat:SAVE <FileName>

Saves the current list of frame formats to an XML file with the specified name.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Save as" on page 595

SBUS<sb>:I2C:FORMat:CLR

Erases from the volatile memory all field descriptions and frame formats that you have created.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Edit list" on page 595

SBUS<sb>:I2C:FORMat:FCOunt?

Returns the number of available frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Edit list" on page 595

SBUS<sb>:I2C:FORMat:FRAMe<fr>:ADDField

Appends a new field description to the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Usage: Setting only
Asynchronous command

Manual operation: See "Add field" on page 596

SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLDCount?

Returns the number of field descriptions available for the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:FORMat:FRAMe<fr>:NAME <Name>

Specifies the name for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Frame name" on page 596

SBUS<sb>:I2C:FORMat:FRAMe<fr>:COLor <Color>

Specifies the color for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4278255615

Usage: Asynchronous command

Manual operation: See "Frame color" on page 596

SBUS<sb>:I2C:FORMat:FRAMe<fr>:TYPE <Type>

Sets an original frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Type>

Usage: Asynchronous command

Manual operation: See "Frame type" on page 596

SBUS<sb>:I2C:FORMat:FRAMe<fr>:ID1Field <ID1Field>
SBUS<sb>:I2C:FORMat:FRAMe<fr>:ID2Field <ID2Field>
SBUS<sb>:I2C:FORMat:FRAMe<fr>:ID3Field <ID3Field>

Sets the identifying field type for the configured frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Field>

Usage: Asynchronous command

Manual operation: See "ID<n> field" on page 596

SBUS<sb>:I2C:FORMat:FRAMe<fr>:ID1Value <ID1Value>
SBUS<sb>:I2C:FORMat:FRAMe<fr>:ID2Value <ID2Value>
SBUS<sb>:I2C:FORMat:FRAMe<fr>:ID3Value <ID3Value>

Sets the value of the corresponding field type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Value>

Usage: Asynchronous command

Manual operation: See "ID<n> value" on page 596

SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:NAME <Name>

Specifies the name for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Field name" on page 597

SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:COLor <Color>

Specifies the color for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4294967040

Usage: Asynchronous command

Manual operation: See "Field color" on page 597

SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:FSTBit <FirstBit>

In order of transmission, sets the first bit of the specified field in the payload.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<FirstBit>

Range: 0 to 63
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "First bit" on page 597

SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:BITCount <BitCount>

Specifies the bit count, hence length, of the selected field in the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<BitCount>

Range: 1 to 64
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Bit count" on page 597

SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:REPetition <Repetition>

Sets the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Repetition> Range: 0 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Repetition" on page 598

SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:BITorder <BitOrder>

Specifies, in which order the algorithm evaluates the bits of the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitOrder> LSBF | MSBF

LSBF
Least significant bit first

MSBF
Most significant bit first

*RST: MSBF

Usage: Asynchronous command

Manual operation: See "Bit order" on page 598

SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:FORMat <NumericFormat>

Specifies the numerical format for the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<NumericFormat> HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG | DEC | LIST | FLIN

HEX
Hexadecimal format

OCT
Octal format

BIN
Binary format

ASCII = ASCii
ASCII format

SIGN
Signed, decimal format

DEC=USIG
Unsigned, decimal format

LIST
Value list

FLIN
Linear function

*RST: HEX

Usage: Asynchronous command

Manual operation: See "Numeric format" on page 598

SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:ADDValue

Creates a new hexagonal value for customization.

Available if `SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Related commands:

`SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue`

`SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel`

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Usage: Setting only
Asynchronous command

Manual operation: See "Add value" on page 599

SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue <Value>

Sets the hexagonal value to convert it into a labeled state.

Available if `SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field
<p> Index of the value

Parameters:
<Value> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Value" on page 599

SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel <Label>

Sets the label to convert the corresponding hexagonal value to a labeled state.

Available if `SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field
<p> Index of the value

Parameters:
<Label>

Usage: Asynchronous command

Manual operation: See "Label" on page 599

SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:UNIT <Unit>

Sets the unit for the linear function.

Available if `SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<Unit>

Usage: Asynchronous command

Manual operation: See "Unit" on page 599

SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:PARA <ParameterA>
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:PARB <ParameterB>

Sets the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

Available if `SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<ParameterB>
Range: -1E+20 to 1E+20
Increment: 1E-12
*RST: 0

Usage: Asynchronous command

Manual operation: See "Parameter A,B" on page 599

18.18.5.4 Hardware trigger

Trigger commands for serial buses affect the current trigger source. Therefore, set the trigger source to the required serial bus with `TRIGger:EVENt<ev>:SOURce` before sending the bus-specific trigger commands.

TRIGger:SBHW:I2C:TYPE....1609
TRIGger:SBHW:I2C:ACCess....1610
TRIGger:SBHW:I2C:ACONdition....1610
TRIGger:SBHW:I2C:ADDRess....1611
TRIGger:SBHW:I2C:ADDTo....1611
TRIGger:SBHW:I2C:ADNack....1611
TRIGger:SBHW:I2C:AMODe....1611
TRIGger:SBHW:I2C:DCONdition....1612
TRIGger:SBHW:I2C:DMIN....1612
TRIGger:SBHW:I2C:DPOSition....1612
TRIGger:SBHW:I2C:DRNack....1612
TRIGger:SBHW:I2C:DWNack....1613

TRIGger:SBHW:I2C:TYPE <Type>

Selects the trigger type for I²C analysis.

Parameters:
<Type> STARt | REPStart | STOP | NACK | ADDRess | DATA | ADAT

STARt
Start condition

REPStart
Repeated start - the start condition occurs without previous stop condition.

STOP
Stop condition, end of frame

NACK
Missing acknowledge bit. To localize specific missing acknowledge bits, use:
`TRIGger:SBHW:I2C:ADNack`
`TRIGger:SBHW:I2C:DWNack`
`TRIGger:SBHW:I2C:DRNack`

ADDRess
Triggers on one specific address

DATA
Triggers on a specific data

ADAT
Triggers on a combination of address and data condition.

*RST: STARt

Usage: Asynchronous command

Manual operation: See "Type" on page 600

TRIGger:SBHW:I2C:ACCess <RWBitAddress>

Toggles the trigger condition between read and write access of the primary. Select "Either" if the transfer direction is not relevant for the trigger condition.

Parameters:
<RWBitAddress> READ | WRITe | EITHer

*RST: EITHer

Usage: Asynchronous command

Manual operation: See "R/W bit" on page 602

TRIGger:SBHW:I2C:ACONdition <AddrOptor>

Sets the operator to set a specific address or an address range. The address values are set with `TRIGger:SBHW:I2C:ADDRess` and `TRIGger:SBHW:I2C:ADDTo`.

Parameters:
<AddrOptor> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

TRIGger:SBHW:I2C:ADDRess <Address>

Triggers on the specified address, or sets the start value of an address range depending on the condition set with `TRIGger:SBHW:I2C:ACONdition`.

Parameters:
<Address>

Usage: Asynchronous command

Manual operation: See "Address" on page 602

TRIGger:SBHW:I2C:ADDTo <AddressTo>

Sets the end value of an address range if the condition is set to an address range with `TRIGger:SBHW:I2C:ACONdition`.

Parameters:
<AddressTo>

Usage: Asynchronous command

Manual operation: See "Address" on page 602

TRIGger:SBHW:I2C:ADNack <AddressNack>

Triggers if the address acknowledge bit is missing - no target recognizes the address.

Parameters:
<AddressNack> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "No Ack conditions" on page 602

TRIGger:SBHW:I2C:AMODe <AddressType>

Sets the address length to be triggered on: 7 bit or 10 bit.

Parameters:
<AddressType> BIT7 | BIT7RW | BIT7_RW | BIT10
Note that `BIT7RW` is the same address type as `BIT7_RW`.

BIT7 | BIT10
Enter only the seven or ten address bits in the address pattern.

BIT7RW | BIT7_RW
Enter seven address bits and also the read/write bit.

*RST: BIT7

Usage: Asynchronous command

Manual operation: See "Address type" on page 602

TRIGger:SBHW:I2C:DCONdition <DataOperator>

Sets the operator to set a specific data value or a data range.

Parameters:
<DataOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Data" on page 603

TRIGger:SBHW:I2C:DMIN <Data>

Specifies the data bit pattern, or sets the start value of a data pattern range. Enter the bytes in MSB first bit order. The maximum pattern length is 64 bit. Waveform data is compared with the pattern byte-by-byte.

Parameters:
<Data>

Usage: Asynchronous command

Manual operation: See "Data" on page 603

TRIGger:SBHW:I2C:DPOSition <DataPosition>

Sets the number of data bytes to be skipped after the address.

Parameters:
<DataPosition> Range: 1 to 4096
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Position" on page 603

TRIGger:SBHW:I2C:DRNack <DataReadNack>

Triggers on the end of the read process when the controller reads data from the target. This NACK is sent according to the protocol definition, it is not an error.

Parameters:
<DataReadNack> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "No Ack conditions" on page 602

TRIGger:SBHW:I2C:DWNack <DataWriteNack>

Triggers if a date acknowledge bit is missing - the addressed target does not accept the data.

Parameters:

<DataWriteNack> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "No Ack conditions" on page 602

18.18.5.5 Software trigger

There are two commands for each parameter, that you can use for defining the I2C settings.

For example, to set the *Frame type =WRITe > Field =Address >Data* value you can use one of the following commands:

- `TRIGger:SBSW:I2C:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `STRIGger:SBSW:I2C:DMIN "WRITe", "Address", 01100`
  Defines the parameter by using the frame and field name.

TRIGger:SBSW:I2C:CHKall....1614
TRIGger:SBSW:I2C:CLR....1614
TRIGger:SBSW:I2C:INVert....1614
TRIGger:SBSW:I2C:RST....1614
TRIGger:SBSW:I2C:FRENable....1614
TRIGger:SBSW:I2C:FRAMe<fr>:ENABle....1614
TRIGger:SBSW:I2C:BIT....1615
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:BIT....1615
TRIGger:SBSW:I2C:DMAX....1615
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:DMAX....1615
TRIGger:SBSW:I2C:DMIN....1615
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:DMIN....1615
TRIGger:SBSW:I2C:DOPerator....1616
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:DOPerator....1616
TRIGger:SBSW:I2C:FIENable....1616
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:ENABle....1616
TRIGger:SBSW:I2C:IMAX....1617
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:IMAX....1617
TRIGger:SBSW:I2C:IMIN....1617
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:IMIN....1617
TRIGger:SBSW:I2C:IOPerator....1617
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:IOPerator....1617
TRIGger:SBSW:I2C:ERENable....1618

TRIGger:SBSW:I2C:ERRor<m>:ENABle 1618
SBUS<sb>:I2C:SWTindex? 1618
SBUS<sb>:I2C:SWTTime? 1618

TRIGger:SBSW:I2C:CHKall

Enables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 604

TRIGger:SBSW:I2C:CLR

Disables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 604

TRIGger:SBSW:I2C:INVert

Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 604

TRIGger:SBSW:I2C:RST

Presets the state of the selected frames and error types for the software trigger.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 604

TRIGger:SBSW:I2C:FRENable <Frame>,<Enabler>
TRIGger:SBSW:I2C:FRENable? <Enabler>
TRIGger:SBSW:I2C:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 605

TRIGger:SBSW:I2C:BIT <Frame>,<Field>,<Bit>
TRIGger:SBSW:I2C:BIT? <Bit>
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 605

TRIGger:SBSW:I2C:DMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:I2C:DMAX? <Data>
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range for the software trigger, if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 605

TRIGger:SBSW:I2C:DMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:I2C:DMIN? <Data>
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 605

TRIGger:SBSW:I2C:DOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:I2C:DOPerator? <Operator>
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern of the software trigger in the selected field of the selected frame.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 605

TRIGger:SBSW:I2C:FIENable <Frame>,<Field>,<Enabler>
TRIGger:SBSW:I2C:FIENable? <Enabler>
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame of the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 605

TRIGger:SBSW:I2C:IMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:I2C:IMAX? <Data>
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range for the software trigger if the operator is set to `INRange`.

You can set the operator with `TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max>
Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 605

TRIGger:SBSW:I2C:IMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:I2C:IMIN? <Data>
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min>
Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 605

TRIGger:SBSW:I2C:IOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:I2C:IOPerator? <Operator>
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 605

TRIGger:SBSW:I2C:ERENable <ErrorName>,<Enabler>
TRIGger:SBSW:I2C:ERENable? <Enabler>
TRIGger:SBSW:I2C:ERRor<m>:ENABle <Enable>

Defines the error type for the software trigger.

Suffix:
<m> index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 606

SBUS<sb>:I2C:SWTindex?

Queries the software trigger index.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Index> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:SWTTime?

Queries the software trigger time in seconds.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:

<Time> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.5.6 Decode results

SBUS<sb>:I2C:FCOunt? 1619
SBUS<sb>:I2C:FRAMe<fr>:AACCess? 1619
SBUS<sb>:I2C:FRAMe<fr>:ACCess? 1620
SBUS<sb>:I2C:FRAMe<fr>:ACOMplete? 1620
SBUS<sb>:I2C:FRAMe<fr>:ADBStart? 1620
SBUS<sb>:I2C:FRAMe<fr>:ADDRess? 1621
SBUS<sb>:I2C:FRAMe<fr>:ADEVice? 1621
SBUS<sb>:I2C:FRAMe<fr>:AMODe? 1621
SBUS<sb>:I2C:FRAMe<fr>:ASTart? 1622
SBUS<sb>:I2C:FRAMe<fr>:BITRate? 1622
SBUS<sb>:I2C:FRAMe<fr>:FLDCount? 1622
SBUS<sb>:I2C:FRAMe<fr>:FLD<fl>:FVALue? 1623
SBUS<sb>:I2C:FRAMe<fr>:FLD<fl>:LABel? 1623
SBUS<sb>:I2C:FRAMe<fr>:FLD<fl>:STARt? 1623
SBUS<sb>:I2C:FRAMe<fr>:FLD<fl>:STATe? 1624
SBUS<sb>:I2C:FRAMe<fr>:FLD<fl>:VALue? 1624
SBUS<sb>:I2C:FRAMe<fr>:DATA? 1625
SBUS<sb>:I2C:FRAMe<fr>:RWBStart? 1625
SBUS<sb>:I2C:FRAMe<fr>:STARt? 1625
SBUS<sb>:I2C:FRAMe<fr>:STATus? 1626
SBUS<sb>:I2C:FRAMe<fr>:STOP? 1626
SBUS<sb>:I2C:FRAMe<fr>:SYMBol? 1627

SBUS<sb>:I2C:FCOunt?

Returns the number of decoded frames.

Suffix:

<sb> 1 to 4, index of the serial bus

Return values:

<Count> Total number of decoded frames.

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:AACCess?

Returns the address acknowledge bit value for the indicated frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<AddressAckBit> ACK | NACK | EITHer
*RST: EITHer

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:ACCess?

Returns the value of the R/W bit of the indicated frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<RWBit> UNDefined | READ | WRITe | EITHer
*RST: UNDefined

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:ACOMplete?

Returns if the address is completely contained in the acquisition.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<AddrComplete> OFF | ON
*RST: OFF

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:ADBStart?

Returns the start time of the address acknowledge bit.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<AddrAckBtStrt> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:ADDRess?

Returns the device address value of the indicated frame. That is, the address value that is shown in the decoded cells and in the decode results table.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<AddressValue> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:ADEVice?

Returns the pure device address of the indicated frame *without* the R/W bit.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<DeviceAddress> Range: 0 to 1023
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:AMODe?

Returns the address length.

See also `TRIGger:SBHW:I2C:AMODe` on page 1611.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<AddressType> BIT7 | BIT7RW | BIT7_RW | BIT10
*RST: BIT7

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:ASTart?

Returns the start time of the address for the indicated frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<AddressStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:BITRate?

Returns the primary bit rate.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<PrimaryBitRate> Increment: 1
*RST: 0
Default unit: bps

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:FLDCount?

Returns the number of fields in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:FLD<fl>:FVALue?

Returns the formatted value of the specified field.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<FormattedValue>

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:FLD<fl>:LABel?

Returns the name (label) of the specified field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Label>

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:FLD<fl>:STARt?

Returns the start time of the specified field.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Start> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:FLD<fl>:STATe?

Returns the overall state of the specified field in the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:

<State> OK | ADDifferent | NOSTop | UNKNown | INComplete

OK
The field has no error, it is valid.

ADDifferent
10-bit read address different. For a read access on a 10-bit address, the first address byte is sent twice, first as write, the second as read. The first 7 bits of the byte must be identical. If they are not identical, the ADDiffernt error is indicated.

NOSTop
The stop bit is missing.

UNKNown
Unknown field type detected.

INComplete
The field is not completely contained in the acquisition. The acquired part of the field is usually valid, but cannot always be trusted.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:FLD<fl>:VALue?

Returns the data value of the specified field.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:

<Value> Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:DATA?

Returns the data words of the specified frame as comma-separated values.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

<Values>

Example:
```
BUS:I2C:FRAMe4:DATA?
<-- 3,74,164,18
```

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:RWBStart?

Returns the start time of the R/W bit

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<RWBitStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:STARt?

Returns the start time of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:STATus?

Returns the overall state of the frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameState> OK | ADDifferent | NOSTop | UNKNown | INComplete

OK
The frame is valid.

ADDifferent
10-bit read address different. For a read access on a 10-bit address, the first address byte is sent twice, first as write, the second as read. The first 7 bits of the byte must be identical. If they are not identical, the ADDiffernt error is indicated.

NOSTop
The stop bit is missing.

UNKNown
Unknown frame type detected.

INComplete
The frame is not completely contained in the acquisition. The acquired part of the frame is usually valid, but cannot always be trusted.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:STOP?

Returns the end time of the specified frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:I2C:FRAMe<fr>:SYMBol?

Returns the symbolic label of the specified frame if the label list is enabled.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Translation> String with the symbolic name of the frame

Usage: Query only
Asynchronous command

18.18.6 I3C (option R&S MXO5-K550)

Before MXO 5 can accept the specific bus commands, make sure that:

- The decoding of the specified bus is enabled with `SBUS<sb>[:STATe]`.
- The bus is set to the correct type with `SBUS<sb>:TYPE`.

- Configuration....1627
- Filter....1631
- Format....1636
- Software trigger....1645
- Decode results....1651

18.18.6.1 Configuration

SBUS<sb>:I3C:SCL:HYSTeresis....1627
SBUS<sb>:I3C:SCL:SOURce....1628
SBUS<sb>:I3C:SCL:THReshold....1628
SBUS<sb>:I3C:SDA:HYSTeresis....1628
SBUS<sb>:I3C:SDA:SOURce....1628
SBUS<sb>:I3C:SDA:THReshold....1629
SBUS<sb>:I3C:MINGap:SELect....1629
SBUS<sb>:I3C:MINGap:WIDTh....1629
SBUS<sb>:I3C:POSition....1630
SBUS<sb>:I3C:SCALe....1630
SBUS<sb>:I3C:SYMBols....1630
SBUS<sb>:I3C:NEWList....1630

SBUS<sb>:I3C:SCL:HYSTeresis <SCLHysteresis>

Sets a hysteresis value for the clock line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SCLHysteresis>

Usage: Asynchronous command

Manual operation: See "SDA/SCL threshold, SDA/SCL hysteresis" on page 613

SBUS<sb>:I3C:SCL:SOURce SCLSource

Selects the waveform source of the clock line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
SCLSource C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "SCL source" on page 612

SBUS<sb>:I3C:SCL:THReshold <SCLThreshold>

Sets a user-defined threshold value for the clock line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SCLThreshold>

Usage: Asynchronous command

Manual operation: See "SDA/SCL threshold, SDA/SCL hysteresis" on page 613

SBUS<sb>:I3C:SDA:HYSTeresis <SDAHysteresis>

Sets a hysteresis value for the data line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SDAHysteresis>

Usage: Asynchronous command

Manual operation: See "SDA/SCL threshold, SDA/SCL hysteresis" on page 613

SBUS<sb>:I3C:SDA:SOURce SDASource

Sets the source channel to which the data line is connected.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:

SDASource C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "SDA source" on page 612

SBUS<sb>:I3C:SDA:THReshold <SDAThreshold>

Sets a user-defined threshold value for the data line.

Suffix:

<sb> 1 to 4, index of the serial bus

Parameters:

<SDAThreshold>

Usage: Asynchronous command

Manual operation: See "SDA/SCL threshold, SDA/SCL hysteresis" on page 613

SBUS<sb>:I3C:MINGap:SELect <MingapSelect>

Specifies whether a minimum gap before the 1st decoded frame is required.

Suffix:

<sb> 1 to 4, index of the serial bus

Parameters:

<MingapSelect> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Require min gap" on page 613

SBUS<sb>:I3C:MINGap:WIDTh <MingapWidth>

Specifies the minimum duration of the gap.

Available, if `SBUS<sb>:I3C:MINGap:SELect` is set to `ON`.

Suffix:

<sb> 1 to 4, index of the serial bus

Parameters:

<MingapWidth> Range: 1E-11 to 1
Increment: 1E-11
*RST: 1E-06
Default unit: s

Usage: Asynchronous command

Manual operation: See "Min gap width" on page 613

SBUS<sb>:I3C:POSition <Position>

Sets the vertical position of the I3C signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Position>

Usage: Asynchronous command

SBUS<sb>:I3C:SCALe <Scale>

Sets the vertical scale of the I3C signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Scale>

Usage: Asynchronous command

SBUS<sb>:I3C:SYMBols <ShowSymbols>

Activates the symbol list to be used for decoding.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<ShowSymbols> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show symbols" on page 614

SBUS<sb>:I3C:NEWList <FileName>

Loads a symbol list file.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName> String parameter with path and file name.

Example:
```
SBUS1:I3C:NEWList
'/home/storage/userData/Protocol/I3C.csv'
SBUS1:I3C:SYMBols ON
```

Usage: Setting only
Asynchronous command

Manual operation: See "Show symbols" on page 614

18.18.6.2 Filter

There are two commands for each parameter, that you can use for defining the I3C settings.

For example, to set the *Frame type =WRITe > Field =Address >Data* value you can use one of the following commands:

- `SBUS:I3C:FILTer:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `SBUS:I3C:FILTer:DMIN "WRITe", "Address", 01100`
  Defines the parameter by using the frame and field name.

SBUS<sb>:I3C:FILTer:CHKall ... 1631
SBUS<sb>:I3C:FILTer:CLR ... 1632
SBUS<sb>:I3C:FILTer:INVert ... 1632
SBUS<sb>:I3C:FILTer:RST ... 1632
SBUS<sb>:I3C:FILTer:FRENable ... 1632
SBUS<sb>:I3C:FILTer:FRAMe<fr>:ENABle ... 1632
SBUS<sb>:I3C:FILTer:DMAX ... 1633
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:DMAX ... 1633
SBUS<sb>:I3C:FILTer:DMIN ... 1633
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:DMIN ... 1633
SBUS<sb>:I3C:FILTer:DOPerator ... 1634
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:DOPerator ... 1634
SBUS<sb>:I3C:FILTer:ERENable ... 1634
SBUS<sb>:I3C:FILTer:ERRor<n>:ENABle ... 1634
SBUS<sb>:I3C:FILTer:IMAX ... 1634
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:IMAX ... 1634
SBUS<sb>:I3C:FILTer:IMIN ... 1635
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:IMIN ... 1635
SBUS<sb>:I3C:FILTer:IOPerator ... 1635
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:IOPerator ... 1635
SBUS<sb>:I3C:FILTer:BIT ... 1636
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:BIT ... 1636
SBUS<sb>:I3C:FILTer:FIENable ... 1636
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:ENABle ... 1636

SBUS<sb>:I3C:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 616

SBUS<sb>:I3C:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 616

SBUS<sb>:I3C:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 616

SBUS<sb>:I3C:FILTer:RST

Presets the state of the selected frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 616

SBUS<sb>:I3C:FILTer:FRENable <Frame>,<Enabler>
SBUS<sb>:I3C:FILTer:FRENable? <Enabler>
SBUS<sb>:I3C:FILTer:FRAMe<fr>:ENABle <Enable>

Enables or disables the specific frame to be filtered on.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 616

SBUS<sb>:I3C:FILTer:DMAX <Frame>,<Field>,<Data>
SBUS<sb>:I3C:FILTer:DMAX? <Data>
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 616

SBUS<sb>:I3C:FILTer:DMIN <Frame>,<Field>,<Data>
SBUS<sb>:I3C:FILTer:DMIN? <Data>
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 616

SBUS<sb>:I3C:FILTer:DOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:I3C:FILTer:DOPerator? <Operator>
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 616

SBUS<sb>:I3C:FILTer:ERENable <ErrorName>,<Enabler>
SBUS<sb>:I3C:FILTer:ERENable? <Enabler>
SBUS<sb>:I3C:FILTer:ERRor<n>:ENABle <Enable>

Defines the error type to be filtered on.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> Index of the error

Parameters:
<Enable> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 618

SBUS<sb>:I3C:FILTer:IMAX <Frame>,<Field>,<Data>
SBUS<sb>:I3C:FILTer:IMAX? <Data>
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if the operator is set to `INRange`.

You can set the operator with `SBUS<sb>:I3C:FILTer:IOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 616

SBUS<sb>:I3C:FILTer:IMIN <Frame>,<Field>,<Data>
SBUS<sb>:I3C:FILTer:IMIN? <Data>
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 616

SBUS<sb>:I3C:FILTer:IOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:I3C:FILTer:IOPerator? <Operator>
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 616

SBUS<sb>:I3C:FILTer:BIT <Frame>,<Field>,<Bit>
SBUS<sb>:I3C:FILTer:BIT? <Bit>
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 616

SBUS<sb>:I3C:FILTer:FIENable <Frame>,<Field>,<Enabler>
SBUS<sb>:I3C:FILTer:FIENable? <Enabler>
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 616

18.18.6.3 Format

This section describes the commands to specify and query frame formats for the "I3C" protocol.

SBUS<sb>:I3C:FORMat:SELect 1637
SBUS<sb>:I3C:FORMat:ADDFrame 1637
SBUS<sb>:I3C:FORMat:LOAD 1637
SBUS<sb>:I3C:FORMat:SAVE 1638
SBUS<sb>:I3C:FORMat:CLR 1638
SBUS<sb>:I3C:FORMat:FCOunt? 1638
SBUS<sb>:I3C:FORMat:FRAMe<fr>:ADDField 1638
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLDCount? 1639

SBUS<sb>:I3C:FORMat:FRAMe<fr>:NAME 1639
SBUS<sb>:I3C:FORMat:FRAMe<fr>:COLor 1639
SBUS<sb>:I3C:FORMat:FRAMe<fr>:TYPE 1640
SBUS<sb>:I3C:FORMat:FRAMe<fr>:ID1Field 1640
SBUS<sb>:I3C:FORMat:FRAMe<fr>:ID2Field 1640
SBUS<sb>:I3C:FORMat:FRAMe<fr>:ID3Field 1640
SBUS<sb>:I3C:FORMat:FRAMe<fr>:ID1Value 1640
SBUS<sb>:I3C:FORMat:FRAMe<fr>:ID2Value 1640
SBUS<sb>:I3C:FORMat:FRAMe<fr>:ID3Value 1640
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:NAME 1641
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:COLor 1641
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:FSTBit 1641
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:BITCount 1642
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:REPetition 1642
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:BITorder 1642
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:FORMat 1643
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:ADDValue 1643
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue 1644
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel 1644
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:UNIT 1645
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:PARA 1645
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:PARB 1645

SBUS<sb>:I3C:FORMat:SELect <Select>

Enables the format configuration

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Asynchronous command

Manual operation: See "Show format" on page 618

SBUS<sb>:I3C:FORMat:ADDFrame

Appendes a new frame format to the frame list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Add frame" on page 618

SBUS<sb>:I3C:FORMat:LOAD <FileName>

Loads a the specified XML file with a list of frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Open" on page 619

SBUS<sb>:I3C:FORMat:SAVE <FileName>

Saves the current list of frame formats to an XML file with the specified name.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Save as" on page 619

SBUS<sb>:I3C:FORMat:CLR

Erases from the volatile memory all field descriptions and frame formats that you have created.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Edit list" on page 619

SBUS<sb>:I3C:FORMat:FCOunt?

Returns the number of available frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Edit list" on page 619

SBUS<sb>:I3C:FORMat:FRAMe<fr>:ADDField

Appends a new field description to the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Usage: Setting only
Asynchronous command

Manual operation: See "Add field" on page 620

SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLDCount?

Returns the number of field descriptions available for the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:I3C:FORMat:FRAMe<fr>:NAME <Name>

Specifies the name for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Frame name" on page 620

SBUS<sb>:I3C:FORMat:FRAMe<fr>:COLor <Color>

Specifies the color for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4278255615

Usage: Asynchronous command

Manual operation: See "Frame color" on page 620

SBUS<sb>:I3C:FORMat:FRAMe<fr>:TYPE <Type>

Sets an original frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Type>

Usage: Asynchronous command

Manual operation: See "Frame type" on page 620

SBUS<sb>:I3C:FORMat:FRAMe<fr>:ID1Field <ID1Field>
SBUS<sb>:I3C:FORMat:FRAMe<fr>:ID2Field <ID2Field>
SBUS<sb>:I3C:FORMat:FRAMe<fr>:ID3Field <ID3Field>

Sets the identifying field type for the configured frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Field>

Usage: Asynchronous command

Manual operation: See "ID<n> field" on page 620

SBUS<sb>:I3C:FORMat:FRAMe<fr>:ID1Value <ID1Value>
SBUS<sb>:I3C:FORMat:FRAMe<fr>:ID2Value <ID2Value>
SBUS<sb>:I3C:FORMat:FRAMe<fr>:ID3Value <ID3Value>

Sets the value of the corresponding field type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Value>

Usage: Asynchronous command

Manual operation: See "ID<n> value" on page 620

SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:NAME <Name>

Specifies the name for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Field name" on page 621

SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:COLor <Color>

Specifies the color for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4294967040

Usage: Asynchronous command

Manual operation: See "Field color" on page 621

SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:FSTBit <FirstBit>

In order of transmission, sets the first bit of the specified field in the payload.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<FirstBit>

Range: 0 to 63
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "First bit" on page 621

SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:BITCount <BitCount>

Specifies the bit count, hence length, of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitCount> Range: 1 to 64
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Bit count" on page 621

SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:REPetition <Repetition>

Sets the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Repetition> Range: 0 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Repetition" on page 622

SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:BITorder <BitOrder>

Specifies, in which order the algorithm evaluates the bits of the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitOrder> LSBF | MSBF

LSBF
Least significant bit first

MSBF
Most significant bit first

*RST: MSBF

Usage: Asynchronous command

Manual operation: See "Bit order" on page 622

SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:FORMat <NumericFormat>

Specifies the numerical format for the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<NumericFormat> HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG | DEC | LIST | FLIN

HEX
Hexadecimal format

OCT
Octal format

BIN
Binary format

ASCII = ASCii
ASCII format

SIGN
Signed, decimal format

DEC=USIG
Unsigned, decimal format

LIST
Value list

FLIN
Linear function

*RST: HEX

Usage: Asynchronous command

Manual operation: See "Numeric format" on page 622

SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:ADDValue

Creates a new hexagonal value for customization.

Available if `SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Related commands:

SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue

SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Usage: Setting only
Asynchronous command

Manual operation: See "Add value" on page 623

SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue <Value>

Sets the hexagonal value to convert it into a labeled state.

Available if SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:FORMat = LIST.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:
<Value> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Value" on page 623

SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel <Label>

Sets the label to convert the corresponding hexagonal value to a labeled state.

Available if SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:FORMat = LIST.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:
<Label>

Usage: Asynchronous command

Manual operation: See "Label" on page 623

SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:UNIT <Unit>

Sets the unit for the linear function.

Available if `SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Unit>

Usage: Asynchronous command

Manual operation: See "Unit" on page 623

SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:PARA <ParameterA>
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:PARB <ParameterB>

Sets the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

Available if `SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<ParameterB> Range: -1E+20 to 1E+20
Increment: 1E-12
*RST: 0

Usage: Asynchronous command

Manual operation: See "Parameter A,B" on page 623

18.18.6.4 Software trigger

There are two commands for each parameter, that you can use for defining the I3C settings.

For example, to set the *Frame type =WRITe > Field =Address >Data* value you can use one of the following commands:

- `TRIGger:SBSW:I3C:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `STRIGger:SBSW:I3C:DMIN "WRITe", "Address", 01100`
  Defines the parameter by using the frame and field name.

TRIGger:SBSW:I3C:CHKall....1646
TRIGger:SBSW:I3C:CLR....1646
TRIGger:SBSW:I3C:INVert....1647
TRIGger:SBSW:I3C:RST....1647
TRIGger:SBSW:I3C:FRENable....1647
TRIGger:SBSW:I3C:FRAMe<fr>:ENABle....1647
TRIGger:SBSW:I3C:BIT....1647
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:BIT....1647
TRIGger:SBSW:I3C:DMAX....1648
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:DMAX....1648
TRIGger:SBSW:I3C:DMIN....1648
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:DMIN....1648
TRIGger:SBSW:I3C:DOPerator....1648
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:DOPerator....1648
TRIGger:SBSW:I3C:FIENable....1649
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:ENABle....1649
TRIGger:SBSW:I3C:IMAX....1649
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:IMAX....1649
TRIGger:SBSW:I3C:IMIN....1650
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:IMIN....1650
TRIGger:SBSW:I3C:IOPerator....1650
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:IOPerator....1650
TRIGger:SBSW:I3C:ERENable....1650
TRIGger:SBSW:I3C:ERRor<m>:ENABle....1650
SBUS<sb>:I3C:SWTindex?....1651
SBUS<sb>:I3C:SWTTime?....1651

TRIGger:SBSW:I3C:CHKall

Enables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 624

TRIGger:SBSW:I3C:CLR

Disables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 624

TRIGger:SBSW:I3C:INVert

Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 624

TRIGger:SBSW:I3C:RST

Presets the state of the selected frames and error types for the software trigger.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 624

TRIGger:SBSW:I3C:FRENable <Frame>,<Enabler>
TRIGger:SBSW:I3C:FRENable? <Enabler>
TRIGger:SBSW:I3C:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 625

TRIGger:SBSW:I3C:BIT <Frame>,<Field>,<Bit>
TRIGger:SBSW:I3C:BIT? <Bit>
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 625

TRIGger:SBSW:I3C:DMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:I3C:DMAX? <Data>
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range for the software trigger, if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max> List of comma-separated values

Usage: Asynchronous command

Manual operation: See "Edit" on page 625

TRIGger:SBSW:I3C:DMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:I3C:DMIN? <Data>
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min> List of comma-separated values

Usage: Asynchronous command

Manual operation: See "Edit" on page 625

TRIGger:SBSW:I3C:DOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:I3C:DOPerator? <Operator>
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern of the software trigger in the selected field of the selected frame.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:

<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 625

TRIGger:SBSW:I3C:FIENable <Frame>,<Field>,<Enabler>
TRIGger:SBSW:I3C:FIENable? <Enabler>
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame of the software trigger.

Suffix:

<fr> Index of the frame

<fl> Index of the field

Parameters:

<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 625

TRIGger:SBSW:I3C:IMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:I3C:IMAX? <Data>
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range for the software trigger if the operator is set to `INRange`.

You can set the operator with `TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 625

TRIGger:SBSW:I3C:IMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:I3C:IMIN? <Data>
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 625

TRIGger:SBSW:I3C:IOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:I3C:IOPerator? <Operator>
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 625

TRIGger:SBSW:I3C:ERENable <ErrorName>,<Enabler>
TRIGger:SBSW:I3C:ERENable? <Enabler>
TRIGger:SBSW:I3C:ERRor<m>:ENABle <Enable>

Defines the error type for the software trigger.

Suffix:
<m> Index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 626

SBUS<sb>:I3C:SWTindex?

Queries the software trigger index.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Index> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:I3C:SWTTime?

Queries the software trigger time in seconds.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Time> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.6.5 Decode results

SBUS<sb>:I3C:FCOunt? 1652
SBUS<sb>:I3C:FRAMe<fr>:ADDRess? 1652
SBUS<sb>:I3C:FRAMe<fr>:ASTart? 1652
SBUS<sb>:I3C:FRAMe<fr>:FLDCount? 1653
SBUS<sb>:I3C:FRAMe<fr>:BITRate? 1653
SBUS<sb>:I3C:FRAMe<fr>:DATA? 1653
SBUS<sb>:I3C:FRAMe<fr>:RWBStart? 1654
SBUS<sb>:I3C:FRAMe<fr>:STARt? 1654
SBUS<sb>:I3C:FRAMe<fr>:STATus? 1654
SBUS<sb>:I3C:FRAMe<fr>:STOP? 1655
SBUS<sb>:I3C:FRAMe<fr>:SYMBol? 1655
SBUS<sb>:I3C:FRAMe<fr>:ACK? 1656
SBUS<sb>:I3C:FRAMe<fr>:ACKStart? 1656
SBUS<sb>:I3C:FRAMe<fr>:FLD<fl>:FVALue? 1656
SBUS<sb>:I3C:FRAMe<fr>:FLD<fl>:LABel? 1657
SBUS<sb>:I3C:FRAMe<fr>:FLD<fl>:STATe? 1657

SBUS<sb>:I3C:FRAMe<fr>:FLD<fl>:VALue? 1658
SBUS<sb>:I3C:FRAMe<fr>:COMMand? 1658
SBUS<sb>:I3C:FRAMe<fr>:CRC? 1658
SBUS<sb>:I3C:FRAMe<fr>:FADDress? 1658
SBUS<sb>:I3C:FRAMe<fr>:FCOMmand? 1659
SBUS<sb>:I3C:FRAMe<fr>:FCRC? 1659
SBUS<sb>:I3C:FRAMe<fr>:RWBit? 1659
SBUS<sb>:I3C:FRAMe<fr>:TYPE? 1660

SBUS<sb>:I3C:FCOunt?

Returns the number of decoded frames.

Suffix:

<sb> 1 to 4, index of the serial bus
Selects the serial bus.

Return values:

<Count> Total number of decoded frames.

Usage: Query only
Asynchronous command

SBUS<sb>:I3C:FRAMe<fr>:ADDRess?

Returns the device address value of the indicated frame. That is, the address value that is shown in the decoded cells and in the decode results table.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<AddressValue> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:I3C:FRAMe<fr>:ASTart?

Returns the start time of the address for the indicated frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<AddressStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:I3C:FRAMe<fr>:FLDCount?

Returns the number of fields in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:I3C:FRAMe<fr>:BITRate?

Returns the primary bit rate.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<BitRate> Increment: 1
*RST: 0
Default unit: bps

Usage: Query only
Asynchronous command

SBUS<sb>:I3C:FRAMe<fr>:DATA?

Returns the data words of the specified frame in comma-separated values.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

<Values>

Example:
```
BUS:I3C:FRAMe4:DATA?
<-- 3,74,164,18
```

Usage: Query only
Asynchronous command

SBUS<sb>:I3C:FRAMe<fr>:RWBStart?

Returns the start time of the R/W bit

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<RWBitStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:I3C:FRAMe<fr>:STARt?

Returns the start time of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:I3C:FRAMe<fr>:STATus?

Returns the overall state of the frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameState> OK | ACK | PAR | CRC | LENGth | UNKNown | INComplete

OK
The frame is valid.

ACK
Wrong acknowledgment (ACK) delimiter occurred.

PAR
Wrong parity detected.

CRC
Cyclic redundancy check failed.

LENGth
Wrong length of frame.

UNKNown
Unknown frame type detected.

INComplete
The frame is not completely contained in the acquisition. The acquired part of the frame is usually valid, but cannot always be trusted.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:I3C:FRAMe<fr>:STOP?

Returns the end time of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:I3C:FRAMe<fr>:SYMBol?

Returns the symbolic label of the specified frame if the label list is enabled.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Translation> String with the symbolic name of the frame

Usage: Query only
Asynchronous command

SBUS<sb>:I3C:FRAMe<fr>:ACK?

Returns the value of the acknowledge bit for the selected frame. Because this ACK bit is transmitted right after the address field, it acknowledges receiving the address.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<AckBitValue> ACK | NACK | EITHer
*RST: EITHer

Usage: Query only
Asynchronous command

SBUS<sb>:I3C:FRAMe<fr>:ACKStart?

Returns the start time of the acknowledge bit for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<AckBitStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:I3C:FRAMe<fr>:FLD<fl>:FVALue?

Returns the formatted value of the specified field for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<FormattedValue>

Usage: Query only
Asynchronous command

SBUS<sb>:I3C:FRAMe<fr>:FLD<fl>:LABel?

Returns the name (label) of the specified field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Label>

Usage: Query only
Asynchronous command

SBUS<sb>:I3C:FRAMe<fr>:FLD<fl>:STATe?

Returns the overall state of the specified field for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<State> OK | ACK | PAR | CRC | LENGth | UNKNown | INComplete

OK
The field has no error, it is valid.

ACK
Wrong acknowledgment (ACK) delimiter occurred.

PAR
Wrong parity detected.

CRC
Cyclic redundancy check failed.

LENGth
Wrong length of the field.

UNKNown
Unknown field type detected.

INComplete
The field is not completely contained in the acquisition. The acquired part of the field is usually valid, but cannot always be trusted.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:I3C:FRAMe<fr>:FLD<fl>:VALue?

Returns the data value of the specified field.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Value> Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:I3C:FRAMe<fr>:COMMand?

Returns the selected frame's command response, which is an integer.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Response> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:I3C:FRAMe<fr>:CRC?

Returns the cyclic redundancy check (CRC) checksum of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<CRCValue> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:I3C:FRAMe<fr>:FADDress?

Returns the formatted address for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedAddrVal>

Usage: Query only
Asynchronous command

SBUS<sb>:I3C:FRAMe<fr>:FCOMmand?

Returns the formatted command from the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedCmd>

Usage: Query only
Asynchronous command

SBUS<sb>:I3C:FRAMe<fr>:FCRC?

Returns the formatted CRC value for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedCRCVal>

Usage: Query only
Asynchronous command

SBUS<sb>:I3C:FRAMe<fr>:RWBit?

Returns the value of the R/W bit of the selected frame. The value "0" denotes "Write", the value "1" denotes "Read".

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<RWBitValue> UNDefined | READ | WRITe | EITHer
*RST: UNDefined

Usage: Query only
Asynchronous command

SBUS<sb>:I3C:FRAMe<fr>:TYPE?

Returns the frame type of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameType> UNKNown | PROB | READ | WRIT | BRDC | DRCT | HDDR | HTSX

*RST: UNKNown

Usage: Query only
Asynchronous command

18.18.7 D-PHY (option R&S MXO5-K580)

Before MXO 5 can accept the specific bus commands, make sure that:

- The decoding of the specified bus is enabled with `SBUS<sb>[:STATe]`.
- The bus is set to the correct type with `SBUS<sb>:TYPE`.

- Configuration....1660
- Filter....1666
- Format....1672
- Software trigger....1681
- Decode results....1687

18.18.7.1 Configuration

SBUS<sb>:DPHY:MODE....1661
SBUS<sb>:DPHY:SCRambled....1661
SBUS<sb>:DPHY:DISTribute....1662
SBUS<sb>:DPHY:CLK:SOURce....1662
SBUS<sb>:DPHY:CLK:THReshold....1662
SBUS<sb>:DPHY:CLK:HYSTeresis....1662
SBUS<sb>:DPHY:POSition....1663
SBUS<sb>:DPHY:SCALe....1663
SBUS<sb>:DPHY:DNZero:SOURce....1663
SBUS<sb>:DPHY:DPZero:SOURce....1663
SBUS<sb>:DPHY:DNZero:THReshold....1663
SBUS<sb>:DPHY:DPZero:THReshold....1663
SBUS<sb>:DPHY:DNZero:HYSTeresis....1664
SBUS<sb>:DPHY:DPZero:HYSTeresis....1664
SBUS<sb>:DPHY:DPZero:POSition....1664

SBUS<sb>:DPHY:DPZero:SCALe ... 1664
SBUS<sb>:DPHY:DNZero:LPTHreshold ... 1664
SBUS<sb>:DPHY:DPZero:LPTHreshold ... 1664
SBUS<sb>:DPHY:DNZero:LPHYsteresis ... 1665
SBUS<sb>:DPHY:DPZero:LPHYsteresis ... 1665
SBUS<sb>:DPHY:DPONe:SOURce ... 1665
SBUS<sb>:DPHY:DPTWo:SOURce ... 1665
SBUS<sb>:DPHY:DPTHree:SOURce ... 1665
SBUS<sb>:DPHY:DPONe:THReshold ... 1665
SBUS<sb>:DPHY:DPTWo:THReshold ... 1665
SBUS<sb>:DPHY:DPTHree:THReshold ... 1665
SBUS<sb>:DPHY:DPONe:HYSTeresis ... 1666
SBUS<sb>:DPHY:DPTWo:HYSTeresis ... 1666
SBUS<sb>:DPHY:DPTHree:HYSTeresis ... 1666
SBUS<sb>:DPHY:DPONe:POSition ... 1666
SBUS<sb>:DPHY:DPTWo:POSition ... 1666
SBUS<sb>:DPHY:DPTHree:POSition ... 1666
SBUS<sb>:DPHY:DPONe:SCALe ... 1666
SBUS<sb>:DPHY:DPONe:SCALe ... 1666
SBUS<sb>:DPHY:DPONe:SCALe ... 1666
SBUS<sb>:DPHY:DPTWo:SCALe ... 1666
SBUS<sb>:DPHY:DPTHree:SCALe ... 1666

SBUS<sb>:DPHY:MODE <Mode>

Selects which MIPI-based protocol is used.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Mode> DPHY | CSI | DSI
*RST: DPHY

Usage: Asynchronous command

Manual operation: See "Protocol" on page 631

SBUS<sb>:DPHY:SCRambled <Mode>

Enables the data scrambling.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Mode> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Scrambled" on page 632

SBUS<sb>:DPHY:DISTribute <Mode>

Enables lane distribution, where individual contributions to the long or short packets from multiple data lanes are shown separately on the GUI.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Mode> OFF | ON
*RST: OFF

Usage: Asynchronous command

SBUS<sb>:DPHY:CLK:SOURce <CLKSource>

Selects the source for the clock signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<CLKSource> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "CLK source" on page 632

SBUS<sb>:DPHY:CLK:THReshold <Threshold>

Sets the threshold for the clock signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Threshold>

Usage: Asynchronous command

Manual operation: See "CLK threshold, CLK hysteresis" on page 633

SBUS<sb>:DPHY:CLK:HYSTeresis <Hysteresis>

Sets the hysteresis for the clock signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "CLK threshold, CLK hysteresis" on page 633

SBUS<sb>:DPHY:POSition <Position>

Sets the vertical position of the D-PHY signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Position>

Usage: Asynchronous command

SBUS<sb>:DPHY:SCALe <Scale>

Sets the vertical scale of the D-PHY signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Scale>

Usage: Asynchronous command

SBUS<sb>:DPHY:DNZero:SOURce <DN0Source>
SBUS<sb>:DPHY:DPZero:SOURce <DP0Source>

Selects the source for the low-power data lines.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DP0Source> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Dp0, Dn0 source" on page 632

SBUS<sb>:DPHY:DNZero:THReshold <Threshold>
SBUS<sb>:DPHY:DPZero:THReshold <Threshold>

Sets the threshold for the low-power data lines.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Threshold>

Usage: Asynchronous command

Manual operation: See "Dp0, Dn0 threshold, Dp0, Dn0 hysteresis" on page 633

SBUS<sb>:DPHY:DNZero:HYSTeresis <Hysteresis>
SBUS<sb>:DPHY:DPZero:HYSTeresis <Hysteresis>

Sets the hysteresis for the low-power data lines.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "Dp0, Dn0 threshold, Dp0, Dn0 hysteresis" on page 633

SBUS<sb>:DPHY:DPZero:POSition <DPHY DP0 position>

Sets the vertical position of the DP0 line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DPHY DP0 position>

Usage: Asynchronous command

SBUS<sb>:DPHY:DPZero:SCALe <DPHY DP0 scale>

Sets the vertical scale of the DP0 line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DPHY DP0 scale>

Usage: Asynchronous command

SBUS<sb>:DPHY:DNZero:LPTHreshold <Threshold>
SBUS<sb>:DPHY:DPZero:LPTHreshold <Threshold>

Sets the threshold for the low-power states of DP0 and DN0.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Threshold>

Usage: Asynchronous command

Manual operation: See "LP Dp0, LP Dn0 threshold, LP Dp0, LP Dn0 hysteresis" on page 633

SBUS<sb>:DPHY:DNZero:LPHYsteresis <Hysteresis>
SBUS<sb>:DPHY:DPZero:LPHYsteresis <Hysteresis>

Sets the hysteresis for the low-power states of DP0 and DN0.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "LP Dp0, LP Dn0 threshold, LP Dp0, LP Dn0 hysteresis" on page 633

SBUS<sb>:DPHY:DPONe:SOURce <DP1Source>
SBUS<sb>:DPHY:DPTWo:SOURce <DP2Source>
SBUS<sb>:DPHY:DPTHree:SOURce <DP3Source>

Selects the source for the high-speed data lines.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DP3Source> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "DP<n> source" on page 632

SBUS<sb>:DPHY:DPONe:THReshold <Threshold>
SBUS<sb>:DPHY:DPTWo:THReshold <Threshold>
SBUS<sb>:DPHY:DPTHree:THReshold <Threshold>

Sets the threshold for the for the digitization of high-speed data lines.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Threshold>

Usage: Asynchronous command

Manual operation: See "DP<n> threshold, DP<n> hysteresis" on page 634

SBUS<sb>:DPHY:DPONe:HYSTeresis <Hysteresis>
SBUS<sb>:DPHY:DPTWo:HYSTeresis <Hysteresis>
SBUS<sb>:DPHY:DPTHree:HYSTeresis <Hysteresis>

Sets the hysteresis for the for the digitization of high-speed data lines.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "DP<n> threshold, DP<n> hysteresis" on page 634

SBUS<sb>:DPHY:DPONe:POSition <DPHY DP1 position>
SBUS<sb>:DPHY:DPTWo:POSition <DPHY DP2 position>
SBUS<sb>:DPHY:DPTHree:POSition <DPHY DP3 position>

Sets the vertical position of the high-speed data lines.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DPHY DP3 position>

Usage: Asynchronous command

SBUS<sb>:DPHY:DPONe:SCALe <DPHY DP1 scale>
SBUS<sb>:DPHY:DPONe:SCALe <DPHY DP1 scale>
SBUS<sb>:DPHY:DPONe:SCALe <DPHY DP1 scale>
SBUS<sb>:DPHY:DPTWo:SCALe <DPHY DP2 scale>
SBUS<sb>:DPHY:DPTHree:SCALe <DPHY DP3 scale>

Sets the vertical scale of the high-speed data lines.

Suffix:
<sb> 1 to 4, index of the serial bus

<sb> 1..4

Parameters:
<DPHY DP3 scale>

Usage: Asynchronous command

18.18.7.2 Filter

There are two commands for each parameter, that you can use for defining the D-PHY settings.

For example, to set the *Frame type =DPHY* > *Field =Data* >*Data* value you can use one of the following commands:

- `SBUS:DPHY:FILTer:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `SBUS:DPHY:FILTer:DMIN "DPHY-Frame", "Data", 01100`
  Defines the parameter by using the frame and field name.

SBUS<sb>:DPHY:FILTer:CHKall....1667
SBUS<sb>:DPHY:FILTer:CLR....1667
SBUS<sb>:DPHY:FILTer:INVert....1668
SBUS<sb>:DPHY:FILTer:RST....1668
SBUS<sb>:DPHY:FILTer:BIT....1668
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:BIT....1668
SBUS<sb>:DPHY:FILTer:ERENable....1669
SBUS<sb>:DPHY:FILTer:ERRor<n>:ENABle....1669
SBUS<sb>:DPHY:FILTer:DMAX....1669
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:DMAX....1669
SBUS<sb>:DPHY:FILTer:DMIN....1669
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:DMIN....1669
SBUS<sb>:DPHY:FILTer:DOPerator....1670
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:DOPerator....1670
SBUS<sb>:DPHY:FILTer:FIENable....1670
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:ENABle....1670
SBUS<sb>:DPHY:FILTer:FRENable....1670
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:ENABle....1670
SBUS<sb>:DPHY:FILTer:IMAX....1671
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:IMAX....1671
SBUS<sb>:DPHY:FILTer:IMIN....1671
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:IMIN....1671
SBUS<sb>:DPHY:FILTer:IOPerator....1672
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:IOPerator....1672

SBUS<sb>:DPHY:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 635

SBUS<sb>:DPHY:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 635

SBUS<sb>:DPHY:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 635

SBUS<sb>:DPHY:FILTer:RST

Presets the state of the selected frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 635

SBUS<sb>:DPHY:FILTer:BIT <Frame>,<Field>,<Bit>
SBUS<sb>:DPHY:FILTer:BIT? <Bit>
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 636

SBUS<sb>:DPHY:FILTer:ERENable <ErrorName>,<Enabler>
SBUS<sb>:DPHY:FILTer:ERENable? <Enabler>
SBUS<sb>:DPHY:FILTer:ERRor<n>:ENABle <Enable>

Defines the error type to be filtered on.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 637

SBUS<sb>:DPHY:FILTer:DMAX <Frame>,<Field>,<Data>
SBUS<sb>:DPHY:FILTer:DMAX? <Data>
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `SBUS<sb>:DPHY:FILTer:DOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 636

SBUS<sb>:DPHY:FILTer:DMIN <Frame>,<Field>,<Data>
SBUS<sb>:DPHY:FILTer:DMIN? <Data>
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 636

SBUS<sb>:DPHY:FILTer:DOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:DPHY:FILTer:DOPerator? <Operator>
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 636

SBUS<sb>:DPHY:FILTer:FIENable <Frame>,<Field>,<Enabler>
SBUS<sb>:DPHY:FILTer:FIENable? <Enabler>
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 636

SBUS<sb>:DPHY:FILTer:FRENable <Frame>,<Enabler>
SBUS<sb>:DPHY:FILTer:FRENable? <Enabler>
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:ENABle <Enable>

Enables the filtering on D-PHY frames. Only the frames that match the selected filter conditions are displayed.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 636

SBUS<sb>:DPHY:FILTer:IMAX <Frame>,<Field>,<Data>
SBUS<sb>:DPHY:FILTer:IMAX? <Data>
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if the operator is set to `INRange`.

You can set the operator with `SBUS<sb>:DPHY:FILTer:IOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 636

SBUS<sb>:DPHY:FILTer:IMIN <Frame>,<Field>,<Data>
SBUS<sb>:DPHY:FILTer:IMIN? <Data>
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 636

SBUS<sb>:DPHY:FILTer:IOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:DPHY:FILTer:IOPerator? <Operator>
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 636

18.18.7.3 Format

This section describes the commands to specify and query frame formats for the "D-PHY" protocol.

SBUS<sb>:DPHY:FORMat:SELect ... 1673
SBUS<sb>:DPHY:FORMat:ADDFrame ... 1673
SBUS<sb>:DPHY:FORMat:LOAD ... 1673
SBUS<sb>:DPHY:FORMat:SAVE ... 1673
SBUS<sb>:DPHY:FORMat:CLR ... 1674
SBUS<sb>:DPHY:FORMat:FCOunt? ... 1674
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ADDField ... 1674
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLDCount? ... 1674
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:NAME ... 1675
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:COLor ... 1675
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:TYPE ... 1675
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ID1Field ... 1676
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ID2Field ... 1676
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ID3Field ... 1676
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ID1Value ... 1676
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ID2Value ... 1676
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ID3Value ... 1676
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:NAME ... 1676
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:COLor ... 1676
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:FSTBit ... 1677
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:BITCount ... 1677
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:REPetition ... 1678
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:BITorder ... 1678
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:FORMat ... 1678
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:ADDValue ... 1679
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue ... 1680
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel ... 1680

SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:UNIT 1680
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:PARA 1681
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:PARB 1681

SBUS<sb>:DPHY:FORMat:SELect <Select>

Enables the format configuration

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Select> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show format" on page 638

SBUS<sb>:DPHY:FORMat:ADDFrame

Appendes a new frame format to the frame list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Add frame" on page 638

SBUS<sb>:DPHY:FORMat:LOAD <FileName>

Loads a the specified XML file with a list of frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Open" on page 639

SBUS<sb>:DPHY:FORMat:SAVE <FileName>

Saves the current list of frame formats to an XML file with the specified name.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Save as" on page 639

SBUS<sb>:DPHY:FORMat:CLR

Erases from the volatile memory all field descriptions and frame formats that you have created.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Edit list" on page 639

SBUS<sb>:DPHY:FORMat:FCOunt?

Returns the number of available frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Edit list" on page 639

SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ADDField

Appends a new field description to the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Usage: Setting only
Asynchronous command

Manual operation: See "Add field" on page 640

SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLDCount?

Returns the number of field descriptions available for the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:DPHY:FORMat:FRAMe<fr>:NAME <Name>

Specifies the name for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Frame name" on page 640

SBUS<sb>:DPHY:FORMat:FRAMe<fr>:COLor <Color>

Specifies the color for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4278255615

Usage: Asynchronous command

Manual operation: See "Frame color" on page 640

SBUS<sb>:DPHY:FORMat:FRAMe<fr>:TYPE <Type>

Sets an original frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Type>

Usage: Asynchronous command

Manual operation: See "Frame type" on page 640

SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ID1Field <ID1Field>
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ID2Field <ID2Field>
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ID3Field <ID3Field>

Sets the identifying field type for the configured frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Field>

Usage: Asynchronous command

Manual operation: See "ID<n> field" on page 640

SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ID1Value <ID1Value>
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ID2Value <ID2Value>
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ID3Value <ID3Value>

Sets the value of the corresponding field type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Value>

Usage: Asynchronous command

Manual operation: See "ID<n> value" on page 640

SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:NAME <Name>

Specifies the name for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Field name" on page 641

SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:COLor <Color>

Specifies the color for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4294967040

Usage: Asynchronous command

Manual operation: See "Field color" on page 641

SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:FSTBit <FirstBit>

In order of transmission, sets the first bit of the specified field in the payload.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<FirstBit>

Range: 0 to 63
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "First bit" on page 641

SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:BITCount <BitCount>

Specifies the bit count, hence length, of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitCount>

Range: 1 to 64
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Bit count" on page 641

SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:REPetition <Repetition>

Sets the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Repetition> Range: 0 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Repetition" on page 642

SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:BITorder <BitOrder>

Specifies, in which order the algorithm evaluates the bits of the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitOrder> LSBF | MSBF

LSBF
Least significant bit first

MSBF
Most significant bit first

*RST: MSBF

Usage: Asynchronous command

Manual operation: See "Bit order" on page 642

SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:FORMat <NumericFormat>

Specifies the numerical format for the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<NumericFormat> HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG | DEC | LIST | FLIN

HEX
Hexadecimal format

OCT
Octal format

BIN
Binary format

ASCII = ASCii
ASCII format

SIGN
Signed, decimal format

DEC=USIG
Unsigned, decimal format

LIST
Value list

FLIN
Linear function

*RST: HEX

Usage: Asynchronous command

Manual operation: See "Numeric format" on page 642

SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:ADDValue

Creates a new hexagonal value for customization.

Available if `SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Related commands:

`SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue`

`SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel`

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Usage: Setting only
Asynchronous command

Manual operation: See "Add value" on page 643

SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue <Value>

Sets the hexagonal value to convert it into a labeled state.

Available if `SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:

<Value>
Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Value" on page 643

SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel <Label>

Sets the label to convert the corresponding hexagonal value to a labeled state.

Available if `SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:

<Label>

Usage: Asynchronous command

Manual operation: See "Label" on page 643

SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:UNIT <Unit>

Sets the unit for the linear function.

Available if `SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Unit>

Usage: Asynchronous command

Manual operation: See "Unit" on page 643

SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:PARA <ParameterA>
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:PARB <ParameterB>

Sets the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

Available if `SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<ParameterB>
Range: -1E+20 to 1E+20
Increment: 1E-12
*RST: 0

Usage: Asynchronous command

Manual operation: See "Parameter A,B" on page 643

18.18.7.4 Software trigger

There are two commands for each parameter that you can use for defining the "D-PHY" settings.

For example, to set the *Frame type =DPHY-Frame* > *Field =Data* >*Data* value you can use one of the following commands:

- `TRIGger:SBSW:DPHY:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <fr> for the frame number and <fl> for the field number.
- `TRIGger:SBSW:DPHY:DMIN "DPHY-Frame", "Data", 01100`
  Defines the parameter by using the frame and field name.

TRIGger:SBSW:DPHY:CHKall....1682
TRIGger:SBSW:DPHY:CLR....1682
TRIGger:SBSW:DPHY:INVert....1682
TRIGger:SBSW:EBTB:INVert....1682
TRIGger:SBSW:DPHY:RST....1683
TRIGger:SBSW:DPHY:FRENable....1683
TRIGger:SBSW:DPHY:FRAMe<fr>:ENABle....1683
TRIGger:SBSW:DPHY:BIT....1683

TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:BIT....1683
TRIGger:SBSW:DPHY:DMAX....1684
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:DMAX....1684
TRIGger:SBSW:DPHY:DMIN....1684
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:DMIN....1684
TRIGger:SBSW:DPHY:DOPerator....1684
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:DOPerator....1684
TRIGger:SBSW:DPHY:FIENable....1685
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:ENABle....1685
TRIGger:SBSW:DPHY:IMAX....1685
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:IMAX....1685
TRIGger:SBSW:DPHY:IMIN....1686
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:IMIN....1686
TRIGger:SBSW:DPHY:IOPerator....1686
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:IOPerator....1686
TRIGger:SBSW:DPHY:ERENable....1686
TRIGger:SBSW:DPHY:ERRor<m>:ENABle....1686
SBUS<sb>:DPHY:SWTindex?....1687
SBUS<sb>:DPHY:SWTTime?....1687

TRIGger:SBSW:DPHY:CHKall

Enables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 644

TRIGger:SBSW:DPHY:CLR

Disables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 644

TRIGger:SBSW:DPHY:INVert

Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 644

TRIGger:SBSW:EBTB:INVert

Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 727

TRIGger:SBSW:DPHY:RST

Presets the state of the selected frames and error types for the software trigger.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 644

TRIGger:SBSW:DPHY:FRENable <Frame>,<Enabler>
TRIGger:SBSW:DPHY:FRENable? <Enabler>
TRIGger:SBSW:DPHY:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 645

TRIGger:SBSW:DPHY:BIT <Frame>,<Field>,<Bit>
TRIGger:SBSW:DPHY:BIT? <Bit>
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 645

TRIGger:SBSW:DPHY:DMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:DPHY:DMAX? <Data>
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range for the software trigger, if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 645

TRIGger:SBSW:DPHY:DMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:DPHY:DMIN? <Data>
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 645

TRIGger:SBSW:DPHY:DOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:DPHY:DOPerator? <Operator>
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern of the software trigger in the selected field of the selected frame.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:

<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 645

TRIGger:SBSW:DPHY:FIENable <Frame>,<Field>,<Enabler>
TRIGger:SBSW:DPHY:FIENable? <Enabler>
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame of the software trigger.

Suffix:

<fr> Index of the frame

<fl> Index of the field

Parameters:

<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 645

TRIGger:SBSW:DPHY:IMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:DPHY:IMAX? <Data>
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range for the software trigger if the operator is set to `INRange`.

You can set the operator with `TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 645

TRIGger:SBSW:DPHY:IMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:DPHY:IMIN? <Data>
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 645

TRIGger:SBSW:DPHY:IOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:DPHY:IOPerator? <Operator>
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 645

TRIGger:SBSW:DPHY:ERENable <ErrorName>,<Enabler>
TRIGger:SBSW:DPHY:ERENable? <Enabler>
TRIGger:SBSW:DPHY:ERRor<m>:ENABle <Enable>

Defines the error type for the software trigger.

Suffix:
<m> index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 646

SBUS<sb>:DPHY:SWTindex?

Queries the software trigger index.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

<sb> 1..4

Return values:
<Index> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:DPHY:SWTTime?

Queries the software trigger time in seconds.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Time> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.7.5 Decode results

This section describes the commands to query the results of the decoding of the "D-PHY" protocol.

For manual operation, see Section 14.1.9.3, "Decoding protocol signals", on page 531.

SBUS<sb>:DPHY:FCOunt? 1688
SBUS<sb>:DPHY:FRAMe<fr>:FLDCount? 1688
SBUS<sb>:DPHY:FRAMe<fr>:BITRate? 1688
SBUS<sb>:DPHY:FRAMe<fr>:FLD<fl>:STATe? 1689
SBUS<sb>:DPHY:FRAMe<fr>:FLD<fl>:LABel? 1689
SBUS<sb>:DPHY:FRAMe<fr>:FLD<fl>:VALue? 1690
SBUS<sb>:DPHY:FRAMe<fr>:FLD<fl>:FVALue? 1690
SBUS<sb>:DPHY:FRAMe<fr>:STATus? 1690
SBUS<sb>:DPHY:FRAMe<fr>:STARt? 1691
SBUS<sb>:DPHY:FRAMe<fr>:STOP? 1691

SBUS<sb>:DPHY:FRAMe<fr>:TYPE?....1692
SBUS<sb>:DPHY:FRAMe<fr>:CRC?....1692
SBUS<sb>:DPHY:FRAMe<fr>:DATA?....1693
SBUS<sb>:DPHY:FRAMe<fr>:DT?....1693
SBUS<sb>:DPHY:FRAMe<fr>:FDT?....1693
SBUS<sb>:DPHY:FRAMe<fr>:ECC?....1694
SBUS<sb>:DPHY:FRAMe<fr>:VCID?....1694
SBUS<sb>:DPHY:FRAMe<fr>:FVCid?....1694
SBUS<sb>:DPHY:FRAMe<fr>:WC?....1695
SBUS<sb>:DPHY:FRAMe<fr>:FWC?....1695

SBUS<sb>:DPHY:FCOunt?

Returns the number of decoded frames.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:DPHY:FRAMe<fr>:FLDCount?

Returns the number of fields available in the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<DataCount>

Usage: Query only
Asynchronous command

SBUS<sb>:DPHY:FRAMe<fr>:BITRate?

Returns the bit rate of the frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<BitRate> Range: 0 to 100000000000
Increment: 1
*RST: 0
Default unit: bps

Usage: Query only
Asynchronous command

SBUS<sb>:DPHY:FRAMe<fr>:FLD<fl>:STATe?

Returns the overall state of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<State> OK | ECCWarning | ECC | FORMat | CRC | LENGth | INComplete

OK
The field has no error, it is valid.

ECCWarning
ECC warning, indicating a correctable transmission error that can be fixed by the receiver.

ECC
ECC error, indicating an uncorrectable transmission error.

FORMat
Format error due to a mismatch between frame length and frame ID. Only available for long and short packets.

CRC
The CRC of the frame is not as expected, indicating an error.

LENGth
The length of the field is not as expected, indicating an error.

INComplete
The frame is not completely contained in the acquisition. The acquired part of the frame is valid.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:DPHY:FRAMe<fr>:FLD<fl>:LABel?

Returns the label of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Label>

Usage: Query only
Asynchronous command

SBUS<sb>:DPHY:FRAMe<fr>:FLD<fl>:VALue?

Returns the value of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Value> *RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:DPHY:FRAMe<fr>:FLD<fl>:FVALue?

Returns the formatted value of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<FormattedValue>

Usage: Query only
Asynchronous command

SBUS<sb>:DPHY:FRAMe<fr>:STATus?

Returns the overall state of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Frame state> OK | ECCWarning | ECC | FORMat | CRC | LENGth | INComplete

OK
The field has no error, it is valid.

ECCWarning
ECC warning, indicating a correctable transmission error that can be fixed by the receiver.

ECC
ECC error, indicating an uncorrectable transmission error.

FORMat
Format error due to a mismatch between frame length and frame ID. Only available for long and short packets.

CRC
The CRC of the frame is not as expected, indicating an error.

LENGth
The length of the field is not as expected, indicating an error.

INComplete
The frame is not completely contained in the acquisition. The acquired part of the frame is valid.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:DPHY:FRAMe<fr>:STARt?

Returns the start time of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Frame start> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:DPHY:FRAMe<fr>:STOP?

Returns the end time of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<Frame stop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:DPHY:FRAMe<fr>:TYPE?

Returns the type of the specified decoded frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<Frame type> HSData | HSSC | HSAC | HS_LP | HS_SP | LPHSreq | LPESc | LPTA | ALPCtrl | UNKNown

HSData
HS payload data

HSSC
HS scew calibration

HSAC
HS alternate calibration

HS_LP
HS long packet

HS_SP
HS short packet

LPHSreq
LP HS request

ILPESc
In-LP escape mode

LPTA
LP turnaround

ALPCtrl
ALP control burst

UNKNown
Unknown frame type

*RST: UNKNown

Usage: Query only
Asynchronous command

SBUS<sb>:DPHY:FRAMe<fr>:CRC?

Returns the CRC (frame check) checksum of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Checksum> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:DPHY:FRAMe<fr>:DATA?

Returns the data for the selected frame in comma-separated values, corresponds to the "Data" column in the decode results table.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

<Values>

Usage: Query only
Asynchronous command

SBUS<sb>:DPHY:FRAMe<fr>:DT?

Returns the data type for the specified framet.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Data type> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:DPHY:FRAMe<fr>:FDT?

Returns the formatted data for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Formatted data type>

Usage: Query only
Asynchronous command

SBUS<sb>:DPHY:FRAMe<fr>:ECC?

Returns the error correction code (ECC) of the specified frame

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Error correction code>
Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:DPHY:FRAMe<fr>:VCID?

Returns the virtual channel ID for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Virtual channel ID>
Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:DPHY:FRAMe<fr>:FVCid?

Returns the formatted virtual channel ID for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Virtual channel ID>

Usage: Query only
Asynchronous command

SBUS<sb>:DPHY:FRAMe<fr>:WC?

Returns the word count for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Word count> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:DPHY:FRAMe<fr>:FWC?

Returns the formatted word count for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Formatted word count>

Usage: Query only
Asynchronous command

18.18.8 UART / RS-232 (option R&S MXO5- K510)

Before MXO 5 can accept the specific bus commands, make sure that:

- The decoding of the specified bus is enabled with `SBUS<sb>[:STATe]`.
- The bus is set to the correct type with `SBUS<sb>:TYPE`.

- Configuration....1696
- Filter....1701
- Format....1707
- Hardware trigger....1716
- Software trigger....1717
- Decode results....1723

18.18.8.1 Configuration

SBUS<sb>:UART:BITRate 1696
SBUS<sb>:UART:BORDer 1696
SBUS<sb>:UART:PACKets 1697
SBUS<sb>:UART:PARity 1697
SBUS<sb>:UART:POLarity 1697
SBUS<sb>:UART:RX:HYSTeresis 1698
SBUS<sb>:UART:RX:SOURce 1698
SBUS<sb>:UART:RX:THReshold 1698
SBUS<sb>:UART:SBIT 1699
SBUS<sb>:UART:SSIZe 1699
SBUS<sb>:UART:TOUT 1699
SBUS<sb>:UART:TX:HYSTeresis 1699
SBUS<sb>:UART:TX:SOURce 1700
SBUS<sb>:UART:TX:THReshold 1700
SBUS<sb>:UART:RX:POSition 1700
SBUS<sb>:UART:RX:SCALe 1701
SBUS<sb>:UART:TX:POSition 1701
SBUS<sb>:UART:TX:SCALe 1701

SBUS<sb>:UART:BITRate <Bitrate>

Sets the number of transmitted bits per second.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Bitrate> Range: 300 to 20000000
Increment: 1
*RST: 9600
Default unit: bps

Usage: Asynchronous command

Manual operation: See "Bit rate" on page 653

SBUS<sb>:UART:BORDer <BitOrder>

Selects the bit order, which determines if the data of the messages starts with MSB (most significant bit) or LSB (least significant bit).

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<BitOrder> LSBF | MSBF
*RST: LSBF

Usage: Asynchronous command

Manual operation: See "Bit order" on page 653

SBUS<sb>:UART:PACKets <FrmSeparation>

Defines the method of packet separation. A packet is a number of subsequent words in a date stream.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<FrmSeparation> NONE | TOUT

NONE
Packets are not considered.

TOUT
Defines a timeout between the packets. To set the timeout, use `SBUS<sb>:UART:TOUT`.

*RST: TOUT

Usage: Asynchronous command

Manual operation: See "Packets" on page 653

SBUS<sb>:UART:PARity <Parity>

Defines the optional parity bit that is used for error detection.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Parity> NONE | ODD | EVEN | MARK | SPC | DC

MARK
The parity bit is always a logic 1.

SPC
SPaCe: The parity bit is always a logic 0.

DC
Do not care: the parity is ignored.

*RST: NONE

Usage: Asynchronous command

Manual operation: See "Parity" on page 653

SBUS<sb>:UART:POLarity <Polarity>

Defines the logic levels of the bus. The idle state corresponds to a logic 1. The start bit corresponds to a logic 0. "Idle high" (high=1) is used, for example, for control signals, while "Idle low" (low=1) is defined for data lines (RS-232).

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Polarity> IDLLow | IDLHigh
*RST: IDLHigh

Usage: Asynchronous command

Manual operation: See "Polarity" on page 653

SBUS<sb>:UART:RX:HYSTeresis <Rx hysteresis>

Sets the hysteresis for the Tx line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Rx hysteresis>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 654

SBUS<sb>:UART:RX:SOURce <RxSource>

Selects the input channel for the receiver signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<RxSource> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Source: Tx, Rx" on page 652

SBUS<sb>:UART:RX:THReshold <Rx threshold>

Sets a user-defined threshold value for the Rx line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Rx threshold>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 654

SBUS<sb>:UART:SBIT <StopBits>

Sets the number of stop bits: 1 or 1.5 or 2 stop bits are possible.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<StopBits> B1 | B15 | B2
*RST: B1

Usage: Asynchronous command

Manual operation: See "Stop bits" on page 653

SBUS<sb>:UART:SSIZe <DataBits>

Sets the number of data bits of a word in a range from 5 bits to 8 bits. If no parity bit is used, then 9 data bits are possible.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DataBits> Range: 5 to 9
Increment: 1
*RST: 8

Usage: Asynchronous command

Manual operation: See "Data bits" on page 653

SBUS<sb>:UART:TOUT <Timeout>

Sets the timeout between packets in a UART data stream. A new packet starts with the first start bit after the timeout.

The command is relevant if `SBUS<sb>:UART:PACKets` is set to `TOUT`.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Timeout> Range: 1E-06 to 1
Increment: 1
*RST: 0.000625
Default unit: s

Usage: Asynchronous command

Manual operation: See "Packets" on page 653

SBUS<sb>:UART:TX:HYSTeresis <Tx hysteresis>

Sets the hysteresis for the TX line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Tx hysteresis>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 654

SBUS<sb>:UART:TX:SOURce <TxSource>

Selects the input channel for the transmitter signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<TxSource> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Source: Tx, Rx" on page 652

SBUS<sb>:UART:TX:THReshold <Tx threshold>

Sets a user-defined threshold value for the Tx line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Tx threshold> User-defined clock threshold

Usage: Asynchronous command

Manual operation: See "Threshold" on page 654

SBUS<sb>:UART:RX:POSition <Rx position>

Sets the vertical position of the RX UART signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Rx position>

Usage: Asynchronous command

SBUS<sb>:UART:RX:SCALe <Rx scale>

Set the vertical scale of the RX UART signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Rx scale>

Usage: Asynchronous command

SBUS<sb>:UART:TX:POSition <Tx position>

Sets the vertical position of the TX UART signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Tx position>

Usage: Asynchronous command

SBUS<sb>:UART:TX:SCALe <Tx scale>

Set the vertical scale of the TX UART signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Tx scale>

Usage: Asynchronous command

18.18.8.2 Filter

There are two commands for each parameter, that you can use for defining the UART settings.

For example, to set the *Frame type =Tx > Field =Data >01100* value you can use one of the following commands:

- `SBUS:UART:FILTer:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `SBUS:UART:FILTer:DMIN "Tx", "Data", 01100`
  Defines the parameter by using the frame and field name.

SBUS<sb>:UART:FILTer:CHKall 1702
SBUS<sb>:UART:FILTer:CLR 1702
SBUS<sb>:UART:FILTer:INVert 1702
SBUS<sb>:UART:FILTer:RST 1703

SBUS<sb>:UART:FILTer:IMIN ... 1703
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:IMIN ... 1703
SBUS<sb>:UART:FILTer:IMAX ... 1703
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:IMAX ... 1703
SBUS<sb>:UART:FILTer:IOPerator ... 1704
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:IOPerator ... 1704
SBUS<sb>:UART:FILTer:ERENable ... 1704
SBUS<sb>:UART:FILTer:ERRor<n>:ENABle ... 1704
SBUS<sb>:UART:FILTer:DOPerator ... 1704
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:DOPerator ... 1704
SBUS<sb>:UART:FILTer:DMIN ... 1705
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:DMIN ... 1705
SBUS<sb>:UART:FILTer:DMAX ... 1705
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:DMAX ... 1705
SBUS<sb>:UART:FILTer:BIT ... 1706
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:BIT ... 1706
SBUS<sb>:UART:FILTer:FRENable ... 1706
SBUS<sb>:UART:FILTer:FRAMe<fr>:ENABle ... 1706
SBUS<sb>:UART:FILTer:FIENable ... 1706
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:ENABle ... 1706

SBUS<sb>:UART:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 655

SBUS<sb>:UART:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 655

SBUS<sb>:UART:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 655

SBUS<sb>:UART:FILTer:RST

Presets the state of the selected frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 655

SBUS<sb>:UART:FILTer:IMIN <Frame>,<Field>,<Data>
SBUS<sb>:UART:FILTer:IMIN? <Data>
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min>
Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 656

SBUS<sb>:UART:FILTer:IMAX <Frame>,<Field>,<Data>
SBUS<sb>:UART:FILTer:IMAX? <Data>
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if the operator is set to `INRange`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max>
Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 656

SBUS<sb>:UART:FILTer:IOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:UART:FILTer:IOPerator? <Operator>
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 656

SBUS<sb>:UART:FILTer:ERENable <ErrorName>,<Enabler>
SBUS<sb>:UART:FILTer:ERENable? <Enabler>
SBUS<sb>:UART:FILTer:ERRor<n>:ENABle <Enable>

Defines the error type to be filtered on.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> Index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 657

SBUS<sb>:UART:FILTer:DOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:UART:FILTer:DOPerator? <Operator>
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange
*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 656

SBUS<sb>:UART:FILTer:DMIN <Frame>,<Field>,<Data>
SBUS<sb>:UART:FILTer:DMIN? <Data>
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<sb> 1..4
Selects the serial bus.

<fr> *
Specifies the frame number.

<fl> *
Specifies the field number within the frame.

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 656

SBUS<sb>:UART:FILTer:DMAX <Frame>,<Field>,<Data>
SBUS<sb>:UART:FILTer:DMAX? <Data>
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORANGe`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 656

SBUS<sb>:UART:FILTer:BIT <Frame>,<Field>,<Bit>
SBUS<sb>:UART:FILTer:BIT? <Bit>
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 656

SBUS<sb>:UART:FILTer:FRENable <Frame>,<Enabler>
SBUS<sb>:UART:FILTer:FRENable? <Enabler>
SBUS<sb>:UART:FILTer:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 656

SBUS<sb>:UART:FILTer:FIENable <Frame>,<Field>,<Enabler>
SBUS<sb>:UART:FILTer:FIENable? <Enabler>
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 656

18.18.8.3 Format

This section describes the commands to specify and query frame formats for the "UART" protocol.

SBUS<sb>:UART:FORMat:SELect ... 1707
SBUS<sb>:UART:FORMat:ADDFrame ... 1708
SBUS<sb>:UART:FORMat:LOAD ... 1708
SBUS<sb>:UART:FORMat:SAVE ... 1708
SBUS<sb>:UART:FORMat:CLR ... 1708
SBUS<sb>:UART:FORMat:FCOunt? ... 1709
SBUS<sb>:UART:FORMat:FRAMe<fr>:ADDField ... 1709
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLDCount? ... 1709
SBUS<sb>:UART:FORMat:FRAMe<fr>:NAME ... 1709
SBUS<sb>:UART:FORMat:FRAMe<fr>:COLor ... 1710
SBUS<sb>:UART:FORMat:FRAMe<fr>:TYPE ... 1710
SBUS<sb>:UART:FORMat:FRAMe<fr>:ID1Field ... 1710
SBUS<sb>:UART:FORMat:FRAMe<fr>:ID2Field ... 1710
SBUS<sb>:UART:FORMat:FRAMe<fr>:ID3Field ... 1710
SBUS<sb>:UART:FORMat:FRAMe<fr>:ID1Value ... 1711
SBUS<sb>:UART:FORMat:FRAMe<fr>:ID2Value ... 1711
SBUS<sb>:UART:FORMat:FRAMe<fr>:ID3Value ... 1711
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:NAME ... 1711
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:COLor ... 1711
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:FSTBit ... 1712
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:BITCount ... 1712
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:REPetition ... 1712
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:BITorder ... 1713
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:FORMat ... 1713
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:ADDValue ... 1714
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue ... 1714
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel ... 1714
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:UNIT ... 1715
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:PARA ... 1715
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:PARB ... 1715

SBUS<sb>:UART:FORMat:SELect <Select>

Enables the format configuration

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Select> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show format" on page 657

SBUS<sb>:UART:FORMat:ADDFrame

Appendes a new frame format to the frame list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Add frame" on page 658

SBUS<sb>:UART:FORMat:LOAD <FileName>

Loads a the specified XML file with a list of frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Open" on page 658

SBUS<sb>:UART:FORMat:SAVE <FileName>

Saves the current list of frame formats to an XML file with the specified name.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Save as" on page 659

SBUS<sb>:UART:FORMat:CLR

Erases from the volatile memory all field descriptions and frame formats that you have created.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Edit list" on page 658

SBUS<sb>:UART:FORMat:FCOunt?

Returns the number of available frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Edit list" on page 658

SBUS<sb>:UART:FORMat:FRAMe<fr>:ADDField

Appends a new field description to the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Usage: Setting only
Asynchronous command

Manual operation: See "Add field" on page 660

SBUS<sb>:UART:FORMat:FRAMe<fr>:FLDCount?

Returns the number of field descriptions available for the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:UART:FORMat:FRAMe<fr>:NAME <Name>

Specifies the name for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Frame name" on page 659

SBUS<sb>:UART:FORMat:FRAMe<fr>:COLor <Color>

Specifies the color for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4278255615

Usage: Asynchronous command

Manual operation: See "Frame color" on page 659

SBUS<sb>:UART:FORMat:FRAMe<fr>:TYPE <Type>

Sets an original frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Type>

Usage: Asynchronous command

Manual operation: See "Frame type" on page 659

SBUS<sb>:UART:FORMat:FRAMe<fr>:ID1Field <ID1Field>
SBUS<sb>:UART:FORMat:FRAMe<fr>:ID2Field <ID2Field>
SBUS<sb>:UART:FORMat:FRAMe<fr>:ID3Field <ID3Field>

Sets the identifying field type for the configured frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Field>

Usage: Asynchronous command

Manual operation: See "ID<n> field" on page 659

SBUS<sb>:UART:FORMat:FRAMe<fr>:ID1Value <ID1Value>
SBUS<sb>:UART:FORMat:FRAMe<fr>:ID2Value <ID2Value>
SBUS<sb>:UART:FORMat:FRAMe<fr>:ID3Value <ID3Value>

Sets the value of the corresponding field type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Value>

Usage: Asynchronous command

Manual operation: See "ID<n> value" on page 659

SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:NAME <Name>

Specifies the name for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Field name" on page 660

SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:COLor <Color>

Specifies the color for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4294967040

Usage: Asynchronous command

Manual operation: See "Field color" on page 660

SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:FSTBit <FirstBit>

In order of transmission, sets the first bit of the specified field in the payload.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<FirstBit> Range: 0 to 63
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "First bit" on page 660

SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:BITCount <BitCount>

Specifies the bit count, hence length, of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitCount> Range: 1 to 64
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Bit count" on page 661

SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:REPetition <Repetition>

Sets the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Repetition> Range: 0 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Repetition" on page 661

SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:BITorder <BitOrder>

Specifies, in which order the algorithm evaluates the bits of the condition value of the selected field in the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<BitOrder> LSBF | MSBF

LSBF
Least significant bit first

MSBF
Most significant bit first

*RST: MSBF

Usage: Asynchronous command

Manual operation: See "Bit order" on page 661

SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:FORMat <NumericFormat>

Specifies, in which order the algorithm evaluates the bits of the condition value of the selected field in the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<BitOrder> LSBF | MSBF

LSBF
Least significant bit first

MSBF
Most significant bit first

*RST: MSBF

Usage: Asynchronous command

Manual operation: See "Numeric format" on page 661

SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:ADDValue

Creates a new hexagonal value for customization.

Available if `SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Related commands:

`SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue`

`SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel`

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Usage: Setting only
Asynchronous command

Manual operation: See "Add value" on page 662

SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue <Value>

Sets the hexagonal value to convert it into a labeled state.

Available if `SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:

<Value> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Value" on page 662

SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel <Label>

Sets the label to convert the corresponding hexagonal value to a labeled state.

Available if `SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:
<Label>

Usage: Asynchronous command

Manual operation: See "Label" on page 662

SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:UNIT <Unit>

Sets the unit for the linear function.

Available if `SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Unit>

Usage: Asynchronous command

Manual operation: See "Unit" on page 662

SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:PARA <ParameterA>
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:PARB <ParameterB>

Sets the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

Available if `SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<ParameterB>
Range: -1E+20 to 1E+20
Increment: 1E-12
*RST: 0

Usage: Asynchronous command

Manual operation: See "Parameter A,B" on page 662

18.18.8.4 Hardware trigger

Trigger commands for serial buses affect the current trigger source. Therefore, set the trigger source to the required serial bus with `TRIGger:EVENt<ev>:SOURce` before sending the bus-specific trigger commands.

TRIGger:SBHW:UART:DATA....1716
TRIGger:SBHW:UART:DPOSition....1716
TRIGger:SBHW:UART:FCONdition....1716
TRIGger:SBHW:UART:OPERator....1717
TRIGger:SBHW:UART:SOURce....1717
TRIGger:SBHW:UART:TYPE....1717

TRIGger:SBHW:UART:DATA <DataPattern>

Specifies the data pattern to be found on the specified trigger source. Enter the words in MSB first bit order.

Parameters:
<DataPattern>

Usage: Asynchronous command

Manual operation: See "Value" on page 663

TRIGger:SBHW:UART:DPOSition <DataPosition>

Sets the number of words before the first word of interest. These offset words are ignored.

Parameters:
<DataPosition>
Range: 1 to 4096
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Position" on page 663

TRIGger:SBHW:UART:FCONdition <DataOperator>

Selects the operator for the "Data" pattern.

Parameters:
<DataOperator>
EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Data" on page 663

TRIGger:SBHW:UART:OPERator <DataOperator>

Sets the operator for the data pattern in the selected field of the selected frame.

Parameters:

<DataOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan

*RST: EQUal

Usage: Asynchronous command

TRIGger:SBHW:UART:SOURce <Source>

Selects the transmitter or receiver line as trigger source.

Parameters:

<Source> TX | RX

*RST: TX

Usage: Asynchronous command

TRIGger:SBHW:UART:TYPE <Type>

Selects the trigger type condition.

Parameters:

<Type> STBT | PCKS | DATA | PRER | BRKC | STPerror

STBT: Start bit
PCKS: Packet start
DATA: Serial pattern
PRER: Parity error
BRKC: Break condition
STPerror: Stop error

*RST: STBT

Usage: Asynchronous command

18.18.8.5 Software trigger

There are two commands for each parameter, that you can use for defining the UART settings.

For example, to set the *Frame type =Tx > Field =Data >01100* value you can use one of the following commands:

- `TRIGger:SBSW:UART:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `TRIGger:SBSW:UART:DMIN "Tx", "Data", 01100`
  Defines the parameter by using the frame and field name.

TRIGger:SBSW:UART:CHKall ... 1718
TRIGger:SBSW:UART:CLR ... 1718
TRIGger:SBSW:UART:INVert ... 1718
TRIGger:SBSW:UART:RST ... 1719
TRIGger:SBSW:UART:FRENable ... 1719
TRIGger:SBSW:UART:FRAMe<fr>:ENABle ... 1719
TRIGger:SBSW:UART:BIT ... 1719
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:BIT ... 1719
TRIGger:SBSW:UART:DMAX ... 1720
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:DMAX ... 1720
TRIGger:SBSW:UART:DMIN ... 1720
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:DMIN ... 1720
TRIGger:SBSW:UART:DOPerator ... 1720
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:DOPerator ... 1720
TRIGger:SBSW:UART:FIENable ... 1721
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:ENABle ... 1721
TRIGger:SBSW:UART:IMAX ... 1721
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:IMAX ... 1721
TRIGger:SBSW:UART:IMIN ... 1722
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:IMIN ... 1722
TRIGger:SBSW:UART:IOPerator ... 1722
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:IOPerator ... 1722
TRIGger:SBSW:UART:ERENable ... 1722
TRIGger:SBSW:UART:ERRor<m>:ENABle ... 1722
SBUS<sb>:UART:SWTindex? ... 1723
SBUS<sb>:UART:SWTTime? ... 1723

TRIGger:SBSW:UART:CHKall

Enables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 664

TRIGger:SBSW:UART:CLR

Disables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 664

TRIGger:SBSW:UART:INVert

Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 664

TRIGger:SBSW:UART:RST

Presets the state of the selected frames and error types for the software trigger.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 664

TRIGger:SBSW:UART:FRENable <Frame>,<Enabler>
TRIGger:SBSW:UART:FRENable? <Enabler>
TRIGger:SBSW:UART:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 665

TRIGger:SBSW:UART:BIT <Frame>,<Field>,<Bit>
TRIGger:SBSW:UART:BIT? <Bit>
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 665

TRIGger:SBSW:UART:DMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:UART:DMAX? <Data>
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range for the software trigger, if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 665

TRIGger:SBSW:UART:DMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:UART:DMIN? <Data>
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 665

TRIGger:SBSW:UART:DOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:UART:DOPerator? <Operator>
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern of the software trigger in the selected field of the selected frame.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:

<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 665

TRIGger:SBSW:UART:FIENable <Frame>,<Field>,<Enabler>
TRIGger:SBSW:UART:FIENable? <Enabler>
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame of the software trigger.

Suffix:

<fr> Index of the frame

<fl> Index of the field

Parameters:

<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Frame type" on page 665

TRIGger:SBSW:UART:IMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:UART:IMAX? <Data>
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range for the software trigger if the operator is set to `INRange`.

You can set the operator with `TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 665

TRIGger:SBSW:UART:IMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:UART:IMIN? <Data>
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 665

TRIGger:SBSW:UART:IOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:UART:IOPerator? <Operator>
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 665

TRIGger:SBSW:UART:ERENable <ErrorName>,<Enabler>
TRIGger:SBSW:UART:ERENable? <Enabler>
TRIGger:SBSW:UART:ERRor<m>:ENABle <Enable>

Defines the error type for the software trigger.

Suffix:
<m> Index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 666

SBUS<sb>:UART:SWTindex?

Queries the software trigger index.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Index> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:UART:SWTTime?

Queries the software trigger time in seconds.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Time> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.8.6 Decode results

SBUS<sb>:UART:WCOunt? 1724
SBUS<sb>:UART:WORD<w>:FLDCount? 1724
SBUS<sb>:UART:WORD<w>:BITRate? 1724
SBUS<sb>:UART:WORD<w>:FLD<fl>:STATe? 1724
SBUS<sb>:UART:WORD<w>:RXValue? 1725
SBUS<sb>:UART:WORD<w>:TXValue? 1725
SBUS<sb>:UART:WORD<w>:SOURce? 1725
SBUS<sb>:UART:WORD<w>:STARt? 1726
SBUS<sb>:UART:WORD<w>:STOP? 1726
SBUS<sb>:UART:WORD<w>:STATe? 1726
SBUS<sb>:UART:WORD<w>:FLD<fl>:LABel? 1727
SBUS<sb>:UART:WORD<w>:FLD<fl>:VALue? 1727
SBUS<sb>:UART:WORD<w>:FLD<fl>:FVALue? 1728

SBUS<sb>:UART:WCOunt?

Returns the number of words in the acquisition.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count> Total number of words.

Usage: Query only
Asynchronous command

SBUS<sb>:UART:WORD<w>:FLDCount?

Returns the number of fields available in the seleced word.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:UART:WORD<w>:BITRate?

Returns the primary bit rate.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> Index of the word

Return values:
<PrimaryBitRate> Increment: 1
*RST: 0
Default unit: bps

Usage: Query only
Asynchronous command

SBUS<sb>:UART:WORD<w>:FLD<fl>:STATe?

Returns the overall state of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> Index of the frame

<fl> Index of the field

Return values:

<State> OK | BREak | STERror | SPERror | PRERror | INComplete

OK: the frame is valid.
`BREak`: stop bit error with 0x00 word
`STERror`: start error, incorrect start bit
`SPERror`: stop error, incorrect stop bit
`PRERror`: parity error, incorrect parity bit.
`INComplete`: The frame is not completely contained in the acquisition. The acquired part of the frame is valid.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:UART:WORD<w>:RXValue?

Returns the value of the specified word on the Rx line.

Suffix:

<sb> 1 to 4, index of the serial bus

<w> Index of the word

Return values:

<RxValue> Range: 0 to 511
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:UART:WORD<w>:TXValue?

Returns the value of the specified word on the TX line.

Suffix:

<sb> 1 to 4, index of the serial bus

<w> Index of the word

Return values:

<TxValue> Range: 0 to 511
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:UART:WORD<w>:SOURce?

Returns the line on which the specified word was transferred.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> Index of the word

Return values:
<WordSource> TX | RX
*RST: TX

Usage: Query only
Asynchronous command

SBUS<sb>:UART:WORD<w>:STARt?

Returns the start time of the specified word.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> Index of the word

Return values:
<WordStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:UART:WORD<w>:STOP?

Returns the stop time of the specified word.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> Index of the word

Return values:
<WordStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:UART:WORD<w>:STATe?

Returns the status of the specified word.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> Index of the word

Return values:

<WordState> OK | BREak | STERror | SPERror | PRERror | INComplete

OK: the frame is valid.
`BREak`: stop bit error with 0x00 word
`STERror`: start error, incorrect start bit
`SPERror`: stop error, incorrect stop bit
`PRERror`: parity error, incorrect parity bit.
`INComplete`: The frame is not completely contained in the acquisition. The acquired part of the frame is valid.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:UART:WORD<w>:FLD<fl>:LABel?

Returns the label of the specified field in the specified word.

Suffix:

<sb> 1 to 4, index of the serial bus

<w> Index of the frame

<fl> Index of the field

Return values:

<Label>

Usage: Query only
Asynchronous command

SBUS<sb>:UART:WORD<w>:FLD<fl>:VALue?

Returns the value of the specified field in the specified word.

Suffix:

<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

<fl> Index of the field

Return values:

<Value> Range: 0 to 18446744073709551615
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:UART:WORD<w>:FLD<fl>:FVALue?

Returns the formatted value of the specified field in the specified word.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

<fl> Index of the field

Return values:
<FormattedValue>

Usage: Query only
Asynchronous command

18.18.9 NRZ Clocked (option R&S MXO5-K510)

Before MXO 5 can accept the specific bus commands, make sure that:

- The decoding of the specified bus is enabled with `SBUS<sb>[:STATe]`.
- The bus is set to the correct type with `SBUS<sb>:TYPE`.

- Configuration....1728
- Filter....1733
- Format....1739
- Software trigger....1747
- Decode results....1753

18.18.9.1 Configuration

SBUS<sb>:NRZC:CLK:SOURce....1729
SBUS<sb>:NRZC:CLK:POLarity....1729
SBUS<sb>:NRZC:DATA:SOURce....1729
SBUS<sb>:NRZC:DATA:POLarity....1730
SBUS<sb>:NRZC:ENABle:SOURce....1730
SBUS<sb>:NRZC:ENABle:POLarity....1730
SBUS<sb>:NRZC:MINGap:SELect....1731
SBUS<sb>:NRZC:MINGap:WIDTh....1731
SBUS<sb>:NRZC:CLK:THReshold....1731
SBUS<sb>:NRZC:CLK:HYSTeresis....1732
SBUS<sb>:NRZC:DATA:THReshold....1732
SBUS<sb>:NRZC:DATA:HYSTeresis....1732
SBUS<sb>:NRZC:ENABle:THReshold....1732
SBUS<sb>:NRZC:ENABle:HYSTeresis....1733
SBUS<sb>:NRZC:POSition....1733
SBUS<sb>:NRZC:SCALe....1733

SBUS<sb>:NRZC:CLK:SOURce Source

Selects the source for the clock signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
Source C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Clock source" on page 672

SBUS<sb>:NRZC:CLK:POLarity <CLKPolarity>

Sets the polarity for the data line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<CLKPolarity> RISE | FALL | BOTH

RISE
Data is sampled at the rising edges of the clock signal.

FALL
Data is sampled at the falling edges of the clock signal.

BOTH
Data is sampled at the rising and falling edges of the clock signal.

*RST: RISE

Usage: Asynchronous command

Manual operation: See "Clock polarity" on page 672

SBUS<sb>:NRZC:DATA:SOURce Source

Selects the channel for the data signal source.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
Source C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Data source" on page 672

SBUS<sb>:NRZC:DATA:POLarity <DATAPolarity>

Sets the polarity for the data line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DATAPolarity> ACTLow | ACTHigh

ACTLow
The transmitted signal for the data line is active high (high = 1).

ACTHigh
The transmitted signal for the data line is active low (low = 1).

*RST: ACTHigh

Usage: Asynchronous command

Manual operation: See "Data polarity" on page 672

SBUS<sb>:NRZC:ENABle:SOURce Source

Selects the channel for the enable signal source.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
Source C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Enable source" on page 673

SBUS<sb>:NRZC:ENABle:POLarity <ENABPolarity>

Sets the polarity for the enable line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<ENABPolarity> ACTLow | ACTHigh

ACTLow
The transmitted signal for the enable line is active high (high = 1).

ACTHigh
The transmitted signal for the enable line is active low (low = 1).

*RST: ACTHigh

Usage: Asynchronous command

Manual operation: See "Enable source" on page 673

SBUS<sb>:NRZC:MINGap:SELect <MingapSelect>

Enables checking the minimum idle time between two frames during decoding.

To set the idle time, use the command `SBUS<sb>:NRZC:MINGap:WIDTh`.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<MingapSelect> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Check gap time" on page 673

SBUS<sb>:NRZC:MINGap:WIDTh <MingapWidth>

Sets the minimum duration of the idle time. Any inactivity greater than this time is interpreted as a gap and leads to a resynchronization to the signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<MingapWidth> Range: 1E-09 to 1
Increment: 1E-09
*RST: 1E-05
Default unit: s

Usage: Asynchronous command

Manual operation: See "Check gap time" on page 673

SBUS<sb>:NRZC:CLK:THReshold <CLKThreshold>

Sets the threshold value for the digitization of the clock signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<CLKThreshold>

Usage: Asynchronous command

Manual operation: See "Clock threshold, Clock hysteresis" on page 674

SBUS<sb>:NRZC:CLK:HYSTeresis <CLKHysteresis>

Sets a value for the hysteresis of the clock signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<CLKHysteresis>

Usage: Asynchronous command

Manual operation: See "Clock threshold, Clock hysteresis" on page 674

SBUS<sb>:NRZC:DATA:THReshold <SDAThreshold>

Sets the threshold for the data channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SDAThreshold>

Usage: Asynchronous command

Manual operation: See "Data threshold, Data hysteresis" on page 674

SBUS<sb>:NRZC:DATA:HYSTeresis <SDAHysteresis>

Sets the hysteresis for the data channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SDAHysteresis>

Usage: Asynchronous command

Manual operation: See "Data threshold, Data hysteresis" on page 674

SBUS<sb>:NRZC:ENABle:THReshold <ENABThreshold>

Sets the threshold for the enable channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<ENABThreshold>

Usage: Asynchronous command

Manual operation: See "Enable threshold, Enable hysteresis" on page 674

SBUS<sb>:NRZC:ENABle:HYSTeresis <ENABHysteresis>

Sets the hysteresis for the enable channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<ENABHysteresis>

Usage: Asynchronous command

Manual operation: See "Enable threshold, Enable hysteresis" on page 674

SBUS<sb>:NRZC:POSition <Position>

Sets the vertical position of the NRZ clocked signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Position>

Usage: Asynchronous command

SBUS<sb>:NRZC:SCALe <Scale>

Sets the vertical scale of the NRZ clocked signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Scale>

Usage: Asynchronous command

18.18.9.2 Filter

There are two commands for each parameter, that you can use for defining the NRZ clocked settings.

For example, to set the *Frame type =NRZC-Frame > Field =Data >Data* value you can use one of the following commands:

- `SBUS:NRZC:FILTer:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `SBUS:NRZC:FILTer:DMIN "NRZC-Frame", "Data", 01100`
  Defines the parameter by using the frame and field name.

SBUS<sb>:NRZC:FILTer:CHKall....1734
SBUS<sb>:NRZC:FILTer:CLR....1734
SBUS<sb>:NRZC:FILTer:INVert....1734

SBUS<sb>:NRZC:FILTer:RST ... 1735
SBUS<sb>:NRZC:FILTer:BIT ... 1735
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:BIT ... 1735
SBUS<sb>:NRZC:FILTer:ERENable ... 1735
SBUS<sb>:NRZC:FILTer:ERRor<n>:ENABle ... 1735
SBUS<sb>:NRZC:FILTer:DMAX ... 1736
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:DMAX ... 1736
SBUS<sb>:NRZC:FILTer:DMIN ... 1736
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:DMIN ... 1736
SBUS<sb>:NRZC:FILTer:DOPerator ... 1736
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:DOPerator ... 1736
SBUS<sb>:NRZC:FILTer:FIENable ... 1737
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:ENABle ... 1737
SBUS<sb>:NRZC:FILTer:FRENable ... 1737
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:ENABle ... 1737
SBUS<sb>:NRZC:FILTer:IMAX ... 1738
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:IMAX ... 1738
SBUS<sb>:NRZC:FILTer:IMIN ... 1738
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:IMIN ... 1738
SBUS<sb>:NRZC:FILTer:IOPerator ... 1738
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:IOPerator ... 1738

SBUS<sb>:NRZC:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 676

SBUS<sb>:NRZC:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 676

SBUS<sb>:NRZC:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 676

SBUS<sb>:NRZC:FILTer:RST

Presets the state of the selected frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 676

SBUS<sb>:NRZC:FILTer:BIT <Frame>,<Field>,<Bit>
SBUS<sb>:NRZC:FILTer:BIT? <Bit>
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 677

SBUS<sb>:NRZC:FILTer:ERENable <ErrorName>,<Enabler>
SBUS<sb>:NRZC:FILTer:ERENable? <Enabler>
SBUS<sb>:NRZC:FILTer:ERRor<n>:ENABle <Enable>

Defines the error type to be filtered on.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 679

SBUS<sb>:NRZC:FILTer:DMAX <Frame>,<Field>,<Data>
SBUS<sb>:NRZC:FILTer:DMAX? <Data>
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 677

SBUS<sb>:NRZC:FILTer:DMIN <Frame>,<Field>,<Data>
SBUS<sb>:NRZC:FILTer:DMIN? <Data>
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 677

SBUS<sb>:NRZC:FILTer:DOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:NRZC:FILTer:DOPerator? <Operator>
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 677

SBUS<sb>:NRZC:FILTer:FIENable <Frame>,<Field>,<Enabler>
SBUS<sb>:NRZC:FILTer:FIENable? <Enabler>
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 677

SBUS<sb>:NRZC:FILTer:FRENable <Frame>,<Enabler>
SBUS<sb>:NRZC:FILTer:FRENable? <Enabler>
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:ENABle <Enable>

Enables the filtering on NRZ clocked frames. Only the frames that match the selected filter conditions are displayed.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:

<Enable> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Enable" on page 676

SBUS<sb>:NRZC:FILTer:IMAX <Frame>,<Field>,<Data>
SBUS<sb>:NRZC:FILTer:IMAX? <Data>
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if the operator is set to `INRange`.

You can set the operator with `SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 677

SBUS<sb>:NRZC:FILTer:IMIN <Frame>,<Field>,<Data>
SBUS<sb>:NRZC:FILTer:IMIN? <Data>
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 677

SBUS<sb>:NRZC:FILTer:IOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:NRZC:FILTer:IOPerator? <Operator>
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 677

18.18.9.3 Format

This section describes the commands to specify and query frame formats for the "NRZ Clocked" protocol.

For manual operation, refer to Section 14.9.4, "NRZ format configuration", on page 679.

SBUS<sb>:NRZC:FORMat:ADDFrame 1739
SBUS<sb>:NRZC:FORMat:LOAD 1740
SBUS<sb>:NRZC:FORMat:SAVE 1740
SBUS<sb>:NRZC:FORMat:CLR 1740
SBUS<sb>:NRZC:FORMat:FCOunt? 1740
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:ADDField 1741
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLDCount? 1741
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:NAME 1741
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:COLor 1741
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:NAME 1742
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:COLor 1742
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:BITCount 1742
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:CONDition 1743
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:FORMat 1743
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:BITorder 1744
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:CLMN 1744
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:ADDValue 1745
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue 1745
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel 1746
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:UNIT 1746
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:PARA 1746
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:PARB 1746

SBUS<sb>:NRZC:FORMat:ADDFrame

Appendes a new frame description to the frame list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Add Frame" on page 679

SBUS<sb>:NRZC:FORMat:LOAD <FileName>

Loads a the specified XML file with a list of frame descriptions.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Open" on page 680

SBUS<sb>:NRZC:FORMat:SAVE <FileName>

Saves the current list of frame descriptions to an XML file with the specified name.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Save as" on page 681

SBUS<sb>:NRZC:FORMat:CLR

Erases from the volatile memory all field and frame format descriptions that you have created for a specific custom protocol.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Edit List" on page 680

SBUS<sb>:NRZC:FORMat:FCOunt?

Returns the number of frame format descriptions available for a specific custom protocol.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Edit List" on page 680

SBUS<sb>:NRZC:FORMat:FRAMe<fr>:ADDField

Appends a new field description to the selected frame description.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Usage: Setting only
Asynchronous command

Manual operation: See "Add Field" on page 681

SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLDCount?

Returns the number of field descriptions available for the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Edit List" on page 682

SBUS<sb>:NRZC:FORMat:FRAMe<fr>:NAME <Name>

Specifies the name for the frame description of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Frame name" on page 681

SBUS<sb>:NRZC:FORMat:FRAMe<fr>:COLor <Color>

Specifies the color for the frame description of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:

<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4278255615

Usage: Asynchronous command

Manual operation: See "Frame Color" on page 681

SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:NAME <Name>

Specifies the name for the selected field of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Name>

Usage: Asynchronous command

Manual operation: See "Field name" on page 682

SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:COLor <Color>

Specifies the color for the selected field of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4294967040

Usage: Asynchronous command

Manual operation: See "Field Color" on page 682

SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:BITCount <BitCount>

Specifies the bit count, hence length, of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitCount> Range: 1 to 64
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Bit count" on page 684

SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:CONDition <Condition>

Specifies a user-defined condition operator for the selected field of the selected frame. The various condition operators can identify, for example, a mandatory CRC checksum value or a frame ID.

Set the numeric format of the condition by the command `SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:FORMat`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Condition> The implemented conditions are the "equal" and "array" operators.

Usage: Asynchronous command

Manual operation: See "Condition" on page 682

SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:FORMat <NumericFormat>

Specifies the numerical format for the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<NumericFormat> HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG | DEC | LIST | FLIN

HEX
Hexadecimal format

OCT
Octal format

BIN
Binary format

ASCII = ASCii
ASCII format

SIGN
Signed, decimal format

DEC=USIG
Unsigned, decimal format

LIST
Value list

FLIN
Linear function

*RST: HEX

Usage: Asynchronous command

Manual operation: See "Numeric format" on page 685

SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:BITorder <BitOrder>

Specifies, in which order the algorithm evaluates the bits of the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitOrder> LSBF | MSBF

LSBF
Least significant bit first

MSBF
Most significant bit first

*RST: MSBF

Usage: Asynchronous command

Manual operation: See "Bit order" on page 684

SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:CLMN <Column>

Specifies, in which result column of the decode table to display the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Column> NONE | COL1 | COL2 | COL3

NONE
The result is not displayed.

COL1
The result is displayed in column 1.

COL2
The result is displayed in column 2.

COL3
The result is displayed in column 3.

*RST: NONE

Usage: Asynchronous command

Manual operation: See "Result column" on page 684

SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:ADDValue

Creates a new hexagonal value for customization.

Available if `SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Related commands:

`SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue`

`SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel`

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Usage: Setting only
Asynchronous command

Manual operation: See "Add value" on page 685

SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue <Value>

Sets the hexagonal value to convert it into a labeled state.

Available if `SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:
<Value> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Value" on page 685

SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel <Label>

Sets the label to convert the corresponding hexagonal value to a labeled state.

Available if `SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:
<Label>

Usage: Asynchronous command

Manual operation: See "Label" on page 685

SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:UNIT <Unit>

Sets the unit for the linear function.

Available if `SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Unit>

Usage: Asynchronous command

Manual operation: See "Unit" on page 686

SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:PARA <ParameterA>
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:PARB <ParameterB>

Sets the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

Available if `SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:

<sb>	1 to 4, index of the serial bus
<fr>	Index of the frame
<fl>	Index of the field

Parameters:

<ParameterB>	Range:	-1E+20 to 1E+20
	Increment:	1E-12
	*RST:	0

Usage: Asynchronous command

Manual operation: See "Parameter A,B" on page 686

18.18.9.4 Software trigger

There are two commands for each parameter that you can use for defining the "NRZ Clocked" settings.

For example, to set the *Frame type =NRZC-Frame* > *Field =Data* >*Data* value you can use one of the following commands:

- `TRIGger:SBSW:NRZC:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <fr> for the frame number and <fl> for the field number.
- `TRIGger:SBSW:NRZC:DMIN "NRZC-Frame", "Data", 01100`
  Defines the parameter by using the frame and field name.

TRIGger:SBSW:NRZC:CHKall....1748
TRIGger:SBSW:NRZC:CLR....1748
TRIGger:SBSW:NRZC:INVert....1748
TRIGger:SBSW:NRZC:RST....1748
TRIGger:SBSW:NRZC:FRENable....1748
TRIGger:SBSW:NRZC:FRAMe<fr>:ENABle....1748
TRIGger:SBSW:NRZC:BIT....1749
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:BIT....1749
TRIGger:SBSW:NRZC:DMAX....1749
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:DMAX....1749
TRIGger:SBSW:NRZC:DMIN....1750
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:DMIN....1750
TRIGger:SBSW:NRZC:DOPerator....1750
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:DOPerator....1750
TRIGger:SBSW:NRZC:FIENable....1750
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:ENABle....1750
TRIGger:SBSW:NRZC:IMAX....1751
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:IMAX....1751
TRIGger:SBSW:NRZC:IMIN....1751

TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:IMIN....1751
TRIGger:SBSW:NRZC:IOPerator....1751
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:IOPerator....1751
TRIGger:SBSW:NRZC:ERENable....1752
TRIGger:SBSW:NRZC:ERRor<m>:ENABle....1752
SBUS<sb>:NRZC:SWTindex?....1752
SBUS<sb>:NRZC:SWTTime?....1752

TRIGger:SBSW:NRZC:CHKall

Enables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 687

TRIGger:SBSW:NRZC:CLR

Disables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 687

TRIGger:SBSW:NRZC:INVert

Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 687

TRIGger:SBSW:NRZC:RST

Presets the state of the selected frames and error types for the software trigger.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 687

TRIGger:SBSW:NRZC:FRENable <Frame>,<Enabler>
TRIGger:SBSW:NRZC:FRENable? <Enabler>
TRIGger:SBSW:NRZC:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 688

TRIGger:SBSW:NRZC:BIT <Frame>,<Field>,<Bit>
TRIGger:SBSW:NRZC:BIT? <Bit>
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 688

TRIGger:SBSW:NRZC:DMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:NRZC:DMAX? <Data>
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range for the software trigger, if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 688

TRIGger:SBSW:NRZC:DMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:NRZC:DMIN? <Data>
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 688

TRIGger:SBSW:NRZC:DOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:NRZC:DOPerator? <Operator>
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern of the software trigger in the selected field of the selected frame.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange
*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 688

TRIGger:SBSW:NRZC:FIENable <Frame>,<Field>,<Enabler>
TRIGger:SBSW:NRZC:FIENable? <Enabler>
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame of the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 688

TRIGger:SBSW:NRZC:IMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:NRZC:IMAX? <Data>
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range for the software trigger if the operator is set to `INRange`.

You can set the operator with `TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max>
Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 688

TRIGger:SBSW:NRZC:IMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:NRZC:IMIN? <Data>
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min>
Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 688

TRIGger:SBSW:NRZC:IOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:NRZC:IOPerator? <Operator>
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 688

TRIGger:SBSW:NRZC:ERENable <ErrorName>,<Enabler>
TRIGger:SBSW:NRZC:ERENable? <Enabler>
TRIGger:SBSW:NRZC:ERRor<m>:ENABle <Enable>

Defines the error type for the software trigger.

Suffix:
<m> index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 690

SBUS<sb>:NRZC:SWTindex?

Queries the software trigger index.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Index> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:NRZC:SWTTime?

Queries the software trigger time in seconds.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:

<Time> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.9.5 Decode results

This section describes the commands to query the results of the decoding of the "NRZ Clocked" protocol.

For manual operation, see Section 14.1.9.3, "Decoding protocol signals", on page 531.

SBUS<sb>:NRZC:FCOunt? 1753
SBUS<sb>:NRZC:FRAMe<fr>:FLDCount? 1753
SBUS<sb>:NRZC:FRAMe<fr>:WBRate? 1754
SBUS<sb>:NRZC:FRAMe<fr>:FLD<fl>:STATe? 1754
SBUS<sb>:NRZC:FRAMe<fr>:FLD<fl>:LABel? 1755
SBUS<sb>:NRZC:FRAMe<fr>:FLD<fl>:VALue? 1755
SBUS<sb>:NRZC:FRAMe<fr>:FLD<fl>:FVALue? 1755
SBUS<sb>:NRZC:FRAMe<fr>:STATus? 1755
SBUS<sb>:NRZC:FRAMe<fr>:STARt? 1756
SBUS<sb>:NRZC:FRAMe<fr>:STOP? 1756
SBUS<sb>:NRZC:FRAMe<fr>:TYPE? 1757
SBUS<sb>:NRZC:FRAMe<fr>:CONE? 1757
SBUS<sb>:NRZC:FRAMe<fr>:CTWO? 1757
SBUS<sb>:NRZC:FRAMe<fr>:CTHRee? 1758

SBUS<sb>:NRZC:FCOunt?

Returns the number of decoded frames.

Suffix:

<sb> 1 to 4, index of the serial bus

Return values:

<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:NRZC:FRAMe<fr>:FLDCount?

Returns the number of fields available in the seleced frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<DataCount>

Usage: Query only
Asynchronous command

SBUS<sb>:NRZC:FRAMe<fr>:WBRate?

Returns the bit rate of the frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameWBR> Increment: 1
*RST: 0
Default unit: bps

Usage: Query only

SBUS<sb>:NRZC:FRAMe<fr>:FLD<fl>:STATe?

Returns the overall state of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<State> OK | LENGth | CRC | PARity | INComplete

OK
The field has no error, it is valid.

LENGth
The length of the field is not as expected, indicating an error.

CRC
The CRC of the frame is not as expected, indicating an error.

PARity
Parity is not as expected, indicating an error

INComplete
The frame is incomplete.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:NRZC:FRAMe<fr>:FLD<fl>:LABel?

Returns the label of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Name>

Usage: Query only
Asynchronous command

SBUS<sb>:NRZC:FRAMe<fr>:FLD<fl>:VALue?

Returns the value of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Value> *RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:NRZC:FRAMe<fr>:FLD<fl>:FVALue?

Returns the formatted value of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<FormattedValue>

Usage: Query only
Asynchronous command

SBUS<sb>:NRZC:FRAMe<fr>:STATus?

Returns the overall state of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameState> OK | LENGth | CRC | PARity | INComplete

OK
The frame is valid.

LENGth
Length of the frame is not as expected, indicating an error.

CRC
The checksum of the frame is not as expected, indicating an error.

PARity
Parity is not as expected, indicating an error.

INComplete
The frame is incomplete.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:NRZC:FRAMe<fr>:STARt?

Returns the start time of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:NRZC:FRAMe<fr>:STOP?

Returns the end time of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:NRZC:FRAMe<fr>:TYPE?

Returns the type of the specified decoded frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameType> The frame type is undefined, because it is custom specific.

Usage: Query only
Asynchronous command

SBUS<sb>:NRZC:FRAMe<fr>:CONE?

Returns the content of the 1st result column of the specified decoded frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Result1>

Usage: Query only
Asynchronous command

SBUS<sb>:NRZC:FRAMe<fr>:CTWO?

Returns the content of the 2nd result column of the specified decoded frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Result2>

Usage: Query only
Asynchronous command

SBUS<sb>:NRZC:FRAMe<fr>:CTHRee?

Returns the content of the 3rd result column of the specified decoded frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Result3>

Usage: Query only
Asynchronous command

18.18.10 NRZ Unclocked (option R&S MXO5-K510)

Before MXO 5 can accept the specific bus commands, make sure that:

- The decoding of the specified bus is enabled with `SBUS<sb>[:STATe]`.
- The bus is set to the correct type with `SBUS<sb>:TYPE`.

- Configuration....1758
- Filter....1763
- Format....1768
- Software trigger....1776
- Decode results....1782

18.18.10.1 Configuration

SBUS<sb>:NRZU:DATA:SOURce....1758
SBUS<sb>:NRZU:DATA:POLarity....1759
SBUS<sb>:NRZU:ENABle:SOURce....1759
SBUS<sb>:NRZU:ENABle:POLarity....1759
SBUS<sb>:NRZU:MINGap:SELect....1760
SBUS<sb>:NRZU:MINGap:WIDTh....1760
SBUS<sb>:NRZU:BITRate:SELect....1761
SBUS<sb>:NRZU:BITRate:WIDTh....1761
SBUS<sb>:NRZU:DATA:THReshold....1761
SBUS<sb>:NRZU:DATA:HYSTeresis....1761
SBUS<sb>:NRZU:ENABle:THReshold....1762
SBUS<sb>:NRZU:ENABle:HYSTeresis....1762
SBUS<sb>:NRZU:POSition....1762
SBUS<sb>:NRZU:SCALe....1762

SBUS<sb>:NRZU:DATA:SOURce Source

Selects the channel for the data signal source.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:

Source — C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Data source" on page 672

SBUS<sb>:NRZU:DATA:POLarity <DATAPolarity>

Sets the polarity for the data line.

Suffix:

<sb> — 1 to 4, index of the serial bus

Parameters:

<DATAPolarity> — ACTLow | ACTHigh

ACTLow
The transmitted signal for the data line is active high (high = 1).

ACTHigh
The transmitted signal for the data line is active low (low = 1).

*RST: ACTHigh

Usage: Asynchronous command

Manual operation: See "Data polarity" on page 672

SBUS<sb>:NRZU:ENABle:SOURce Source

Selects the channel for the enable signal source.

Suffix:

<sb> — 1 to 4, index of the serial bus

Parameters:

Source — C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Enable source" on page 673

SBUS<sb>:NRZU:ENABle:POLarity <ENABPolarity>

Sets the polarity for the enable line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<ENABPolarity> ACTLow | ACTHigh

ACTLow
The transmitted signal for the enable line is active high (high = 1).

ACTHigh
The transmitted signal for the enable line is active low (low = 1).

*RST: ACTHigh

Usage: Asynchronous command

Manual operation: See "Enable source" on page 673

SBUS<sb>:NRZU:MINGap:SELect <MingapSelect>

Enables checking the minimum idle time between two frames during decoding.

To set the idle time, use the command `SBUS<sb>:NRZU:MINGap:WIDTh`.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<MingapSelect> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Check gap time" on page 673

SBUS<sb>:NRZU:MINGap:WIDTh <MingapWidth>

Sets the minimum duration of the idle time. Any inactivity greater than this time is interpreted as a gap and leads to a resynchronization to the signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<MingapWidth> Range: 1E-09 to 1
Increment: 1E-09
*RST: 1E-05
Default unit: s

Usage: Asynchronous command

Manual operation: See "Check gap time" on page 673

SBUS<sb>:NRZU:BITRate:SELect <BitrateSelect>

Enables setting the bit rate, which is required to trigger and decode unclocked NRZ signals.

You can set the bit rate with `SBUS<sb>:NRZU:BITRate:WIDTh`.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<BitrateSelect> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Check bit rate" on page 673

SBUS<sb>:NRZU:BITRate:WIDTh <BitrateWidth>

Specifies the bit rate, if enabled with `SBUS<sb>:NRZU:BITRate:SELect`.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<BitrateWidth> Range: 300 to 2000000000
Increment: 100000
*RST: 10000000
Default unit: bps

Usage: Asynchronous command

Manual operation: See "Check bit rate" on page 673

SBUS<sb>:NRZU:DATA:THReshold <SDAThreshold>

Sets the threshold for the data channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SDAThreshold>

Usage: Asynchronous command

Manual operation: See "Data threshold, Data hysteresis" on page 674

SBUS<sb>:NRZU:DATA:HYSTeresis <SDAHysteresis>

Sets the hysteresis for the data channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SDAHysteresis>

Usage: Asynchronous command

Manual operation: See "Data threshold, Data hysteresis" on page 674

SBUS<sb>:NRZU:ENABle:THReshold <ENABThreshold>

Sets the threshold for the enable channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<ENABThreshold>

Usage: Asynchronous command

SBUS<sb>:NRZU:ENABle:HYSTeresis <ENABHysteresis>

Sets the hysteresis for the enable channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<ENABHysteresis>

Usage: Asynchronous command

SBUS<sb>:NRZU:POSition <Position>

Sets the vertical position of the NRZ unclocked signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Position>

Usage: Asynchronous command

SBUS<sb>:NRZU:SCALe <Scale>

Sets the vertical scale of the NRZ unclocked signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Scale>

Usage: Asynchronous command

18.18.10.2 Filter

There are two commands for each parameter, that you can use for defining the NRZ unclocked settings.

For example, to set the *Frame type =NRZU-Frame > Field =Data >Data* value you can use one of the following commands:

- `SBUS:NRZU:FILTer:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `SBUS:NRZU:FILTer:DMIN "NRZC-Frame", "Data", 01100`
  Defines the parameter by using the frame and field name.

SBUS<sb>:NRZU:FILTer:CHKall....1763
SBUS<sb>:NRZU:FILTer:CLR....1764
SBUS<sb>:NRZU:FILTer:INVert....1764
SBUS<sb>:NRZU:FILTer:RST....1764
SBUS<sb>:NRZU:FILTer:BIT....1764
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:BIT....1764
SBUS<sb>:NRZU:FILTer:ERENable....1765
SBUS<sb>:NRZU:FILTer:ERRor<n>:ENABle....1765
SBUS<sb>:NRZU:FILTer:DMAX....1765
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:DMAX....1765
SBUS<sb>:NRZU:FILTer:DMIN....1765
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:DMIN....1765
SBUS<sb>:NRZU:FILTer:DOPerator....1766
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:DOPerator....1766
SBUS<sb>:NRZU:FILTer:FIENable....1766
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:ENABle....1766
SBUS<sb>:NRZU:FILTer:FRENable....1767
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:ENABle....1767
SBUS<sb>:NRZU:FILTer:IMAX....1767
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:IMAX....1767
SBUS<sb>:NRZU:FILTer:IMIN....1767
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:IMIN....1767
SBUS<sb>:NRZU:FILTer:IOPerator....1768
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:IOPerator....1768

SBUS<sb>:NRZU:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 676

SBUS<sb>:NRZU:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 676

SBUS<sb>:NRZU:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 676

SBUS<sb>:NRZU:FILTer:RST

Presets the state of the selected frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 676

SBUS<sb>:NRZU:FILTer:BIT <Frame>,<Field>,<Bit>
SBUS<sb>:NRZU:FILTer:BIT? <Bit>
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 677

SBUS<sb>:NRZU:FILTer:ERENable <ErrorName>,<Enabler>
SBUS<sb>:NRZU:FILTer:ERENable? <Enabler>
SBUS<sb>:NRZU:FILTer:ERRor<n>:ENABle <Enable>

Defines the error type to be filtered on.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> index of the error

Parameters:
<Enable> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 679

SBUS<sb>:NRZU:FILTer:DMAX <Frame>,<Field>,<Data>
SBUS<sb>:NRZU:FILTer:DMAX? <Data>
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 677

SBUS<sb>:NRZU:FILTer:DMIN <Frame>,<Field>,<Data>
SBUS<sb>:NRZU:FILTer:DMIN? <Data>
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 677

SBUS<sb>:NRZU:FILTer:DOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:NRZU:FILTer:DOPerator? <Operator>
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 677

SBUS<sb>:NRZU:FILTer:FIENable <Frame>,<Field>,<Enabler>
SBUS<sb>:NRZU:FILTer:FIENable? <Enabler>
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 677

SBUS<sb>:NRZU:FILTer:FRENable <Frame>,<Enabler>
SBUS<sb>:NRZU:FILTer:FRENable? <Enabler>
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:ENABle <Enable>

Enables the filtering on NRZ unclocked frames. Only the frames that match the selected filter conditions are displayed.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Enable" on page 676

SBUS<sb>:NRZU:FILTer:IMAX <Frame>,<Field>,<Data>
SBUS<sb>:NRZU:FILTer:IMAX? <Data>
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if the operator is set to `INRange`.

You can set the operator with `SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 677

SBUS<sb>:NRZU:FILTer:IMIN <Frame>,<Field>,<Data>
SBUS<sb>:NRZU:FILTer:IMIN? <Data>
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 677

SBUS<sb>:NRZU:FILTer:IOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:NRZU:FILTer:IOPerator? <Operator>
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 677

18.18.10.3 Format

This section describes the commands to specify and query frame formats for the "NRZ Unclocked" protocol.

For manual operation, refer to Section 14.9.4, "NRZ format configuration", on page 679.

SBUS<sb>:NRZU:FORMat:ADDFrame ... 1769
SBUS<sb>:NRZU:FORMat:LOAD ... 1769
SBUS<sb>:NRZU:FORMat:SAVE ... 1769
SBUS<sb>:NRZU:FORMat:CLR ... 1769
SBUS<sb>:NRZU:FORMat:FCOunt? ... 1770
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:ADDField ... 1770
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLDCount? ... 1770
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:NAME ... 1771
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:COLor ... 1771
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:NAME ... 1771
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:COLor ... 1771
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:BITCount ... 1772
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:CONDition ... 1772
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:FORMat ... 1773
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:BITorder ... 1773
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:CLMN ... 1774

SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:ADDValue 1774
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue 1775
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel 1775
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:UNIT 1776
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:PARA 1776
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:PARB 1776

SBUS<sb>:NRZU:FORMat:ADDFrame

Appendes a new frame description to the frame list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Add Frame" on page 679

SBUS<sb>:NRZU:FORMat:LOAD <FileName>

Loads a the specified XML file with a list of frame descriptions.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Open" on page 680

SBUS<sb>:NRZU:FORMat:SAVE <FileName>

Saves the current list of frame descriptions to an XML file with the specified name.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Save as" on page 681

SBUS<sb>:NRZU:FORMat:CLR

Erases from the volatile memory all field and frame format descriptions that you have created for a specific custom protocol.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Edit List" on page 680

SBUS<sb>:NRZU:FORMat:FCOunt?

Returns the number of frame format descriptions available for a specific custom protocol.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Edit List" on page 680

SBUS<sb>:NRZU:FORMat:FRAMe<fr>:ADDField

Appends a new field description to the selected frame description.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Usage: Setting only
Asynchronous command

Manual operation: See "Add Field" on page 681

SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLDCount?

Returns the number of field descriptions available for the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Edit List" on page 682

SBUS<sb>:NRZU:FORMat:FRAMe<fr>:NAME <Name>

Specifies the name for the frame description of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Frame name" on page 681

SBUS<sb>:NRZU:FORMat:FRAMe<fr>:COLor <Color>

Specifies the color for the frame description of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4278255615

Usage: Asynchronous command

Manual operation: See "Frame Color" on page 681

SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:NAME <Name>

Specifies the name for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Field name" on page 682

SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:COLor <Color>

Specifies the color for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4294967040

Usage: Asynchronous command

Manual operation: See "Field Color" on page 682

SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:BITCount <BitCount>

Specifies the bit count, hence length, of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitCount>

Range: 1 to 64
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Bit count" on page 684

SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:CONDition <Condition>

Specifies a user-defined condition operator for the selected field of the selected frame. The various condition operators can identify, for example, a mandatory CRC checksum value or a frame ID.

Set the numeric format of the condition by the command `SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:FORMat`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Condition> The implemented conditions are the "equal" and "array" operators.

Usage: Asynchronous command

Manual operation: See "Condition" on page 682

SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:FORMat <NumericFormat>

Specifies the numerical format for the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<NumericFormat> HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG | DEC | LIST | FLIN

HEX
Hexadecimal format

OCT
Octal format

BIN
Binary format

ASCII = ASCii
ASCII format

SIGN
Signed, decimal format

DEC=USIG
Unsigned, decimal format

LIST
Value list

FLIN
Linear function

*RST: HEX

Usage: Asynchronous command

Manual operation: See "Numeric format" on page 685

SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:BITorder <BitOrder>

Specifies, in which order the algorithm evaluates the bits of the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<BitOrder> LSBF | MSBF

LSBF
Least significant bit first

MSBF
Most significant bit first

*RST: MSBF

Usage: Asynchronous command

Manual operation: See "Bit order" on page 684

SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:CLMN <Column>

Specifies, in which result column of the decode table to display the selected field of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Column> NONE | COL1 | COL2 | COL3

NONE
The result is not displayed.

COL1
The result is displayed in column 1.

COL2
The result is displayed in column 2.

COL3
The result is displayed in column 3.

*RST: NONE

Usage: Asynchronous command

Manual operation: See "Result column" on page 684

SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:ADDValue

Creates a new hexagonal value for customization.

Available if `SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Related commands:

`SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue`

`SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel`

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Usage: Setting only
Asynchronous command

Manual operation: See "Add value" on page 685

SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue <Value>

Sets the hexagonal value to convert it into a labeled state.

Available if `SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field
<p> Index of the value

Parameters:
<Value>
Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Value" on page 685

SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel <Label>

Sets the label to convert the corresponding hexagonal value to a labeled state.

Available if `SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field
<p> Index of the value

Parameters:
<Label>

Usage: Asynchronous command

Manual operation: See "Label" on page 685

SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:UNIT <Unit>

Sets the unit for the linear function.

Available if `SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:FORMat = FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Unit>

Usage: Asynchronous command

Manual operation: See "Unit" on page 686

SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:PARA <ParameterA>
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:PARB <ParameterB>

Sets the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

Available if `SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:FORMat = FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<ParameterB>
Range: -1E+20 to 1E+20
Increment: 1E-12
*RST: 0

Usage: Asynchronous command

Manual operation: See "Parameter A,B" on page 686

18.18.10.4 Software trigger

There are two commands for each parameter that you can use for defining the "NRZ Unclocked" settings.

For example, to set the *Frame type =NRZU-Frame* > *Field =Data* >*Data* value you can use one of the following commands:

- `TRIGger:SBSW:NRZU:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <fr> for the frame number and <fl> for the field number.

- `TRIGger:SBSW:NRZU:DMIN "NRZC-Frame", "Data", 01100`
  Defines the parameter by using the frame and field name.

TRIGger:SBSW:NRZU:CHKall....1777
TRIGger:SBSW:NRZU:CLR....1777
TRIGger:SBSW:NRZU:INVert....1778
TRIGger:SBSW:NRZU:RST....1778
TRIGger:SBSW:NRZU:FRENable....1778
TRIGger:SBSW:NRZU:FRAMe<fr>:ENABle....1778
TRIGger:SBSW:NRZU:BIT....1778
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:BIT....1778
TRIGger:SBSW:NRZU:DMAX....1779
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:DMAX....1779
TRIGger:SBSW:NRZU:DMIN....1779
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:DMIN....1779
TRIGger:SBSW:NRZU:DOPerator....1779
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:DOPerator....1779
TRIGger:SBSW:NRZU:FIENable....1780
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:ENABle....1780
TRIGger:SBSW:NRZU:IMAX....1780
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:IMAX....1780
TRIGger:SBSW:NRZU:IMIN....1781
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:IMIN....1781
TRIGger:SBSW:NRZU:IOPerator....1781
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:IOPerator....1781
TRIGger:SBSW:NRZU:ERENable....1781
TRIGger:SBSW:NRZU:ERRor<m>:ENABle....1781
SBUS<sb>:NRZU:SWTindex?....1782
SBUS<sb>:NRZU:SWTTime?....1782

TRIGger:SBSW:NRZU:CHKall

Enables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 687

TRIGger:SBSW:NRZU:CLR

Disables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 687

TRIGger:SBSW:NRZU:INVert

Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 687

TRIGger:SBSW:NRZU:RST

Presets the state of the selected frames and error types for the software trigger.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 687

TRIGger:SBSW:NRZU:FRENable <Frame>,<Enabler>
TRIGger:SBSW:NRZU:FRENable? <Enabler>
TRIGger:SBSW:NRZU:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 688

TRIGger:SBSW:NRZU:BIT <Frame>,<Field>,<Bit>
TRIGger:SBSW:NRZU:BIT? <Bit>
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 688

TRIGger:SBSW:NRZU:DMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:NRZU:DMAX? <Data>
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range for the software trigger, if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 688

TRIGger:SBSW:NRZU:DMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:NRZU:DMIN? <Data>
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 688

TRIGger:SBSW:NRZU:DOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:NRZU:DOPerator? <Operator>
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern of the software trigger in the selected field of the selected frame.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:

<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 688

TRIGger:SBSW:NRZU:FIENable <Frame>,<Field>,<Enabler>
TRIGger:SBSW:NRZU:FIENable? <Enabler>
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame of the software trigger.

Suffix:

<fr> Index of the frame

<fl> Index of the field

Parameters:

<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 688

TRIGger:SBSW:NRZU:IMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:NRZU:IMAX? <Data>
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range for the software trigger if the operator is set to `INRange`.

You can set the operator with `TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 688

TRIGger:SBSW:NRZU:IMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:NRZU:IMIN? <Data>
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 688

TRIGger:SBSW:NRZU:IOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:NRZU:IOPerator? <Operator>
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 688

TRIGger:SBSW:NRZU:ERENable <ErrorName>,<Enabler>
TRIGger:SBSW:NRZU:ERENable? <Enabler>
TRIGger:SBSW:NRZU:ERRor<m>:ENABle <Enable>

Defines the error type for the software trigger.

Suffix:
<m> index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 690

SBUS<sb>:NRZU:SWTindex?

Queries the software trigger index.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Index> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:NRZU:SWTTime?

Queries the software trigger time in seconds.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Time> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.10.5 Decode results

This section describes the commands to query the results of the decoding of the "NRZ Unclocked" protocol.

For manual operation, see Section 14.1.9.3, "Decoding protocol signals", on page 531.

SBUS<sb>:NRZU:FCOunt? 1783
SBUS<sb>:NRZU:FRAMe<fr>:FLDCount? 1783
SBUS<sb>:NRZU:FRAMe<fr>:WBRate? 1783
SBUS<sb>:NRZU:FRAMe<fr>:FLD<fl>:STATe? 1783
SBUS<sb>:NRZU:FRAMe<fr>:FLD<fl>:LABel? 1784
SBUS<sb>:NRZU:FRAMe<fr>:FLD<fl>:VALue? 1784
SBUS<sb>:NRZU:FRAMe<fr>:FLD<fl>:FVALue? 1785
SBUS<sb>:NRZU:FRAMe<fr>:STATus? 1785
SBUS<sb>:NRZU:FRAMe<fr>:STARt? 1785
SBUS<sb>:NRZU:FRAMe<fr>:STOP? 1786
SBUS<sb>:NRZU:FRAMe<fr>:TYPE? 1786

SBUS<sb>:NRZU:FRAMe<fr>:CONE?....1786
SBUS<sb>:NRZU:FRAMe<fr>:CTWO?....1787
SBUS<sb>:NRZU:FRAMe<fr>:CTHRee?....1787

SBUS<sb>:NRZU:FCOunt?

Returns the number of decoded frames.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:NRZU:FRAMe<fr>:FLDCount?

Returns the number of fields available in the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<DataCount>

Usage: Query only
Asynchronous command

SBUS<sb>:NRZU:FRAMe<fr>:WBRate?

Returns the bit rate of the frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameWBR> Increment: 1
*RST: 0
Default unit: bps

Usage: Query only

SBUS<sb>:NRZU:FRAMe<fr>:FLD<fl>:STATe?

Returns the overall state of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:

<State> OK | LENGth | CRC | PARity | INComplete

OK
The field has no error, it is valid.

LENGth
The length of the field is not as expected, indicating an error.

CRC
The CRC of the frame is not as expected, indicating an error.

PARity
Parity is not as expected, indicating an error

INComplete
The frame is incomplete.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:NRZU:FRAMe<fr>:FLD<fl>:LABel?

Returns the label of the specified field in the specified frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:

<Name>

Usage: Query only
Asynchronous command

SBUS<sb>:NRZU:FRAMe<fr>:FLD<fl>:VALue?

Returns the value of the specified field in the specified frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:

<Value> *RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:NRZU:FRAMe<fr>:FLD<fl>:FVALue?

Returns the formatted value of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<FormattedValue>

Usage: Query only
Asynchronous command

SBUS<sb>:NRZU:FRAMe<fr>:STATus?

Returns the overall state of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameState> OK | LENGth | CRC | PARity | INComplete

OK
The frame is valid.

LENGth
Length of the frame is not as expected, indicating an error.

CRC
The checksum of the frame is not as expected, indicating an error.

PARity
Parity is not as expected, indicating an error.

INComplete
The frame is incomplete.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:NRZU:FRAMe<fr>:STARt?

Returns the start time of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:NRZU:FRAMe<fr>:STOP?

Returns the end time of the specified frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:NRZU:FRAMe<fr>:TYPE?

Returns the type of the specified decoded frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameType> The frame type is undefined, because it is custom specific.

Usage: Query only
Asynchronous command

SBUS<sb>:NRZU:FRAMe<fr>:CONE?

Returns the content of the 1st result column of the specified decoded frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<Result1>

Usage: Query only
Asynchronous command

SBUS<sb>:NRZU:FRAMe<fr>:CTWO?

Returns the content of the 2nd result column of the specified decoded frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Result2>

Usage: Query only
Asynchronous command

SBUS<sb>:NRZU:FRAMe<fr>:CTHRee?

Returns the content of the 3rd result column of the specified decoded frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Result3>

Usage: Query only
Asynchronous command

18.18.11 Manchester (option R&S MXO5-K510)

Before MXO 5 can accept the specific bus commands, make sure that:

- The decoding of the specified bus is enabled with `SBUS<sb>[:STATe]`.
- The bus is set to the correct type with `SBUS<sb>:TYPE`.

- Configuration....1787
- Filter....1793
- Format....1798
- Software trigger....1806
- Decode results....1812

18.18.11.1 Configuration

SBUS<sb>:MANCh:DATA:SOURce....1788
SBUS<sb>:MANCh:DATA:POLarity....1788
SBUS<sb>:MANCh:DATA:PHASe....1789
SBUS<sb>:MANCh:ENABle:SOURce....1789

SBUS<sb>:MANCh:ENABle:POLarity 1789
SBUS<sb>:MANCh:MINGap:SELect 1790
SBUS<sb>:MANCh:MINGap:WIDTh 1790
SBUS<sb>:MANCh:BITRate:SELect 1790
SBUS<sb>:MANCh:BITRate:WIDTh 1791
SBUS<sb>:MANCh:DATA:THUPper 1791
SBUS<sb>:MANCh:DATA:THLower 1791
SBUS<sb>:MANCh:DATA:HYSTeresis 1791
SBUS<sb>:MANCh:ENABle:THReshold 1792
SBUS<sb>:MANCh:ENABle:HYSTeresis 1792
SBUS<sb>:MANCh:POSition 1792
SBUS<sb>:MANCh:SCALe 1792

SBUS<sb>:MANCh:DATA:SOURce <DATASource>

Selects the channel for the data signal source.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DATASource> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Data source" on page 697

SBUS<sb>:MANCh:DATA:POLarity <DataPolarity>

Sets the polarity for the data line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DataPolarity> MANC | MANT

MANC
Selects the "Manchester" data representation convention as per G. E. Thomas: High-to-low transition for logical 1.

MANT
Selects the "Manchester II" (Manchester Two) data representation convention as per IEEE 802.3: Low-to-high transition for logical 1.

*RST: MANC

Usage: Asynchronous command

Manual operation: See "Data polarity" on page 697

SBUS<sb>:MANCh:DATA:PHASe <DataPhase>

Sets the phase for the data line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DataPhase> FEDGe | SEDGe

FEDGe
Selects capturing data bits on the clock's first (rising) edge.

SEDGe
Selects capturing data bits on the clock's second (falling) edge.

*RST: SEDGe

Usage: Asynchronous command

Manual operation: See "Data phase" on page 697

SBUS<sb>:MANCh:ENABle:SOURce <DATASource>

Selects the channel for the enable signal source.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DATASource> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Enable source" on page 697

SBUS<sb>:MANCh:ENABle:POLarity <EnablePolarity>

Sets the polarity for the enable line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<EnablePolarity> ACTLow | ACTHigh

ACTLow
The transmitted signal for the enable line is active high (high = 1).

ACTHigh
The transmitted signal for the enable line is active low (low = 1).

*RST: ACTHigh

Usage: Asynchronous command

Manual operation: See "Enable source" on page 697

SBUS<sb>:MANCh:MINGap:SELect <MingapSelect>

Enables checking the minimum idle time between two frames during decoding.

To set the idle time, use the command `SBUS<sb>:MANCh:MINGap:WIDTh`.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<MingapSelect> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Check gap time" on page 698

SBUS<sb>:MANCh:MINGap:WIDTh <MingapWidth>

Sets the minimum duration of the idle time. Any inactivity greater than this time is interpreted as a gap and leads to a resynchronization to the signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<MingapWidth> Range: 1E-09 to 1
Increment: 1E-09
*RST: 1E-05
Default unit: s

Usage: Asynchronous command

Manual operation: See "Check gap time" on page 698

SBUS<sb>:MANCh:BITRate:SELect <BitrateSelect>

Enables setting the bit rate.

To set the bit rate, use the command `SBUS<sb>:MANCh:BITRate:WIDTh`.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<BitrateSelect> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Check bit rate" on page 698

SBUS<sb>:MANCh:BITRate:WIDTh <BitrateWidth>

Sets the bit rate.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<BitrateWidth>
Range: 300 to 2000000000
Increment: 100000
*RST: 10000000
Default unit: bps

Usage: Asynchronous command

Manual operation: See "Check bit rate" on page 698

SBUS<sb>:MANCh:DATA:THUPper <DatThresUpp>

Sets the upper threshold for the data channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DatThresUpp>

Usage: Asynchronous command

Manual operation: See "Upper threshold, Lower threshold, Hysteresis" on page 698

SBUS<sb>:MANCh:DATA:THLower <DatThresLow>

Sets the lower threshold for the data channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DatThresLow>

Usage: Asynchronous command

Manual operation: See "Upper threshold, Lower threshold, Hysteresis" on page 698

SBUS<sb>:MANCh:DATA:HYSTeresis <DataHysteresis>

Sets the hysteresis for the data channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DataHysteresis>

Usage: Asynchronous command

Manual operation: See "Upper threshold, Lower threshold, Hysteresis" on page 698

SBUS<sb>:MANCh:ENABle:THReshold <EnabThres>

Sets the threshold for the enable channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<EnabThres>

Usage: Asynchronous command

Manual operation: See "Enable threshold, Enable hysteresis" on page 699

SBUS<sb>:MANCh:ENABle:HYSTeresis <EnabHyst>

Sets the hysteresis for the enable channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<EnabHyst>

Usage: Asynchronous command

Manual operation: See "Enable threshold, Enable hysteresis" on page 699

SBUS<sb>:MANCh:POSition <Position>

Sets the vertical position of the Manchester signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Position>

Usage: Asynchronous command

SBUS<sb>:MANCh:SCALe <Scale>

Sets the vertical scale of the Manchester signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Scale>

Usage: Asynchronous command

18.18.11.2 Filter

There are two commands for each parameter, that you can use for defining the Manchester settings.

For example, to set the *Frame type =Manchester-Frame* > *Field =Data* >*Data* value you can use one of the following commands:

- `SBUS:MANCh:FILTer:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `SBUS:MANCh:FILTer:DMIN "Manchester-Frame", "Data", 01100`
  Defines the parameter by using the frame and field name.

SBUS<sb>:MANCh:FILTer:CHKall ... 1793
SBUS<sb>:MANCh:FILTer:CLR ... 1794
SBUS<sb>:MANCh:FILTer:INVert ... 1794
SBUS<sb>:MANCh:FILTer:RST ... 1794
SBUS<sb>:MANCh:FILTer:BIT ... 1794
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:BIT ... 1794
SBUS<sb>:MANCh:FILTer:ERENable ... 1795
SBUS<sb>:MANCh:FILTer:ERRor<n>:ENABle ... 1795
SBUS<sb>:MANCh:FILTer:DMAX ... 1795
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:DMAX ... 1795
SBUS<sb>:MANCh:FILTer:DMIN ... 1795
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:DMIN ... 1795
SBUS<sb>:MANCh:FILTer:DOPerator ... 1796
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:DOPerator ... 1796
SBUS<sb>:MANCh:FILTer:FIENable ... 1796
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:ENABle ... 1796
SBUS<sb>:MANCh:FILTer:FRENable ... 1797
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:ENABle ... 1797
SBUS<sb>:MANCh:FILTer:IMAX ... 1797
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:IMAX ... 1797
SBUS<sb>:MANCh:FILTer:IMIN ... 1797
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:IMIN ... 1797
SBUS<sb>:MANCh:FILTer:IOPerator ... 1798
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:IOPerator ... 1798

SBUS<sb>:MANCh:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 700

SBUS<sb>:MANCh:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 700

SBUS<sb>:MANCh:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 700

SBUS<sb>:MANCh:FILTer:RST

Presets the state of the selected frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 700

SBUS<sb>:MANCh:FILTer:BIT <Frame>,<Field>,<Bit>
SBUS<sb>:MANCh:FILTer:BIT? <Bit>
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 701

SBUS<sb>:MANCh:FILTer:ERENable <ErrorName>,<Enabler>
SBUS<sb>:MANCh:FILTer:ERENable? <Enabler>
SBUS<sb>:MANCh:FILTer:ERRor<n>:ENABle <Enable>

Defines the error type to be filtered on.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> index of the error

Parameters:
<Enable> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 702

SBUS<sb>:MANCh:FILTer:DMAX <Frame>,<Field>,<Data>
SBUS<sb>:MANCh:FILTer:DMAX? <Data>
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 701

SBUS<sb>:MANCh:FILTer:DMIN <Frame>,<Field>,<Data>
SBUS<sb>:MANCh:FILTer:DMIN? <Data>
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 701

SBUS<sb>:MANCh:FILTer:DOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:MANCh:FILTer:DOPerator? <Operator>
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 701

SBUS<sb>:MANCh:FILTer:FIENable <Frame>,<Field>,<Enabler>
SBUS<sb>:MANCh:FILTer:FIENable? <Enabler>
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 701

SBUS<sb>:MANCh:FILTer:FRENable <Frame>,<Enabler>
SBUS<sb>:MANCh:FILTer:FRENable? <Enabler>
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:ENABle <Enable>

Enables the filtering on Manchester frames. Only the frames that match the selected filter conditions are displayed.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Enable" on page 701

SBUS<sb>:MANCh:FILTer:IMAX <Frame>,<Field>,<Data>
SBUS<sb>:MANCh:FILTer:IMAX? <Data>
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if the operator is set to `INRange`.

You can set the operator with `SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 701

SBUS<sb>:MANCh:FILTer:IMIN <Frame>,<Field>,<Data>
SBUS<sb>:MANCh:FILTer:IMIN? <Data>
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 701

SBUS<sb>:MANCh:FILTer:IOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:MANCh:FILTer:IOPerator? <Operator>
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 701

18.18.11.3 Format

This section describes the commands to specify and query frame formats for the "Manchester" protocol.

For manual operation, refer to Section 14.10.4, "Manchester format configuration", on page 703.

SBUS<sb>:MANCh:FORMat:ADDFrame....1799
SBUS<sb>:MANCh:FORMat:LOAD....1799
SBUS<sb>:MANCh:FORMat:SAVE....1799
SBUS<sb>:MANCh:FORMat:CLR....1799
SBUS<sb>:MANCh:FORMat:FCOunt?....1800
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:ADDField....1800
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLDCount?....1800
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:NAME....1801
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:COLor....1801
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:NAME....1801
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:COLor....1801
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:BITCount....1802
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:CONDition....1802
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:FORMat....1803
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:BITorder....1803
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:CLMN....1804

SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:ADDValue 1804
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue 1805
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel 1805
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:UNIT 1806
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:PARA 1806
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:PARB 1806

SBUS<sb>:MANCh:FORMat:ADDFrame

Appendes a new frame description to the frame list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Add Frame" on page 703

SBUS<sb>:MANCh:FORMat:LOAD <FileName>

Loads a the specified XML file with a list of frame descriptions.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Open" on page 703

SBUS<sb>:MANCh:FORMat:SAVE <FileName>

Saves the current list of frame descriptions to an XML file with the specified name.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Save as" on page 704

SBUS<sb>:MANCh:FORMat:CLR

Erases from the volatile memory all field and frame format descriptions that you have created for a specific custom protocol.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Edit List" on page 703

SBUS<sb>:MANCh:FORMat:FCOunt?

Returns the number of frame format descriptions available for a specific custom protocol.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Edit List" on page 703

SBUS<sb>:MANCh:FORMat:FRAMe<fr>:ADDField

Appends a new field description to the selected frame description.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Usage: Setting only
Asynchronous command

Manual operation: See "Add Field" on page 704

SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLDCount?

Returns the number of field descriptions available for the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Edit List" on page 705

SBUS<sb>:MANCh:FORMat:FRAMe<fr>:NAME <Name>

Specifies the name for the frame description of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Frame name" on page 704

SBUS<sb>:MANCh:FORMat:FRAMe<fr>:COLor <Color>

Specifies the color for the frame description of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4278255615

Usage: Asynchronous command

Manual operation: See "Frame Color" on page 704

SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:NAME <Name>

Specifies the name for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Field name" on page 705

SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:COLor <Color>

Specifies the color for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4294967040

Usage: Asynchronous command

Manual operation: See "Field Color" on page 705

SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:BITCount <BitCount>

Specifies the bit count, hence length, of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitCount>

Range: 1 to 64
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Bit count" on page 706

SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:CONDition <Condition>

Specifies a user-defined condition operator for the selected field of the selected frame. The various condition operators can identify, for example, a mandatory CRC checksum value or a frame ID.

Set the numeric format of the condition by the command `SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:FORMat`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Condition> The implemented conditions are the "equal" and "array" operators.

Usage: Asynchronous command

Manual operation: See "Condition" on page 705

SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:FORMat <NumericFormat>

Specifies the numerical format for the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<NumericFormat> HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG | DEC | LIST | FLIN

HEX
Hexadecimal format

OCT
Octal format

BIN
Binary format

ASCII = ASCii
ASCII format

SIGN
Signed, decimal format

DEC=USIG
Unsigned, decimal format

LIST
Value list

FLIN
Linear function

*RST: HEX

Usage: Asynchronous command

Manual operation: See "Numeric format" on page 707

SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:BITorder <BitOrder>

Specifies, in which order the algorithm evaluates the bits of the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<BitOrder> LSBF | MSBF

LSBF
Least significant bit first

MSBF
Most significant bit first

*RST: MSBF

Usage: Asynchronous command

Manual operation: See "Bit order" on page 707

SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:CLMN <Column>

Specifies, in which result column of the decode table to display the selected field of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Column> NONE | COL1 | COL2 | COL3

NONE
The result is not displayed.

COL1
The result is displayed in column 1.

COL2
The result is displayed in column 2.

COL3
The result is displayed in column 3.

*RST: NONE

Usage: Asynchronous command

Manual operation: See "Result column" on page 707

SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:ADDValue

Creates a new hexagonal value for customization.

Available if `SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Related commands:

`SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue`

`SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel`

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Usage: Setting only
Asynchronous command

Manual operation: See "Add value" on page 708

SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue <Value>

Sets the hexagonal value to convert it into a labeled state.

Available if `SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field
<p> Index of the value

Parameters:
<Value> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Value" on page 708

SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel <Label>

Sets the label to convert the corresponding hexagonal value to a labeled state.

Available if `SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field
<p> Index of the value

Parameters:
<Label>

Usage: Asynchronous command

Manual operation: See "Label" on page 708

SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:UNIT <Unit>

Sets the unit for the linear function.

Available if `SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Unit>

Usage: Asynchronous command

Manual operation: See "Unit" on page 708

SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:PARA <ParameterA>
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:PARB <ParameterB>

Sets the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

Available if `SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<ParameterB>
Range: -1E+20 to 1E+20
Increment: 1E-12
*RST: 0

Usage: Asynchronous command

Manual operation: See "Parameter A,B" on page 708

18.18.11.4 Software trigger

There are two commands for each parameter that you can use for defining the "Manchester" settings.

For example, to set the *Frame type =Manchester-Frame* > *Field =Data* >*Data* value you can use one of the following commands:

- `TRIGger:SBSW:MANCh:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <fr> for the frame number and <fl> for the field number.

- `TRIGger:SBSW:MANCh:DMIN "Manchester-Frame", "Data", 01100`
  Defines the parameter by using the frame and field name.

TRIGger:SBSW:MANCh:CHKall 1807
TRIGger:SBSW:MANCh:CLR 1807
TRIGger:SBSW:MANCh:INVert 1808
TRIGger:SBSW:MANCh:RST 1808
TRIGger:SBSW:MANCh:FRENable 1808
TRIGger:SBSW:MANCh:FRAMe<fr>:ENABle 1808
TRIGger:SBSW:MANCh:BIT 1808
TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:BIT 1808
TRIGger:SBSW:MANCh:DMAX 1809
TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:DMAX 1809
TRIGger:SBSW:MANCh:DMIN 1809
TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:DMIN 1809
TRIGger:SBSW:MANCh:DOPerator 1809
TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:DOPerator 1809
TRIGger:SBSW:MANCh:FIENable 1810
TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:ENABle 1810
TRIGger:SBSW:MANCh:IMAX 1810
TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:IMAX 1810
TRIGger:SBSW:MANCh:IMIN 1811
TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:IMIN 1811
TRIGger:SBSW:MANCh:IOPerator 1811
TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:IOPerator 1811
TRIGger:SBSW:MANCh:ERENable 1811
TRIGger:SBSW:MANCh:ERRor<m>:ENABle 1811
SBUS<sb>:MANCh:SWTindex? 1812
SBUS<sb>:MANCh:SWTTime? 1812

TRIGger:SBSW:MANCh:CHKall

Enables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 709

TRIGger:SBSW:MANCh:CLR

Disables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 709

TRIGger:SBSW:MANCh:INVert

Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 709

TRIGger:SBSW:MANCh:RST

Presets the state of the selected frames and error types for the software trigger.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 709

TRIGger:SBSW:MANCh:FRENable <Frame>,<Enabler>
TRIGger:SBSW:MANCh:FRENable? <Enabler>
TRIGger:SBSW:MANCh:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 710

TRIGger:SBSW:MANCh:BIT <Frame>,<Field>,<Bit>
TRIGger:SBSW:MANCh:BIT? <Bit>
TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 710

TRIGger:SBSW:MANCh:DMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:MANCh:DMAX? <Data>
TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range for the software trigger, if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 710

TRIGger:SBSW:MANCh:DMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:MANCh:DMIN? <Data>
TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 710

TRIGger:SBSW:MANCh:DOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:MANCh:DOPerator? <Operator>
TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern of the software trigger in the selected field of the selected frame.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:

<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 710

TRIGger:SBSW:MANCh:FIENable <Frame>,<Field>,<Enabler>
TRIGger:SBSW:MANCh:FIENable? <Enabler>
TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame of the software trigger.

Suffix:

<fr> Index of the frame

<fl> Index of the field

Parameters:

<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 710

TRIGger:SBSW:MANCh:IMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:MANCh:IMAX? <Data>
TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range for the software trigger if the operator is set to `INRange`.

You can set the operator with `TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 710

TRIGger:SBSW:MANCh:IMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:MANCh:IMIN? <Data>
TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 710

TRIGger:SBSW:MANCh:IOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:MANCh:IOPerator? <Operator>
TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 710

TRIGger:SBSW:MANCh:ERENable <ErrorName>,<Enabler>
TRIGger:SBSW:MANCh:ERENable? <Enabler>
TRIGger:SBSW:MANCh:ERRor<m>:ENABle <Enable>

Defines the error type for the software trigger.

Suffix:
<m> index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 711

SBUS<sb>:MANCh:SWTindex?

Queries the software trigger index.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Index> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:MANCh:SWTTime?

Queries the software trigger time in seconds.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Time> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.11.5 Decode results

This section describes the commands to query the results of the decoding of the "Manchester" protocol.

SBUS<sb>:MANCh:FCOunt? 1813
SBUS<sb>:MANCh:FRAMe<fr>:FLDCount? 1813
SBUS<sb>:MANCh:FRAMe<fr>:WBRate? 1813
SBUS<sb>:MANCh:FRAMe<fr>:FLD<fl>:STATe? 1813
SBUS<sb>:MANCh:FRAMe<fr>:FLD<fl>:LABel? 1814
SBUS<sb>:MANCh:FRAMe<fr>:FLD<fl>:VALue? 1814
SBUS<sb>:MANCh:FRAMe<fr>:FLD<fl>:FVALue? 1815
SBUS<sb>:MANCh:FRAMe<fr>:STATus? 1815
SBUS<sb>:MANCh:FRAMe<fr>:STARt? 1815
SBUS<sb>:MANCh:FRAMe<fr>:STOP? 1816
SBUS<sb>:MANCh:FRAMe<fr>:TYPE? 1816

SBUS<sb>:MANCh:FRAMe<fr>:CONE? 1816
SBUS<sb>:MANCh:FRAMe<fr>:CTWO? 1817
SBUS<sb>:MANCh:FRAMe<fr>:CTHRee? 1817

SBUS<sb>:MANCh:FCOunt?

Returns the number of decoded frames.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:MANCh:FRAMe<fr>:FLDCount?

Returns the number of fields available in the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<DataCount>

Usage: Query only
Asynchronous command

SBUS<sb>:MANCh:FRAMe<fr>:WBRate?

Returns the bit rate of the frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameWBR> Range: 0 to 100000000000
Increment: 1
*RST: 0
Default unit: bps

Usage: Query only

SBUS<sb>:MANCh:FRAMe<fr>:FLD<fl>:STATe?

Returns the overall state of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:

<State> OK | LENGth | CRC | PARity | INComplete

OK
The field has no error, it is valid.

LENGth
The length of the field is not as expected, indicating an error.

CRC
The CRC of the frame is not as expected, indicating an error.

PARity
Parity is not as expected, indicating an error

INComplete
The frame is incomplete.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:MANCh:FRAMe<fr>:FLD<fl>:LABel?

Returns the label of the specified field in the specified frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:

<Name>

Usage: Query only
Asynchronous command

SBUS<sb>:MANCh:FRAMe<fr>:FLD<fl>:VALue?

Returns the value of the specified field in the specified frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:

<Value> *RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:MANCh:FRAMe<fr>:FLD<fl>:FVALue?

Returns the formatted value of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<FormattedValue>

Usage: Query only
Asynchronous command

SBUS<sb>:MANCh:FRAMe<fr>:STATus?

Returns the overall state of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameState> OK | LENGth | CRC | PARity | INComplete

OK
The frame is valid.

LENGth
Length of the frame is not as expected, indicating an error.

CRC
The checksum of the frame is not as expected, indicating an error.

PARity
Parity is not as expected, indicating an error.

INComplete
The frame is incomplete.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:MANCh:FRAMe<fr>:STARt?

Returns the start time of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:MANCh:FRAMe<fr>:STOP?

Returns the end time of the specified frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:MANCh:FRAMe<fr>:TYPE?

Returns the type of the specified decoded frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameType> The frame type is undefined, because it is custom specific.

Usage: Query only
Asynchronous command

SBUS<sb>:MANCh:FRAMe<fr>:CONE?

Returns the content of the 1st result column of the specified decoded frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<Result1>

Usage: Query only
Asynchronous command

SBUS<sb>:MANCh:FRAMe<fr>:CTWO?

Returns the content of the 2nd result column of the specified decoded frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Result2>

Usage: Query only
Asynchronous command

SBUS<sb>:MANCh:FRAMe<fr>:CTHRee?

Returns the content of the 3rd result column of the specified decoded frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Result3>

Usage: Query only
Asynchronous command

18.18.12 8b/10b (option R&S MXO5-K510)

Before MXO 5 can accept the specific bus commands, make sure that:

- The decoding of the specified bus is enabled with `SBUS<sb>[:STATe]`.
- The bus is set to the correct type with `SBUS<sb>:TYPE`.

- Configuration 1818
- Filter 1819
- Format 1825
- Software trigger 1832
- Decode results 1838

18.18.12.1 Configuration

SBUS<sb>:EBTB:DATA:SOURce 1818
SBUS<sb>:EBTB:DATA:THReshold 1818
SBUS<sb>:EBTB:DATA:HYSTeresis 1818
SBUS<sb>:EBTB:POSition 1819
SBUS<sb>:EBTB:SCALe 1819

SBUS<sb>:EBTB:DATA:SOURce <Source>

Selects the channel for the data signal source.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Source> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Source" on page 715

SBUS<sb>:EBTB:DATA:THReshold <SrcThres>

Sets the threshold for the data channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SrcThres>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 716

SBUS<sb>:EBTB:DATA:HYSTeresis <SrcHyst>

Sets the hysteresis for the data channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SrcHyst>

Usage: Asynchronous command

Manual operation: See "Hysteresis" on page 716

SBUS<sb>:EBTB:POSition <Position>

Sets the vertical position of the 8b/10b signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Position>

Usage: Asynchronous command

SBUS<sb>:EBTB:SCALe <Scale>

Sets the vertical scale of the 8b/10b signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Scale>

Usage: Asynchronous command

18.18.12.2 Filter

There are two commands for each parameter, that you can use for defining the 8b/10b settings.

For example, to set the *Frame type =EBTB* > *Field =Data* >*Data* value you can use one of the following commands:

- `SBUS:EBTB:FILTer:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `SBUS:EBTB:FILTer:DMIN "EBTB-Frame", "Data", 01100`
  Defines the parameter by using the frame and field name.

SBUS<sb>:EBTB:FILTer:CHKall 1820
SBUS<sb>:EBTB:FILTer:CLR 1820
SBUS<sb>:EBTB:FILTer:INVert 1820
SBUS<sb>:EBTB:FILTer:RST 1820
SBUS<sb>:EBTB:FILTer:BIT 1821
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:BIT 1821
SBUS<sb>:EBTB:FILTer:ERENable 1821
SBUS<sb>:EBTB:FILTer:ERRor<n>:ENABle 1821
SBUS<sb>:EBTB:FILTer:DMAX 1821
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:DMAX 1821
SBUS<sb>:EBTB:FILTer:DMIN 1822
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:DMIN 1822
SBUS<sb>:EBTB:FILTer:DOPerator 1822
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:DOPerator 1822
SBUS<sb>:EBTB:FILTer:FIENable 1823

SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:ENABle 1823
SBUS<sb>:EBTB:FILTer:FRENable 1823
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:ENABle 1823
SBUS<sb>:EBTB:FILTer:IMAX 1823
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:IMAX 1823
SBUS<sb>:EBTB:FILTer:IMIN 1824
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:IMIN 1824
SBUS<sb>:EBTB:FILTer:IOPerator 1824
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:IOPerator 1824

SBUS<sb>:EBTB:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 718

SBUS<sb>:EBTB:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 718

SBUS<sb>:EBTB:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 718

SBUS<sb>:EBTB:FILTer:RST

Presets the state of the selected frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 718

SBUS<sb>:EBTB:FILTer:BIT <Frame>,<Field>,<Bit>
SBUS<sb>:EBTB:FILTer:BIT? <Bit>
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 719

SBUS<sb>:EBTB:FILTer:ERENable <ErrorName>,<Enabler>
SBUS<sb>:EBTB:FILTer:ERENable? <Enabler>
SBUS<sb>:EBTB:FILTer:ERRor<n>:ENABle <Enable>

Defines the error type to be filtered on.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 720

SBUS<sb>:EBTB:FILTer:DMAX <Frame>,<Field>,<Data>
SBUS<sb>:EBTB:FILTer:DMAX? <Data>
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `SBUS<sb>:EBTB:FILTer:DOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 719

SBUS<sb>:EBTB:FILTer:DMIN <Frame>,<Field>,<Data>
SBUS<sb>:EBTB:FILTer:DMIN? <Data>
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 719

SBUS<sb>:EBTB:FILTer:DOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:EBTB:FILTer:DOPerator? <Operator>
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 719

SBUS<sb>:EBTB:FILTer:FIENable <Frame>,<Field>,<Enabler>
SBUS<sb>:EBTB:FILTer:FIENable? <Enabler>
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 719

SBUS<sb>:EBTB:FILTer:FRENable <Frame>,<Enabler>
SBUS<sb>:EBTB:FILTer:FRENable? <Enabler>
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:ENABle <Enable>

Enables the filtering on 8b/10b frames. Only the frames that match the selected filter conditions are displayed.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Enable> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Enable" on page 718

SBUS<sb>:EBTB:FILTer:IMAX <Frame>,<Field>,<Data>
SBUS<sb>:EBTB:FILTer:IMAX? <Data>
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if the operator is set to `INRange`.

You can set the operator with `SBUS<sb>:EBTB:FILTer:IOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 719

SBUS<sb>:EBTB:FILTer:IMIN <Frame>,<Field>,<Data>
SBUS<sb>:EBTB:FILTer:IMIN? <Data>
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 719

SBUS<sb>:EBTB:FILTer:IOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:EBTB:FILTer:IOPerator? <Operator>
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 719

18.18.12.3 Format

This section describes the commands to specify and query frame formats for the "8b/10b" protocol.

SBUS<sb>:EBTB:FORMat:ADDFrame 1825
SBUS<sb>:EBTB:FORMat:LOAD 1825
SBUS<sb>:EBTB:FORMat:SAVE 1826
SBUS<sb>:EBTB:FORMat:CLR 1826
SBUS<sb>:EBTB:FORMat:FCOunt? 1826
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:ADDField 1826
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLDCount? 1827
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:NAME 1827
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:COLor 1827
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:NAME 1827
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:COLor 1828
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:BITCount 1828
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:CONDition 1829
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:FORMat 1829
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:CLMN 1830
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:ADDValue 1830
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue 1831
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel 1831
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:UNIT 1831
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:PARA 1832
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:PARB 1832

SBUS<sb>:EBTB:FORMat:ADDFrame

Appendes a new frame format to the frame list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Add frame" on page 720

SBUS<sb>:EBTB:FORMat:LOAD <FileName>

Loads a the specified XML file with a list of frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Open" on page 721

SBUS<sb>:EBTB:FORMat:SAVE <FileName>

Saves the current list of frame formats to an XML file with the specified name.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Save as" on page 721

SBUS<sb>:EBTB:FORMat:CLR

Erases from the volatile memory all field descriptions and frame formats that you have created.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Edit list" on page 721

SBUS<sb>:EBTB:FORMat:FCOunt?

Returns the number of frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Edit list" on page 721

SBUS<sb>:EBTB:FORMat:FRAMe<fr>:ADDField

Appends a new field description to the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Usage: Setting only
Asynchronous command

Manual operation: See "Add field" on page 722

SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLDCount?

Returns the number of field descriptions available for the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Edit list" on page 722

SBUS<sb>:EBTB:FORMat:FRAMe<fr>:NAME <Name>

Specifies the name for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Frame name" on page 721

SBUS<sb>:EBTB:FORMat:FRAMe<fr>:COLor <Color>

Specifies the color for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4278255615

Usage: Asynchronous command

Manual operation: See "Frame color" on page 721

SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:NAME <Name>

Specifies the name for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Field name" on page 722

SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:COLor <Color>

Specifies the color for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4294967040

Usage: Asynchronous command

Manual operation: See "Field color" on page 722

SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:BITCount <BitCount>

Specifies the bit count, hence length, of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitCount>

Range: 1 to 64
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Bit count" on page 724

SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:CONDition <Condition>

Specifies a user-defined condition operator for the selected field of the selected frame. The various condition operators can identify, for example, a mandatory CRC checksum value or a frame ID.

Set the numeric format of the condition by the command `SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:FORMat`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> 1 to 4, index of the serial bus

<fl> Index of the field

Parameters:
<Condition> The implemented conditions are the "equal" and "array" operators.

Usage: Asynchronous command

Manual operation: See "Condition" on page 723

SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:FORMat <NumericFormat>

Specifies the numerical format for the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<NumericFormat> HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG | DEC | LIST | FLIN

HEX
Hexadecimal format

OCT
Octal format

BIN
Binary format

ASCII = ASCii
ASCII format

SIGN
Signed, decimal format

DEC=USIG
Unsigned, decimal format

LIST
Value list

FLIN
Linear function
*RST: HEX

Usage: Asynchronous command

Manual operation: See "Numeric format" on page 725

SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:CLMN <Column>

Specifies, in which result column of the decode table to display the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Column> NONE | COL1 | COL2 | COL3

NONE
The result is not displayed.

COL1
The result is displayed in column 1.

COL2
The result is displayed in column 2.

COL3
The result is displayed in column 3.

*RST: NONE

Usage: Asynchronous command

Manual operation: See "Result column" on page 724

SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:ADDValue

Creates a new hexagonal value for customization.

Available if `SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Related commands:

`SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue`

`SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel`

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Usage: Setting only
Asynchronous command

Manual operation: See "Add value" on page 725

SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue <Value>

Sets the hexagonal value to convert it into a labeled state.

Available if `SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:
<Value> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Value" on page 725

SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel <Label>

Sets the label to convert the corresponding hexagonal value to a labeled state.

Available if `SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:
<Label>

Usage: Asynchronous command

Manual operation: See "Label" on page 725

SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:UNIT <Unit>

Sets the unit for the linear function.

Available if `SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<Unit>

Usage: Asynchronous command

Manual operation: See "Unit" on page 726

SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:PARA <ParameterA>
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:PARB <ParameterB>

Sets the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

Available if `SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<ParameterB> Range: -1E+20 to 1E+20
Increment: 1E-12
*RST: 0

Usage: Asynchronous command

Manual operation: See "Parameter A,B" on page 726

18.18.12.4 Software trigger

There are two commands for each parameter that you can use for defining the "8b/10b" settings.

For example, to set the *Frame type =EBTB-Frame* > *Field =Data* >*Data* value you can use one of the following commands:

- `TRIGger:SBSW:EBTB:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <fr> for the frame number and <fl> for the field number.
- `TRIGger:SBSW:EBTB:DMIN "EBTB-Frame", "Data", 01100`
  Defines the parameter by using the frame and field name.

TRIGger:SBSW:EBTB:CHKall 1833
TRIGger:SBSW:EBTB:CLR 1833
TRIGger:SBSW:EBTB:INVert 1833

TRIGger:SBSW:EBTB:RST....1834
TRIGger:SBSW:EBTB:FRENable....1834
TRIGger:SBSW:EBTB:FRAMe<fr>:ENABle....1834
TRIGger:SBSW:EBTB:BIT....1834
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:BIT....1834
TRIGger:SBSW:EBTB:DMAX....1834
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:DMAX....1834
TRIGger:SBSW:EBTB:DMIN....1835
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:DMIN....1835
TRIGger:SBSW:EBTB:DOPerator....1835
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:DOPerator....1835
TRIGger:SBSW:EBTB:FIENable....1836
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:ENABle....1836
TRIGger:SBSW:EBTB:IMAX....1836
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:IMAX....1836
TRIGger:SBSW:EBTB:IMIN....1836
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:IMIN....1836
TRIGger:SBSW:EBTB:IOPerator....1837
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:IOPerator....1837
TRIGger:SBSW:EBTB:ERENable....1837
TRIGger:SBSW:EBTB:ERRor<m>:ENABle....1837
SBUS<sb>:EBTB:SWTindex?....1837
SBUS<sb>:EBTB:SWTTime?....1838

TRIGger:SBSW:EBTB:CHKall

Enables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 727

TRIGger:SBSW:EBTB:CLR

Disables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 727

TRIGger:SBSW:EBTB:INVert

Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 727

TRIGger:SBSW:EBTB:RST

Presets the state of the selected frames and error types for the software trigger.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 727

TRIGger:SBSW:EBTB:FRENable <Frame>,<Enabler>
TRIGger:SBSW:EBTB:FRENable? <Enabler>
TRIGger:SBSW:EBTB:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 728

TRIGger:SBSW:EBTB:BIT <Frame>,<Field>,<Bit>
TRIGger:SBSW:EBTB:BIT? <Bit>
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 728

TRIGger:SBSW:EBTB:DMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:EBTB:DMAX? <Data>
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range for the software trigger, if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `SBUS<sb>:EBTB:FILTer:DOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 728

TRIGger:SBSW:EBTB:DMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:EBTB:DMIN? <Data>
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 728

TRIGger:SBSW:EBTB:DOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:EBTB:DOPerator? <Operator>
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern of the software trigger in the selected field of the selected frame.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 728

TRIGger:SBSW:EBTB:FIENable <Frame>,<Field>,<Enabler>
TRIGger:SBSW:EBTB:FIENable? <Enabler>
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame of the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 728

TRIGger:SBSW:EBTB:IMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:EBTB:IMAX? <Data>
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range for the software trigger if the operator is set to `INRange`.

You can set the operator with `SBUS<sb>:EBTB:FILTer:IOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 728

TRIGger:SBSW:EBTB:IMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:EBTB:IMIN? <Data>
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 728

TRIGger:SBSW:EBTB:IOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:EBTB:IOPerator? <Operator>
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame for the software trigger.

Suffix:

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 728

TRIGger:SBSW:EBTB:ERENable <ErrorName>,<Enabler>
TRIGger:SBSW:EBTB:ERENable? <Enabler>
TRIGger:SBSW:EBTB:ERRor<m>:ENABle <Enable>

Defines the error type for the software trigger.

Suffix:

<m> index of the error

Parameters:

<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 729

SBUS<sb>:EBTB:SWTindex?

Queries the software trigger index.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:

<sb> 1 to 4, index of the serial bus

<sb> 1..4

Return values:

<Index> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:EBTB:SWTTime?

Queries the software trigger time in seconds.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:

<sb> 1 to 4, index of the serial bus

Return values:

<Time> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.12.5 Decode results

This section describes the commands to query the results of the decoding of the "8b/10b" protocol.

For manual operation, see Section 14.1.9.3, "Decoding protocol signals", on page 531.

SBUS<sb>:EBTB:FCOunt? 1838
SBUS<sb>:EBTB:FRAMe<fr>:FLDCount? 1839
SBUS<sb>:EBTB:FRAMe<fr>:BITRate? 1839
SBUS<sb>:EBTB:FRAMe<fr>:FLD<fl>:STATe? 1839
SBUS<sb>:EBTB:FRAMe<fr>:FLD<fl>:LABel? 1840
SBUS<sb>:EBTB:FRAMe<fr>:FLD<fl>:VALue? 1840
SBUS<sb>:EBTB:FRAMe<fr>:FLD<fl>:FVALue? 1841
SBUS<sb>:EBTB:FRAMe<fr>:STATus? 1841
SBUS<sb>:EBTB:FRAMe<fr>:STARt? 1842
SBUS<sb>:EBTB:FRAMe<fr>:STOP? 1842
SBUS<sb>:EBTB:FRAMe<fr>:TYPE? 1842
SBUS<sb>:EBTB:FRAMe<fr>:CONE? 1843
SBUS<sb>:EBTB:FRAMe<fr>:CTWO? 1843
SBUS<sb>:EBTB:FRAMe<fr>:CTHRee? 1843

SBUS<sb>:EBTB:FCOunt?

Returns the number of decoded frames.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:EBTB:FRAMe<fr>:FLDCount?

Returns the number of fields available in the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<DataCount>

Usage: Query only
Asynchronous command

SBUS<sb>:EBTB:FRAMe<fr>:BITRate?

Returns the bit rate of the frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<BitRate> Range: 0 to 100000000000
Increment: 1
*RST: 0
Default unit: bps

Usage: Query only
Asynchronous command

SBUS<sb>:EBTB:FRAMe<fr>:FLD<fl>:STATe?

Returns the overall state of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:

<State> OK | LENGth | CRC | PARity | SYMBol | DISParity | AMBiguous | INComplete

OK
The field has no error, it is valid.

LENGth
The length of the field is not as expected, indicating an error.

CRC
The CRC of the frame is not as expected, indicating an error.

PARity
Parity is not as expected, indicating an error

SYMBol
Encountered an invalid 10-bit sequence, indicating an error.

DISParity
The symbol's disparity is incompatible with the running disparity, indicating an error.

AMBiguous
The frame is ambiguous.

INComplete
The frame is not completely contained in the acquisition. The acquired part of the frame is valid.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:EBTB:FRAMe<fr>:FLD<fl>:LABel?

Returns the label of the specified field in the specified frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:

<Name>

Usage: Query only
Asynchronous command

SBUS<sb>:EBTB:FRAMe<fr>:FLD<fl>:VALue?

Returns the value of the specified field in the specified frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Value> *RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:EBTB:FRAMe<fr>:FLD<fl>:FVALue?

Returns the formatted value of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<FormattedValue>

Usage: Query only
Asynchronous command

SBUS<sb>:EBTB:FRAMe<fr>:STATus?

Returns the overall state of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameState> OK | LENGth | CRC | PARity | SYMBol | DISParity | AMBiguous | INComplete

OK
The field has no error, it is valid.

LENGth
The length of the field is not as expected, indicating an error.

CRC
The CRC of the frame is not as expected, indicating an error.

PARity
Parity is not as expected, indicating an error

SYMBol
Encountered an invalid 10-bit sequence, indicating an error.

DISParity
The symbol's disparity is incompatible with the running disparity, indicating an error.

AMBiguous
The frame is ambiguous.

INComplete
The frame is not completely contained in the acquisition. The acquired part of the frame is valid.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:EBTB:FRAMe<fr>:STARt?

Returns the start time of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:EBTB:FRAMe<fr>:STOP?

Returns the end time of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:EBTB:FRAMe<fr>:TYPE?

Returns the type of the specified decoded frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameType> The frame type is undefined, because it is custom specific.

Usage: Query only
Asynchronous command

SBUS<sb>:EBTB:FRAMe<fr>:CONE?

Returns the content of the 1st result column of the specified decoded frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Result1>

Usage: Query only
Asynchronous command

SBUS<sb>:EBTB:FRAMe<fr>:CTWO?

Returns the content of the 2nd result column of the specified decoded frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Result2>

Usage: Query only
Asynchronous command

SBUS<sb>:EBTB:FRAMe<fr>:CTHRee?

Returns the content of the 3rd result column of the specified decoded frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Result3>

Usage: Query only
Asynchronous command

18.18.13 CAN (option R&S MXO5-K520)

Before MXO 5 can accept the specific bus commands, make sure that:

- The decoding of the specified bus is enabled with `SBUS<sb>[:STATe]`.
- The bus is set to the correct type with `SBUS<sb>:TYPE`.

- Configuration....1844
- Filter....1849
- Format....1855
- Hardware trigger....1864
- Software trigger....1874
- Decode results....1879

18.18.13.1 Configuration

SBUS<sb>:CAN:TYPE....1844
SBUS<sb>:CAN:BITRate....1845
SBUS<sb>:CAN:SAMPlepoint....1845
SBUS<sb>:CAN:SOURce....1845
SBUS<sb>:CAN:FDATa:DBITrate....1846
SBUS<sb>:CAN:FDATa:SAMPlepoint....1846
SBUS<sb>:CAN:SIC:HYSTeresis....1846
SBUS<sb>:CAN:SIC:THReshold....1846
SBUS<sb>:CAN:FAST:THReshold....1847
SBUS<sb>:CAN:FAST:HYSTeresis....1847
SBUS<sb>:CAN:XDATa:DBITrate....1847
SBUS<sb>:CAN:XDATa:SAMPlepoint....1848
SBUS<sb>:CAN:TRCVmode....1848
SBUS<sb>:CAN:SYMBols....1848
SBUS<sb>:CAN:NEWList....1848
SBUS<sb>:CAN:POSition....1849
SBUS<sb>:CAN:SCALe....1849

SBUS<sb>:CAN:TYPE <SignalType>

Selects the CAN-High or CAN-Low line. Both lines are required for differential signal transmission used by CAN.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SignalType> CANL | CANH
*RST: CANL

Usage: Asynchronous command

Manual operation: See "Type" on page 734

SBUS<sb>:CAN:BITRate <Bitrate>

Sets the number of transmitted bits per second.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Bitrate>
Range: 10000 to 5000000
Increment: 100
*RST: 100000
Default unit: bps

Usage: Asynchronous command

Manual operation: See "Nominal bit rate" on page 734

SBUS<sb>:CAN:SAMPlepoint <SamplePoint>

Sets the position of the sample point within the bit in percent of the nominal bit time.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SamplePoint>
Range: 30 to 90
Increment: 5
*RST: 66
Default unit: %

Usage: Asynchronous command

Manual operation: See "Sample point" on page 734

SBUS<sb>:CAN:SOURce Source

Sets the source channel to which the line is connected.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
Source
With digital channels in SIC mode:
C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)
Without digital channels in FAST mode:
C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Data" on page 733

SBUS<sb>:CAN:FDATa:DBITrate <FDBitrate>

Sets the bit rate of the data phase.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<FDBitrate>
Range: 10000 to 15000000
Increment: 100
*RST: 1000000
Default unit: bps

Usage: Asynchronous command

Manual operation: See "FD bit rate" on page 734

SBUS<sb>:CAN:FDATa:SAMPlepoint <FDSamplePoint>

Sets the position of the sample point within the bit in percent of the nominal bit time.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<FDSamplePoint>
Range: 30 to 90
Increment: 5
*RST: 66
Default unit: %

Usage: Asynchronous command

Manual operation: See "FD sample point" on page 734

SBUS<sb>:CAN:SIC:HYSTeresis <Hysteresis>

Sets a hysteresis value for the SIC transceiver mode.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 735

SBUS<sb>:CAN:SIC:THReshold <SIC Threshold>

Sets a threshold value for the SIC transceiver mode.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SIC Threshold>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 735

SBUS<sb>:CAN:FAST:THReshold <SIC Threshold>

Sets a threshold value for the fast transceiver mode.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SIC Threshold>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 735

SBUS<sb>:CAN:FAST:HYSTeresis <Hysteresis>

Sets a hysteresis value for the fast transceiver mode.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 735

SBUS<sb>:CAN:XDATa:DBITrate <XLBitrate>

Sets the bit rate of the data phase for the CAN XL frame.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<XLBitrate>
Range: 10000 to 30000000
Increment: 100
*RST: 10000000
Default unit: bps

Usage: Asynchronous command

Manual operation: See "XL bit rate" on page 734

SBUS<sb>:CAN:XDATa:SAMPlepoint <XLSamplePoint>

Sets the position of the sample point within the bit in percent of the nominal bit time for the CAN XL frame.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<XLSamplePoint> Range: 30 to 90
Increment: 5
*RST: 66
Default unit: %

Usage: Asynchronous command

Manual operation: See "XL sample point" on page 735

SBUS<sb>:CAN:TRCVmode <TransceiverMd>

Selects the transceiver mode for the CAN decoding.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<TransceiverMd> SIC | FAST
*RST: SIC

Usage: Asynchronous command

Manual operation: See "Transceiver mode" on page 734

SBUS<sb>:CAN:SYMBols <ShowSymbols>

Activates the symbol list to be used for decoding.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<ShowSymbols> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show symbols" on page 736

SBUS<sb>:CAN:NEWList <FileName>

Loads a symbol list file.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName> String parameter with path and file name.

Example:
```
SBUS1:CAN:NEWList
'/home/storage/userData/Protocol/CAN.csv'
SBUS1:CAN:SYMBols ON
```

Usage: Setting only
Asynchronous command

Manual operation: See "Show symbols" on page 736

SBUS<sb>:CAN:POSition <CAN position>

Sets the vertical position of the CAN signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<CAN position>

Usage: Asynchronous command

SBUS<sb>:CAN:SCALe <CAN scale>

Set the vertical scale of the indicated CAN signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<CAN scale>

Usage: Asynchronous command

18.18.13.2 Filter

There are two commands for each parameter, that you can use for defining the CAN settings.

For example, to set the *Frame type =CBFF* > *Field =Data* >*Data* value you can use one of the following commands:

- `SBUS:CAN:FILTer:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `SBUS:CAN:FILTer:DMIN "CBFF", "Data", 01100`
  Defines the parameter by using the frame and field name.

SBUS<sb>:CAN:FILTer:CHKall 1850
SBUS<sb>:CAN:FILTer:CLR 1850
SBUS<sb>:CAN:FILTer:INVert 1850
SBUS<sb>:CAN:FILTer:RST 1851

SBUS<sb>:CAN:FILTer:BIT....1851
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:BIT....1851
SBUS<sb>:CAN:FILTer:DMAX....1851
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:DMAX....1851
SBUS<sb>:CAN:FILTer:DMIN....1852
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:DMIN....1852
SBUS<sb>:CAN:FILTer:DOPerator....1852
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:DOPerator....1852
SBUS<sb>:CAN:FILTer:ERENable....1852
SBUS<sb>:CAN:FILTer:ERRor<n>:ENABle....1852
SBUS<sb>:CAN:FILTer:FIENable....1853
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:ENABle....1853
SBUS<sb>:CAN:FILTer:FRENable....1853
SBUS<sb>:CAN:FILTer:FRAMe<fr>:ENABle....1853
SBUS<sb>:CAN:FILTer:IMAX....1853
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:IMAX....1853
SBUS<sb>:CAN:FILTer:IMIN....1854
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:IMIN....1854
SBUS<sb>:CAN:FILTer:IOPerator....1854
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:IOPerator....1854

SBUS<sb>:CAN:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 738

SBUS<sb>:CAN:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 738

SBUS<sb>:CAN:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 738

SBUS<sb>:CAN:FILTer:RST

Presets the state of the selected frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 738

SBUS<sb>:CAN:FILTer:BIT <Frame>,<Field>,<Bit>
SBUS<sb>:CAN:FILTer:BIT? <Bit>
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 739

SBUS<sb>:CAN:FILTer:DMAX <Frame>,<Field>,<Data>
SBUS<sb>:CAN:FILTer:DMAX? <Data>
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORANGe`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 739

SBUS<sb>:CAN:FILTer:DMIN <Frame>,<Field>,<Data>
SBUS<sb>:CAN:FILTer:DMIN? <Data>
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 739

SBUS<sb>:CAN:FILTer:DOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:CAN:FILTer:DOPerator? <Operator>
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 739

SBUS<sb>:CAN:FILTer:ERENable <ErrorName>,<Enabler>
SBUS<sb>:CAN:FILTer:ERENable? <Enabler>
SBUS<sb>:CAN:FILTer:ERRor<n>:ENABle <Enable>

Defines the error type to be filtered on.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 741

SBUS<sb>:CAN:FILTer:FIENable <Frame>,<Field>,<Enabler>
SBUS<sb>:CAN:FILTer:FIENable? <Enabler>
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 739

SBUS<sb>:CAN:FILTer:FRENable <Frame>,<Enabler>
SBUS<sb>:CAN:FILTer:FRENable? <Enabler>
SBUS<sb>:CAN:FILTer:FRAMe<fr>:ENABle <Enable>

Enables the filtering on CAN frames. Only the frames that match the selected filter conditions are displayed.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 739

SBUS<sb>:CAN:FILTer:IMAX <Frame>,<Field>,<Data>
SBUS<sb>:CAN:FILTer:IMAX? <Data>
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if the operator is set to `INRange`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 739

SBUS<sb>:CAN:FILTer:IMIN <Frame>,<Field>,<Data>
SBUS<sb>:CAN:FILTer:IMIN? <Data>
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 739

SBUS<sb>:CAN:FILTer:IOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:CAN:FILTer:IOPerator? <Operator>
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 739

18.18.13.3 Format

This section describes the commands to specify and query frame formats for the "CAN" protocol.

SBUS<sb>:CAN:FORMat:SELect ... 1855
SBUS<sb>:CAN:FORMat:ADDFrame ... 1856
SBUS<sb>:CAN:FORMat:LOAD ... 1856
SBUS<sb>:CAN:FORMat:SAVE ... 1856
SBUS<sb>:CAN:FORMat:CLR ... 1856
SBUS<sb>:CAN:FORMat:FCOunt? ... 1857
SBUS<sb>:CAN:FORMat:FRAMe<fr>:ADDField ... 1857
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLDCount? ... 1857
SBUS<sb>:CAN:FORMat:FRAMe<fr>:NAME ... 1857
SBUS<sb>:CAN:FORMat:FRAMe<fr>:COLor ... 1858
SBUS<sb>:CAN:FORMat:FRAMe<fr>:TYPE ... 1858
SBUS<sb>:CAN:FORMat:FRAMe<fr>:ID1Field ... 1858
SBUS<sb>:CAN:FORMat:FRAMe<fr>:ID2Field ... 1858
SBUS<sb>:CAN:FORMat:FRAMe<fr>:ID3Field ... 1858
SBUS<sb>:CAN:FORMat:FRAMe<fr>:ID1Value ... 1859
SBUS<sb>:CAN:FORMat:FRAMe<fr>:ID2Value ... 1859
SBUS<sb>:CAN:FORMat:FRAMe<fr>:ID3Value ... 1859
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:NAME ... 1859
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:COLor ... 1859
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:FSTBit ... 1860
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:BITCount ... 1860
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:REPetition ... 1860
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:BITorder ... 1861
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:FORMat ... 1861
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:ADDValue ... 1862
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue ... 1862
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel ... 1863
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:UNIT ... 1863
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:PARA ... 1863
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:PARB ... 1863

SBUS<sb>:CAN:FORMat:SELect <Select>

Enables the format configuration

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Select> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show format" on page 741

SBUS<sb>:CAN:FORMat:ADDFrame

Appendes a new frame format to the frame list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Add frame" on page 741

SBUS<sb>:CAN:FORMat:LOAD <FileName>

Loads a the specified XML file with a list of frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Open" on page 742

SBUS<sb>:CAN:FORMat:SAVE <FileName>

Saves the current list of frame formats to an XML file with the specified name.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Save as" on page 742

SBUS<sb>:CAN:FORMat:CLR

Erases from the volatile memory all field descriptions and frame formats that you have created.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Edit list" on page 742

SBUS<sb>:CAN:FORMat:FCOunt?

Returns the number of available frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Edit list" on page 742

SBUS<sb>:CAN:FORMat:FRAMe<fr>:ADDField

Appends a new field description to the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Usage: Setting only
Asynchronous command

Manual operation: See "Add field" on page 743

SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLDCount?

Returns the number of field descriptions available for the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FORMat:FRAMe<fr>:NAME <Name>

Specifies the name for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Frame name" on page 743

SBUS<sb>:CAN:FORMat:FRAMe<fr>:COLor <Color>

Specifies the color for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4278255615

Usage: Asynchronous command

Manual operation: See "Frame color" on page 743

SBUS<sb>:CAN:FORMat:FRAMe<fr>:TYPE <Type>

Sets an original frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Type>

Usage: Asynchronous command

Manual operation: See "Frame type" on page 743

SBUS<sb>:CAN:FORMat:FRAMe<fr>:ID1Field <ID1Field>
SBUS<sb>:CAN:FORMat:FRAMe<fr>:ID2Field <ID2Field>
SBUS<sb>:CAN:FORMat:FRAMe<fr>:ID3Field <ID3Field>

Sets the identifying field type for the configured frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Field>

Usage: Asynchronous command

Manual operation: See "ID<n> field" on page 743

SBUS<sb>:CAN:FORMat:FRAMe<fr>:ID1Value <ID1Value>
SBUS<sb>:CAN:FORMat:FRAMe<fr>:ID2Value <ID2Value>
SBUS<sb>:CAN:FORMat:FRAMe<fr>:ID3Value <ID3Value>

Sets the value of the corresponding field type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Value>

Usage: Asynchronous command

Manual operation: See "ID<n> value" on page 743

SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:NAME <Name>

Specifies the name for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Field name" on page 744

SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:COLor <Color>

Specifies the color for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4294967040

Usage: Asynchronous command

Manual operation: See "Field color" on page 744

SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:FSTBit <FirstBit>

In order of transmission, sets the first bit of the specified field in the payload.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<FirstBit> Range: 0 to 63
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "First bit" on page 744

SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:BITCount <BitCount>

Specifies the bit count, hence length, of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitCount> Range: 1 to 64
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Bit count" on page 744

SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:REPetition <Repetition>

Sets the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Repetition> Range: 0 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Repetition" on page 745

SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:BITorder <BitOrder>

Specifies, in which order the algorithm evaluates the bits of the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitOrder> LSBF | MSBF

LSBF
Least significant bit first

MSBF
Most significant bit first

*RST: MSBF

Usage: Asynchronous command

Manual operation: See "Bit order" on page 745

SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:FORMat <NumericFormat>

Specifies the numerical format for the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<NumericFormat> HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG | DEC | LIST | FLIN

HEX
Hexadecimal format

OCT
Octal format

BIN
Binary format

ASCII = ASCii
ASCII format

SIGN
Signed, decimal format

DEC=USIG
Unsigned, decimal format

LIST
Value list

FLIN
Linear function

*RST: HEX

Usage: Asynchronous command

Manual operation: See "Numeric format" on page 745

SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:ADDValue

Creates a new hexagonal value for customization.

Available if `SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Related commands:

`SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue`

`SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel`

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Usage: Setting only
Asynchronous command

Manual operation: See "Add value" on page 746

SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue <Value>

Sets the hexagonal value to convert it into a labeled state.

Available if `SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:

<Value> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Value" on page 746

SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel <Label>

Sets the label to convert the corresponding hexagonal value to a labeled state.

Available if `SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:

<Label>

Usage: Asynchronous command

Manual operation: See "Label" on page 746

SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:UNIT <Unit>

Sets the unit for the linear function.

Available if `SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Unit>

Usage: Asynchronous command

Manual operation: See "Unit" on page 746

SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:PARA <ParameterA>
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:PARB <ParameterB>

Sets the parameters of the linear function.

- Parameter A: Slope (rate of change)

- Parameter B: Offset

Available if `SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:

<sb>	1 to 4, index of the serial bus
<fr>	Index of the frame
<fl>	Index of the field

Parameters:

<ParameterB>	Range: -1E+20 to 1E+20 Increment: 1E-12 *RST: 0

Usage: Asynchronous command

Manual operation: See "Parameter A,B" on page 746

18.18.13.4 Hardware trigger

Trigger commands for serial buses affect the current trigger source. Therefore, set the trigger source to the required serial bus with `TRIGger:EVENt<ev>:SOURce` before sending the bus-specific trigger commands.

TRIGger:SBHW:CAN:ACKerror ... 1865
TRIGger:SBHW:CAN:BITSterror ... 1865
TRIGger:SBHW:CAN:BORDer ... 1865
TRIGger:SBHW:CAN:CRCerror ... 1866
TRIGger:SBHW:CAN:DCONdition ... 1866
TRIGger:SBHW:CAN:DLC ... 1866
TRIGger:SBHW:CAN:DLCCondition ... 1866
TRIGger:SBHW:CAN:DMIN ... 1867
TRIGger:SBHW:CAN:FDATa:BRS ... 1867
TRIGger:SBHW:CAN:FDATa:DPOSition ... 1867
TRIGger:SBHW:CAN:FDATa:ESI ... 1867
TRIGger:SBHW:CAN:FDATa:SCERror ... 1868
TRIGger:SBHW:CAN:FORMerror ... 1868
TRIGger:SBHW:CAN:FTYPe ... 1868
TRIGger:SBHW:CAN:ICONdition ... 1869
TRIGger:SBHW:CAN:IMAX ... 1869
TRIGger:SBHW:CAN:IMIN ... 1869
TRIGger:SBHW:CAN:ITYPe ... 1870
TRIGger:SBHW:CAN:TYPE ... 1870
TRIGger:SBHW:CAN:XDATa:AF:CONDition ... 1871
TRIGger:SBHW:CAN:XDATa:AF:MAX ... 1871
TRIGger:SBHW:CAN:XDATa:AF:MIN ... 1871
TRIGger:SBHW:CAN:XDATa:SDT:CONDition ... 1872
TRIGger:SBHW:CAN:XDATa:SDT:MAX ... 1872
TRIGger:SBHW:CAN:XDATa:SDT:MIN ... 1872
TRIGger:SBHW:CAN:XDATa:SEC ... 1873

TRIGger:SBHW:CAN:XDATa:VCID:CONDition....1873
TRIGger:SBHW:CAN:XDATa:VCID:MAX....1873
TRIGger:SBHW:CAN:XDATa:VCID:MIN....1873

TRIGger:SBHW:CAN:ACKerror <AckError>

Triggers when the transmitter does not receive an acknowledgment - a dominant bit during the ACK Slot.

Available, if `TRIGger:SBHW:CAN:TYPE` is set to `ERRC`.

Parameters:

<AckError> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Error conditions" on page 753

TRIGger:SBHW:CAN:BITSterror <BitStuffError>

Triggers if a stuff error occurs - when the 6th consecutive equal bit level in the mentioned fields is detected.

Available, if `TRIGger:SBHW:CAN:TYPE` is set to `ERRC`.

Parameters:

<BitStuffError> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Error conditions" on page 753

TRIGger:SBHW:CAN:BORDer <Endianness>

Sets the byte order (endianness) of the data transfer. Only for CAN protocol.

Parameters:

<Endianness> BENDian | LENDian

BENDian
Big endian, data is analyzed and evaluated in the order of reception.

LENDian
Little endian, the instrument reads the complete data, reverses the byte order of the data, and compares it with the specified data word.

*RST: BENDian

Usage: Asynchronous command

TRIGger:SBHW:CAN:CRCerror <ChecksumError>

Triggers on CRC errors. A CRC error occurs when the CRC calculated by the receiver differs from the received value in the CRC sequence.

Available, if `TRIGger:SBHW:CAN:TYPE` is set to `ERRC`.

Parameters:

<ChecksumError> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Error conditions" on page 753

TRIGger:SBHW:CAN:DCONdition <DataOperator>

Sets the operator to set a specific data pattern or a data pattern range.

Parameters:

<DataOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, not equal, less than, less or equal than, greater than, greater or equal than. These conditions require one data pattern to be set with `TRIGger:SBHW:CAN:DMIN`.

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Data pattern" on page 752

TRIGger:SBHW:CAN:DLC <DLC>

Sets the data length code, the number of data bytes to be found. For complete definition, set also the operator with `TRIGger:SBHW:CAN:DLCCondition`.

Parameters:

<DLC> Range: CAN: 1 to 8, CAN FD: 1 to 15 (64 bytes)
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "DLC" on page 751

TRIGger:SBHW:CAN:DLCCondition <DLCOperator>

Operator to set the data length code.

The number of data bytes to be found is set with `TRIGger:SBHW:CAN:DLC`.

Parameters:

<DLCOperator> EQUal | GETHan

For little endian transfer direction, EQUal must be set.

*RST: GETHan

Usage: Asynchronous command

Manual operation: See "DLC" on page 751

TRIGger:SBHW:CAN:DMIN <DataPattern>

Sets a data pattern, or sets the start value of a data pattern range.

Parameters:

<DataPattern> List of comma-separated values

Usage: Asynchronous command

Manual operation: See "Data pattern" on page 752

TRIGger:SBHW:CAN:FDATa:BRS <BRS_Bit>

Sets the bit rate switch bit.

Parameters:

<BRS_Bit> ONE | ZERO | DC

ONE: the bit rate switches from the bit rate of the arbitration phase to the faster data rate.

*RST: ONE

Usage: Asynchronous command

Manual operation: See "BRS, ESI" on page 752

TRIGger:SBHW:CAN:FDATa:DPOSition <DataPosition>

Defines the number of the first data byte at which the data pattern may start.

Parameters:

<DataPosition> Range: 1 to 2048
Increment: 1
*RST: 1

Usage: Asynchronous command

TRIGger:SBHW:CAN:FDATa:ESI <ESI_Bit>

Sets the error state indicator bit.

Parameters:

<ESI_Bit> ONE | ZERO | DC

DC: do not care, bit is nor relevant.

*RST: DC

Usage: Asynchronous command

Manual operation: See "BRS, ESI" on page 752

TRIGger:SBHW:CAN:FDATa:SCERror <StuffCntErr>

Triggers on stuff count errors. A stuff bit error occurs if more than five consecutive bits of the same level occur on the bus.

Available, if TRIGger:SBHW:CAN:TYPE is set to ERRor.

Parameters:

<StuffCntErr> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Error conditions" on page 753

TRIGger:SBHW:CAN:FORMerror <FormError>

Triggers when a fixed-form bit field contains one or more illegal bits.

Available, if TRIGger:SBHW:CAN:TYPE is set to ERRC.

Parameters:

<FormError> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Error conditions" on page 753

TRIGger:SBHW:CAN:FTYPe <FrameType>

Sets the CAN frame type.

Parameters:

<FrameType> CBFF | CBFR | CEFF | CEFR | FBFF | FEFF | XLFF | ERRor | OVERload

CBFF: classical base frame format data
CBFR: classical base frame format remote
CEFF: classical extended frame format data
CEFR: classical extended frame format remote
FBFF: FD base frame format
FEFF: FD extended frame format
XLFF: XL frame format

ERR: error
OVLD: overload

*RST: CBFF

Usage: Asynchronous command

Manual operation: See "Frame type" on page 749

TRIGger:SBHW:CAN:ICONdition <IdOperator>

Sets the operator to set a specific identifier or an identifier range.

Parameters:

<IdOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, not equal, less than, less or equal than, greater than, greater or equal than. These conditions require one identifier pattern to be set with `TRIGger:SBHW:CAN:IMIN`.

INRange | OORange
In range / out of range: Set the minimum and maximum value of the range with `TRIGger:SBHW:CAN:IMIN` and `TRIGger:SBHW:CAN:IMAX`.

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Identifier" on page 751

TRIGger:SBHW:CAN:IMAX <IdPattern>

Sets the end value of an identifier range if `TRIGger:SBHW:CAN:ICONdition` is set to `INRange` or `OORange`.

Parameters:

<IdPattern> List of comma-separated values

Usage: Asynchronous command

Manual operation: See "Identifier" on page 751

TRIGger:SBHW:CAN:IMIN <IdPattern>

Specifies a message identifier pattern, or sets the start value of an identifier range.

Parameters:

<IdPattern>

Usage: Asynchronous command

Manual operation: See "Identifier" on page 751

TRIGger:SBHW:CAN:ITYPe <IdentifierType>

Selects the format of data and remote frames.

Remote frames are not available in the CAN FD protocol.

Parameters:

<IdentifierType> B11 | B29

B11
11-bit identifier (standard format). The instrument triggers on the sample point of the IDE bit.

B29
29-bit identifier (extended format). The instrument triggers on the sample point of the RTR bit.

*RST: B11

Usage: Asynchronous command

Manual operation: See "ID type" on page 752

TRIGger:SBHW:CAN:TYPE <Type>

Selects the trigger type for CAN analysis.

Parameters:

<Type> STOF | EDOF | FTYP | ID | IDDT | ERRC

STOF
STart of Frame: triggers on the first edge of the dominant SOF bit (synchronization bit).

FTYP
Frame type: triggers on a specified frame type and on the identifier format.

ID
Identifier: Sets the trigger to one specific identifier or an identifier range.
To set the identifier, use `TRIGger:SBHW:CAN:ICONdition`, `TRIGger:SBHW:CAN:IMAX`, and `TRIGger:SBHW:CAN:IMIN`.

IDDT
Identifier and data: Combination of identifier and data conditions. To set the identifier condition, use `TRIGger:SBHW:CAN:ICONdition`, `TRIGger:SBHW:CAN:IMIN`, and `TRIGger:SBHW:CAN:IMAX`.
To set the data condition, use `TRIGger:SBHW:CAN:DCONdition` and `TRIGger:SBHW:CAN:DMIN`.

ERRC
Error condition: Define the error types with:
`TRIGger:SBHW:CAN:ACKerror`
`TRIGger:SBHW:CAN:BITSterror`
`TRIGger:SBHW:CAN:CRCerror`
`TRIGger:SBHW:CAN:FORMerror`
`TRIGger:SBHW:CAN:FDATa:SCERror`
*RST: STOF

Usage: Asynchronous command

Manual operation: See "Type" on page 747

TRIGger:SBHW:CAN:XDATa:AF:CONDition <AfOperator>

Sets the comparison condition for the acceptance field to a specific value or a range.

Parameters:
<AfOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, not equal, less than, less or equal than, greater than, greater or equal than. These conditions require one pattern to be set with `TRIGger:SBHW:CAN:XDATa:AF:MIN`.

INRange | OORange
In range / out of range: Set the minimum and maximum value of the range with `TRIGger:SBHW:CAN:XDATa:AF:MIN` and `TRIGger:SBHW:CAN:XDATa:AF:MAX`.

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "AF" on page 753

TRIGger:SBHW:CAN:XDATa:AF:MAX <AfPatternTo>

Sets the end value of an acceptance field if `TRIGger:SBHW:CAN:XDATa:AF:CONDition` is set to `INRange` or `OORange`.

Parameters:
<AfPatternTo> List of comma-separated values

Usage: Asynchronous command

Manual operation: See "AF" on page 753

TRIGger:SBHW:CAN:XDATa:AF:MIN <AfPattern>

Specifies an acceptance field pattern, or sets the start value of a range.

Parameters:
<AfPattern> List of comma-separated values

Usage: Asynchronous command

Manual operation: See "AF" on page 753

TRIGger:SBHW:CAN:XDATa:SDT:CONDition <SdtOperator>

Sets the comparison condition for the service data unit type to a specific value or a range.

Parameters:
<SdtOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, not equal, less than, less or equal than, greater than, greater or equal than. These conditions require one pattern to be set with `TRIGger:SBHW:CAN:XDATa:SDT:MIN`.

INRange | OORange
In range / out of range: Set the minimum and maximum value of the range with `TRIGger:SBHW:CAN:XDATa:SDT:MIN` and `TRIGger:SBHW:CAN:XDATa:SDT:MAX`.

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "SDT" on page 752

TRIGger:SBHW:CAN:XDATa:SDT:MAX <SdtPatternTo>

Sets the end value of a service data unit type range if `TRIGger:SBHW:CAN:XDATa:SDT:CONDition` is set to `INRange` or `OORange`.

Parameters:
<SdtPatternTo> List of comma-separated values

Usage: Asynchronous command

Manual operation: See "SDT" on page 752

TRIGger:SBHW:CAN:XDATa:SDT:MIN <SdtPattern>

Specifies a service data unit type pattern, or sets the start value of a range.

Parameters:
<SdtPattern> List of comma-separated values

Usage: Asynchronous command

Manual operation: See "SDT" on page 752

TRIGger:SBHW:CAN:XDATa:SEC <SEC_Bit>

Sets a value for the simple extended content (SEC) field. It indicates, if the CAN XL data frame uses the CADsec protocol.

Parameters:

<SEC_Bit> ONE | ZERO | DC

*RST: DC

Usage: Asynchronous command

Manual operation: See "SEC" on page 753

TRIGger:SBHW:CAN:XDATa:VCID:CONDition <VcidOperator>

Sets the comparison condition for the VCID to a specific value or a range.

Parameters:

<VcidOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, not equal, less than, less or equal than, greater than, greater or equal than. These conditions require one pattern to be set with `TRIGger:SBHW:CAN:XDATa:VCID:MIN`.

INRange | OORange
In range / out of range: Set the minimum and maximum value of the range with `TRIGger:SBHW:CAN:XDATa:VCID:MIN` and `TRIGger:SBHW:CAN:XDATa:VCID:MAX`.

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "VCID" on page 753

TRIGger:SBHW:CAN:XDATa:VCID:MAX <VcidPatternTo>

Sets the end value of a VCID range if `TRIGger:SBHW:CAN:XDATa:VCID:CONDition` is set to `INRange` or `OORange`.

Parameters:

<VcidPatternTo> List of comma-separated values

Usage: Asynchronous command

Manual operation: See "VCID" on page 753

TRIGger:SBHW:CAN:XDATa:VCID:MIN <VcidPattern>

Specifies a VCID pattern, or sets the start value of a range.

Parameters:

<VcidPattern> List of comma-separated values

Usage: Asynchronous command

Manual operation: See "VCID" on page 753

18.18.13.5 Software trigger

There are two commands for each parameter, that you can use for defining the CAN settings.

For example, to set the *Frame type =CBFF > Field =Data >Data* value you can use one of the following commands:

- `TRIGger:SBSW:CAN:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `TRIGger:SBSW:CAN:DMIN "CBFF", "Data", 01100`
  Defines the parameter by using the frame and field name.

TRIGger:SBSW:CAN:CHKall....1874
TRIGger:SBSW:CAN:CLR....1875
TRIGger:SBSW:CAN:INVert....1875
TRIGger:SBSW:CAN:RST....1875
TRIGger:SBSW:CAN:FRENable....1875
TRIGger:SBSW:CAN:FRAMe<fr>:ENABle....1875
TRIGger:SBSW:CAN:BIT....1875
TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:BIT....1875
TRIGger:SBSW:CAN:DMAX....1876
TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:DMAX....1876
TRIGger:SBSW:CAN:DMIN....1876
TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:DMIN....1876
TRIGger:SBSW:CAN:DOPerator....1877
TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:DOPerator....1877
TRIGger:SBSW:CAN:FIENable....1877
TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:ENABle....1877
TRIGger:SBSW:CAN:IMAX....1877
TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:IMAX....1877
TRIGger:SBSW:CAN:IMIN....1878
TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:IMIN....1878
TRIGger:SBSW:CAN:IOPerator....1878
TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:IOPerator....1878
TRIGger:SBSW:CAN:ERENable....1878
TRIGger:SBSW:CAN:ERRor<m>:ENABle....1878
SBUS<sb>:CAN:SWTindex?....1879
SBUS<sb>:CAN:SWTTime?....1879

TRIGger:SBSW:CAN:CHKall

Enables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 756

TRIGger:SBSW:CAN:CLR

Disables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 756

TRIGger:SBSW:CAN:INVert

Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 756

TRIGger:SBSW:CAN:RST

Presets the state of the selected frames and error types for the software trigger.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 756

TRIGger:SBSW:CAN:FRENable <Frame>,<Enabler>
TRIGger:SBSW:CAN:FRENable? <Enabler>
TRIGger:SBSW:CAN:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 756

TRIGger:SBSW:CAN:BIT <Frame>,<Field>,<Bit>
TRIGger:SBSW:CAN:BIT? <Bit>
TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 756

TRIGger:SBSW:CAN:DMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:CAN:DMAX? <Data>
TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range for the software trigger, if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 756

TRIGger:SBSW:CAN:DMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:CAN:DMIN? <Data>
TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 756

TRIGger:SBSW:CAN:DOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:CAN:DOPerator? <Operator>
TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern of the software trigger in the selected field of the selected frame.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 756

TRIGger:SBSW:CAN:FIENable <Frame>,<Field>,<Enabler>
TRIGger:SBSW:CAN:FIENable? <Enabler>
TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame of the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 756

TRIGger:SBSW:CAN:IMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:CAN:IMAX? <Data>
TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range for the software trigger if the operator is set to `INRange`.

You can set the operator with `TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 756

TRIGger:SBSW:CAN:IMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:CAN:IMIN? <Data>
TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range for the software trigger.

Suffix:

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 756

TRIGger:SBSW:CAN:IOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:CAN:IOPerator? <Operator>
TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame for the software trigger.

Suffix:

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 756

TRIGger:SBSW:CAN:ERENable <ErrorName>,<Enabler>
TRIGger:SBSW:CAN:ERENable? <Enabler>
TRIGger:SBSW:CAN:ERRor<m>:ENABle <Enable>

Defines the error type for the software trigger.

Suffix:
<m> index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 758

SBUS<sb>:CAN:SWTindex?

Queries the software trigger index.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Index> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:SWTTime?

Queries the software trigger time in seconds.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Time> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.13.6 Decode results

SBUS<sb>:CAN:FCOunt? 1880
SBUS<sb>:CAN:FRAMe<fr>:FLDCount? 1880
SBUS<sb>:CAN:FRAMe<fr>:ACKState? 1881
SBUS<sb>:CAN:FRAMe<fr>:ACKValue? 1881
SBUS<sb>:CAN:FRAMe<fr>:FLD<fl>:STATe? 1881
SBUS<sb>:CAN:FRAMe<fr>:FLD<fl>:LABel? 1882

SBUS<sb>:CAN:FRAMe<fr>:FLD<fl>:VALue? 1882
SBUS<sb>:CAN:FRAMe<fr>:FLD<fl>:FVALue? 1883
SBUS<sb>:CAN:FRAMe<fr>:CSSTate? 1883
SBUS<sb>:CAN:FRAMe<fr>:CSValue? 1883
SBUS<sb>:CAN:FRAMe<fr>:DATA? 1884
SBUS<sb>:CAN:FRAMe<fr>:DLCState? 1884
SBUS<sb>:CAN:FRAMe<fr>:DLCValue? 1884
SBUS<sb>:CAN:FRAMe<fr>:IDSTate? 1885
SBUS<sb>:CAN:FRAMe<fr>:IDTYpe? 1885
SBUS<sb>:CAN:FRAMe<fr>:IDValue? 1885
SBUS<sb>:CAN:FRAMe<fr>:NDBYtes? 1886
SBUS<sb>:CAN:FRAMe<fr>:STARt? 1886
SBUS<sb>:CAN:FRAMe<fr>:STATus? 1886
SBUS<sb>:CAN:FRAMe<fr>:STOP? 1887
SBUS<sb>:CAN:FRAMe<fr>:SYMBol? 1887
SBUS<sb>:CAN:FRAMe<fr>:TYPE? 1888
SBUS<sb>:CAN:FRAMe<fr>:XDATa<o>:AF? 1888
SBUS<sb>:CAN:FRAMe<fr>:XDATa<o>:PCRC? 1888
SBUS<sb>:CAN:FRAMe<fr>:SBC? 1889
SBUS<sb>:CAN:FRAMe<fr>:XDATa<o>:SDT? 1889
SBUS<sb>:CAN:FRAMe<fr>:XDATa<o>:SEC? 1889
SBUS<sb>:CAN:FRAMe<fr>:XDATa<o>:VCID? 1890
SBUS<sb>:CAN:FRAMe<fr>:FDATa<o>:ESI? 1890
SBUS<sb>:CAN:FRAMe<fr>:FDATa<o>:BRS? 1891
SBUS<sb>:CAN:FRAMe<fr>:DBITrate? 1891
SBUS<sb>:CAN:FRAMe<fr>:NBITrate? 1891
SBUS<sb>:CAN:FRAMe<fr>:XDATa<o>:FCRC? 1892

SBUS<sb>:CAN:FCOunt?

Returns the number of decoded frames for the CAN protocol analysis.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count> Total number of frames.

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:FLDCount?

Returns the number of fields in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:ACKState?

Return the states of the acknowledgment field.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameAckState> OK | ERRor | UNDF

UNDF: Undefined

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:ACKValue?

Returns the value of the acknowledge slot for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameAckValue> Range: 0 to 1
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:FLD<fl>:STATe?

Returns the state of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> *
Selects the field number.

Return values:
<State> OK | EOFD | ACKD | NOACk | CRCD | CRC | SERRror | FORM | BTST | UNKNown | INComplete

OK
The field has no error, it is valid.

EOFD
Wrong end of field

ACKD
Acknowledgment delimiter error

NOACk
Field acknowledgment is missing

CRCD
Checksum delimiter error

CRC
Checksum error, cyclic redundancy check failed

SERRror
Stuff count error (CAN-FD ISO only)

FORM
Fixed-bit form error

BTST
Bit stuffing error

UNKNown
State unknown

INComplete
Field not completely contained in the acquisition.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:FLD<fl>:LABel?

Returns the label of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Label>

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:FLD<fl>:VALue?

Returns the value of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> *
Index of the field

Return values:
<Value> Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:FLD<fl>:FVALue?

Returns the formatted value of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<FormattedValue>

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:CSSTate?

Return the states of the checksum field (CRC).

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<ChecksumState> OK | ERRor | UNDF
*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:CSValue?

Returns the CRC sequence value of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<ChecksumValue> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:DATA?

Returns the data of the specified frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<Count> Comma-separated list of values. The first value is the number of bytes, followed by the values of the data bytes.

<Values>

Example:
```
BUS1:CAN:FRAMe2:DATA?
--> 3,208,231,32
```
Returns the data of the 2nd frame: the number of data bytes is 3 (see 1st value).

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:DLCState?

Return the states of the state of data length code.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameDLCState> OK | ERRor | UNDF
*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:DLCValue?

Returns the data length code of the selected frame - the number of data bytes in the frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameDLCValue> Range: 0 to 2047
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:IDSTate?

Return the states of the identifier state.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<IdtfSt> OK | ERRor | UNDF
UNDF: Undefined
*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:IDTYpe?

Returns the identifier type of the selected frame, the identifier format of data and remote frames.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<IdentifierType> B11 | B29
B11: standard format, 11 bit
B29: extended format, 29 bit
*RST: B11

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:IDValue?

Returns the identifier value of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<IdtfVal> Range: 0 to 536870911
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:NDBYtes?

Returns the number of data bytes.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<NDBytes> Range: 0 to 2048
Increment: 1
*RST: 1

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:STARt?

Return the start time of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:STATus?

Returns the overall state of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameState> OK | EOFD | ACKD | NOACk | CRCD | CRC | SERRror | FORM | BTST | UNKNown | INComplete

`OK`: the frame is valid.
`EOFD`: Wrong end of frame.
`ACKD`: Wrong ACK delimiter occurred.
`NOACK`: Acknowledge is missing.
`CRCD`: Wrong CRC delimiter occurred.
`CRC`: Cyclic redundancy check failed.
`SERRror`: Stuff count error (CAN FD ISO only).
`FORM`: Fixed-bit form error.
`BTST`: Bit stuffing error occurred.
`INSufficient`: The frame is not completely contained in the acquisition. The acquired part of the frame is valid.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:STOP?

Return the stop time of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:SYMBol?

Returns the symbol of the specified frame if the label list is enabled.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<Label> String with symbol of the identifier

Example: `BUS:CAN:FRAMe:SYMBol?`
Response: `Temperature`

Usage: Query only

SBUS<sb>:CAN:FRAMe<fr>:TYPE?

Returns the frame type of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameType> CBFF | CBFR | CEFF | CEFR | FBFF | FEFF | XLFF | ERRor | OVERload | UNDefined

`CBFF`: classical base frame format data
`CBFRemote`: classical base frame format remote
`CEFF`: classical extended frame format data
`CEFRemote`: classical extended frame format remote
`FBFF`: FD base frame format
`FEFF`: FD extended frame format
`XLFF`: XL frame format
`ERR`: error
`OVLD`: overload

*RST: CBFF

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:XDATa<o>:AF?

Returns the value of the acceptance field for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<o> Index of the field

Return values:
<AF> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:XDATa<o>:PCRC?

Returns the value of the preamble cyclic redundant check (PCRC) for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<o> Index of the field

Return values:
<PCRC> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:SBC?

Returns the value of the stuff bit count (SBC) field for the selected CAN XL frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<SBC> Range: 0 to 15
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:XDATa<o>:SDT?

Returns the value of the service data unit field for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<o> Index of the field

Return values:
<SDT> Range: 0 to 255
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:XDATa<o>:SEC?

Returns the value of the simple extended content (SEC) field for the selected CAN XL frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<o> Index of the field

Return values:
<SEC> Range: 0 to 1
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:XDATa<o>:VCID?

Returns the value of the VCID field for the selected CAN XL frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<o> Index of the field

Return values:
<VCID> Range: 0 to 255
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:FDATa<o>:ESI?

Returns the value of the error state indicator (ESI) field for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<o> Index of the field

Return values:
<ESI> Range: 0 to 1
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:FDATa<o>:BRS?

Returns the value of the bit rate switch (BRS) field for the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<o> Index of the field

Return values:

<BRS> Range: 0 to 1
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:DBITrate?

Returns the data bit rate of the frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<DataBitRate> Increment: 100
*RST: 0
Default unit: bps

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:NBITrate?

Returns the nominal bit rate of the frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<NominalBitRate> Increment: 1
*RST: 0
Default unit: bps

Usage: Query only
Asynchronous command

SBUS<sb>:CAN:FRAMe<fr>:XDATa<o>:FCRC?

Returns the value of the frame CRC for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<o> Index of the field

Return values:
<FCRC> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

18.18.14 LIN (option R&S MXO5-K520)

Before MXO 5 can accept the specific bus commands, make sure that:

- The decoding of the specified bus is enabled with `SBUS<sb>[:STATe]`.
- The bus is set to the correct type with `SBUS<sb>:TYPE`.

- Configuration....1892
- Filter....1895
- Format....1901
- Hardware trigger....1910
- Software trigger....1913
- Decode results....1919

18.18.14.1 Configuration

SBUS<sb>:LIN:BITRate....1892
SBUS<sb>:LIN:DATA:HYSTeresis....1893
SBUS<sb>:LIN:DATA:SOURce....1893
SBUS<sb>:LIN:DATA:THReshold....1893
SBUS<sb>:LIN:POLarity....1894
SBUS<sb>:LIN:STANdard....1894
SBUS<sb>:LIN:POSition....1894
SBUS<sb>:LIN:SCALe....1894
SBUS<sb>:LIN:NEWList....1895
SBUS<sb>:LIN:SYMBols....1895

SBUS<sb>:LIN:BITRate <Bitrate>

Sets the number of transmitted bits per second. The maximum bit rate for LIN is 20 kbit/s.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Bitrate> Range: 1000 to 20000000
Increment: 1
*RST: 9600
Default unit: bps

Usage: Asynchronous command

Manual operation: See "Bit rate" on page 764

SBUS<sb>:LIN:DATA:HYSTeresis <Hysteresis>

Sets a value for the hysteresis for the data channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 765

SBUS<sb>:LIN:DATA:SOURce <DataSource>

Sets the waveform of the data line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DataSource> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Data" on page 764

SBUS<sb>:LIN:DATA:THReshold <Threshold>

Sets a user-defined threshold value for the data channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Threshold>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 765

SBUS<sb>:LIN:POLarity <Polarity>

Defines the idle state of the bus. The idle state is the recessive state and corresponds to a logic 1.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Polarity> IDLLow | IDLHigh
*RST: IDLHigh

Usage: Asynchronous command

Manual operation: See "Polarity" on page 764

SBUS<sb>:LIN:STANdard <Standard>

Selects the version of the LIN standard.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Standard> V1X | V2X | J2602 | AUTO
*RST: AUTO

Usage: Asynchronous command

Manual operation: See "LIN standard" on page 764

SBUS<sb>:LIN:POSition <LIN position>

Sets the vertical position of the LIN signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<LIN position>

Usage: Asynchronous command

SBUS<sb>:LIN:SCALe <LIN scale>

Set the vertical scale of the indicated LIN signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<LIN scale>

Usage: Asynchronous command

SBUS<sb>:LIN:NEWList <FileName>

Loads a symbol list file.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName> String parameter with path and file name.

Example:
```
SBUS1:LIN:NEWList
'/home/storage/userData/Protocol/LIN.csv'
SBUS1:LIN:SYMBols ON
```

Usage: Setting only
Asynchronous command

SBUS<sb>:LIN:SYMBols <ShowSymbols>

Activates the symbol list to be used for decoding.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<ShowSymbols> OFF | ON
*RST: OFF

Usage: Asynchronous command

18.18.14.2 Filter

There are two commands for each parameter, that you can use for defining the LIN settings.

For example, to set the *Frame type =Data > Field =Id >00* value you can use one of the following commands:

- `SBUS:LIN:FILTer:FRAMe1:FLD1:DMIN 00`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `SBUS:LIN:FILTer:DMIN "Data", "Id", 00`
  Defines the parameter by using the frame and field name.

SBUS<sb>:LIN:FILTer:CHKall ... 1896
SBUS<sb>:LIN:FILTer:CLR ... 1896
SBUS<sb>:LIN:FILTer:INVert ... 1896
SBUS<sb>:LIN:FILTer:RST ... 1897
SBUS<sb>:LIN:FILTer:BIT ... 1897
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:BIT ... 1897
SBUS<sb>:LIN:FILTer:DMAX ... 1897

SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:DMAX ... 1897
SBUS<sb>:LIN:FILTer:DMIN ... 1898
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:DMIN ... 1898
SBUS<sb>:LIN:FILTer:DOPerator ... 1898
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:DOPerator ... 1898
SBUS<sb>:LIN:FILTer:ERENable ... 1898
SBUS<sb>:LIN:FILTer:ERRor<n>:ENABle ... 1898
SBUS<sb>:LIN:FILTer:FIENable ... 1899
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:ENABle ... 1899
SBUS<sb>:LIN:FILTer:FRENable ... 1899
SBUS<sb>:LIN:FILTer:FRAMe<fr>:ENABle ... 1899
SBUS<sb>:LIN:FILTer:IMAX ... 1899
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:IMAX ... 1899
SBUS<sb>:LIN:FILTer:IMIN ... 1900
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:IMIN ... 1900
SBUS<sb>:LIN:FILTer:IOPerator ... 1900
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:IOPerator ... 1900

SBUS<sb>:LIN:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 766

SBUS<sb>:LIN:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 766

SBUS<sb>:LIN:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 766

SBUS<sb>:LIN:FILTer:RST

Presets the state of the selected frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 766

SBUS<sb>:LIN:FILTer:BIT <Frame>,<Field>,<Bit>
SBUS<sb>:LIN:FILTer:BIT? <Bit>
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 767

SBUS<sb>:LIN:FILTer:DMAX <Frame>,<Field>,<Data>
SBUS<sb>:LIN:FILTer:DMAX? <Data>
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORANGe`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 767

SBUS<sb>:LIN:FILTer:DMIN <Frame>,<Field>,<Data>
SBUS<sb>:LIN:FILTer:DMIN? <Data>
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 767

SBUS<sb>:LIN:FILTer:DOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:LIN:FILTer:DOPerator? <Operator>
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 767

SBUS<sb>:LIN:FILTer:ERENable <ErrorName>,<Enabler>
SBUS<sb>:LIN:FILTer:ERENable? <Enabler>
SBUS<sb>:LIN:FILTer:ERRor<n>:ENABle <Enable>

Defines the error type to be filtered on.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> index of the error

Parameters:
<Enable> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 768

SBUS<sb>:LIN:FILTer:FIENable <Frame>,<Field>,<Enabler>
SBUS<sb>:LIN:FILTer:FIENable? <Enabler>
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 767

SBUS<sb>:LIN:FILTer:FRENable <Frame>,<Enabler>
SBUS<sb>:LIN:FILTer:FRENable? <Enabler>
SBUS<sb>:LIN:FILTer:FRAMe<fr>:ENABle <Enable>

Enables the filtering on LIN frames. Only the frames that match the selected filter conditions are displayed.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Enable> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 767

SBUS<sb>:LIN:FILTer:IMAX <Frame>,<Field>,<Data>
SBUS<sb>:LIN:FILTer:IMAX? <Data>
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if the operator is set to `INRange`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 767

SBUS<sb>:LIN:FILTer:IMIN <Frame>,<Field>,<Data>
SBUS<sb>:LIN:FILTer:IMIN? <Data>
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 767

SBUS<sb>:LIN:FILTer:IOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:LIN:FILTer:IOPerator? <Operator>
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 767

18.18.14.3 Format

This section describes the commands to specify and query frame formats for the "LIN" protocol.

SBUS<sb>:LIN:FORMat:SELect....1901
SBUS<sb>:LIN:FORMat:ADDFrame....1902
SBUS<sb>:LIN:FORMat:LOAD....1902
SBUS<sb>:LIN:FORMat:SAVE....1902
SBUS<sb>:LIN:FORMat:CLR....1902
SBUS<sb>:LIN:FORMat:FCOunt?....1903
SBUS<sb>:LIN:FORMat:FRAMe<fr>:ADDField....1903
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLDCount?....1903
SBUS<sb>:LIN:FORMat:FRAMe<fr>:NAME....1903
SBUS<sb>:LIN:FORMat:FRAMe<fr>:COLor....1904
SBUS<sb>:LIN:FORMat:FRAMe<fr>:TYPE....1904
SBUS<sb>:LIN:FORMat:FRAMe<fr>:ID1Field....1904
SBUS<sb>:LIN:FORMat:FRAMe<fr>:ID2Field....1904
SBUS<sb>:LIN:FORMat:FRAMe<fr>:ID3Field....1904
SBUS<sb>:LIN:FORMat:FRAMe<fr>:ID1Value....1905
SBUS<sb>:LIN:FORMat:FRAMe<fr>:ID2Value....1905
SBUS<sb>:LIN:FORMat:FRAMe<fr>:ID3Value....1905
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:NAME....1905
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:COLor....1905
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:FSTBit....1906
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:BITCount....1906
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:REPetition....1906
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:BITorder....1907
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:FORMat....1907
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:ADDValue....1908
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue....1908
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel....1909
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:UNIT....1909
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:PARA....1909
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:PARB....1909

SBUS<sb>:LIN:FORMat:SELect <Select>

Enables the format configuration

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Select> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show format" on page 768

SBUS<sb>:LIN:FORMat:ADDFrame

Appendes a new frame format to the frame list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Add frame" on page 769

SBUS<sb>:LIN:FORMat:LOAD <FileName>

Loads a the specified XML file with a list of frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Open" on page 769

SBUS<sb>:LIN:FORMat:SAVE <FileName>

Saves the current list of frame formats to an XML file with the specified name.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Save as" on page 770

SBUS<sb>:LIN:FORMat:CLR

Erases from the volatile memory all field descriptions and frame formats that you have created.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Edit list" on page 769

SBUS<sb>:LIN:FORMat:FCOunt?

Returns the number of available frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Edit list" on page 769

SBUS<sb>:LIN:FORMat:FRAMe<fr>:ADDField

Appends a new field description to the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Usage: Setting only
Asynchronous command

Manual operation: See "Add field" on page 770

SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLDCount?

Returns the number of field descriptions available for the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:LIN:FORMat:FRAMe<fr>:NAME <Name>

Specifies the name for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Frame name" on page 770

SBUS<sb>:LIN:FORMat:FRAMe<fr>:COLor <Color>

Specifies the color for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4278255615

Usage: Asynchronous command

Manual operation: See "Frame color" on page 770

SBUS<sb>:LIN:FORMat:FRAMe<fr>:TYPE <Type>

Sets an original frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Type>

Usage: Asynchronous command

Manual operation: See "Frame type" on page 770

SBUS<sb>:LIN:FORMat:FRAMe<fr>:ID1Field <ID1Field>
SBUS<sb>:LIN:FORMat:FRAMe<fr>:ID2Field <ID2Field>
SBUS<sb>:LIN:FORMat:FRAMe<fr>:ID3Field <ID3Field>

Sets the identifying field type for the configured frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Field>

Usage: Asynchronous command

Manual operation: See "ID<n> field" on page 770

SBUS<sb>:LIN:FORMat:FRAMe<fr>:ID1Value <ID1Value>
SBUS<sb>:LIN:FORMat:FRAMe<fr>:ID2Value <ID2Value>
SBUS<sb>:LIN:FORMat:FRAMe<fr>:ID3Value <ID3Value>

Sets the value of the corresponding field type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Value>

Usage: Asynchronous command

Manual operation: See "ID<n> value" on page 770

SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:NAME <Name>

Specifies the name for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Field name" on page 771

SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:COLor <Color>

Specifies the color for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4294967040

Usage: Asynchronous command

Manual operation: See "Field color" on page 771

SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:FSTBit <FirstBit>

In order of transmission, sets the first bit of the specified field in the payload.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<FirstBit> Range: 0 to 63
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "First bit" on page 771

SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:BITCount <BitCount>

Specifies the bit count, hence length, of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitCount> Range: 1 to 64
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Bit count" on page 771

SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:REPetition <Repetition>

Sets the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Repetition> Range: 0 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Repetition" on page 772

SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:BITorder <BitOrder>

Specifies, in which order the algorithm evaluates the bits of the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitOrder> LSBF | MSBF

LSBF
Least significant bit first

MSBF
Most significant bit first

*RST: MSBF

Usage: Asynchronous command

Manual operation: See "Bit order" on page 772

SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:FORMat <NumericFormat>

Specifies the numerical format for the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<NumericFormat> HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG | DEC | LIST | FLIN

HEX
Hexadecimal format

OCT
Octal format

BIN
Binary format

ASCII = ASCii
ASCII format

SIGN
Signed, decimal format

DEC=USIG
Unsigned, decimal format

LIST
Value list

FLIN
Linear function

*RST: HEX

Usage: Asynchronous command

Manual operation: See "Numeric format" on page 772

SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:ADDValue

Creates a new hexagonal value for customization.

Available if `SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Related commands:

`SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue`

`SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel`

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Usage: Setting only
Asynchronous command

Manual operation: See "Add value" on page 773

SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue <Value>

Sets the hexagonal value to convert it into a labeled state.

Available if `SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:

<Value> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Value" on page 773

SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel <Label>

Sets the label to convert the corresponding hexagonal value to a labeled state.

Available if `SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:

<Label>

Usage: Asynchronous command

Manual operation: See "Label" on page 773

SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:UNIT <Unit>

Sets the unit for the linear function.

Available if `SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Unit>

Usage: Asynchronous command

Manual operation: See "Unit" on page 773

SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:PARA <ParameterA>
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:PARB <ParameterB>

Sets the parameters of the linear function.

- Parameter A: Slope (rate of change)

- Parameter B: Offset

Available if SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:FORMat = FLIN.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<ParameterB> Range: -1E+20 to 1E+20
Increment: 1E-12
*RST: 0

Usage: Asynchronous command

Manual operation: See "Parameter A,B" on page 773

18.18.14.4 Hardware trigger

Trigger commands for serial buses affect the current trigger source. Therefore, set the trigger source to the required serial bus with TRIGger:EVENt<ev>:SOURce before sending the bus-specific trigger commands.

TRIGger:SBHW:LIN:TYPE....1910
TRIGger:SBHW:LIN:SYERror....1911
TRIGger:SBHW:LIN:IPERror....1911
TRIGger:SBHW:LIN:IMIN....1911
TRIGger:SBHW:LIN:IMAX....1912
TRIGger:SBHW:LIN:ICONdition....1912
TRIGger:SBHW:LIN:DPOSition....1912
TRIGger:SBHW:LIN:DMIN....1912
TRIGger:SBHW:LIN:DCONdition....1913
TRIGger:SBHW:LIN:CHKSerror....1913

TRIGger:SBHW:LIN:TYPE <Type>

Selects the trigger type for LIN analysis.

Parameters:
<Type> STARtframe | ID | IDDT | WKFR | ERRC

STARtframe
Start of the frame. Triggers on the stop bit of the sync field.

ID
Sets the trigger to one specific identifier or an identifier range.

IDDT
Combination of identifier and data conditions.

WKFR
Wake-up frame.

ERRC
Error condition. Define the error types with:
`TRIGger:SBHW:LIN:CHKSerror`
`TRIGger:SBHW:LIN:IPERror`
`TRIGger:SBHW:LIN:SYERror`
*RST: STARtframe

Usage: Asynchronous command

Manual operation: See "Type" on page 774

TRIGger:SBHW:LIN:SYERror <SyncError>

Triggers if a synchronization error occurs.

Available, if `TRIGger:SBHW:LIN:TYPE` is set to `ERRC`.

Parameters:
<SyncError> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error conditions" on page 775

TRIGger:SBHW:LIN:IPERror <IdParityError>

Triggers if an error occurs in the identifier parity bits. The parity bits are the bits 6 and 7 of the identifier.

Available, if `TRIGger:SBHW:LIN:TYPE` is set to `ERRC`.

Parameters:
<IdParityError> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error conditions" on page 775

TRIGger:SBHW:LIN:IMIN <IdPattern>

Specifies a secondary identifier pattern, or sets the start value of an identifier range.

Parameters:
<IdPattern>

Usage: Asynchronous command

Manual operation: See "Identifier setup: Condition, Frame ID min, Frame ID max" on page 775

TRIGger:SBHW:LIN:IMAX <IdPattern>

Sets the end value of an identifier range if `TRIGger:SBHW:LIN:ICONdition` is set to `INRange` or `OORange`.

Parameters:
<IdPattern>

Usage: Asynchronous command

Manual operation: See "Identifier setup: Condition, Frame ID min, Frame ID max" on page 775

TRIGger:SBHW:LIN:ICONdition <IdOperator>

Sets the operator to set a specific identifier or an identifier range.

Parameters:
<IdOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
Equal, not equal, less than, less or equal than, greater than, greater or equal than. These conditions require one identifier pattern to be set with `TRIGger:SBHW:LIN:IMIN`.

INRange | OORange
In range / out of range: Set the minimum and maximum value of the range with `TRIGger:SBHW:LIN:IMIN` and `TRIGger:SBHW:LIN:IMAX`.

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Identifier setup: Condition, Frame ID min, Frame ID max" on page 775

TRIGger:SBHW:LIN:DPOSition <DataPosition>

Sets the number of data events that are ignored, before trigger condition check of the data starts.

Parameters:
<DataPosition> Range: 1 to 4096
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Data setup: Condition, Pattern, Position" on page 775

TRIGger:SBHW:LIN:DMIN <DataPattern>

Specifies a data pattern, or sets the start value of a data pattern range.

Parameters:
<DataPattern>

Usage: Asynchronous command

Manual operation: See "Data setup: Condition, Pattern, Position" on page 775

TRIGger:SBHW:LIN:DCONdition <DataOperator>

Sets the operator to set a specific data pattern or a data pattern range.

Parameters:
<DataOperator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan
*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Data setup: Condition, Pattern, Position" on page 775

TRIGger:SBHW:LIN:CHKSerror <ChecksumError>

Triggers on checksum errors.

Available, if `TRIGger:SBHW:LIN:TYPE` is set to `ERRC`.

Parameters:
<ChecksumError> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error conditions" on page 775

18.18.14.5 Software trigger

There are two commands for each parameter, that you can use for defining the LIN settings.

For example, to set the *Frame type =Data > Field =Id >00* value you can use one of the following commands:

- `TRIGger:SBSW:LIN:FRAMe1:FLD1:DMIN 00`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `TRIGger:SBSW:LIN:DMIN "Data", "Id", 00`
  Defines the parameter by using the frame and field name.

TRIGger:SBSW:LIN:CHKall....1914
TRIGger:SBSW:LIN:CLR....1914
TRIGger:SBSW:LIN:INVert....1914
TRIGger:SBSW:LIN:RST....1914
TRIGger:SBSW:LIN:FRENable....1915
TRIGger:SBSW:LIN:FRAMe<fr>:ENABle....1915
TRIGger:SBSW:LIN:BIT....1915

TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:BIT....1915
TRIGger:SBSW:LIN:DMAX....1915
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:DMAX....1915
TRIGger:SBSW:LIN:DMIN....1916
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:DMIN....1916
TRIGger:SBSW:LIN:DOPerator....1916
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:DOPerator....1916
TRIGger:SBSW:LIN:FIENable....1916
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:ENABle....1916
TRIGger:SBSW:LIN:IMAX....1917
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:IMAX....1917
TRIGger:SBSW:LIN:IMIN....1917
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:IMIN....1917
TRIGger:SBSW:LIN:IOPerator....1918
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:IOPerator....1918
TRIGger:SBSW:LIN:ERENable....1918
TRIGger:SBSW:LIN:ERRor<m>:ENABle....1918
SBUS<sb>:LIN:SWTindex?....1918
SBUS<sb>:LIN:SWTTime?....1919

TRIGger:SBSW:LIN:CHKall

Enables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 777

TRIGger:SBSW:LIN:CLR

Disables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 777

TRIGger:SBSW:LIN:INVert

Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 777

TRIGger:SBSW:LIN:RST

Presets the state of the selected frames and error types for the software trigger.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 777

TRIGger:SBSW:LIN:FRENable <Frame>,<Enabler>
TRIGger:SBSW:LIN:FRENable? <Enabler>
TRIGger:SBSW:LIN:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 777

TRIGger:SBSW:LIN:BIT <Frame>,<Field>,<Bit>
TRIGger:SBSW:LIN:BIT? <Bit>
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 778

TRIGger:SBSW:LIN:DMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:LIN:DMAX? <Data>
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range for the software trigger, if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 778

TRIGger:SBSW:LIN:DMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:LIN:DMIN? <Data>
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 778

TRIGger:SBSW:LIN:DOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:LIN:DOPerator? <Operator>
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern of the software trigger in the selected field of the selected frame.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 778

TRIGger:SBSW:LIN:FIENable <Frame>,<Field>,<Enabler>
TRIGger:SBSW:LIN:FIENable? <Enabler>
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame of the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 778

TRIGger:SBSW:LIN:IMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:LIN:IMAX? <Data>
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range for the software trigger if the operator is set to `INRange`.

You can set the operator with `TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 778

TRIGger:SBSW:LIN:IMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:LIN:IMIN? <Data>
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 778

TRIGger:SBSW:LIN:IOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:LIN:IOPerator? <Operator>
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 778

TRIGger:SBSW:LIN:ERENable <ErrorName>,<Enabler>
TRIGger:SBSW:LIN:ERENable? <Enabler>
TRIGger:SBSW:LIN:ERRor<m>:ENABle <Enable>

Defines the error type for the software trigger.

Suffix:
<m> Index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 779

SBUS<sb>:LIN:SWTindex?

Queries the software trigger index.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Index> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:LIN:SWTTime?

Queries the software trigger time in seconds.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Time> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.14.6 Decode results

The following section describes the commands used for querying the results of the LIN decoding.

SBUS<sb>:LIN:FCOunt? 1919
SBUS<sb>:LIN:FRAMe<fr>:FLDCount? 1920
SBUS<sb>:LIN:FRAMe<fr>:BITRate? 1920
SBUS<sb>:LIN:FRAMe<fr>:FLD<fl>:STATe? 1920
SBUS<sb>:LIN:FRAMe<fr>:FLD<fl>:VALue? 1921
SBUS<sb>:LIN:FRAMe<fr>:FLD<fl>:FVALue? 1921
SBUS<sb>:LIN:FRAMe<fr>:FLD<fl>:LABel? 1921
SBUS<sb>:LIN:FRAMe<fr>:CSValue? 1922
SBUS<sb>:LIN:FRAMe<fr>:DATA? 1922
SBUS<sb>:LIN:FRAMe<fr>:IDPValue? 1922
SBUS<sb>:LIN:FRAMe<fr>:IDValue? 1923
SBUS<sb>:LIN:FRAMe<fr>:STARt? 1923
SBUS<sb>:LIN:FRAMe<fr>:STATus? 1923
SBUS<sb>:LIN:FRAMe<fr>:STOP? 1924
SBUS<sb>:LIN:FRAMe<fr>:SYMBol? 1924
SBUS<sb>:LIN:FRAMe<fr>:PIDentifier? 1924

SBUS<sb>:LIN:FCOunt?

Returns the number of decoded frames.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count> Total number of decoded frames.

Usage: Query only
Asynchronous command

SBUS<sb>:LIN:FRAMe<fr>:FLDCount?

Returns the number of fields in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count> Total number of fields.

Usage: Query only
Asynchronous command

SBUS<sb>:LIN:FRAMe<fr>:BITRate?

Returns the primary bit rate.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<PrimaryBitRate> Increment: 1
*RST: 0
Default unit: bps

Usage: Query only
Asynchronous command

SBUS<sb>:LIN:FRAMe<fr>:FLD<fl>:STATe?

Returns the state of the specified field.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<State> OK | WAKeup | CHCKsum | PRERror | STERror | SYERror | LNERror | UNK | INComplete

OK
The field has no error, it is valid.

WAKeup
Wakeup bit missing

CHCKsum
Checksum error

PRERror
Parity error, incorrect parity bit

STERror
Start error, incorrect start bit

SYERror
Synchronization error, incorrect synchronization bit

LNERror
Length error

UNKNown
State unknown

INComplete
Field not completely contained in the acquisition.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:LIN:FRAMe<fr>:FLD<fl>:VALue?

Returns the value of the specified field.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Value> Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:LIN:FRAMe<fr>:FLD<fl>:FVALue?

Returns the formatted value of the specified field.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<FormattedValue>

Usage: Query only
Asynchronous command

SBUS<sb>:LIN:FRAMe<fr>:FLD<fl>:LABel?

Returns the label of the fields in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Label>

Usage: Query only
Asynchronous command

SBUS<sb>:LIN:FRAMe<fr>:CSValue?

Returns the checksum value of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<ChecksumValue> Range: 0 to 255
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:LIN:FRAMe<fr>:DATA?

Returns the data bytes of the specified frame in comma-separated values.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

<Values>

Example:
```
BUS:LIN:FRAMe4:DATA?
<-- 4,118,39,71,123
```

Usage: Query only
Asynchronous command

SBUS<sb>:LIN:FRAMe<fr>:IDPValue?

Returns the value of the identifier parity bits of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<IdtfParVal> Range: 0 to 3
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:LIN:FRAMe<fr>:IDValue?

Returns the identifier value of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<IdtfVal> Range: 0 to 63
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:LIN:FRAMe<fr>:STARt?

Returns the start time of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:LIN:FRAMe<fr>:STATus?

Returns the overall state of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameState> OK | WAKeup | CHCKsum | PRERror | STERror | SYERror | LNERror | UNK | INComplete

`WAKeup`: wake-up frame.
`CHCKsum`: checksum error
`PRERror`: parity error in identifier
`STERror`: stop error
`SYERror`: synchronization error
`LNERror`: unexpected length
`UNK`: unknown error

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:LIN:FRAMe<fr>:STOP?

Returns the stop time of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:LIN:FRAMe<fr>:SYMBol?

Returns the symbolic label of the specified frame if the label list is enabled.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<Symbol>

Usage: Query only
Asynchronous command

SBUS<sb>:LIN:FRAMe<fr>:PIDentifier?

Returns the protected identifier of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Protected identifer> Range: 0 to 255
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

18.18.15 SENT (option R&S MXO5-K520)

Before MXO 5 can accept the specific bus commands, make sure that:

- The decoding of the specified bus is enabled with `SBUS<sb>[:STATe]`.
- The bus is set to the correct type with `SBUS<sb>:TYPE`.

- Configuration....1925
- Filter....1931
- Format....1937
- Software trigger....1946
- Decode results....1952

18.18.15.1 Configuration

SBUS<sb>:SENT:CLKPeriod....1925
SBUS<sb>:SENT:CLKTolerance....1926
SBUS<sb>:SENT:CRCMethod....1926
SBUS<sb>:SENT:CRCVersion....1926
SBUS<sb>:SENT:DATA:HYSTeresis....1927
SBUS<sb>:SENT:DATA:SOURce....1927
SBUS<sb>:SENT:DATA:THReshold....1927
SBUS<sb>:SENT:DNIBbles....1928
SBUS<sb>:SENT:MODE....1928
SBUS<sb>:SENT:NEWList....1928
SBUS<sb>:SENT:POSition....1929
SBUS<sb>:SENT:PPFLength....1929
SBUS<sb>:SENT:PPULse....1929
SBUS<sb>:SENT:RDSL....1930
SBUS<sb>:SENT:SCALe....1930
SBUS<sb>:SENT:SFORmat....1930
SBUS<sb>:SENT:SWTindex?....1930
SBUS<sb>:SENT:SWTTime?....1931
SBUS<sb>:SENT:SYMBols....1931

SBUS<sb>:SENT:CLKPeriod <ClockPeriod>

Sets the transmitter-specific nominal clock period (clock tick).

The clock period and signal length determine the speed of transmission.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<ClockPeriod> Range: 1E-06 to 0.0001
Increment: 1E-06
*RST: 6E-06
Default unit: s

Usage: Asynchronous command

Manual operation: See "Clock period" on page 787

SBUS<sb>:SENT:CLKTolerance <ClockTolerance>

Specifies a tolerated deviation of the clock.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<ClockTolerance> Range: 1 to 25
Increment: 1
*RST: 20
Default unit: %

Usage: Asynchronous command

Manual operation: See "Clock tolerance" on page 787

SBUS<sb>:SENT:CRCMethod <CRCCalculation>

Selects the method for CRC calculation.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<CRCCalculation> SAEJ | TLE
`SAEJ`: SAE_J2716
`TLE`: TLE_4998X
*RST: SAEJ

Usage: Asynchronous command

Manual operation: See "CRC calculation" on page 788

SBUS<sb>:SENT:CRCVersion <CRCVersion>

Selects the version the CRC check is based on.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<CRCVersion> LEGA | V2010
LEGA: Legacy
V2010: v2010/v2016
*RST: V2010

Usage: Asynchronous command

Manual operation: See "CRC version" on page 788

SBUS<sb>:SENT:DATA:HYSTeresis <SDATA Hyst>

Sets the hysteresis for the data channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SDATA Hyst>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 788

SBUS<sb>:SENT:DATA:SOURce <DataSource>

Sets the source of the data line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DataSource> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Data" on page 787

SBUS<sb>:SENT:DATA:THReshold <SDATA Thres>

Sets the threshold for the data channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SDATA Thres>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 788

SBUS<sb>:SENT:DNIBbles <DataNibbles>

Sets the number of data units in a single transmission sequence.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DataNibbles> Range: 1 to 6
Increment: 1
*RST: 6

Usage: Asynchronous command

Manual operation: See "Data nibbles" on page 787

SBUS<sb>:SENT:MODE <Mode>

Selects the operating mode of the SENT protocol.

If `Legacy` is selected, the SPC mode is not supported.

If `SPC` mode is selected, the SENT protocol allows for the calibration of a sensor's output by sending a single calibrated value.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Mode> LEGacy | SPC
*RST: LEGacy

Usage: Asynchronous command

Manual operation: See "Mode" on page 787

SBUS<sb>:SENT:NEWList <FileName>

Loads a symbol list file.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName> String parameter with path and file name.

Example:
```
SBUS1:SENT:NEWList
'/home/storage/userData/Protocol/SENT.csv'
SBUS1:SENT:SYMBols ON
```

Usage: Setting only
Asynchronous command

SBUS<sb>:SENT:POSition <SENT position>

Sets the vertical position of the SENT signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SENT position>

Usage: Asynchronous command

SBUS<sb>:SENT:PPFLength <FrameLength>

Specifies the fixed frame length in terms of ticks, which requires setting the pause pulse (`SBUS<sb>:SENT:PPULse`) to `PPFL`.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<FrameLength> Range: 104 to 922
Increment: 1
*RST: 256

Usage: Asynchronous command

Manual operation: See "Frame length" on page 788

SBUS<sb>:SENT:PPULse <PausePulse>

Determines whether a pause pulse is transmitted after the checksum nibble.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<PausePulse> NPP | PP | PPFL

NPP
No pause pulse is transmitted.

PP
Enables transmitting a pause pulse.

PPFL
A pause pulse is transmitted to achieve a fixed frame length, which is specified by `SBUS<sb>:SENT:PPFLength`.

*RST: NPP

Usage: Asynchronous command

Manual operation: See "Pause pulse" on page 788

SBUS<sb>:SENT:RDSL <RessDispSel>

Selects the results to be displayed.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<RessDispSel> TRSQ | SMSG | ALL
`TRSQ`: transmission sequence
`SMSG`: serial messages
*RST: ALL

Usage: Asynchronous command

SBUS<sb>:SENT:SCALe <SENT scale>

Set the vertical scale of the indicated SENT signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SENT scale>

Usage: Asynchronous command

SBUS<sb>:SENT:SFORmat <SerialMessages>

Selects if serial messages are enabled or disabled.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SerialMessages> ENABled | DISabled
*RST: DISabled

Usage: Asynchronous command

Manual operation: See "Serial message" on page 787

SBUS<sb>:SENT:SWTindex?

Queries the software trigger index.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:

<Index> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:SWTTime?

Queries the software trigger time in seconds.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:

<sb> 1 to 4, index of the serial bus

Return values:

<Time> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:SYMBols <ShowSymbols>

Activates the symbol list to be used for decoding.

Suffix:

<sb> 1 to 4, index of the serial bus

Parameters:

<ShowSymbols> OFF | ON
*RST: OFF

Usage: Asynchronous command

18.18.15.2 Filter

There are two commands for each parameter, that you can use for defining the SENT settings.

For example, to set the *Frame type =TransmissionSequence > Field =Data >01100* value you can use one of the following commands:

- `SBUS:SENT:FILTer:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `SBUS:SENT:FILTer:DMIN "TransmissionSequence", "Data", 01100`
  Defines the parameter by using the frame and field name.

SBUS<sb>:SENT:FILTer:CHKall ... 1932
SBUS<sb>:SENT:FILTer:CLR ... 1932
SBUS<sb>:SENT:FILTer:INVert ... 1933
SBUS<sb>:SENT:FILTer:RST ... 1933
SBUS<sb>:SENT:FILTer:FRENable ... 1933
SBUS<sb>:SENT:FILTer:FRAMe<fr>:ENABle ... 1933
SBUS<sb>:SENT:FILTer:BIT ... 1933
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:BIT ... 1933
SBUS<sb>:SENT:FILTer:DMAX ... 1934
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:DMAX ... 1934
SBUS<sb>:SENT:FILTer:DMIN ... 1934
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:DMIN ... 1934
SBUS<sb>:SENT:FILTer:DOPerator ... 1935
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:DOPerator ... 1935
SBUS<sb>:SENT:FILTer:FIENable ... 1935
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:ENABle ... 1935
SBUS<sb>:SENT:FILTer:IMAX ... 1935
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:IMAX ... 1935
SBUS<sb>:SENT:FILTer:IMIN ... 1936
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:IMIN ... 1936
SBUS<sb>:SENT:FILTer:IOPerator ... 1936
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:IOPerator ... 1936
SBUS<sb>:SENT:FILTer:ERENable ... 1937
SBUS<sb>:SENT:FILTer:ERRor<n>:ENABle ... 1937

SBUS<sb>:SENT:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 791

SBUS<sb>:SENT:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 791

SBUS<sb>:SENT:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 791

SBUS<sb>:SENT:FILTer:RST

Presets the state of the selected frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 791

SBUS<sb>:SENT:FILTer:FRENable <Frame>,<Enabler>
SBUS<sb>:SENT:FILTer:FRENable? <Enabler>
SBUS<sb>:SENT:FILTer:FRAMe<fr>:ENABle <Enable>

Enables the filtering on SENT frames. Only the frames that match the selected filter conditions are displayed.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Enable" on page 792

SBUS<sb>:SENT:FILTer:BIT <Frame>,<Field>,<Bit>
SBUS<sb>:SENT:FILTer:BIT? <Bit>
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 792

SBUS<sb>:SENT:FILTer:DMAX <Frame>,<Field>,<Data>
SBUS<sb>:SENT:FILTer:DMAX? <Data>
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 792

SBUS<sb>:SENT:FILTer:DMIN <Frame>,<Field>,<Data>
SBUS<sb>:SENT:FILTer:DMIN? <Data>
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 792

SBUS<sb>:SENT:FILTer:DOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:SENT:FILTer:DOPerator? <Operator>
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 792

SBUS<sb>:SENT:FILTer:FIENable <Frame>,<Field>,<Enabler>
SBUS<sb>:SENT:FILTer:FIENable? <Enabler>
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> 1 to 4, index of the serial bus

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 792

SBUS<sb>:SENT:FILTer:IMAX <Frame>,<Field>,<Data>
SBUS<sb>:SENT:FILTer:IMAX? <Data>
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if the operator is set to `INRange`.

You can set the operator with `SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 792

SBUS<sb>:SENT:FILTer:IMIN <Frame>,<Field>,<Data>
SBUS<sb>:SENT:FILTer:IMIN? <Data>
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 792

SBUS<sb>:SENT:FILTer:IOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:SENT:FILTer:IOPerator? <Operator>
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 792

SBUS<sb>:SENT:FILTer:ERENable <ErrorName>,<Enabler>
SBUS<sb>:SENT:FILTer:ERENable? <Enabler>
SBUS<sb>:SENT:FILTer:ERRor<n>:ENABle <Enable>

Defines the error type to be filtered on.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> Index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 793

18.18.15.3 Format

This section describes the commands to specify and query frame formats for the "D-PHY" protocol.

SBUS<sb>:SENT:FORMat:SELect....1938
SBUS<sb>:SENT:FORMat:ADDFrame....1938
SBUS<sb>:SENT:FORMat:LOAD....1938
SBUS<sb>:SENT:FORMat:SAVE....1938
SBUS<sb>:SENT:FORMat:CLR....1939
SBUS<sb>:SENT:FORMat:FCOunt?....1939
SBUS<sb>:SENT:FORMat:FRAMe<fr>:ADDField....1939
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLDCount?....1939
SBUS<sb>:SENT:FORMat:FRAMe<fr>:NAME....1940
SBUS<sb>:SENT:FORMat:FRAMe<fr>:COLor....1940
SBUS<sb>:SENT:FORMat:FRAMe<fr>:TYPE....1940
SBUS<sb>:SENT:FORMat:FRAMe<fr>:ID1Field....1941
SBUS<sb>:SENT:FORMat:FRAMe<fr>:ID2Field....1941
SBUS<sb>:SENT:FORMat:FRAMe<fr>:ID3Field....1941
SBUS<sb>:SENT:FORMat:FRAMe<fr>:ID1Value....1941
SBUS<sb>:SENT:FORMat:FRAMe<fr>:ID2Value....1941
SBUS<sb>:SENT:FORMat:FRAMe<fr>:ID3Value....1941
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:NAME....1941
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:COLor....1941
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:FSTBit....1942
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:BITCount....1942
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:REPetition....1943
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:BITorder....1943
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:FORMat....1943
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:ADDValue....1944
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue....1945
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel....1945
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:UNIT....1945

SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:PARA 1946
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:PARB 1946

SBUS<sb>:SENT:FORMat:SELect <Select>

Enables the format configuration

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Select> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show format" on page 794

SBUS<sb>:SENT:FORMat:ADDFrame

Appendes a new frame format to the frame list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Add frame" on page 794

SBUS<sb>:SENT:FORMat:LOAD <FileName>

Loads a the specified XML file with a list of frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Open" on page 795

SBUS<sb>:SENT:FORMat:SAVE <FileName>

Saves the current list of frame formats to an XML file with the specified name.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Save as" on page 795

SBUS<sb>:SENT:FORMat:CLR

Erases from the volatile memory all field descriptions and frame formats that you have created.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Edit list" on page 795

SBUS<sb>:SENT:FORMat:FCOunt?

Returns the number of available frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Edit list" on page 795

SBUS<sb>:SENT:FORMat:FRAMe<fr>:ADDField

Appends a new field description to the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Usage: Setting only
Asynchronous command

Manual operation: See "Add field" on page 796

SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLDCount?

Returns the number of field descriptions available for the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:FORMat:FRAMe<fr>:NAME <Name>

Specifies the name for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Frame name" on page 795

SBUS<sb>:SENT:FORMat:FRAMe<fr>:COLor <Color>

Specifies the color for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4278255615

Usage: Asynchronous command

Manual operation: See "Frame color" on page 795

SBUS<sb>:SENT:FORMat:FRAMe<fr>:TYPE <Type>

Sets an original frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Type>

Usage: Asynchronous command

Manual operation: See "Frame type" on page 795

SBUS<sb>:SENT:FORMat:FRAMe<fr>:ID1Field <ID1Field>
SBUS<sb>:SENT:FORMat:FRAMe<fr>:ID2Field <ID2Field>
SBUS<sb>:SENT:FORMat:FRAMe<fr>:ID3Field <ID3Field>

Sets the identifying field type for the configured frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Field>

Usage: Asynchronous command

Manual operation: See "ID<n> field" on page 795

SBUS<sb>:SENT:FORMat:FRAMe<fr>:ID1Value <ID1Value>
SBUS<sb>:SENT:FORMat:FRAMe<fr>:ID2Value <ID2Value>
SBUS<sb>:SENT:FORMat:FRAMe<fr>:ID3Value <ID3Value>

Sets the value of the corresponding field type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Value>

Usage: Asynchronous command

Manual operation: See "ID<n> value" on page 795

SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:NAME <Name>

Specifies the name for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Field name" on page 796

SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:COLor <Color>

Specifies the color for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4294967040

Usage: Asynchronous command

Manual operation: See "Field color" on page 796

SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:FSTBit <FirstBit>

In order of transmission, sets the first bit of the specified field in the payload.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<FirstBit>

Range: 0 to 63
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "First bit" on page 797

SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:BITCount <BitCount>

Specifies the bit count, hence length, of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitCount>

Range: 1 to 64
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Bit count" on page 797

SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:REPetition <Repetition>

Sets the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Repetition> Range: 0 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Repetition" on page 797

SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:BITorder <BitOrder>

Specifies, in which order the algorithm evaluates the bits of the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitOrder> LSBF | MSBF

LSBF
Least significant bit first

MSBF
Most significant bit first

*RST: MSBF

Usage: Asynchronous command

Manual operation: See "Bit order" on page 797

SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:FORMat <NumericFormat>

Specifies the numerical format for the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<NumericFormat> HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG | DEC | LIST | FLIN

HEX
Hexadecimal format

OCT
Octal format

BIN
Binary format

ASCII = ASCii
ASCII format

SIGN
Signed, decimal format

DEC=USIG
Unsigned, decimal format

LIST
Value list

FLIN
Linear function

*RST: HEX

Usage: Asynchronous command

Manual operation: See "Numeric format" on page 797

SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:ADDValue

Creates a new hexagonal value for customization.

Available if `SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Related commands:

`SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue`

`SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel`

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Usage: Setting only
Asynchronous command

Manual operation: See "Add value" on page 798

SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue <Value>

Sets the hexagonal value to convert it into a labeled state.

Available if `SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:

<Value>
Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Value" on page 798

SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel <Label>

Sets the label to convert the corresponding hexagonal value to a labeled state.

Available if `SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:

<Label>

Usage: Asynchronous command

Manual operation: See "Label" on page 798

SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:UNIT <Unit>

Sets the unit for the linear function.

Available if `SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Unit>

Usage: Asynchronous command

Manual operation: See "Unit" on page 798

SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:PARA <ParameterA>
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:PARB <ParameterB>

Sets the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

Available if `SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<ParameterB>
Range: -1E+20 to 1E+20
Increment: 1E-12
*RST: 0

Usage: Asynchronous command

Manual operation: See "Parameter A,B" on page 798

18.18.15.4 Software trigger

There are two commands for each parameter, that you can use for defining the SENT settings.

For example, to set the *Frame type =TransmissionSequence > Field =Data >01100* value you can use one of the following commands:

- `TRIGger:SBSW:SENT:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `TRIGger:SBSW:SENT:DMIN "TransmissionSequence", "Data", 01100`
  Defines the parameter by using the frame and field name.

TRIGger:SBSW:SENT:CHKall 1947
TRIGger:SBSW:SENT:CLR 1947
TRIGger:SBSW:SENT:INVert 1947
TRIGger:SBSW:SENT:RST 1947
TRIGger:SBSW:SENT:FRAMe<fr>:ENABle 1948
TRIGger:SBSW:SENT:FRENable 1948
TRIGger:SBSW:SENT:BIT 1948
TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:BIT 1948

TRIGger:SBSW:SENT:FIENable....1948
TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:ENABle....1948
TRIGger:SBSW:SENT:DMAX....1949
TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:DMAX....1949
TRIGger:SBSW:SENT:DMIN....1949
TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:DMIN....1949
TRIGger:SBSW:SENT:DOPerator....1949
TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:DOPerator....1949
TRIGger:SBSW:SENT:IMAX....1950
TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:IMAX....1950
TRIGger:SBSW:SENT:IMIN....1950
TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:IMIN....1950
TRIGger:SBSW:SENT:IOPerator....1951
TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:IOPerator....1951
TRIGger:SBSW:SENT:ERENable....1951
TRIGger:SBSW:SENT:ERRor<m>:ENABle....1951
SBUS<sb>:SENT:SWTindex?....1951
SBUS<sb>:SENT:SWTTime?....1952

TRIGger:SBSW:SENT:CHKall

Enables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 800

TRIGger:SBSW:SENT:CLR

Disables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 800

TRIGger:SBSW:SENT:INVert

Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 800

TRIGger:SBSW:SENT:RST

Presets the state of the selected frames and error types for the software trigger.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 800

TRIGger:SBSW:SENT:FRAMe<fr>:ENABle <Enable>
TRIGger:SBSW:SENT:FRENable <Frame>,<Enabler>
TRIGger:SBSW:SENT:FRENable? <Enabler>

rcset

Setting parameters:
<Frame>

Parameters for setting and query:
<Enabler> OFF | ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 800

TRIGger:SBSW:SENT:BIT <Frame>,<Field>,<Bit>
TRIGger:SBSW:SENT:BIT? <Bit>
TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 800

TRIGger:SBSW:SENT:FIENable <Frame>,<Field>,<Enabler>
TRIGger:SBSW:SENT:FIENable? <Enabler>
TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame of the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 800

TRIGger:SBSW:SENT:DMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:SENT:DMAX? <Data>
TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range for the software trigger, if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 800

TRIGger:SBSW:SENT:DMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:SENT:DMIN? <Data>
TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 800

TRIGger:SBSW:SENT:DOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:SENT:DOPerator? <Operator>
TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern of the software trigger in the selected field of the selected frame.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:

<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 800

TRIGger:SBSW:SENT:IMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:SENT:IMAX? <Data>
TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range for the software trigger if the operator is set to `INRange`.

You can set the operator with `TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 800

TRIGger:SBSW:SENT:IMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:SENT:IMIN? <Data>
TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range for the software trigger.

Suffix:

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 800

TRIGger:SBSW:SENT:IOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:SENT:IOPerator? <Operator>
TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 800

TRIGger:SBSW:SENT:ERENable <ErrorName>,<Enabler>
TRIGger:SBSW:SENT:ERENable? <Enabler>
TRIGger:SBSW:SENT:ERRor<m>:ENABle <Enable>

Defines the error type for the software trigger.

Suffix:
<m> Index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 802

SBUS<sb>:SENT:SWTindex?

Queries the software trigger index.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Index> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:SWTTime?

Queries the software trigger time in seconds.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Time> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.15.5 Decode results

SBUS<sb>:SENT:FCOunt? 1952
SBUS<sb>:SENT:FRAMe<fr>:BITRate? 1953
SBUS<sb>:SENT:FRAMe<fr>:CSValue? 1953
SBUS<sb>:SENT:FRAMe<fr>:DATA? 1953
SBUS<sb>:SENT:FRAMe<fr>:FDValues? 1954
SBUS<sb>:SENT:FRAMe<fr>:FSCom? 1954
SBUS<sb>:SENT:FRAMe<fr>:FSDTa? 1954
SBUS<sb>:SENT:FRAMe<fr>:IDTYpe? 1954
SBUS<sb>:SENT:FRAMe<fr>:IDValue? 1955
SBUS<sb>:SENT:FRAMe<fr>:MTPDuration? 1955
SBUS<sb>:SENT:FRAMe<fr>:FLDCount? 1955
SBUS<sb>:SENT:FRAMe<fr>:FLD<fl>:STATe? 1956
SBUS<sb>:SENT:FRAMe<fr>:FLD<fl>:VALue? 1956
SBUS<sb>:SENT:FRAMe<fr>:FLD<fl>:FVALue? 1956
SBUS<sb>:SENT:FRAMe<fr>:FLD<fl>:LABel? 1957
SBUS<sb>:SENT:FRAMe<fr>:PAPTicks? 1957
SBUS<sb>:SENT:FRAMe<fr>:SCOM? 1957
SBUS<sb>:SENT:FRAMe<fr>:SDATa? 1958
SBUS<sb>:SENT:FRAMe<fr>:SENSor? 1958
SBUS<sb>:SENT:FRAMe<fr>:STARt? 1958
SBUS<sb>:SENT:FRAMe<fr>:STATus? 1959
SBUS<sb>:SENT:FRAMe<fr>:STOP? 1959
SBUS<sb>:SENT:FRAMe<fr>:SYMBol? 1960
SBUS<sb>:SENT:FRAMe<fr>:SYNCduration? 1960
SBUS<sb>:SENT:FRAMe<fr>:TYPE? 1960

SBUS<sb>:SENT:FCOunt?

Returns the number of decoded frames.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count> Total number of decoded frames.

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:FRAMe<fr>:BITRate?

Returns the bit rate of the frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<BitRate> Increment: 1
*RST: 0
Default unit: bps

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:FRAMe<fr>:CSValue?

Returns the CRC sequence value of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<ChecksumValue> Range: 0 to 63
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:FRAMe<fr>:DATA?

Returns the data of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<data> Comma-separated sequence of integer values (N, D1, D2,…, DN). N is the number of nibbles in the frame, and D1…DN are the values of the nibbles.

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:FRAMe<fr>:FDValues?

Returns the formatted data values.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedDatVals>

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:FRAMe<fr>:FSCom?

Retruns the formatted status communication.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedStatusComm>

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:FRAMe<fr>:FSDTa?

Returns the formatted symbolic data values.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedSymbDat>

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:FRAMe<fr>:IDTYpe?

Returns the identifier type of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<IdentifierType> B4 | B8

B4: standard format, 4 bit
B8: extended format, 8 bit

*RST: B4

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:FRAMe<fr>:IDValue?

Returns the identifier value of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<IdtfVal> Range: 0 to 255
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:FRAMe<fr>:MTPDuration?

Returns the duration of the main trigger pulse (MTP), which is an additional pulse added to the frame when running in "Short PWM Code" (SPC) mode. Withpulse width modulationn (PWM), you can connect multiple sensors to the bus. The duration of the MTP defines, which sensor starts the transmission.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<MTPDuration> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:FRAMe<fr>:FLDCount?

Returns the number of fields in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:FRAMe<fr>:FLD<fl>:STATe?

Returns the state of the specified field.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<State> OK | SYNC | PULSe | CRC | LENGth | FORM | PAUSe | INComplete
*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:FRAMe<fr>:FLD<fl>:VALue?

Returns the value of the specified field.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Value> Range: 0 to 18446744073709551615
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:FRAMe<fr>:FLD<fl>:FVALue?

Returns the formatted value of the specified field.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<FormattedValue>

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:FRAMe<fr>:FLD<fl>:LABel?

Returns the label of the specified field.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Label>

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:FRAMe<fr>:PAPTicks?

Returns the number of the pulse pause clock ticks.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<PausePlsTicks> Range: 12 to 768
Increment: 1
*RST: 12

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:FRAMe<fr>:SCOM?

Returns the value of the status/communication pulse.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrmStatusComm> Range: 0 to 15
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:FRAMe<fr>:SDATa?

Returns the symbolic data of the frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<SymbolicData>

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:FRAMe<fr>:SENSor?

Returns the sensor resposne time.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<SensRespTime> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:FRAMe<fr>:STARt?

Returns the start time of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:FRAMe<fr>:STATus?

Returns the overall state of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameState> OK | SYNC | PULSe | CRC | LENGth | FORM | PAUSe | INComplete

OK: the frame is valid.
SYNC: Synchronization error occurred.
PULse: Pulse error occurred.
CRC: Cyclic redundancy check failed.
LENGth: Irregular frame length error occurred.
FORM: Format error occurred.
INComplete: The frame is not completely contained in the acquisition. The acquired part of the frame is valid.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:FRAMe<fr>:STOP?

Returns the stop time of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:FRAMe<fr>:SYMBol?

Returns the symbolic label of the specified frame if the label list is enabled.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<SymbolicName>

Example: `BUS:SENT:FRAMe:SYMBol?`
Response: `Air Temperature`

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:FRAMe<fr>:SYNCduration?

Returns the time of the synchronization pulse.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameSyncTime> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:SENT:FRAMe<fr>:TYPE?

Returns the type of SENT message.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameType> TRSQ | SMSG | ESSM | ELSM | PAUSe | UNKNown

`TRSQ`: transmission sequence
`SMSG`: short serial message
`ESSM`: enhanced 12 bit message
`ELSM`: enhanced 16 bit message

*RST: TRSQ

Usage: Query only
Asynchronous command

18.18.16 ARINC 429 (option R&S MXO5-K530)

Before MXO 5 can accept the specific bus commands, make sure that:

- The decoding of the specified bus is enabled with `SBUS<sb>[:STATe]`.
- The bus is set to the correct type with `SBUS<sb>:TYPE`.

- Configuration....1961
- Filter....1966
- Format....1970
- Software trigger....1979
- Decode results....1984

18.18.16.1 Configuration

SBUS<sb>:ARINc:BRMode....1961
SBUS<sb>:ARINc:BRValue....1961
SBUS<sb>:ARINc:POLarity....1962
SBUS<sb>:ARINc:SOURce....1962
SBUS<sb>:ARINc:THReshold:HIGH....1962
SBUS<sb>:ARINc:THReshold:HYSTeresis....1963
SBUS<sb>:ARINc:THReshold:LOW....1963
SBUS<sb>:ARINc:NEWList....1963
SBUS<sb>:ARINc:SYMBols....1963
SBUS<sb>:ARINc:MAXGap:BITS....1964
SBUS<sb>:ARINc:MAXGap:SELect....1964
SBUS<sb>:ARINc:MINGap:BITS....1964
SBUS<sb>:ARINc:MINGap:SELect....1965
SBUS<sb>:ARINc:POSition....1965
SBUS<sb>:ARINc:SCALe....1965

SBUS<sb>:ARINc:BRMode <BitRateMode>

Sets the bit rate mode to high or low speed. You can set an exact bitrate value with `SBUS<sb>:ARINc:BRValue`.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<BitRateMode> HIGH | LOW
*RST: HIGH

Usage: Asynchronous command

Manual operation: See "Bit rate mode, Bit rate" on page 807

SBUS<sb>:ARINc:BRValue <BitRateValue>

Sets the number of transmitted bits per second.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<BitRateValue> Range: 10000 to 110000
Increment: 100
*RST: 100000
Default unit: bps

Usage: Asynchronous command

Manual operation: See "Bit rate mode, Bit rate" on page 807

SBUS<sb>:ARINc:POLarity <Polarity>

Selects the wire on which the bus signal is measured : A Leg or B Leg. The setting affects the digitization of the signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Polarity> ALEG | BLEG
*RST: ALEG

Usage: Asynchronous command

Manual operation: See "Polarity" on page 807

SBUS<sb>:ARINc:SOURce Source

Sets the channel for the signal source.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
Source C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Source" on page 807

SBUS<sb>:ARINc:THReshold:HIGH <Upper threshold>

Sets the upper threshold level of the signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Upper threshold>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 808

SBUS<sb>:ARINc:THReshold:HYSTeresis <Hysteresis>

Sets a hysteresis value.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 808

SBUS<sb>:ARINc:THReshold:LOW <Lower threshold>

Sets the lower threshold level of the signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Lower threshold>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 808

SBUS<sb>:ARINc:NEWList <FileName>

Loads a symbol list file.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName> String parameter with path and file name.

Example:
```
SBUS1:ARIN:NEWList
'/home/storage/userData/Protocol/ARINC.csv'
SBUS1:ARIN:SYMBols ON
```

Usage: Setting only
Asynchronous command

Manual operation: See "Show symbols" on page 809

SBUS<sb>:ARINc:SYMBols <ShowSymbols>

Activates the symbol list to be used for decoding.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<ShowSymbols> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show symbols" on page 809

SBUS<sb>:ARINc:MAXGap:BITS <MaxGapBits>

Sets the value for the maximum gap between two words.

See also: `SBUS<sb>:ARINc:MAXGap:SELect` on page 1964.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<MaxGapBits> Range: 0 to 1000
Increment: 1
*RST: 100
Default unit: bit

Usage: Asynchronous command

Manual operation: See "Min gap time,Max gap time" on page 807

SBUS<sb>:ARINc:MAXGap:SELect <MaxGapSelect>

Enables the detection of the maximum gap time during decoding.

You can specify the maximum gap time with `SBUS<sb>:ARINc:MAXGap:BITS`.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<MaxGapSelect> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Min gap time,Max gap time" on page 807

SBUS<sb>:ARINc:MINGap:BITS <MinGapBits>

Sets a value for the minimum timing gap between two words.

See also: `SBUS<sb>:ARINc:MINGap:SELect`.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:

<MinGapBits> Range: 0 to 100
Increment: 1
*RST: 4
Default unit: bit

Usage: Asynchronous command

Manual operation: See "Min gap time,Max gap time" on page 807

SBUS<sb>:ARINc:MINGap:SELect <MinGapSelect>

Enables the detection of the minimum idle time between two words during decoding.

To specify the minimum gap, use `SBUS<sb>:ARINc:MINGap:BITS`.

Suffix:

<sb> 1 to 4, index of the serial bus

Parameters:

<MinGapSelect> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Min gap time,Max gap time" on page 807

SBUS<sb>:ARINc:POSition <Position>

Sets the vertical position of the ARINC signal.

Suffix:

<sb> 1 to 4, index of the serial bus

Parameters:

<Position>

Usage: Asynchronous command

SBUS<sb>:ARINc:SCALe <Scale>

Set the vertical scale of the indicated ARINC signal.

Suffix:

<sb> 1 to 4, index of the serial bus

Parameters:

<Scale>

Usage: Asynchronous command

18.18.16.2 Filter

There are two commands for each parameter, that you can use for defining the ARINC 429 settings.

For example, to set the *Frame type =ARINC429-Word* > *Field =Data* >*Data* value you can use one of the following commands:

- `SBUS:ARINC:FILTer:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `SBUS:ARINC:FILTer:DMIN "ARINC429-Word", "Data", 01100`
  Defines the parameter by using the frame and field name.

SBUS<sb>:ARINc:FILTer:CHKall 1966
SBUS<sb>:ARINc:FILTer:CLR 1966
SBUS<sb>:ARINc:FILTer:INVert 1967
SBUS<sb>:ARINc:FILTer:RST 1967
SBUS<sb>:ARINc:FILTer:BIT 1967
SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:BIT 1967
SBUS<sb>:ARINc:FILTer:ERENable 1968
SBUS<sb>:ARINc:FILTer:ERRor<n>:ENABle 1968
SBUS<sb>:ARINc:FILTer:DMAX 1968
SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:DMAX 1968
SBUS<sb>:ARINc:FILTer:DMIN 1968
SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:DMIN 1968
SBUS<sb>:ARINc:FILTer:DOPerator 1969
SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:DOPerator 1969
SBUS<sb>:ARINc:FILTer:FIENable 1969
SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:ENABle 1969
SBUS<sb>:ARINc:FILTer:FRENable 1969
SBUS<sb>:ARINc:FILTer:FRAMe<fr>:ENABle 1969

SBUS<sb>:ARINc:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 810

SBUS<sb>:ARINc:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 810

SBUS<sb>:ARINc:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 810

SBUS<sb>:ARINc:FILTer:RST

Presets the state of the selected frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 810

SBUS<sb>:ARINc:FILTer:BIT <Frame>,<Field>,<Bit>
SBUS<sb>:ARINc:FILTer:BIT? <Bit>
SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 811

SBUS<sb>:ARINc:FILTer:ERENable <ErrorName>,<Enabler>
SBUS<sb>:ARINc:FILTer:ERENable? <Enabler>
SBUS<sb>:ARINc:FILTer:ERRor<n>:ENABle <Enable>

Defines the error type to be filtered on.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 812

SBUS<sb>:ARINc:FILTer:DMAX <Frame>,<Field>,<Data>
SBUS<sb>:ARINc:FILTer:DMAX? <Data>
SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 811

SBUS<sb>:ARINc:FILTer:DMIN <Frame>,<Field>,<Data>
SBUS<sb>:ARINc:FILTer:DMIN? <Data>
SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 811

SBUS<sb>:ARINc:FILTer:DOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:ARINc:FILTer:DOPerator? <Operator>
SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 811

SBUS<sb>:ARINc:FILTer:FIENable <Frame>,<Field>,<Enabler>
SBUS<sb>:ARINc:FILTer:FIENable? <Enabler>
SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 811

SBUS<sb>:ARINc:FILTer:FRENable <Frame>,<Enabler>
SBUS<sb>:ARINc:FILTer:FRENable? <Enabler>
SBUS<sb>:ARINc:FILTer:FRAMe<fr>:ENABle <Enable>

Enables the filtering on ARINC 429 frames. Only the frames that match the selected filter conditions are displayed.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Enable" on page 811

18.18.16.3 Format

This section describes the commands to specify and query frame formats for the "ARINC 429" protocol.

SBUS<sb>:ARINc:FORMat:SELect ... 1970
SBUS<sb>:ARINc:FORMat:ADDFrame ... 1971
SBUS<sb>:ARINc:FORMat:LOAD ... 1971
SBUS<sb>:ARINc:FORMat:SAVE ... 1971
SBUS<sb>:ARINc:FORMat:CLR ... 1972
SBUS<sb>:ARINc:FORMat:FCOunt? ... 1972
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ADDField ... 1972
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLDCount? ... 1972
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:NAME ... 1973
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:COLor ... 1973
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:TYPE ... 1973
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ID1Field ... 1973
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ID2Field ... 1973
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ID3Field ... 1973
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ID1Value ... 1974
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ID2Value ... 1974
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ID3Value ... 1974
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:NAME ... 1974
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:COLor ... 1974
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:FSTBit ... 1975
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:BITCount ... 1975
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:REPetition ... 1975
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:BITorder ... 1976
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:FORMat ... 1976
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:ADDValue ... 1977
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue ... 1977
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel ... 1978
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:UNIT ... 1978
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:PARA ... 1979
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:PARB ... 1979

SBUS<sb>:ARINc:FORMat:SELect <Select>

Enables the format configuration

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Select> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show format" on page 812

SBUS<sb>:ARINc:FORMat:ADDFrame

Appendes a new frame format to the frame list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Add frame" on page 812

SBUS<sb>:ARINc:FORMat:LOAD <FileName>

Loads a the specified XML file with a list of frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Open" on page 813

SBUS<sb>:ARINc:FORMat:SAVE <FileName>

Saves the current list of frame formats to an XML file with the specified name.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Save as" on page 813

SBUS<sb>:ARINc:FORMat:CLR

Erases from the volatile memory all field descriptions and frame formats that you have created.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Edit list" on page 813

SBUS<sb>:ARINc:FORMat:FCOunt?

Returns the number of available frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Edit list" on page 813

SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ADDField

Appends a new field description to the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Usage: Setting only
Asynchronous command

Manual operation: See "Add field" on page 814

SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLDCount?

Returns the number of field descriptions available for the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:ARINc:FORMat:FRAMe<fr>:NAME <Name>

Specifies the name for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Frame name" on page 814

SBUS<sb>:ARINc:FORMat:FRAMe<fr>:COLor <Color>

Specifies the color for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4278255615

Usage: Asynchronous command

Manual operation: See "Frame color" on page 814

SBUS<sb>:ARINc:FORMat:FRAMe<fr>:TYPE <Type>

Sets an original frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Type>

Usage: Asynchronous command

Manual operation: See "Frame type" on page 814

SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ID1Field <ID1Field>
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ID2Field <ID2Field>
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ID3Field <ID3Field>

Sets the identifying field type for the configured frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Field>

Usage: Asynchronous command

Manual operation: See "ID<n> field" on page 814

SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ID1Value <ID1Value>
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ID2Value <ID2Value>
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ID3Value <ID3Value>

Sets the value of the corresponding field type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Value>

Usage: Asynchronous command

Manual operation: See "ID<n> value" on page 814

SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:NAME <Name>

Specifies the name for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Field name" on page 815

SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:COLor <Color>

Specifies the color for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4294967040

Usage: Asynchronous command

Manual operation: See "Field color" on page 815

SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:FSTBit <FirstBit>

In order of transmission, sets the first bit of the specified field in the payload.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<FirstBit>

Range: 0 to 63
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "First bit" on page 815

SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:BITCount <BitCount>

Specifies the bit count, hence length, of the selected field in the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<BitCount>

Range: 1 to 64
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Bit count" on page 815

SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:REPetition <Repetition>

Sets the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Repetition> Range: 0 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Repetition" on page 816

SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:BITorder <BitOrder>

Specifies, in which order the algorithm evaluates the bits of the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitOrder> LSBF | MSBF

LSBF
Least significant bit first

MSBF
Most significant bit first

*RST: MSBF

Usage: Asynchronous command

Manual operation: See "Bit order" on page 816

SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:FORMat <NumericFormat>

Specifies the numerical format for the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<NumericFormat> HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG | DEC | LIST | FLIN

HEX
Hexadecimal format

OCT
Octal format

BIN
Binary format

ASCII = ASCii
ASCII format

SIGN
Signed, decimal format

DEC=USIG
Unsigned, decimal format

LIST
Value list

FLIN
Linear function

*RST: HEX

Usage: Asynchronous command

Manual operation: See "Numeric format" on page 816

SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:ADDValue

Creates a new hexagonal value for customization.

Available if `SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Related commands:

`SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue`

`SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel`

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Usage: Setting only
Asynchronous command

Manual operation: See "Add value" on page 817

SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue <Value>

Sets the hexagonal value to convert it into a labeled state.

Available if `SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field
<p> Index of the value

Parameters:
<Value> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Value" on page 817

SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel <Label>

Sets the label to convert the corresponding hexagonal value to a labeled state.

Available if `SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field
<p> Index of the value

Parameters:
<Label>

Usage: Asynchronous command

Manual operation: See "Label" on page 817

SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:UNIT <Unit>

Sets the unit for the linear function.

Available if `SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<Unit>

Usage: Asynchronous command

Manual operation: See "Unit" on page 817

SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:PARA <ParameterA>
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:PARB <ParameterB>

Sets the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

Available if `SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:FORMat = FLIN`.

Suffix:

<sb>	1 to 4, index of the serial bus
<fr>	Index of the frame
<fl>	Index of the field

Parameters:

<ParameterB>	Range:	-1E+20 to 1E+20
	Increment:	1E-12
	*RST:	0

Usage: Asynchronous command

Manual operation: See "Parameter A,B" on page 817

18.18.16.4 Software trigger

There are two commands for each parameter, that you can use for defining the ARINC 429 settings.

For example, to set the *Frame type =ARINC429-Word* > *Field =Data* >*Data* value you can use one of the following commands:

- `TRIGger:SBSW:ARINc:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `TRIGger:SBSW:ARINc:DMIN "ARINC429-Word", "Data", 01100`
  Defines the parameter by using the frame and field name.

TRIGger:SBSW:ARINc:CHKall 1980
TRIGger:SBSW:ARINc:CLR 1980
TRIGger:SBSW:ARINc:INVert 1980
TRIGger:SBSW:ARINc:RST 1980
TRIGger:SBSW:ARINc:FRENable 1980
TRIGger:SBSW:ARINc:FRAMe<fr>:ENABle 1980
TRIGger:SBSW:ARINc:BIT 1981
TRIGger:SBSW:ARINc:FRAMe<fr>:FLD<fl>:BIT 1981
TRIGger:SBSW:ARINc:DMAX 1981
TRIGger:SBSW:ARINc:FRAMe<fr>:FLD<fl>:DMAX 1981
TRIGger:SBSW:ARINc:DMIN 1981
TRIGger:SBSW:ARINc:FRAMe<fr>:FLD<fl>:DMIN 1981
TRIGger:SBSW:ARINc:DOPerator 1982
TRIGger:SBSW:ARINc:FRAMe<fr>:FLD<fl>:DOPerator 1982
TRIGger:SBSW:ARINc:FIENable 1982

TRIGger:SBSW:ARINc:FRAMe<fr>:FLD<fl>:ENABle....1982
TRIGger:SBSW:ARINc:ERENable....1983
TRIGger:SBSW:ARINc:ERRor<m>:ENABle....1983
SBUS<sb>:ARINc:SWTindex?....1983
SBUS<sb>:ARINc:SWTTime?....1983

TRIGger:SBSW:ARINc:CHKall

Enables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 818

TRIGger:SBSW:ARINc:CLR

Disables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 818

TRIGger:SBSW:ARINc:INVert

Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 818

TRIGger:SBSW:ARINc:RST

Presets the state of the selected frames and error types for the software trigger.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 818

TRIGger:SBSW:ARINc:FRENable <Frame>,<Enabler>
TRIGger:SBSW:ARINc:FRENable? <Enabler>
TRIGger:SBSW:ARINc:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 819

TRIGger:SBSW:ARINc:BIT <Frame>,<Field>,<Bit>
TRIGger:SBSW:ARINc:BIT? <Bit>
TRIGger:SBSW:ARINc:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 819

TRIGger:SBSW:ARINc:DMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:ARINc:DMAX? <Data>
TRIGger:SBSW:ARINc:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range for the software trigger, if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `TRIGger:SBSW:ARINc:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 819

TRIGger:SBSW:ARINc:DMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:ARINc:DMIN? <Data>
TRIGger:SBSW:ARINc:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 819

TRIGger:SBSW:ARINc:DOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:ARINc:DOPerator? <Operator>
TRIGger:SBSW:ARINc:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern of the software trigger in the selected field of the selected frame.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 819

TRIGger:SBSW:ARINc:FIENable <Frame>,<Field>,<Enabler>
TRIGger:SBSW:ARINc:FIENable? <Enabler>
TRIGger:SBSW:ARINc:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame of the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 819

TRIGger:SBSW:ARINc:ERENable <ErrorName>,<Enabler>
TRIGger:SBSW:ARINc:ERENable? <Enabler>
TRIGger:SBSW:ARINc:ERRor<m>:ENABle <Enable>

Defines the error type for the software trigger.

Suffix:
<m> index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 820

SBUS<sb>:ARINc:SWTindex?

Queries the software trigger index.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Index> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:ARINc:SWTTime?

Queries the software trigger time in seconds.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Time> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.16.5 Decode results

This section describes the commands to query the results of the decoding.

SBUS<sb>:ARINc:WCOunt? 1984
SBUS<sb>:ARINc:WORD<w>:FLDCount? 1984
SBUS<sb>:ARINc:WORD<w>:BITRate? 1984
SBUS<sb>:ARINc:WORD<w>:FLD<fl>:STATe? 1985
SBUS<sb>:ARINc:WORD<w>:FLD<fl>:LABel? 1985
SBUS<sb>:ARINc:WORD<w>:FLD<fl>:VALue? 1986
SBUS<sb>:ARINc:WORD<w>:FLD<fl>:FVALue? 1986
SBUS<sb>:ARINc:WORD<w>:DATA? 1986
SBUS<sb>:ARINc:WORD<w>:LABel? 1987
SBUS<sb>:ARINc:WORD<w>:PATTern? 1987
SBUS<sb>:ARINc:WORD<w>:SDI? 1987
SBUS<sb>:ARINc:WORD<w>:SSM? 1988
SBUS<sb>:ARINc:WORD<w>:STARt? 1988
SBUS<sb>:ARINc:WORD<w>:STATe? 1988
SBUS<sb>:ARINc:WORD<w>:STOP? 1989
SBUS<sb>:ARINc:WORD<w>:SYMBol? 1989

SBUS<sb>:ARINc:WCOunt?

Returns the number of decoded words.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:ARINc:WORD<w>:FLDCount?

Returns the number of fields available in the seleced word.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:ARINc:WORD<w>:BITRate?

Returns the bit rate of the word.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

Return values:
<PrimaryBitRate> Increment: 1
*RST: 0
Default unit: bps

Usage: Query only
Asynchronous command

SBUS<sb>:ARINc:WORD<w>:FLD<fl>:STATe?

Returns the overall state of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> Index of the frame

<fl> Index of the field

Return values:
<State> OK | CODE | GAP | PAR | INC | UNKN
CODE: coding error occured.
GAP: timing gap error occured.
PAR: parity error occured.
INComplete: the sequence is not completely contained in the acquisition
UNKNown: unknown frame type
*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:ARINc:WORD<w>:FLD<fl>:LABel?

Returns the label of the specified field in the specified word.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> Index of the frame

<fl> Index of the field

Return values:
<Label>

Usage: Query only
Asynchronous command

SBUS<sb>:ARINc:WORD<w>:FLD<fl>:VALue?

Returns the value of the specified field in the specified word.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

<fl> Index of the field

Return values:
<Value> Range: 0 to 18446744073709551615
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:ARINc:WORD<w>:FLD<fl>:FVALue?

Returns the formatted value of the specified field in the specified word.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

<fl> Index of the field

Return values:
<FormattedValue>

Usage: Query only
Asynchronous command

SBUS<sb>:ARINc:WORD<w>:DATA?

Returns the data of the specified word.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

Return values:
<FrameData> Range: 0 to 524287
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:ARINc:WORD<w>:LABel?

Returns the label of the specified word.

Suffix:

<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

Return values:

<FrameLabel> Range: 0 to 255
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:ARINc:WORD<w>:PATTern?

Returns all 32 bits of the specified word.

Suffix:

<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

Return values:

<FrmDatPatt> List of comma separated values.

Example:
```
SBUS1:ARINc:WORD1:PATTern?
#H04,#H10,#H04
```

Usage: Query only
Asynchronous command

SBUS<sb>:ARINc:WORD<w>:SDI?

Returns the source/destination identifier (SDI) bits of the specified word.

Suffix:

<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

Return values:

<SDI> Range: 0 to 3
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:ARINc:WORD<w>:SSM?

Returns the sign/status matrix (SSM) bits of the specified word.

Suffix:

<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

Return values:

<SSM> Range: 0 to 3
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:ARINc:WORD<w>:STARt?

Returns the start time of the specified word.

Suffix:

<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

Return values:

<FrameStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:ARINc:WORD<w>:STATe?

Returns the overall state of the specified word.

Suffix:

<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

Return values:

<FrameState> OK | CODE | GAP | PAR | INC | UNKN

CODE: coding error occured.
GAP: timing gap error occured.
PAR: parity error occured.
INComplete: the sequence is not completely contained in the acquisition

UNKNown: unknown frame type

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:ARINc:WORD<w>:STOP?

Returns the end time of the specified word.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

Return values:
<FrameStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:ARINc:WORD<w>:SYMBol?

Returns the label name of the word ID.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

Return values:
<Translation>

Usage: Query only
Asynchronous command

18.18.17 MIL-1553 (option R&S MXO5-K530)

Before MXO 5 can accept the specific bus commands, make sure that:

- The decoding of the specified bus is enabled with `SBUS<sb>[:STATe]`.
- The bus is set to the correct type with `SBUS<sb>:TYPE`.

- Configuration....1990
- Filter....1992
- Format....1998
- Software trigger....2006
- Decode results....2012

18.18.17.1 Configuration

SBUS<sb>:MILStd:POLarity....1990
SBUS<sb>:MILStd:SOURce....1990
SBUS<sb>:MILStd:THReshold:HIGH....1990
SBUS<sb>:MILStd:THReshold:HYSTeresis....1991
SBUS<sb>:MILStd:THReshold:LOW....1991
SBUS<sb>:MILStd:NEWList....1991
SBUS<sb>:MILStd:POSition....1991
SBUS<sb>:MILStd:SCALe....1992
SBUS<sb>:MILStd:SYMBols....1992

SBUS<sb>:MILStd:POLarity <Polarity>

Sets the wire on which the bus signal is measured : normal or inverted. The setting affects the digitization of the signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Polarity> NORMal | INVerted
*RST: NORMal

Usage: Asynchronous command

Manual operation: See "Polarity" on page 842

SBUS<sb>:MILStd:SOURce Source

Sets the channel for the signal source.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
Source C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Source" on page 842

SBUS<sb>:MILStd:THReshold:HIGH <Threshold high>

Sets the lower threshold level of the signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Threshold high>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 843

SBUS<sb>:MILStd:THReshold:HYSTeresis <Hysteresis>

Sets a hysteresis value.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 843

SBUS<sb>:MILStd:THReshold:LOW <Threshold low>

Sets the lower threshold level of the signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Threshold low>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 843

SBUS<sb>:MILStd:NEWList <FileName>

Loads a symbol list file.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName> String parameter with path and file name.

Example:
```
SBUS1:MILStd:NEWList
'/home/storage/userData/Protocol/MILStd.csv'
SBUS1:MILStd:SYMBols ON
```

Usage: Setting only
Asynchronous command

SBUS<sb>:MILStd:POSition <Position>

Sets the vertical position of the MIL-1553 signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Position>

Usage: Asynchronous command

SBUS<sb>:MILStd:SCALe <Scale>

Set the vertical scale of the indicated MIL-1553 signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Scale>

Usage: Asynchronous command

SBUS<sb>:MILStd:SYMBols <ShowSymbols>

Activates the symbol list to be used for decoding.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<ShowSymbols> OFF | ON
*RST: OFF

Usage: Asynchronous command

18.18.17.2 Filter

There are two commands for each parameter that you can use for defining the MIL-1553 settings.

For example, to set the *Frame type =Command > Field =Info >01100* value you can use one of the following commands:

- `SBUS:MIL:FILTer:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `SBUS:MIL:FILTer:DMIN "Command", "Info", 01100`
  Defines the parameter by using the frame and field name.

SBUS<sb>:MILStd:FILTer:CHKall ... 1993
SBUS<sb>:MILStd:FILTer:CLR ... 1993
SBUS<sb>:MILStd:FILTer:INVert ... 1993
SBUS<sb>:MILStd:FILTer:RST ... 1994
SBUS<sb>:MILStd:FILTer:BIT ... 1994
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:BIT ... 1994
SBUS<sb>:MILStd:FILTer:ERENable ... 1994
SBUS<sb>:MILStd:FILTer:ERRor<n>:ENABle ... 1994
SBUS<sb>:MILStd:FILTer:DMAX ... 1995

SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:DMAX 1995
SBUS<sb>:MILStd:FILTer:DMIN 1995
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:DMIN 1995
SBUS<sb>:MILStd:FILTer:DOPerator 1995
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:DOPerator 1995
SBUS<sb>:MILStd:FILTer:IMAX 1996
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:IMAX 1996
SBUS<sb>:MILStd:FILTer:IMIN 1996
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:IMIN 1996
SBUS<sb>:MILStd:FILTer:IOPerator 1997
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:IOPerator 1997
SBUS<sb>:MILStd:FILTer:FRENable 1997
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:ENABle 1997
SBUS<sb>:MILStd:FILTer:FIENable 1997
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:ENABle 1997

SBUS<sb>:MILStd:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 845

SBUS<sb>:MILStd:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 845

SBUS<sb>:MILStd:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 845

SBUS<sb>:MILStd:FILTer:RST

Presets the state of the selected frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 845

SBUS<sb>:MILStd:FILTer:BIT <Frame>,<Field>,<Bit>
SBUS<sb>:MILStd:FILTer:BIT? <Bit>
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 846

SBUS<sb>:MILStd:FILTer:ERENable <ErrorName>,<Enabler>
SBUS<sb>:MILStd:FILTer:ERENable? <Enabler>
SBUS<sb>:MILStd:FILTer:ERRor<n>:ENABle <Enable>

Defines the error type to be filtered on.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 847

SBUS<sb>:MILStd:FILTer:DMAX <Frame>,<Field>,<Data>
SBUS<sb>:MILStd:FILTer:DMAX? <Data>
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 846

SBUS<sb>:MILStd:FILTer:DMIN <Frame>,<Field>,<Data>
SBUS<sb>:MILStd:FILTer:DMIN? <Data>
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 846

SBUS<sb>:MILStd:FILTer:DOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:MILStd:FILTer:DOPerator? <Operator>
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:

<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 846

SBUS<sb>:MILStd:FILTer:IMAX <Frame>,<Field>,<Data>
SBUS<sb>:MILStd:FILTer:IMAX? <Data>
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if the operator is set to `INRange`.

You can set the operator with `SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Max>
Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 846

SBUS<sb>:MILStd:FILTer:IMIN <Frame>,<Field>,<Data>
SBUS<sb>:MILStd:FILTer:IMIN? <Data>
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Min>
Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 846

SBUS<sb>:MILStd:FILTer:IOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:MILStd:FILTer:IOPerator? <Operator>
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 846

SBUS<sb>:MILStd:FILTer:FRENable <Frame>,<Enabler>
SBUS<sb>:MILStd:FILTer:FRENable? <Enabler>
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:ENABle <Enable>

Enables the filtering on MIL-1553 frames. Only the frames that match the selected filter conditions are displayed.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Enable" on page 845

SBUS<sb>:MILStd:FILTer:FIENable <Frame>,<Field>,<Enabler>
SBUS<sb>:MILStd:FILTer:FIENable? <Enabler>
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 846

18.18.17.3 Format

This section describes the commands to specify and query frame formats for the "MIL-153" protocol.

SBUS<sb>:MILStd:FORMat:SELect....1998
SBUS<sb>:MILStd:FORMat:ADDFrame....1999
SBUS<sb>:MILStd:FORMat:LOAD....1999
SBUS<sb>:MILStd:FORMat:SAVE....1999
SBUS<sb>:MILStd:FORMat:CLR....1999
SBUS<sb>:MILStd:FORMat:FCOunt?....2000
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:ADDField....2000
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLDCount?....2000
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:NAME....2000
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:COLor....2001
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:TYPE....2001
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:ID1Field....2001
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:ID2Field....2001
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:ID3Field....2001
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:ID1Value....2001
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:ID2Value....2001
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:ID3Value....2001
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:NAME....2002
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:COLor....2002
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:FSTBit....2002
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:BITCount....2003
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:REPetition....2003
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:BITorder....2003
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:FORMat....2004
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:ADDValue....2005
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue....2005
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel....2005
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:UNIT....2006
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:PARA....2006
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:PARB....2006

SBUS<sb>:MILStd:FORMat:SELect <Select>

Enables the format configuration

Suffix:

<sb> 1 to 4, index of the serial bus

Parameters:
<Select> OFF | ON
*RST: OFF

Usage: Asynchronous command

SBUS<sb>:MILStd:FORMat:ADDFrame

Appendes a new frame format to the frame list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

SBUS<sb>:MILStd:FORMat:LOAD <FileName>

Loads a the specified XML file with a list of frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

SBUS<sb>:MILStd:FORMat:SAVE <FileName>

Saves the current list of frame formats to an XML file with the specified name.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

SBUS<sb>:MILStd:FORMat:CLR

Erases from the volatile memory all field descriptions and frame formats that you have created.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

SBUS<sb>:MILStd:FORMat:FCOunt?

Returns the number of available frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:MILStd:FORMat:FRAMe<fr>:ADDField

Appends a new field description to the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Usage: Setting only
Asynchronous command

SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLDCount?

Returns the number of field descriptions available for the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:MILStd:FORMat:FRAMe<fr>:NAME <Name>

Specifies the name for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Name>

Usage: Asynchronous command

SBUS<sb>:MILStd:FORMat:FRAMe<fr>:COLor <Color>

Specifies the color for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4278255615

Usage: Asynchronous command

SBUS<sb>:MILStd:FORMat:FRAMe<fr>:TYPE <Type>

Sets an original frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Type>

Usage: Asynchronous command

SBUS<sb>:MILStd:FORMat:FRAMe<fr>:ID1Field <ID1Field>
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:ID2Field <ID2Field>
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:ID3Field <ID3Field>

Sets the identifying field type for the configured frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Field>

Usage: Asynchronous command

SBUS<sb>:MILStd:FORMat:FRAMe<fr>:ID1Value <ID1Value>
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:ID2Value <ID2Value>
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:ID3Value <ID3Value>

Sets the value of the corresponding field type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Value>

Usage: Asynchronous command

SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:NAME <Name>

Specifies the name for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Name>

Usage: Asynchronous command

SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:COLor <Color>

Specifies the color for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4294967040

Usage: Asynchronous command

SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:FSTBit <FirstBit>

In order of transmission, sets the first bit of the specified field in the payload.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<FirstBit> Range: 0 to 63
Increment: 1
*RST: 0

Usage: Asynchronous command

SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:BITCount <BitCount>

Specifies the bit count, hence length, of the selected field in the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<BitCount> Range: 1 to 64
Increment: 1
*RST: 1

Usage: Asynchronous command

SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:REPetition <Repetition>

Sets the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Repetition> Range: 0 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:BITorder <BitOrder>

Specifies, in which order the algorithm evaluates the bits of the condition value of the selected field in the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<BitOrder> LSBF | MSBF

LSBF
Least significant bit first

MSBF
Most significant bit first

*RST: MSBF

Usage: Asynchronous command

SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:FORMat <NumericFormat>

Specifies the numerical format for the condition value of the selected field in the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<NumericFormat> HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG | DEC | LIST | FLIN

HEX
Hexadecimal format

OCT
Octal format

BIN
Binary format

ASCII = ASCii
ASCII format

SIGN
Signed, decimal format

DEC=USIG
Unsigned, decimal format

LIST
Value list

FLIN
Linear function

*RST: HEX

Usage: Asynchronous command

SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:ADDValue

Creates a new hexagonal value for customization.

Available if `SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Related commands:

`SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue`

`SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel`

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Usage: Setting only
Asynchronous command

SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue <Value>

Sets the hexagonal value to convert it into a labeled state.

Available if `SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:

<Value>
Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Asynchronous command

SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel <Label>

Sets the label to convert the corresponding hexagonal value to a labeled state.

Available if `SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:
<Label>

Usage: Asynchronous command

SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:UNIT <Unit>

Sets the unit for the linear function.

Available if `SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Unit>

Usage: Asynchronous command

SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:PARA <ParameterA>
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:PARB <ParameterB>

Sets the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

Available if `SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<ParameterB> Range: -1E+20 to 1E+20
Increment: 1E-12
*RST: 0

Usage: Asynchronous command

18.18.17.4 Software trigger

There are two commands for each parameter that you can use for defining the MIL-1553 settings.

For example, to set the *Frame type =Command > Field =Info >01100* value you can use one of the following commands:

- `TRIGger:SBSW:MIL:FRAMe1:FLD1:DMIN 01100`

Defines the parameter by using the index <m> for the frame number and <n> for the field number.

- `TRIGger:SBSW:MIL:DMIN "Command", "Info", 01100`
  Defines the parameter by using the frame and field name.

TRIGger:SBSW:MILStd:CHKall 2007
TRIGger:SBSW:MILStd:CLR 2007
TRIGger:SBSW:MILStd:INVert 2008
TRIGger:SBSW:MILStd:RST 2008
TRIGger:SBSW:MILStd:FRENable 2008
TRIGger:SBSW:MILStd:FRAMe<fr>:ENABle 2008
TRIGger:SBSW:MILStd:BIT 2008
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:BIT 2008
TRIGger:SBSW:MILStd:DMAX 2009
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:DMAX 2009
TRIGger:SBSW:MILStd:DMIN 2009
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:DMIN 2009
TRIGger:SBSW:MILStd:DOPerator 2009
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:DOPerator 2009
TRIGger:SBSW:MILStd:FIENable 2010
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:ENABle 2010
TRIGger:SBSW:MILStd:IMAX 2010
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:IMAX 2010
TRIGger:SBSW:MILStd:IMIN 2011
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:IMIN 2011
TRIGger:SBSW:MILStd:IOPerator 2011
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:IOPerator 2011
TRIGger:SBSW:MILStd:ERENable 2011
TRIGger:SBSW:MILStd:ERRor<m>:ENABle 2011
SBUS<sb>:MILStd:SWTindex? 2012
SBUS<sb>:MILStd:SWTTime? 2012

TRIGger:SBSW:MILStd:CHKall

Enables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 848

TRIGger:SBSW:MILStd:CLR

Disables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 848

TRIGger:SBSW:MILStd:INVert

Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 848

TRIGger:SBSW:MILStd:RST

Presets the state of the selected frames and error types for the software trigger.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 848

TRIGger:SBSW:MILStd:FRENable <Frame>,<Enabler>
TRIGger:SBSW:MILStd:FRENable? <Enabler>
TRIGger:SBSW:MILStd:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 848

TRIGger:SBSW:MILStd:BIT <Frame>,<Field>,<Bit>
TRIGger:SBSW:MILStd:BIT? <Bit>
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 849

TRIGger:SBSW:MILStd:DMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:MILStd:DMAX? <Data>
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range for the software trigger, if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 849

TRIGger:SBSW:MILStd:DMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:MILStd:DMIN? <Data>
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 849

TRIGger:SBSW:MILStd:DOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:MILStd:DOPerator? <Operator>
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern of the software trigger in the selected field of the selected frame.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:

<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 849

TRIGger:SBSW:MILStd:FIENable <Frame>,<Field>,<Enabler>
TRIGger:SBSW:MILStd:FIENable? <Enabler>
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame of the software trigger.

Suffix:

<fr> Index of the frame

<fl> Index of the field

Parameters:

<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 849

TRIGger:SBSW:MILStd:IMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:MILStd:IMAX? <Data>
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range for the software trigger if the operator is set to `INRange`.

You can set the operator with `TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 849

TRIGger:SBSW:MILStd:IMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:MILStd:IMIN? <Data>
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> *

Parameters:
<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 849

TRIGger:SBSW:MILStd:IOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:MILStd:IOPerator? <Operator>
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 849

TRIGger:SBSW:MILStd:ERENable <ErrorName>,<Enabler>
TRIGger:SBSW:MILStd:ERENable? <Enabler>
TRIGger:SBSW:MILStd:ERRor<m>:ENABle <Enable>

Defines the error type for the software trigger.

Suffix:
<m> Index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 850

SBUS<sb>:MILStd:SWTindex?

Queries the software trigger index.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Index> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:MILStd:SWTTime?

Queries the software trigger time in seconds.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Time> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.17.5 Decode results

SBUS<sb>:MILStd:WCOunt? 2013
SBUS<sb>:MILStd:WORD<w>:FLDCount? 2013
SBUS<sb>:MILStd:WORD<w>:BITRate? 2013
SBUS<sb>:MILStd:WORD<w>:FLD<fl>:STATe? 2013
SBUS<sb>:MILStd:WORD<w>:FLD<fl>:LABel? 2014
SBUS<sb>:MILStd:WORD<w>:FLD<fl>:VALue? 2014
SBUS<sb>:MILStd:WORD<w>:FLD<fl>:FVALue? 2015
SBUS<sb>:MILStd:WORD<w>:DATA? 2015
SBUS<sb>:MILStd:WORD<w>:INFO? 2015
SBUS<sb>:MILStd:WORD<w>:RTADdress? 2015
SBUS<sb>:MILStd:WORD<w>:STARt? 2016
SBUS<sb>:MILStd:WORD<w>:STATus? 2016
SBUS<sb>:MILStd:WORD<w>:STOP? 2017
SBUS<sb>:MILStd:WORD<w>:SYMBol? 2017
SBUS<sb>:MILStd:WORD<w>:TYPE? 2017

SBUS<sb>:MILStd:WCOunt?

Returns the number of decoded words.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count> Total number of words.

Usage: Query only
Asynchronous command

SBUS<sb>:MILStd:WORD<w>:FLDCount?

Returns the number of fields available in the seleced word.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:MILStd:WORD<w>:BITRate?

Returns the bit rate of the word.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

Return values:
<PrimaryBitRate> Increment: 1
*RST: 0
Default unit: bps

Usage: Query only
Asynchronous command

SBUS<sb>:MILStd:WORD<w>:FLD<fl>:STATe?

Returns the overall state of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> Index of the frame

<fl> Index of the field

Return values:

<State> OK | SYNC | MANC | PAR | GAP | RT | INComplete | UNKNown

`OK`: the word is valid.
`SYNC`: synchronization error occured.
`MANC`: manchester coding error occured.
`PAR`: parity error occured.
`GAP`: timing gap error occured.
`RT`: remote terminal error occured.
`INComplete`: the sequence is not completely contained in the acquisition
`UNKNown`: unknown frame type

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:MILStd:WORD<w>:FLD<fl>:LABel?

Returns the label of the specified field in the specified word.

Suffix:

<sb> 1 to 4, index of the serial bus

<w> Index of the frame

<fl> Index of the field

Return values:

<Label>

Usage: Query only
Asynchronous command

SBUS<sb>:MILStd:WORD<w>:FLD<fl>:VALue?

Returns the value of the specified field in the specified word.

Suffix:

<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

<fl> Index of the field

Return values:

<Value> Range: 0 to 18446744073709551615
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:MILStd:WORD<w>:FLD<fl>:FVALue?

Returns the formatted value of the specified field in the specified word.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

<fl> Index of the field

Return values:
<FormattedValue>

Usage: Query only
Asynchronous command

SBUS<sb>:MILStd:WORD<w>:DATA?

Return the data pattern of the specified word.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

Return values:
<FrmDatPatt> List of comma separated values.

Usage: Query only
Asynchronous command

SBUS<sb>:MILStd:WORD<w>:INFO?

Returns the info value for the specified word.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

Return values:
<FrameInfo> Range: 0 to 2047
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:MILStd:WORD<w>:RTADdress?

Returns the RT address for the selected word.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

Return values:
<FrameRta> Range: 0 to 31
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:MILStd:WORD<w>:STARt?

Return the start time of the selected word.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

Return values:
<FrameStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:MILStd:WORD<w>:STATus?

Returns the overall state of the selected word.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

Return values:
<FrameState> OK | SYNC | MANC | PAR | GAP | RT | INComplete | UNKNown
`OK`: the word is valid.
`SYNC`: synchronization error occured.
`MANC`: manchester coding error occured.
`PAR`: parity error occured.
`GAP`: timing gap error occured.
`RT`: remote terminal error occured.
`INComplete`: the sequence is not completely contained in the acquisition

UNKNown: unknown frame type

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:MILStd:WORD<w>:STOP?

Returns the stop time of the selected word.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

Return values:
<FrameStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:MILStd:WORD<w>:SYMBol?

Returns the symbolic label of the specified word if the label list is enabled.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

Return values:
<SymbolicName>

Usage: Query only
Asynchronous command

SBUS<sb>:MILStd:WORD<w>:TYPE?

Returns the type of the specified word.

Suffix:
<sb> 1 to 4, index of the serial bus

<w> *
Index of the word

Return values:

<FrameType> UNKNown | DATA | CMD | STAT | CMST | IM

`CMD`: command word
`CMST`: command/status word
`IM`: inter message. Shows if there are gap errors or response timeout.

*RST: DATA

Usage: Query only
Asynchronous command

18.18.18 SpaceWire (option R&S MXO5-K530)

Before MXO 5 can accept the specific bus commands, make sure that:

- The decoding of the specified bus is enabled with `SBUS<sb>[:STATe]`.
- The bus is set to the correct type with `SBUS<sb>:TYPE`.

- Configuration....2018
- Filter....2021
- Format....2025
- Software trigger....2034
- Decode results....2039

18.18.18.1 Configuration

SBUS<sb>:SWIRe:DATA:SOURce....2018
SBUS<sb>:SWIRe:STRBe:SOURce....2019
SBUS<sb>:SWIRe:DATA:THReshold....2019
SBUS<sb>:SWIRe:DATA:HYSTeresis....2019
SBUS<sb>:SWIRe:STRBe:THReshold....2019
SBUS<sb>:SWIRe:STRBe:HYSTeresis....2020
SBUS<sb>:SWIRe:MINGap....2020
SBUS<sb>:SWIRe:MGAP....2020
SBUS<sb>:SWIRe:POSition....2020
SBUS<sb>:SWIRe:SCALe....2020

SBUS<sb>:SWIRe:DATA:SOURce Source

Selects the channel for the data signal source.

Suffix:

<sb> 1 to 4, index of the serial bus

Parameters:

Source C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Data Source" on page 824

SBUS<sb>:SWIRe:STRBe:SOURce <StrobeSource>

Selects the source for the strobe signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<StrobeSource> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Strobe Source" on page 824

SBUS<sb>:SWIRe:DATA:THReshold <DataThreshold>

Sets the threshold for the data channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DataThreshold>

Usage: Asynchronous command

Manual operation: See "Thresholds" on page 825

SBUS<sb>:SWIRe:DATA:HYSTeresis <DataHysteresis>

Sets the hysteresis for the data channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DataHysteresis>

Usage: Asynchronous command

Manual operation: See "Thresholds" on page 825

SBUS<sb>:SWIRe:STRBe:THReshold <StrobeThres>

Sets the threshold value for the digitization of the strobe signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<StrobeThres>

Usage: Asynchronous command

Manual operation: See "Thresholds" on page 825

SBUS<sb>:SWIRe:STRBe:HYSTeresis <StrobeHyst>

Sets a value for the hysteresis of the strobe signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<StrobeHyst>

Usage: Asynchronous command

Manual operation: See "Thresholds" on page 825

SBUS<sb>:SWIRe:MINGap <MinGapTime>
SBUS<sb>:SWIRe:MGAP <MinGapTime>

Sets the minimum duration of a gap. Any inactivity greater than this time is interpreted as a gap and leads to a resynchronization to the signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<MinGapTime>
Range: 1E-09 to 1
Increment: 1E-09
*RST: 2E-07
Default unit: s

Usage: Asynchronous command

Manual operation: See "Min Gap" on page 824

SBUS<sb>:SWIRe:POSition <Position>

Sets the vertical position of the SpaceWire signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Position>

Usage: Asynchronous command

SBUS<sb>:SWIRe:SCALe <Scale>

Sets the vertical scale of the SpaceWire signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Scale>

Usage: Asynchronous command

18.18.18.2 Filter

There are two commands for each parameter, that you can use for defining the SpaceWire settings.

For example, to set the *Frame type =SpaceWire-Frame* > *Field =Data* >*Data* value you can use one of the following commands:

- `SBUS:SWIRe:FILTer:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `SBUS:SWIRe:FILTer:DMIN "SpaceWire-Frame", "Data", 01100`
  Defines the parameter by using the frame and field name.

SBUS<sb>:SWIRe:FILTer:CHKall 2021
SBUS<sb>:SWIRe:FILTer:CLR 2022
SBUS<sb>:SWIRe:FILTer:INVert 2022
SBUS<sb>:SWIRe:FILTer:RST 2022
SBUS<sb>:SWIRe:FILTer:BIT 2022
SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:FLD<fl>:BIT 2022
SBUS<sb>:SWIRe:FILTer:ERENable 2023
SBUS<sb>:SWIRe:FILTer:ERRor<n>:ENABle 2023
SBUS<sb>:SWIRe:FILTer:DMAX 2023
SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:FLD<fl>:DMAX 2023
SBUS<sb>:SWIRe:FILTer:DMIN 2023
SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:FLD<fl>:DMIN 2023
SBUS<sb>:SWIRe:FILTer:DOPerator 2024
SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:FLD<fl>:DOPerator 2024
SBUS<sb>:SWIRe:FILTer:FIENable 2024
SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:FLD<fl>:ENABle 2024
SBUS<sb>:SWIRe:FILTer:FRENable 2025
SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:ENABle 2025

SBUS<sb>:SWIRe:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 827

SBUS<sb>:SWIRe:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 827

SBUS<sb>:SWIRe:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 827

SBUS<sb>:SWIRe:FILTer:RST

Presets the state of the selected frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 827

SBUS<sb>:SWIRe:FILTer:BIT <Frame>,<Field>,<Bit>
SBUS<sb>:SWIRe:FILTer:BIT? <Bit>
SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 827

SBUS<sb>:SWIRe:FILTer:ERENable <ErrorName>,<Enabler>
SBUS<sb>:SWIRe:FILTer:ERENable? <Enabler>
SBUS<sb>:SWIRe:FILTer:ERRor<n>:ENABle <Enable>

Defines the error type to be filtered on.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> index of the error

Parameters:
<Enable> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 828

SBUS<sb>:SWIRe:FILTer:DMAX <Frame>,<Field>,<Data>
SBUS<sb>:SWIRe:FILTer:DMAX? <Data>
SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 827

SBUS<sb>:SWIRe:FILTer:DMIN <Frame>,<Field>,<Data>
SBUS<sb>:SWIRe:FILTer:DMIN? <Data>
SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 827

SBUS<sb>:SWIRe:FILTer:DOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:SWIRe:FILTer:DOPerator? <Operator>
SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 827

SBUS<sb>:SWIRe:FILTer:FIENable <Frame>,<Field>,<Enabler>
SBUS<sb>:SWIRe:FILTer:FIENable? <Enabler>
SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 827

SBUS<sb>:SWIRe:FILTer:FRENable <Frame>,<Enabler>
SBUS<sb>:SWIRe:FILTer:FRENable? <Enabler>
SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:ENABle <Enable>

Enables the filtering on SpaceWire frames. Only the frames that match the selected filter conditions are displayed.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Enable" on page 827

18.18.18.3 Format

This section describes the commands to specify and query frame formats for the "SpaceWire" protocol.

SBUS<sb>:SWIRe:FORMat:SELect....2026
SBUS<sb>:SWIRe:FORMat:ADDFrame....2026
SBUS<sb>:SWIRe:FORMat:LOAD....2026
SBUS<sb>:SWIRe:FORMat:SAVE....2026
SBUS<sb>:SWIRe:FORMat:CLR....2027
SBUS<sb>:SWIRe:FORMat:FCOunt?....2027
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ADDField....2027
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLDCount?....2027
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:NAME....2028
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:COLor....2028
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:TYPE....2028
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ID1Field....2029
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ID2Field....2029
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ID3Field....2029
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ID1Value....2029
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ID2Value....2029
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ID3Value....2029
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:NAME....2029
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:COLor....2029
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:FSTBit....2030
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:BITCount....2030
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:REPetition....2031
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:BITorder....2031
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:FORMat....2031
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:ADDValue....2032
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue....2033
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel....2033

SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:UNIT 2033
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:PARA 2034
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:PARB 2034

SBUS<sb>:SWIRe:FORMat:SELect <Select>

Enables the format configuration

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Select> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show format" on page 829

SBUS<sb>:SWIRe:FORMat:ADDFrame

Appendes a new frame format to the frame list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Add frame" on page 829

SBUS<sb>:SWIRe:FORMat:LOAD <FileName>

Loads a the specified XML file with a list of frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Open" on page 830

SBUS<sb>:SWIRe:FORMat:SAVE <FileName>

Saves the current list of frame formats to an XML file with the specified name.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Save as" on page 830

SBUS<sb>:SWIRe:FORMat:CLR

Erases from the volatile memory all field descriptions and frame formats that you have created.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Edit list" on page 830

SBUS<sb>:SWIRe:FORMat:FCOunt?

Returns the number of available frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Edit list" on page 830

SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ADDField

Appends a new field description to the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Usage: Setting only
Asynchronous command

Manual operation: See "Add field" on page 831

SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLDCount?

Returns the number of field descriptions available for the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:NAME <Name>

Specifies the name for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Frame name" on page 831

SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:COLor <Color>

Specifies the color for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4278255615

Usage: Asynchronous command

Manual operation: See "Frame color" on page 831

SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:TYPE <Type>

Sets an original frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Type>

Usage: Asynchronous command

Manual operation: See "Frame type" on page 831

SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ID1Field <ID1Field>
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ID2Field <ID2Field>
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ID3Field <ID3Field>

Sets the identifying field type for the configured frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Field>

Usage: Asynchronous command

SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ID1Value <ID1Value>
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ID2Value <ID2Value>
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ID3Value <ID3Value>

Sets the value of the corresponding field type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Value>

Usage: Asynchronous command

Manual operation: See "ID<n> field" on page 831

SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:NAME <Name>

Specifies the name for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Field name" on page 832

SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:COLor <Color>

Specifies the color for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4294967040

Usage: Asynchronous command

Manual operation: See "Field color" on page 832

SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:FSTBit <FirstBit>

In order of transmission, sets the first bit of the specified field in the payload.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<FirstBit>

Range: 0 to 63
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "First bit" on page 832

SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:BITCount <BitCount>

Specifies the bit count, hence length, of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitCount>

Range: 1 to 64
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Bit count" on page 832

SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:REPetition <Repetition>

Sets the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Repetition> Range: 0 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Repetition" on page 833

SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:BITorder <BitOrder>

Specifies, in which order the algorithm evaluates the bits of the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitOrder> LSBF | MSBF

LSBF
Least significant bit first

MSBF
Most significant bit first

*RST: MSBF

Usage: Asynchronous command

Manual operation: See "Bit order" on page 833

SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:FORMat <NumericFormat>

Specifies the numerical format for the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<NumericFormat> HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG | DEC | LIST | FLIN

HEX
Hexadecimal format

OCT
Octal format

BIN
Binary format

ASCII = ASCii
ASCII format

SIGN
Signed, decimal format

DEC=USIG
Unsigned, decimal format

LIST
Value list

FLIN
Linear function

*RST: HEX

Usage: Asynchronous command

Manual operation: See "Numeric format" on page 833

SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:ADDValue

Creates a new hexagonal value for customization.

Available if `SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Related commands:

`SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue`

`SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel`

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Usage: Setting only
Asynchronous command

Manual operation: See "Add value" on page 834

SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue <Value>

Sets the hexagonal value to convert it into a labeled state.

Available if `SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:
<Value>
Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Value" on page 834

SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel <Label>

Sets the label to convert the corresponding hexagonal value to a labeled state.

Available if `SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:
<Label>

Usage: Asynchronous command

Manual operation: See "Label" on page 834

SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:UNIT <Unit>

Sets the unit for the linear function.

Available if `SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Unit>

Usage: Asynchronous command

Manual operation: See "Unit" on page 834

SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:PARA <ParameterA>
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:PARB <ParameterB>

Sets the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

Available if `SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<ParameterB>
Range: -1E+20 to 1E+20
Increment: 1E-12
*RST: 0

Usage: Asynchronous command

Manual operation: See "Parameter A,B" on page 834

18.18.18.4 Software trigger

There are two commands for each parameter, that you can use for defining the SpaceWire settings.

For example, to set the *Frame type =SpaceWire-Frame > Field =Data >Data* value you can use one of the following commands:

- `TRIGger:SBSW:SWIRe:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <fr> for the frame number and <fl> for the field number.
- `TRIGger:SBSW:SWIRe:DMIN "SpaceWire-Frame", "Data", 01100`
  Defines the parameter by using the frame and field name.

TRIGger:SBSW:SWIRe:CHKall 2035
TRIGger:SBSW:SWIRe:CLR 2035
TRIGger:SBSW:SWIRe:INVert 2035
TRIGger:SBSW:SWIRe:RST 2035
TRIGger:SBSW:SWIRe:FRENable 2036
TRIGger:SBSW:SWIRe:FRAMe<fr>:ENABle 2036
TRIGger:SBSW:SWIRe:BIT 2036
TRIGger:SBSW:SWIRe:FRAMe<fr>:FLD<fl>:BIT 2036

TRIGger:SBSW:SWIRe:DMAX....2036
TRIGger:SBSW:SWIRe:FRAMe<fr>:FLD<fl>:DMAX....2036
TRIGger:SBSW:SWIRe:DMIN....2037
TRIGger:SBSW:SWIRe:FRAMe<fr>:FLD<fl>:DMIN....2037
TRIGger:SBSW:SWIRe:DOPerator....2037
TRIGger:SBSW:SWIRe:FRAMe<fr>:FLD<fl>:DOPerator....2037
TRIGger:SBSW:SWIRe:FIENable....2037
TRIGger:SBSW:SWIRe:FRAMe<fr>:FLD<fl>:ENABle....2037
TRIGger:SBSW:SWIRe:ERENable....2038
TRIGger:SBSW:SWIRe:ERRor<m>:ENABle....2038
SBUS<sb>:SWIRe:SWTindex?....2038
SBUS<sb>:SWIRe:SWTTime?....2038

TRIGger:SBSW:SWIRe:CHKall

Enables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 835

TRIGger:SBSW:SWIRe:CLR

Disables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 835

TRIGger:SBSW:SWIRe:INVert

Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 835

TRIGger:SBSW:SWIRe:RST

Presets the state of the selected frames and error types for the software trigger.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 835

TRIGger:SBSW:SWIRe:FRENable <Frame>,<Enabler>
TRIGger:SBSW:SWIRe:FRENable? <Enabler>
TRIGger:SBSW:SWIRe:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 836

TRIGger:SBSW:SWIRe:BIT <Frame>,<Field>,<Bit>
TRIGger:SBSW:SWIRe:BIT? <Bit>
TRIGger:SBSW:SWIRe:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 836

TRIGger:SBSW:SWIRe:DMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:SWIRe:DMAX? <Data>
TRIGger:SBSW:SWIRe:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range for the software trigger, if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `TRIGger:SBSW:SWIRe:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 836

TRIGger:SBSW:SWIRe:DMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:SWIRe:DMIN? <Data>
TRIGger:SBSW:SWIRe:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 836

TRIGger:SBSW:SWIRe:DOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:SWIRe:DOPerator? <Operator>
TRIGger:SBSW:SWIRe:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern of the software trigger in the selected field of the selected frame.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 836

TRIGger:SBSW:SWIRe:FIENable <Frame>,<Field>,<Enabler>
TRIGger:SBSW:SWIRe:FIENable? <Enabler>
TRIGger:SBSW:SWIRe:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame of the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 836

TRIGger:SBSW:SWIRe:ERENable <ErrorName>,<Enabler>
TRIGger:SBSW:SWIRe:ERENable? <Enabler>
TRIGger:SBSW:SWIRe:ERRor<m>:ENABle <Enable>

Defines the error type for the software trigger.

Suffix:
<m> index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 837

SBUS<sb>:SWIRe:SWTindex?

Queries the software trigger index.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Index> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:SWIRe:SWTTime?

Queries the software trigger time in seconds.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:

<Time> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.18.5 Decode results

This section describes the commands to query the results of the decoding.

SBUS<sb>:SWIRe:FCOunt? 2039
SBUS<sb>:SWIRe:FRAMe<fr>:BITRate? 2039
SBUS<sb>:SWIRe:FRAMe<fr>:DATA? 2040
SBUS<sb>:SWIRe:FRAMe<fr>:CODParity? 2040
SBUS<sb>:SWIRe:FRAMe<fr>:DATParity? 2041
SBUS<sb>:SWIRe:FRAMe<fr>:ESCParity? 2041
SBUS<sb>:SWIRe:FRAMe<fr>:FLD<fl>:STATus? 2042
SBUS<sb>:SWIRe:FRAMe<fr>:FLD<fl>:TYPE? 2042
SBUS<sb>:SWIRe:FRAMe<fr>:FLD<fl>:VALue? 2043
SBUS<sb>:SWIRe:FRAMe<fr>:FLD<fl>:FVALue? 2043
SBUS<sb>:SWIRe:FRAMe<fr>:STATe? 2043
SBUS<sb>:SWIRe:FRAMe<fr>:STARt? 2044
SBUS<sb>:SWIRe:FRAMe<fr>:STOP? 2044
SBUS<sb>:SWIRe:FRAMe<fr>:TYPE? 2045

SBUS<sb>:SWIRe:FCOunt?

Returns the number of decoded frames.

Suffix:

<sb> 1 to 4, index of the serial bus

Return values:

<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:SWIRe:FRAMe<fr>:BITRate?

Returns the bit rate of the frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<PrimaryBitRate> Increment: 1
*RST: 0
Default unit: bps

Usage: Query only
Asynchronous command

SBUS<sb>:SWIRe:FRAMe<fr>:DATA?

Returns the data of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameData>

Usage: Query only
Asynchronous command

SBUS<sb>:SWIRe:FRAMe<fr>:CODParity?

If the frame has the `FCT`, `EOP`, `EEP` or `Code` field, the command returns the parity state of this field, which can take values of `OK` or `PARity`. For a description of these fields, see Section 14.16.1, "SpaceWire basics", on page 822.

If the frame has none of these fields, the command can return the states `LENGth`, `AMBiguous` or `INComplete` of the frame, as described below.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<ParityCode> OK | PARity | LENGth | AMBiguous | INComplete

OK
The parity check for the field covered by this parity bit passes.

PARity
The parity of the field is not correct.

LENGth
Regardless of the field, the length of the frame is not as expected, indicating an error.

AMBiguous
Regardless of the field, the frame is ambiguous.

INComplete
Regardless of the field, the frame is incomplete.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:SWIRe:FRAMe<fr>:DATParity?

If the frame has the `Data` field, the command returns the parity state of this field, which can take values of `OK` or `PARity`. The `Data` field only appears in `Data` and `Time` frames, see Figure 14-43 and Figure 14-45.

If the frame has no `Data` field, the command can return the states `LENGth`, `AMBiguous` or `INComplete` of the frame, as described below.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<ParityData> OK | PARity | LENGth | AMBiguous | INComplete

OK
The parity check for the `Data` field passes.

PARity
The parity of the `Data` field is not correct.

LENGth
Regardless of the `Data` field, the length of the frame is not as expected, indicating an error

AMBiguous
Regardless of the `Data` field, the frame is ambiguous.

INComplete
Regardless of the `Data` field, the frame is incomplete.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:SWIRe:FRAMe<fr>:ESCParity?

If the frame has the `ESC` field, the command returns the parity state of this field, which can take values of `OK` or `PARity`. See Figure 14-44.

If the frame has no `ESC` field, the command can return the states `LENGth`, `AMBiguous` or `INComplete` of the frame, as described below.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<ParityEscape> OK | PARity | LENGth | AMBiguous | INComplete

OK
The parity check for the ESC field passes.

PARity
The parity of the ESC field is not correct.

LENGth
Regardless of the ESC field, the length of the frame is not as expected, indicating an error.

AMBiguous
Regardless of the ESC field, the frame is ambiguous.

INComplete
Regardless of the ESC field, the frame is incomplete.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:SWIRe:FRAMe<fr>:FLD<fl>:STATus?

Returns the overall state of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<State> OK | PARity | LENGth | AMBiguous | INComplete

OK
The parity check for the selected field passes.

PARity
Parity is not as expected, indicating an error.

LENGth
The length of the field is not as expected, indicating an error.

AMBiguous
The frame is ambiguous.

INComplete
The frame is incomplete.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:SWIRe:FRAMe<fr>:FLD<fl>:TYPE?

Returns the label of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Label>

Usage: Query only
Asynchronous command

SBUS<sb>:SWIRe:FRAMe<fr>:FLD<fl>:VALue?

Returns the value of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Value> *RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:SWIRe:FRAMe<fr>:FLD<fl>:FVALue?

Returns the formatted value of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<FormattedValue>

Usage: Query only
Asynchronous command

SBUS<sb>:SWIRe:FRAMe<fr>:STATe?

Returns the overall state of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameState> OK | PARity | LENGth | AMBiguous | INComplete

OK
The frame is valid.

PARity
Parity is not as expected, indicating an error

LENGth
Length of the frame is not as expected, indicating an error

AMBiguous
The frame is ambiguous.

INComplete
The frame is incomplete.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:SWIRe:FRAMe<fr>:STARt?

Returns the start time of the specified frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:SWIRe:FRAMe<fr>:STOP?

Returns the end time of the specified frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<FrameStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:SWIRe:FRAMe<fr>:TYPE?

Returns the type of the specified decoded frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameType> DATA | TCOD | FCT | NULL | EOP | EEP | BADX

DATA
Data frame

TCOD
Time-code frame

FCT
Flow control token

NULL
Null symbol

EOP
End of packet

EEP
Error end of packet

BADX
Illegal escape code

*RST: DATA

Usage: Query only
Asynchronous command

18.18.19 SPMI (option R&S MXO5-K550)

Before MXO 5 can accept the specific bus commands, make sure that:

- The decoding of the specified bus is enabled with `SBUS<sb>[:STATe]`.
- The bus is set to the correct type with `SBUS<sb>:TYPE`.

- Configuration....2046
- Filter....2050
- Format....2055
- Software trigger....2065
- Decode results....2070

18.18.19.1 Configuration

SBUS<sb>:SPMI:GSIDenable....2046
SBUS<sb>:SPMI:GIDValue....2046
SBUS<sb>:SPMI:GTCHenable....2047
SBUS<sb>:SPMI:GTWDith....2047
SBUS<sb>:SPMI:SCLK:HYSTeresis....2047
SBUS<sb>:SPMI:SCLK:SOURce....2047
SBUS<sb>:SPMI:SCLK:THReshold....2048
SBUS<sb>:SPMI:SDATa:HYSTeresis....2048
SBUS<sb>:SPMI:SDATa:SOURce....2048
SBUS<sb>:SPMI:SDATa:THReshold....2049
SBUS<sb>:SPMI:POSition....2049
SBUS<sb>:SPMI:SCALe....2049
SBUS<sb>:SPMI:SYMBols....2049
SBUS<sb>:SPMI:NEWList....2050

SBUS<sb>:SPMI:GSIDenable <UseGSID>

Enables the use of the group sub ID (GSID). You can set the GSID with `SBUS<sb>:SPMI:GIDValue`.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<UseGSID> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Use GSID, GSID (hex)" on page 853

SBUS<sb>:SPMI:GIDValue <GSID>

Sets a value for the group sub index. Available, if `SBUS<sb>:SPMI:GSIDenable` is set to `ON`.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<GSID> Range: 0 to 15
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Use GSID, GSID (hex)" on page 853

SBUS<sb>:SPMI:GTCHenable <UseGlitchFilter>

Enables the glitch filter. A glitch filter can help to filter out short-duration voltage spikes/ glitches that can occur on the communication line.

You can set the glitch filter width with `SBUS<sb>:SPMI:GTWDith`.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<UseGlitchFilter> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Glitch filter, Glitch width" on page 854

SBUS<sb>:SPMI:GTWDith <GlitchFilterWdt>

Sets the glitch width. Any signal transitions with a duration smaller than this value will be considered a glitch and filtered out.

This is available, if `SBUS<sb>:SPMI:GTCHenable` is set to `ON`.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<GlitchFilterWdt> Range: 1E-15 to 1000000000
Increment: 1E-10
*RST: 1E-09
Default unit: s

Usage: Asynchronous command

Manual operation: See "Glitch filter, Glitch width" on page 854

SBUS<sb>:SPMI:SCLK:HYSTeresis <Hysteresis>

Sets a value for the hysteresis for the clock line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 854

SBUS<sb>:SPMI:SCLK:SOURce <ClockSource>

Sets the source of the clock line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<ClockSource> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "SCLK" on page 853

SBUS<sb>:SPMI:SCLK:THReshold <Threshold>

Sets a user-defined threshold value for the clock line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Threshold>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 854

SBUS<sb>:SPMI:SDATa:HYSTeresis <SDATA Hyst>

Sets a value for the hysteresis for the source data channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SDATA Hyst>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 854

SBUS<sb>:SPMI:SDATa:SOURce <DataSource>

Sets the source of the data line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DataSource> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "SDATA" on page 853

SBUS<sb>:SPMI:SDATa:THReshold <SDATA Thres>

Sets a user-defined threshold value for the source data line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SDATA Thres>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 854

SBUS<sb>:SPMI:POSition <SPMI position>

Sets the vertical position of the SPMI signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SPMI position>

Usage: Asynchronous command

SBUS<sb>:SPMI:SCALe <SPMI scale>

Sets the vertical position of the SPMI signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SPMI scale>

Usage: Asynchronous command

SBUS<sb>:SPMI:SYMBols <ShowSymbols>

Activates the symbol list to be used for decoding.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<ShowSymbols> OFF | ON
*RST: OFF

Usage: Asynchronous command

SBUS<sb>:SPMI:NEWList <FileName>

Loads a symbol list file.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName> String parameter with path and filename.

Usage: Setting only
Asynchronous command

18.18.19.2 Filter

There are two commands for each parameter, that you can use for defining the SPMI settings.

For example, to set the *Frame type =Register 0 Write* > *Field =Data >00* value you can use one of the following commands:

- `SBUS:SPMI:FILTer:FRAMe1:FLD1:DMIN 00`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `SBUS:SPMI:FILTer:DMIN "Register 0 Write", "Data", 00`
  Defines the parameter by using the frame and field name.

SBUS<sb>:SPMI:FILTer:CHKall....2051
SBUS<sb>:SPMI:FILTer:CLR....2051
SBUS<sb>:SPMI:FILTer:INVert....2051
SBUS<sb>:SPMI:FILTer:RST....2051
SBUS<sb>:SPMI:FILTer:BIT....2051
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:BIT....2051
SBUS<sb>:SPMI:FILTer:DMAX....2052
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:DMAX....2052
SBUS<sb>:SPMI:FILTer:DMIN....2052
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:DMIN....2052
SBUS<sb>:SPMI:FILTer:DOPerator....2053
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:DOPerator....2053
SBUS<sb>:SPMI:FILTer:ERENable....2053
SBUS<sb>:SPMI:FILTer:ERRor<n>:ENABle....2053
SBUS<sb>:SPMI:FILTer:IOPerator....2053
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:IOPerator....2053
SBUS<sb>:SPMI:FILTer:IMIN....2054
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:IMIN....2054
SBUS<sb>:SPMI:FILTer:IMAX....2054
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:IMAX....2054
SBUS<sb>:SPMI:FILTer:FRENable....2055
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:ENABle....2055
SBUS<sb>:SPMI:FILTer:FIENable....2055
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:ENABle....2055

SBUS<sb>:SPMI:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 856

SBUS<sb>:SPMI:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 856

SBUS<sb>:SPMI:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 856

SBUS<sb>:SPMI:FILTer:RST

Presets the state of the selected frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 856

SBUS<sb>:SPMI:FILTer:BIT <Frame>,<Field>,<Bit>
SBUS<sb>:SPMI:FILTer:BIT? <Bit>
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 857

SBUS<sb>:SPMI:FILTer:DMAX <Frame>,<Field>,<Data>
SBUS<sb>:SPMI:FILTer:DMAX? <Data>
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 857

SBUS<sb>:SPMI:FILTer:DMIN <Frame>,<Field>,<Data>
SBUS<sb>:SPMI:FILTer:DMIN? <Data>
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 857

SBUS<sb>:SPMI:FILTer:DOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:SPMI:FILTer:DOPerator? <Operator>
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 857

SBUS<sb>:SPMI:FILTer:ERENable <ErrorName>,<Enabler>
SBUS<sb>:SPMI:FILTer:ERENable? <Enabler>
SBUS<sb>:SPMI:FILTer:ERRor<n>:ENABle <Enable>

Defines the error type to be filtered on.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> Index of the error

Parameters:
<Enable> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 858

SBUS<sb>:SPMI:FILTer:IOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:SPMI:FILTer:IOPerator? <Operator>
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 857

SBUS<sb>:SPMI:FILTer:IMIN <Frame>,<Field>,<Data>
SBUS<sb>:SPMI:FILTer:IMIN? <Data>
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 857

SBUS<sb>:SPMI:FILTer:IMAX <Frame>,<Field>,<Data>
SBUS<sb>:SPMI:FILTer:IMAX? <Data>
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if the operator is set to `INRange`.

You can set the operator with `SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 857

SBUS<sb>:SPMI:FILTer:FRENable <Frame>,<Enabler>
SBUS<sb>:SPMI:FILTer:FRENable? <Enabler>
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:ENABle <Enable>

Enables the filtering on SPMI frames. Only the frames that match the selected filter conditions are displayed.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 857

SBUS<sb>:SPMI:FILTer:FIENable <Frame>,<Field>,<Enabler>
SBUS<sb>:SPMI:FILTer:FIENable? <Enabler>
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 857

18.18.19.3 Format

This section describes the commands to specify and query frame formats for the "SPMI" protocol.

SBUS<sb>:SPMI:FORMat:SELect 2056
SBUS<sb>:SPMI:FORMat:ADDFrame 2056
SBUS<sb>:SPMI:FORMat:LOAD 2056
SBUS<sb>:SPMI:FORMat:SAVE 2057
SBUS<sb>:SPMI:FORMat:CLR 2057
SBUS<sb>:SPMI:FORMat:FCOunt? 2057
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ADDField 2058
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLDCount? 2058
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:NAME 2058

SBUS<sb>:SPMI:FORMat:FRAMe<fr>:COLor ... 2058
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:TYPE ... 2059
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ID1Field ... 2059
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ID2Field ... 2059
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ID3Field ... 2059
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ID1Value ... 2059
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ID2Value ... 2059
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ID3Value ... 2059
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:NAME ... 2060
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:COLor ... 2060
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:FSTBit ... 2060
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:BITCount ... 2061
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:REPetition ... 2061
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:BITorder ... 2061
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:FORMat ... 2062
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:ADDValue ... 2063
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue ... 2063
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel ... 2063
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:UNIT ... 2064
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:PARA ... 2064
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:PARB ... 2064

SBUS<sb>:SPMI:FORMat:SELect <Select>

Enables the format configuration

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Select> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show format" on page 858

SBUS<sb>:SPMI:FORMat:ADDFrame

Appendes a new frame format to the frame list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Add frame" on page 858

SBUS<sb>:SPMI:FORMat:LOAD <FileName>

Loads a the specified XML file with a list of frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Open" on page 859

SBUS<sb>:SPMI:FORMat:SAVE <FileName>

Saves the current list of frame formats to an XML file with the specified name.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Save as" on page 859

SBUS<sb>:SPMI:FORMat:CLR

Erases from the volatile memory all field descriptions and frame formats that you have created.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Edit list" on page 859

SBUS<sb>:SPMI:FORMat:FCOunt?

Returns the number of available frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Edit list" on page 859

SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ADDField

Appends a new field description to the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Usage: Setting only
Asynchronous command

Manual operation: See "Add field" on page 860

SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLDCount?

Returns the number of field descriptions available for the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:SPMI:FORMat:FRAMe<fr>:NAME <Name>

Specifies the name for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Frame name" on page 860

SBUS<sb>:SPMI:FORMat:FRAMe<fr>:COLor <Color>

Specifies the color for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.
Range: 0 to 4294967295
Increment: 1
*RST: 4278255615

Usage: Asynchronous command

Manual operation: See "Frame color" on page 860

SBUS<sb>:SPMI:FORMat:FRAMe<fr>:TYPE <Type>

Sets an original frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Type>

Usage: Asynchronous command

Manual operation: See "Frame type" on page 860

SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ID1Field <ID1Field>
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ID2Field <ID2Field>
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ID3Field <ID3Field>

Sets the identifying field type for the configured frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Field>

Usage: Asynchronous command

Manual operation: See "ID<n> field" on page 860

SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ID1Value <ID1Value>
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ID2Value <ID2Value>
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ID3Value <ID3Value>

Sets the value of the corresponding field type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Value>

Usage: Asynchronous command

Manual operation: See "ID<n> value" on page 860

SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:NAME <Name>

Specifies the name for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Field name" on page 861

SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:COLor <Color>

Specifies the color for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4294967040

Usage: Asynchronous command

Manual operation: See "Field color" on page 861

SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:FSTBit <FirstBit>

In order of transmission, sets the first bit of the specified field in the payload.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<FirstBit> Range: 0 to 63
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "First bit" on page 861

SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:BITCount <BitCount>

Specifies the bit count, hence length, of the selected field in the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<BitCount> Range: 1 to 64
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Bit count" on page 861

SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:REPetition <Repetition>

Sets the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Repetition> Range: 0 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Repetition" on page 862

SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:BITorder <BitOrder>

Specifies, in which order the algorithm evaluates the bits of the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitOrder> LSBF | MSBF

LSBF
Least significant bit first

MSBF
Most significant bit first

*RST: MSBF

Usage: Asynchronous command

Manual operation: See "Bit order" on page 862

SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:FORMat <NumericFormat>

Specifies the numerical format for the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<NumericFormat> HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG | DEC | LIST | FLIN

HEX
Hexadecimal format

OCT
Octal format

BIN
Binary format

ASCII = ASCii
ASCII format

SIGN
Signed, decimal format

DEC=USIG
Unsigned, decimal format

LIST
Value list

FLIN
Linear function

*RST: HEX

Usage: Asynchronous command

Manual operation: See "Numeric format" on page 862

SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:ADDValue

Creates a new hexagonal value for customization.

Available if `SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Related commands:

`SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue`

`SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel`

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Usage: Setting only
Asynchronous command

Manual operation: See "Add value" on page 863

SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue <Value>

Sets the hexagonal value to convert it into a labeled state.

Available if `SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:

<Value>
Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Value" on page 863

SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel <Label>

Sets the label to convert the corresponding hexagonal value to a labeled state.

Available if `SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field
<p> Index of the value

Parameters:
<Label>

Usage: Asynchronous command

Manual operation: See "Label" on page 863

SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:UNIT <Unit>

Sets the unit for the linear function.

Available if `SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<Unit>

Usage: Asynchronous command

Manual operation: See "Unit" on page 863

SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:PARA <ParameterA>
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:PARB <ParameterB>

Sets the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

Available if `SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<ParameterB> Range: -1E+20 to 1E+20
Increment: 1E-12
*RST: 0

Usage: Asynchronous command

Manual operation: See "Parameter A,B" on page 863

18.18.19.4 Software trigger

There are two commands for each parameter, that you can use for defining the SPMI settings.

For example, to set the *Frame type =Register 0 Write* > *Field =Data >00* value you can use one of the following commands:

- `TRIGger:SBSW:SPMI:FRAMe1:FLD1:DMIN 00`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `TRIGger:SBSW:SPMI:DMIN "Register 0 Write", "Data", 00`
  Defines the parameter by using the frame and field name.

TRIGger:SBSW:SPMI:CHKall....2065
TRIGger:SBSW:SPMI:CLR....2066
TRIGger:SBSW:SPMI:INVert....2066
TRIGger:SBSW:SPMI:RST....2066
TRIGger:SBSW:SPMI:FRENable....2066
TRIGger:SBSW:SPMI:FRAMe<fr>:ENABle....2066
TRIGger:SBSW:SPMI:BIT....2066
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:BIT....2066
TRIGger:SBSW:SPMI:DMAX....2067
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:DMAX....2067
TRIGger:SBSW:SPMI:DMIN....2067
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:DMIN....2067
TRIGger:SBSW:SPMI:DOPerator....2068
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:DOPerator....2068
TRIGger:SBSW:SPMI:FIENable....2068
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:ENABle....2068
TRIGger:SBSW:SPMI:IMAX....2068
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:IMAX....2068
TRIGger:SBSW:SPMI:IMIN....2069
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:IMIN....2069
TRIGger:SBSW:SPMI:IOPerator....2069
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:IOPerator....2069
TRIGger:SBSW:SPMI:ERENable....2069
TRIGger:SBSW:SPMI:ERRor<m>:ENABle....2069
SBUS<sb>:SPMI:SWTindex?....2070
SBUS<sb>:SPMI:SWTTime?....2070

TRIGger:SBSW:SPMI:CHKall

Enables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 865

TRIGger:SBSW:SPMI:CLR

Disables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 865

TRIGger:SBSW:SPMI:INVert

Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 865

TRIGger:SBSW:SPMI:RST

Presets the state of the selected frames and error types for the software trigger.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 865

TRIGger:SBSW:SPMI:FRENable <Frame>,<Enabler>
TRIGger:SBSW:SPMI:FRENable? <Enabler>
TRIGger:SBSW:SPMI:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 865

TRIGger:SBSW:SPMI:BIT <Frame>,<Field>,<Bit>
TRIGger:SBSW:SPMI:BIT? <Bit>
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 865

TRIGger:SBSW:SPMI:DMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:SPMI:DMAX? <Data>
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range for the software trigger, if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 865

TRIGger:SBSW:SPMI:DMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:SPMI:DMIN? <Data>
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 865

TRIGger:SBSW:SPMI:DOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:SPMI:DOPerator? <Operator>
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern of the software trigger in the selected field of the selected frame.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 865

TRIGger:SBSW:SPMI:FIENable <Frame>,<Field>,<Enabler>
TRIGger:SBSW:SPMI:FIENable? <Enabler>
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame of the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 865

TRIGger:SBSW:SPMI:IMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:SPMI:IMAX? <Data>
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range for the software trigger if the operator is set to `INRange`.

You can set the operator with `TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 865

TRIGger:SBSW:SPMI:IMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:SPMI:IMIN? <Data>
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range for the software trigger.

Suffix:

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 865

TRIGger:SBSW:SPMI:IOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:SPMI:IOPerator? <Operator>
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame for the software trigger.

Suffix:

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 865

TRIGger:SBSW:SPMI:ERENable <ErrorName>,<Enabler>
TRIGger:SBSW:SPMI:ERENable? <Enabler>
TRIGger:SBSW:SPMI:ERRor<m>:ENABle <Enable>

Defines the error type for the software trigger.

Suffix:
<m> Index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 867

SBUS<sb>:SPMI:SWTindex?

Queries the software trigger index.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Index> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:SPMI:SWTTime?

Queries the software trigger time in seconds.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Time> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.19.5 Decode results

SBUS<sb>:SPMI:FCOunt? 2071
SBUS<sb>:SPMI:FRAMe<fr>:ADDRess? 2071
SBUS<sb>:SPMI:FRAMe<fr>:BC? 2071
SBUS<sb>:SPMI:FRAMe<fr>:DATA? 2072
SBUS<sb>:SPMI:FRAMe<fr>:FLDCount? 2072
SBUS<sb>:SPMI:FRAMe<fr>:FLD<fl>:FVALue? 2072

SBUS<sb>:SPMI:FRAMe<fr>:FLD<fl>:LABel? 2073
SBUS<sb>:SPMI:FRAMe<fr>:FLD<fl>:STATe? 2073
SBUS<sb>:SPMI:FRAMe<fr>:FLD<fl>:VALue? 2073
SBUS<sb>:SPMI:FRAMe<fr>:RBRate? 2074
SBUS<sb>:SPMI:FRAMe<fr>:SA? 2074
SBUS<sb>:SPMI:FRAMe<fr>:STARt? 2074
SBUS<sb>:SPMI:FRAMe<fr>:STATus? 2074
SBUS<sb>:SPMI:FRAMe<fr>:STOP? 2075
SBUS<sb>:SPMI:FRAMe<fr>:TYPE? 2075
SBUS<sb>:SPMI:FRAMe<fr>:WBRate? 2076
SBUS<sb>:SPMI:FRAMe<fr>:SYMBol? 2076

SBUS<sb>:SPMI:FCOunt?

Returns the number of decoded frames in the acquisition.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:SPMI:FRAMe<fr>:ADDRess?

Returns the address of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameADDR> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:SPMI:FRAMe<fr>:BC?

Returns the BC of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameBC> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:SPMI:FRAMe<fr>:DATA?

Returns the data value of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameData>

Usage: Query only

SBUS<sb>:SPMI:FRAMe<fr>:FLDCount?

Returns the field count of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:SPMI:FRAMe<fr>:FLD<fl>:FVALue?

Returns the formatted value of the specified byte.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<FormattedValue>

Usage: Query only
Asynchronous command

SBUS<sb>:SPMI:FRAMe<fr>:FLD<fl>:LABel?

Returns the label of the fields in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Label>

Usage: Query only
Asynchronous command

SBUS<sb>:SPMI:FRAMe<fr>:FLD<fl>:STATe?

Returns the overall state of the frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<State> OK | NOReponse | ACKerror | BPERror | PARerror | LENerror | ARBerror | SSCerror | CMDerror | CODerror | INComplete

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:SPMI:FRAMe<fr>:FLD<fl>:VALue?

Returns the data value of the specified field.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Value> Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:SPMI:FRAMe<fr>:RBRate?

Returns the read bit rate of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameRBR> Increment: 1
*RST: 0
Default unit: bps

Usage: Query only

SBUS<sb>:SPMI:FRAMe<fr>:SA?

Returns the address of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameSA> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:SPMI:FRAMe<fr>:STARt?

Returns the start time of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:SPMI:FRAMe<fr>:STATus?

Returns the overall state of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameState> OK | NOReponse | ACKerror | BPERror | PARerror | LENerror | ARBerror | SSCerror | CMDerror | CODerror | INComplete

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:SPMI:FRAMe<fr>:STOP?

Returns the stop time of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:SPMI:FRAMe<fr>:TYPE?

Returns the frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameType> RZWR | RWR | RRD | ERWR | ERRD | ERWL | ERRL | MAWR | MARD | BMRD | BSRD | TBOW | REST | SLEP | SHUT | WAK | AUTH | INV | UNKN | ARB

`RZWR`: register 0 write
`RWR`: register write
`RRD`: register read
`ERWR`: extended register write
`ERRD`: extended register read
`ERWL`: extended register write long
`ERRL`: extended register read long
`MAWR`: main write
`MARD`: main read

BMRD: device descriptor block main read
BSRD: device descriptor block sub read
TBOW: transfer bus ownership
REST: reset
SLEP: sleep
SHUT: shutdown
WAK: wakeup
AUTH: authenticate
INV: invalid
UNKN: unknown
ARB: arbitration frame

*RST: RZWR

Usage: Query only
Asynchronous command

SBUS<sb>:SPMI:FRAMe<fr>:WBRate?

Returns the write bit rate of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameWBR> Increment: 1
*RST: 0
Default unit: bps

Usage: Query only

SBUS<sb>:SPMI:FRAMe<fr>:SYMBol?

Returns the symbolic label of the specified frame if the label list is enabled.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<SymbolicName> String with symbolic name of the address
String with the symbolic name of the frame

Usage: Query only
Asynchronous command

18.18.20 RFFE (option R&S MXO5-K550)

Before MXO 5 can accept the specific bus commands, make sure that:

- The decoding of the specified bus is enabled with `SBUS<sb>[:STATe]`.
- The bus is set to the correct type with `SBUS<sb>:TYPE`.

18.18.20.1 Configuration

SBUS<sb>:RFFE:CLOCk:HYSTeresis....2077
SBUS<sb>:RFFE:CLOCk:SOURce....2077
SBUS<sb>:RFFE:CLOCk:THReshold....2077
SBUS<sb>:RFFE:DATA:HYSTeresis....2078
SBUS<sb>:RFFE:DATA:SOURce....2078
SBUS<sb>:RFFE:DATA:THReshold....2078
SBUS<sb>:RFFE:GFILter....2079
SBUS<sb>:RFFE:GFWidth....2079
SBUS<sb>:RFFE:POSition....2079
SBUS<sb>:RFFE:RDMD....2079
SBUS<sb>:RFFE:SCALe....2080

SBUS<sb>:RFFE:CLOCk:HYSTeresis <Hysteresis>

Sets a hysteresis for the clock line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 873

SBUS<sb>:RFFE:CLOCk:SOURce <SourceClock>

Sets the source of the clock line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SourceClock> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "SCLK" on page 873

SBUS<sb>:RFFE:CLOCk:THReshold <Threshold>

Sets a threshold value for the clock line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Threshold>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 873

SBUS<sb>:RFFE:DATA:HYSTeresis <DATA Hyst>

Sets a hysteresis for the data.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DATA Hyst>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 873

SBUS<sb>:RFFE:DATA:SOURce <SourceData>

Sets the source of the data line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<SourceData> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "SDATA" on page 873

SBUS<sb>:RFFE:DATA:THReshold <DATA Threshold>

Sets a threshold value for the data line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DATA Threshold>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 873

SBUS<sb>:RFFE:GFILter <GlitchFilter>

Enables the glitch filter on the SCLK and SDATA lines to improve decode accuracy.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<GlitchFilter> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Use glitch filter, Glitch filter width" on page 873

SBUS<sb>:RFFE:GFWidth <GlitchFilterWdt>

Sets the maximum glitch width to be ignored.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<GlitchFilterWdt> Range: 1E-11 to 1E-08
Increment: 1E-11
*RST: 1E-09
Default unit: s

Usage: Asynchronous command

Manual operation: See "Use glitch filter, Glitch filter width" on page 873

SBUS<sb>:RFFE:POSition <RFFE position>

Sets the vertical position of the RFFE signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<RFFE position>

Usage: Asynchronous command

SBUS<sb>:RFFE:RDMD <ReadMode>

Selects, if the standard or synchronous read mode is used.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:

<ReadMode> STRD | SREAD

`STRD`: standard

`SREAD`: synchronous read

*RST: STRD

Usage: Asynchronous command

Manual operation: See "Read mode" on page 873

SBUS<sb>:RFFE:SCALe <RFFE scale>

Set the vertical scale of the indicated RFFE signal.

Suffix:

<sb> 1 to 4, index of the serial bus

Parameters:

<RFFE scale>

Usage: Asynchronous command

18.18.20.2 Filter

There are two commands for each parameter, that you can use for defining the RFFE settings.

For example, to set the *Frame type =Register 0 Write > Field =Data >01100* value you can use one of the following commands:

- `SBUS:RFFE:FILTer:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `SBUS:RFFE:FILTer:DMIN "Register 0 Write", "Data", 01100`
  Defines the parameter by using the frame and field name.

SBUS<sb>:RFFE:FILTer:CHKall....2081
SBUS<sb>:RFFE:FILTer:CLR....2081
SBUS<sb>:RFFE:FILTer:INVert....2081
SBUS<sb>:RFFE:FILTer:RST....2081
SBUS<sb>:RFFE:FILTer:FRENable....2082
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:ENABle....2082
SBUS<sb>:RFFE:FILTer:BIT....2082
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:BIT....2082
SBUS<sb>:RFFE:FILTer:DMAX....2082
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:DMAX....2082
SBUS<sb>:RFFE:FILTer:DMIN....2083
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:DMIN....2083
SBUS<sb>:RFFE:FILTer:DOPerator....2083
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:DOPerator....2083
SBUS<sb>:RFFE:FILTer:FIENable....2084
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:ENABle....2084

SBUS<sb>:RFFE:FILTer:IMAX 2084
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:IMAX 2084
SBUS<sb>:RFFE:FILTer:IMIN 2084
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:IMIN 2084
SBUS<sb>:RFFE:FILTer:IOPerator 2085
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:IOPerator 2085
SBUS<sb>:RFFE:FILTer:ERENable 2085
SBUS<sb>:RFFE:FILTer:ERRor<n>:ENABle 2085

SBUS<sb>:RFFE:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 875

SBUS<sb>:RFFE:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 875

SBUS<sb>:RFFE:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 875

SBUS<sb>:RFFE:FILTer:RST

Presets the state of the selected frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 875

SBUS<sb>:RFFE:FILTer:FRENable <Frame>,<Enabler>
SBUS<sb>:RFFE:FILTer:FRENable? <Enabler>
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:ENABle <Enable>

Enables the filtering on RFFE frames. Only the frames that match the selected filter conditions are displayed.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

SBUS<sb>:RFFE:FILTer:BIT <Frame>,<Field>,<Bit>
SBUS<sb>:RFFE:FILTer:BIT? <Bit>
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 876

SBUS<sb>:RFFE:FILTer:DMAX <Frame>,<Field>,<Data>
SBUS<sb>:RFFE:FILTer:DMAX? <Data>
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 876

SBUS<sb>:RFFE:FILTer:DMIN <Frame>,<Field>,<Data>
SBUS<sb>:RFFE:FILTer:DMIN? <Data>
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 876

SBUS<sb>:RFFE:FILTer:DOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:RFFE:FILTer:DOPerator? <Operator>
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 876

SBUS<sb>:RFFE:FILTer:FIENable <Frame>,<Field>,<Enabler>
SBUS<sb>:RFFE:FILTer:FIENable? <Enabler>
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Enable" on page 876

SBUS<sb>:RFFE:FILTer:IMAX <Frame>,<Field>,<Data>
SBUS<sb>:RFFE:FILTer:IMAX? <Data>
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if the operator is set to `INRange`.

You can set the operator with `SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 876

SBUS<sb>:RFFE:FILTer:IMIN <Frame>,<Field>,<Data>
SBUS<sb>:RFFE:FILTer:IMIN? <Data>
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 876

SBUS<sb>:RFFE:FILTer:IOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:RFFE:FILTer:IOPerator? <Operator>
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 876

SBUS<sb>:RFFE:FILTer:ERENable <ErrorName>,<Enabler>
SBUS<sb>:RFFE:FILTer:ERENable? <Enabler>
SBUS<sb>:RFFE:FILTer:ERRor<n>:ENABle <Enable>

Defines the error type to be filtered on.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> Index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 877

18.18.20.3 Format

This section describes the commands to specify and query frame formats for the "RFFE" protocol.

SBUS<sb>:RFFE:FORMat:SELect ... 2086
SBUS<sb>:RFFE:FORMat:ADDFrame ... 2086
SBUS<sb>:RFFE:FORMat:LOAD ... 2087
SBUS<sb>:RFFE:FORMat:SAVE ... 2087
SBUS<sb>:RFFE:FORMat:CLR ... 2087
SBUS<sb>:RFFE:FORMat:FCOunt? ... 2087
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ADDField ... 2088
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLDCount? ... 2088
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:NAME ... 2088
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:COLor ... 2089
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:TYPE ... 2089
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ID1Field ... 2089
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ID2Field ... 2089
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ID3Field ... 2089
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ID1Value ... 2090
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ID2Value ... 2090
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ID3Value ... 2090
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:NAME ... 2090
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:COLor ... 2090
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:FSTBit ... 2091
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:BITCount ... 2091
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:REPetition ... 2091
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:BITorder ... 2092
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:FORMat ... 2092
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:ADDValue ... 2093
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue ... 2093
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel ... 2094
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:UNIT ... 2094
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:PARA ... 2094
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:PARB ... 2094

SBUS<sb>:RFFE:FORMat:SELect <Select>

Enables the format configuration

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Select> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show format" on page 878

SBUS<sb>:RFFE:FORMat:ADDFrame

Appendes a new frame format to the frame list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Add frame" on page 878

SBUS<sb>:RFFE:FORMat:LOAD <FileName>

Loads a the specified XML file with a list of frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Open" on page 879

SBUS<sb>:RFFE:FORMat:SAVE <FileName>

Saves the current list of frame formats to an XML file with the specified name.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Save as" on page 879

SBUS<sb>:RFFE:FORMat:CLR

Erases from the volatile memory all field descriptions and frame formats that you have created.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Edit list" on page 879

SBUS<sb>:RFFE:FORMat:FCOunt?

Returns the number of available frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Edit list" on page 879

SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ADDField

Appends a new field description to the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Usage: Setting only
Asynchronous command

Manual operation: See "Add field" on page 880

SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLDCount?

Returns the number of field descriptions available for the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:RFFE:FORMat:FRAMe<fr>:NAME <Name>

Specifies the name for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Frame name" on page 880

SBUS<sb>:RFFE:FORMat:FRAMe<fr>:COLor <Color>

Specifies the color for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4278255615

Usage: Asynchronous command

Manual operation: See "Frame color" on page 880

SBUS<sb>:RFFE:FORMat:FRAMe<fr>:TYPE <Type>

Sets an original frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Type>

Usage: Asynchronous command

Manual operation: See "Frame type" on page 880

SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ID1Field <ID1Field>
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ID2Field <ID2Field>
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ID3Field <ID3Field>

Sets the identifying field type for the configured frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Field>

Usage: Asynchronous command

Manual operation: See "ID<n> field" on page 880

SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ID1Value <ID1Value>
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ID2Value <ID2Value>
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ID3Value <ID3Value>

Sets the value of the corresponding field type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Value>

Usage: Asynchronous command

Manual operation: See "ID<n> value" on page 880

SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:NAME <Name>

Specifies the name for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Field name" on page 881

SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:COLor <Color>

Specifies the color for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4294967040

Usage: Asynchronous command

Manual operation: See "Field color" on page 881

SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:FSTBit <FirstBit>

In order of transmission, sets the first bit of the specified field in the payload.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<FirstBit> Range: 0 to 63
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "First bit" on page 881

SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:BITCount <BitCount>

Specifies the bit count, hence length, of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitCount> Range: 1 to 64
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Bit count" on page 881

SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:REPetition <Repetition>

Sets the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Repetition> Range: 0 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Repetition" on page 882

SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:BITorder <BitOrder>

Specifies, in which order the algorithm evaluates the bits of the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitOrder> LSBF | MSBF

LSBF
Least significant bit first

MSBF
Most significant bit first

*RST: MSBF

Usage: Asynchronous command

Manual operation: See "Bit order" on page 882

SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:FORMat <NumericFormat>

Specifies the numerical format for the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<NumericFormat> HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG | DEC | LIST | FLIN

HEX
Hexadecimal format

OCT
Octal format

BIN
Binary format

ASCII = ASCii
ASCII format

SIGN
Signed, decimal format

DEC=USIG
Unsigned, decimal format

LIST
Value list

FLIN
Linear function

*RST: HEX

Usage: Asynchronous command

Manual operation: See "Numeric format" on page 882

SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:ADDValue

Creates a new hexagonal value for customization.

Available if `SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Related commands:

`SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue`

`SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel`

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Usage: Setting only
Asynchronous command

Manual operation: See "Add value" on page 883

SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue <Value>

Sets the hexagonal value to convert it into a labeled state.

Available if `SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:
<Value> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Value" on page 883

SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel <Label>

Sets the label to convert the corresponding hexagonal value to a labeled state.

Available if `SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:
<Label>

Usage: Asynchronous command

Manual operation: See "Label" on page 883

SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:UNIT <Unit>

Sets the unit for the linear function.

Available if `SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Unit>

Usage: Asynchronous command

Manual operation: See "Unit" on page 883

SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:PARA <ParameterA>
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:PARB <ParameterB>

Sets the parameters of the linear function.

- Parameter A: Slope (rate of change)

- Parameter B: Offset

Available if `SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:

<sb>	1 to 4, index of the serial bus
<fr>	Index of the frame
<fl>	Index of the field

Parameters:

<ParameterB>	Range: -1E+20 to 1E+20 Increment: 1E-12 *RST: 0

Usage: Asynchronous command

Manual operation: See "Parameter A,B" on page 883

18.18.20.4 Software trigger

There are two commands for each parameter, that you can use for defining the RFFE settings.

For example, to set the *Frame type =Register 0 Write > Field =Data >01100* value you can use one of the following commands:

- `TRIGger:SBSW:RFFE:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `TRIGger:SBSW:RFFE:DMIN "Register 0 Write", "Data", 01100`
  Defines the parameter by using the frame and field name.

TRIGger:SBSW:RFFE:CHKall 2096
TRIGger:SBSW:RFFE:CLR 2096
TRIGger:SBSW:RFFE:INVert 2096
TRIGger:SBSW:RFFE:RST 2096
TRIGger:SBSW:RFFE:FRENable 2096
TRIGger:SBSW:RFFE:FRAMe<fr>:ENABle 2096
TRIGger:SBSW:RFFE:BIT 2097
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:BIT 2097
TRIGger:SBSW:RFFE:DMAX 2097
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:DMAX 2097
TRIGger:SBSW:RFFE:DMIN 2097
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:DMIN 2097
TRIGger:SBSW:RFFE:DOPerator 2098
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:DOPerator 2098
TRIGger:SBSW:RFFE:FIENable 2098
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:ENABle 2098
TRIGger:SBSW:RFFE:IMAX 2099
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:IMAX 2099
TRIGger:SBSW:RFFE:IMIN 2099
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:IMIN 2099

TRIGger:SBSW:RFFE:IOPerator 2099
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:IOPerator 2099
TRIGger:SBSW:RFFE:ERENable 2100
TRIGger:SBSW:RFFE:ERRor<m>:ENABle 2100
SBUS<sb>:RFFE:SWTindex? 2100
SBUS<sb>:RFFE:SWTTime? 2100

TRIGger:SBSW:RFFE:CHKall

Enables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 885

TRIGger:SBSW:RFFE:CLR

Disables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 885

TRIGger:SBSW:RFFE:INVert

Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 885

TRIGger:SBSW:RFFE:RST

Presets the state of the selected frames and error types for the software trigger.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 885

TRIGger:SBSW:RFFE:FRENable <Frame>,<Enabler>
TRIGger:SBSW:RFFE:FRENable? <Enabler>
TRIGger:SBSW:RFFE:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 885

TRIGger:SBSW:RFFE:BIT <Frame>,<Field>,<Bit>
TRIGger:SBSW:RFFE:BIT? <Bit>
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 885

TRIGger:SBSW:RFFE:DMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:RFFE:DMAX? <Data>
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range for the software trigger, if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 885

TRIGger:SBSW:RFFE:DMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:RFFE:DMIN? <Data>
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 885

TRIGger:SBSW:RFFE:DOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:RFFE:DOPerator? <Operator>
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern of the software trigger in the selected field of the selected frame.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 885

TRIGger:SBSW:RFFE:FIENable <Frame>,<Field>,<Enabler>
TRIGger:SBSW:RFFE:FIENable? <Enabler>
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame of the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 885

TRIGger:SBSW:RFFE:IMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:RFFE:IMAX? <Data>
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range for the software trigger if the operator is set to `INRange`.

You can set the operator with `TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max>
Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 885

TRIGger:SBSW:RFFE:IMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:RFFE:IMIN? <Data>
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min>
Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 885

TRIGger:SBSW:RFFE:IOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:RFFE:IOPerator? <Operator>
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 885

TRIGger:SBSW:RFFE:ERENable <ErrorName>,<Enabler>
TRIGger:SBSW:RFFE:ERENable? <Enabler>
TRIGger:SBSW:RFFE:ERRor<m>:ENABle <Enable>

Defines the error type for the software trigger.

Suffix:
<m> Index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 887

SBUS<sb>:RFFE:SWTindex?

Queries the software trigger index.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Index> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:RFFE:SWTTime?

Queries the software trigger time in seconds.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:

<Time> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.20.5 Decode results

SBUS<sb>:RFFE:FRAMe<fr>:PADone? 2101
SBUS<sb>:RFFE:FRAMe<fr>:PADZero? 2102
SBUS<sb>:RFFE:FRAMe<fr>:PCTRl? 2102
SBUS<sb>:RFFE:FCOunt? 2102
SBUS<sb>:RFFE:FRAMe<fr>:ADDRess? 2102
SBUS<sb>:RFFE:FRAMe<fr>:BCOunt? 2103
SBUS<sb>:RFFE:FRAMe<fr>:DATA? 2103
SBUS<sb>:RFFE:FRAMe<fr>:FLDCount? 2103
SBUS<sb>:RFFE:FRAMe<fr>:FLD<fl>:FVALue? 2104
SBUS<sb>:RFFE:FRAMe<fr>:FLD<fl>:NAME? 2104
SBUS<sb>:RFFE:FRAMe<fr>:FLD<fl>:STATe? 2104
SBUS<sb>:RFFE:FRAMe<fr>:FLD<fl>:VALue? 2104
SBUS<sb>:RFFE:FRAMe<fr>:RBTRate? 2105
SBUS<sb>:RFFE:FRAMe<fr>:SADD? 2105
SBUS<sb>:RFFE:FRAMe<fr>:STARt? 2105
SBUS<sb>:RFFE:FRAMe<fr>:STATe? 2106
SBUS<sb>:RFFE:FRAMe<fr>:STOP? 2106
SBUS<sb>:RFFE:FRAMe<fr>:TYPE? 2106
SBUS<sb>:RFFE:FRAMe<fr>:WBTRate? 2108
SBUS<sb>:RFFE:NEWList 2108
SBUS<sb>:RFFE:FRAMe<fr>:SYMBol? 2108
SBUS<sb>:RFFE:SYMBols 2108

SBUS<sb>:RFFE:FRAMe<fr>:PADone?

Returns the parity address one of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<ParityAddr1> OK | NORESPONSE | BPERR | PARity | LENGth | VERSion | SSC | GAP | INComplete
*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:RFFE:FRAMe<fr>:PADZero?

Returns the parity address zero of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<ParityAddr0> OK | NORESPONSE | BPERR | PARity | LENGth | VERSion | SSC | GAP | INComplete

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:RFFE:FRAMe<fr>:PCTRl?

Returns the parity control of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<ParityCtrl> OK | NORESPONSE | BPERR | PARity | LENGth | VERSion | SSC | GAP | INComplete

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:RFFE:FCOunt?

Returns the number of decoded frames in the current acquisition.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:RFFE:FRAMe<fr>:ADDRess?

Returns the register address of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Address> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:RFFE:FRAMe<fr>:BCOunt?

Returns the byte count of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<BC> Range: 0 to 256
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:RFFE:FRAMe<fr>:DATA?

Returns the data value of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Data>

Usage: Query only

SBUS<sb>:RFFE:FRAMe<fr>:FLDCount?

Returns the field count of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:RFFE:FRAMe<fr>:FLD<fl>:FVALue?

Returns the formatted value of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<FormattedValue>

Usage: Query only
Asynchronous command

SBUS<sb>:RFFE:FRAMe<fr>:FLD<fl>:NAME?

Returns the name (label) of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Label>

Usage: Query only
Asynchronous command

SBUS<sb>:RFFE:FRAMe<fr>:FLD<fl>:STATe?

Returns the overall state of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<State> OK | NORESPONSE | BPERR | PARity | LENGth | VERSion | SSC | GAP | INComplete

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:RFFE:FRAMe<fr>:FLD<fl>:VALue?

Returns the data value of the specified field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Value> Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:RFFE:FRAMe<fr>:RBTRate?

Returns the read bit rate of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<ReadBitRate> Increment: 1
*RST: 0
Default unit: bps

Usage: Query only

SBUS<sb>:RFFE:FRAMe<fr>:SADD?

Returns the address of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<SA> Range: 0 to 15
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:RFFE:FRAMe<fr>:STARt?

Returns the start time of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<Start> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:RFFE:FRAMe<fr>:STATe?

Returns the overall state of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<State> OK | NORESPONSE | BPERR | PARity | LENGth | VERSion | SSC | GAP | INComplete
*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:RFFE:FRAMe<fr>:STOP?

Returns the stop time of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<Stop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:RFFE:FRAMe<fr>:TYPE?

Returns the type of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<Type> RZWR | RWR | ERWR | ERWL | MWR | MSKW | MCTW | RRD | ERRD | ERRL | MRD | MCTR | MOHO | IRSUM | UNDEF | UNKN | ERRor

RZWR
Register 0 write

RWR
Register write

RRD
Register read

ERWR
Extended register write

ERRD
Extended register read

ERWL
Extended register write long

ERRL
Extended register read long

MRD
Main device read

MWR
Main device write

MOHO
Main device Ownership Handove

IRSUM
Interrupt summary and notification

MSKW
Masked write

MCTR
Main device context transfer read

MCTW
Main device context transfer write

UNDEF
Undefined frame type

UNKN
Unknown frame type

ERRor
The bits defining the command sequence are not valid, no supported command sequence

*RST: RZWR

Usage: Query only
Asynchronous command

SBUS<sb>:RFFE:FRAMe<fr>:WBTRate?

Returns the write bit rate of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<PrimaryBitRate> Increment: 1
*RST: 0
Default unit: bps

Usage: Query only

SBUS<sb>:RFFE:NEWList <FileName>

Loads a symbol list file.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

SBUS<sb>:RFFE:FRAMe<fr>:SYMBol?

Returns the symbolic label of the specified sequence if the label list is enabled.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<SymbolicName> String with symbolic name of the frame

Usage: Query only
Asynchronous command

SBUS<sb>:RFFE:SYMBols <ShowSymbols>

Activates the symbol list to be used for decoding.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<ShowSymbols> OFF | ON
*RST: OFF

Usage: Asynchronous command

18.18.21 10BASE-T1S (option R&S MXO5-K560)

Before MXO 5 can accept the specific bus commands, make sure that:

- The decoding of the specified bus is enabled with `SBUS<sb>[:STATe]`.
- The bus is set to the correct type with `SBUS<sb>:TYPE`.

- Configuration....2109
- Filter....2111
- Format....2117
- Software trigger....2126
- Decode results....2132

18.18.21.1 Configuration

SBUS<sb>:TNOS:POSition....2109
SBUS<sb>:TNOS:SCALe....2109
SBUS<sb>:TNOS:SOURce....2110
SBUS<sb>:TNOS:SYMBols....2110
SBUS<sb>:TNOS:THReshold:LOWer....2110
SBUS<sb>:TNOS:THReshold:HYSTeresis....2110
SBUS<sb>:TNOS:THReshold:UPPer....2111
SBUS<sb>:TNOS:NEWList....2111

SBUS<sb>:TNOS:POSition <TENBTO position>

Sets the vertical position of the 10BASE-T1S signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<TENBTO position>

Usage: Asynchronous command

SBUS<sb>:TNOS:SCALe <TENBTO scale>

Set the vertical scale of the indicated 10BASE-T1S signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<TENBTO scale>

Usage: Asynchronous command

SBUS<sb>:TNOS:SOURce <Source>

Selects the source channel for the 10BASE-T1S protocol. Only analog channels can be used.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Source> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Source" on page 892

SBUS<sb>:TNOS:SYMBols <ShowSymbols>

Activates the symbol list to be used for decoding.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<ShowSymbols> OFF | ON
*RST: OFF

Usage: Asynchronous command

SBUS<sb>:TNOS:THReshold:LOWer <Lower Thres>

Sets a lower threshold.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Lower Thres>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 893

SBUS<sb>:TNOS:THReshold:HYSTeresis <Hysteresis>

Sets a value for the hysteresis.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 893

SBUS<sb>:TNOS:THReshold:UPPer <Upper Thres>

Sets an upper threshold.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Upper Thres>

Usage: Asynchronous command

Manual operation: See "Threshold" on page 893

SBUS<sb>:TNOS:NEWList <FileName>

Loads a symbol list file.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName> String parameter with path and file name.

Example:
```
SBUS1:TNOS:NEWList
'/home/storage/userData/Protocol/TNOS.csv'
SBUS1:TNOS:SYMBols ON
```

Usage: Setting only
Asynchronous command

18.18.21.2 Filter

There are two commands for each parameter, that you can use for defining the 10BASE-T1S settings.

For example, to set the *Frame type =MAC* > *Field =Data >00* value you can use one of the following commands:

- `SBUS:TNOS:FILTer:FRAMe1:FLD1:DMIN 00`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `SBUS:TNOS:FILTer:DMIN "MAC", "Data", 00`
  Defines the parameter by using the frame and field name.

SBUS<sb>:TNOS:FILTer:CHKall....2112
SBUS<sb>:TNOS:FILTer:CLR....2112
SBUS<sb>:TNOS:FILTer:RST....2112
SBUS<sb>:TNOS:FILTer:INVert....2113
SBUS<sb>:TNOS:FILTer:BIT....2113
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:BIT....2113
SBUS<sb>:TNOS:FILTer:DMAX....2113

SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:DMAX 2113
SBUS<sb>:TNOS:FILTer:DMIN 2114
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:DMIN 2114
SBUS<sb>:TNOS:FILTer:DOPerator 2114
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:DOPerator 2114
SBUS<sb>:TNOS:FILTer:ERENable 2114
SBUS<sb>:TNOS:FILTer:ERRor<n>:ENABle 2114
SBUS<sb>:TNOS:FILTer:FIENable 2115
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:ENABle 2115
SBUS<sb>:TNOS:FILTer:IMAX 2115
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:IMAX 2115
SBUS<sb>:TNOS:FILTer:IMIN 2115
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:IMIN 2115
SBUS<sb>:TNOS:FILTer:IOPerator 2116
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:IOPerator 2116
SBUS<sb>:TNOS:FILTer:FRENable 2116
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:ENABle 2116

SBUS<sb>:TNOS:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 896

SBUS<sb>:TNOS:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 896

SBUS<sb>:TNOS:FILTer:RST

Presets the state of the selected frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 896

SBUS<sb>:TNOS:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 896

SBUS<sb>:TNOS:FILTer:BIT <Frame>,<Field>,<Bit>
SBUS<sb>:TNOS:FILTer:BIT? <Bit>
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 897

SBUS<sb>:TNOS:FILTer:DMAX <Frame>,<Field>,<Data>
SBUS<sb>:TNOS:FILTer:DMAX? <Data>
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 897

SBUS<sb>:TNOS:FILTer:DMIN <Frame>,<Field>,<Data>
SBUS<sb>:TNOS:FILTer:DMIN? <Data>
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 897

SBUS<sb>:TNOS:FILTer:DOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:TNOS:FILTer:DOPerator? <Operator>
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 897

SBUS<sb>:TNOS:FILTer:ERENable <ErrorName>,<Enabler>
SBUS<sb>:TNOS:FILTer:ERENable? <Enabler>
SBUS<sb>:TNOS:FILTer:ERRor<n>:ENABle <Enable>

rcset

Suffix:
<sb> 1..4

<n> *

Parameters:
<Enable> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 898

SBUS<sb>:TNOS:FILTer:FIENable <Frame>,<Field>,<Enabler>
SBUS<sb>:TNOS:FILTer:FIENable? <Enabler>
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 897

SBUS<sb>:TNOS:FILTer:IMAX <Frame>,<Field>,<Data>
SBUS<sb>:TNOS:FILTer:IMAX? <Data>
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if the operator is set to `INRange`.

You can set the operator with `SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 897

SBUS<sb>:TNOS:FILTer:IMIN <Frame>,<Field>,<Data>
SBUS<sb>:TNOS:FILTer:IMIN? <Data>
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 897

SBUS<sb>:TNOS:FILTer:IOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:TNOS:FILTer:IOPerator? <Operator>
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 897

SBUS<sb>:TNOS:FILTer:FRENable <Frame>,<Enabler>
SBUS<sb>:TNOS:FILTer:FRENable? <Enabler>
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:ENABle <Enable>

Enables the filtering on 10Base-T1S frames. Only the frames that match the selected filter conditions are displayed.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 897

18.18.21.3 Format

This section describes the commands to specify and query frame formats for the "10BASE-T1S" protocol.

SBUS<sb>:TNOS:FORMat:SELect....2117
SBUS<sb>:TNOS:FORMat:ADDFrame....2118
SBUS<sb>:TNOS:FORMat:LOAD....2118
SBUS<sb>:TNOS:FORMat:SAVE....2118
SBUS<sb>:TNOS:FORMat:CLR....2118
SBUS<sb>:TNOS:FORMat:FCOunt?....2119
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ADDField....2119
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLDCount?....2119
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:NAME....2119
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:COLor....2120
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:TYPE....2120
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ID1Field....2120
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ID2Field....2120
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ID3Field....2120
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ID1Value....2121
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ID2Value....2121
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ID3Value....2121
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:NAME....2121
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:COLor....2121
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:FSTBit....2122
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:BITCount....2122
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:REPetition....2122
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:BITorder....2123
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:FORMat....2123
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:ADDValue....2124
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue....2124
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel....2125
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:UNIT....2125
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:PARA....2125
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:PARB....2125

SBUS<sb>:TNOS:FORMat:SELect <Select>

Enables the format configuration

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Select> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show format" on page 898

SBUS<sb>:TNOS:FORMat:ADDFrame

Appendes a new frame format to the frame list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Add frame" on page 899

SBUS<sb>:TNOS:FORMat:LOAD <FileName>

Loads a the specified XML file with a list of frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Open" on page 899

SBUS<sb>:TNOS:FORMat:SAVE <FileName>

Saves the current list of frame formats to an XML file with the specified name.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Save as" on page 900

SBUS<sb>:TNOS:FORMat:CLR

Erases from the volatile memory all field descriptions and frame formats that you have created.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Edit list" on page 899

SBUS<sb>:TNOS:FORMat:FCOunt?

Returns the number of available frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Edit list" on page 899

SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ADDField

Appends a new field description to the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Usage: Setting only
Asynchronous command

Manual operation: See "Add field" on page 901

SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLDCount?

Returns the number of field descriptions available for the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FORMat:FRAMe<fr>:NAME <Name>

Specifies the name for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Frame name" on page 900

SBUS<sb>:TNOS:FORMat:FRAMe<fr>:COLor <Color>

Specifies the color for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4278255615

Usage: Asynchronous command

Manual operation: See "Frame color" on page 900

SBUS<sb>:TNOS:FORMat:FRAMe<fr>:TYPE <Type>

Sets an original frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Type>

Usage: Asynchronous command

Manual operation: See "Frame type" on page 900

SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ID1Field <ID1Field>
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ID2Field <ID2Field>
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ID3Field <ID3Field>

Sets the identifying field type for the configured frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Field>

Usage: Asynchronous command

Manual operation: See "ID<n> field" on page 900

SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ID1Value <ID1Value>
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ID2Value <ID2Value>
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ID3Value <ID3Value>

Sets the value of the corresponding field type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Value>

Usage: Asynchronous command

Manual operation: See "ID<n> value" on page 900

SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:NAME <Name>

Specifies the name for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Field name" on page 901

SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:COLor <Color>

Specifies the color for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4294967040

Usage: Asynchronous command

Manual operation: See "Field color" on page 901

SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:FSTBit <FirstBit>

In order of transmission, sets the first bit of the specified field in the payload.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<FirstBit> Range: 0 to 63
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "First bit" on page 901

SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:BITCount <BitCount>

Specifies the bit count, hence length, of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitCount> Range: 1 to 64
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Bit count" on page 902

SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:REPetition <Repetition>

Sets the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Repetition> Range: 0 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Repetition" on page 902

SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:BITorder <BitOrder>

Specifies, in which order the algorithm evaluates the bits of the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitOrder> LSBF | MSBF

LSBF
Least significant bit first

MSBF
Most significant bit first

*RST: MSBF

Usage: Asynchronous command

Manual operation: See "Bit order" on page 902

SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:FORMat <NumericFormat>

Specifies the numerical format for the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<NumericFormat> HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG | DEC | LIST | FLIN

HEX
Hexadecimal format

OCT
Octal format

BIN
Binary format

ASCII = ASCii
ASCII format

SIGN
Signed, decimal format

DEC=USIG
Unsigned, decimal format

LIST
Value list

FLIN
Linear function

*RST: HEX

Usage: Asynchronous command

Manual operation: See "Numeric format" on page 902

SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:ADDValue

Creates a new hexagonal value for customization.

Available if `SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Related commands:

`SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue`

`SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel`

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Usage: Setting only
Asynchronous command

Manual operation: See "Add value" on page 903

SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue <Value>

Sets the hexagonal value to convert it into a labeled state.

Available if `SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:

<Value> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Value" on page 903

SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel <Label>

Sets the label to convert the corresponding hexagonal value to a labeled state.

Available if `SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:

<Label>

Usage: Asynchronous command

Manual operation: See "Label" on page 903

SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:UNIT <Unit>

Sets the unit for the linear function.

Available if `SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Unit>

Usage: Asynchronous command

Manual operation: See "Unit" on page 903

SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:PARA <ParameterA>
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:PARB <ParameterB>

Sets the parameters of the linear function.

- Parameter A: Slope (rate of change)

- Parameter B: Offset

Available if `SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:

<sb>	1 to 4, index of the serial bus
<fr>	Index of the frame
<fl>	Index of the field

Parameters:

<ParameterB>	Range:	-1E+20 to 1E+20
	Increment:	1E-12
	*RST:	0

Usage: Asynchronous command

Manual operation: See "Parameter A,B" on page 903

18.18.21.4 Software trigger

There are two commands for each parameter, that you can use for defining the 10BASE-T1S settings.

For example, to set the *Frame type =MAC > Field =Data >00* value you can use one of the following commands:

- `TRIGger:SBSW:TNOS:FRAMe1:FLD1:DMIN 00`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `TRIGger:SBSW:TNOS:DMIN "MAC", "Data", 00`
  Defines the parameter by using the frame and field name.

TRIGger:SBSW:TNOS:CHKall....2127
TRIGger:SBSW:TNOS:CLR....2127
TRIGger:SBSW:TNOS:INVert....2127
TRIGger:SBSW:TNOS:RST....2127
TRIGger:SBSW:TNOS:FRENable....2127
TRIGger:SBSW:TNOS:FRAMe<fr>:ENABle....2127
TRIGger:SBSW:TNOS:BIT....2128
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:BIT....2128
TRIGger:SBSW:TNOS:DMAX....2128
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:DMAX....2128
TRIGger:SBSW:TNOS:DMIN....2128
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:DMIN....2128
TRIGger:SBSW:TNOS:DOPerator....2129
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:DOPerator....2129
TRIGger:SBSW:TNOS:FIENable....2129
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:ENABle....2129
TRIGger:SBSW:TNOS:IMAX....2130
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:IMAX....2130
TRIGger:SBSW:TNOS:IMIN....2130
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:IMIN....2130

TRIGger:SBSW:TNOS:IOPerator....2130
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:IOPerator....2130
TRIGger:SBSW:TNOS:ERENable....2131
TRIGger:SBSW:TNOS:ERRor<m>:ENABle....2131
SBUS<sb>:TNOS:SWTindex?....2131
SBUS<sb>:TNOS:SWTTime?....2131

TRIGger:SBSW:TNOS:CHKall

Enables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 904

TRIGger:SBSW:TNOS:CLR

Disables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 904

TRIGger:SBSW:TNOS:INVert

Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 904

TRIGger:SBSW:TNOS:RST

Presets the state of the selected frames and error types for the software trigger.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 904

TRIGger:SBSW:TNOS:FRENable <Frame>,<Enabler>
TRIGger:SBSW:TNOS:FRENable? <Enabler>
TRIGger:SBSW:TNOS:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 905

TRIGger:SBSW:TNOS:BIT <Frame>,<Field>,<Bit>
TRIGger:SBSW:TNOS:BIT? <Bit>
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 905

TRIGger:SBSW:TNOS:DMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:TNOS:DMAX? <Data>
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range for the software trigger, if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:DOPerator` on page 2129.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 905

TRIGger:SBSW:TNOS:DMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:TNOS:DMIN? <Data>
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 905

TRIGger:SBSW:TNOS:DOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:TNOS:DOPerator? <Operator>
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern of the software trigger in the selected field of the selected frame.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 905

TRIGger:SBSW:TNOS:FIENable <Frame>,<Field>,<Enabler>
TRIGger:SBSW:TNOS:FIENable? <Enabler>
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame of the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 905

TRIGger:SBSW:TNOS:IMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:TNOS:IMAX? <Data>
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range for the software trigger if the operator is set to `INRange`.

You can set the operator with `TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max>
Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 905

TRIGger:SBSW:TNOS:IMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:TNOS:IMIN? <Data>
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min>
Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 905

TRIGger:SBSW:TNOS:IOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:TNOS:IOPerator? <Operator>
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 905

TRIGger:SBSW:TNOS:ERENable <ErrorName>,<Enabler>
TRIGger:SBSW:TNOS:ERENable? <Enabler>
TRIGger:SBSW:TNOS:ERRor<m>:ENABle <Enable>

Defines the error type for the software trigger.

Suffix:
<m> Index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 906

SBUS<sb>:TNOS:SWTindex?

Queries the software trigger index.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Index> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:SWTTime?

Queries the software trigger time in seconds.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:

<Time> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.21.5 Decode results

SBUS<sb>:TNOS:FCOunt? 2132
SBUS<sb>:TNOS:FRAMe<fr>:FLDCount? 2132
SBUS<sb>:TNOS:FRAMe<fr>:BITRate? 2133
SBUS<sb>:TNOS:FRAMe<fr>:FLD<fl>:FVALue? 2133
SBUS<sb>:TNOS:FRAMe<fr>:FLD<fl>:LABel? 2133
SBUS<sb>:TNOS:FRAMe<fr>:FLD<fl>:STATe? 2134
SBUS<sb>:TNOS:FRAMe<fr>:FLD<fl>:VALue? 2134
SBUS<sb>:TNOS:FRAMe<fr>:CRC? 2135
SBUS<sb>:TNOS:FRAMe<fr>:DATA? 2135
SBUS<sb>:TNOS:FRAMe<fr>:DTADdress? 2135
SBUS<sb>:TNOS:FRAMe<fr>:DTSYmbol? 2136
SBUS<sb>:TNOS:FRAMe<fr>:FCRC? 2136
SBUS<sb>:TNOS:FRAMe<fr>:FDATa? 2136
SBUS<sb>:TNOS:FRAMe<fr>:FDTaddress? 2136
SBUS<sb>:TNOS:FRAMe<fr>:FSRaddress? 2137
SBUS<sb>:TNOS:FRAMe<fr>:FTPLenth? 2137
SBUS<sb>:TNOS:FRAMe<fr>:SRADdress? 2137
SBUS<sb>:TNOS:FRAMe<fr>:SRSYmbol? 2138
SBUS<sb>:TNOS:FRAMe<fr>:STARt? 2138
SBUS<sb>:TNOS:FRAMe<fr>:STATus? 2138
SBUS<sb>:TNOS:FRAMe<fr>:STOP? 2139
SBUS<sb>:TNOS:FRAMe<fr>:TPLenth? 2139
SBUS<sb>:TNOS:FRAMe<fr>:TYPE? 2140

SBUS<sb>:TNOS:FCOunt?

Returns the number of decoded frames.

Suffix:

<sb> 1 to 4, index of the serial bus

Return values:

<Count> Total number of decoded frames.

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:FLDCount?

Returns the number of fields in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count> Total number of fields.

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:BITRate?

Returns the primary bit rate.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<PrimaryBitRate> Increment: 1
*RST: 0
Default unit: bps

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:FLD<fl>:FVALue?

Returns the formatted value of the specified field.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<FormattedValue>

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:FLD<fl>:LABel?

Returns the label of the specified field.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Label>

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:FLD<fl>:STATe?

Returns the state of the specified field.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<State> OK | EPRMble | ESFD | EESD | ECRC | ELEN | INComplete

OK
The field has no error, it is valid.

EPRMble
Preamble error, the hex value of the preamble field is different from 0x55555555555555 (56 alternating 0's and 1's).

ESFD
SFD error, the hex value of the SFD field is different from 0xD5

EESD
ESD error, the value of the ESD field does not correspond to the symbol pair "ESD, ESDOK"

ECRC
CRC error, the value of the FCS field does not match the calculated CRC.

ELEN
Length error, the number of bits in the specified field is higher or lower than expected.

INComplete
The frame is incomplete

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:FLD<fl>:VALue?

Returns the value of the specified field.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Value> Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:CRC?

Returns the CRC for the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<CRC> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:DATA?

Returns the data for the specified frame in comma-separated values.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

<Values>

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:DTADdress?

Returns the destination address for the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<DestAddress> Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:DTSYmbol?

Returns the destination symbol for the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<DestSymbNme>

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:FCRC?

Returns the formatted CRC for the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedCRC>

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:FDATa?

Returns the formatted data for the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedData>

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:FDTaddress?

Returns the formatted destination address of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedDestAddr>

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:FSRaddress?

Returns the formatted SRC address for the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedSrcAddr>

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:FTPLenth?

Returns the formatted type length for the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedTypLenth>

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:SRADdress?

Returns the source address for the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<SourceAddress> Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:SRSYmbol?

Returns the frame of the source symbol.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<SrcSymbNme>

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:STARt?

Returns the start time of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:STATus?

Returns the state of the frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameState> OK | EPRMble | ESFD | EESD | ECRC | ELEN | INComplete

OK
The frame has no error, it is valid.

EPRMble
Preamble error, the hex value of the preamble field is different from 0x55555555555555 (56 alternating 0's and 1's).

ESFD
SFD error, the hex value of the SFD field is different from 0xD5

EESD
ESD error, the value of the ESD field does not correspond to the symbol pair "ESD, ESDOK"

ECRC
CRC error, the value of the FCS field does not match the calculated CRC.

ELEN
Length error, the number of bits in the specified frame is higher or lower than expected.

INComplete
The frame is incomplete

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:STOP?

Returns the stop time of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:TPLenth?

Returns the type length for the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<TypeLenth> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:TNOS:FRAMe<fr>:TYPE?

Returns the type of the frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameType> MAC | COMMit | BEACon | UNKN

*RST: MAC

Usage: Query only
Asynchronous command

18.18.22 100BASE-T1 (option R&S MXO5-K560)

- Configuration....2140
- Filter....2142
- Format....2147
- Software trigger....2157
- Decode results....2162

18.18.22.1 Configuration

SBUS<sb>:HBTO:MODE....2140
SBUS<sb>:HBTO:POLarity....2141
SBUS<sb>:HBTO:POSition....2141
SBUS<sb>:HBTO:SCALe....2141
SBUS<sb>:HBTO:SOURce....2141
SBUS<sb>:HBTO:SYMBols....2142
SBUS<sb>:HBTO:NEWList....2142

SBUS<sb>:HBTO:MODE <Mode>

Selects the operation mode.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Mode> MAIN | SUB | AUTO

*RST: AUTO

Usage: Asynchronous command

Manual operation: See "Operation mode" on page 910

SBUS<sb>:HBTO:POLarity <Polarity>

Selects the polarity of the data signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Polarity> NORMal | INVerted
*RST: NORMal

Usage: Asynchronous command

Manual operation: See "Polarity" on page 910

SBUS<sb>:HBTO:POSition <HBTO position>

Sets the vertical position of the 100BASE-T1 signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<HBTO position>

Usage: Asynchronous command

SBUS<sb>:HBTO:SCALe <HBTO scale>

Set the vertical scale of the indicated 100BASE-T1 signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<HBTO scale>

Usage: Asynchronous command

SBUS<sb>:HBTO:SOURce Source

Selects the source channel.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
Source C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Source" on page 910

SBUS<sb>:HBTO:SYMBols <ShowSymbols>

Activates the symbol list to be used for decoding.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<ShowSymbols> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show symbols" on page 912

SBUS<sb>:HBTO:NEWList <FileName>

Loads a symbol list file.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Example:
```
SBUS1:HBTO:NEWList
'/home/storage/userData/Protocol/HBTO.csv'
SBUS1:HBTO:SYMBols ON
```

Usage: Setting only
Asynchronous command

Manual operation: See "Show symbols" on page 912

18.18.22.2 Filter

There are two commands for each parameter, that you can use for defining the 100BASE-T1 settings.

For example, to set the *Frame type =MAC > Field =Data >00* value you can use one of the following commands:

- `SBUS:HBTO:FILTer:FRAMe1:FLD1:DMIN 00`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `SBUS:HBTO:FILTer:DMIN "MAC", "Data", 00`
  Defines the parameter by using the frame and field name.

SBUS<sb>:HBTO:FILTer:CHKall....2143
SBUS<sb>:HBTO:FILTer:CLR....2143
SBUS<sb>:HBTO:FILTer:INVert....2143
SBUS<sb>:HBTO:FILTer:RST....2144
SBUS<sb>:HBTO:FILTer:BIT....2144
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:BIT....2144

SBUS<sb>:HBTO:FILTer:DMAX 2144
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:DMAX 2144
SBUS<sb>:HBTO:FILTer:DMIN 2145
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:DMIN 2145
SBUS<sb>:HBTO:FILTer:DOPerator 2145
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:DOPerator 2145
SBUS<sb>:HBTO:FILTer:ERENable 2145
SBUS<sb>:HBTO:FILTer:ERRor<n>:ENABle 2145
SBUS<sb>:HBTO:FILTer:FIENable 2146
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:ENABle 2146
SBUS<sb>:HBTO:FILTer:FRENable 2146
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:ENABle 2146
SBUS<sb>:HBTO:FILTer:IMAX 2146
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:IMAX 2146
SBUS<sb>:HBTO:FILTer:IMIN 2147
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:IMIN 2147
SBUS<sb>:HBTO:FILTer:IOPerator 2147
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:IOPerator 2147

SBUS<sb>:HBTO:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 913

SBUS<sb>:HBTO:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 913

SBUS<sb>:HBTO:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 913

SBUS<sb>:HBTO:FILTer:RST

Presets the state of the selected frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 913

SBUS<sb>:HBTO:FILTer:BIT <Frame>,<Field>,<Bit>
SBUS<sb>:HBTO:FILTer:BIT? <Bit>
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

SBUS<sb>:HBTO:FILTer:DMAX <Frame>,<Field>,<Data>
SBUS<sb>:HBTO:FILTer:DMAX? <Data>
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

SBUS<sb>:HBTO:FILTer:DMIN <Frame>,<Field>,<Data>
SBUS<sb>:HBTO:FILTer:DMIN? <Data>
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

SBUS<sb>:HBTO:FILTer:DOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:HBTO:FILTer:DOPerator? <Operator>
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

SBUS<sb>:HBTO:FILTer:ERENable <ErrorName>,<Enabler>
SBUS<sb>:HBTO:FILTer:ERENable? <Enabler>
SBUS<sb>:HBTO:FILTer:ERRor<n>:ENABle <Enable>

Defines the error type to be filtered on.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> index of the error

Parameters:
<Enable> OFF | ON

*RST: ON

Usage: Asynchronous command

SBUS<sb>:HBTO:FILTer:FIENable <Frame>,<Field>,<Enabler>
SBUS<sb>:HBTO:FILTer:FIENable? <Enabler>
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

SBUS<sb>:HBTO:FILTer:FRENable <Frame>,<Enabler>
SBUS<sb>:HBTO:FILTer:FRENable? <Enabler>
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:ENABle <Enable>

Enables the filtering on 100BASE-T1 frames. Only the frames that match the selected filter conditions are displayed.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Enable> OFF | ON

*RST: ON

Usage: Asynchronous command

SBUS<sb>:HBTO:FILTer:IMAX <Frame>,<Field>,<Data>
SBUS<sb>:HBTO:FILTer:IMAX? <Data>
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if the operator is set to `INRange`.

You can set the operator with `SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

SBUS<sb>:HBTO:FILTer:IMIN <Frame>,<Field>,<Data>
SBUS<sb>:HBTO:FILTer:IMIN? <Data>
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

SBUS<sb>:HBTO:FILTer:IOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:HBTO:FILTer:IOPerator? <Operator>
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

18.18.22.3 Format

This section describes the commands to specify and query frame formats for the "100BASE-T1" protocol.

SBUS<sb>:HBTO:FORMat:SELect....2148
SBUS<sb>:HBTO:FORMat:ADDFrame....2148
SBUS<sb>:HBTO:FORMat:LOAD....2149
SBUS<sb>:HBTO:FORMat:SAVE....2149

SBUS<sb>:HBTO:FORMat:CLR....2149
SBUS<sb>:HBTO:FORMat:FCOunt?....2149
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ADDField....2150
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLDCount?....2150
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:NAME....2150
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:COLor....2150
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:TYPE....2151
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ID1Field....2151
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ID2Field....2151
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ID3Field....2151
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ID1Value....2151
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ID2Value....2151
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ID3Value....2151
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:NAME....2152
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:COLor....2152
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:FSTBit....2152
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:BITCount....2153
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:REPetition....2153
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:BITorder....2153
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:FORMat....2154
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:ADDValue....2155
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue....2155
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel....2155
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:UNIT....2156
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:PARA....2156
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:PARB....2156

SBUS<sb>:HBTO:FORMat:SELect <Select>

Enables the format configuration

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Select> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show format" on page 915

SBUS<sb>:HBTO:FORMat:ADDFrame

Appendes a new frame format to the frame list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Add frame" on page 915

SBUS<sb>:HBTO:FORMat:LOAD <FileName>

Loads a the specified XML file with a list of frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Open" on page 916

SBUS<sb>:HBTO:FORMat:SAVE <FileName>

Saves the current list of frame formats to an XML file with the specified name.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Save as" on page 916

SBUS<sb>:HBTO:FORMat:CLR

Erases from the volatile memory all field descriptions and frame formats that you have created.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Edit list" on page 915

SBUS<sb>:HBTO:FORMat:FCOunt?

Returns the number of available frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Edit list" on page 915

SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ADDField

Appends a new field description to the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Usage: Setting only
Asynchronous command

Manual operation: See "Add field" on page 917

SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLDCount?

Returns the number of field descriptions available for the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:HBTO:FORMat:FRAMe<fr>:NAME <Name>

Specifies the name for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Frame name" on page 916

SBUS<sb>:HBTO:FORMat:FRAMe<fr>:COLor <Color>

Specifies the color for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:

<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4278255615

Usage: Asynchronous command

Manual operation: See "Frame color" on page 916

SBUS<sb>:HBTO:FORMat:FRAMe<fr>:TYPE <Type>

Sets an original frame type.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:

<Type>

Usage: Asynchronous command

Manual operation: See "Frame type" on page 916

SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ID1Field <ID1Field>
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ID2Field <ID2Field>
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ID3Field <ID3Field>

Sets the identifying field type for the configured frame type.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:

<ID3Field>

Usage: Asynchronous command

Manual operation: See "ID<n> field" on page 916

SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ID1Value <ID1Value>
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ID2Value <ID2Value>
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ID3Value <ID3Value>

Sets the value of the corresponding field type.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Value>

Usage: Asynchronous command

Manual operation: See "ID<n> value" on page 916

SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:NAME <Name>

Specifies the name for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Field name" on page 917

SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:COLor <Color>

Specifies the color for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4294967040

Usage: Asynchronous command

Manual operation: See "Field color" on page 917

SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:FSTBit <FirstBit>

In order of transmission, sets the first bit of the specified field in the payload.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<FirstBit> Range: 0 to 63
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "First bit" on page 917

SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:BITCount <BitCount>

Specifies the bit count, hence length, of the selected field in the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<BitCount> Range: 1 to 64
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Bit count" on page 918

SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:REPetition <Repetition>

Sets the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Repetition> Range: 0 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Repetition" on page 918

SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:BITorder <BitOrder>

Specifies, in which order the algorithm evaluates the bits of the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitOrder> LSBF | MSBF

LSBF
Least significant bit first

MSBF
Most significant bit first

*RST: MSBF

Usage: Asynchronous command

Manual operation: See "Bit order" on page 918

SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:FORMat <NumericFormat>

Specifies the numerical format for the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<NumericFormat> HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG | DEC | LIST | FLIN

HEX
Hexadecimal format

OCT
Octal format

BIN
Binary format

ASCII = ASCii
ASCII format

SIGN
Signed, decimal format

DEC=USIG
Unsigned, decimal format

LIST
Value list

FLIN
Linear function

*RST: HEX

Usage: Asynchronous command

Manual operation: See "Numeric format" on page 918

SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:ADDValue

Creates a new hexagonal value for customization.

Available if `SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Related commands:

`SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue`

`SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel`

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Usage: Setting only
Asynchronous command

Manual operation: See "Add value" on page 919

SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue <Value>

Sets the hexagonal value to convert it into a labeled state.

Available if `SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:

<Value>
Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Value" on page 919

SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel <Label>

Sets the label to convert the corresponding hexagonal value to a labeled state.

Available if `SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field
<p> Index of the value

Parameters:
<Label>

Usage: Asynchronous command

Manual operation: See "Label" on page 919

SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:UNIT <Unit>

Sets the unit for the linear function.

Available if `SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<Unit>

Usage: Asynchronous command

Manual operation: See "Unit" on page 919

SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:PARA <ParameterA>
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:PARB <ParameterB>

Sets the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

Available if `SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<ParameterB> Range: -1E+20 to 1E+20
Increment: 1E-12
*RST: 0

Usage: Asynchronous command

Manual operation: See "Parameter A,B" on page 919

18.18.22.4 Software trigger

There are two commands for each parameter, that you can use for defining the 100BASE-T1 settings.

For example, to set the *Frame type =MAC* > *Field =Data >00* value you can use one of the following commands:

- `TRIGger:SBSW:HBTO:FRAMe1:FLD1:DMIN 00`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `TRIGger:SBSW:HBTO:DMIN "MAC", "Data", 00`
  Defines the parameter by using the frame and field name.

TRIGger:SBSW:HBTO:CHKall....2157
TRIGger:SBSW:HBTO:CLR....2158
TRIGger:SBSW:HBTO:INVert....2158
TRIGger:SBSW:HBTO:RST....2158
TRIGger:SBSW:HBTO:FRENable....2158
TRIGger:SBSW:HBTO:FRAMe<fr>:ENABle....2158
TRIGger:SBSW:HBTO:BIT....2158
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:BIT....2158
TRIGger:SBSW:HBTO:DMAX....2159
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:DMAX....2159
TRIGger:SBSW:HBTO:DMIN....2159
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:DMIN....2159
TRIGger:SBSW:HBTO:DOPerator....2160
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:DOPerator....2160
TRIGger:SBSW:HBTO:FIENable....2160
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:ENABle....2160
TRIGger:SBSW:HBTO:IMAX....2160
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:IMAX....2160
TRIGger:SBSW:HBTO:IMIN....2161
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:IMIN....2161
TRIGger:SBSW:HBTO:IOPerator....2161
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:IOPerator....2161
TRIGger:SBSW:HBTO:ERENable....2161
TRIGger:SBSW:HBTO:ERRor<m>:ENABle....2161
SBUS<sb>:HBTO:SWTindex?....2162
SBUS<sb>:HBTO:SWTTime?....2162

TRIGger:SBSW:HBTO:CHKall

Enables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 920

TRIGger:SBSW:HBTO:CLR

Disables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 920

TRIGger:SBSW:HBTO:INVert

Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 920

TRIGger:SBSW:HBTO:RST

Presets the state of the selected frames and error types for the software trigger.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 920

TRIGger:SBSW:HBTO:FRENable <Frame>,<Enabler>
TRIGger:SBSW:HBTO:FRENable? <Enabler>
TRIGger:SBSW:HBTO:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 921

TRIGger:SBSW:HBTO:BIT <Frame>,<Field>,<Bit>
TRIGger:SBSW:HBTO:BIT? <Bit>
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 921

TRIGger:SBSW:HBTO:DMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:HBTO:DMAX? <Data>
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range for the software trigger, if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 921

TRIGger:SBSW:HBTO:DMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:HBTO:DMIN? <Data>
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 921

TRIGger:SBSW:HBTO:DOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:HBTO:DOPerator? <Operator>
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern of the software trigger in the selected field of the selected frame.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 921

TRIGger:SBSW:HBTO:FIENable <Frame>,<Field>,<Enabler>
TRIGger:SBSW:HBTO:FIENable? <Enabler>
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame of the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 921

TRIGger:SBSW:HBTO:IMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:HBTO:IMAX? <Data>
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range for the software trigger if the operator is set to `INRange`.

You can set the operator with `TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 921

TRIGger:SBSW:HBTO:IMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:HBTO:IMIN? <Data>
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range for the software trigger.

Suffix:

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 921

TRIGger:SBSW:HBTO:IOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:HBTO:IOPerator? <Operator>
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame for the software trigger.

Suffix:

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 921

TRIGger:SBSW:HBTO:ERENable <ErrorName>,<Enabler>
TRIGger:SBSW:HBTO:ERENable? <Enabler>
TRIGger:SBSW:HBTO:ERRor<m>:ENABle <Enable>

Defines the error type for the software trigger.

Suffix:
<m> Index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 923

SBUS<sb>:HBTO:SWTindex?

Queries the software trigger index.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Index> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:HBTO:SWTTime?

Queries the software trigger time in seconds.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Time> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.22.5 Decode results

SBUS<sb>:HBTO:FCOunt? 2163
SBUS<sb>:HBTO:FRAMe<fr>:FLDCount? 2163
SBUS<sb>:HBTO:FRAMe<fr>:BITRate? 2163
SBUS<sb>:HBTO:FRAMe<fr>:FLD<fl>:FVALue? 2164
SBUS<sb>:HBTO:FRAMe<fr>:FLD<fl>:LABel? 2164
SBUS<sb>:HBTO:FRAMe<fr>:FLD<fl>:STATe? 2164

SBUS<sb>:HBTO:FRAMe<fr>:FLD<fl>:VALue? 2165
SBUS<sb>:HBTO:FRAMe<fr>:CRC? 2165
SBUS<sb>:HBTO:FRAMe<fr>:DATA? 2166
SBUS<sb>:HBTO:FRAMe<fr>:DTADdress? 2166
SBUS<sb>:HBTO:FRAMe<fr>:DTSYmbol? 2166
SBUS<sb>:HBTO:FRAMe<fr>:FCRC? 2167
SBUS<sb>:HBTO:FRAMe<fr>:FDATa? 2167
SBUS<sb>:HBTO:FRAMe<fr>:FDTaddress? 2167
SBUS<sb>:HBTO:FRAMe<fr>:FSRaddress? 2167
SBUS<sb>:HBTO:FRAMe<fr>:FTPLenth? 2168
SBUS<sb>:HBTO:FRAMe<fr>:SRADdress? 2168
SBUS<sb>:HBTO:FRAMe<fr>:SRSYmbol? 2168
SBUS<sb>:HBTO:FRAMe<fr>:STARt? 2169
SBUS<sb>:HBTO:FRAMe<fr>:STATus? 2169
SBUS<sb>:HBTO:FRAMe<fr>:STOP? 2170
SBUS<sb>:HBTO:FRAMe<fr>:TPLenth? 2170
SBUS<sb>:HBTO:FRAMe<fr>:TYPE? 2170

SBUS<sb>:HBTO:FCOunt?

Returns the number of decoded frames.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count> Total number of decoded frames.

Usage: Query only
Asynchronous command

SBUS<sb>:HBTO:FRAMe<fr>:FLDCount?

Returns the number of fields in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count> Total number of fields.

Usage: Query only
Asynchronous command

SBUS<sb>:HBTO:FRAMe<fr>:BITRate?

Returns the primary bit rate.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<PrimaryBitRate> Increment: 1
*RST: 0
Default unit: bps

Usage: Query only
Asynchronous command

SBUS<sb>:HBTO:FRAMe<fr>:FLD<fl>:FVALue?

Returns the formatted value of the specified field.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<FormattedValue>

Usage: Query only
Asynchronous command

SBUS<sb>:HBTO:FRAMe<fr>:FLD<fl>:LABel?

Returns the label of the fields in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Label>

Usage: Query only
Asynchronous command

SBUS<sb>:HBTO:FRAMe<fr>:FLD<fl>:STATe?

Returns the state of the specified field.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:

<State> OK | EPRMble | ESFD | ELENgth | ECRC | UNCorrelated | INComplete

OK
The field is valid.

EPRMble
Preamble error

ESFD
Start frame delimiter (SFD) error

ELENgth
Erroneous field due to incorrect length

ECRC
Cyclic redundancy check (CRC) error, the value of the frame check sequence (FCS) field does not match the calculated checksum.

UNCorrelated
Uncorrelated field error

INComplete
Field not completely contained in the acquisition.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:HBTO:FRAMe<fr>:FLD<fl>:VALue?

Returns the value of the specified field.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:

<Value> Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:HBTO:FRAMe<fr>:CRC?

Returns the CRC (frame check) checksum of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<CRC> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:HBTO:FRAMe<fr>:DATA?

Returns the data for the selected frame in comma-separated values, corresponds to the "Data" column in the decode results table.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<Count>

<Values>

Usage: Query only
Asynchronous command

SBUS<sb>:HBTO:FRAMe<fr>:DTADdress?

Returns the destination address of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<DestAddress> Range: 0 to 281474976710655
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:HBTO:FRAMe<fr>:DTSYmbol?

Returns the destination symbols of the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<DestSymbNme>

Usage: Query only
Asynchronous command

SBUS<sb>:HBTO:FRAMe<fr>:FCRC?

Returns the formatted CRC (frame check) checksum of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedCRC>

Usage: Query only
Asynchronous command

SBUS<sb>:HBTO:FRAMe<fr>:FDATa?

Returns the formatted data for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedData>

Usage: Query only
Asynchronous command

SBUS<sb>:HBTO:FRAMe<fr>:FDTaddress?

Returns the formatted destination address of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedDestAddr>

Usage: Query only
Asynchronous command

SBUS<sb>:HBTO:FRAMe<fr>:FSRaddress?

Returns the formatted source address of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedSrcAddr>

Usage: Query only
Asynchronous command

SBUS<sb>:HBTO:FRAMe<fr>:FTPLenth?

Returns the value of type /length field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedTypLenth>

Usage: Query only
Asynchronous command

SBUS<sb>:HBTO:FRAMe<fr>:SRADdress?

Returns the source address of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<SourceAddress> Range: 0 to 281474976710655
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:HBTO:FRAMe<fr>:SRSYmbol?

Returns the source symbols of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<SrcSymbNme>

Usage: Query only
Asynchronous command

SBUS<sb>:HBTO:FRAMe<fr>:STARt?

Returns the start time of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:HBTO:FRAMe<fr>:STATus?

Returns the overall state of the frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameState> OK | EPRMble | ESFD | ELENgth | ECRC | UNCorrelated | INComplete

OK
Valid frame.

EPRMble
Erroneous frame due to preamble error.

ESFD
Erroneous frame due to SFD error.

ELENgth
Erroneous frame due to length / type error.

ECRC
Erroneous frame due to CRC error.

UNCorrelated
Uncorrelated frame

INComplete
Frame is inclompete

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:HBTO:FRAMe<fr>:STOP?

Returns the end time of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:HBTO:FRAMe<fr>:TPLenth?

Returns the value of the type / length field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<TypeLenth> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:HBTO:FRAMe<fr>:TYPE?

Returns the type of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameType> IDLE | MAC | FILLer | UNKNown

IDLE
IDLE frame. This frame is used for clock synchronization.

MAC
MAC frame. This frame contains information that define how to go about transmitting and receiving frames.

FILLer
Filler frame. The frame is used to maintain transmission activity.

UNKNown
No meaningful frame can be determined.
*RST: MAC

Usage: Query only
Asynchronous command

18.18.23 1000BASE-T1 (option R&S MXO5-K560)

- Configuration....2171
- Filter....2173
- Format....2179
- Software trigger....2188
- Decode results....2194

18.18.23.1 Configuration

SBUS<sb>:TBTO:MODE....2171
SBUS<sb>:TBTO:NEWList....2171
SBUS<sb>:TBTO:POLarity....2172
SBUS<sb>:TBTO:POSition....2172
SBUS<sb>:TBTO:SCALe....2172
SBUS<sb>:TBTO:SRCPlus....2172
SBUS<sb>:TBTO:SRCMinus....2173
SBUS<sb>:TBTO:SYMBols....2173

SBUS<sb>:TBTO:MODE <Mode>

Selects the operation mode for 1000BASE-T1.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Mode> MAIN | SUB | AUTO
*RST: AUTO

Usage: Asynchronous command

Manual operation: See "Operation mode" on page 928

SBUS<sb>:TBTO:NEWList <FileName>

Loads a symbol list file.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Example:
```
SBUS1:TBTO:NEWList
'/home/storage/userData/Protocol/TBTO.csv'
SBUS1:TBTO:SYMBols ON
```

Usage: Setting only
Asynchronous command

Manual operation: See "Show symbols" on page 929

SBUS<sb>:TBTO:POLarity <Polarity>

Selects the polarity of the data signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Polarity> NORMal | INVerted
*RST: NORMal

Usage: Asynchronous command

Manual operation: See "Polarity" on page 928

SBUS<sb>:TBTO:POSition <TBTO position>

Sets the vertical position of the 1000BASE-T1 signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<TBTO position>

Usage: Asynchronous command

SBUS<sb>:TBTO:SCALe <TBTO scale>

Set the vertical scale of the indicated 1000BASE-T1 signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<TBTO scale>

Usage: Asynchronous command

SBUS<sb>:TBTO:SRCPlus <PLUSSource>

Selects the D+ data source channel for 1000BASE-T1.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:

<PLUSSource> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Source plus" on page 928

SBUS<sb>:TBTO:SRCMinus <MINUSSource>

Selects the D- data source channel for 1000BASE-T1.

Suffix:

<sb> 1 to 4, index of the serial bus

Parameters:

<MINUSSource> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Source minus" on page 928

SBUS<sb>:TBTO:SYMBols <ShowSymbols>

Activates the symbol list to be used for decoding.

Suffix:

<sb> 1 to 4, index of the serial bus

Parameters:

<ShowSymbols> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show symbols" on page 929

18.18.23.2 Filter

There are two commands for each parameter, that you can use for defining the 1000BASE-T1 settings.

For example, to set the *Frame type =MAC* > *Field =Data >00* value you can use one of the following commands:

- `SBUS:TBTO:FILTer:FRAMe1:FLD1:DMIN 00`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `SBUS:TBTO:FILTer:DMIN "MAC", "Data", 00`
  Defines the parameter by using the frame and field name.

SBUS<sb>:TBTO:FILTer:CHKall....2174
SBUS<sb>:TBTO:FILTer:CLR....2174
SBUS<sb>:TBTO:FILTer:INVert....2175
SBUS<sb>:TBTO:FILTer:RST....2175
SBUS<sb>:TBTO:FILTer:BIT....2175
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:BIT....2175
SBUS<sb>:TBTO:FILTer:DMAX....2175
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:DMAX....2175
SBUS<sb>:TBTO:FILTer:DMIN....2176
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:DMIN....2176
SBUS<sb>:TBTO:FILTer:DOPerator....2176
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:DOPerator....2176
SBUS<sb>:TBTO:FILTer:ERENable....2177
SBUS<sb>:TBTO:FILTer:ERRor<n>:ENABle....2177
SBUS<sb>:TBTO:FILTer:FIENable....2177
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:ENABle....2177
SBUS<sb>:TBTO:FILTer:FRENable....2177
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:ENABle....2177
SBUS<sb>:TBTO:FILTer:IMAX....2178
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:IMAX....2178
SBUS<sb>:TBTO:FILTer:IMIN....2178
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:IMIN....2178
SBUS<sb>:TBTO:FILTer:IOPerator....2178
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:IOPerator....2178

SBUS<sb>:TBTO:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 930

SBUS<sb>:TBTO:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 930

SBUS<sb>:TBTO:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 930

SBUS<sb>:TBTO:FILTer:RST

Presets the state of the selected frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 930

SBUS<sb>:TBTO:FILTer:BIT <Frame>,<Field>,<Bit>
SBUS<sb>:TBTO:FILTer:BIT? <Bit>
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 931

SBUS<sb>:TBTO:FILTer:DMAX <Frame>,<Field>,<Data>
SBUS<sb>:TBTO:FILTer:DMAX? <Data>
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 931

SBUS<sb>:TBTO:FILTer:DMIN <Frame>,<Field>,<Data>
SBUS<sb>:TBTO:FILTer:DMIN? <Data>
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 931

SBUS<sb>:TBTO:FILTer:DOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:TBTO:FILTer:DOPerator? <Operator>
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 931

SBUS<sb>:TBTO:FILTer:ERENable <ErrorName>,<Enabler>
SBUS<sb>:TBTO:FILTer:ERENable? <Enabler>
SBUS<sb>:TBTO:FILTer:ERRor<n>:ENABle <Enable>

Defines the error type to be filtered on.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 933

SBUS<sb>:TBTO:FILTer:FIENable <Frame>,<Field>,<Enabler>
SBUS<sb>:TBTO:FILTer:FIENable? <Enabler>
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 931

SBUS<sb>:TBTO:FILTer:FRENable <Frame>,<Enabler>
SBUS<sb>:TBTO:FILTer:FRENable? <Enabler>
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:ENABle <Enable>

Enables the filtering on 1000BASE-T1 frames. Only the frames that match the selected filter conditions are displayed.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

SBUS<sb>:TBTO:FILTer:IMAX <Frame>,<Field>,<Data>
SBUS<sb>:TBTO:FILTer:IMAX? <Data>
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if the operator is set to `INRange`.

You can set the operator with `SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max>
Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 931

SBUS<sb>:TBTO:FILTer:IMIN <Frame>,<Field>,<Data>
SBUS<sb>:TBTO:FILTer:IMIN? <Data>
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min>
Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 931

SBUS<sb>:TBTO:FILTer:IOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:TBTO:FILTer:IOPerator? <Operator>
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 931

18.18.23.3 Format

This section describes the commands to specify and query frame formats for the "1000B-T1" protocol.

SBUS<sb>:TBTO:FORMat:SELect ... 2180
SBUS<sb>:TBTO:FORMat:ADDFrame ... 2180
SBUS<sb>:TBTO:FORMat:LOAD ... 2180
SBUS<sb>:TBTO:FORMat:SAVE ... 2180
SBUS<sb>:TBTO:FORMat:CLR ... 2181
SBUS<sb>:TBTO:FORMat:FCOunt? ... 2181
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ADDField ... 2181
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLDCount? ... 2181
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:NAME ... 2182
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:COLor ... 2182
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:TYPE ... 2182
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ID1Field ... 2182
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ID2Field ... 2182
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ID3Field ... 2182
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ID1Value ... 2183
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ID2Value ... 2183
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ID3Value ... 2183
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:NAME ... 2183
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:COLor ... 2183
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:FSTBit ... 2184
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:BITCount ... 2184
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:REPetition ... 2184
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:BITorder ... 2185
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:FORMat ... 2185
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:ADDValue ... 2186
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue ... 2186
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel ... 2187
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:UNIT ... 2187
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:PARA ... 2188
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:PARB ... 2188

SBUS<sb>:TBTO:FORMat:SELect <Select>

Enables the format configuration

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Select> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show format" on page 933

SBUS<sb>:TBTO:FORMat:ADDFrame

Appendes a new frame format to the frame list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Add frame" on page 933

SBUS<sb>:TBTO:FORMat:LOAD <FileName>

Loads a the specified XML file with a list of frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Open" on page 934

SBUS<sb>:TBTO:FORMat:SAVE <FileName>

Saves the current list of frame formats to an XML file with the specified name.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Save as" on page 934

SBUS<sb>:TBTO:FORMat:CLR

Erases from the volatile memory all field descriptions and frame formats that you have created.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Edit list" on page 934

SBUS<sb>:TBTO:FORMat:FCOunt?

Returns the number of available frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Edit list" on page 934

SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ADDField

Appends a new field description to the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Usage: Setting only
Asynchronous command

Manual operation: See "Add field" on page 935

SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLDCount?

Returns the number of field descriptions available for the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:TBTO:FORMat:FRAMe<fr>:NAME <Name>

Specifies the name for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Frame name" on page 935

SBUS<sb>:TBTO:FORMat:FRAMe<fr>:COLor <Color>

Specifies the color for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4278255615

Usage: Asynchronous command

Manual operation: See "Frame color" on page 935

SBUS<sb>:TBTO:FORMat:FRAMe<fr>:TYPE <Type>

Sets an original frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Type>

Usage: Asynchronous command

Manual operation: See "Frame type" on page 935

SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ID1Field <ID1Field>
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ID2Field <ID2Field>
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ID3Field <ID3Field>

Sets the identifying field type for the configured frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Field>

Usage: Asynchronous command

Manual operation: See "ID<n> field" on page 935

SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ID1Value <ID1Value>
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ID2Value <ID2Value>
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ID3Value <ID3Value>

Sets the value of the corresponding field type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Value>

Usage: Asynchronous command

Manual operation: See "ID<n> value" on page 935

SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:NAME <Name>

Specifies the name for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Field name" on page 936

SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:COLor <Color>

Specifies the color for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4294967040

Usage: Asynchronous command

SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:FSTBit <FirstBit>

In order of transmission, sets the first bit of the specified field in the payload.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<FirstBit>
Range: 0 to 63
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "First bit" on page 936

SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:BITCount <BitCount>

Specifies the bit count, hence length, of the selected field in the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<BitCount>
Range: 1 to 64
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Bit count" on page 936

SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:REPetition <Repetition>

Sets the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Repetition> Range: 0 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Repetition" on page 937

SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:BITorder <BitOrder>

Specifies, in which order the algorithm evaluates the bits of the condition value of the selected field in the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<BitOrder> LSBF | MSBF

LSBF
Least significant bit first

MSBF
Most significant bit first

*RST: MSBF

Usage: Asynchronous command

Manual operation: See "Bit order" on page 937

SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:FORMat <NumericFormat>

Specifies the numerical format for the condition value of the selected field in the selected frame.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<NumericFormat> HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG | DEC | LIST | FLIN

HEX
Hexadecimal format

OCT
Octal format

BIN
Binary format

ASCII = ASCii
ASCII format

SIGN
Signed, decimal format

DEC=USIG
Unsigned, decimal format

LIST
Value list

FLIN
Linear function

*RST: HEX

Usage: Asynchronous command

Manual operation: See "Numeric format" on page 937

SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:ADDValue

Creates a new hexagonal value for customization.

Available if `SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Related commands:

`SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue`

`SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel`

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Usage: Setting only
Asynchronous command

Manual operation: See "Add value" on page 938

SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue <Value>

Sets the hexagonal value to convert it into a labeled state.

Available if `SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:
<Value> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Value" on page 938

SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel <Label>

Sets the label to convert the corresponding hexagonal value to a labeled state.

Available if `SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:
<Label>

Usage: Asynchronous command

Manual operation: See "Label" on page 938

SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:UNIT <Unit>

Sets the unit for the linear function.

Available if `SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Unit>

Usage: Asynchronous command

Manual operation: See "Unit" on page 938

SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:PARA <ParameterA>
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:PARB <ParameterB>

Sets the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

Available if `SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:

<sb>	1 to 4, index of the serial bus
<fr>	Index of the frame
<fl>	Index of the field

Parameters:

<ParameterB>	Range:	-1E+20 to 1E+20
	Increment:	1E-12
	*RST:	0

Usage: Asynchronous command

Manual operation: See "Parameter A,B" on page 938

18.18.23.4 Software trigger

There are two commands for each parameter, that you can use for defining the 1000BASE-T1 settings.

For example, to set the *Frame type =MAC > Field =Data >00* value you can use one of the following commands:

- `TRIGger:SBSW:TBTO:FRAMe1:FLD1:DMIN 00`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `TRIGger:SBSW:TBTO:DMIN "MAC", "Data", 00`
  Defines the parameter by using the frame and field name.

TRIGger:SBSW:TBTO:CHKall....2189
TRIGger:SBSW:TBTO:CLR....2189
TRIGger:SBSW:TBTO:INVert....2189
TRIGger:SBSW:TBTO:RST....2189
TRIGger:SBSW:TBTO:FRENable....2190
TRIGger:SBSW:TBTO:FRAMe<fr>:ENABle....2190
TRIGger:SBSW:TBTO:BIT....2190
TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:BIT....2190
TRIGger:SBSW:TBTO:DMAX....2190
TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:DMAX....2190
TRIGger:SBSW:TBTO:DMIN....2191
TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:DMIN....2191
TRIGger:SBSW:TBTO:DOPerator....2191
TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:DOPerator....2191
TRIGger:SBSW:TBTO:FIENable....2191

TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:ENABle....2191
TRIGger:SBSW:TBTO:IMAX....2192
TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:IMAX....2192
TRIGger:SBSW:TBTO:IMIN....2192
TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:IMIN....2192
TRIGger:SBSW:TBTO:IOPerator....2193
TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:IOPerator....2193
TRIGger:SBSW:TBTO:ERENable....2193
TRIGger:SBSW:TBTO:ERRor<m>:ENABle....2193
SBUS<sb>:TBTO:SWTindex?....2193
SBUS<sb>:TBTO:SWTTime?....2194

TRIGger:SBSW:TBTO:CHKall

Enables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 939

TRIGger:SBSW:TBTO:CLR

Disables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 939

TRIGger:SBSW:TBTO:INVert

Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 939

TRIGger:SBSW:TBTO:RST

Presets the state of the selected frames and error types for the software trigger.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 939

TRIGger:SBSW:TBTO:FRENable <Frame>,<Enabler>
TRIGger:SBSW:TBTO:FRENable? <Enabler>
TRIGger:SBSW:TBTO:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 940

TRIGger:SBSW:TBTO:BIT <Frame>,<Field>,<Bit>
TRIGger:SBSW:TBTO:BIT? <Bit>
TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 940

TRIGger:SBSW:TBTO:DMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:TBTO:DMAX? <Data>
TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range for the software trigger, if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max>

Usage: Asynchronous command

Manual operation: See "Edit" on page 940

TRIGger:SBSW:TBTO:DMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:TBTO:DMIN? <Data>
TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min>

Usage: Asynchronous command

Manual operation: See "Edit" on page 940

TRIGger:SBSW:TBTO:DOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:TBTO:DOPerator? <Operator>
TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern of the software trigger in the selected field of the selected frame.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 940

TRIGger:SBSW:TBTO:FIENable <Frame>,<Field>,<Enabler>
TRIGger:SBSW:TBTO:FIENable? <Enabler>
TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame of the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 940

TRIGger:SBSW:TBTO:IMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:TBTO:IMAX? <Data>
TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range for the software trigger if the operator is set to `INRange`.

You can set the operator with `TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max> Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 940

TRIGger:SBSW:TBTO:IMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:TBTO:IMIN? <Data>
TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min> Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 940

TRIGger:SBSW:TBTO:IOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:TBTO:IOPerator? <Operator>
TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 940

TRIGger:SBSW:TBTO:ERENable <ErrorName>,<Enabler>
TRIGger:SBSW:TBTO:ERENable? <Enabler>
TRIGger:SBSW:TBTO:ERRor<m>:ENABle <Enable>

Defines the error type for the software trigger.

Suffix:
<m> index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 942

SBUS<sb>:TBTO:SWTindex?

Queries the software trigger index.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Index> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:TBTO:SWTTime?

Queries the software trigger time in seconds.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Time> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.23.5 Decode results

SBUS<sb>:TBTO:FCOunt?....2194
SBUS<sb>:TBTO:FRAMe<fr>:FLDCount?....2195
SBUS<sb>:TBTO:FRAMe<fr>:BITRate?....2195
SBUS<sb>:TBTO:FRAMe<fr>:FLD<fl>:FVALue?....2195
SBUS<sb>:TBTO:FRAMe<fr>:FLD<fl>:LABel?....2196
SBUS<sb>:TBTO:FRAMe<fr>:FLD<fl>:STATe?....2196
SBUS<sb>:TBTO:FRAMe<fr>:FLD<fl>:VALue?....2196
SBUS<sb>:TBTO:FRAMe<fr>:CRC?....2197
SBUS<sb>:TBTO:FRAMe<fr>:DATA?....2197
SBUS<sb>:TBTO:FRAMe<fr>:DTADdress?....2197
SBUS<sb>:TBTO:FRAMe<fr>:DTSYmbol?....2198
SBUS<sb>:TBTO:FRAMe<fr>:FCRC?....2198
SBUS<sb>:TBTO:FRAMe<fr>:FDATa?....2198
SBUS<sb>:TBTO:FRAMe<fr>:FDTaddress?....2199
SBUS<sb>:TBTO:FRAMe<fr>:FSRaddress?....2199
SBUS<sb>:TBTO:FRAMe<fr>:FTPLenth?....2199
SBUS<sb>:TBTO:FRAMe<fr>:SRADdress?....2199
SBUS<sb>:TBTO:FRAMe<fr>:SRSYmbol?....2200
SBUS<sb>:TBTO:FRAMe<fr>:STARt?....2200
SBUS<sb>:TBTO:FRAMe<fr>:STATus?....2200
SBUS<sb>:TBTO:FRAMe<fr>:STOP?....2201
SBUS<sb>:TBTO:FRAMe<fr>:TPLenth?....2201
SBUS<sb>:TBTO:FRAMe<fr>:TYPE?....2202

SBUS<sb>:TBTO:FCOunt?

Returns the number of decoded frames.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count> Total number of decoded frames.

Usage: Query only
Asynchronous command

SBUS<sb>:TBTO:FRAMe<fr>:FLDCount?

Returns the number of fields in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count> Total number of fields.

Usage: Query only
Asynchronous command

SBUS<sb>:TBTO:FRAMe<fr>:BITRate?

Returns the primary bit rate.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<PrimaryBitRate> Range: 0 to 100000000000
Increment: 1
*RST: 0
Default unit: bps

Usage: Query only
Asynchronous command

SBUS<sb>:TBTO:FRAMe<fr>:FLD<fl>:FVALue?

Returns the formatted value of the specified field.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<FormattedValue>

Usage: Query only
Asynchronous command

SBUS<sb>:TBTO:FRAMe<fr>:FLD<fl>:LABel?

Returns the label of the selected field in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Label>

Usage: Query only
Asynchronous command

SBUS<sb>:TBTO:FRAMe<fr>:FLD<fl>:STATe?

Returns the state of the specified field.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<State> OK | ERRFEC | ERRZERO | ERROOR | ERRCRC | INComplete

OK
Valid frame.

ERRFEC
Reed-Solomon forward error correction.

ERRZERO
Zero ternary symbol pair error.

ERROOR
Values are out of range error.

ERRCRC
Erroneous frame due to CRC error.

INComplete
Frame is incomplete.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:TBTO:FRAMe<fr>:FLD<fl>:VALue?

Returns the value of the specified field.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Value> *RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:TBTO:FRAMe<fr>:CRC?

Returns the CRC (frame check) checksum of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<CRC> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:TBTO:FRAMe<fr>:DATA?

Returns the data for the selected frame in comma separated values. Corresponds to the Data column in the decode results table.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

<Values>

Example: Query: `SBUS:TBTO:FRAMe1:DATA?`
Return string, if there are 10 bytes:
`10,45,87,123,0,54,67,1,0,9,0`

Usage: Query only
Asynchronous command

SBUS<sb>:TBTO:FRAMe<fr>:DTADdress?

Returns the destination address of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<DestAddress> Range: 0 to 281474976710655
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:TBTO:FRAMe<fr>:DTSYmbol?

Returns the destination symbols of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<DestSymbNme>

Usage: Query only
Asynchronous command

SBUS<sb>:TBTO:FRAMe<fr>:FCRC?

Returns the formatted CRC (frame check) checksum of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedCRC>

Usage: Query only
Asynchronous command

SBUS<sb>:TBTO:FRAMe<fr>:FDATa?

Returns the formatted data for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedData>

Usage: Query only
Asynchronous command

SBUS<sb>:TBTO:FRAMe<fr>:FDTaddress?

Returns the formatted destination address of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedDestAddr>

Usage: Query only
Asynchronous command

SBUS<sb>:TBTO:FRAMe<fr>:FSRaddress?

Returns the formatted source address of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedSrcAddr>

Usage: Query only
Asynchronous command

SBUS<sb>:TBTO:FRAMe<fr>:FTPLenth?

Returns the value of type /length field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedTypLenth>

Usage: Query only
Asynchronous command

SBUS<sb>:TBTO:FRAMe<fr>:SRADdress?

Returns the source address of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<SourceAddress> Range: 0 to 281474976710655
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:TBTO:FRAMe<fr>:SRSYmbol?

Returns the source symbols of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<SrcSymbNme>

Usage: Query only
Asynchronous command

SBUS<sb>:TBTO:FRAMe<fr>:STARt?

Returns the start time of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:TBTO:FRAMe<fr>:STATus?

Returns the overall state of the frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameState> OK | ERRFEC | ERRZERO | ERROOR | ERRCRC | INComplete

OK
Valid frame.

ERRFEC
Reed-Solomon forward error correction.

ERRZERO
Zero ternary symbol pair error.

ERROOR
Values are out of range error.

ERRCRC
Erroneous frame due to CRC error.

INComplete
Frame is inclompete

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:TBTO:FRAMe<fr>:STOP?

Returns the end time of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:TBTO:FRAMe<fr>:TPLenth?

Returns the value of the type / length field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<TypeLenth> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:TBTO:FRAMe<fr>:TYPE?

Returns the type of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameType> IDLE | MAC | OAM | RSFEC | BH | CTLADDR | CTLCODE | ZEROTSYM | UNKNown

IDLE
IDLE frame, used for clock synchronization

MAC
MAC frame, contains information that defines how to go about transmitting and receiving frames

OAM
Operations, administration, and maintenance frame

RSFEC
Reed Solomon forward error correction check frame

BH
Block header frame

CTLADDR
Control address frame

CTLCODE
Control code frame

ZEROTSYM
Zero terrnary symbol frame

UNKNown
No meaningful frame can be determined.

*RST: MAC

Usage: Query only
Asynchronous command

18.18.24 USB 1.1 (option R&S MXO5-K570)

Before MXO 5 can accept the specific bus commands, make sure that:

- The decoding of the specified bus is enabled with `SBUS<sb>[:STATe]`.
- The bus is set to the correct type with `SBUS<sb>:TYPE`.

- Configuration....2203
- Filter....2205
- Format....2211
- Software trigger....2220
- Decode results....2226

18.18.24.1 Configuration

SBUS<sb>:USBone:DPLus:SOURce....2203
SBUS<sb>:USBone:DMINus:SOURce....2203
SBUS<sb>:USBone:MODE....2203
SBUS<sb>:USBone:DPLus:THReshold....2204
SBUS<sb>:USBone:DPLus:HYSTeresis....2204
SBUS<sb>:USBone:DMINus:THReshold....2204
SBUS<sb>:USBone:DMINus:HYSTeresis....2204
SBUS<sb>:USBone:POSition....2205
SBUS<sb>:USBone:SCALe....2205

SBUS<sb>:USBone:DPLus:SOURce <DPlusSource>

Sets the source channel to which the D+ data line is connected.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DPlusSource> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "D+ source, D- source" on page 951

SBUS<sb>:USBone:DMINus:SOURce <DMinusSource>

Sets the source channel to which the D- data line is connected.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DMinusSource> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "D+ source, D- source" on page 951

SBUS<sb>:USBone:MODE <Mode>

Selects the low speed or full speed variant of the USB 1.1 protocol.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Mode> USBLow | USBFull
*RST: USBLow

Usage: Asynchronous command

Manual operation: See "Speed variant" on page 951

SBUS<sb>:USBone:DPLus:THReshold <DPlusThreshold>

Sets a threshold value for the D+ line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DPlusThreshold>

Usage: Asynchronous command

Manual operation: See "D+ threshold" on page 953

SBUS<sb>:USBone:DPLus:HYSTeresis <DPlusHyst>

Sets a hysteresis value for the D+ line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DPlusHyst>

Usage: Asynchronous command

Manual operation: See "D+ hysteresis" on page 953

SBUS<sb>:USBone:DMINus:THReshold <DMinusThres>

Sets a threshold value for the D- line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DMinusThres>

Usage: Asynchronous command

Manual operation: See "D- threshold" on page 953

SBUS<sb>:USBone:DMINus:HYSTeresis <DMinusHyst>

Sets a hysteresis value for the D- line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<DMinusHyst>

Usage: Asynchronous command

Manual operation: See "D- hysteresis" on page 953

SBUS<sb>:USBone:POSition <Position>

Sets the vertical position of the USB 1.1 signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Position> Range: 1 to 100

Usage: Asynchronous command

SBUS<sb>:USBone:SCALe <Scale>

Sets the vertical scale of the USB 1.1 signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Scale> Range: 1 to 5

Usage: Asynchronous command

18.18.24.2 Filter

There are two commands for each parameter, that you can use for defining the USB 1.1 settings.

For example, to set the *Frame type =WRITe > Field =Address >Data* value you can use one of the following commands:

- `SBUS:USBone:FILTer:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `SBUS:USBone:FILTer:DMIN "WRITe", "Address", 01100`
  Defines the parameter by using the frame and field name.

SBUS<sb>:USBone:FILTer:CHKall 2206
SBUS<sb>:USBone:FILTer:CLR 2206
SBUS<sb>:USBone:FILTer:INVert 2206
SBUS<sb>:USBone:FILTer:RST 2207
SBUS<sb>:USBone:FILTer:FRENable 2207
SBUS<sb>:USBone:FILTer:FRAMe<fr>:ENABle 2207

SBUS<sb>:USBone:FILTer:DMAX 2207
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:DMAX 2207
SBUS<sb>:USBone:FILTer:DMIN 2208
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:DMIN 2208
SBUS<sb>:USBone:FILTer:DOPerator 2208
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:DOPerator 2208
SBUS<sb>:USBone:FILTer:ERENable 2208
SBUS<sb>:USBone:FILTer:ERRor<n>:ENABle 2208
SBUS<sb>:USBone:FILTer:IMAX 2209
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:IMAX 2209
SBUS<sb>:USBone:FILTer:IMIN 2209
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:IMIN 2209
SBUS<sb>:USBone:FILTer:IOPerator 2209
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:IOPerator 2209
SBUS<sb>:USBone:FILTer:BIT 2210
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:BIT 2210
SBUS<sb>:USBone:FILTer:FIENable 2210
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:ENABle 2210

SBUS<sb>:USBone:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 955

SBUS<sb>:USBone:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 955

SBUS<sb>:USBone:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 955

SBUS<sb>:USBone:FILTer:RST

Presets the state of the selected frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 955

SBUS<sb>:USBone:FILTer:FRENable <Frame>,<Enabler>
SBUS<sb>:USBone:FILTer:FRENable? <Enabler>
SBUS<sb>:USBone:FILTer:FRAMe<fr>:ENABle <Enable>

Enables or disables the specific frame to be filtered on.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 955

SBUS<sb>:USBone:FILTer:DMAX <Frame>,<Field>,<Data>
SBUS<sb>:USBone:FILTer:DMAX? <Data>
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max> List of comma-separated values

Usage: Asynchronous command

Manual operation: See "Edit" on page 956

SBUS<sb>:USBone:FILTer:DMIN <Frame>,<Field>,<Data>
SBUS<sb>:USBone:FILTer:DMIN? <Data>
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min> List of comma-separated values

Usage: Asynchronous command

Manual operation: See "Edit" on page 956

SBUS<sb>:USBone:FILTer:DOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:USBone:FILTer:DOPerator? <Operator>
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 956

SBUS<sb>:USBone:FILTer:ERENable <ErrorName>,<Enabler>
SBUS<sb>:USBone:FILTer:ERENable? <Enabler>
SBUS<sb>:USBone:FILTer:ERRor<n>:ENABle <Enable>

Defines the error type to be filtered on.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> Index of the error

Parameters:
<Enable> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 957

SBUS<sb>:USBone:FILTer:IMAX <Frame>,<Field>,<Data>
SBUS<sb>:USBone:FILTer:IMAX? <Data>
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if the operator is set to `INRange`.

You can set the operator with `SBUS<sb>:USBone:FILTer:IOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max>
Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 956

SBUS<sb>:USBone:FILTer:IMIN <Frame>,<Field>,<Data>
SBUS<sb>:USBone:FILTer:IMIN? <Data>
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min>
Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 956

SBUS<sb>:USBone:FILTer:IOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:USBone:FILTer:IOPerator? <Operator>
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 956

SBUS<sb>:USBone:FILTer:BIT <Frame>,<Field>,<Bit>
SBUS<sb>:USBone:FILTer:BIT? <Bit>
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 956

SBUS<sb>:USBone:FILTer:FIENable <Frame>,<Field>,<Enabler>
SBUS<sb>:USBone:FILTer:FIENable? <Enabler>
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus
<fr> Index of the frame
<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 956

18.18.24.3 Format

This section describes the commands to specify and query frame formats for the "USB1.1" protocol.

SBUS<sb>:USBone:FORMat:SELect....2211
SBUS<sb>:USBone:FORMat:ADDFrame....2212
SBUS<sb>:USBone:FORMat:LOAD....2212
SBUS<sb>:USBone:FORMat:SAVE....2212
SBUS<sb>:USBone:FORMat:CLR....2212
SBUS<sb>:USBone:FORMat:FCOunt?....2213
SBUS<sb>:USBone:FORMat:FRAMe<fr>:ADDField....2213
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLDCount?....2213
SBUS<sb>:USBone:FORMat:FRAMe<fr>:NAME....2213
SBUS<sb>:USBone:FORMat:FRAMe<fr>:COLor....2214
SBUS<sb>:USBone:FORMat:FRAMe<fr>:TYPE....2214
SBUS<sb>:USBone:FORMat:FRAMe<fr>:ID1Field....2214
SBUS<sb>:USBone:FORMat:FRAMe<fr>:ID2Field....2214
SBUS<sb>:USBone:FORMat:FRAMe<fr>:ID3Field....2214
SBUS<sb>:USBone:FORMat:FRAMe<fr>:ID1Value....2215
SBUS<sb>:USBone:FORMat:FRAMe<fr>:ID2Value....2215
SBUS<sb>:USBone:FORMat:FRAMe<fr>:ID3Value....2215
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:NAME....2215
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:COLor....2215
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:FSTBit....2216
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:BITCount....2216
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:REPetition....2216
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:BITorder....2217
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:FORMat....2217
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:ADDValue....2218
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue....2218
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel....2219
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:UNIT....2219
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:PARA....2219
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:PARB....2219

SBUS<sb>:USBone:FORMat:SELect <Select>

Enables the format configuration

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Select> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show format" on page 957

SBUS<sb>:USBone:FORMat:ADDFrame

Appendes a new frame format to the frame list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Add frame" on page 957

SBUS<sb>:USBone:FORMat:LOAD <FileName>

Loads a the specified XML file with a list of frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Open" on page 958

SBUS<sb>:USBone:FORMat:SAVE <FileName>

Saves the current list of frame formats to an XML file with the specified name.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Save as" on page 958

SBUS<sb>:USBone:FORMat:CLR

Erases from the volatile memory all field descriptions and frame formats that you have created.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Edit list" on page 958

SBUS<sb>:USBone:FORMat:FCOunt?

Returns the number of available frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Edit list" on page 958

SBUS<sb>:USBone:FORMat:FRAMe<fr>:ADDField

Appends a new field description to the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Usage: Setting only
Asynchronous command

Manual operation: See "Add field" on page 959

SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLDCount?

Returns the number of field descriptions available for the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:USBone:FORMat:FRAMe<fr>:NAME <Name>

Specifies the name for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Frame name" on page 959

SBUS<sb>:USBone:FORMat:FRAMe<fr>:COLor <Color>

Specifies the color for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4278255615

Usage: Asynchronous command

Manual operation: See "Frame color" on page 959

SBUS<sb>:USBone:FORMat:FRAMe<fr>:TYPE <Type>

Sets an original frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Type>

Usage: Asynchronous command

Manual operation: See "Frame type" on page 959

SBUS<sb>:USBone:FORMat:FRAMe<fr>:ID1Field <ID1Field>
SBUS<sb>:USBone:FORMat:FRAMe<fr>:ID2Field <ID2Field>
SBUS<sb>:USBone:FORMat:FRAMe<fr>:ID3Field <ID3Field>

Sets the identifying field type for the configured frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Field>

Usage: Asynchronous command

Manual operation: See "ID<n> field" on page 959

SBUS<sb>:USBone:FORMat:FRAMe<fr>:ID1Value <ID1Value>
SBUS<sb>:USBone:FORMat:FRAMe<fr>:ID2Value <ID2Value>
SBUS<sb>:USBone:FORMat:FRAMe<fr>:ID3Value <ID3Value>

Sets the value of the corresponding field type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Value>

Usage: Asynchronous command

Manual operation: See "ID<n> value" on page 959

SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:NAME <Name>

Specifies the name for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Field name" on page 960

SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:COLor <Color>

Specifies the color for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4294967040

Usage: Asynchronous command

Manual operation: See "Field color" on page 960

SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:FSTBit <FirstBit>

In order of transmission, sets the first bit of the specified field in the payload.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<FirstBit> Range: 0 to 63
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "First bit" on page 960

SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:BITCount <BitCount>

Specifies the bit count, hence length, of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitCount> Range: 1 to 64
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Bit count" on page 960

SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:REPetition <Repetition>

Sets the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Repetition> Range: 0 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Repetition" on page 961

SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:BITorder <BitOrder>

Specifies, in which order the algorithm evaluates the bits of the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitOrder> LSBF | MSBF

LSBF
Least significant bit first

MSBF
Most significant bit first

*RST: MSBF

Usage: Asynchronous command

Manual operation: See "Bit order" on page 961

SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:FORMat <NumericFormat>

Specifies the numerical format for the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<NumericFormat> HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG | DEC | LIST | FLIN

HEX
Hexadecimal format

OCT
Octal format

BIN
Binary format

ASCII = ASCii
ASCII format

SIGN
Signed, decimal format

DEC=USIG
Unsigned, decimal format

LIST
Value list

FLIN
Linear function

*RST: HEX

Usage: Asynchronous command

Manual operation: See "Numeric format" on page 961

SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:ADDValue

Creates a new hexagonal value for customization.

Available if `SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Related commands:

`SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue`

`SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel`

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Usage: Setting only
Asynchronous command

Manual operation: See "Add value" on page 962

SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue <Value>

Sets the hexagonal value to convert it into a labeled state.

Available if `SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:

<Value> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Value" on page 962

SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel <Label>

Sets the label to convert the corresponding hexagonal value to a labeled state.

Available if `SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:

<Label>

Usage: Asynchronous command

Manual operation: See "Label" on page 962

SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:UNIT <Unit>

Sets the unit for the linear function.

Available if `SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Unit>

Usage: Asynchronous command

Manual operation: See "Unit" on page 962

SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:PARA <ParameterA>
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:PARB <ParameterB>

Sets the parameters of the linear function.

- Parameter A: Slope (rate of change)

- Parameter B: Offset

Available if `SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<ParameterB> Range: -1E+20 to 1E+20
Increment: 1E-12
*RST: 0

Usage: Asynchronous command

Manual operation: See "Parameter A,B" on page 962

18.18.24.4 Software trigger

There are two commands for each parameter, that you can use for defining the USB 1.1 settings.

For example, to set the *Frame type =WRITe > Field =Address >Data* value you can use one of the following commands:

- `TRIGger:SBSW:USBone:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `STRIGger:SBSW:USBone:DMIN "WRITe", "Address", 01100`
  Defines the parameter by using the frame and field name.

TRIGger:SBSW:USBone:CHKall....2221
TRIGger:SBSW:USBone:CLR....2221
TRIGger:SBSW:USBone:INVert....2221
TRIGger:SBSW:USBone:RST....2221
TRIGger:SBSW:USBone:FRENable....2221
TRIGger:SBSW:USBone:FRAMe<fr>:ENABle....2221
TRIGger:SBSW:USBone:BIT....2222
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:BIT....2222
TRIGger:SBSW:USBone:DMAX....2222
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:DMAX....2222
TRIGger:SBSW:USBone:DMIN....2222
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:DMIN....2222
TRIGger:SBSW:USBone:DOPerator....2223
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:DOPerator....2223
TRIGger:SBSW:USBone:FIENable....2223
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:ENABle....2223
TRIGger:SBSW:USBone:IMAX....2224
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:IMAX....2224
TRIGger:SBSW:USBone:IMIN....2224
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:IMIN....2224

TRIGger:SBSW:USBone:IOPerator....2224
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:IOPerator....2224
TRIGger:SBSW:USBone:ERENable....2225
TRIGger:SBSW:USBone:ERRor<m>:ENABle....2225
SBUS<sb>:USBone:SWTindex?....2225
SBUS<sb>:USBone:SWTTime?....2225

TRIGger:SBSW:USBone:CHKall

Enables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 964

TRIGger:SBSW:USBone:CLR

Disables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 964

TRIGger:SBSW:USBone:INVert

Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 964

TRIGger:SBSW:USBone:RST

Presets the state of the selected frames and error types for the software trigger.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 964

TRIGger:SBSW:USBone:FRENable <Frame>,<Enabler>
TRIGger:SBSW:USBone:FRENable? <Enabler>
TRIGger:SBSW:USBone:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 964

TRIGger:SBSW:USBone:BIT <Frame>,<Field>,<Bit>
TRIGger:SBSW:USBone:BIT? <Bit>
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 965

TRIGger:SBSW:USBone:DMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:USBone:DMAX? <Data>
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range for the software trigger, if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max> List of comma-separated values

Usage: Asynchronous command

Manual operation: See "Edit" on page 965

TRIGger:SBSW:USBone:DMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:USBone:DMIN? <Data>
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min> List of comma-separated values

Usage: Asynchronous command

Manual operation: See "Edit" on page 965

TRIGger:SBSW:USBone:DOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:USBone:DOPerator? <Operator>
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern of the software trigger in the selected field of the selected frame.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 965

TRIGger:SBSW:USBone:FIENable <Frame>,<Field>,<Enabler>
TRIGger:SBSW:USBone:FIENable? <Enabler>
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame of the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 965

TRIGger:SBSW:USBone:IMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:USBone:IMAX? <Data>
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range for the software trigger if the operator is set to `INRange`.

You can set the operator with `TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max>
Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 965

TRIGger:SBSW:USBone:IMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:USBone:IMIN? <Data>
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min>
Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 965

TRIGger:SBSW:USBone:IOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:USBone:IOPerator? <Operator>
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 965

TRIGger:SBSW:USBone:ERENable <ErrorName>,<Enabler>
TRIGger:SBSW:USBone:ERENable? <Enabler>
TRIGger:SBSW:USBone:ERRor<m>:ENABle <Enable>

Defines the error type for the software trigger.

Suffix:
<m> Index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 966

SBUS<sb>:USBone:SWTindex?

Queries the software trigger index.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Index> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:USBone:SWTTime?

Queries the software trigger time in seconds.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:

<Time> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.24.5 Decode results

SBUS<sb>:USBone:FCOunt? 2226
SBUS<sb>:USBone:FRAMe<fr>:ADDRess? 2226
SBUS<sb>:USBone:FRAMe<fr>:FLDCount? 2227
SBUS<sb>:USBone:FRAMe<fr>:BITRate? 2227
SBUS<sb>:USBone:FRAMe<fr>:DATA? 2227
SBUS<sb>:USBone:FRAMe<fr>:STARt? 2228
SBUS<sb>:USBone:FRAMe<fr>:STATus? 2228
SBUS<sb>:USBone:FRAMe<fr>:STOP? 2229
SBUS<sb>:USBone:FRAMe<fr>:FLD<fl>:FVALue? 2229
SBUS<sb>:USBone:FRAMe<fr>:FLD<fl>:LABel? 2229
SBUS<sb>:USBone:FRAMe<fr>:FLD<fl>:STATe? 2230
SBUS<sb>:USBone:FRAMe<fr>:FLD<fl>:VALue? 2230
SBUS<sb>:USBone:FRAMe<fr>:CRC? 2231
SBUS<sb>:USBone:FRAMe<fr>:FADDress? 2231
SBUS<sb>:USBone:FRAMe<fr>:FCRC? 2231
SBUS<sb>:USBone:FRAMe<fr>:ENDPoint? 2232
SBUS<sb>:USBone:FRAMe<fr>:FRNumber? 2232
SBUS<sb>:USBone:FRAMe<fr>:PID? 2232
SBUS<sb>:USBone:FRAMe<fr>:PIDName? 2232
SBUS<sb>:USBone:FRAMe<fr>:TYPE? 2233

SBUS<sb>:USBone:FCOunt?

Returns the number of decoded frames.

Suffix:

<sb> 1 to 4, index of the serial bus
Selects the serial bus.

Return values:

<Count> Total number of decoded frames.

Usage: Query only
Asynchronous command

SBUS<sb>:USBone:FRAMe<fr>:ADDRess?

Returns the device address value of the indicated frame. That is, the address value that is shown in the decoded cells and in the decode results table.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<AddressValue> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:USBone:FRAMe<fr>:FLDCount?

Returns the number of fields in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:USBone:FRAMe<fr>:BITRate?

Returns the number of fields in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<BitRate> Increment: 1
*RST: 0
Default unit: bps

Usage: Query only
Asynchronous command

SBUS<sb>:USBone:FRAMe<fr>:DATA?

Returns a comma-separated list of values, where the first value is the number of data bytes in the frame, and the remaining values are this number of data bytes.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

<Values>

Example: `SBUS:USB:FRAMe2:DATA?`
`13,7,7,8,9,16,17,18,19,20,21,21,22,255`
The first value, here 13, is the number of data bytes to follow.

Usage: Query only
Asynchronous command

SBUS<sb>:USBone:FRAMe<fr>:STARt?

Returns the start time of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:USBone:FRAMe<fr>:STATus?

Returns the overall state of the frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameState> OK | PID | CRC | LENGth | BTST | INComplete

OK
The frame is valid.

PID
A packet identifier error signifies that the integrity check has failed, see Packet structure > "PID" in Section 14.23.1, "USB protocol basics", on page 945. The 8-bit PID is invalid, if its 4 least significant bits (LSB) are not the complement of its 4 most significant bits (MSB).

CRC
Cyclic redundancy check failed.

LENGth
Wrong length of frame.

BTST
Bit stuffing error occurred.

INComplete
The frame is not completely contained in the acquisition. The acquired part of the frame is usually valid, but cannot always be trusted.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:USBone:FRAMe<fr>:STOP?

Returns the end time of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:USBone:FRAMe<fr>:FLD<fl>:FVALue?

Returns the formatted value of the specified field for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<FormattedValue>

Usage: Query only
Asynchronous command

SBUS<sb>:USBone:FRAMe<fr>:FLD<fl>:LABel?

Returns the name (label) of the specified field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Label>

Usage: Query only
Asynchronous command

SBUS<sb>:USBone:FRAMe<fr>:FLD<fl>:STATe?

Returns the overall state of the specified field for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<State> OK | PID | CRC | LENGth | BTST | INComplete

OK
The field has no error, it is valid.

PID
A packet identifier error signifies that the integrity check has failed, see Packet structure > "PID" in Section 14.23.1, "USB protocol basics", on page 945. The 8-bit PID is invalid, if its 4 least significant bits (LSB) are not the complement of its 4 most significant bits (MSB).

CRC
Cyclic redundancy check failed.

LENGth
Wrong length of the field.

BTST
Bit stuffing error occurred.

INComplete
The field is not completely contained in the acquisition. The acquired part of the field is usually valid, but cannot always be trusted.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:USBone:FRAMe<fr>:FLD<fl>:VALue?

Returns the data value of the specified field.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Value> Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:USBone:FRAMe<fr>:CRC?

Returns the cyclic redundancy check (CRC) checksum of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<CRCValue> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:USBone:FRAMe<fr>:FADDress?

Returns the formatted address for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedAddrVal>

Usage: Query only
Asynchronous command

SBUS<sb>:USBone:FRAMe<fr>:FCRC?

Returns the formatted CRC value for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedCRCVal>

Usage: Query only
Asynchronous command

SBUS<sb>:USBone:FRAMe<fr>:ENDPoint?

Returns the endpoint for the selected serial bus and frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Endpoint> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:USBone:FRAMe<fr>:FRNumber?

Returns the frame number for the selected serial bus and frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameNumber> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:USBone:FRAMe<fr>:PID?

Returns the packet identifier for the selected serial bus and frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Command> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:USBone:FRAMe<fr>:PIDName?

Returns the name of the packet identifier for the selected serial bus and frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedCmd>

Usage: Query only
Asynchronous command

SBUS<sb>:USBone:FRAMe<fr>:TYPE?

Returns the frame type of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameType> UNKNown | DATA | TOKen | SOF | HSHK | PERR
Unknown, data, token, start of frame, handshake, PRE/ERR frame (with PID=0x3C meaning either preamble or error)
*RST: UNKNown

Usage: Query only
Asynchronous command

18.18.25 USB 2.0 (option R&S MXO5-K570)

Before MXO 5 can accept the specific bus commands, make sure that:

- The decoding of the specified bus is enabled with `SBUS<sb>[:STATe]`.
- The bus is set to the correct type with `SBUS<sb>:TYPE`.

- Configuration....2233
- Filter....2235
- Format....2241
- Software trigger....2250
- Decode results....2256

18.18.25.1 Configuration

SBUS<sb>:USBHspeed:SOURce....2234
SBUS<sb>:USBHspeed:THReshold:UPPer....2234
SBUS<sb>:USBHspeed:THReshold:LOWer....2234
SBUS<sb>:USBHspeed:THReshold:HYSTeresis....2234
SBUS<sb>:USBHspeed:POSition....2235
SBUS<sb>:USBHspeed:SCALe....2235

SBUS<sb>:USBHspeed:SOURce <Source>

Selects the differential signal source to which the data line is connected.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Source> C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15 | M1 | M2 | M3 | M4 | M5 | M6 | M7 | M8 | R1 | R2 | R3 | R4 | R5 | R6 | R7 | R8 | O<n>C1 | O<n>C2 | ... | O<n>C8 (<n> = 2 to 11)

Usage: Asynchronous command

Manual operation: See "Differential source" on page 969

SBUS<sb>:USBHspeed:THReshold:UPPer <Upper Thres>

Sets the upper threshold value for the differential signal on the data line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Upper Thres>

Usage: Asynchronous command

Manual operation: See "Upper threshold" on page 970

SBUS<sb>:USBHspeed:THReshold:LOWer <Lower Thres>

Sets the lower threshold value for the differential signal on the data line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Lower Thres>

Usage: Asynchronous command

Manual operation: See "Lower threshold" on page 971

SBUS<sb>:USBHspeed:THReshold:HYSTeresis <Hysteresis>

Sets a hysteresis value for the differential signal on the data line.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Hysteresis>

Usage: Asynchronous command

Manual operation: See "Hysteresis" on page 971

SBUS<sb>:USBHspeed:POSition <Position>

Sets the vertical position of the USB 2.0 signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Position> Range: 1 to 100

Usage: Asynchronous command

SBUS<sb>:USBHspeed:SCALe <Scale>

Sets the vertical scale of the USB 2.0 signal.

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Scale> Range: 1 to 5

Usage: Asynchronous command

18.18.25.2 Filter

There are two commands for each parameter, that you can use for defining the USB 2.0 settings.

For example, to set the *Frame type =WRITe > Field =Address >Data* value you can use one of the following commands:

- `SBUS:USBHspeed:FILTer:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `SBUS:USBHspeed:FILTer:DMIN "WRITe", "Address", 01100`
  Defines the parameter by using the frame and field name.

SBUS<sb>:USBHspeed:FILTer:CHKall....2236
SBUS<sb>:USBHspeed:FILTer:CLR....2236
SBUS<sb>:USBHspeed:FILTer:INVert....2236
SBUS<sb>:USBHspeed:FILTer:RST....2236
SBUS<sb>:USBHspeed:FILTer:FRENable....2237
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:ENABle....2237
SBUS<sb>:USBHspeed:FILTer:DMAX....2237
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:DMAX....2237
SBUS<sb>:USBHspeed:FILTer:DMIN....2237
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:DMIN....2237
SBUS<sb>:USBHspeed:FILTer:DOPerator....2238
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:DOPerator....2238
SBUS<sb>:USBHspeed:FILTer:ERENable....2238

SBUS<sb>:USBHspeed:FILTer:ERRor<n>:ENABle 2238
SBUS<sb>:USBHspeed:FILTer:IMAX 2239
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:IMAX 2239
SBUS<sb>:USBHspeed:FILTer:IMIN 2239
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:IMIN 2239
SBUS<sb>:USBHspeed:FILTer:IOPerator 2239
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:IOPerator 2239
SBUS<sb>:USBHspeed:FILTer:BIT 2240
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:BIT 2240
SBUS<sb>:USBHspeed:FILTer:FIENable 2240
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:ENABle 2240

SBUS<sb>:USBHspeed:FILTer:CHKall

Enables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 972

SBUS<sb>:USBHspeed:FILTer:CLR

Disables the filter for all available frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 972

SBUS<sb>:USBHspeed:FILTer:INVert

Inverts the current state of the frame and error types: all frames and error types that were enabled are disabled and vice versa.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 972

SBUS<sb>:USBHspeed:FILTer:RST

Presets the state of the selected frames and error types.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 972

SBUS<sb>:USBHspeed:FILTer:FRENable <Frame>,<Enabler>
SBUS<sb>:USBHspeed:FILTer:FRENable? <Enabler>
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:ENABle <Enable>

Enables or disables the specific frame to be filtered on.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 973

SBUS<sb>:USBHspeed:FILTer:DMAX <Frame>,<Field>,<Data>
SBUS<sb>:USBHspeed:FILTer:DMAX? <Data>
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max> List of comma-separated values

Usage: Asynchronous command

Manual operation: See "Edit" on page 973

SBUS<sb>:USBHspeed:FILTer:DMIN <Frame>,<Field>,<Data>
SBUS<sb>:USBHspeed:FILTer:DMIN? <Data>
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min> List of comma-separated values

Usage: Asynchronous command

Manual operation: See "Edit" on page 973

SBUS<sb>:USBHspeed:FILTer:DOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:USBHspeed:FILTer:DOPerator? <Operator>
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 973

SBUS<sb>:USBHspeed:FILTer:ERENable <ErrorName>,<Enabler>
SBUS<sb>:USBHspeed:FILTer:ERENable? <Enabler>
SBUS<sb>:USBHspeed:FILTer:ERRor<n>:ENABle <Enable>

Defines the error type to be filtered on.

Suffix:
<sb> 1 to 4, index of the serial bus

<n> Index of the error

Parameters:
<Enable> OFF | ON

*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 974

SBUS<sb>:USBHspeed:FILTer:IMAX <Frame>,<Field>,<Data>
SBUS<sb>:USBHspeed:FILTer:IMAX? <Data>
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range if the operator is set to `INRange`.

You can set the operator with `SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max>
Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 973

SBUS<sb>:USBHspeed:FILTer:IMIN <Frame>,<Field>,<Data>
SBUS<sb>:USBHspeed:FILTer:IMIN? <Data>
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min>
Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 973

SBUS<sb>:USBHspeed:FILTer:IOPerator <Frame>,<Field>,<Operator>
SBUS<sb>:USBHspeed:FILTer:IOPerator? <Operator>
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 973

SBUS<sb>:USBHspeed:FILTer:BIT <Frame>,<Field>,<Bit>
SBUS<sb>:USBHspeed:FILTer:BIT? <Bit>
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 973

SBUS<sb>:USBHspeed:FILTer:FIENable <Frame>,<Field>,<Enabler>
SBUS<sb>:USBHspeed:FILTer:FIENable? <Enabler>
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 973

18.18.25.3 Format

This section describes the commands to specify and query frame formats for the "USB2.0" protocol.

SBUS<sb>:USBHspeed:FORMat:SELect....2241
SBUS<sb>:USBHspeed:FORMat:ADDFrame....2242
SBUS<sb>:USBHspeed:FORMat:LOAD....2242
SBUS<sb>:USBHspeed:FORMat:SAVE....2242
SBUS<sb>:USBHspeed:FORMat:CLR....2242
SBUS<sb>:USBHspeed:FORMat:FCOunt?....2243
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ADDField....2243
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLDCount?....2243
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:NAME....2243
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:COLor....2244
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:TYPE....2244
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ID1Field....2244
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ID2Field....2244
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ID3Field....2244
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ID1Value....2245
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ID2Value....2245
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ID3Value....2245
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:NAME....2245
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:COLor....2245
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:FSTBit....2246
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:BITCount....2246
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:REPetition....2246
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:BITorder....2247
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:FORMat....2247
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:ADDValue....2248
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue....2248
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel....2249
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:UNIT....2249
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:PARA....2249
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:PARB....2249

SBUS<sb>:USBHspeed:FORMat:SELect <Select>

Enables the format configuration

Suffix:
<sb> 1 to 4, index of the serial bus

Parameters:
<Select> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show format" on page 975

SBUS<sb>:USBHspeed:FORMat:ADDFrame

Appendes a new frame format to the frame list.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Add frame" on page 975

SBUS<sb>:USBHspeed:FORMat:LOAD <FileName>

Loads a the specified XML file with a list of frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Open" on page 976

SBUS<sb>:USBHspeed:FORMat:SAVE <FileName>

Saves the current list of frame formats to an XML file with the specified name.

Suffix:
<sb> 1 to 4, index of the serial bus

Setting parameters:
<FileName>

Usage: Setting only
Asynchronous command

Manual operation: See "Save as" on page 976

SBUS<sb>:USBHspeed:FORMat:CLR

Erases from the volatile memory all field descriptions and frame formats that you have created.

Suffix:
<sb> 1 to 4, index of the serial bus

Usage: Setting only
Asynchronous command

Manual operation: See "Edit list" on page 976

SBUS<sb>:USBHspeed:FORMat:FCOunt?

Returns the number of available frame formats.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Count>

Usage: Query only
Asynchronous command

Manual operation: See "Edit list" on page 976

SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ADDField

Appends a new field description to the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Usage: Setting only
Asynchronous command

Manual operation: See "Add field" on page 977

SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLDCount?

Returns the number of field descriptions available for the seleced frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:NAME <Name>

Specifies the name for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Frame name" on page 976

SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:COLor <Color>

Specifies the color for the selected frame format.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4278255615

Usage: Asynchronous command

Manual operation: See "Frame color" on page 976

SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:TYPE <Type>

Sets an original frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<Type>

Usage: Asynchronous command

Manual operation: See "Frame type" on page 976

SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ID1Field <ID1Field>
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ID2Field <ID2Field>
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ID3Field <ID3Field>

Sets the identifying field type for the configured frame type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Field>

Usage: Asynchronous command

Manual operation: See "ID<n> field" on page 976

SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ID1Value <ID1Value>
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ID2Value <ID2Value>
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ID3Value <ID3Value>

Sets the value of the corresponding field type.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Parameters:
<ID3Value>

Usage: Asynchronous command

Manual operation: See "ID<n> value" on page 976

SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:NAME <Name>

Specifies the name for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Name>

Usage: Asynchronous command

Manual operation: See "Field name" on page 977

SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:COLor <Color>

Specifies the color for the selected field of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Color> Use 32-bit RGB encoding in decimal format.

Range: 0 to 4294967295
Increment: 1
*RST: 4294967040

Usage: Asynchronous command

Manual operation: See "Field color" on page 977

SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:FSTBit <FirstBit>

In order of transmission, sets the first bit of the specified field in the payload.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<FirstBit> Range: 0 to 63
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "First bit" on page 978

SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:BITCount <BitCount>

Specifies the bit count, hence length, of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitCount> Range: 1 to 64
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Bit count" on page 978

SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:REPetition <Repetition>

Sets the repetition count of the field. Setting the value to 0 indicates an unlimited repetition that continues until the end of the payload is reached.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<Repetition> Range: 0 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Repetition" on page 978

SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:BITorder <BitOrder>

Specifies, in which order the algorithm evaluates the bits of the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitOrder> LSBF | MSBF

LSBF
Least significant bit first

MSBF
Most significant bit first

*RST: MSBF

Usage: Asynchronous command

Manual operation: See "Bit order" on page 978

SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:FORMat <NumericFormat>

Specifies the numerical format for the condition value of the selected field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:
<NumericFormat> HEX | OCT | BIN | ASCII | ASCii | SIGN | USIG | DEC | LIST | FLIN

HEX
Hexadecimal format

OCT
Octal format

BIN
Binary format

ASCII = ASCii
ASCII format

SIGN
Signed, decimal format

DEC=USIG
Unsigned, decimal format

LIST
Value list

FLIN
Linear function

*RST: HEX

Usage: Asynchronous command

Manual operation: See "Numeric format" on page 978

SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:ADDValue

Creates a new hexagonal value for customization.

Available if `SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Related commands:

`SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue`

`SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel`

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Usage: Setting only
Asynchronous command

Manual operation: See "Add value" on page 979

SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue <Value>

Sets the hexagonal value to convert it into a labeled state.

Available if `SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:

<Value> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Asynchronous command

Manual operation: See "Value" on page 979

SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel <Label>

Sets the label to convert the corresponding hexagonal value to a labeled state.

Available if `SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `LIST`.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

<p> Index of the value

Parameters:

<Label>

Usage: Asynchronous command

Manual operation: See "Label" on page 979

SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:UNIT <Unit>

Sets the unit for the linear function.

Available if `SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Parameters:

<Unit>

Usage: Asynchronous command

Manual operation: See "Unit" on page 979

SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:PARA <ParameterA>
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:PARB <ParameterB>

Sets the parameters of the linear function.

- Parameter A: Slope (rate of change)
- Parameter B: Offset

Available if `SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:FORMat` = `FLIN`.

Suffix:

<sb>	1 to 4, index of the serial bus
<fr>	Index of the frame
<fl>	Index of the field

Parameters:

<ParameterB>	Range:	-1E+20 to 1E+20
	Increment:	1E-12
	*RST:	0

Usage: Asynchronous command

Manual operation: See "Parameter A,B" on page 980

18.18.25.4 Software trigger

There are two commands for each parameter, that you can use for defining the USB 2.0 settings.

For example, to set the *Frame type =WRITe > Field =Address >Data* value you can use one of the following commands:

- `TRIGger:SBSW:USBHspeed:FRAMe1:FLD1:DMIN 01100`
  Defines the parameter by using the index <m> for the frame number and <n> for the field number.
- `STRIGger:SBSW:USBHspeed:DMIN "WRITe", "Address", 01100`
  Defines the parameter by using the frame and field name.

TRIGger:SBSW:USBHspeed:CHKall....2251
TRIGger:SBSW:USBHspeed:CLR....2251
TRIGger:SBSW:USBHspeed:INVert....2251
TRIGger:SBSW:USBHspeed:RST....2251
TRIGger:SBSW:USBHspeed:FRENable....2251
TRIGger:SBSW:USBHspeed:FRAMe<fr>:ENABle....2251
TRIGger:SBSW:USBHspeed:BIT....2252
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:BIT....2252
TRIGger:SBSW:USBHspeed:DMAX....2252
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:DMAX....2252
TRIGger:SBSW:USBHspeed:DMIN....2253
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:DMIN....2253
TRIGger:SBSW:USBHspeed:DOPerator....2253
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:DOPerator....2253
TRIGger:SBSW:USBHspeed:FIENable....2253
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:ENABle....2253
TRIGger:SBSW:USBHspeed:IMAX....2254
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:IMAX....2254

TRIGger:SBSW:USBHspeed:IMIN....2254
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:IMIN....2254
TRIGger:SBSW:USBHspeed:IOPerator....2254
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:IOPerator....2254
TRIGger:SBSW:USBHspeed:ERENable....2255
TRIGger:SBSW:USBHspeed:ERRor<m>:ENABle....2255
SBUS<sb>:USBHspeed:SWTindex?....2255
SBUS<sb>:USBHspeed:SWTTime?....2255

TRIGger:SBSW:USBHspeed:CHKall

Enables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 981

TRIGger:SBSW:USBHspeed:CLR

Disables the software trigger for all available frames and error types.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 981

TRIGger:SBSW:USBHspeed:INVert

Inverts the current state of the frame and error types for the software trigger: all frames and error types that were enabled are disabled and vice versa.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 981

TRIGger:SBSW:USBHspeed:RST

Presets the state of the selected frames and error types for the software trigger.

Usage: Setting only
Asynchronous command

Manual operation: See "Check all, Clear, Invert, Preset" on page 981

TRIGger:SBSW:USBHspeed:FRENable <Frame>,<Enabler>
TRIGger:SBSW:USBHspeed:FRENable? <Enabler>
TRIGger:SBSW:USBHspeed:FRAMe<fr>:ENABle <Enable>

Enables or disables the checking condition for the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Frame type" on page 982

TRIGger:SBSW:USBHspeed:BIT <Frame>,<Field>,<Bit>
TRIGger:SBSW:USBHspeed:BIT? <Bit>
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:BIT <BitState>

Sets the bit state of a field that only consists of one bit for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<BitState> ONE | ZERO
*RST: ZERO

Usage: Asynchronous command

Manual operation: See "Edit" on page 982

TRIGger:SBSW:USBHspeed:DMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:USBHspeed:DMAX? <Data>
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:DMAX <Data_Max>

Sets the end value of a data pattern range for the software trigger, if the operator is set to `INRange` or `OORANGe`.

You can set the operator with `TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:DOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Max> List of comma-separated values

Usage: Asynchronous command

Manual operation: See "Edit" on page 982

TRIGger:SBSW:USBHspeed:DMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:USBHspeed:DMIN? <Data>
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:DMIN <Data_Min>

Specifies the data pattern, or sets the start value of a data pattern range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Min> List of comma-separated values

Usage: Asynchronous command

Manual operation: See "Edit" on page 982

TRIGger:SBSW:USBHspeed:DOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:USBHspeed:DOPerator? <Operator>
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:DOPerator <Data_Operator>

Sets the operator for the data pattern of the software trigger in the selected field of the selected frame.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Data_Operator> EQUal | NEQual | LTHan | LETHan | GTHan | GETHan | INRange | OORange

*RST: EQUal

Usage: Asynchronous command

Manual operation: See "Edit" on page 982

TRIGger:SBSW:USBHspeed:FIENable <Frame>,<Field>,<Enabler>
TRIGger:SBSW:USBHspeed:FIENable? <Enabler>
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:ENABle <CondEnabler>

Enables or disables the checking condition for the selected field of the selected frame of the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<CondEnabler> OFF | ON

*RST: OFF

Usage: Asynchronous command

Manual operation: See "Edit" on page 982

TRIGger:SBSW:USBHspeed:IMAX <Frame>,<Field>,<Data>
TRIGger:SBSW:USBHspeed:IMAX? <Data>
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:IMAX <Index_Max>

Sets the end value of an index range for the software trigger if the operator is set to `INRange`.

You can set the operator with `TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:IOPerator`.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Max>
Range: 1 to 65535
Increment: 1
*RST: 65535

Usage: Asynchronous command

Manual operation: See "Edit" on page 982

TRIGger:SBSW:USBHspeed:IMIN <Frame>,<Field>,<Data>
TRIGger:SBSW:USBHspeed:IMIN? <Data>
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:IMIN <Index_Min>

Specifies the index, or sets the start value of an index range for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Min>
Range: 1 to 65535
Increment: 1
*RST: 1

Usage: Asynchronous command

Manual operation: See "Edit" on page 982

TRIGger:SBSW:USBHspeed:IOPerator <Frame>,<Field>,<Operator>
TRIGger:SBSW:USBHspeed:IOPerator? <Operator>
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:IOPerator <Index_Operator>

Sets the operator for the index in the selected field of the selected frame for the software trigger.

Suffix:
<fr> Index of the frame

<fl> Index of the field

Parameters:
<Index_Operator> EQUal | INRange | RANGe
*RST: INRange

Usage: Asynchronous command

Manual operation: See "Edit" on page 982

TRIGger:SBSW:USBHspeed:ERENable <ErrorName>,<Enabler>
TRIGger:SBSW:USBHspeed:ERENable? <Enabler>
TRIGger:SBSW:USBHspeed:ERRor<m>:ENABle <Enable>

Defines the error type for the software trigger.

Suffix:
<m> Index of the error

Parameters:
<Enable> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Error type" on page 983

SBUS<sb>:USBHspeed:SWTindex?

Queries the software trigger index.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:
<Index> Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:SWTTime?

Queries the software trigger time in seconds.

If no software trigger event has occurred, the command returns `Invalid`.

Suffix:
<sb> 1 to 4, index of the serial bus

Return values:

<Time> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

18.18.25.5 Decode results

SBUS<sb>:USBHspeed:FCOunt? 2256
SBUS<sb>:USBHspeed:FRAMe<fr>:ADDRess? 2257
SBUS<sb>:USBHspeed:FRAMe<fr>:FLDCount? 2257
SBUS<sb>:USBHspeed:FRAMe<fr>:BITRate? 2257
SBUS<sb>:USBHspeed:FRAMe<fr>:DATA? 2257
SBUS<sb>:USBHspeed:FRAMe<fr>:STARt? 2258
SBUS<sb>:USBHspeed:FRAMe<fr>:STATus? 2258
SBUS<sb>:USBHspeed:FRAMe<fr>:STOP? 2259
SBUS<sb>:USBHspeed:FRAMe<fr>:FLD<fl>:FVALue? 2259
SBUS<sb>:USBHspeed:FRAMe<fr>:FLD<fl>:LABel? 2260
SBUS<sb>:USBHspeed:FRAMe<fr>:FLD<fl>:STATe? 2260
SBUS<sb>:USBHspeed:FRAMe<fr>:FLD<fl>:VALue? 2261
SBUS<sb>:USBHspeed:FRAMe<fr>:CRC? 2261
SBUS<sb>:USBHspeed:FRAMe<fr>:FADDress? 2261
SBUS<sb>:USBHspeed:FRAMe<fr>:FCRC? 2261
SBUS<sb>:USBHspeed:FRAMe<fr>:ENDPoint? 2262
SBUS<sb>:USBHspeed:FRAMe<fr>:FRNumber? 2262
SBUS<sb>:USBHspeed:FRAMe<fr>:PID? 2262
SBUS<sb>:USBHspeed:FRAMe<fr>:PIDName? 2263
SBUS<sb>:USBHspeed:FRAMe<fr>:TYPE? 2263
SBUS<sb>:USBHspeed:FRAMe<fr>:SPET? 2263
SBUS<sb>:USBHspeed:FRAMe<fr>:SPEU? 2264
SBUS<sb>:USBHspeed:FRAMe<fr>:SPPort? 2264
SBUS<sb>:USBHspeed:FRAMe<fr>:SPS? 2265
SBUS<sb>:USBHspeed:FRAMe<fr>:SPSC? 2265

SBUS<sb>:USBHspeed:FCOunt?

Returns the number of decoded frames.

Suffix:

<sb> 1 to 4, index of the serial bus
Selects the serial bus.

Return values:

<Count> Total number of decoded frames.

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:FRAMe<fr>:ADDRess?

Returns the device address value of the indicated frame. That is, the address value that is shown in the decoded cells and in the decode results table.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<AddressValue> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:FRAMe<fr>:FLDCount?

Returns the number of fields in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:FRAMe<fr>:BITRate?

Returns the number of fields in the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Frame calculated bit rate> Increment: 1
*RST: 0
Default unit: bps

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:FRAMe<fr>:DATA?

Returns a comma-separated list of values, where the first value is the number of data bytes in the frame, and the remaining values are this number of data bytes.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Count>

<Values>

Example: `SBUS:USBH:FRAMe3:DATA?`
`5,24,156,75,62,230`
The first value, here 5, is the number of data bytes to follow.

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:FRAMe<fr>:STARt?

Returns the start time of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameStart> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:FRAMe<fr>:STATus?

Returns the overall state of the frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameState> OK | PID | CRC | LENGth | BTST | INComplete

OK
The frame is valid.

PID
A packet identifier error signifies that the integrity check has failed, see Packet structure > "PID" in Section 14.23.1, "USB protocol basics", on page 945. The 8-bit PID is invalid, if its 4 least significant bits (LSB) are not the complement of its 4 most significant bits (MSB).

CRC
Cyclic redundancy check failed.

LENGth
Wrong length of frame.

BTST
Bit stuffing error occurred.

INComplete
The frame is not completely contained in the acquisition. The acquired part of the frame is usually valid, but cannot always be trusted.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:FRAMe<fr>:STOP?

Returns the end time of the specified frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameStop> Range: -1E+26 to 1E+26
Increment: 1E-10
*RST: 0
Default unit: s

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:FRAMe<fr>:FLD<fl>:FVALue?

Returns the formatted value of the specified field for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<FormattedValue>

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:FRAMe<fr>:FLD<fl>:LABel?

Returns the name (label) of the specified field in the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Label>

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:FRAMe<fr>:FLD<fl>:STATe?

Returns the overall state of the specified field for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<State> OK | PID | CRC | LENGth | BTST | INComplete

OK
The field has no error, it is valid.

PID
A packet identifier error signifies that the integrity check has failed, see Packet structure > "PID" in Section 14.23.1, "USB protocol basics", on page 945. The 8-bit PID is invalid, if its 4 least significant bits (LSB) are not the complement of its 4 most significant bits (MSB).

CRC
Cyclic redundancy check failed.

LENGth
Wrong length of the field.

BTST
Bit stuffing error occurred.

INComplete
The field is not completely contained in the acquisition. The acquired part of the field is usually valid, but cannot always be trusted.

*RST: OK

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:FRAMe<fr>:FLD<fl>:VALue?

Returns the data value of the specified field.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

<fl> Index of the field

Return values:
<Value> Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:FRAMe<fr>:CRC?

Returns the cyclic redundancy check (CRC) checksum of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<CRCValue> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:FRAMe<fr>:FADDress?

Returns the formatted address for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedAddrVal>

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:FRAMe<fr>:FCRC?

Returns the formatted CRC value for the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedCRCVal>

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:FRAMe<fr>:ENDPoint?

Returns the endpoint for the selected serial bus and frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Endpoint> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:FRAMe<fr>:FRNumber?

Returns the frame number for the selected serial bus and frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameNumber> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:FRAMe<fr>:PID?

Returns the packet identifier for the selected serial bus and frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Command> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:FRAMe<fr>:PIDName?

Returns the name of the packet identifier for the selected serial bus and frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FormattedCmd>

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:FRAMe<fr>:TYPE?

Returns the frame type of the selected frame.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<FrameType> UNKNown | DATA | TOKen | SOF | HSHK | PERR | SPLit | PING | RSVD

Unknown, data, token, start of frame, handshake, PRE/ERR frame (with PID=0x3C meaning either preamble or error), split frame, ping response, reserved

*RST: UNKNown

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:FRAMe<fr>:SPET?

Returns the content of the "SPLIT packet transaction Endpoint Type" field of the selected frame. This 2-bit field tells the USB hub, which split-transaction-state machine to use:

- 00 Control
- 01 Isochronous
- 10 Bulk
- 11 Interrupt

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<Split ET> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:FRAMe<fr>:SPEU?

Returns the content of the "SPLIT packet transaction E/U" field (end or unused) of the selected frame. This single-bit field, combined with the S field (see `SBUS<sb>:USBHspeed:FRAMe<fr>:SPS?`), describes the type of "payload continuation encoding" used for start-split packets. For complete-split packets, it is unused.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<Split E/U> Range: 0 to 65535
Increment: 1
*RST: 0

Example:

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:FRAMe<fr>:SPPort?

Returns the content of the "SPLIT packet transaction Port" field of the selected frame. This field is a 7-bit word that contains the port number of the target hub, for which this split transaction is destined.

Suffix:

<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:

<Split Port> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:FRAMe<fr>:SPS?

Returns the content of the "SPLIT packet transaction S" field of the selected frame. This single-bit field indicates the speed for the interrupt or control transaction announced by this SPLIT packet: 0 = Full speed, 1 = Low speed.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Split S> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

SBUS<sb>:USBHspeed:FRAMe<fr>:SPSC?

Returns the content of the "SPLIT packet transaction Start / Complete" field of the selected frame. This single-bit field indicates the SPLIT token: 0 = start-split transaction, 1 = complete-split transaction.

Suffix:
<sb> 1 to 4, index of the serial bus

<fr> Index of the frame

Return values:
<Split SC> Range: 0 to 65535
Increment: 1
*RST: 0

Usage: Query only
Asynchronous command

18.19 Logic analysis on digital channels

This section describes the remote commands of MSO option R&S MXO5-B1.

Some of the commands in the following section are asynchronous. An overlapping or asynchronous command does not automatically finish executing before the next command starts executing. If overlapping commands must be executed in a defined order, e.g. to avoid wrong measurement results, they must be serviced sequentially.

To prevent an overlapping execution of commands, one of the commands `*OPC`, `*OPC?` or `*WAI` can be used after the command or a command set.

For more information, see:

- www.rohde-schwarz.com/rc-via-scpi, section "Command sequence and synchronization"

18.19.1 Digital channels

Except for `DIGital<m>:PROBe<ch>[:ENABle]`, all other `DIGital:` commands affect only the settings of the first MSO bus (Logic1). The settings of all other logic groups (Logic 2, 3,4) remain unchanged.

DIGital<m>:PROBe<ch>[:ENABle]?....2266
DIGital<m>:HYSTeresis....2266
DIGital<m>:LABel....2267
DIGital<m>:SIZE....2267
DIGital<m>:SKEW....2267
DIGital<m>:STATe....2268
DIGital<m>:TECHnology....2268
DIGital<m>:THCoupling....2268
DIGital<m>:THReshold....2269

DIGital<m>:PROBe<ch>[:ENABle]?

Enables one digital probe.

Suffix:

<m> 0 to 15, index of the logic channel
Digital channels 0 to 7 belong to probe 1, and channels 8 to 15 belong to probe 2.

<ch> 1..2
Index of the logic probe (pod)

Return values:

<ProbeConnected> OFF | ON

Usage: Query only
Asynchronous command

DIGital<m>:HYSTeresis <Hysteresis>

Sets the hysteresis for the indicated digital channel.

The setting affects only the settings of the first MSO bus (Logic1).

You can set the hysteresis for all buses with `PBUS<pb>:HYSTeresis<n>`.

Suffix:

<m> 0 to 15, index of the logic channel

Parameters:

<Hysteresis> MAXimum | ROBust | NORMal

MAXimum
Maximum value that is possible and useful for the signal and its settings, to be used for noisy signals.

ROBust
Different hysteresis values for falling and rising edges to avoid an undefined state of the trigger system, to be used for very noisy signals.

NORMal
Small value suitable for the signal and its settings, to be used for clean signals.

Usage: Asynchronous command

DIGital<m>:LABel <Label>

Sets a name for the indicated digital channel. The name is displayed in the diagram.

The setting affects only the settings of the first MSO bus (Logic1).

You can set the label for all buses with `PBUS<pb>:BIT<n>:LABel`

Suffix:
<m> 0 to 15, index of the logic channel

Parameters:
<Label> String containing the channel name

Usage: Asynchronous command

DIGital<m>:SIZE <Size>

Sets the vertical size for the channel group to which the indicated digital channel belongs.

Suffix:
<m> 0..15
Number of the digital channel.
Channel groups: 0..3; 4..7; 8..11; 12..15

Parameters:
<Size> Number of vertical divisions per logic channel
Range: 0.2 to 10

Usage: Asynchronous command

DIGital<m>:SKEW <Skew>

Sets an individual delay for each digital channel to time-align it with other digital channels. The skew value compensates delays that are known from the circuit specifics or caused by the different length of cables.

The setting affects only the settings of the first MSO bus (Logic1).

You can set the skew for all buses with `PBUS<pb>:BIT<n>:SKEW`.

Suffix:
<m> 0 to 15, index of the logic channel

Parameters:
<Skew>

Usage: Asynchronous command

DIGital<m>:STATe <State>

Enables or disables the indicated digital channel, displays it, and enables the Logic 1 if the bus was disabled.

If another active bus already uses the selected digital channel, the instrument disables the other bus to avoid conflicts.

For Logic 1, the `DIGital<m>:STATe` command has the same effect as `PBUS<pb>:BIT<n>[:STATe]`. To enable digital channels for buses 2, 3 and 4, use the `PBUS<pb>:BIT<n>[:STATe]` command.

Suffix:
<m> 0 to 15, index of the logic channel

Parameters:
<State> OFF | ON

Usage: Asynchronous command

Manual operation: See "Active logic channel" on page 988

DIGital<m>:TECHnology <Technology>

Selects the threshold voltage for various types of integrated circuits and applies it to all digital channels.

The setting affects only the settings of the first MSO bus (Logic1).

You can set the technology value for all buses with `PBUS<pb>:TECHnology`.

Suffix:
<m> 0..15
The suffix is irrelevant.

Parameters:
<Technology> V15 | V25 | V165 | V125 | V09 | VM13 | V38 | V20 | V0 | MANual
See `PBUS<pb>:TECHnology`.

Usage: Asynchronous command

DIGital<m>:THCoupling <State>

Sets the threshold and the hysteresis for all digital channels of Logic1 to the same value.

Suffix:
<m> Irrelevant, omit the suffix.

Parameters:
<State> OFF | ON

Usage: Asynchronous command

DIGital<m>:THReshold <Value>

Sets the logical threshold for the channel group to which the indicated digital channel belongs.

The setting affects only the settings of the first MSO bus (Logic1).

You can set the threshold for all buses with `PBUS<pb>:TECHnology` or `PBUS<pb>:THReshold<n>`

See also: `DIGital<m>:THCoupling` on page 2268

Suffix:
<m> 0..15
Number of the digital channel.
Channel groups: 0..3; 4..7; 8..11; 12..15

Parameters:
<Value>

Usage: Asynchronous command

18.19.2 Logic configuration

The following commands configure the four logic groups (parallel buses).

PBUS<pb>:BIT<n>:LABel....2270
PBUS<pb>:BIT<n>:SKEW....2270
PBUS<pb>:BIT<n>[:STATe]....2270
PBUS<pb>:CLEar....2271
PBUS<pb>:CLOCk....2271
PBUS<pb>:CLON....2271
PBUS<pb>:CLSLope....2272
PBUS<pb>:DECTable:SHOW....2272
PBUS<pb>:DECTable:COUNt?....2272
PBUS<pb>:DECTable:DATA?....2273
PBUS<pb>:DIGSignals:POSition....2273
PBUS<pb>:DIGSignals:SCALe....2273
PBUS<pb>:DISPlay:SHBU....2273
PBUS<pb>:DISPlay:SHDI....2274
PBUS<pb>:HYSTeresis<n>....2274
PBUS<pb>:POSition....2275
PBUS<pb>:SCALe....2275
PBUS<pb>:SKEW....2275
PBUS<pb>:STATe....2275

PBUS<pb>:TECHnology....2276
PBUS<pb>:THCoupling....2276
PBUS<pb>:THReshold<n>....2277

PBUS<pb>:BIT<n>:LABel <Label>

Sets a name for the indicated digital channel. The name is displayed in the diagram.

Suffix:
<pb> 1 to 4, index of the logic group

<n> 0..15
Selects the bit of the bus word. Each bit corresponds to a digital channel.

Parameters:
<Label> String containing the channel name

Usage: Asynchronous command

PBUS<pb>:BIT<n>:SKEW <Skew>

Sets an individual delay for each digital channel to time-align it with other digital channels.

The skew value compensates delays that are known from the circuit specifics or caused by the different length of cables. The skew between the probe boxes of the digital channels and the probe connectors of the analog channels is automatically aligned by the instrument.

Suffix:
<pb> 1 to 4, index of the logic group

<n> 0..15
Selects the bit of the bus word. Each bit corresponds to a digital channel.

Parameters:
<Skew> Range: -2E-07 to 2E-07
Increment: 2E-10
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "D0-D15" on page 992

PBUS<pb>:BIT<n>[:STATe] <Assigned>

Enables the selected logic group. The corresponding signal icon appears on the signal bar.

If another active bus already uses the selected digital channel, the instrument disables the other bus to avoid conflicts.

Suffix:
<pb> 1 to 4, index of the logic group

<n> 0..15
Selects the bit of the bus word. Each bit corresponds to a digital channel.

Parameters:
<Assigned> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Active logic channel" on page 988

PBUS<pb>:CLEar

Removes all assigned digital channels from the bus.

Suffix:
<pb> 1 to 4, index of the logic group

Usage: Setting only
Asynchronous command

PBUS<pb>:CLOCk <ClockSource>

Selects the digital channel used as clock.

Suffix:
<pb> 1 to 4, index of the logic group

Parameters:
<ClockSource> D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | D14 | D15
Clock channel
*RST: D0

Usage: Asynchronous command

Manual operation: See "Clock source" on page 990

PBUS<pb>:CLON <Clocked>

Defines if the bus is a clocked bus - one of the digital channels serves as the clock of the bus.

Suffix:
<pb> 1 to 4, index of the logic group

Parameters:
<Clocked> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Bus clocked" on page 990

PBUS<pb>:CLSLope <ClockSlope>

Selects the slope of the clock signal at which all digital channels of the bus are analyzed.

Suffix:
<pb> 1 to 4, index of the logic group

Parameters:
<ClockSlope> POSitive | NEGative | EITHer
*RST: POSitive

Usage: Asynchronous command

Manual operation: See "Clock slope" on page 990

PBUS<pb>:DECTable:SHOW <DecodeTable>

If enabled, a result table is shown with decoded values and corresponding points in time of the bus signal. Each clock edge corresponds to one row in the table.

The decode table is only available for clocked buses to check the data words.

Suffix:
<pb> 1 to 4, index of the logic group

Parameters:
<DecodeTable> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show decode table" on page 990

PBUS<pb>:DECTable:COUNt?

Returns the number of rows in the decode table. Each clock edge corresponds to one row in the table. The decode table is only available for clocked buses.

Suffix:
<pb> 1 to 4, index of the logic group

Return values:
<Count> Number of rows

Usage: Query only
Asynchronous command

Manual operation: See "Show decode table" on page 990

PBUS<pb>:DECTable:DATA?

Returns a list of decoded values and corresponding points in time from the decode table. Each data pair corresponds to one clock edge, which is one row in the table. The decode table is only available for clocked buses.

Suffix:
<pb> 1 to 4, index of the logic group

Return values:
<Data> Comma-separated list of values

Usage: Query only
Asynchronous command

Manual operation: See "Show decode table" on page 990

PBUS<pb>:DIGSignals:POSition <DigChanPosition>

Sets the vertical position of all active digital channels.

Suffix:
<pb> 1 to 4, index of the logic group

Parameters:
<DigChanPosition>
Range: 0 to 4294967295
Increment: 1
*RST: 0

Usage: Asynchronous command

PBUS<pb>:DIGSignals:SCALe <RelativeHeight>

Sets the size of the display that is used by each active digital signal.

Suffix:
<pb> 1 to 4, index of the logic group

Parameters:
<RelativeHeight>
Range: 2 to 100
Increment: 0.5
*RST: 6.25
Default unit: %

Usage: Asynchronous command

PBUS<pb>:DISPlay:SHBU <ShowBus>

If enabled, the resulting bus signal and bus values are displayed in the diagram.

Suffix:
<pb> 1 to 4, index of the logic group

Parameters:
<ShowBus> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show bus" on page 989

PBUS<pb>:DISPlay:SHDI <ShwDigSigns>

If enabled, the selected digital channels are shown in the diagram. Each channel is displayed as a logic signal.

Suffix:
<pb> 1 to 4, index of the logic group

Parameters:
<ShwDigSigns> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Show dig. signals" on page 987

PBUS<pb>:HYSTeresis<n> <Hysteresis>

Defines the size of the hysteresis for the respective channels.

Suffix:
<pb> 1 to 4, index of the logic group

<n> 1..4
Selects the channel group:
1 = digital channels 0..3
2 = digital channels 4..7
3 = digital channels 8..11
4 = digital channels 12..15

Parameters:
<Hysteresis> MAXimum | ROBust | NORMal

MAXIMUM = MAXimum
Maximum value that is possible and useful for the signal and its settings (corresponds to "Medium" in the GUI).

ROBUST = ROBust
Different hysteresis values for falling and rising edges to avoid an undefined state of the trigger system (corresponds to "Large" in the GUI).

NORMAL = NORMal
The instrument sets a value suitable for the signal and its settings (corresponds to "Small" in the GUI).

Usage: Asynchronous command

Manual operation: See "Hysteresis" on page 989

PBUS<pb>:POSition <YPosition>

Sets the position of the indicated logic group waveform.

Suffix:
<pb> 1 to 4, index of the logic group

Parameters:
<YPosition>
Range: 0 to 100
Increment: 0.1
*RST: 50
Default unit: %

Usage: Asynchronous command

PBUS<pb>:SCALe <RelativeHeight>

Sets the size of the display that is used by the indicated logic group waveform.

Suffix:
<pb> 1 to 4, index of the logic group

Parameters:
<RelativeHeight>
Range: 3 to 100
Increment: 0.5
*RST: 10
Default unit: %

Usage: Asynchronous command

PBUS<pb>:SKEW <SkewOffset>

Sets a general delay for all digital channels.

Suffix:
<pb> 1 to 4, index of the logic group

Parameters:
<SkewOffset>
Range: -2E-07 to 2E-07
Increment: 2E-10
*RST: 0
Default unit: s

Usage: Asynchronous command

Manual operation: See "Skew" on page 992

PBUS<pb>:STATe <State>

Enables the selected logic group. The corresponding signal icon appears on the signal bar.

Dependencies: At least one digital channel must be enabled for the selected bus, otherwise the command does not work.

The bus is enabled automatically if the first digital channel is enabled with `PBUS<pb>:BIT<n>[:STATe]`.

Suffix:
<pb> 1 to 4, index of the logic group

Parameters:
<State> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "State" on page 987

PBUS<pb>:TECHnology <Technology>

Selects the threshold voltage for various types of integrated circuits and applies it to all digital channels.

Suffix:
<pb> 1 to 4, index of the logic group

Parameters:
<Technology> V15 | V25 | V165 | V125 | V09 | VM13 | V38 | V20 | V0 | MANual
V15: TTL
V25: CMOS 5.0 V
V165: CMOS 3.3 V
V125: CMOS 2.5 V
V09: CMOS 1.85 V
VM13: ECL, -1.3 V
V38: PECL
V20: LVPECL
V0: Ground
MANual: Set a user-defined threshold value with `DIGital<m>:THReshold` on page 2269.
*RST: V165

Usage: Asynchronous command

Manual operation: See "Technology, Threshold" on page 988

PBUS<pb>:THCoupling <LevelCoupling>

Sets the threshold and the hysteresis for all digital channels and all buses to the same value.

For Logic 1, the command `DIGital<m>:THCoupling` has the same effect.

Suffix:
<pb> 1 to 4, index of the logic group

Parameters:

<LevelCoupling> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Level coupling" on page 988

PBUS<pb>:THReshold<n> <Threshold>

Sets the logical threshold for the indicated channel group.

Alternatively you can use the following commands:

- To select from a list of predefined technologies: `PBUS<pb>:TECHnology`
- For logic 1: `DIGital<m>:THReshold`

See also `DIGital<m>:THCoupling` on page 2268.

Suffix:

<pb> 1 to 4, index of the logic group

<n> 1..4
Selects the channel group:
1 = digital channels 0..3;
2 = digital channels 4..7
3 = digital channels 8..11
4 = digital channels 12..15

Parameters:

<Threshold> Range: -8 to 8
Increment: 0.025
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "Technology, Threshold" on page 988

18.19.3 Digital resolution

ACQuire:DRESolution?

Returns the current digital resolution of the digital channels.

Return values:

<DigRes> Range: 1E-15 to 100
Increment: 1E-11
*RST: 0.0005
Default unit: s

Usage: Query only
Asynchronous command

ACQuire:POINts:DVALue?

Returns the current digital record length used by each digital channel.

Return values:

<DigReclgth> Range: 1000 to 200000000
Increment: 2
*RST: 1000
Default unit: pts

Usage: Query only
Asynchronous command

18.19.4 Export of digital data

To transfer the waveform data to a remote computer, use:

- `DIGital<m>:DATA:HEADer?` on page 1260
- `DIGital<m>:DATA[:VALues]?` on page 1260
- `PBUS<pb>:DATA:FORMat` on page 1261
- `PBUS<pb>:DATA:HEADer?` on page 1261
- `PBUS<pb>:DATA[:VALues]?` on page 1261

For fast export of several waveforms at once, use `EXPort:WAVeform:DATA[:VALues]?` on page 1263.

For export of waveform data to file, see Section 18.13.4, "Waveform data: export to file", on page 1240.

18.20 Waveform generator (option R&S MXO5-B6)

This section describes the remote commands of the waveform generator.

The instrument preset does not affect the generator settings. Each generator has its own preset: `WGENerator<wg>:PRESet`.

Some of the commands in the following section are asynchronous. An overlapping or asynchronous command does not automatically finish executing before the next command starts executing. If overlapping commands must be executed in a defined order, e.g. to avoid wrong measurement results, they must be serviced sequentially.

To prevent an overlapping execution of commands, one of the commands `*OPC`, `*OPC?` or `*WAI` can be used after the command or a command set.

For more information, see:

- www.rohde-schwarz.com/rc-via-scpi, section "Command sequence and synchronization"

18.20.1 Waveform generator setup

18.20.1.1 General settings

WGENerator<wg>:FREQuency 2279
WGENerator<wg>:FUNCtion:PULSe[:WIDTh] 2279
WGENerator<wg>:FUNCtion:RAMP[:SYMMetry] 2280
WGENerator<wg>:FUNCtion[:SELect] 2280
WGENerator<wg>:FUNCtion[:SQUare]:DCYCle 2280
WGENerator<wg>:OUTPut[:LOAD] 2281
WGENerator<wg>:PERiod 2281
WGENerator<wg>:PRESet 2281
WGENerator<wg>:MODulation:AM:CAMPlitude 2282
WGENerator<wg>:SOURce 2282
WGENerator<wg>:VOLTage:DCLevel 2283
WGENerator<wg>:VOLTage:INVersion 2283
WGENerator<wg>:VOLTage:OFFSet 2283
WGENerator<wg>:VOLTage[:VPP] 2283
WGENerator<wg>[:ENABle] 2284

WGENerator<wg>:FREQuency <Frequency>

Sets the frequency of the waveform.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<Frequency>
Range: 0.001 to 100E+6 or lower, depending on the function type.
Increment: 0.001
*RST: 10E+6
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Frequency" on page 996

WGENerator<wg>:FUNCtion:PULSe[:WIDTh] <PulseWidth>

Sets the pulse width, the pulse duration of the generated pulse waveform.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<PulseWidth>
Range: 1.65E-08 to 90000
Increment: 1
*RST: 5E-07
Default unit: s

Usage: Asynchronous command

Manual operation: See "Pulse width" on page 998

WGENerator<wg>:FUNCtion:RAMP[:SYMMetry] <RampSymmetry>

Sets the symmetry of a ramp waveform, the percentage of time the waveform is rising. By changing the symmetry of the ramp, you can create, for example, triangular waveforms.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<RampSymmetry>
Range: 0 to 100
Increment: 1
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "Symmetry" on page 998

WGENerator<wg>:FUNCtion[:SELect] <FunctionType>

Selects the type of waveform to be generated.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<FunctionType> SINusoid | SQUare | RAMP | DC | PULSe | SINC | CARDiac | GAUSs | LORNtz | HAVer | EXPRise | EXPFall | ARBitrary

`SINC`: cardinal sine
HAVer: haversine (great-circle distance between two points on a sphere)

*RST: SINusoid

Usage: Asynchronous command

Manual operation: See "Function type" on page 995

WGENerator<wg>:FUNCtion[:SQUare]:DCYCle <SquareDutyCycle>

Sets the duty cycle for the pulse function.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:

<SquareDutyCycle> Range: 0.01 to 99.99
Increment: 1
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "Duty cycle" on page 998

WGENerator<wg>:OUTPut[:LOAD] <Load>

Select the user load, the load of the DUT at its connection.

Suffix:

<wg> 1 | 2, index of the waveform generator

Parameters:

<Load> FIFTy | HIZ

`FIFTy`: 50Ω
`HIZ`: High-Z (high input impedance)

*RST: HIZ

Usage: Asynchronous command

Manual operation: See "User load" on page 997

WGENerator<wg>:PERiod <Period>

Sets the period of the pulse waveform, if `WGENerator<wg>:FUNCtion[:SELect]` is set to `PULSe`.

Suffix:

<wg> 1 | 2, index of the waveform generator

Parameters:

<Period> Range: 1E-08 to 1000
Increment: 1
*RST: 1E-06
Default unit: s

Usage: Asynchronous command

Manual operation: See "Period" on page 999

WGENerator<wg>:PRESet

Presets the generator to a default setup. The default includes the following settings:

- "Function type" = "Sine"
- "Frequency" = "1 MHz"
- "Amplitude" = "1 Vpp"

Suffix:
<wg> 1 | 2, index of the waveform generator

Usage: Setting only
Asynchronous command

Manual operation: See "Default setup" on page 998

WGENerator<wg>:MODulation:AM:CAMPlitude <CarrierAmplitude>

Sets the mean peak-to-peak voltage of the modulated signal if AM modulation is active.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<CarrierAmplitude> Range: 0.01 to 12
Increment: 0.01
*RST: 0.4
Default unit: Vpp

Usage: Asynchronous command

Manual operation: See "Carrier amplitude" on page 997

WGENerator<wg>:SOURce <OperationMode>

Selects the operation mode of the waveform generator-

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<OperationMode> FUNCgen | MODulation | SWEep | ARBGenerator

FUNCgen
Enables the function generator and disables modulation, sweep, and arbitrary waveforms

MODulation
Enables the modulation, disables sweep and selects the sine function.

SWEep
Enables the sweep, disables modulation, and selects the sine function.

ARBGenerator
Selects the arbitrary function and disables modulation and sweep.

*RST: FUNCgen

Usage: Asynchronous command

WGENerator<wg>:VOLTage:DCLevel <DCLevel>

Sets the level for the DC signal, if `WGENerator<wg>:FUNCtion[:SELect]` is set to `DC`.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<DCLevel> Range: -5 to 5
Increment: 0.01
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "DC level" on page 998

WGENerator<wg>:VOLTage:INVersion <Inversion>

Inverts the waveform at the offset level.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<Inversion> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Inversion" on page 995

WGENerator<wg>:VOLTage:OFFSet <Offset>

Sets the vertical offset of the generated waveform.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<Offset> Range: -5.995 to 5.995
Increment: 0.01
*RST: 0
Default unit: V

Usage: Asynchronous command

Manual operation: See "Offset" on page 997

WGENerator<wg>:VOLTage[:VPP] <Amplitude>

Sets the amplitude of the waveform. If AM modulation is active, this value defines the peak amplitude of the modulated signal.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<Amplitude>
Range: 0.01 to 12
Increment: 0.01
*RST: 0.4
Default unit: Vpp

Usage: Asynchronous command

Manual operation: See "Amplitude, Peak amplitude" on page 997

WGENerator<wg>[:ENABle] <State>

Enables the function generator.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<State> OFF | ON
*RST: No effect

Usage: Asynchronous command

Manual operation: See "State" on page 995

18.20.1.2 Modulation settings

WGENerator<wg>:MODulation[:STATe] 2285
WGENerator<wg>:MODulation:AM:DCYCle 2285
WGENerator<wg>:MODulation:AM:DEPTh 2285
WGENerator<wg>:MODulation:AM:FREQuency 2286
WGENerator<wg>:MODulation:AM:SYMMetry 2286
WGENerator<wg>:MODulation:AM[:FUNCtion] 2286
WGENerator<wg>:MODulation:CARRier:FREQuency 2286
WGENerator<wg>:MODulation:CARRier:PERiod 2287
WGENerator<wg>:MODulation:FM:DCYCle 2287
WGENerator<wg>:MODulation:FM:DEViation 2287
WGENerator<wg>:MODulation:FM:FREQuency 2288
WGENerator<wg>:MODulation:FM:SYMMetry 2288
WGENerator<wg>:MODulation:FM[:FUNCtion] 2288
WGENerator<wg>:MODulation:FSK:FONE 2289
WGENerator<wg>:MODulation:FSK:FTWO 2289
WGENerator<wg>:MODulation:FSK[:RATE] 2289
WGENerator<wg>:MODulation:NDCLevel 2289
WGENerator<wg>:MODulation:NLPCent 2290
WGENerator<wg>:MODulation:PWM:DCYCle 2290
WGENerator<wg>:MODulation:PWM:DEPTh 2290
WGENerator<wg>:MODulation:PWM:FREQuency 2291

WGENerator<wg>:MODulation:PWM:SYMMetry 2291
WGENerator<wg>:MODulation:PWM[:FUNCtion] 2291
WGENerator<wg>:MODulation:TYPE 2292

WGENerator<wg>:MODulation[:STATe] <Modulation>

Enables or disables modulation.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<Modulation> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Modulation state" on page 999

WGENerator<wg>:MODulation:AM:DCYCle <SquareDutyCycle>

Sets the duty cycle for a square waveform. The duty cycle expresses for what percentage fraction of the period, the waveform is active, i.e. the signal state is high.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<SquareDutyCycle> Range: 10 to 90
Increment: 1
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "Duty cycle" on page 1000

WGENerator<wg>:MODulation:AM:DEPTh <Depth>

Sets the modulation depth, the percentage of the amplitude range that is used for AM modulation.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<Depth> Range: 0 to 100
Increment: 1
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "Depth" on page 1000

WGENerator<wg>:MODulation:AM:FREQuency <Frequency>

Sets the frequency of the modulation waveform for AM frequency modulation.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<Frequency> Range: 0.001 to 1000000
Increment: 0.001
*RST: 1000
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Frequency" on page 1000

WGENerator<wg>:MODulation:AM:SYMMetry <RampSymmetry>

Sets the symmetry for the AM ramp modulation waveform, the percentage of time that the waveform is rising.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<RampSymmetry> Range: 0 to 100
Increment: 1
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "Symmetry" on page 1000

WGENerator<wg>:MODulation:AM[:FUNCtion] <SignalType>

Selects the type of the modulating signal for AM modulation.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<SignalType> SINusoid | SQUare | RAMP
*RST: SINusoid

Usage: Asynchronous command

Manual operation: See "Signal type" on page 1000

WGENerator<wg>:MODulation:CARRier:FREQuency <FreqCarrierAlias>

Sets the frequency of the carrier signal for a modulation waveform.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<FreqCarrierAlias> Range: 0.001 to 100000000
Increment: 0.001
*RST: 1000000
Default unit: Hz

Usage: Asynchronous command

WGENerator<wg>:MODulation:CARRier:PERiod <PeriodCarrierAlias>

Sets the period of the carrier signal for a modulation waveform.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<PeriodCarrierAlias> Range: 1E-08 to 1000
Increment: 1
*RST: 1E-06
Default unit: s

Usage: Asynchronous command

WGENerator<wg>:MODulation:FM:DCYCle <SquareDutyCycle>

Sets the duty cycle for a square waveform. The duty cycle expresses for what percentage fraction of the period, the waveform is active, i.e. the signal state is high.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<SquareDutyCycle> Range: 10 to 90
Increment: 1
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "Duty cycle" on page 1000

WGENerator<wg>:MODulation:FM:DEViation <Deviation>

Sets the frequency deviation, the maximum difference between the FM modulated signal and the carrier signal.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:

<Deviation>
Range: 0.001 to 10000000
Increment: 1
*RST: 1000
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Deviation" on page 1000

WGENerator<wg>:MODulation:FM:FREQuency <Frequency>

Sets the frequency of the modulating waveform for FM modulation.

Suffix:

<wg> 1 | 2, index of the waveform generator

Parameters:

<Frequency>
Range: 0.001 to 1000000
Increment: 0.001
*RST: 1000
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Frequency" on page 1000

WGENerator<wg>:MODulation:FM:SYMMetry <RampSymmetry>

Sets the symmetry for the FM ramp modulation waveform, the percentage of time that the waveform is rising.

Suffix:

<wg> 1 | 2, index of the waveform generator

Parameters:

<RampSymmetry>
Range: 0 to 100
Increment: 1
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "Symmetry" on page 1000

WGENerator<wg>:MODulation:FM[:FUNCtion] <SignalType>

Selects the type of the modulating signal for FM modulation.

Suffix:

<wg> 1 | 2, index of the waveform generator

Parameters:
<SignalType> SINusoid | SQUare | RAMP
*RST: SINusoid

Usage: Asynchronous command

Manual operation: See "Signal type" on page 1000

WGENerator<wg>:MODulation:FSK:FONE <Frequency1>
WGENerator<wg>:MODulation:FSK:FTWO <Frequency2>

Sets the frequency of the first /second signal in FSK modulated signal.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<Frequency2>
Range: 0.001 to 100E+6
Increment: 1
*RST: 1000
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Frequency 1/Frequency 2" on page 1001

WGENerator<wg>:MODulation:FSK[:RATE] <Rate>

Sets the frequency at which the signal switches between `WGENerator<wg>:MODulation:FSK:FONE` and `WGENerator<wg>:MODulation:FSK:FTWO`.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<Rate>
Range: 0.001 to 1000000
Increment: 1
*RST: 1000
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "FSK rate" on page 1001

WGENerator<wg>:MODulation:NDCLevel <LevelDC>

Sets the DC noise level, if `WGENerator<wg>:FUNCtion[:SELect]` is set to `DC`.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:

<LevelDC>
Range: 0 to 10
Increment: 0.01
*RST: 0
Default unit: Vpp

Usage: Asynchronous command

Manual operation: See "Noise level for DC" on page 998

WGENerator<wg>:MODulation:NLPCent <LevelPct>

Sets the level of the noise in percentage of the set "Amplitude" output of the signal.

Suffix:

<wg> 1 | 2, index of the waveform generator

Parameters:

<LevelPct>
Range: 0 to 100
Increment: 0.1
*RST: 0
Default unit: %

Usage: Asynchronous command

Manual operation: See "Noise level in %" on page 997

WGENerator<wg>:MODulation:PWM:DCYCle <SquareDutyCycle>

Sets the duty cycle for a square waveform. The duty cycle expresses for what percentage fraction of the period, the waveform is active, i.e. the signal state is high.

Suffix:

<wg> 1 | 2, index of the waveform generator

Parameters:

<SquareDutyCycle>
Range: 10 to 90
Increment: 1
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "Duty cycle" on page 1000

WGENerator<wg>:MODulation:PWM:DEPTh <Depth>

Sets the modulation depth, the percentage of the amplitude range that is used for PWM modulation.

Suffix:

<wg> 1 | 2, index of the waveform generator

Parameters:

<Depth>
Range: 0 to 100
Increment: 1
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "Modulation depth" on page 1001

WGENerator<wg>:MODulation:PWM:FREQuency <Frequency>

Sets the frequency of the modulating waveform for PWM modulation.

Suffix:

<wg> 1 | 2, index of the waveform generator

Parameters:

<Frequency>
Range: 0.001 to 1000000
Increment: 0.001
*RST: 1000
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Frequency" on page 1000

WGENerator<wg>:MODulation:PWM:SYMMetry <RampSymmetry>

Sets the symmetry for the PWM ramp modulation waveform, the percentage of time that the waveform is rising.

Suffix:

<wg> 1 | 2, index of the waveform generator

Parameters:

<RampSymmetry>
Range: 0 to 100
Increment: 1
*RST: 50
Default unit: %

Usage: Asynchronous command

Manual operation: See "Symmetry" on page 1000

WGENerator<wg>:MODulation:PWM[:FUNCtion] <SignalType>

Selects the type of the modulating signal for PWM modulation.

Suffix:

<wg> 1 | 2, index of the waveform generator

Parameters:
<SignalType> SINusoid | SQUare | RAMP
*RST: SINusoid

Usage: Asynchronous command

Manual operation: See "Signal type" on page 1000

WGENerator<wg>:MODulation:TYPE <ModulationType>

Selects the modulation type, which defines how the carrier signal is modified.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<ModulationType> NONE | AM | FM | PWM | ASK | FSK
*RST: AM

Usage: Asynchronous command

Manual operation: See "Modulation type" on page 999

18.20.1.3 ARB settings

WGENerator<wg>:ARBGen:NAME....2292
WGENerator<wg>:ARBGen:OPEN....2292
WGENerator<wg>:ARBGen:RUNMode....2293
WGENerator<wg>:ARBGen:RUNSingle....2293
WGENerator<wg>:ARBGen:SAMPles?....2293
WGENerator<wg>:ARBGen:SRATe....2294
WGENerator<wg>:ARBGen[:SOURce]....2294

WGENerator<wg>:ARBGen:NAME <Folder>

Sets the file path and the file for an arbitrary waveform, if `WGENerator<wg>:ARBGen[:SOURce]` is set to `ARBitrary`.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<Folder>

Usage: Asynchronous command

Manual operation: See "Open" on page 1005

WGENerator<wg>:ARBGen:OPEN

Loads the arbitrary waveform, which is selected with the `WGENerator<wg>:ARBGen:NAME` command.

Suffix:
<wg> 1 | 2, index of the waveform generator

Usage: Event
Asynchronous command

Manual operation: See "Open" on page 1005

WGENerator<wg>:ARBGen:RUNMode <RunMode>

Sets the duration for which the signal of the arbitrary generator will be output after the trigger event.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<RunMode> SINGle | REPetitive
*RST: REPetitive

Usage: Asynchronous command

Manual operation: See "Run mode" on page 1004

WGENerator<wg>:ARBGen:RUNSingle

Executes a single period of the arbitrary signal generator, if `WGENerator<wg>:ARBGen:RUNMode` is set to `SINGle`.

Suffix:
<wg> 1 | 2, index of the waveform generator

Usage: Event
Asynchronous command

Manual operation: See "Run single" on page 1004

WGENerator<wg>:ARBGen:SAMPles?

Returns the number of samples in the loaded waveform.

Suffix:
<wg> 1 | 2, index of the waveform generator

Return values:
<NumSamples> Range: 0 to 128E+6
Increment: 10
*RST: 0
Default unit: pts

Usage: Query only
Asynchronous command

Manual operation: See "Number of samples" on page 1005

WGENerator<wg>:ARBGen:SRATe <SampleRate>

Sets the sample rate for the arbitrary waveform.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<SampleRate> Range: 1 to 312500000
Increment: 10
*RST: 1000000
Default unit: Sa/s

Usage: Asynchronous command

Manual operation: See "Sample rate" on page 1005

WGENerator<wg>:ARBGen[:SOURce] <WaveformSource>

Selects the source of the arbitrary waveform.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<WaveformSource> ARBitrary
*RST: ARBitrary

Usage: Asynchronous command

Manual operation: See "Arb wfm source" on page 1005

18.20.1.4 Sweep settings

WGENerator<wg>:SWEep[:STATe] 2294
WGENerator<wg>:SWEep:TYPE 2295
WGENerator<wg>:SWEep:FSTart 2295
WGENerator<wg>:SWEep:TIME 2295
WGENerator<wg>:SWEep:FEND 2295

WGENerator<wg>:SWEep[:STATe] <Sweep>

Enables or disables the sweeping.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<Sweep> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Sweep state" on page 1002

WGENerator<wg>:SWEep:TYPE <Type>

Sets the type of the sweep, a linear or logarithmic change of the frequency.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<Type> LIN | LOG
*RST: LIN

Usage: Asynchronous command

Manual operation: See "Sweep type" on page 1002

WGENerator<wg>:SWEep:FSTart <StartFrequency>

Sets the start frequency of the sweep signal.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<StartFrequency> Range: 0.001 to 100E+6
Increment: 0.001
*RST: 1000
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Start frequency" on page 1002

WGENerator<wg>:SWEep:TIME <Time>

Sets the duration of the sweep.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:
<Time> Range: 0.001 to 500
Increment: 1
*RST: 0.001
Default unit: s

Usage: Asynchronous command

Manual operation: See "Sweep time" on page 1002

WGENerator<wg>:SWEep:FEND <StopFrequency>

Sets the stop frequency of the sweep signal.

Suffix:
<wg> 1 | 2, index of the waveform generator

Parameters:

<StopFrequency> Range: 0.001 to 100E+6
Increment: 0.001
*RST: 1000000
Default unit: Hz

Usage: Asynchronous command

Manual operation: See "Stop frequency" on page 1002

18.20.2 Synchronize settings

WGENerator<wg>:COUPling:ALL....2296
WGENerator<wg>:COUPling:STATe....2296
WGENerator<wg>:COUPling:AMPLitude....2297
WGENerator<wg>:COUPling:PHASeshift....2297
WGENerator<wg>:COUPling[:FREQuency]....2297
GENerator:SYNC[:COMBination]....2297

WGENerator<wg>:COUPling:ALL <CoupleAll>

Enables the coupling of the generators, with the selected set of parameters: enabling, amplitude and frequency.

Suffix:

<wg> 1..2
Specifies the primary generator.

Parameters:

<CoupleAll> OFF | ON
*RST: OFF

Usage: Asynchronous command

WGENerator<wg>:COUPling:STATe <CoupleEnable>

Enables the coupling of the generators with the selected set of parameters: amplitude and frequency.

Suffix:

<wg> 1..2
Specifies the prime generator.

Parameters:

<CoupleEnable> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Generator enable" on page 1006

WGENerator<wg>:COUPling:AMPLitude <CplAmplitude>

Enables the coupling of all amplitude parameters of the generators.

Suffix:
<wg> 1..2
Specifies the prime generator.

Parameters:
<CplAmplitude> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Frequency parameters" on page 1006

WGENerator<wg>:COUPling:PHASeshift <PhaseShift>

Sets the phase shift between the waveform of Gen1 and Gen2 when the frequency parameters of the two waveforms are coupled.

Suffix:
<wg> 1..2
Specifies the prime generator.

Parameters:
<PhaseShift> Range: -180 to 180
Increment: 1
*RST: 0
Default unit: °

Usage: Asynchronous command

Manual operation: See "Phase Gen1 - Gen2" on page 1006

WGENerator<wg>:COUPling[:FREQuency] <CplFreq>

Enables the coupling of all frequency parameters of the generators.

Suffix:
<wg> 1..2
Specifies the prime generator.

Parameters:
<CplFreq> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Amplitude parameters" on page 1007

GENerator:SYNC[:COMBination] <Combination>

Selects which signals generated from the waveform generator are synchronized.

Parameters:
<Combination> NONE | GEN12
*RST: NONE

Usage: Asynchronous command

Manual operation: See "Synchron start" on page 1006

18.21 ScopeSync

The DEVice<m> index corresponds to the number of the oscilloscope in the scope list of the "Add scope" dialog and the waveform notification, but the numbers are different. For example:

- DEVice1 is oscilloscope O2 with channel waveforms O2C1, O2C2 ...
- DEVice2 is oscilloscope O3 with channel waveforms O3C1, O3C2 ...
- DEVice6 is oscilloscope O7 with channel waveforms O7C1, O7C2 ...

SYNChronize:DEVice<m>:CHANnels 2298
SYNChronize:DEVice<m>:COMMunicate:NET[:HOSTname] 2298
SYNChronize:DEVice<m>:CONNect 2299
SYNChronize:DEVice<m>:DISPlay 2299
SYNChronize:DEVice<m>:LOCKcontrols 2299
SYNChronize:DEVice<m>:NAME 2300
SYNChronize:DEVice<m>:SKEW:AUTO 2300
SYNChronize:DEVice<m>:SKEW[:VALue] 2300
SYNChronize:DEVice<m>:TIMebasesync 2300
SYNChronize:DEVice<m>[:ENABle] 2301
SYNChronize:DISConnect 2301
SYNChronize:LOAD:ABORt 2301
SYNChronize:LOAD[:WAVeform] 2301

SYNChronize:DEVice<m>:CHANnels <Sources>

Selects the channels of scope 2 to be synchronized, displayed and analyzed. You can select active and inactive channels.

Suffix:
<m> 1 to 10, index = n-1 of the connected oscilloscope O<n>

Parameters:
<Sources> C1,C2,C3,C4,C5,C6,C7,C8

Usage: Asynchronous command

SYNChronize:DEVice<m>:COMMunicate:NET[:HOSTname] <Hostname>

Sets the IP address or the host name for the specified oscilloscope.

Suffix:
<m> 1 to 10, index = n-1 of the connected oscilloscope O<n>

Parameters:
<Hostname> String with the IP address or host name

Example: `SYNChronize:DEVice:COMMunicate:NET:HOSTname "169.254.168.172"`

Usage: Asynchronous command

Manual operation: See "IP or hostname" on page 1023

SYNChronize:DEVice<m>:CONNect <State>

Activates the connection between the two oscilloscopes, or between the R&S ScopeStudio software and the oscilloscope.

Suffix:
<m> 1 to 10, index = n-1 of the connected oscilloscope O<n>

Parameters:
<State> OFF | ON

Usage: Asynchronous command

Manual operation: See "Connect" on page 1023

SYNChronize:DEVice<m>:DISPlay <RemoteUpdate>

Enables the continuous display update on the connected secondary oscilloscope when acquisition is controlled on the leading oscilloscope.

The display update allows for visual comparison of the waveforms on both displays.

Suffix:
<m> 1 to 10, index = n-1 of the connected oscilloscope O<n>

Parameters:
<RemoteUpdate> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Display update" on page 1026

SYNChronize:DEVice<m>:LOCKcontrols <RemoteLock>

Locks the touchscreen and the front panel keys on the connected oscilloscope.

Suffix:
<m> 1 to 10, index = n-1 of the connected oscilloscope O<n>

Parameters:
<RemoteLock> OFF | ON
*RST: OFF

Usage: Asynchronous command

Manual operation: See "Lock controls" on page 1025

SYNChronize:DEVice<m>:NAME <Name>

Defines a name for the specified oscilloscope.

Suffix:
<m> 1 to 10, index = n-1 of the connected oscilloscope O<n>

Parameters:
<Name> String with the name of the connected oscilloscope.

Usage: Asynchronous command

Manual operation: See "Scope name" on page 1022

SYNChronize:DEVice<m>:SKEW:AUTO

Determines the delay between the specified scope and scope 1 automatically, and sets the skew.

Suffix:
<m> 1 to 10, index = n-1 of the connected oscilloscope O<n>

Usage: Setting only
Asynchronous command

Manual operation: See "Auto remote skew" on page 1025

SYNChronize:DEVice<m>:SKEW[:VALue] <Skew>

Returns the skew value that was measured by `SYNChronize:DEVice<m>:SKEW:AUTO`. If you know the skew, or measure it manually, you can also set the value.

Suffix:
<m> 1 to 10, index = n-1 of the connected oscilloscope O<n>

Parameters:
<Skew> Range: -0.02 to 0.02
Increment: 1E-13
*RST: 8E-07
Default unit: s

Usage: Asynchronous command

Manual operation: See "Remote skew" on page 1024

SYNChronize:DEVice<m>:TIMebasesync <SyncTimebase>

Enables or disables the timebase synchronization.

Suffix:
<m> 1 to 10, index = n-1 of the connected oscilloscope O<n>

Parameters:
<SyncTimebase> OFF | ON
*RST: ON

Usage: Asynchronous command

Manual operation: See "Sync timebase" on page 1025

SYNChronize:DEVice<m>[:ENABle] <State>

Adds or removes an oscilloscope to the scope list.

Suffix:
<m> 1 to 10, index = n-1 of the connected oscilloscope O<n>

Parameters:
<State> OFF | ON

Usage: Asynchronous command

Manual operation: See "+ Add" on page 1022

SYNChronize:DISConnect

Terminates the active connection.

Usage: Event
Asynchronous command

Manual operation: See "Disconnect" on page 1023

SYNChronize:LOAD:ABORt

Terminates the getting of signals.

Usage: Setting only
Asynchronous command

Manual operation: See "Get signals" on page 1025

SYNChronize:LOAD[:WAVeform]

Retrieves the active analog waveforms of the latest acquisition from the connected oscilloscope. Digital channels and reference waveforms are not transferred.

Usage: Setting only
Asynchronous command

Manual operation: See "Get signals" on page 1025

18.22 Status reporting

This section describes the remote commands that are used to read the status registers.

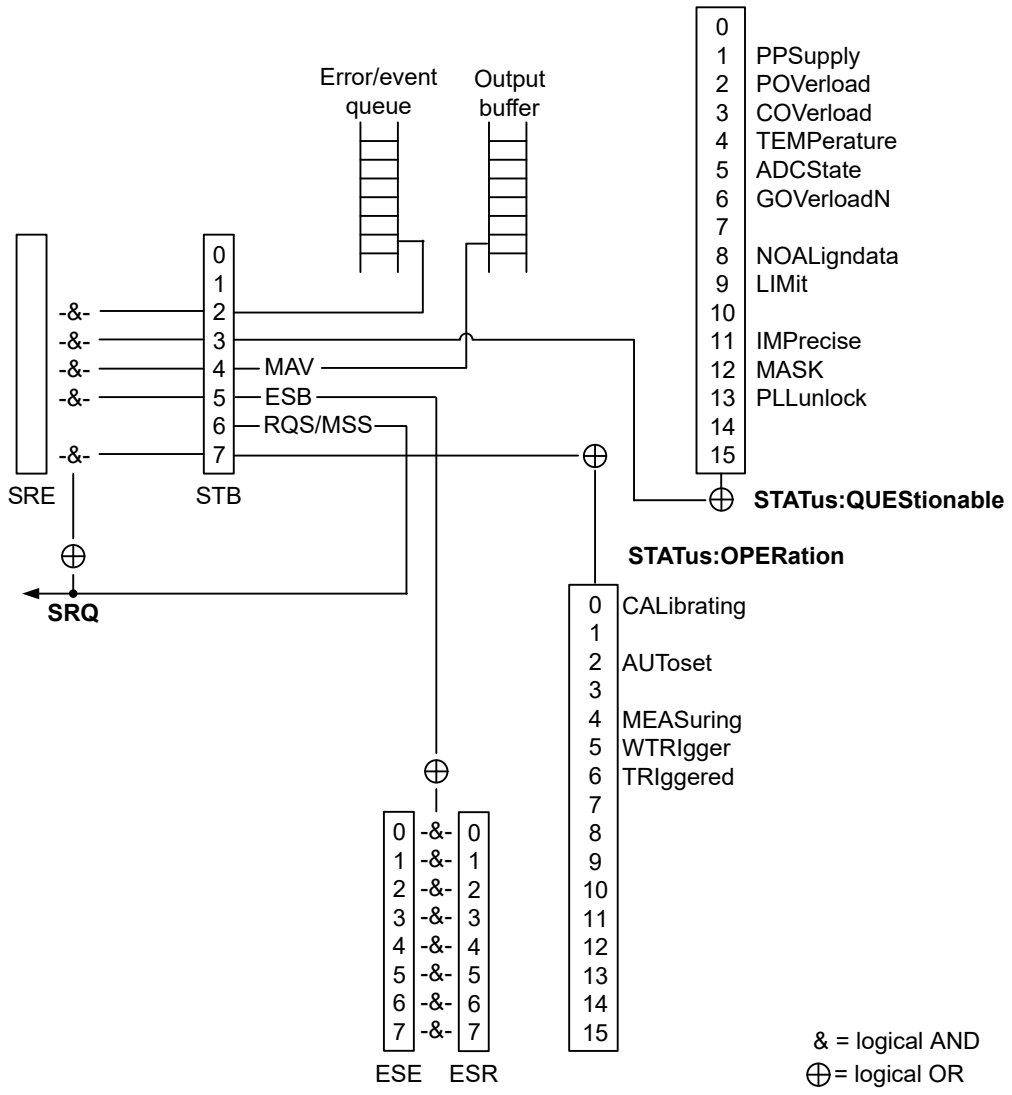

Figure 18-1: Overview of the status registers

For detailed information on the structure, hierarchy, and contents of the status registers, see Section 17.6, "Remote control - status reporting system", on page 1037.

- General commands....2303
- STATus:OPERation register....2303
- STATus:QUEStionable registers....2305
- Reading out the CONDition part....2306
- Reading out the EVENt part....2307
- Controlling the ENABle part....2308
- Controlling the negative transition part....2308
- Controlling the positive transition part....2309
- Other status commands....2310
- Programming tips and examples....2311

18.22.1 General commands

STATus:PRESet

Resets the status registers.

All `PTRansition` bits are set to 1, i.e. all transitions from 0 to 1 are detected.

All `NTRansition` bits are set to 0, i.e. a transition from 1 to 0 in a `CONDition` bit is not detected.

All `EVENt` bits are set to 0.

The `ENABle` bits of `STATus:OPERation` and `STATus:QUEStionable` are set to 0, i.e. all events in these registers are not passed on.

Usage: Setting only
SCPI confirmed

18.22.2 STATus:OPERation register

`STATus:OPERation` commands provide information on the activity of the instrument.

See also: Section 17.6.3.3, "STATus:OPERation register", on page 1042.

STATus:OPERation:CONDition?....2303
STATus:OPERation:ENABle....2303
STATus:OPERation[:EVENt]?....2304
STATus:OPERation:NTRansition....2304
STATus:OPERation:PTRansition....2304

STATus:OPERation:CONDition?

Returns the bit of the action the instrument is currently executing. The contents of the STATus:OPERation register is retained.

The bit assignment is described in Section 17.6.3.3, "STATus:OPERation register", on page 1042.

Usage: Query only
SCPI confirmed
Asynchronous command

STATus:OPERation:ENABle <Enable>

Controls the ENABle part of the STATus:OPERation register. The ENABle defines which events in the EVENt part of the status register are forwarded to the OPERation summary bit (bit 7) of the status byte. The status byte can be used to create a service request.

Parameters:
<Enable> Range: 1 to 65535
Increment: 1

Example: `STATus:OPERation:ENABle 5`
The ALIGnment event (bit 0) and AUToset event (bit 2) are forwarded to the OPERation summary bit of the status byte.

STATus:OPERation[:EVENt]?

The `CONDition` command returns information on actions the instrument is currently executing. The contents of the register is retained.

The `EVENt` command returns information on actions the instrument has executed since the last reading. Reading the `EVENt` register deletes its contents.

Bits:

- 0 = ALIGnment
- 2 = AUToset
- 4= MEASuring
- 5= WTRIgger (wait for trigger)
- 6= TRIggered

Example: For an example, see Example "Querying with STATus:OPERation:CONDition" on page 2312.

Usage: Query only
SCPI confirmed
Asynchronous command

STATus:OPERation:NTRansition <SumBit>

The command sets the bits of the NTRansition part of the STATus:OPERation register. A bit set in the NTRansition register causes a bit transition from 1 to 0 in the CONDition register to produce an entry in the EVENt register.

Reading the information does not clear the register.

Parameters:
<SumBit> Range: 0 to 65535
Increment: 1

Usage: SCPI confirmed
Asynchronous command

STATus:OPERation:PTRansition <SumBit>

The command sets the bits of the PTRansition part of the STATus:OPERation register. A bit set in the PTRansition register causes a bit transition from 0 to 1 in the CONDition register to produce an entry in the EVENt register.

Reading the information does not clear the register.

Parameters:
<SumBit> Range: 0 to 65535
Increment: 1

Usage: SCPI confirmed
Asynchronous command

18.22.3 STATus:QUEStionable registers

The commands of the `STATus:QUEStionable` subsystem control the status reporting structures of the `STATus:QUEStionable` registers.

See also: Section 17.6.3.4, "STATus:QUEStionable register", on page 1043.

The query of the `[:EVENt]` and `[:ENABLe]` commands, return a list of the affected sources:

Table 18-3: Source values for STATus:QUEStionable:...:[:EVENt] and STATus:QUEStionable:...:[:ENABLe]

Bits	Source values	Description
For all bits	NONE	
	ALL	All available sources are activated
PPSupply	PRobe<m>	Active probe
POVerload	PRobe<m>	Active probe
COVerload	CHAN<m>	Analog channels
	WARNCHAN<m>	Warning overload channels
	EXTTRIGGERIN	External analog signal connected to the external trigger input
	TRIGGEROUT	Trigger out signal
TEMPerature	WINSTRUMENT	Temperature warning: indicates that the device is getting hot and should be cooled.
	EINSTRUMENT	Temperature error: the device is too hot and will automatically shut down in a few seconds.
	WGENERATOR1	Temperature warning on waveform generator 1
	WGENERATOR2	Temperature warning on waveform generator 2
ADCState	CPCHAN<m>	Positive clipping for analog channels
	CNCHAN<m>	Negative clipping for analog channels
	CPPRobe<m>	Positive clipping for probes
	CNPRobe<m>	Negative clipping for probes
GOVerload	WGENerator<m>	Available generators
	MEAS<mg>	Enabled measurements
IMPRecise	MEAS<mg>	Enabled measurements
MASK	MASK<m>	Enabled masks
PLLunlock	PLL100	

Some of the status commands can be used interchangeably:

Table 18-4: Overview: STATus:QUEStionable and respective CHANnel, MEASurement and WGENerator commands

STATus:QUEStionable register	MEASurement
STATus:QUEStionable:COVerload Bit: CHANnel<ch>	CHANnel<ch>:OVERload:STATus
STATus:QUEStionable:COVerload Bit: WCHannel<ch>	CHANnel<ch>:WARNoverload:STATus
STATus:QUEStionable:COVerload Bit: EXTTRIGGERIN	TRIGger:ANEDge:OVERload:STATus
STATus:QUEStionable:COVerload Bit: TRIGGEROUT	TRIGger:ACTions:OUT:OVERload:STATus
STATus:QUEStionable:ADCState Bit: CPCHannel<ch>	CHANnel<ch>:ADCState:STATus:PCLipping
STATus:QUEStionable:ADCState Bit: CNCHannel<ch>	CHANnel<ch>:ADCState:STATus:NCLipping
STATus:QUEStionable:PPSupply Bit: CNCHannel<ch>	CHANnel<ch>PPSupply:STATus
STATus:QUEStionable:IMPRecise Bit: MEAS<mg>	MEASurement<mg>:IMPRecise:STATus
STATus:QUEStionable:GOVerload Bit: WGENerator<wg>	WGENerator<wg>:GOVerload
STATus:QUEStionable: TEMPerature Bit: WGENerator<wg>	WGENerator<wg>:TEMPerature

18.22.4 Reading out the CONDition part

See also: Section 18.22.3, "STATus:QUEStionable registers", on page 2305.

CHANnel<ch>:OVERload:STATus:CONDition?
CHANnel<ch>:ADCState:STATus:NCLipping:CONDition?
CHANnel<ch>:ADCState:STATus:PCLipping:CONDition?
CHANnel<ch>:WARNoverload:STATus:CONDition?
CHANnel<ch>:PPSupply:STATus:CONDition?
MEASurement<mg>:IMPRecise:STATus:CONDition?
STATus:QUEStionable:MASK:CONDition?
TRIGger:ACTions:OUT:OVERload:STATus:CONDition?
TRIGger:ANEDge:OVERload:STATus:CONDition?
WGENerator<wg>:GOVerload:STATus:CONDition?
WGENerator<wg>:TEMPerature:STATus:CONDition?

STATus:QUEStionable:ADCState:CONDition?
STATus:QUEStionable:COVerload:CONDition?
STATus:QUEStionable:GOVerload:CONDition?
STATus:QUEStionable:IMPRecise:CONDition?
STATus:QUEStionable:PLL:CONDition?
STATus:QUEStionable:PPSupply:CONDition?
STATus:QUEStionable:TEMPerature:CONDition?

Returns the contents of the `CONDition` part of the status register to check for questionable instrument or measurement states. This part contains information on the action currently being performed in the instrument.

Reading the `CONDition` registers does not delete the contents since it indicates the current hardware status.

Return values:
<Value> bit dependent, comma-separated values

Usage: Query only

18.22.5 Reading out the EVENt part

CHANnel<ch>:ADCState:STATus:NCLipping[:EVENt]?
CHANnel<ch>:ADCState:STATus:PCLipping[:EVENt]?
CHANnel<ch>:OVERload:STATus[:EVENt] <Value>
CHANnel<ch>:WARNoverload:STATus[:EVENt]?
CHANnel<ch>:PPSupply:STATus[:EVENt] <Value>
MEASurement<mg>:IMPRecise:STATus[:EVENt]?
STATus:QUEStionable:MASK[:EVENt]?
TRIGger:ACTions:OUT:OVERload:STATus[:EVENt] <Value>
TRIGger:ANEDge:OVERload:STATus[:EVENt] <Value>
WGENerator<wg>:GOVerload:STATus[:EVENt] <Value>
WGENerator<wg>:TEMPerature:STATus[:EVENt] <Value>
STATus:QUEStionable:ADCState[:EVENt]?
STATus:QUEStionable:COVerload[:EVENt]?
STATus:QUEStionable:GOVerload[:EVENt]?
STATus:QUEStionable:IMPRecise[:EVENt]?
STATus:QUEStionable:PLL[:EVENt]?
STATus:QUEStionable:PPSupply[:EVENt]?
STATus:QUEStionable:TEMPerature[:EVENt]?

Returns the contents of the `EVENt` part of the status register to check if an event has occurred since the last reading.

Reading an `EVENt` register deletes its contents.

Return values:
<Value> bit dependent, comma-separated values

See Source values for STATus:QUEStionable:...:[:EVENt] and STATus:QUEStionable:...:[:ENABLe] for a list of the return values.

Usage: Query only

18.22.6 Controlling the ENABle part

See also: Section 18.22.3, "STATus:QUEStionable registers", on page 2305.

CHANnel<ch>:OVERload:STATus:ENABle <Value>
CHANnel<ch>:ADCState:STATus:NCLipping:ENABle <Value>
CHANnel<ch>:ADCState:STATus:PCLipping:ENABle <Value>
CHANnel<ch>:WARNoverload:STATus:ENABle <Value>
CHANnel<ch>:PPSupply:STATus:ENABle <Value>
MEASurement<mg>:IMPRecise:STATus:ENABle <Value>
STATus:QUEStionable:MASK:ENABle <Value>
TRIGger:ACTions:OUT:OVERload:STATus:ENABle <Value>
TRIGger:ANEDge:OVERload:STATus:ENABle <Value>
WGENerator<wg>:GOVerload:STATus:ENABle <Value>
WGENerator<wg>:TEMPerature:STATus:ENABle <Value>
STATus:QUEStionable:ADCState:ENABle <Value>
STATus:QUEStionable:COVerload:ENABle <Value>
STATus:QUEStionable:GOVerload:ENABle <Value>
STATus:QUEStionable:IMPRecise:ENABle <Value>
STATus:QUEStionable:PLL:ENABle <Value>
STATus:QUEStionable:PPSupply:ENABle <Value>
STATus:QUEStionable:TEMPerature:ENABle <Value>

Sets the `ENABle` part that allows true conditions in the EVENt part to be reported for the summary bit in the status byte.

These events can be used for a service request. If a bit in the `ENABle` part is 1, and the corresponding `EVENt` bit is true, a positive transition occurs in the summary bit. This transition is reported to the next higher level.

See Source values for STATus:QUEStionable:...:[:EVENt] and STATus:QUEStionable:...:[:ENABLe] for a list of the return values.

Parameters:
<Value> bit dependent, comma-separated values

18.22.7 Controlling the negative transition part

See also: Section 18.22.3, "STATus:QUEStionable registers", on page 2305.

CHANnel<ch>:ADCState:STATus:NCLipping:NTRansition <Value>
CHANnel<ch>:ADCState:STATus:PCLipping:NTRansition <Value>
CHANnel<ch>:OVERload:STATus:NTRansition <Value>
CHANnel<ch>:PPSupply:STATus:NTRansition <Value>
CHANnel<ch>:WARNoverload:STATus:NTRansition <Value>
MEASurement<mg>:IMPRecise:STATus:NTRansition <Value>
STATus:QUEStionable:MASK:NTRansition <Value>
TRIGger:ACTions:OUT:OVERload:STATus:NTRansition <Value>

TRIGger:ACTions:OUT:OVERload:STATus:PTRansition <Value>
TRIGger:ANEDge:OVERload:STATus:NTRansition <Value>
WGENerator<wg>:GOVerload:STATus:NTRansition <Value>
WGENerator<wg>:TEMPerature:STATus:NTRansition <Value>
STATus:QUEStionable:ADCState:NTRansition <Value>
STATus:QUEStionable:COVerload:NTRansition <Value>
STATus:QUEStionable:GOVerload:NTRansition <Value>
STATus:QUEStionable:IMPRecise:NTRansition <Value>
STATus:QUEStionable:PLL:NTRansition <Value>
STATus:QUEStionable:PPSupply:NTRansition <Value>
STATus:QUEStionable:TEMPerature:NTRansition <Value>

Sets the negative transition filter.

If a bit is set, a transition from 1 to 0 in the condition part causes an entry to be made in the corresponding bit of the `EVENt` part of the register.

Parameters:
<Value> Source dependent, comma-separated values

18.22.8 Controlling the positive transition part

See also: Section 18.22.3, "STATus:QUEStionable registers", on page 2305.

CHANnel<ch>:ADCState:STATus:NCLipping:PTRansition <Value>
CHANnel<ch>:ADCState:STATus:PCLipping:PTRansition <Value>
CHANnel<ch>:OVERload:STATus:PTRansition <Value>
CHANnel<ch>:PPSupply:STATus:PTRansition <Value>
CHANnel<ch>:WARNoverload:STATus:PTRansition <Value>
MEASurement<mg>:IMPRecise:STATus:PTRansition <Value>
STATus:QUEStionable:MASK:PTRansition <Value>
TRIGger:ACTions:OUT:OVERload:STATus:PTRansition <Value>
TRIGger:ANEDge:OVERload:STATus:PTRansition <Value>
WGENerator<wg>:GOVerload:STATus:PTRansition <Value>
WGENerator<wg>:TEMPerature:STATus:PTRansition <Value>
STATus:QUEStionable:ADCState:PTRansition <Value>
STATus:QUEStionable:COVerload:PTRansition <Value>
STATus:QUEStionable:GOVerload:PTRansition <Value>
STATus:QUEStionable:IMPRecise:PTRansition <Value>
STATus:QUEStionable:PLL:PTRansition <Value>
STATus:QUEStionable:PPSupply:PTRansition <Value>
STATus:QUEStionable:TEMPerature:PTRansition <Value>

Sets the positive transition filter.

If a bit is set, a transition from 0 to 1 in the condition part causes an entry to be made in the corresponding bit of the `EVENt` part of the register.

Parameters:
<Value> Source dependent, comma-separated values

18.22.9 Other status commands

STATus:QUEStionable:PLL:RCONdition <Value>

Reset condition, allows to continue after an PLL unlock of the external reference.

Setting parameters:

<Value> PLL100

Usage: Setting only

18.22.10 Programming tips and examples

Example: Observing the limits violation of a measurement

The following example describes how to use the status register commands to observe if a violation of a measurement limit has occurred.

```
*SRE 8
// Enables the STATus:QUEStionable bit in the service-request (SRE)

STATus:QUEStionable:ENABle 512
// Enables the LIMIt bit of the STATus:QUEStionable register

MEASurement1:ENABle ON
MEASurement2:ENABle ON
MEASurement3:ENABle ON
// Enables measurement 1,2,3


STATus:QUEStionable:LIMit:ENABle ALL
// Enables the limit check for all active measurements

STATus:QUEStionable:LIMit:ENABle?
MEAS1,MEAS2,MEAS3
//Queries which measurement were active at the time the
//STATus:QUEStionable:LIMit:ENABle was send

*SRQ?
// A service request was sent

*STB?
72
// STATus:QUEStionable is set:
// #72= 64 + 8 = 2^6 + 2^3
// 64 : bit 6 is awlays on when a SRQ is sent
// 8: bit 3 for STATus:QUEStionable

STATus:QUEStionable:EVENt?
512
// 512= 2^9,

STATus:QUEStionable:LIMit:EVENt?
MEAS1,MEAS2
// Measurements 1 and 2 have exceeded the limit
// The event register is cleared after the query


STATus:QUEStionable:LIMit:EVENt?
NONE
// The event bit has been set to 0 after the first query
```

```
STATus:QUEStionable:LIMit:CONDition?
MEAS1,MEAS2
// Measurements 1 and 2 are still exceeding the limit


STATus:QUEStionable:EVENt?
0

// Waiting for an event
*SRQ?

// Measurement 3 exceeds the limit

STATus:QUEStionable:LIMit:CONDition?
MEAS1,MEAS2,MEAS3
// Measurements 1,2 and 3 are currently exceeding the limit


STATus:QUEStionable:LIMit:EVENt?
MEAS3
// Measurement 3 has newly  exceeded the limit
// The event register is cleared after the query
```

Example: Querying with STATus:OPERation:CONDition

The following example shows how the result of `STATus:OPERation:CONDition?` changes during a single acquisition.

```
SINGLe
// Measurement starts

STATus:OPERation:CONDition?
16
//Measuring

STATus:OPERation:CONDition?
48
//Pre trigger waiting time is over (16 Measuring + 32 WaitForTrigger)

STATus:OPERation:CONDition?
112
//Trigger is deactivated (16 Measuring + 32 WaitForTrigger + 64 Triggered)

STATus:OPERation:CONDition?
96
// Measurement has finished (32 WaitForTrigger + 64 Triggered)
```

Query OPC status in the event status register

If you activate a time-consuming operation and wait for completion with `*OPC?`, a time-out could occur before the operation is finished and you do not receive the returned

"1". In addition, the test program is blocked while waiting with `*OPC?`. It is not possible to process other (not interdependent) commands in the meantime or to communicate with other instruments.

Thus, for time-consuming operations, you can avoid blocking the communication by sending the operation complete command `*OPC`:

```
*CLS
*OPC
```

Afterwards you can poll the operation complete status in the event status register with `*ESR?`.

This query returns the content of the event status register and afterwards clears the content. See also Section 17.6.3.2, "Event status register (ESR) and event status enable register (ESE)", on page 1041.

18.23 Deprecated commands

The following commands are provided for compatibility to previous oscilloscope versions only. For new remote control programs, use the specified alternative commands.

18.23.1 Base instrument

Legacy command	Replaced by	Comment
PROBe<ch>:SETup:OFFSet:TOPMeter	`PROBe<ch>:SETup:ADVanced:PMToffset` on page 1126	Replaced since FW 2.10
PROBe<ch>:SETup:ZAXV	`PROBe<ch>:SETup:EPATtenuator` on page 1123	Replaced since FW 2.10

Table 18-5: Status reporting

Legacy command	Replaced by	Comment
MEASurement<mg>:MARGin:STATus:CONDition? MEASurement<mg>:MARGin:STATus:ENABle MEASurement<mg>:MARGin:STATus:NTRansition MEASurement<mg>:MARGin:STATus:PTRansition MEASurement<mg>:MARGin:STATus[:EVENt]	Use `MEASurement<mg>:LIMit:STATus:` commands	Obsolete since FW 2.9
STATus:QUEStionable:MARGin:CONDition? STATus:QUEStionable:MARGin:ENABle STATus:QUEStionable:MARGin:NTRansition STATus:QUEStionable:MARGin:PTRansition STATus:QUEStionable:MARGin[:EVENt]?	Use `STATus:QUEStionable:LIMit:` commands	Obsolete since FW 2.9

18.23.2 Applications

Table 18-6: Signal configuration

Legacy command	Replaced by	Comment
TREFerence<m>:REFLevel	TREFerence<m>:CLK:REFLevel on page 1198	Replaced since FW 2.8
MDEFaults:SETTings<m>:ENABle	---	Obsolete since FW 2.10

Table 18-7: Waveform generator

Legacy command	Replaced by	Comment
WGENerator<wg>:MODulation:NLABsolute	-	Obsolete since FW 2.8
WGENerator<wg>:VOLTage:HIGH	-	Obsolete since FW 2.9
WGENerator<wg>:VOLTage:LOW	-	Obsolete since FW 2.9

Table 18-8: Power analysis

Legacy command	Replaced by	Comment
POWer<m>:HARMonics:MEASurement:REAL-power[:ACTual]	POWer<m>:HARMonics:MEASurement:POWer:ACTive[:ACTual]? on page 1388	Replaced since FW 2.8
POWer<m>:QUALity:DISPlay:POWer:REALpower	POWer<m>:QUALity:RESult:POWer:ACTive[:ACTual]? on page 1378	Replaced since FW 2.8
POWer<m>:QUALity:RESult:POWer:REAL-power:AVERage POWer<m>:QUALity:RESult:POWer:REAL-power:EVTCount POWer<m>:QUALity:RESult:POWer:REAL-power:NPEak POWer<m>:QUALity:RESult:POWer:REAL-power:PPEak POWer<m>:QUALity:RESult:POWer:REAL-power:RMS POWer<m>:QUALity:RESult:POWer:REAL-power:STDDev POWer<m>:QUALity:RESult:POWer:REAL-power:WFMCount POWer<m>:QUALity:RESult:POWer:REAL-power[:ACTual]	POWer<m>:QUALity:RESult:POWer:ACTive:AVERage? on page 1378 POWer<m>:QUALity:RESult:POWer:ACTive:EVTCount? on page 1378 POWer<m>:QUALity:RESult:POWer:ACTive:NPEak? on page 1378 POWer<m>:QUALity:RESult:POWer:ACTive:PPEak? on page 1378 POWer<m>:QUALity:RESult:POWer:ACTive:RMS? on page 1378 POWer<m>:QUALity:RESult:POWer:ACTive:STDDev? on page 1378 POWer<m>:QUALity:RESult:POWer:ACTive:WFMCount? on page 1378 POWer<m>:QUALity:RESult:POWer:ACTive[:ACTual]? on page 1378	Replaced since FW 2.8
POWer<m>:HARMonics:DISPlay:FREQuency:STARt[:VALue] POWer<m>:HARMonics:DISPlay:FREQuency:STOP[:VALue]	POWer<m>:HARMonics:DISPlay:HARMonics:STARt[:VALue] on page 1385 POWer<m>:HARMonics:DISPlay:HARMonics:STOP[:VALue] on page 1385	Replaced since FW 2.9

18.23.3 Serial protocols

18.23.3.1 General

Legacy command	Replaced by	Comment
SBUS<sb>:SETReflevels	-	No longer needed since FW 2.7

18.23.3.2 SPI

Table 18-9: SPI trigger

Legacy command	Replaced by	Comment
TRIGger:SPI:DMINpattern TRIGger:SPI:DPOSition TRIGger:SPI:FCONdition TRIGger:SPI:PALignment TRIGger:SPI:TYPE	TRIGger:SBHW:SPI:DMINpattern TRIGger:SBHW:SPI:DPOSition TRIGger:SBHW:SPI:FCONdition TRIGger:SBHW:SPI:PALignment TRIGger:SBHW:SPI:TYPE	Replaced since FW 2.3

Table 18-10: SPI decode results

Legacy command	Replaced by	Comment
SBUS<sb>:SPI:FRAMe<fr>:COUNt?	SBUS<sb>:SPI:FCOunt?	Replaced since FW 2.6

18.23.3.3 QUAD-SPI

Table 18-11: QUAD-SPI decode results

Legacy command	Replaced by	Comment
SBUS<sb>:QSPI:FRAMe<fr>:DCOunt SBUS<sb>:QSPI:FRAMe<fr>:FLD<fl>:DVALue	SBUS<sb>:QSPI:FRAMe<fr>:FLDCount? SBUS<sb>:QSPI:FRAMe<fr>:FLD<fl>:VALue?	Replaced since FW 2.6

18.23.3.4 I2C

Table 18-12: I2C trigger

Legacy command	Replaced by	Comment
TRIGger:I2C:ACCess TRIGger:I2C:ACONdition TRIGger:I2C:ADDRess TRIGger:I2C:ADDTo TRIGger:I2C:ADNack TRIGger:I2C:AMODe TRIGger:I2C:DCONdition TRIGger:I2C:DMIN TRIGger:I2C:DPOSition TRIGger:I2C:DRNack TRIGger:I2C:DWNack TRIGger:I2C:TYPE	TRIGger:SBHW:I2C:ACCess TRIGger:SBHW:I2C:ACONdition TRIGger:SBHW:I2C:ADDRess TRIGger:SBHW:I2C:ADDTo TRIGger:SBHW:I2C:ADNack TRIGger:SBHW:I2C:AMODe TRIGger:SBHW:I2C:DCONdition TRIGger:SBHW:I2C:DMIN TRIGger:SBHW:I2C:DPOSition TRIGger:SBHW:I2C:DRNack TRIGger:SBHW:I2C:DWNack TRIGger:SBHW:I2C:TYPE	Replaced since FW 2.3

Table 18-13: I2C decode results

Legacy command	Replaced by	Comment
SBUS<sb>:I2C:FRAMe<fr>:COUNt SBUS<sb>:I2C:FRAMe<fr>:BYTE<o>:ACCess SBUS<sb>:I2C:FRAMe<fr>:BYTE<o>:ACKStart SBUS<sb>:I2C:FRAMe<fr>:BYTE<o>:COMPlete	-	No longer needed since FW 2.6
SBUS<sb>:I2C:FRAMe<fr>:BCOunt SBUS<sb>:I2C:FRAMe<fr>:BYTE<o>:STARt SBUS<sb>:I2C:FRAMe<fr>:BYTE<o>:VALue	SBUS<sb>:I2C:FRAMe<fr>:FLDCount? SBUS<sb>:I2C:FRAMe<fr>:FLD<fl>:STARt? SBUS<sb>:I2C:FRAMe<fr>:FLD<fl>:VALue?	Replaced since FW 2.6

18.23.3.5 I3C

Table 18-14: I3C decode results

Legacy command	Replaced by	Comment
SBUS<sb>:I3C:FRAMe<fr>:AACCess? SBUS<sb>:I3C:FRAMe<fr>:Access? SBUS<sb>:I3C:FRAMe<fr>:ACOMplete? SBUS<sb>:I3C:FRAMe<fr>:ADBStart? SBUS<sb>:I3C:FRAMe<fr>:ADEVice? SBUS<sb>:I3C:FRAMe<fr>:AMODe? SBUS<sb>:I3C:FRAMe<fr>:BYTE<o>:Access? SBUS<sb>:I3C:FRAMe<fr>:BYTE<o>:ACKStart? SBUS<sb>:I3C:FRAMe<fr>:BYTE<o>:COMPlete? SBUS<sb>:I3C:FRAMe<fr>:BYTE<o>:STARt?	-	No longer needed since FW 2.6
SBUS<sb>:I3C:FRAMe<fr>:BCOunt SBUS<sb>:I3C:FRAMe<fr>:COunt	SBUS<sb>:I3C:FRAMe<fr>:FLDCount?	Replaced since FW 2.6

18.23.3.6 UART

Table 18-15: UART configuration

Legacy command	Replaced by	Comment
SBUS<sb>:UART:EWORd	-	No longer needed since FW 2.7

Table 18-16: UART trigger

Legacy command	Replaced by	Comment
TRIGger:UART:DATA TRIGger:UART:DPOSition TRIGger:UART:FCONdition TRIGger:UART:OPERator TRIGger:UART:SOURce TRIGger:UART:TYPE	TRIGger:SBHW:UART:DATA TRIGger:SBHW:UART:DPOSition TRIGger:SBHW:UART:FCONdition TRIGger:SBHW:UART:OPERator TRIGger:SBHW:UART:SOURce TRIGger:SBHW:UART:TYPE	Replaced since FW 2.3

Table 18-17: UART decode results

Legacy command	Replaced by	Comment
SBUS<sb>:UART:WORD<w>:COUNt?	SBUS<sb>:UART:WCOunt?	Replaced since FW 2.6

18.23.3.7 CAN

Table 18-18: CAN trigger

Legacy command	Replaced by	Comment
TRIGger:CAN:ACKerror TRIGger:CAN:BITSterror TRIGger:CAN:BORDer TRIGger:CAN:CRCerror TRIGger:CAN:DCONdition TRIGger:CAN:DLC TRIGger:CAN:DLCCondition TRIGger:CAN:DMIN	TRIGger:SBHW:CAN:ACKerror TRIGger:SBHW:CAN:BITSterror TRIGger:SBHW:CAN:BORDer TRIGger:SBHW:CAN:CRCerror TRIGger:SBHW:CAN:DCONdition TRIGger:SBHW:CAN:DLC TRIGger:SBHW:CAN:DLCCondition TRIGger:SBHW:CAN:DMIN	Replaced since FW 2.3
TRIGger:CAN:FORMerror TRIGger:CAN:FTYPe TRIGger:CAN:ICONdition TRIGger:CAN:IMAX TRIGger:CAN:IMIN TRIGger:CAN:ITYPe TRIGger:CAN:TYPE	TRIGger:SBHW:CAN:FORMerror TRIGger:SBHW:CAN:FTYPe TRIGger:SBHW:CAN:ICONdition TRIGger:SBHW:CAN:IMAX TRIGger:SBHW:CAN:IMIN TRIGger:SBHW:CAN:ITYPe TRIGger:SBHW:CAN:TYPE	Replaced since FW 2.3
TRIGger:CAN:FDATa:BRS TRIGger:CAN:FDATa:DPOSition TRIGger:CAN:FDATa:ESI TRIGger:CAN:FDATa:SCERror	TRIGger:SBHW:CAN:FDATa:BRS TRIGger:SBHW:CAN:FDATa:DPOSition TRIGger:SBHW:CAN:FDATa:ESI TRIGger:SBHW:CAN:FDATa:SCERror	Replaced since FW 2.3
TRIGger:CAN:XDATa:AF:CONDition TRIGger:CAN:XDATa:AF:MAX TRIGger:CAN:XDATa:AF:MIN TRIGger:CAN:XDATa:SDT:CONDition TRIGger:CAN:XDATa:SDT:MAX TRIGger:CAN:XDATa:SDT:MIN TRIGger:CAN:XDATa:SEC TRIGger:CAN:XDATa:VCID:CONDition TRIGger:CAN:XDATa:VCID:MAX TRIGger:CAN:XDATa:VCID:MIN	TRIGger:SBHW:CAN:XDATa:AF:CONDition TRIGger:SBHW:CAN:XDATa:AF:MAX TRIGger:SBHW:CAN:XDATa:AF:MIN TRIGger:SBHW:CAN:XDATa:SDT:CONDition TRIGger:SBHW:CAN:XDATa:SDT:MAX TRIGger:SBHW:CAN:XDATa:SDT:MIN TRIGger:SBHW:CAN:XDATa:SEC TRIGger:SBHW:CAN:XDATa:VCID:CONDition TRIGger:SBHW:CAN:XDATa:VCID:MAX TRIGger:SBHW:CAN:XDATa:VCID:MIN	Replaced since FW 2.3

Table 18-19: CAN decode results

Legacy command	Replaced by	Comment
SBUS<sb>:CAN:FRAMe<fr>:BSEPosition?	-	No longer needed since FW 2.1
SBUS<sb>:CAN:FRAMe<fr>:SDATa? SBUS<sb>:CAN:FRAMe<fr>:SDEXport?	-	No longer needed since FW 2.6

Legacy command	Replaced by	Comment
SBUS<sb>:CAN:FRAMe<fr>:BCOunt? SBUS<sb>:CAN:FRAMe<fr>:BYTE<o>:FVALue? SBUS<sb>:CAN:FRAMe<fr>:BYTE<o>:LABel? SBUS<sb>:CAN:FRAMe<fr>:BYTE<o>:STATe? SBUS<sb>:CAN:FRAMe<fr>:BYTE<o>:VALue? SBUS<sb>:CAN:FRAMe<fr>:COUNt?	SBUS<sb>:CAN:FRAMe<fr>:FLDCount? SBUS<sb>:CAN:FRAMe<fr>:FLD<fl>:FVALue? SBUS<sb>:CAN:FRAMe<fr>:FLD<fl>:LABel? SBUS<sb>:CAN:FRAMe<fr>:FLD<fl>:STATe? SBUS<sb>:CAN:FRAMe<fr>:FLD<fl>:VALue? SBUS<sb>:CAN:FCOunt?	Replaced since FW 2.6
SBUS<sb>:CAN:FRAMe<fr>:XDATa<o>:SBC?	SBUS<sb>:CAN:FRAMe<fr>:SBC?	Replaced since FW 2.7
SBUS<sb>:CAN:FRAMe<fr>:FERCause? SBUS<sb>:CAN:FRAMe<fr>:STUFf?	-	No longer needed since FW 2.9

18.23.3.8 LIN

Table 18-20: LIN trigger

Legacy command	Replaced by	Comment
TRIGger:LIN:CHKSerror TRIGger:LIN:DCONdition TRIGger:LIN:DMIN TRIGger:LIN:DPOSition TRIGger:LIN:ICONdition TRIGger:LIN:IMAX TRIGger:LIN:IMIN TRIGger:LIN:IPERror TRIGger:LIN:SYERror TRIGger:LIN:TYPE	TRIGger:SBHW:LIN:CHKSerror TRIGger:SBHW:LIN:DCONdition TRIGger:SBHW:LIN:DMIN TRIGger:SBHW:LIN:DPOSition TRIGger:SBHW:LIN:ICONdition TRIGger:SBHW:LIN:IMAX TRIGger:SBHW:LIN:IMIN TRIGger:SBHW:LIN:IPERror TRIGger:SBHW:LIN:SYERror TRIGger:SBHW:LIN:TYPE	Replaced since FW 2.3

Table 18-21: LIN decode results

Legacy command	Replaced by	Comment
SBUS<sb>:LIN:FRAMe<fr>:IDSTate?	-	No longer needed since FW 2.6
SBUS<sb>:LIN:FRAMe<fr>:BCOunt? SBUS<sb>:LIN:FRAMe<fr>:BYTE<o>:COUNt? SBUS<sb>:LIN:FRAMe<fr>:BYTE<o>:FVALue? SBUS<sb>:LIN:FRAMe<fr>:BYTE<o>:LABel? SBUS<sb>:LIN:FRAMe<fr>:BYTE<o>:STATe? SBUS<sb>:LIN:FRAMe<fr>:BYTE<o>:VALue? SBUS<sb>:LIN:FRAMe<fr>:COUNt?	SBUS<sb>:LIN:FRAMe<fr>:FLDCount? SBUS<sb>:LIN:FRAMe<fr>:FLDCount? SBUS<sb>:LIN:FRAMe<fr>:FLD<fl>:FVALue? SBUS<sb>:LIN:FRAMe<fr>:FLD<fl>:LABel? SBUS<sb>:LIN:FRAMe<fr>:FLD<fl>:STATe? SBUS<sb>:LIN:FRAMe<fr>:FLD<fl>:VALue? SBUS<sb>:LIN:FCOunt?	Replaced since FW 2.6

18.23.3.9 SENT

Table 18-22: SENT decode results

Legacy command	Replaced by	Comment
SBUS<sb>:SENT:FRAMe<fr>:COUNt SBUS<sb>:SENT:FRAMe<fr>:FCSValue? SBUS<sb>:SENT:FRAMe<fr>:FIDValue? SBUS<sb>:SENT:FRAMe<fr>:FPDValue? SBUS<sb>:SENT:FRAMe<fr>:FSYNc? SBUS<sb>:SENT:FRAMe<fr>:PDValue?	-	No longer needed since FW 2.6
SBUS<sb>:SENT:FRAMe<fr>:NIBB<o>:STATe SBUS<sb>:SENT:FRAMe<fr>:NIBB<o>:VALue	SBUS<sb>:SENT:FRAMe<fr>:FLD<fl>:STATe? SBUS<sb>:SENT:FRAMe<fr>:FLD<fl>:VALue?	Replaced since FW 2.6

18.23.3.10 ARINC 429

Table 18-23: ARINC 429 trigger

Legacy command	Replaced by	Comment
TRIGger:SBSW:ARINc:FRAMe<fr>:FLD<fl>:IMAX TRIGger:SBSW:ARINc:FRAMe<fr>:FLD<fl>:IMIN TRIGger:SBSW:ARINc:FRAMe<fr>:FLD<fl>:IOPera-tor TRIGger:SBSW:ARINc:IMAX TRIGger:SBSW:ARINc:IMIN TRIGger:SBSW:ARINc:IOPerator		Not supported

Table 18-24: ARINC 429 decode results

Legacy command	Replaced by	Comment
SBUS<sb>:ARINc:WORD<w>:COUNt?	SBUS<sb>:ARINc:WCOunt?	Replaced since FW 2.6

18.23.3.11 SpaceWire

Table 18-25: SpaceWire configuration

Legacy command	Replaced by	Comment
SBUS<sb>:SWIRe:FILTer:IMAX SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:FLD<fl>:IMAX SBUS<sb>:SWIRe:FILTer:IMIN SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:FLD<fl>:IMIN SBUS<sb>:SWIRe:FILTer:IOPerator SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:FLD<fl>:IOPer-ator	-	No longer needed since FW 2.7

18.23.3.12 MIL-1553

Table 18-26: MIL-1553 decode results

Legacy command	Replaced by	Comment
SBUS<sb>:MILStd:WORD<w>:COUNt	-	No longer needed since FW 2.6

18.23.3.13 SPMI

Table 18-27: SPMI decode results

Legacy command	Replaced by	Comment
SBUS<sb>:SPMI:FRAMe<fr>:FDCount?	SBUS<sb>:SPMI:FRAMe<fr>:FLDCount?	Replaced since FW 2.6

18.23.3.14 RFFE

Table 18-28: RFFE configuration

Legacy command	Replaced by	Comment
SBUS<sb>:RFFE:CLOCk:POLarity SBUS<sb>:RFFE:DATA:POLarity	-	No longer needed since FW 2.6

Table 18-29: RFFE decode results

Legacy command	Replaced by	Comment
SBUS<sb>:RFFE:SEQuence<se>:ADDRess SBUS<sb>:RFFE:SEQuence<se>:BCOunt SBUS<sb>:RFFE:SEQuence<se>:BYTE<o>:FVALue SBUS<sb>:RFFE:SEQuence<se>:BYTE<o>:NAME SBUS<sb>:RFFE:SEQuence<se>:BYTE<o>:STATe SBUS<sb>:RFFE:SEQuence<se>:BYTE<o>:VALue SBUS<sb>:RFFE:SEQuence<se>:DATA SBUS<sb>:RFFE:SEQuence<se>:RBTRate SBUS<sb>:RFFE:SEQuence<se>:SADD SBUS<sb>:RFFE:SEQuence<se>:STARt SBUS<sb>:RFFE:SEQuence<se>:STATe SBUS<sb>:RFFE:SEQuence<se>:STOP SBUS<sb>:RFFE:SEQuence<se>:TYPE SBUS<sb>:RFFE:SEQuence<se>:WBTRate SBUS<sb>:RFFE:SEQuence<se>:WCOunt	-	No longer needed since FW 2.6
SBUS<sb>:RFFE:FRAMe<fr>:BC? SBUS<sb>:RFFE:FRAMe<fr>:FDCount? SBUS<sb>:RFFE:FRAMe<fr>:FLD<fl>:LABel? SBUS<sb>:RFFE:FRAMe<fr>:RBRate? SBUS<sb>:RFFE:FRAMe<fr>:SA? SBUS<sb>:RFFE:FRAMe<fr>:STATus? SBUS<sb>:RFFE:FRAMe<fr>:WBRate? SBUS<sb>:RFFE:SEQuence<se>:SYMBol SBUS<sb>:RFFE:FRAMe<fr>:PADZero SBUS<sb>:RFFE:FRAMe<fr>:PADone SBUS<sb>:RFFE:FRAMe<fr>:PCTRl	SBUS<sb>:RFFE:FRAMe<fr>:BCOunt? SBUS<sb>:RFFE:FRAMe<fr>:FLDCount? SBUS<sb>:RFFE:FRAMe<fr>:FLD<fl>:NAME? SBUS<sb>:RFFE:FRAMe<fr>:RBTRate? SBUS<sb>:RFFE:FRAMe<fr>:SADD? SBUS<sb>:RFFE:FRAMe<fr>:STATe? SBUS<sb>:RFFE:FRAMe<fr>:WBTRate? SBUS<sb>:RFFE:FRAMe<fr>:SYMBol? SBUS<sb>:RFFE:FRAMe<fr>:PADZero? SBUS<sb>:RFFE:FRAMe<fr>:PADone? SBUS<sb>:RFFE:FRAMe<fr>:PCTRl?	Replaced since FW 2.6

18.23.3.15 Manchester

Table 18-30: Manchester decode results

Legacy command	Replaced by	Comment
SBUS<sb>:MANCh:FRAMe<fr>:RES1? SBUS<sb>:MANCh:FRAMe<fr>:RES2? SBUS<sb>:MANCh:FRAMe<fr>:RES3?	SBUS<sb>:MANCh:FRAMe<fr>:CONE? SBUS<sb>:MANCh:FRAMe<fr>:CTWO? SBUS<sb>:MANCh:FRAMe<fr>:CTHRee?	Replaced since FW 2.9

18.23.3.16 NRZ clocked

Table 18-31: NRZ clocked decode results

Legacy command	Replaced by	Comment
SBUS<sb>:NRZC:FRAMe<fr>:RES1? SBUS<sb>:NRZC:FRAMe<fr>:RES2? SBUS<sb>:NRZC:FRAMe<fr>:RES3?	SBUS<sb>:NRZC:FRAMe<fr>:CONE? SBUS<sb>:NRZC:FRAMe<fr>:CTWO? SBUS<sb>:NRZC:FRAMe<fr>:CTHRee?	Replaced since FW 2.9

18.23.3.17 NRZ unclocked

Table 18-32: NRZ unclocked decode results

Legacy command	Replaced by	Comment
SBUS<sb>:NRZU:FRAMe<fr>:RES1? SBUS<sb>:NRZU:FRAMe<fr>:RES2? SBUS<sb>:NRZU:FRAMe<fr>:RES3?	SBUS<sb>:NRZU:FRAMe<fr>:CONE? SBUS<sb>:NRZU:FRAMe<fr>:CTWO? SBUS<sb>:NRZU:FRAMe<fr>:CTHRee?	Replaced since FW 2.9

18.23.3.18 10BASE-T1S

Table 18-33: 10BASE-T1S configuration

Legacy command	Replaced by	Comment
SBUS<sb>:TNOS:HYSTeresis	-	No longer needed since FW 2.6

Table 18-34: 10BASE-T1S decode results

Legacy command	Replaced by	Comment
SBUS<sb>:TNOS:FRAMe<fr>:COUNt SBUS<sb>:TNOS:FRAMe<fr>:BYTE<o>:COUNt	-	No longer needed since FW 2.6
SBUS<sb>:TNOS:FRAMe<fr>:BCOunt SBUS<sb>:TNOS:FRAMe<fr>:BYTE<o>:FVALue SBUS<sb>:TNOS:FRAMe<fr>:BYTE<o>:LABel SBUS<sb>:TNOS:FRAMe<fr>:BYTE<o>:STATe SBUS<sb>:TNOS:FRAMe<fr>:BYTE<o>:VALue	SBUS<sb>:TNOS:FRAMe<fr>:FLDCount? SBUS<sb>:TNOS:FRAMe<fr>:FLD<fl>:FVALue? SBUS<sb>:TNOS:FRAMe<fr>:FLD<fl>:LABel? SBUS<sb>:TNOS:FRAMe<fr>:FLD<fl>:STATe? SBUS<sb>:TNOS:FRAMe<fr>:FLD<fl>:VALue?	Replaced since FW 2.6

18.23.3.19 100BASE-T1

Table 18-35: 100BASE-T1 decode results

Legacy command	Replaced by	Comment
SBUS<sb>:HBTO:FRAMe<fr>:BYTE<o>:COUNt SBUS<sb>:HBTO:FRAMe<fr>:COUNt	-	No longer needed since FW 2.6
SBUS<sb>:HBTO:FRAMe<fr>:BCOunt? SBUS<sb>:HBTO:FRAMe<fr>:BYTE<o>:FVALue SBUS<sb>:HBTO:FRAMe<fr>:BYTE<o>:LABel SBUS<sb>:HBTO:FRAMe<fr>:BYTE<o>:STATe SBUS<sb>:HBTO:FRAMe<fr>:BYTE<o>:VALue	SBUS<sb>:CAN:FRAMe<fr>:FLDCount? SBUS<sb>:HBTO:FRAMe<fr>:FLD<fl>:FVALue? SBUS<sb>:HBTO:FRAMe<fr>:FLD<fl>:LABel? SBUS<sb>:HBTO:FRAMe<fr>:FLD<fl>:STATe? SBUS<sb>:HBTO:FRAMe<fr>:FLD<fl>:VALue?	Replaced since FW 2.6

18.23.3.20 1000BASE-T1

Table 18-36: 1000BASE-T1 configuration

Legacy command	Replaced by	Comment
SBUS<sb>:TBTO:FRAMe<fr>:COUNt	SBUS<sb>:TBTO:FCOunt?	Replaced since FW 2.8
SBUS<sb>:TBTO:SYMRate SBUS<sb>:TBTO:WNDSize	-	Obsolete since FW 2.8

19 Maintenance and support

The instrument does not need periodic maintenance. Only the cleaning of the instrument is essential.

We advise to check the nominal data from time to time.

To protect the front panel and to transport the instrument to another workplace safely and easily, various accessories are provided. Refer to the specifications document for available covers and cases and their order numbers.

19.1 Cleaning

How to clean the product is described in "Cleaning the product" on page 30.

Do not use any liquids for cleaning. Cleaning agents, solvents, acids and bases can damage the front panel labeling, plastic parts and display.

19.2 Changing fuses

If the product does not start, it is possible that a blown fuse is the cause.

The product is protected by 2 fuses of type Size 5x20 mm, 250V~, T5H (slow-blow), IEC 60127-2 (order no. 0099.6735.00), order number 0099.6735.00.

1. **WARNING!** The fuse is part of the AC power supply. Handling the fuse while the power is on can lead to electric shock.

   Before changing the fuse:

   a) Set the switch on the power supply to position [0].
   b) Disconnect the product from the power source.

2. The fuse slot is on the rear panel between the mains switch and AC power supply connector.
   Pull out the fuse holder.
3. Check the condition of the fuse.
4. Replace the blown fuse. Only use a fuse of the specified type.
5. Insert the fuse holder into its slot until it latches.

19.3 Contacting customer support

Technical support – where and when you need it

For quick, expert help with any Rohde & Schwarz product, contact our customer support center. A team of highly qualified engineers provides support and works with you to find a solution to your query on any aspect of the operation, programming or applications of Rohde & Schwarz products.

Contact information

Contact our customer support center at www.rohde-schwarz.com/support, or follow this QR code:

Figure 19-1: QR code to the Rohde & Schwarz support page

19.4 Information for technical support

If you encounter problems that you cannot solve yourself, contact your Rohde & Schwarz support center, see Contacting customer support.

The support center finds solutions more quickly and efficiently, if you provide them with information on the instrument and an error description. To create, collect and save the required information, you can create a service report.

The service report is a ZIP file with a complete bug report, all relevant setup information, reporting and log files, alignment files, and the instrument configuration.

1. Open the "Settings" > "Maintenance" dialog.
2. Select the "Service" tab.
3. Tap "Create report".
   If a USB flash drive is connected, the report is saved on the USB flash drive. Otherwise, the report is saved in the user data folder `/home/storage/userData`.
4. Create a support ticket that describes the problem, and attach the report file.

See also: Section 5.7.5, "Service", on page 119.

19.5 Data security

If you have to send the instrument to the service, or if the instrument is used in a secured environment, consider the document "Instrument Security Procedures" that is delivered on the MXO 5 webpage.

19.6 Transporting

Lifting and carrying

See: "Lifting and carrying the instrument" on page 26

Packing

Use the original packaging material. It consists of antistatic wrap for electrostatic protection and packing material designed for the product.

If you do not have the original packaging, use similar materials that provide the same level of protection. You can also contact your local Rohde & Schwarz service center for advice.

Securing

When moving the MXO 5 in a vehicle or using transporting equipment, make sure that the MXO 5 is properly secured. Only use items intended for securing objects.

Transport altitude

Unless otherwise specified in the specifications document, the maximum transport altitude without pressure compensation is 4500 m above sea level.

19.7 Storage

Protect the product against dust. Ensure that the environmental conditions, e.g. temperature range and climatic load, meet the values specified in the specifications document.

19.8 Disposal

Rohde & Schwarz is committed to making careful, ecologically sound use of natural resources and minimizing the environmental footprint of our products. Help us by disposing of waste in a way that causes minimum environmental impact.

Disposing of electrical and electronic equipment

A product that is labeled as follows cannot be disposed of in normal household waste after it has come to the end of its life. Even disposal via the municipal collection points for waste electrical and electronic equipment is not permitted.

Figure 19-2: Labeling in line with EU directive WEEE

Rohde & Schwarz has developed a disposal concept for the eco-friendly disposal or recycling of waste material. As a manufacturer, Rohde & Schwarz completely fulfills its obligation to take back and dispose of electrical and electronic waste. Contact your local service representative to dispose of the product.

List of commands

*CAL?....1057
*CLS....1057
*IDN?....1057
*OPC....1058
*OPT?....1058
*RCL....1058
*RST....1058
*SAV....1059
*SRE....1059
*STB?....1059
*TRG....1059
*TST?....1060
*WAI....1060
ACQuire:AVAilable?....1104
ACQuire:AVERage?....1104
ACQuire:COUNt....1105
ACQuire:CURRent?....1105
ACQuire:DRESolution?....2277
ACQuire:HISTory:CURRent....1215
ACQuire:HISTory:ISODate?....1215
ACQuire:HISTory:PLAY....1215
ACQuire:HISTory:REPLay....1216
ACQuire:HISTory:STARt....1216
ACQuire:HISTory:STOP....1216
ACQuire:HISTory:TPACq....1216
ACQuire:HISTory:TSABsolute?....1217
ACQuire:HISTory:TSDate?....1217
ACQuire:HISTory:TSRelative?....1217
ACQuire:HISTory:TSRReference?....1218
ACQuire:HISTory[:STATe]....1218
ACQuire:INTerpolate....1105
ACQuire:POINts:ARATe?....1106
ACQuire:POINts:DVALue?....2278
ACQuire:POINts:MAXimum....1106
ACQuire:POINts:MODE....1106
ACQuire:POINts[:VALue]....1106
ACQuire:POMemory?....1107
ACQuire:RESolution?....1107
ACQuire:RLReal?....1108
ACQuire:ROLLmode:OSCapture....1103
ACQuire:ROLLmode:POINts?....1103
ACQuire:SEGMented:MAX....1140
ACQuire:SEGMented:STATe....1140
ACQuire:SRATe:MINimum....1108
ACQuire:SRATe:MODE....1108
ACQuire:SRATe[:VALue]....1108
ACQuire:SRReal?....1109

ACQuire:TYPE 1109
AUToscale 1100
CALCulate:MATH<m>:DATA:HEADer? 1257
CALCulate:MATH<m>:DATA:STYPe? 1258
CALCulate:MATH<m>:DATA[:VALues]? 1258
CALCulate:MATH<m>:ENVSelection 1214
CALCulate:MATH<m>:LABel 1213
CALCulate:MATH<m>:STATe 1211
CALCulate:MATH<m>:UNIT 1213
CALCulate:MATH<m>:VERTical:OFFSet 1214
CALCulate:MATH<m>:VERTical:SCALe:MODE 1214
CALCulate:MATH<m>:VERTical:SCALe[:VALue] 1213
CALCulate:MATH<m>[:EXPRession][:DEFine] 1211
CALCulate:SPECtrum<sp>:COUPling:FROM 1310
CALCulate:SPECtrum<sp>:COUPling:MODE 1310
CALCulate:SPECtrum<sp>:COUPling[:ENABle] 1310
CALCulate:SPECtrum<sp>:FREQuency:BANDwidth[:RESolution]:ADJusted? 1311
CALCulate:SPECtrum<sp>:FREQuency:BANDwidth[:RESolution]:AUTO 1311
CALCulate:SPECtrum<sp>:FREQuency:BANDwidth[:RESolution]:RATio 1311
CALCulate:SPECtrum<sp>:FREQuency:BANDwidth[:RESolution][:VALue] 1312
CALCulate:SPECtrum<sp>:FREQuency:CENTer 1312
CALCulate:SPECtrum<sp>:FREQuency:SCALe 1312
CALCulate:SPECtrum<sp>:FREQuency:SPAN 1313
CALCulate:SPECtrum<sp>:FREQuency:STARt 1313
CALCulate:SPECtrum<sp>:FREQuency:STOP 1313
CALCulate:SPECtrum<sp>:FREQuency:WINDow:TYPE 1314
CALCulate:SPECtrum<sp>:GATE:POSition 1319
CALCulate:SPECtrum<sp>:GATE:STARt 1319
CALCulate:SPECtrum<sp>:GATE:STOP 1320
CALCulate:SPECtrum<sp>:GATE:WIDTh 1320
CALCulate:SPECtrum<sp>:MAGNitude:LEVel 1315
CALCulate:SPECtrum<sp>:MAGNitude:RANGe 1315
CALCulate:SPECtrum<sp>:MAGNitude:SCALe 1315
CALCulate:SPECtrum<sp>:OVERlap:ENABle 1325
CALCulate:SPECtrum<sp>:OVERlap:FACTor:ADJusted? 1325
CALCulate:SPECtrum<sp>:OVERlap:FACTor:VALue 1325
CALCulate:SPECtrum<sp>:OVERlap:FCOunt:ADJusted? 1326
CALCulate:SPECtrum<sp>:OVERlap:FCOunt:LIMit:ENABle 1326
CALCulate:SPECtrum<sp>:OVERlap:FCOunt:VALue 1326
CALCulate:SPECtrum<sp>:OVERlap:FWIDth? 1327
CALCulate:SPECtrum<sp>:PEXCursion 1317
CALCulate:SPECtrum<sp>:PLISt:COUNt? 1321
CALCulate:SPECtrum<sp>:PLISt:LABel:BORDer 1091
CALCulate:SPECtrum<sp>:PLISt:LABel:FREQuency[:STATe] 1323
CALCulate:SPECtrum<sp>:PLISt:LABel:INVert 1324
CALCulate:SPECtrum<sp>:PLISt:LABel:MAXCount 1323
CALCulate:SPECtrum<sp>:PLISt:LABel:MAXCount 1324
CALCulate:SPECtrum<sp>:PLISt:LABel[:STATe] 1324
CALCulate:SPECtrum<sp>:PLISt:MAXCount 1321
CALCulate:SPECtrum<sp>:PLISt:MODE 1321

CALCulate:SPECtrum<sp>:PLISt:RESult[:VALue]? 1322
CALCulate:SPECtrum<sp>:PLISt:SORT:COLumn 1323
CALCulate:SPECtrum<sp>:PLISt:SORT:ORDer 1323
CALCulate:SPECtrum<sp>:PLISt:SOURce 1322
CALCulate:SPECtrum<sp>:PLISt:SPOW 1322
CALCulate:SPECtrum<sp>:PLISt[:STATe] 1321
CALCulate:SPECtrum<sp>:PRESet 1315
CALCulate:SPECtrum<sp>:SOURce 1316
CALCulate:SPECtrum<sp>:STATe 1316
CALCulate:SPECtrum<sp>:THReshold 1317
CALCulate:SPECtrum<sp>:WAVeform:AVERage:COUNt 1317
CALCulate:SPECtrum<sp>:WAVeform:AVERage:DATA:HEADer? 1258
CALCulate:SPECtrum<sp>:WAVeform:AVERage:DATA[:VALues]? 1259
CALCulate:SPECtrum<sp>:WAVeform:AVERage:ENABle 1318
CALCulate:SPECtrum<sp>:WAVeform:MAXimum:DATA:HEADer? 1258
CALCulate:SPECtrum<sp>:WAVeform:MAXimum:DATA[:VALues]? 1259
CALCulate:SPECtrum<sp>:WAVeform:MAXimum:ENABle 1318
CALCulate:SPECtrum<sp>:WAVeform:MINimum:DATA:HEADer? 1258
CALCulate:SPECtrum<sp>:WAVeform:MINimum:DATA[:VALues]? 1259
CALCulate:SPECtrum<sp>:WAVeform:MINimum:ENABle 1318
CALCulate:SPECtrum<sp>:WAVeform:NORMal:DATA:FRAMe<fr>[:VALues]? 1259
CALCulate:SPECtrum<sp>:WAVeform:NORMal:DATA:HEADer? 1258
CALCulate:SPECtrum<sp>:WAVeform:NORMal:DATA[:VALues]? 1259
CALCulate:SPECtrum<sp>:WAVeform:NORMal[:ENABle] 1318
CALibration:DATE? 1098
CALibration:RESult? 1099
CALibration:TIME? 1098
CALibration[:ALL] 1098
CHANnel<ch>:ADCState:STATus:NCLipping:CONDition? 2306
CHANnel<ch>:ADCState:STATus:NCLipping:ENABle 2308
CHANnel<ch>:ADCState:STATus:NCLipping:NTRansition 2308
CHANnel<ch>:ADCState:STATus:NCLipping:PTRansition 2309
CHANnel<ch>:ADCState:STATus:NCLipping[:EVENt]? 2307
CHANnel<ch>:ADCState:STATus:PCLipping:CONDition? 2306
CHANnel<ch>:ADCState:STATus:PCLipping:ENABle 2308
CHANnel<ch>:ADCState:STATus:PCLipping:NTRansition 2308
CHANnel<ch>:ADCState:STATus:PCLipping:PTRansition 2309
CHANnel<ch>:ADCState:STATus:PCLipping[:EVENt]? 2307
CHANnel<ch>:BANDwidth 1113
CHANnel<ch>:COUPling 1112
CHANnel<ch>:DATA:HEADer? 1254
CHANnel<ch>:DATA[:VALues]? 1255
CHANnel<ch>:EATScale 1114
CHANnel<ch>:EATTenuation 1114
CHANnel<ch>:IMPedance 1115
CHANnel<ch>:INVert 1112
CHANnel<ch>:OFFSet 1111
CHANnel<ch>:OVERload:STATus:CONDition? 2306
CHANnel<ch>:OVERload:STATus:ENABle 2308
CHANnel<ch>:OVERload:STATus:NTRansition 2308

CHANnel<ch>:OVERload:STATus:PTRansition....2309
CHANnel<ch>:OVERload:STATus[:EVENt]....2307
CHANnel<ch>:POSition....1111
CHANnel<ch>:PPSupply:STATus:CONDition?....2306
CHANnel<ch>:PPSupply:STATus:ENABle....2308
CHANnel<ch>:PPSupply:STATus:NTRansition....2308
CHANnel<ch>:PPSupply:STATus:PTRansition....2309
CHANnel<ch>:PPSupply:STATus[:EVENt]....2307
CHANnel<ch>:RANGe....1110
CHANnel<ch>:SCALe....1110
CHANnel<ch>:SKEW:TIME....1113
CHANnel<ch>:STATe....1110
CHANnel<ch>:WARNoverload:STATus:CONDition?....2306
CHANnel<ch>:WARNoverload:STATus:ENABle....2308
CHANnel<ch>:WARNoverload:STATus:NTRansition....2308
CHANnel<ch>:WARNoverload:STATus:PTRansition....2309
CHANnel<ch>:WARNoverload:STATus[:EVENt]?....2307
CURSor<cu>:AOFF....1295
CURSor<cu>:COUNt?....1296
CURSor<cu>:DISPlay:VALues....1303
CURSor<cu>:FFT:SETCenter....1307
CURSor<cu>:FFT:TOCenter....1307
CURSor<cu>:FUNCtion....1296
CURSor<cu>:HORizontal<n>:LABel....1302
CURSor<cu>:LABel....1302
CURSor<cu>:MAXimum:LEFT....1307
CURSor<cu>:MAXimum:NEXT....1308
CURSor<cu>:MAXimum:RIGHt....1307
CURSor<cu>:MAXimum[:PEAK]....1307
CURSor<cu>:PEXCursion....1308
CURSor<cu>:SIAD....1303
CURSor<cu>:SMODe....1297
CURSor<cu>:SOURce....1297
CURSor<cu>:SSCReen....1301
CURSor<cu>:SSOurce....1299
CURSor<cu>:STATe....1296
CURSor<cu>:STYLe....1308
CURSor<cu>:TRACking[:STATe]....1302
CURSor<cu>:USSource....1299
CURSor<cu>:VERTical<n>:LABel....1303
CURSor<cu>:X1ENvelope....1304
CURSor<cu>:X1Position....1299
CURSor<cu>:X2ENvelope....1304
CURSor<cu>:X2Position....1300
CURSor<cu>:XCOupling....1304
CURSor<cu>:XDELta:INVerse?....1305
CURSor<cu>:XDELta[:VALue]?....1305
CURSor<cu>:Y1Position....1300
CURSor<cu>:Y2Position....1301
CURSor<cu>:YCOupling....1304

CURSor<cu>:YDELta:SLOPe?....1306
CURSor<cu>:YDELta[:VALue]?....1306
DIGital<m>:DATA:HEADer?....1260
DIGital<m>:DATA[:VALues]?....1260
DIGital<m>:HYSTeresis....2266
DIGital<m>:LABel....2267
DIGital<m>:PROBe<ch>[:ENABle]?....2266
DIGital<m>:SIZE....2267
DIGital<m>:SKEW....2267
DIGital<m>:STATe....2268
DIGital<m>:TECHnology....2268
DIGital<m>:THCoupling....2268
DIGital<m>:THReshold....2269
DISPlay:ANNotation:ARRow<m>:CLEar....1080
DISPlay:ANNotation:ARRow<m>:COLor....1080
DISPlay:ANNotation:ARRow<m>:DIRection....1080
DISPlay:ANNotation:ARRow<m>:HEIGht....1081
DISPlay:ANNotation:ARRow<m>:HORizontal:POSition....1081
DISPlay:ANNotation:ARRow<m>:REMove....1081
DISPlay:ANNotation:ARRow<m>:VERTical:POSition....1082
DISPlay:ANNotation:ARRow<m>:WIDTh....1082
DISPlay:ANNotation:ARRow<m>[:VALue]....1082
DISPlay:ANNotation:CLEar....1076
DISPlay:ANNotation:COLor<m>:CATalog?....1076
DISPlay:ANNotation:PLINe<m>:CLEar....1085
DISPlay:ANNotation:PLINe<m>:COLor....1085
DISPlay:ANNotation:PLINe<m>:EXTend....1085
DISPlay:ANNotation:PLINe<m>:REMove....1086
DISPlay:ANNotation:PLINe<m>[:VALue]....1086
DISPlay:ANNotation:RECTangle<m>:CLEar....1077
DISPlay:ANNotation:RECTangle<m>:COLor....1077
DISPlay:ANNotation:RECTangle<m>:HEIGht....1078
DISPlay:ANNotation:RECTangle<m>:HORizontal:POSition....1078
DISPlay:ANNotation:RECTangle<m>:REMove....1078
DISPlay:ANNotation:RECTangle<m>:VERTical:POSition....1079
DISPlay:ANNotation:RECTangle<m>:WIDTh....1079
DISPlay:ANNotation:RECTangle<m>[:VALue]....1079
DISPlay:ANNotation:TEXT<m>:CLEar....1083
DISPlay:ANNotation:TEXT<m>:COLor....1083
DISPlay:ANNotation:TEXT<m>:FONTsize....1083
DISPlay:ANNotation:TEXT<m>:HORizontal:POSition....1084
DISPlay:ANNotation:TEXT<m>:REMove....1084
DISPlay:ANNotation:TEXT<m>:VERTical:POSition....1084
DISPlay:ANNotation:TEXT<m>[:VALue]....1084
DISPlay:ANNotation:TRANsparency....1077
DISPlay:BACKlight:DIMMing....1094
DISPlay:BACKlight[:BRIGtness]....1094
DISPlay:CLR....1094
DISPlay:COLor:SIGNal:ASSign....1087
DISPlay:COLor:SIGNal:CATalog?....1087

DISPlay:COLor:SIGNal:COLor ... 1087
DISPlay:COLor:SIGNal:USE ... 1088
DISPlay:DIAGram:CROSshair ... 1088
DISPlay:DIAGram:FINegrid ... 1088
DISPlay:DIAGram:GRID ... 1089
DISPlay:DIAGram:LABels ... 1089
DISPlay:DIAGram:STYLe ... 1093
DISPlay:DIAGram:XFIXed ... 1089
DISPlay:DIAGram:XPDivlabel ... 1089
DISPlay:DIAGram:YFIXed ... 1090
DISPlay:DIALog:FONTsize ... 1090
DISPlay:DIALog:TRANsparency ... 1090
DISPlay:INTensity ... 1093
DISPlay:MEASurements:LEVels ... 1091
DISPlay:PERSistence:INFinite ... 1092
DISPlay:PERSistence:RESet ... 1092
DISPlay:PERSistence:TIME ... 1092
DISPlay:PERSistence[:STATe] ... 1092
DISPlay:RESult:FONTsize ... 1090
DISPlay:SIGNal:LABel ... 1112
DISPlay:TOOLbar:COUNt? ... 1073
DISPlay:TOOLbar:DESelect ... 1074
DISPlay:TOOLbar:RESTore ... 1074
EXPort:HISTogram<m>:DATA:HEADer? ... 1262
EXPort:HISTogram<m>:DATA[:VALues]? ... 1263
EXPort:HISTogram<m>:NAME ... 1245
EXPort:HISTogram<m>:NORMalize ... 1245
EXPort:HISTogram<m>:SAVE ... 1246
EXPort:HMEasurement<m>:DATA:HEADer? ... 1262
EXPort:HMEasurement<m>:DATA[:VALues]? ... 1263
EXPort:HMEasurement<m>:NAME ... 1245
EXPort:HMEasurement<m>:NORMalize ... 1245
EXPort:HMEasurement<m>:SAVE ... 1246
EXPort:RESult:AUTonaming:NAME ... 1248
EXPort:RESult:AUTonaming:PATH ... 1248
EXPort:RESult:AUTonaming:TYPE ... 1249
EXPort:RESult:NAME ... 1249
EXPort:RESult:SAVE ... 1249
EXPort:RESult:SELect:CURSor ... 1249
EXPort:RESult:SELect:FRA:MARGin ... 1364
EXPort:RESult:SELect:FRA:MARKer ... 1364
EXPort:RESult:SELect:FRA:RESult ... 1364
EXPort:RESult:SELect:MEASurement ... 1249
EXPort:RESult:SELect:P3PHase<m> ... 1433
EXPort:RESult:SELect:PLISt ... 1250
EXPort:RESult:SELect:POWer<m> ... 1368
EXPort:WAVeform:ABORt ... 1240
EXPort:WAVeform:AUTonaming:NAME ... 1240
EXPort:WAVeform:AUTonaming:PATH ... 1240
EXPort:WAVeform:AUTonaming:TYPE ... 1241

EXPort:WAVeform:CURSorset....1241
EXPort:WAVeform:DATA[:VALues]?....1263
EXPort:WAVeform:GATE....1241
EXPort:WAVeform:NAME....1241
EXPort:WAVeform:SAVE....1242
EXPort:WAVeform:SCOPe....1242
EXPort:WAVeform:SOURce....1243
EXPort:WAVeform:STARt....1244
EXPort:WAVeform:STOP....1245
EYE<e>:DISPlay:PERSistence:INFinite....1480
EYE<e>:DISPlay:PERSistence:RESet....1481
EYE<e>:DISPlay:PERSistence:STATe....1481
EYE<e>:DISPlay:PERSistence:TIME....1481
EYE<e>:FILTer:BPATtern:MODE....1487
EYE<e>:FILTer:BPATtern:NPRBits....1487
EYE<e>:FILTer:BPATtern:SEQuence....1487
EYE<e>:FILTer:RFLSet....1488
EYE<e>:FILTer:STATe....1488
EYE<e>:HORizontal:ABSolute:POSition....1484
EYE<e>:HORizontal:ABSolute:RANGe....1484
EYE<e>:HORizontal:UINTerval:POSition....1484
EYE<e>:HORizontal:UINTerval:RANGe....1484
EYE<e>:HORizontal:UNIT....1485
EYE<e>:MSLices....1482
EYE<e>:QUALify:GATE....1482
EYE<e>:SAMTime....1482
EYE<e>:SOURce....1482
EYE<e>:STATe....1483
EYE<e>:TREFerence....1483
EYE<e>:VERTical:COUPle....1485
EYE<e>:VERTical:OFFSet....1485
EYE<e>:VERTical:POSition....1486
EYE<e>:VERTical:SCALe....1486
FORMat:BORDer....1061
FORMat:BPATtern....1062
FORMat[:DATA]....1060
FRANalysis:AMPLitude:ENABle....1352
FRANalysis:AMPLitude:MODE....1348
FRANalysis:AMPLitude:OFFSet....1352
FRANalysis:AMPLitude:PROFile:APOint....1350
FRANalysis:AMPLitude:PROFile:COUNt....1350
FRANalysis:AMPLitude:PROFile:MODE....1350
FRANalysis:AMPLitude:PROFile:POINt<m>:AMPLitude....1350
FRANalysis:AMPLitude:PROFile:POINt<m>:FREQuency....1350
FRANalysis:AMPLitude:PROFile:POINt<m>:REMove....1351
FRANalysis:AMPLitude:PROFile:SORT....1351
FRANalysis:AMPLitude:SCALe....1352
FRANalysis:AUToscale....1342
FRANalysis:AUToscale:RESult[:ENABle]....1342
FRANalysis:CALibration:CALibration....1355

FRANalysis:CALibration:RESult? 1355
FRANalysis:CALibration:STATe 1355
FRANalysis:ENABle 1342
FRANalysis:FREQuency:DATA? 1365
FRANalysis:FREQuency:MODE 1343
FRANalysis:FREQuency:STARt 1343
FRANalysis:FREQuency:STOP 1343
FRANalysis:GAIN:DATA? 1365
FRANalysis:GAIN:ENABle 1352
FRANalysis:GAIN:OFFSet 1352
FRANalysis:GAIN:SCALe 1353
FRANalysis:GENerator:AMPLitude 1349
FRANalysis:GENerator:LOAD 1349
FRANalysis:GENerator[:CHANnel] 1349
FRANalysis:HDEFinition[:ENABle] 1343
FRANalysis:IMPedance:DATA? 1365
FRANalysis:IMPedance:ENABle 1353
FRANalysis:IMPedance:SCALe 1353
FRANalysis:IMPedance:STARt 1353
FRANalysis:IMPedance:STOP 1353
FRANalysis:IMPedance[:MODE] 1344
FRANalysis:INPut[:SOURce] 1344
FRANalysis:MARGin:GAIN:FREQuency? 1356
FRANalysis:MARGin:GAIN:VALue? 1356
FRANalysis:MARGin:PHASe:FREQuency? 1356
FRANalysis:MARGin:PHASe:VALue? 1356
FRANalysis:MARGin:STATe 1356
FRANalysis:MARKer<m>:DIFFerence:FREQuency? 1357
FRANalysis:MARKer<m>:DIFFerence:GAIN? 1358
FRANalysis:MARKer<m>:DIFFerence:IMPedance? 1358
FRANalysis:MARKer<m>:DIFFerence:PHASe? 1358
FRANalysis:MARKer<m>:DIFFerence:REFerence<rc>? 1363
FRANalysis:MARKer<m>:FREQuency 1357
FRANalysis:MARKer<m>:GAIN? 1357
FRANalysis:MARKer<m>:IMPedance? 1357
FRANalysis:MARKer<m>:INDex? 1358
FRANalysis:MARKer<m>:PHASe? 1357
FRANalysis:MARKer<m>:REFerence<rc>? 1363
FRANalysis:MARKer<m>:SSCReen 1359
FRANalysis:MARKer<m>:STATe 1359
FRANalysis:MEASurement:DELay:MODE 1344
FRANalysis:MEASurement:DELay:PERiod[:NUMBer] 1345
FRANalysis:MEASurement:DELay:STATe 1344
FRANalysis:MEASurement:DELay[:TIME] 1345
FRANalysis:MEASurement:POINt[:DISPlay] 1345
FRANalysis:MEASurement:RBW 1346
FRANalysis:MODE 1346
FRANalysis:OUTPut[:SOURce] 1346
FRANalysis:PHASe:DATA? 1366
FRANalysis:PHASe:ENABle 1354

FRANalysis:PHASe:MAXimum....1346
FRANalysis:PHASe:OFFSet....1354
FRANalysis:PHASe:SCALe....1354
FRANalysis:POINts:LOGarithmic....1347
FRANalysis:POINts:MODE....1347
FRANalysis:POINts:TOTal....1347
FRANalysis:REFCurve<rc>:CLEar....1360
FRANalysis:REFCurve<rc>:DATA?....1360
FRANalysis:REFCurve<rc>:ENABle....1360
FRANalysis:REFCurve<rc>:NAME....1361
FRANalysis:REFCurve<rc>:OFFSet....1361
FRANalysis:REFCurve<rc>:OPEN....1361
FRANalysis:REFCurve<rc>:SAVE....1362
FRANalysis:REFCurve<rc>:SCALe....1362
FRANalysis:REFCurve<rc>:SOURce....1362
FRANalysis:REFCurve<rc>:TOORiginal....1362
FRANalysis:REFCurve<rc>:UPDate....1363
FRANalysis:REFCurve<rc>:VMODe....1363
FRANalysis:REPeat....1348
FRANalysis:RESet....1348
FRANalysis:RESult:STATe....1359
FRANalysis:STATe....1348
GATE<g>:ABSolute:STARt....1193
GATE<g>:ABSolute:STOP....1193
GATE<g>:CURSor....1192
GATE<g>:ENABle....1191
GATE<g>:GCOupling....1191
GATE<g>:MODE....1192
GATE<g>:RELative:STARt....1193
GATE<g>:RELative:STOP....1193
GATE<g>:SHOW....1193
GATE<g>:ZDIagram....1192
GENerator:RCL....1239
GENerator:SAV....1239
GENerator:SYNC[:COMBination]....2297
HCOPy:DATA?....1253
HCOPy:DESTination<m>....1250
HCOPy:DEVice<m>:INVerse....1251
HCOPy:DEVice<m>:LANGuage....1251
HCOPy:IMMediate<m>....1252
HCOPy:IMMediate<m>:NEXT....1252
HCOPy:ISBA....1252
HCOPy:SSD....1253
HCOPy:WBKG....1253
HDEFinition:BFTYpe....1141
HDEFinition:BWIDth....1141
HDEFinition:RESolution?....1141
HDEFinition:STATe....1141
HISTogram<m>:ADD....1227
HISTogram<m>:COUNt?....1227

HISTogram<m>:ENABle....1227
HISTogram<m>:MODE....1228
HISTogram<m>:REMove....1228
HISTogram<m>:RESet....1228
HISTogram<m>:SOURce....1228
HISTogram<m>:WINDow:ENABle....1229
HISTogram<m>:WINDow:HORizontal:ABSolute:POSition....1230
HISTogram<m>:WINDow:HORizontal:ABSolute:SPAN....1230
HISTogram<m>:WINDow:HORizontal:ABSolute:STARt....1230
HISTogram<m>:WINDow:HORizontal:ABSolute:STOP....1230
HISTogram<m>:WINDow:HORizontal:MODE....1229
HISTogram<m>:WINDow:HORizontal:RELative:POSition....1230
HISTogram<m>:WINDow:HORizontal:RELative:SPAN....1230
HISTogram<m>:WINDow:HORizontal:RELative:STARt....1230
HISTogram<m>:WINDow:HORizontal:RELative:STOP....1230
HISTogram<m>:WINDow:VERTical:ABSolute:POSition....1231
HISTogram<m>:WINDow:VERTical:ABSolute:SPAN....1231
HISTogram<m>:WINDow:VERTical:ABSolute:STARt....1231
HISTogram<m>:WINDow:VERTical:ABSolute:STOP....1231
HISTogram<m>:WINDow:VERTical:MODE....1229
HISTogram<m>:WINDow:VERTical:RELative:POSition....1231
HISTogram<m>:WINDow:VERTical:RELative:SPAN....1231
HISTogram<m>:WINDow:VERTical:RELative:STARt....1231
HISTogram<m>:WINDow:VERTical:RELative:STOP....1231
LAYout<ly>:ACTive....1068
LAYout<ly>:COUNt?....1068
LAYout<ly>:DIAGram<da>:COUNt?....1069
LAYout<ly>:DIAGram<da>:LABel....1070
LAYout<ly>:DIAGram<da>:SOURce....1070
LAYout<ly>:DIAGram<da>[:ENABle]....1069
LAYout<ly>:LABel....1069
LAYout<ly>:NODE<no>:CHILdren<o>:CONTent<p>:ID....1071
LAYout<ly>:NODE<no>:CHILdren<o>:CONTent<p>:TYPE....1071
LAYout<ly>:NODE<no>:COUNt?....1070
LAYout<ly>:NODE<no>:RATio....1072
LAYout<ly>:NODE<no>:STYPe....1072
LAYout<ly>:NODE<no>[:ENABle]....1071
LAYout<ly>:RESult<n>:HORizontal:RATio....1072
LAYout<ly>:RESult<n>:VERTical:RATio....1073
LAYout<ly>:RPOSition....1073
LAYout<ly>:SACTive....1069
LAYout<ly>:ZOOM<zo>:COUNt?....1203
LAYout<ly>:ZOOM<zo>:DIAG?....1203
LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:POSition....1203
LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:SPAN....1204
LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:STARt....1204
LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:STOP....1204
LAYout<ly>:ZOOM<zo>:HORizontal:ABSolute:WIDTh....1205
LAYout<ly>:ZOOM<zo>:HORizontal:MODE....1205
LAYout<ly>:ZOOM<zo>:HORizontal:RELative:POSition....1205

LAYout<ly>:ZOOM<zo>:HORizontal:RELative:SPAN....1206
LAYout<ly>:ZOOM<zo>:HORizontal:RELative:STARt....1206
LAYout<ly>:ZOOM<zo>:HORizontal:RELative:STOP....1206
LAYout<ly>:ZOOM<zo>:HORizontal:RELative:WIDTh....1207
LAYout<ly>:ZOOM<zo>:SOURce....1207
LAYout<ly>:ZOOM<zo>:SSCReen....1211
LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:POSition....1207
LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:RANGe....1208
LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:SPAN....1208
LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:STARt....1208
LAYout<ly>:ZOOM<zo>:VERTical:ABSolute:STOP....1208
LAYout<ly>:ZOOM<zo>:VERTical:MODE....1209
LAYout<ly>:ZOOM<zo>:VERTical:RELative:POSition....1209
LAYout<ly>:ZOOM<zo>:VERTical:RELative:SPAN....1210
LAYout<ly>:ZOOM<zo>:VERTical:RELative:STARt....1209
LAYout<ly>:ZOOM<zo>:VERTical:RELative:STOP....1210
LAYout<ly>:ZOOM<zo>:VERTical:RELative:WIDTh....1210
LAYout<ly>:ZOOM<zo>[:ENABle]....1202
LAYout<ly>[:ENABle]....1068
MDEFaults:SETTings<m>:EYE:ALGorithm....1277
MDEFaults:SETTings<m>:EYE:COUNt?....1278
MDEFaults:SETTings<m>:EYE:ENABle....1278
MDEFaults:SETTings<m>:EYE:RELative:STARt....1278
MDEFaults:SETTings<m>:EYE:RELative:STOP....1279
MDEFaults:SETTings<m>:EYE:THReshold....1279
MEASurement<mg>:ACTive....1265
MEASurement<mg>:AMPTime:CSLope....1270
MEASurement<mg>:AMPTime:DELay<n>:DIRection....1271
MEASurement<mg>:AMPTime:DELay<n>:SLOPe....1272
MEASurement<mg>:AMPTime:DTOTrigger<n>:SLOPe....1271
MEASurement<mg>:AMPTime:ESLope....1270
MEASurement<mg>:AMPTime:PHASe:UNIT....1272
MEASurement<mg>:AMPTime:PSLope....1271
MEASurement<mg>:AMPTime:PTCount....1270
MEASurement<mg>:CLEar....1268
MEASurement<mg>:COUNt?....1265
MEASurement<mg>:DISPlay:REFLevel<rl>:LEVels....1269
MEASurement<mg>:DISPlay:RESults....1268
MEASurement<mg>:ENVSelect....1269
MEASurement<mg>:EYE:ABSolute:STARt....1280
MEASurement<mg>:EYE:ABSolute:STOP....1280
MEASurement<mg>:EYE:ALGorithm....1280
MEASurement<mg>:EYE:DEFSettings....1281
MEASurement<mg>:EYE:LEVel....1281
MEASurement<mg>:EYE:MODE....1282
MEASurement<mg>:EYE:RELative:STARt....1282
MEASurement<mg>:EYE:RELative:STOP....1283
MEASurement<mg>:EYE:USELevel....1283
MEASurement<mg>:FSRC....1266
MEASurement<mg>:GATE....1268

MEASurement<mg>:HISTogram:PROBability:LIMit ... 1273
MEASurement<mg>:HISTogram:PROBability:TYPE ... 1273
MEASurement<mg>:IMPRecise:STATus:CONDition? ... 2306
MEASurement<mg>:IMPRecise:STATus:ENABle ... 2308
MEASurement<mg>:IMPRecise:STATus:NTRansition ... 2308
MEASurement<mg>:IMPRecise:STATus:PTRansition ... 2309
MEASurement<mg>:IMPRecise:STATus[:EVENt]? ... 2307
MEASurement<mg>:JITTer:NCYCles ... 1274
MEASurement<mg>:JITTer:POLarity ... 1275
MEASurement<mg>:JITTer:REFLevel<rl> ... 1275
MEASurement<mg>:JITTer:RELPolarity ... 1276
MEASurement<mg>:JITTer:SLOPe ... 1276
MEASurement<mg>:JITTer:TREF ... 1277
MEASurement<mg>:JITTer:UNIT ... 1277
MEASurement<mg>:MAIN ... 1267
MEASurement<mg>:MNOMeas ... 1289
MEASurement<mg>:MULTiple ... 1289
MEASurement<mg>:PROTocol:F2Name ... 1284
MEASurement<mg>:PROTocol:FD2Name ... 1285
MEASurement<mg>:PROTocol:FD2Value ... 1285
MEASurement<mg>:PROTocol:FDName ... 1284
MEASurement<mg>:PROTocol:FDValue ... 1284
MEASurement<mg>:PROTocol:FNAMe ... 1284
MEASurement<mg>:REFLevel<rl>:REFerence ... 1272
MEASurement<mg>:REFLevel<rl>:RESult:LOWer? ... 1190
MEASurement<mg>:REFLevel<rl>:RESult:MIDDle? ... 1190
MEASurement<mg>:REFLevel<rl>:RESult:SIGHigh? ... 1190
MEASurement<mg>:REFLevel<rl>:RESult:SIGLow? ... 1190
MEASurement<mg>:REFLevel<rl>:RESult:UPPer? ... 1190
MEASurement<mg>:RESult:AVG? ... 1286
MEASurement<mg>:RESult:EVENts:COUNt? ... 1287
MEASurement<mg>:RESult:EVENts:STARt? ... 1287
MEASurement<mg>:RESult:EVENts:STOP? ... 1287
MEASurement<mg>:RESult:EVENts:VALue? ... 1288
MEASurement<mg>:RESult:EVTCount? ... 1286
MEASurement<mg>:RESult:NPEak? ... 1286
MEASurement<mg>:RESult:PPEak? ... 1286
MEASurement<mg>:RESult:RMS? ... 1286
MEASurement<mg>:RESult:RSTDdev? ... 1286
MEASurement<mg>:RESult:STARt? ... 1286
MEASurement<mg>:RESult:STDDev? ... 1286
MEASurement<mg>:RESult:STOP? ... 1286
MEASurement<mg>:RESult:WFMCount? ... 1286
MEASurement<mg>:RESult[:ACTual]? ... 1286
MEASurement<mg>:SOURce ... 1265
MEASurement<mg>:SSRC ... 1267
MEASurement<mg>:STATistics:ARESet ... 1288
MEASurement<mg>:STATistics:HISTogram:AUToscale ... 1293
MEASurement<mg>:STATistics:HISTogram:HBINs ... 1293
MEASurement<mg>:STATistics:HISTogram:HORizontal:OFFSet ... 1293

MEASurement<mg>:STATistics:HISTogram:HORizontal:SCALe....1294
MEASurement<mg>:STATistics:HISTogram:RESet....1294
MEASurement<mg>:STATistics:HISTogram[:ENABle]....1293
MEASurement<mg>:STATistics:RESet....1268
MEASurement<mg>:STATistics[:ENABle]....1288
MEASurement<mg>:TRACk:AUTO....1290
MEASurement<mg>:TRACk:CONTiunous....1290
MEASurement<mg>:TRACk:DATA:HEADer?....1291
MEASurement<mg>:TRACk:DATA[:VALues]?....1292
MEASurement<mg>:TRACk:OFFSet....1290
MEASurement<mg>:TRACk:SCALe....1291
MEASurement<mg>:TRACk[:STATe]....1290
MEASurement<mg>[:ENABle]....1265
METer:BANDwidth....1476
METer:DVMeter<m>:ACRMs:ENABle....1477
METer:DVMeter<m>:ACRMs:RESult?....1477
METer:DVMeter<m>:DC:ENABle....1477
METer:DVMeter<m>:DC:RESult?....1477
METer:DVMeter<m>:DCRMs:ENABle....1478
METer:DVMeter<m>:DCRMs:RESult?....1478
METer:DVMeter<m>:ENABle?....1476
METer:MTIMe....1478
MMEMory:ATTRibute....1237
MMEMory:AUSave:ENABle....1095
MMEMory:AUSave:INTerval....1095
MMEMory:AUTonaming:DEFaultpath....1096
MMEMory:AUTonaming:INDex....1095
MMEMory:AUTonaming:PREFix....1095
MMEMory:AUTonaming:RESall....1096
MMEMory:AUTonaming:RESPath....1096
MMEMory:AUTonaming:TEXT....1096
MMEMory:AUTonaming:TIME....1095
MMEMory:AUTonaming:USERtext....1096
MMEMory:CATalog:LENGth?....1235
MMEMory:CATalog?....1234
MMEMory:CDIRectory....1234
MMEMory:COPY....1235
MMEMory:DATA....1236
MMEMory:DCATalog:LENGth?....1233
MMEMory:DCATalog?....1233
MMEMory:DELete....1236
MMEMory:DRIVes?....1233
MMEMory:GENerator:RCL....1238
MMEMory:GENerator:SAV....1239
MMEMory:LOAD:STATe....1238
MMEMory:MDIRectory....1234
MMEMory:MOVE....1236
MMEMory:NAME....1251
MMEMory:NDRive<m>:CONNect....1065
MMEMory:NDRive<m>:DCONnect....1066

MMEMory:NDRive<m>:LPATh ... 1066
MMEMory:NDRive<m>:NPATh ... 1066
MMEMory:NDRive<m>:PWORd ... 1066
MMEMory:NDRive<m>:UNAMe ... 1067
MMEMory:RCL ... 1238
MMEMory:RDIRectory ... 1234
MMEMory:SAV ... 1237
MMEMory:STORe:STATe ... 1238
MTESt<m>:ADD ... 1328
MTESt<m>:AUTomask:UPDate ... 1335
MTESt<m>:AUTomask:VALues:BOTTom? ... 1337
MTESt<m>:AUTomask:VALues:TOP? ... 1337
MTESt<m>:AUTomask:XTOLerance:DIVisions ... 1335
MTESt<m>:AUTomask:XTOLerance:PHYSical ... 1335
MTESt<m>:AUTomask:XTUNit ... 1336
MTESt<m>:AUTomask:YTOLerance:DIVisions ... 1336
MTESt<m>:AUTomask:YTOLerance:PHYSical ... 1336
MTESt<m>:AUTomask:YTUNit ... 1336
MTESt<m>:COUNt? ... 1328
MTESt<m>:DIAGram ... 1329
MTESt<m>:IMEXport:NAME ... 1329
MTESt<m>:IMEXport:OPEN ... 1329
MTESt<m>:IMEXport:SAVE ... 1329
MTESt<m>:ONViolation:BEEP ... 1337
MTESt<m>:ONViolation:SCReenshot ... 1338
MTESt<m>:ONViolation:SRESults ... 1338
MTESt<m>:ONViolation:STOP ... 1338
MTESt<m>:ONViolation:TRIGgerout ... 1339
MTESt<m>:ONViolation:WFMSave ... 1339
MTESt<m>:REMove ... 1330
MTESt<m>:RESult:COUNt:FWAVeforms? ... 1340
MTESt<m>:RESult:COUNt:PWAVeforms? ... 1340
MTESt<m>:RESult:COUNt:WAVeforms? ... 1340
MTESt<m>:RESult:FRATe? ... 1340
MTESt<m>:RESult[:RESult]? ... 1341
MTESt<m>:SEGMent<n>:ADD ... 1331
MTESt<m>:SEGMent<n>:COUNt? ... 1331
MTESt<m>:SEGMent<n>:POINt<o>:ADD ... 1332
MTESt<m>:SEGMent<n>:POINt<o>:COUNt? ... 1332
MTESt<m>:SEGMent<n>:POINt<o>:REMove ... 1332
MTESt<m>:SEGMent<n>:POINt<o>:VALid? ... 1333
MTESt<m>:SEGMent<n>:POINt<o>:X ... 1333
MTESt<m>:SEGMent<n>:POINt<o>:Y ... 1333
MTESt<m>:SEGMent<n>:REMove ... 1334
MTESt<m>:SEGMent<n>:VALid? ... 1334
MTESt<m>:SOURce ... 1330
MTESt<m>:STATe ... 1330
MTESt<m>:VISible ... 1330
P3PHase<m>:EFFiciency:DISPlay:WAVeform:INPut:TOTal:POWer[:ENABle] ... 1465
P3PHase<m>:EFFiciency:DISPlay:WAVeform:OUTPut:TOTal:POWer[:ENABle] ... 1465

P3PHase<m>:EFFiciency:GATE ... 1464
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:HYSTeresis ... 1469
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:LLEVel ... 1469
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:MLEVel ... 1470
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:ULEVel ... 1470
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:LMODe ... 1470
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:HYSTeresis ... 1471
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:LOWer ... 1471
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:MIDDle ... 1472
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:MODE ... 1472
P3PHase<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:UPPer ... 1473
P3PHase<m>:EFFiciency:INPut<n>:SOURce:CURRent:W1V1a ... 1462
P3PHase<m>:EFFiciency:INPut<n>:SOURce:CURRent:W2V2a ... 1462
P3PHase<m>:EFFiciency:INPut<n>:SOURce:CURRent:W3V3a ... 1462
P3PHase<m>:EFFiciency:INPut<n>:SOURce:CURRent:W3VN3a ... 1462
P3PHase<m>:EFFiciency:INPut<n>:SOURce:CYCLe:FILTer ... 1464
P3PHase<m>:EFFiciency:INPut<n>:SOURce:CYCLe:SOURce ... 1463
P3PHase<m>:EFFiciency:INPut<n>:SOURce:LINes:W2V2a ... 1462
P3PHase<m>:EFFiciency:INPut<n>:SOURce:VOLTage:W1V1a ... 1463
P3PHase<m>:EFFiciency:INPut<n>:SOURce:VOLTage:W2V2a ... 1463
P3PHase<m>:EFFiciency:INPut<n>:SOURce:VOLTage:W3V3a ... 1463
P3PHase<m>:EFFiciency:INPut<n>:SOURce:VOLTage:W3VN3a ... 1463
P3PHase<m>:EFFiciency:INPut<n>:SOURce:WIRing ... 1461
P3PHase<m>:EFFiciency:INPut<n>:TOTal:POWer:DATA:HEADer? ... 1474
P3PHase<m>:EFFiciency:INPut<n>:TOTal:POWer:DATA[:VALues]? ... 1475
P3PHase<m>:EFFiciency:INPut<n>:TOTal:POWer:VERTical:OFFSet ... 1466
P3PHase<m>:EFFiciency:INPut<n>:TOTal:POWer:VERTical:SCALe:MODE ... 1467
P3PHase<m>:EFFiciency:INPut<n>:TOTal:POWer:VERTical:SCALe[:VALue] ... 1467
P3PHase<m>:EFFiciency:INPut<n>:TYPE ... 1461
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:HYSTeresis ... 1469
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:LLEVel ... 1469
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:MLEVel ... 1470
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:ULEVel ... 1470
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:LMODe ... 1470
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:HYSTeresis ... 1471
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:LOWer ... 1471
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:MIDDle ... 1472
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:MODE ... 1472
P3PHase<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:UPPer ... 1473
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:CURRent:W1V1a ... 1462
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:CURRent:W2V2a ... 1462
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:CURRent:W3V3a ... 1462
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:CURRent:W3VN3a ... 1462
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:CYCLe:FILTer ... 1464
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:CYCLe:SOURce ... 1463
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:LINes:W2V2a ... 1462
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:VOLTage:W1V1a ... 1463
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:VOLTage:W2V2a ... 1463
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:VOLTage:W3V3a ... 1463
P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:VOLTage:W3VN3a ... 1463

P3PHase<m>:EFFiciency:OUTPut<n>:SOURce:WIRing....1461
P3PHase<m>:EFFiciency:OUTPut<n>:TOTal:POWer:DATA:HEADer?....1474
P3PHase<m>:EFFiciency:OUTPut<n>:TOTal:POWer:DATA[:VALues]?....1475
P3PHase<m>:EFFiciency:OUTPut<n>:TOTal:POWer:VERTical:OFFSet....1466
P3PHase<m>:EFFiciency:OUTPut<n>:TOTal:POWer:VERTical:SCALe:MODE....1467
P3PHase<m>:EFFiciency:OUTPut<n>:TOTal:POWer:VERTical:SCALe[:VALue]....1467
P3PHase<m>:EFFiciency:OUTPut<n>:TYPE....1461
P3PHase<m>:EFFiciency:RESult:INPut<n>:TOTal:POWer:AVERage?....1457
P3PHase<m>:EFFiciency:RESult:INPut<n>:TOTal:POWer:EVTCount?....1458
P3PHase<m>:EFFiciency:RESult:INPut<n>:TOTal:POWer:NPEak?....1458
P3PHase<m>:EFFiciency:RESult:INPut<n>:TOTal:POWer:PPEak?....1458
P3PHase<m>:EFFiciency:RESult:INPut<n>:TOTal:POWer:RMS?....1459
P3PHase<m>:EFFiciency:RESult:INPut<n>:TOTal:POWer:STDDev?....1459
P3PHase<m>:EFFiciency:RESult:INPut<n>:TOTal:POWer:WFMCount?....1459
P3PHase<m>:EFFiciency:RESult:INPut<n>:TOTal:POWer[:ACTual]?....1457
P3PHase<m>:EFFiciency:RESult:OUTPut<n>:TOTal:POWer:AVERage?....1457
P3PHase<m>:EFFiciency:RESult:OUTPut<n>:TOTal:POWer:EVTCount?....1458
P3PHase<m>:EFFiciency:RESult:OUTPut<n>:TOTal:POWer:NPEak?....1458
P3PHase<m>:EFFiciency:RESult:OUTPut<n>:TOTal:POWer:PPEak?....1458
P3PHase<m>:EFFiciency:RESult:OUTPut<n>:TOTal:POWer:RMS?....1459
P3PHase<m>:EFFiciency:RESult:OUTPut<n>:TOTal:POWer:STDDev?....1459
P3PHase<m>:EFFiciency:RESult:OUTPut<n>:TOTal:POWer:WFMCount?....1459
P3PHase<m>:EFFiciency:RESult:OUTPut<n>:TOTal:POWer[:ACTual]?....1457
P3PHase<m>:EFFiciency:STATistic:ENABle....1456
P3PHase<m>:EFFiciency:STATistic:RESet....1456
P3PHase<m>:EFFiciency:STATistic:WFMCount?....1456
P3PHase<m>:EFFiciency:TOTal:EFFiciency:RESult:AVERage?....1457
P3PHase<m>:EFFiciency:TOTal:EFFiciency:RESult:EVTCount?....1458
P3PHase<m>:EFFiciency:TOTal:EFFiciency:RESult:NPEak?....1458
P3PHase<m>:EFFiciency:TOTal:EFFiciency:RESult:PPEak?....1458
P3PHase<m>:EFFiciency:TOTal:EFFiciency:RESult:RMS?....1459
P3PHase<m>:EFFiciency:TOTal:EFFiciency:RESult:STDDev?....1459
P3PHase<m>:EFFiciency:TOTal:EFFiciency:RESult:WFMCount?....1459
P3PHase<m>:EFFiciency:TOTal:EFFiciency:RESult[:ACTual]?....1457
P3PHase<m>:HARMonics:AVAilable<n>....1453
P3PHase<m>:HARMonics:DISPlay:BARGraph:VERTical:SCALe:TYPE....1452
P3PHase<m>:HARMonics:DISPlay:BARGraph[:ENABle]....1451
P3PHase<m>:HARMonics:DISPlay:HARMonics:STARt[:VALue]....1452
P3PHase<m>:HARMonics:DISPlay:HARMonics:STOP[:VALue]....1452
P3PHase<m>:HARMonics:DISPlay:HARMonics[:DISPlay]....1451
P3PHase<m>:HARMonics:DISPlay:POWer<n>:WAVeform[:ENABle]....1465
P3PHase<m>:HARMonics:DISPlay:TOTal:POWer:WAVeform[:ENABle]....1465
P3PHase<m>:HARMonics:FREQuency:EN....1449
P3PHase<m>:HARMonics:FREQuency:MIL....1449
P3PHase<m>:HARMonics:MEASurement:CSOurce:FREQuency<n>[:ACTual]?....1453
P3PHase<m>:HARMonics:MEASurement:POWer<n>:ACTive[:ACTual]?....1453
P3PHase<m>:HARMonics:MEASurement:THDFundament<n>[:ACTual]?....1454
P3PHase<m>:HARMonics:MEASurement:THDRms<n>[:ACTual]?....1454
P3PHase<m>:HARMonics:PFACtor:MODE....1450
P3PHase<m>:HARMonics:PFACtor:USER....1450

P3PHase<m>:HARMonics:POWer<n>:DATA:HEADer? 1474
P3PHase<m>:HARMonics:POWer<n>:DATA[:VALues]? 1475
P3PHase<m>:HARMonics:POWer<n>:VERTical:OFFSet 1465
P3PHase<m>:HARMonics:POWer<n>:VERTical:SCALe:MODE 1466
P3PHase<m>:HARMonics:POWer<n>:VERTical:SCALe[:VALue] 1467
P3PHase<m>:HARMonics:REFLevel<rl>:ABSolute:HYSTeresis 1469
P3PHase<m>:HARMonics:REFLevel<rl>:ABSolute:LLEVel 1469
P3PHase<m>:HARMonics:REFLevel<rl>:ABSolute:MLEVel 1470
P3PHase<m>:HARMonics:REFLevel<rl>:ABSolute:ULEVel 1470
P3PHase<m>:HARMonics:REFLevel<rl>:LMODe 1470
P3PHase<m>:HARMonics:REFLevel<rl>:RELative:HYSTeresis 1471
P3PHase<m>:HARMonics:REFLevel<rl>:RELative:LOWer 1471
P3PHase<m>:HARMonics:REFLevel<rl>:RELative:MIDDle 1472
P3PHase<m>:HARMonics:REFLevel<rl>:RELative:MODE 1472
P3PHase<m>:HARMonics:REFLevel<rl>:RELative:UPPer 1473
P3PHase<m>:HARMonics:RESult<n>:MAGNitude<o>:PERCent[:ACTual]? 1455
P3PHase<m>:HARMonics:RESult<n>:MAGNitude<o>:RMS[:ACTual]? 1455
P3PHase<m>:HARMonics:RESult<n>:VIOLation<o>? 1454
P3PHase<m>:HARMonics:RESult<n>[:FREQuency]? 1454
P3PHase<m>:HARMonics:REVision 1449
P3PHase<m>:HARMonics:RPOWer:MODE 1450
P3PHase<m>:HARMonics:RPOWer:USER 1451
P3PHase<m>:HARMonics:SOURce:CURRent:W2V2a 1462
P3PHase<m>:HARMonics:SOURce:CURRent:W3V3a 1462
P3PHase<m>:HARMonics:SOURce:CURRent:W3VN3a 1462
P3PHase<m>:HARMonics:SOURce:CYCLe:FILTer 1464
P3PHase<m>:HARMonics:SOURce:CYCLe[:SOURce] 1463
P3PHase<m>:HARMonics:SOURce:INOut 1461
P3PHase<m>:HARMonics:SOURce:LINes:W2V2a 1462
P3PHase<m>:HARMonics:SOURce:VOLTage:W2V2a 1463
P3PHase<m>:HARMonics:SOURce:VOLTage:W3V3a 1463
P3PHase<m>:HARMonics:SOURce:VOLTage:W3VN3a 1463
P3PHase<m>:HARMonics:SOURce:WIRing 1461
P3PHase<m>:HARMonics:STANdard 1448
P3PHase<m>:HARMonics:TOTal:POWer:DATA:HEADer? 1474
P3PHase<m>:HARMonics:TOTal:POWer:DATA[:VALues]? 1475
P3PHase<m>:HARMonics:TOTal:POWer:VERTical:OFFSet 1466
P3PHase<m>:HARMonics:TOTal:POWer:VERTical:SCALe:MODE 1467
P3PHase<m>:HARMonics:TOTal:POWer:VERTical:SCALe[:VALue] 1467
P3PHase<m>:QUALity:DISPlay:CURRent:CRESTfactor<n>[:ENABle] 1436
P3PHase<m>:QUALity:DISPlay:CURRent:PEAK<n>[:ENABle] 1436
P3PHase<m>:QUALity:DISPlay:CURRent:RMS<n>[:ENABle] 1437
P3PHase<m>:QUALity:DISPlay:POWer<n>:ACTive[:ENABle] 1437
P3PHase<m>:QUALity:DISPlay:POWer<n>:APParent[:ENABle] 1437
P3PHase<m>:QUALity:DISPlay:POWer<n>:PFACtor[:ENABle] 1438
P3PHase<m>:QUALity:DISPlay:POWer<n>:PHASe[:ENABle] 1438
P3PHase<m>:QUALity:DISPlay:POWer<n>:REACtive[:ENABle] 1438
P3PHase<m>:QUALity:DISPlay:POWer<n>:WAVeform[:ENABle] 1465
P3PHase<m>:QUALity:DISPlay:TOTal:POWer:WAVeform[:ENABle] 1465
P3PHase<m>:QUALity:DISPlay:VOLTage:CRESTfactor<n>[:ENABle] 1439

P3PHase<m>:QUALity:DISPlay:VOLTage:FREQuency<n>[:ENABle] 1439
P3PHase<m>:QUALity:DISPlay:VOLTage:PEAK<n>[:ENABle] 1439
P3PHase<m>:QUALity:DISPlay:VOLTage:RMS<n>[:ENABle] 1439
P3PHase<m>:QUALity:FREQuency:USER 1434
P3PHase<m>:QUALity:FREQuency[:VALue] 1434
P3PHase<m>:QUALity:GATE 1464
P3PHase<m>:QUALity:PHASor:CURRent:MAXimum 1435
P3PHase<m>:QUALity:PHASor:CURRent:OFFSet 1435
P3PHase<m>:QUALity:PHASor:FSCReen 1436
P3PHase<m>:QUALity:PHASor:RESult:VOLTage<n>:ANGLe[:ACTual]? 1448
P3PHase<m>:QUALity:PHASor:VOLTage:MAXimum 1435
P3PHase<m>:QUALity:PHASor:VOLTage:OFFSet 1435
P3PHase<m>:QUALity:PHASor[:ENABle] 1435
P3PHase<m>:QUALity:POWer<n>:DATA:HEADer? 1474
P3PHase<m>:QUALity:POWer<n>:DATA[:VALues]? 1475
P3PHase<m>:QUALity:POWer<n>:VERTical:OFFSet 1465
P3PHase<m>:QUALity:POWer<n>:VERTical:SCALe:MODE 1466
P3PHase<m>:QUALity:POWer<n>:VERTical:SCALe[:VALue] 1467
P3PHase<m>:QUALity:REFLevel<rl>:ABSolute:HYSTeresis 1469
P3PHase<m>:QUALity:REFLevel<rl>:ABSolute:LLEVel 1469
P3PHase<m>:QUALity:REFLevel<rl>:ABSolute:MLEVel 1470
P3PHase<m>:QUALity:REFLevel<rl>:ABSolute:ULEVel 1470
P3PHase<m>:QUALity:REFLevel<rl>:LMODe 1470
P3PHase<m>:QUALity:REFLevel<rl>:RELative:HYSTeresis 1471
P3PHase<m>:QUALity:REFLevel<rl>:RELative:LOWer 1471
P3PHase<m>:QUALity:REFLevel<rl>:RELative:MIDDle 1472
P3PHase<m>:QUALity:REFLevel<rl>:RELative:MODE 1472
P3PHase<m>:QUALity:REFLevel<rl>:RELative:UPPer 1473
P3PHase<m>:QUALity:RESult:CSOurce:FREQuency<n>[:ACTual]? 1440
P3PHase<m>:QUALity:RESult:CURRent:CRESTfactor<n>[:ACTual]? 1441
P3PHase<m>:QUALity:RESult:CURRent:PEAK<n>[:ACTual]? 1441
P3PHase<m>:QUALity:RESult:CURRent:RMS<n>[:ACTual]? 1442
P3PHase<m>:QUALity:RESult:POWer:ACTive<n>[:ACTual]? 1443
P3PHase<m>:QUALity:RESult:POWer:APPArent<n>[:ACTual]? 1443
P3PHase<m>:QUALity:RESult:POWer:PFACtor<n>[:ACTual]? 1444
P3PHase<m>:QUALity:RESult:POWer:PHASe<n>[:ACTual]? 1444
P3PHase<m>:QUALity:RESult:POWer:REACtive<n>[:ACTual]? 1445
P3PHase<m>:QUALity:RESult:TOTal:CURRent:CRESTfactor<n>[:ACTual]? 1441
P3PHase<m>:QUALity:RESult:TOTal:CURRent:PEAK<n>[:ACTual]? 1442
P3PHase<m>:QUALity:RESult:TOTal:CURRent:RMS<n>[:ACTual]? 1442
P3PHase<m>:QUALity:RESult:TOTal:POWer:ACTive<n>[:ACTual]? 1443
P3PHase<m>:QUALity:RESult:TOTal:POWer:APPArent<n>[:ACTual]? 1443
P3PHase<m>:QUALity:RESult:TOTal:POWer:PFACtor<n>[:ACTual]? 1444
P3PHase<m>:QUALity:RESult:TOTal:POWer:PHASe<n>[:ACTual]? 1445
P3PHase<m>:QUALity:RESult:TOTal:POWer:REACtive<n>[:ACTual]? 1445
P3PHase<m>:QUALity:RESult:TOTal:VOLTage:CRESTfactor<n>[:ACTual]? 1446
P3PHase<m>:QUALity:RESult:TOTal:VOLTage:PEAK<n>[:ACTual]? 1447
P3PHase<m>:QUALity:RESult:TOTal:VOLTage:RMS<n>[:ACTual]? 1447
P3PHase<m>:QUALity:RESult:VOLTage:CRESTfactor<n>[:ACTual]? 1446
P3PHase<m>:QUALity:RESult:VOLTage:PEAK<n>[:ACTual]? 1446

P3PHase<m>:QUALity:RESult:VOLTage:RMS<n>[:ACTual]? 1447
P3PHase<m>:QUALity:SOURce:CURRent:W2V2a 1462
P3PHase<m>:QUALity:SOURce:CURRent:W3V3a 1462
P3PHase<m>:QUALity:SOURce:CURRent:W3VN3a 1462
P3PHase<m>:QUALity:SOURce:CYCLe:FILTer 1464
P3PHase<m>:QUALity:SOURce:CYCLe[:SOURce] 1463
P3PHase<m>:QUALity:SOURce:INOut 1461
P3PHase<m>:QUALity:SOURce:LINes:W2V2a 1462
P3PHase<m>:QUALity:SOURce:VOLTage:W2V2a 1463
P3PHase<m>:QUALity:SOURce:VOLTage:W3V3a 1463
P3PHase<m>:QUALity:SOURce:VOLTage:W3VN3a 1463
P3PHase<m>:QUALity:SOURce:WIRing 1461
P3PHase<m>:QUALity:TOTal:POWer:DATA:HEADer? 1474
P3PHase<m>:QUALity:TOTal:POWer:DATA[:VALues]? 1475
P3PHase<m>:QUALity:TOTal:POWer:VERTical:OFFSet 1466
P3PHase<m>:QUALity:TOTal:POWer:VERTical:SCALe:MODE 1467
P3PHase<m>:QUALity:TOTal:POWer:VERTical:SCALe[:VALue] 1467
P3PHase<m>:TYPE 1433
P3PHase<m>[:ENABle] 1433
PBUS<pb>:BIT<n>:LABel 2270
PBUS<pb>:BIT<n>:SKEW 2270
PBUS<pb>:BIT<n>[:STATe] 2270
PBUS<pb>:CLEar 2271
PBUS<pb>:CLOCk 2271
PBUS<pb>:CLON 2271
PBUS<pb>:CLSLope 2272
PBUS<pb>:DATA:FORMat 1261
PBUS<pb>:DATA:HEADer? 1261
PBUS<pb>:DATA[:VALues]? 1261
PBUS<pb>:DECTable:COUNt? 2272
PBUS<pb>:DECTable:DATA? 2273
PBUS<pb>:DECTable:SHOW 2272
PBUS<pb>:DIGSignals:POSition 2273
PBUS<pb>:DIGSignals:SCALe 2273
PBUS<pb>:DISPlay:SHBU 2273
PBUS<pb>:DISPlay:SHDI 2274
PBUS<pb>:HYSTeresis<n> 2274
PBUS<pb>:POSition 2275
PBUS<pb>:SCALe 2275
PBUS<pb>:SKEW 2275
PBUS<pb>:STATe 2275
PBUS<pb>:TECHnology 2276
PBUS<pb>:THCoupling 2276
PBUS<pb>:THReshold<n> 2277
POWer<m>:ASKew[:EXECute] 1368
POWer<m>:EFFiciency:DISPlay:RESult:OUTPut<n>:EFFiciency[:ENABle] 1408
POWer<m>:EFFiciency:DISPlay:RESult:OUTPut<n>:POWer[:ENABle] 1408
POWer<m>:EFFiciency:DISPlay:RESult:TOTal<n>:EFFiciency[:ENABle] 1408
POWer<m>:EFFiciency:DISPlay:RESult:TOTal<n>:OPOWer[:ENABle] 1408
POWer<m>:EFFiciency:DISPlay:WAVeform:INPut<n>:POWer[:ENABle] 1423

POWer<m>:EFFiciency:DISPlay:WAVeform:OUTPut<n>:POWer[:ENABle] 1423
POWer<m>:EFFiciency:DISPlay:WAVeform:TOTal<n>:OPOWer[:ENABle] 1423
POWer<m>:EFFiciency:GATE 1408
POWer<m>:EFFiciency:INPut<n>:CURRent[:SOURce] 1405
POWer<m>:EFFiciency:INPut<n>:POWer:DATA:HEADer? 1431
POWer<m>:EFFiciency:INPut<n>:POWer:DATA[:VALues]? 1432
POWer<m>:EFFiciency:INPut<n>:POWer:VERTical:OFFSet 1423
POWer<m>:EFFiciency:INPut<n>:POWer:VERTical:SCALe:MODE 1424
POWer<m>:EFFiciency:INPut<n>:POWer:VERTical:SCALe[:VALue] 1424
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:HYSTeresis 1426
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:LLEVel 1426
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:MLEVel 1427
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:ABSolute:ULEVel 1427
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:LMODe 1428
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:HYSTeresis 1428
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:LOWer 1428
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:MIDDle 1429
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:MODE 1429
POWer<m>:EFFiciency:INPut<n>:REFLevel<rl>:RELative:UPPer 1430
POWer<m>:EFFiciency:INPut<n>:VOLTage[:SOURce] 1406
POWer<m>:EFFiciency:INPut<n>[:TYPE] 1406
POWer<m>:EFFiciency:ONUMber? 1406
POWer<m>:EFFiciency:OUTPut<n>:CURRent[:SOURce] 1407
POWer<m>:EFFiciency:OUTPut<n>:POWer:DATA:HEADer? 1431
POWer<m>:EFFiciency:OUTPut<n>:POWer:DATA[:VALues]? 1432
POWer<m>:EFFiciency:OUTPut<n>:POWer:VERTical:OFFSet 1423
POWer<m>:EFFiciency:OUTPut<n>:POWer:VERTical:SCALe:MODE 1424
POWer<m>:EFFiciency:OUTPut<n>:POWer:VERTical:SCALe[:VALue] 1424
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:HYSTeresis 1426
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:LLEVel 1426
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:MLEVel 1427
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:ABSolute:ULEVel 1427
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:LMODe 1428
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:HYSTeresis 1428
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:LOWer 1428
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:MIDDle 1429
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:MODE 1429
POWer<m>:EFFiciency:OUTPut<n>:REFLevel<rl>:RELative:UPPer 1430
POWer<m>:EFFiciency:OUTPut<n>:VOLTage[:SOURce] 1407
POWer<m>:EFFiciency:OUTPut<n>[:TYPE] 1407
POWer<m>:EFFiciency:RESult:INPut:POWer:AVERage? 1410
POWer<m>:EFFiciency:RESult:INPut:POWer:EVTCount? 1410
POWer<m>:EFFiciency:RESult:INPut:POWer:NPEak? 1410
POWer<m>:EFFiciency:RESult:INPut:POWer:PPEak? 1411
POWer<m>:EFFiciency:RESult:INPut:POWer:RMS? 1411
POWer<m>:EFFiciency:RESult:INPut:POWer:STDDev? 1411
POWer<m>:EFFiciency:RESult:INPut:POWer:WFMCount? 1412
POWer<m>:EFFiciency:RESult:INPut:POWer[:ACTual]? 1409
POWer<m>:EFFiciency:RESult:TOTal:EFFiciency:AVERage? 1410
POWer<m>:EFFiciency:RESult:TOTal:EFFiciency:EVTCount? 1410

POWer<m>:EFFiciency:RESult:TOTal:EFFiciency:NPEak? 1410
POWer<m>:EFFiciency:RESult:TOTal:EFFiciency:PPEak? 1411
POWer<m>:EFFiciency:RESult:TOTal:EFFiciency:RMS? 1411
POWer<m>:EFFiciency:RESult:TOTal:EFFiciency:STDDev? 1411
POWer<m>:EFFiciency:RESult:TOTal:EFFiciency:WFMCount? 1412
POWer<m>:EFFiciency:RESult:TOTal:EFFiciency[:ACTual]? 1409
POWer<m>:EFFiciency:RESult:TOTal:OPOWer:AVERage? 1410
POWer<m>:EFFiciency:RESult:TOTal:OPOWer:EVTCount? 1410
POWer<m>:EFFiciency:RESult:TOTal:OPOWer:NPEak? 1410
POWer<m>:EFFiciency:RESult:TOTal:OPOWer:PPEak? 1411
POWer<m>:EFFiciency:RESult:TOTal:OPOWer:RMS? 1411
POWer<m>:EFFiciency:RESult:TOTal:OPOWer:STDDev? 1411
POWer<m>:EFFiciency:RESult:TOTal:OPOWer:WFMCount? 1412
POWer<m>:EFFiciency:RESult:TOTal:OPOWer[:ACTual]? 1409
POWer<m>:EFFiciency:STATistics:RESet 1369
POWer<m>:EFFiciency:STATistics:WFMCount? 1369
POWer<m>:EFFiciency:STATistics[:ENABle] 1368
POWer<m>:EFFiciency:TOTal<n>:OPOWer:DATA:HEADer? 1431
POWer<m>:EFFiciency:TOTal<n>:OPOWer:DATA[:VALues]? 1432
POWer<m>:EFFiciency:TOTal<n>:OPOWer:VERTical:OFFSet 1423
POWer<m>:EFFiciency:TOTal<n>:OPOWer:VERTical:SCALe:MODE 1424
POWer<m>:EFFiciency:TOTal<n>:OPOWer:VERTical:SCALe[:VALue] 1424
POWer<m>:HARMonics:AVAilable? 1387
POWer<m>:HARMonics:DISPlay:BARGraph:VERTical:SCALe:TYPE 1385
POWer<m>:HARMonics:DISPlay:HARMonics:STARt[:VALue] 1385
POWer<m>:HARMonics:DISPlay:HARMonics:STOP[:VALue] 1385
POWer<m>:HARMonics:DISPlay:HARMonics[:DISPlay] 1385
POWer<m>:HARMonics:DISPlay:POWer:WAVeform:ENABle 1423
POWer<m>:HARMonics:FREQuency:EN 1384
POWer<m>:HARMonics:FREQuency:MIL 1384
POWer<m>:HARMonics:FREQuency:RTCA 1384
POWer<m>:HARMonics:MEASurement:FREQuency[:ACTual]? 1388
POWer<m>:HARMonics:MEASurement:POWer:ACTive[:ACTual]? 1388
POWer<m>:HARMonics:MEASurement:THDFundament[:ACTual]? 1388
POWer<m>:HARMonics:MEASurement:THDRms[:ACTual]? 1388
POWer<m>:HARMonics:PFACtor:USER 1386
POWer<m>:HARMonics:PFACtor[:MODE] 1387
POWer<m>:HARMonics:POWer:DATA:HEADer? 1431
POWer<m>:HARMonics:POWer:DATA[:VALues]? 1432
POWer<m>:HARMonics:POWer:VERTical:OFFSet 1423
POWer<m>:HARMonics:POWer:VERTical:SCALe:MODE 1424
POWer<m>:HARMonics:POWer:VERTical:SCALe[:VALue] 1424
POWer<m>:HARMonics:REFLevel<rl>:ABSolute:HYSTeresis 1426
POWer<m>:HARMonics:REFLevel<rl>:ABSolute:LLEVel 1426
POWer<m>:HARMonics:REFLevel<rl>:ABSolute:MLEVel 1427
POWer<m>:HARMonics:REFLevel<rl>:ABSolute:ULEVel 1427
POWer<m>:HARMonics:REFLevel<rl>:LMODe 1428
POWer<m>:HARMonics:REFLevel<rl>:RELative:HYSTeresis 1428
POWer<m>:HARMonics:REFLevel<rl>:RELative:LOWer 1429
POWer<m>:HARMonics:REFLevel<rl>:RELative:MIDDle 1429

POWer<m>:HARMonics:REFLevel<rl>:RELative:MODE....1430
POWer<m>:HARMonics:REFLevel<rl>:RELative:UPPer....1430
POWer<m>:HARMonics:RESult<n>:MAGNitude:PERCent:MAXimum?....1389
POWer<m>:HARMonics:RESult<n>:MAGNitude:PERCent:MINimum?....1389
POWer<m>:HARMonics:RESult<n>:MAGNitude:PERCent[:ACTual]?....1390
POWer<m>:HARMonics:RESult<n>:MAGNitude:RMS:MAXimum?....1390
POWer<m>:HARMonics:RESult<n>:MAGNitude:RMS:MINimum?....1390
POWer<m>:HARMonics:RESult<n>:MAGNitude:RMS[:ACTual]?....1391
POWer<m>:HARMonics:RESult<n>:VIOLation?....1389
POWer<m>:HARMonics:RESult<n>[:FREQuency]?....1389
POWer<m>:HARMonics:REVision....1383
POWer<m>:HARMonics:RPOWer:USER....1386
POWer<m>:HARMonics:RPOWer[:MODE]....1386
POWer<m>:HARMonics:SOURce:CURRent....1382
POWer<m>:HARMonics:SOURce[:VOLTage]....1383
POWer<m>:HARMonics:STANdard....1383
POWer<m>:ONOFf:INPut:AC:ABSolute[:VALue]....1402
POWer<m>:ONOFf:INPut:DC:ABSolute[:VALue]....1402
POWer<m>:ONOFf:INPut:TYPE....1402
POWer<m>:ONOFf:INPut[:SOURce]....1403
POWer<m>:ONOFf:ONUMber....1403
POWer<m>:ONOFf:OUTPut<n>:DC:ABSolute[:VALue]....1403
POWer<m>:ONOFf:OUTPut<n>:DISPlay:RESult[:ENABle]....1403
POWer<m>:ONOFf:OUTPut<n>:DISPlay:RLINe[:ENABle]....1404
POWer<m>:ONOFf:OUTPut<n>[:SOURce]....1404
POWer<m>:ONOFf:RESult<n>:TIME[:ACTual]?....1405
POWer<m>:ONOFf[:TYPE]....1404
POWer<m>:QUALity:DISPlay:CURRent:CREStfactor....1371
POWer<m>:QUALity:DISPlay:CURRent:PEAK....1372
POWer<m>:QUALity:DISPlay:CURRent:RMS....1372
POWer<m>:QUALity:DISPlay:POWer:ACTive....1372
POWer<m>:QUALity:DISPlay:POWer:APParent....1372
POWer<m>:QUALity:DISPlay:POWer:PFACtor....1373
POWer<m>:QUALity:DISPlay:POWer:PHASe....1373
POWer<m>:QUALity:DISPlay:POWer:REACtive....1373
POWer<m>:QUALity:DISPlay:POWer:WAVeform:ENABle....1423
POWer<m>:QUALity:DISPlay:VOLTage:CREStfactor....1373
POWer<m>:QUALity:DISPlay:VOLTage:FREQuency....1374
POWer<m>:QUALity:DISPlay:VOLTage:PEAK....1374
POWer<m>:QUALity:DISPlay:VOLTage:RMS....1374
POWer<m>:QUALity:FREQuency:USER....1371
POWer<m>:QUALity:FREQuency[:VALue]....1370
POWer<m>:QUALity:GATE....1371
POWer<m>:QUALity:POWer:DATA:HEADer?....1431
POWer<m>:QUALity:POWer:DATA[:VALues]?....1432
POWer<m>:QUALity:POWer:VERTical:OFFSet....1423
POWer<m>:QUALity:POWer:VERTical:SCALe:MODE....1424
POWer<m>:QUALity:POWer:VERTical:SCALe[:VALue]....1424
POWer<m>:QUALity:REFLevel<rl>:ABSolute:HYSTeresis....1426
POWer<m>:QUALity:REFLevel<rl>:ABSolute:LLEVel....1426

POWer<m>:QUALity:REFLevel<rl>:ABSolute:MLEVel 1427
POWer<m>:QUALity:REFLevel<rl>:ABSolute:ULEVel 1427
POWer<m>:QUALity:REFLevel<rl>:LMODe 1428
POWer<m>:QUALity:REFLevel<rl>:RELative:HYSTeresis 1428
POWer<m>:QUALity:REFLevel<rl>:RELative:LOWer 1429
POWer<m>:QUALity:REFLevel<rl>:RELative:MIDDle 1429
POWer<m>:QUALity:REFLevel<rl>:RELative:MODE 1430
POWer<m>:QUALity:REFLevel<rl>:RELative:UPPer 1430
POWer<m>:QUALity:RESult:CURRent:CRESt factor:AVERage? 1376
POWer<m>:QUALity:RESult:CURRent:CRESt factor:EVTCount? 1376
POWer<m>:QUALity:RESult:CURRent:CRESt factor:NPEak? 1376
POWer<m>:QUALity:RESult:CURRent:CRESt factor:PPEak? 1376
POWer<m>:QUALity:RESult:CURRent:CRESt factor:RMS? 1376
POWer<m>:QUALity:RESult:CURRent:CRESt factor:STDDev? 1376
POWer<m>:QUALity:RESult:CURRent:CRESt factor:WFMCount? 1376
POWer<m>:QUALity:RESult:CURRent:CRESt factor[:ACTual]? 1376
POWer<m>:QUALity:RESult:CURRent:PEAK:AVERage? 1377
POWer<m>:QUALity:RESult:CURRent:PEAK:EVTCount? 1377
POWer<m>:QUALity:RESult:CURRent:PEAK:NPEak? 1377
POWer<m>:QUALity:RESult:CURRent:PEAK:PPEak? 1377
POWer<m>:QUALity:RESult:CURRent:PEAK:RMS? 1377
POWer<m>:QUALity:RESult:CURRent:PEAK:STDDev? 1377
POWer<m>:QUALity:RESult:CURRent:PEAK:WFMCount? 1377
POWer<m>:QUALity:RESult:CURRent:PEAK[:ACTual]? 1377
POWer<m>:QUALity:RESult:CURRent:RMS:AVERage? 1377
POWer<m>:QUALity:RESult:CURRent:RMS:EVTCount? 1377
POWer<m>:QUALity:RESult:CURRent:RMS:NPEak? 1377
POWer<m>:QUALity:RESult:CURRent:RMS:PPEak? 1377
POWer<m>:QUALity:RESult:CURRent:RMS:RMS? 1377
POWer<m>:QUALity:RESult:CURRent:RMS:STDDev? 1377
POWer<m>:QUALity:RESult:CURRent:RMS:WFMCount? 1377
POWer<m>:QUALity:RESult:CURRent:RMS[:ACTual]? 1377
POWer<m>:QUALity:RESult:POWer:ACTive:AVERage? 1378
POWer<m>:QUALity:RESult:POWer:ACTive:EVTCount? 1378
POWer<m>:QUALity:RESult:POWer:ACTive:NPEak? 1378
POWer<m>:QUALity:RESult:POWer:ACTive:PPEak? 1378
POWer<m>:QUALity:RESult:POWer:ACTive:RMS? 1378
POWer<m>:QUALity:RESult:POWer:ACTive:STDDev? 1378
POWer<m>:QUALity:RESult:POWer:ACTive:WFMCount? 1378
POWer<m>:QUALity:RESult:POWer:ACTive[:ACTual]? 1378
POWer<m>:QUALity:RESult:POWer:APParent:AVERage? 1378
POWer<m>:QUALity:RESult:POWer:APParent:EVTCount? 1378
POWer<m>:QUALity:RESult:POWer:APParent:NPEak? 1378
POWer<m>:QUALity:RESult:POWer:APParent:PPEak? 1378
POWer<m>:QUALity:RESult:POWer:APParent:RMS? 1378
POWer<m>:QUALity:RESult:POWer:APParent:STDDev? 1378
POWer<m>:QUALity:RESult:POWer:APParent:WFMCount? 1378
POWer<m>:QUALity:RESult:POWer:APParent[:ACTual]? 1378
POWer<m>:QUALity:RESult:POWer:PFACtor:AVERage? 1379
POWer<m>:QUALity:RESult:POWer:PFACtor:EVTCount? 1379

POWer<m>:QUALity:RESult:POWer:PFACtor:NPEak? 1379
POWer<m>:QUALity:RESult:POWer:PFACtor:PPEak? 1379
POWer<m>:QUALity:RESult:POWer:PFACtor:RMS? 1379
POWer<m>:QUALity:RESult:POWer:PFACtor:STDDev? 1379
POWer<m>:QUALity:RESult:POWer:PFACtor:WFMCount? 1379
POWer<m>:QUALity:RESult:POWer:PFACtor[:ACTual]? 1379
POWer<m>:QUALity:RESult:POWer:PHASe:AVERage? 1379
POWer<m>:QUALity:RESult:POWer:PHASe:EVTCount? 1379
POWer<m>:QUALity:RESult:POWer:PHASe:NPEak? 1379
POWer<m>:QUALity:RESult:POWer:PHASe:PPEak? 1379
POWer<m>:QUALity:RESult:POWer:PHASe:RMS? 1379
POWer<m>:QUALity:RESult:POWer:PHASe:STDDev? 1379
POWer<m>:QUALity:RESult:POWer:PHASe:WFMCount? 1379
POWer<m>:QUALity:RESult:POWer:PHASe[:ACTual]? 1379
POWer<m>:QUALity:RESult:POWer:REACtive:AVERage? 1380
POWer<m>:QUALity:RESult:POWer:REACtive:EVTCount? 1380
POWer<m>:QUALity:RESult:POWer:REACtive:NPEak? 1380
POWer<m>:QUALity:RESult:POWer:REACtive:PPEak? 1380
POWer<m>:QUALity:RESult:POWer:REACtive:RMS? 1380
POWer<m>:QUALity:RESult:POWer:REACtive:STDDev? 1380
POWer<m>:QUALity:RESult:POWer:REACtive:WFMCount? 1380
POWer<m>:QUALity:RESult:POWer:REACtive[:ACTual]? 1380
POWer<m>:QUALity:RESult:VOLTage:CREStfactor:AVERage? 1380
POWer<m>:QUALity:RESult:VOLTage:CREStfactor:EVTCount? 1380
POWer<m>:QUALity:RESult:VOLTage:CREStfactor:NPEak? 1380
POWer<m>:QUALity:RESult:VOLTage:CREStfactor:PPEak? 1380
POWer<m>:QUALity:RESult:VOLTage:CREStfactor:RMS? 1380
POWer<m>:QUALity:RESult:VOLTage:CREStfactor:STDDev? 1380
POWer<m>:QUALity:RESult:VOLTage:CREStfactor:WFMCount? 1380
POWer<m>:QUALity:RESult:VOLTage:CREStfactor[:ACTual]? 1380
POWer<m>:QUALity:RESult:VOLTage:FREQuency:AVERage? 1380
POWer<m>:QUALity:RESult:VOLTage:FREQuency:EVTCount? 1380
POWer<m>:QUALity:RESult:VOLTage:FREQuency:NPEak? 1380
POWer<m>:QUALity:RESult:VOLTage:FREQuency:PPEak? 1381
POWer<m>:QUALity:RESult:VOLTage:FREQuency:RMS? 1381
POWer<m>:QUALity:RESult:VOLTage:FREQuency:STDDev? 1381
POWer<m>:QUALity:RESult:VOLTage:FREQuency:WFMCount? 1381
POWer<m>:QUALity:RESult:VOLTage:FREQuency[:ACTual]? 1380
POWer<m>:QUALity:RESult:VOLTage:PEAK:AVERage? 1381
POWer<m>:QUALity:RESult:VOLTage:PEAK:EVTCount? 1381
POWer<m>:QUALity:RESult:VOLTage:PEAK:NPEak? 1381
POWer<m>:QUALity:RESult:VOLTage:PEAK:PPEak? 1381
POWer<m>:QUALity:RESult:VOLTage:PEAK:RMS? 1381
POWer<m>:QUALity:RESult:VOLTage:PEAK:STDDev? 1381
POWer<m>:QUALity:RESult:VOLTage:PEAK:WFMCount? 1381
POWer<m>:QUALity:RESult:VOLTage:PEAK[:ACTual]? 1381
POWer<m>:QUALity:RESult:VOLTage:RMS:AVERage? 1381
POWer<m>:QUALity:RESult:VOLTage:RMS:EVTCount? 1381
POWer<m>:QUALity:RESult:VOLTage:RMS:NPEak? 1381
POWer<m>:QUALity:RESult:VOLTage:RMS:PPEak? 1381

POWer<m>:QUALity:RESult:VOLTage:RMS:RMS? 1381
POWer<m>:QUALity:RESult:VOLTage:RMS:STDDev? 1382
POWer<m>:QUALity:RESult:VOLTage:RMS:WFMCount? 1382
POWer<m>:QUALity:RESult:VOLTage:RMS[:ACTual]? 1381
POWer<m>:QUALity:SOURce:CURRent 1370
POWer<m>:QUALity:SOURce:CYCLe 1370
POWer<m>:QUALity:SOURce[:VOLTage] 1370
POWer<m>:QUALity:STATistics:RESet 1369
POWer<m>:QUALity:STATistics:WFMCount? 1369
POWer<m>:QUALity:STATistics[:ENABle] 1368
POWer<m>:SOA:LIMit:APPLy 1414
POWer<m>:SOA:LIMit:IMAX 1414
POWer<m>:SOA:LIMit:PMAX 1414
POWer<m>:SOA:LIMit:VMAX 1415
POWer<m>:SOA:MTESt<n>:IMEXport:NAME 1412
POWer<m>:SOA:MTESt<n>:IMEXport:OPEN 1412
POWer<m>:SOA:MTESt<n>:IMEXport:SAVE 1413
POWer<m>:SOA:MTESt<n>:ONViolation:BEEP 1419
POWer<m>:SOA:MTESt<n>:ONViolation:SCReenshot 1419
POWer<m>:SOA:MTESt<n>:ONViolation:STOP 1419
POWer<m>:SOA:MTESt<n>:ONViolation:TRIGgerout 1420
POWer<m>:SOA:MTESt<n>:ONViolation:WFMSave 1420
POWer<m>:SOA:MTESt<n>:SEGMent<o>:ADD 1415
POWer<m>:SOA:MTESt<n>:SEGMent<o>:COUNt? 1415
POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:ADD 1416
POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:COUNt? 1416
POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:REMove 1417
POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:VALid? 1417
POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:X 1417
POWer<m>:SOA:MTESt<n>:SEGMent<o>:POINt<p>:Y 1418
POWer<m>:SOA:MTESt<n>:SEGMent<o>:REMove 1418
POWer<m>:SOA:RESult<n>:COUNt:FWAVeforms? 1421
POWer<m>:SOA:RESult<n>:COUNt:PWAVeforms? 1421
POWer<m>:SOA:RESult<n>:COUNt:WAVeforms? 1421
POWer<m>:SOA:RESult<n>:FRATe? 1422
POWer<m>:SOA:RESult<n>[:RESult]? 1422
POWer<m>:SOA:SOURce:CURRent 1413
POWer<m>:SOA:SOURce:VOLTage 1413
POWer<m>:SWITching:DISPlay:CONDuction:COLor 1395
POWer<m>:SWITching:DISPlay:CONDuction[:ENABle] 1394
POWer<m>:SWITching:DISPlay:LABel[:ENABle] 1395
POWer<m>:SWITching:DISPlay:NCONduction:COLor 1395
POWer<m>:SWITching:DISPlay:NCONduction[:ENABle] 1394
POWer<m>:SWITching:DISPlay:POWer:WAVeform[:ENABle] 1423
POWer<m>:SWITching:DISPlay:TOFF:COLor 1395
POWer<m>:SWITching:DISPlay:TOFF[:ENABle] 1394
POWer<m>:SWITching:DISPlay:TON:COLor 1395
POWer<m>:SWITching:DISPlay:TON[:ENABle] 1394
POWer<m>:SWITching:DISPlay:TOTal[:ENABle] 1395
POWer<m>:SWITching:DISPlay:TYPE 1392

POWer<m>:SWITching:POWer:DATA:HEADer?....1431
POWer<m>:SWITching:POWer:DATA[:VALues]?....1432
POWer<m>:SWITching:POWer:VERTical:OFFSet....1423
POWer<m>:SWITching:POWer:VERTical:SCALe:MODE....1424
POWer<m>:SWITching:POWer:VERTical:SCALe[:VALue]....1424
POWer<m>:SWITching:REGion:CONDuction:STOP....1393
POWer<m>:SWITching:REGion:CONDuction[:STARt]....1392
POWer<m>:SWITching:REGion:NCONduction:STOP....1394
POWer<m>:SWITching:REGion:NCONduction[:STARt]....1393
POWer<m>:SWITching:REGion:TOFF:STOP....1393
POWer<m>:SWITching:REGion:TOFF[:STARt]....1393
POWer<m>:SWITching:REGion:TON:STOP....1392
POWer<m>:SWITching:REGion:TON[:STARt]....1392
POWer<m>:SWITching:REGion:TOTal:STOP....1394
POWer<m>:SWITching:REGion:TOTal[:STARt]....1392
POWer<m>:SWITching:RESult:CONDuction:ENERgy:AVERage?....1398
POWer<m>:SWITching:RESult:CONDuction:ENERgy:EVTCount?....1398
POWer<m>:SWITching:RESult:CONDuction:ENERgy:NPEak?....1399
POWer<m>:SWITching:RESult:CONDuction:ENERgy:PPEak?....1399
POWer<m>:SWITching:RESult:CONDuction:ENERgy:RMS?....1400
POWer<m>:SWITching:RESult:CONDuction:ENERgy:STDDev?....1400
POWer<m>:SWITching:RESult:CONDuction:ENERgy:WFMCount?....1401
POWer<m>:SWITching:RESult:CONDuction:ENERgy[:ACTual]?....1397
POWer<m>:SWITching:RESult:CONDuction:POWer:AVERage?....1398
POWer<m>:SWITching:RESult:CONDuction:POWer:EVTCount?....1398
POWer<m>:SWITching:RESult:CONDuction:POWer:NPEak?....1399
POWer<m>:SWITching:RESult:CONDuction:POWer:PPEak?....1399
POWer<m>:SWITching:RESult:CONDuction:POWer:RMS?....1400
POWer<m>:SWITching:RESult:CONDuction:POWer:STDDev?....1400
POWer<m>:SWITching:RESult:CONDuction:POWer:WFMCount?....1401
POWer<m>:SWITching:RESult:CONDuction:POWer[:ACTual]?....1397
POWer<m>:SWITching:RESult:NCONduction:ENERgy:AVERage?....1398
POWer<m>:SWITching:RESult:NCONduction:ENERgy:EVTCount?....1398
POWer<m>:SWITching:RESult:NCONduction:ENERgy:NPEak?....1399
POWer<m>:SWITching:RESult:NCONduction:ENERgy:PPEak?....1399
POWer<m>:SWITching:RESult:NCONduction:ENERgy:RMS?....1400
POWer<m>:SWITching:RESult:NCONduction:ENERgy:STDDev?....1400
POWer<m>:SWITching:RESult:NCONduction:ENERgy:WFMCount?....1401
POWer<m>:SWITching:RESult:NCONduction:ENERgy[:ACTual]?....1397
POWer<m>:SWITching:RESult:NCONduction:POWer:AVERage?....1398
POWer<m>:SWITching:RESult:NCONduction:POWer:EVTCount?....1398
POWer<m>:SWITching:RESult:NCONduction:POWer:NPEak?....1399
POWer<m>:SWITching:RESult:NCONduction:POWer:PPEak?....1399
POWer<m>:SWITching:RESult:NCONduction:POWer:RMS?....1400
POWer<m>:SWITching:RESult:NCONduction:POWer:STDDev?....1400
POWer<m>:SWITching:RESult:NCONduction:POWer:WFMCount?....1401
POWer<m>:SWITching:RESult:NCONduction:POWer[:ACTual]?....1397
POWer<m>:SWITching:RESult:TOFF:ENERgy:AVERage?....1398
POWer<m>:SWITching:RESult:TOFF:ENERgy:EVTCount?....1398
POWer<m>:SWITching:RESult:TOFF:ENERgy:NPEak?....1399

POWer<m>:SWITching:RESult:TOFF:ENERgy:PPEak? 1399
POWer<m>:SWITching:RESult:TOFF:ENERgy:RMS? 1400
POWer<m>:SWITching:RESult:TOFF:ENERgy:STDDev? 1400
POWer<m>:SWITching:RESult:TOFF:ENERgy:WFMCount? 1401
POWer<m>:SWITching:RESult:TOFF:ENERgy[:ACTual]? 1397
POWer<m>:SWITching:RESult:TOFF:POWer:AVERage? 1398
POWer<m>:SWITching:RESult:TOFF:POWer:EVTCount? 1398
POWer<m>:SWITching:RESult:TOFF:POWer:NPEak? 1399
POWer<m>:SWITching:RESult:TOFF:POWer:PPEak? 1399
POWer<m>:SWITching:RESult:TOFF:POWer:RMS? 1400
POWer<m>:SWITching:RESult:TOFF:POWer:STDDev? 1400
POWer<m>:SWITching:RESult:TOFF:POWer:WFMCount? 1401
POWer<m>:SWITching:RESult:TOFF:POWer[:ACTual]? 1398
POWer<m>:SWITching:RESult:TON:ENERgy:AVERage? 1398
POWer<m>:SWITching:RESult:TON:ENERgy:EVTCount? 1398
POWer<m>:SWITching:RESult:TON:ENERgy:NPEak? 1399
POWer<m>:SWITching:RESult:TON:ENERgy:PPEak? 1399
POWer<m>:SWITching:RESult:TON:ENERgy:RMS? 1400
POWer<m>:SWITching:RESult:TON:ENERgy:STDDev? 1400
POWer<m>:SWITching:RESult:TON:ENERgy:WFMCount? 1401
POWer<m>:SWITching:RESult:TON:ENERgy[:ACTual]? 1398
POWer<m>:SWITching:RESult:TON:POWer:AVERage? 1398
POWer<m>:SWITching:RESult:TON:POWer:EVTCount? 1398
POWer<m>:SWITching:RESult:TON:POWer:NPEak? 1399
POWer<m>:SWITching:RESult:TON:POWer:PPEak? 1399
POWer<m>:SWITching:RESult:TON:POWer:RMS? 1400
POWer<m>:SWITching:RESult:TON:POWer:STDDev? 1400
POWer<m>:SWITching:RESult:TON:POWer:WFMCount? 1401
POWer<m>:SWITching:RESult:TON:POWer[:ACTual]? 1398
POWer<m>:SWITching:RESult:TOTal:ENERgy:AVERage? 1398
POWer<m>:SWITching:RESult:TOTal:ENERgy:EVTCount? 1399
POWer<m>:SWITching:RESult:TOTal:ENERgy:NPEak? 1399
POWer<m>:SWITching:RESult:TOTal:ENERgy:PPEak? 1400
POWer<m>:SWITching:RESult:TOTal:ENERgy:RMS? 1400
POWer<m>:SWITching:RESult:TOTal:ENERgy:STDDev? 1401
POWer<m>:SWITching:RESult:TOTal:ENERgy:WFMCount? 1401
POWer<m>:SWITching:RESult:TOTal:ENERgy[:ACTual]? 1398
POWer<m>:SWITching:RESult:TOTal:POWer:AVERage? 1398
POWer<m>:SWITching:RESult:TOTal:POWer:EVTCount? 1399
POWer<m>:SWITching:RESult:TOTal:POWer:NPEak? 1399
POWer<m>:SWITching:RESult:TOTal:POWer:PPEak? 1400
POWer<m>:SWITching:RESult:TOTal:POWer:RMS? 1400
POWer<m>:SWITching:RESult:TOTal:POWer:STDDev? 1401
POWer<m>:SWITching:RESult:TOTal:POWer:WFMCount? 1401
POWer<m>:SWITching:RESult:TOTal:POWer[:ACTual]? 1398
POWer<m>:SWITching:SOURce:CURRent 1391
POWer<m>:SWITching:SOURce[:VOLTage] 1392
POWer<m>:SWITching:STATistics:ENABle 1368
POWer<m>:SWITching:STATistics:RESet 1369
POWer<m>:SWITching:STATistics:WFMCount? 1369

POWer<m>:TYPE....1367
POWer<m>[:ENABle]....1367
PROBe<ch>:ID:PARTnumber?....1136
PROBe<ch>:ID:PRDate?....1136
PROBe<ch>:ID:SRNumber?....1137
PROBe<ch>:ID:SWVersion?....1137
PROBe<ch>:PMETer:RESults:COMMon?....1124
PROBe<ch>:PMETer:RESults:DIFFerential?....1124
PROBe<ch>:PMETer:RESults:NEGative?....1125
PROBe<ch>:PMETer:RESults:POSitive?....1125
PROBe<ch>:PMETer:RESults:SINGle?....1123
PROBe<ch>:PMETer:STATe....1123
PROBe<ch>:SETup:ACCoupling....1122
PROBe<ch>:SETup:ADAPter....1135
PROBe<ch>:SETup:ADVanced:AUDioverload....1125
PROBe<ch>:SETup:ADVanced:FILTer....1126
PROBe<ch>:SETup:ADVanced:PMToffset....1126
PROBe<ch>:SETup:ADVanced:PMToffset....1133
PROBe<ch>:SETup:ADVanced:RANGe....1126
PROBe<ch>:SETup:ADVanced:RDEFaults....1134
PROBe<ch>:SETup:ADVanced:UNIT....1132
PROBe<ch>:SETup:ALIGnment:GAIN:EXECute....1134
PROBe<ch>:SETup:ALIGnment:WRITe....1134
PROBe<ch>:SETup:ALIGnment:ZERO:EXECute....1134
PROBe<ch>:SETup:ATTenuation:DEFProbe....1117
PROBe<ch>:SETup:ATTenuation:MANual....1116
PROBe<ch>:SETup:ATTenuation:MODE....1116
PROBe<ch>:SETup:ATTenuation:TDEFprobe....1136
PROBe<ch>:SETup:ATTenuation:UNIT....1118
PROBe<ch>:SETup:ATTenuation[:AUTO]?....1116
PROBe<ch>:SETup:BANDwidth?....1118
PROBe<ch>:SETup:CAPacitance?....1137
PROBe<ch>:SETup:CMOFfset....1122
PROBe<ch>:SETup:CMOFfset....1128
PROBe<ch>:SETup:DCRange:MAX?....1138
PROBe<ch>:SETup:DCRange:MIN?....1138
PROBe<ch>:SETup:DEGauss....1131
PROBe<ch>:SETup:DISPlaydiff....1122
PROBe<ch>:SETup:DMOFfset....1128
PROBe<ch>:SETup:EPATtenuator....1123
PROBe<ch>:SETup:GAIN:AUTO?....1131
PROBe<ch>:SETup:GAIN:MANual....1131
PROBe<ch>:SETup:IMPedance?....1138
PROBe<ch>:SETup:LASer:STATe?....1133
PROBe<ch>:SETup:MODE....1121
PROBe<ch>:SETup:NAME?....1119
PROBe<ch>:SETup:NOFFset....1128
PROBe<ch>:SETup:OFFSet:AZERo....1119
PROBe<ch>:SETup:OFFSet:STPRobe....1132
PROBe<ch>:SETup:OFFSet:TOMean....1118

PROBe<ch>:SETup:OFFSet:USEautozero ... 1119
PROBe<ch>:SETup:OFFSet:ZADJust ... 1132
PROBe<ch>:SETup:POFFset ... 1129
PROBe<ch>:SETup:PRMode ... 1127
PROBe<ch>:SETup:STATe? ... 1120
PROBe<ch>:SETup:TERM:ADJust ... 1129
PROBe<ch>:SETup:TERM:MEASure? ... 1129
PROBe<ch>:SETup:TERM:MODE ... 1130
PROBe<ch>:SETup:TERM:STATe ... 1130
PROBe<ch>:SETup:TIPModel:INFO? ... 1135
PROBe<ch>:SETup:TIPModel:NAME? ... 1135
PROBe<ch>:SETup:TYPE? ... 1120
REFCurve<rc>:ABORt ... 1219
REFCurve<rc>:AXIS[:XMODe] ... 1222
REFCurve<rc>:CLEar ... 1219
REFCurve<rc>:DATA:HEADer? ... 1256
REFCurve<rc>:DATA:STYPe? ... 1257
REFCurve<rc>:DATA[:VALues]? ... 1257
REFCurve<rc>:HMODe ... 1223
REFCurve<rc>:NAME ... 1219
REFCurve<rc>:OFFSet ... 1220
REFCurve<rc>:OPEN ... 1220
REFCurve<rc>:POSition ... 1223
REFCurve<rc>:RESCale:HORizontal:FACTor ... 1224
REFCurve<rc>:RESCale:HORizontal:OFFSet ... 1224
REFCurve<rc>:RESCale:HORizontal:STATe ... 1224
REFCurve<rc>:RESCale:VERTical:FACTor ... 1225
REFCurve<rc>:RESCale:VERTical:OFFSet ... 1225
REFCurve<rc>:RESCale:VERTical:STATe ... 1225
REFCurve<rc>:RESTore ... 1220
REFCurve<rc>:SAVE ... 1220
REFCurve<rc>:SCALe ... 1223
REFCurve<rc>:SOURce ... 1221
REFCurve<rc>:STATe ... 1222
REFCurve<rc>:TOORiginal ... 1226
REFCurve<rc>:UPDate ... 1222
REFCurve<rc>:VMODe ... 1226
REFLevel<rl>:ABSolute:HYSTeresis ... 1187
REFLevel<rl>:ABSolute:LLEVel ... 1187
REFLevel<rl>:ABSolute:MLEVel ... 1187
REFLevel<rl>:ABSolute:ULEVel ... 1188
REFLevel<rl>:AUTO:MODE ... 1186
REFLevel<rl>:ENABle ... 1186
REFLevel<rl>:LMODe ... 1186
REFLevel<rl>:RELative:HYSTeresis ... 1188
REFLevel<rl>:RELative:LOWer ... 1188
REFLevel<rl>:RELative:MIDDle ... 1189
REFLevel<rl>:RELative:MODE ... 1189
REFLevel<rl>:RELative:UPPer ... 1189
RUN ... 1100

RUNCont....1100
RUNSingle....1100
SAVeset:CONFig:PREView....1239
SAVeset:CONFig:UPReferences....1239
SBUS<sb>:ARINc:BRMode....1961
SBUS<sb>:ARINc:BRValue....1961
SBUS<sb>:ARINc:FILTer:BIT....1967
SBUS<sb>:ARINc:FILTer:CHKall....1966
SBUS<sb>:ARINc:FILTer:CLR....1966
SBUS<sb>:ARINc:FILTer:DMAX....1968
SBUS<sb>:ARINc:FILTer:DMIN....1968
SBUS<sb>:ARINc:FILTer:DOPerator....1969
SBUS<sb>:ARINc:FILTer:ERENable....1968
SBUS<sb>:ARINc:FILTer:ERRor<n>:ENABle....1968
SBUS<sb>:ARINc:FILTer:FIENable....1969
SBUS<sb>:ARINc:FILTer:FRAMe<fr>:ENABle....1969
SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:BIT....1967
SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:DMAX....1968
SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:DMIN....1968
SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:DOPerator....1969
SBUS<sb>:ARINc:FILTer:FRAMe<fr>:FLD<fl>:ENABle....1969
SBUS<sb>:ARINc:FILTer:FRENable....1969
SBUS<sb>:ARINc:FILTer:INVert....1967
SBUS<sb>:ARINc:FILTer:RST....1967
SBUS<sb>:ARINc:FORMat:ADDFrame....1971
SBUS<sb>:ARINc:FORMat:CLR....1972
SBUS<sb>:ARINc:FORMat:FCOunt?....1972
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ADDField....1972
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:COLor....1973
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:ADDValue....1977
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:BITCount....1975
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:BITorder....1976
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:COLor....1974
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel....1978
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue....1977
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:FORMat....1976
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:FSTBit....1975
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:NAME....1974
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:PARA....1979
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:PARB....1979
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:REPetition....1975
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLD<fl>:UNIT....1978
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:FLDCount?....1972
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ID1Field....1973
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ID1Value....1974
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ID2Field....1973
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ID2Value....1974
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ID3Field....1973
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:ID3Value....1974
SBUS<sb>:ARINc:FORMat:FRAMe<fr>:NAME....1973

SBUS<sb>:ARINc:FORMat:FRAMe<fr>:TYPE 1973
SBUS<sb>:ARINc:FORMat:LOAD 1971
SBUS<sb>:ARINc:FORMat:SAVE 1971
SBUS<sb>:ARINc:FORMat:SELect 1970
SBUS<sb>:ARINc:MAXGap:BITS 1964
SBUS<sb>:ARINc:MAXGap:SELect 1964
SBUS<sb>:ARINc:MINGap:BITS 1964
SBUS<sb>:ARINc:MINGap:SELect 1965
SBUS<sb>:ARINc:NEWList 1963
SBUS<sb>:ARINc:POLarity 1962
SBUS<sb>:ARINc:POSition 1965
SBUS<sb>:ARINc:SCALe 1965
SBUS<sb>:ARINc:SOURce 1962
SBUS<sb>:ARINc:SWTindex? 1983
SBUS<sb>:ARINc:SWTTime? 1983
SBUS<sb>:ARINc:SYMBols 1963
SBUS<sb>:ARINc:THReshold:HIGH 1962
SBUS<sb>:ARINc:THReshold:HYSTeresis 1963
SBUS<sb>:ARINc:THReshold:LOW 1963
SBUS<sb>:ARINc:WCOunt? 1984
SBUS<sb>:ARINc:WORD<w>:BITRate? 1984
SBUS<sb>:ARINc:WORD<w>:DATA? 1986
SBUS<sb>:ARINc:WORD<w>:FLD<fl>:FVALue? 1986
SBUS<sb>:ARINc:WORD<w>:FLD<fl>:LABel? 1985
SBUS<sb>:ARINc:WORD<w>:FLD<fl>:STATe? 1985
SBUS<sb>:ARINc:WORD<w>:FLD<fl>:VALue? 1986
SBUS<sb>:ARINc:WORD<w>:FLDCount? 1984
SBUS<sb>:ARINc:WORD<w>:LABel? 1987
SBUS<sb>:ARINc:WORD<w>:PATTern? 1987
SBUS<sb>:ARINc:WORD<w>:SDI? 1987
SBUS<sb>:ARINc:WORD<w>:SSM? 1988
SBUS<sb>:ARINc:WORD<w>:STARt? 1988
SBUS<sb>:ARINc:WORD<w>:STATe? 1988
SBUS<sb>:ARINc:WORD<w>:STOP? 1989
SBUS<sb>:ARINc:WORD<w>:SYMBol? 1989
SBUS<sb>:CAN:BITRate 1845
SBUS<sb>:CAN:FAST:HYSTeresis 1847
SBUS<sb>:CAN:FAST:THReshold 1847
SBUS<sb>:CAN:FCOunt? 1880
SBUS<sb>:CAN:FDATa:DBITrate 1846
SBUS<sb>:CAN:FDATa:SAMPlepoint 1846
SBUS<sb>:CAN:FILTer:BIT 1851
SBUS<sb>:CAN:FILTer:CHKall 1850
SBUS<sb>:CAN:FILTer:CLR 1850
SBUS<sb>:CAN:FILTer:DMAX 1851
SBUS<sb>:CAN:FILTer:DMIN 1852
SBUS<sb>:CAN:FILTer:DOPerator 1852
SBUS<sb>:CAN:FILTer:ERENable 1852
SBUS<sb>:CAN:FILTer:ERRor<n>:ENABle 1852
SBUS<sb>:CAN:FILTer:FIENable 1853

SBUS<sb>:CAN:FILTer:FRAMe<fr>:ENABle ... 1853
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:BIT ... 1851
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:DMAX ... 1851
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:DMIN ... 1852
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:DOPerator ... 1852
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:ENABle ... 1853
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:IMAX ... 1853
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:IMIN ... 1854
SBUS<sb>:CAN:FILTer:FRAMe<fr>:FLD<fl>:IOPerator ... 1854
SBUS<sb>:CAN:FILTer:FRENable ... 1853
SBUS<sb>:CAN:FILTer:IMAX ... 1853
SBUS<sb>:CAN:FILTer:IMIN ... 1854
SBUS<sb>:CAN:FILTer:INVert ... 1850
SBUS<sb>:CAN:FILTer:IOPerator ... 1854
SBUS<sb>:CAN:FILTer:RST ... 1851
SBUS<sb>:CAN:FORMat:ADDFrame ... 1856
SBUS<sb>:CAN:FORMat:CLR ... 1856
SBUS<sb>:CAN:FORMat:FCOunt? ... 1857
SBUS<sb>:CAN:FORMat:FRAMe<fr>:ADDField ... 1857
SBUS<sb>:CAN:FORMat:FRAMe<fr>:COLor ... 1858
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:ADDValue ... 1862
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:BITCount ... 1860
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:BITorder ... 1861
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:COLor ... 1859
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel ... 1863
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue ... 1862
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:FORMat ... 1861
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:FSTBit ... 1860
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:NAME ... 1859
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:PARA ... 1863
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:PARB ... 1863
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:REPetition ... 1860
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLD<fl>:UNIT ... 1863
SBUS<sb>:CAN:FORMat:FRAMe<fr>:FLDCount? ... 1857
SBUS<sb>:CAN:FORMat:FRAMe<fr>:ID1Field ... 1858
SBUS<sb>:CAN:FORMat:FRAMe<fr>:ID1Value ... 1859
SBUS<sb>:CAN:FORMat:FRAMe<fr>:ID2Field ... 1858
SBUS<sb>:CAN:FORMat:FRAMe<fr>:ID2Value ... 1859
SBUS<sb>:CAN:FORMat:FRAMe<fr>:ID3Field ... 1858
SBUS<sb>:CAN:FORMat:FRAMe<fr>:ID3Value ... 1859
SBUS<sb>:CAN:FORMat:FRAMe<fr>:NAME ... 1857
SBUS<sb>:CAN:FORMat:FRAMe<fr>:TYPE ... 1858
SBUS<sb>:CAN:FORMat:LOAD ... 1856
SBUS<sb>:CAN:FORMat:SAVE ... 1856
SBUS<sb>:CAN:FORMat:SELect ... 1855
SBUS<sb>:CAN:FRAMe<fr>:ACKState? ... 1881
SBUS<sb>:CAN:FRAMe<fr>:ACKValue? ... 1881
SBUS<sb>:CAN:FRAMe<fr>:CSSTate? ... 1883
SBUS<sb>:CAN:FRAMe<fr>:CSValue? ... 1883
SBUS<sb>:CAN:FRAMe<fr>:DATA? ... 1884

SBUS<sb>:CAN:FRAMe<fr>:DBITrate? 1891
SBUS<sb>:CAN:FRAMe<fr>:DLCState? 1884
SBUS<sb>:CAN:FRAMe<fr>:DLCValue? 1884
SBUS<sb>:CAN:FRAMe<fr>:FDATa<o>:BRS? 1891
SBUS<sb>:CAN:FRAMe<fr>:FDATa<o>:ESI? 1890
SBUS<sb>:CAN:FRAMe<fr>:FLD<fl>:FVALue? 1883
SBUS<sb>:CAN:FRAMe<fr>:FLD<fl>:LABel? 1882
SBUS<sb>:CAN:FRAMe<fr>:FLD<fl>:STATe? 1881
SBUS<sb>:CAN:FRAMe<fr>:FLD<fl>:VALue? 1882
SBUS<sb>:CAN:FRAMe<fr>:FLDCount? 1880
SBUS<sb>:CAN:FRAMe<fr>:IDSTate? 1885
SBUS<sb>:CAN:FRAMe<fr>:IDTYpe? 1885
SBUS<sb>:CAN:FRAMe<fr>:IDValue? 1885
SBUS<sb>:CAN:FRAMe<fr>:NBITrate? 1891
SBUS<sb>:CAN:FRAMe<fr>:NDBYtes? 1886
SBUS<sb>:CAN:FRAMe<fr>:SBC? 1889
SBUS<sb>:CAN:FRAMe<fr>:STARt? 1886
SBUS<sb>:CAN:FRAMe<fr>:STATus? 1886
SBUS<sb>:CAN:FRAMe<fr>:STOP? 1887
SBUS<sb>:CAN:FRAMe<fr>:SYMBol? 1887
SBUS<sb>:CAN:FRAMe<fr>:TYPE? 1888
SBUS<sb>:CAN:FRAMe<fr>:XDATa<o>:AF? 1888
SBUS<sb>:CAN:FRAMe<fr>:XDATa<o>:FCRC? 1892
SBUS<sb>:CAN:FRAMe<fr>:XDATa<o>:PCRC? 1888
SBUS<sb>:CAN:FRAMe<fr>:XDATa<o>:SDT? 1889
SBUS<sb>:CAN:FRAMe<fr>:XDATa<o>:SEC? 1889
SBUS<sb>:CAN:FRAMe<fr>:XDATa<o>:VCID? 1890
SBUS<sb>:CAN:NEWList 1848
SBUS<sb>:CAN:POSition 1849
SBUS<sb>:CAN:SAMPlepoint 1845
SBUS<sb>:CAN:SCALe 1849
SBUS<sb>:CAN:SIC:HYSTeresis 1846
SBUS<sb>:CAN:SIC:THReshold 1846
SBUS<sb>:CAN:SOURce 1845
SBUS<sb>:CAN:SWTindex? 1879
SBUS<sb>:CAN:SWTTime? 1879
SBUS<sb>:CAN:SYMBols 1848
SBUS<sb>:CAN:TRCVmode 1848
SBUS<sb>:CAN:TYPE 1844
SBUS<sb>:CAN:XDATa:DBITrate 1847
SBUS<sb>:CAN:XDATa:SAMPlepoint 1848
SBUS<sb>:DPHY:CLK:HYSTeresis 1662
SBUS<sb>:DPHY:CLK:SOURce 1662
SBUS<sb>:DPHY:CLK:THReshold 1662
SBUS<sb>:DPHY:DISTribute 1662
SBUS<sb>:DPHY:DNZero:HYSTeresis 1664
SBUS<sb>:DPHY:DNZero:LPHYsteresis 1665
SBUS<sb>:DPHY:DNZero:LPTHreshold 1664
SBUS<sb>:DPHY:DNZero:SOURce 1663
SBUS<sb>:DPHY:DNZero:THReshold 1663

SBUS<sb>:DPHY:DPONe:HYSTeresis....1666
SBUS<sb>:DPHY:DPONe:POSition....1666
SBUS<sb>:DPHY:DPONe:SCALe....1666
SBUS<sb>:DPHY:DPONe:SCALe....1666
SBUS<sb>:DPHY:DPONe:SCALe....1666
SBUS<sb>:DPHY:DPONe:SOURce....1665
SBUS<sb>:DPHY:DPONe:THReshold....1665
SBUS<sb>:DPHY:DPTHree:HYSTeresis....1666
SBUS<sb>:DPHY:DPTHree:POSition....1666
SBUS<sb>:DPHY:DPTHree:SCALe....1666
SBUS<sb>:DPHY:DPTHree:SOURce....1665
SBUS<sb>:DPHY:DPTHree:THReshold....1665
SBUS<sb>:DPHY:DPTWo:HYSTeresis....1666
SBUS<sb>:DPHY:DPTWo:POSition....1666
SBUS<sb>:DPHY:DPTWo:SCALe....1666
SBUS<sb>:DPHY:DPTWo:SOURce....1665
SBUS<sb>:DPHY:DPTWo:THReshold....1665
SBUS<sb>:DPHY:DPZero:HYSTeresis....1664
SBUS<sb>:DPHY:DPZero:LPHYsteresis....1665
SBUS<sb>:DPHY:DPZero:LPTHreshold....1664
SBUS<sb>:DPHY:DPZero:POSition....1664
SBUS<sb>:DPHY:DPZero:SCALe....1664
SBUS<sb>:DPHY:DPZero:SOURce....1663
SBUS<sb>:DPHY:DPZero:THReshold....1663
SBUS<sb>:DPHY:FCOunt?....1688
SBUS<sb>:DPHY:FILTer:BIT....1668
SBUS<sb>:DPHY:FILTer:CHKall....1667
SBUS<sb>:DPHY:FILTer:CLR....1667
SBUS<sb>:DPHY:FILTer:DMAX....1669
SBUS<sb>:DPHY:FILTer:DMIN....1669
SBUS<sb>:DPHY:FILTer:DOPerator....1670
SBUS<sb>:DPHY:FILTer:ERENable....1669
SBUS<sb>:DPHY:FILTer:ERRor<n>:ENABle....1669
SBUS<sb>:DPHY:FILTer:FIENable....1670
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:ENABle....1670
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:BIT....1668
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:DMAX....1669
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:DMIN....1669
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:DOPerator....1670
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:ENABle....1670
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:IMAX....1671
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:IMIN....1671
SBUS<sb>:DPHY:FILTer:FRAMe<fr>:FLD<fl>:IOPerator....1672
SBUS<sb>:DPHY:FILTer:FRENable....1670
SBUS<sb>:DPHY:FILTer:IMAX....1671
SBUS<sb>:DPHY:FILTer:IMIN....1671
SBUS<sb>:DPHY:FILTer:INVert....1668
SBUS<sb>:DPHY:FILTer:IOPerator....1672
SBUS<sb>:DPHY:FILTer:RST....1668
SBUS<sb>:DPHY:FORMat:ADDFrame....1673

SBUS<sb>:DPHY:FORMat:CLR....1674
SBUS<sb>:DPHY:FORMat:FCOunt?....1674
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ADDField....1674
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:COLor....1675
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:ADDValue....1679
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:BITCount....1677
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:BITorder....1678
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:COLor....1676
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel....1680
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue....1680
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:FORMat....1678
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:FSTBit....1677
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:NAME....1676
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:PARA....1681
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:PARB....1681
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:REPetition....1678
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLD<fl>:UNIT....1680
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:FLDCount?....1674
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ID1Field....1676
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ID1Value....1676
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ID2Field....1676
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ID2Value....1676
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ID3Field....1676
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:ID3Value....1676
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:NAME....1675
SBUS<sb>:DPHY:FORMat:FRAMe<fr>:TYPE....1675
SBUS<sb>:DPHY:FORMat:LOAD....1673
SBUS<sb>:DPHY:FORMat:SAVE....1673
SBUS<sb>:DPHY:FORMat:SELect....1673
SBUS<sb>:DPHY:FRAMe<fr>:BITRate?....1688
SBUS<sb>:DPHY:FRAMe<fr>:CRC?....1692
SBUS<sb>:DPHY:FRAMe<fr>:DATA?....1693
SBUS<sb>:DPHY:FRAMe<fr>:DT?....1693
SBUS<sb>:DPHY:FRAMe<fr>:ECC?....1694
SBUS<sb>:DPHY:FRAMe<fr>:FDT?....1693
SBUS<sb>:DPHY:FRAMe<fr>:FLD<fl>:FVALue?....1690
SBUS<sb>:DPHY:FRAMe<fr>:FLD<fl>:LABel?....1689
SBUS<sb>:DPHY:FRAMe<fr>:FLD<fl>:STATe?....1689
SBUS<sb>:DPHY:FRAMe<fr>:FLD<fl>:VALue?....1690
SBUS<sb>:DPHY:FRAMe<fr>:FLDCount?....1688
SBUS<sb>:DPHY:FRAMe<fr>:FVCid?....1694
SBUS<sb>:DPHY:FRAMe<fr>:FWC?....1695
SBUS<sb>:DPHY:FRAMe<fr>:STARt?....1691
SBUS<sb>:DPHY:FRAMe<fr>:STATus?....1690
SBUS<sb>:DPHY:FRAMe<fr>:STOP?....1691
SBUS<sb>:DPHY:FRAMe<fr>:TYPE?....1692
SBUS<sb>:DPHY:FRAMe<fr>:VCID?....1694
SBUS<sb>:DPHY:FRAMe<fr>:WC?....1695
SBUS<sb>:DPHY:MODE....1661
SBUS<sb>:DPHY:POSition....1663

SBUS<sb>:DPHY:SCALe....1663
SBUS<sb>:DPHY:SCRambled....1661
SBUS<sb>:DPHY:SWTindex?....1687
SBUS<sb>:DPHY:SWTTime?....1687
SBUS<sb>:EBTB:DATA:HYSTeresis....1818
SBUS<sb>:EBTB:DATA:SOURce....1818
SBUS<sb>:EBTB:DATA:THReshold....1818
SBUS<sb>:EBTB:FCOunt?....1838
SBUS<sb>:EBTB:FILTer:BIT....1821
SBUS<sb>:EBTB:FILTer:CHKall....1820
SBUS<sb>:EBTB:FILTer:CLR....1820
SBUS<sb>:EBTB:FILTer:DMAX....1821
SBUS<sb>:EBTB:FILTer:DMIN....1822
SBUS<sb>:EBTB:FILTer:DOPerator....1822
SBUS<sb>:EBTB:FILTer:ERENable....1821
SBUS<sb>:EBTB:FILTer:ERRor<n>:ENABle....1821
SBUS<sb>:EBTB:FILTer:FIENable....1823
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:ENABle....1823
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:BIT....1821
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:DMAX....1821
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:DMIN....1822
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:DOPerator....1822
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:ENABle....1823
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:IMAX....1823
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:IMIN....1824
SBUS<sb>:EBTB:FILTer:FRAMe<fr>:FLD<fl>:IOPerator....1824
SBUS<sb>:EBTB:FILTer:FRENable....1823
SBUS<sb>:EBTB:FILTer:IMAX....1823
SBUS<sb>:EBTB:FILTer:IMIN....1824
SBUS<sb>:EBTB:FILTer:INVert....1820
SBUS<sb>:EBTB:FILTer:IOPerator....1824
SBUS<sb>:EBTB:FILTer:RST....1820
SBUS<sb>:EBTB:FORMat:ADDFrame....1825
SBUS<sb>:EBTB:FORMat:CLR....1826
SBUS<sb>:EBTB:FORMat:FCOunt?....1826
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:ADDField....1826
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:COLor....1827
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:ADDValue....1830
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:BITCount....1828
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:CLMN....1830
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:COLor....1828
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:CONDition....1829
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel....1831
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue....1831
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:FORMat....1829
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:NAME....1827
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:PARA....1832
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:PARB....1832
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLD<fl>:UNIT....1831
SBUS<sb>:EBTB:FORMat:FRAMe<fr>:FLDCount?....1827

SBUS<sb>:EBTB:FORMat:FRAMe<fr>:NAME ... 1827
SBUS<sb>:EBTB:FORMat:LOAD ... 1825
SBUS<sb>:EBTB:FORMat:SAVE ... 1826
SBUS<sb>:EBTB:FRAMe<fr>:BITRate? ... 1839
SBUS<sb>:EBTB:FRAMe<fr>:CONE? ... 1843
SBUS<sb>:EBTB:FRAMe<fr>:CTHRee? ... 1843
SBUS<sb>:EBTB:FRAMe<fr>:CTWO? ... 1843
SBUS<sb>:EBTB:FRAMe<fr>:FLD<fl>:FVALue? ... 1841
SBUS<sb>:EBTB:FRAMe<fr>:FLD<fl>:LABel? ... 1840
SBUS<sb>:EBTB:FRAMe<fr>:FLD<fl>:STATe? ... 1839
SBUS<sb>:EBTB:FRAMe<fr>:FLD<fl>:VALue? ... 1840
SBUS<sb>:EBTB:FRAMe<fr>:FLDCount? ... 1839
SBUS<sb>:EBTB:FRAMe<fr>:STARt? ... 1842
SBUS<sb>:EBTB:FRAMe<fr>:STATus? ... 1841
SBUS<sb>:EBTB:FRAMe<fr>:STOP? ... 1842
SBUS<sb>:EBTB:FRAMe<fr>:TYPE? ... 1842
SBUS<sb>:EBTB:POSition ... 1819
SBUS<sb>:EBTB:SCALe ... 1819
SBUS<sb>:EBTB:SWTindex? ... 1837
SBUS<sb>:EBTB:SWTTime? ... 1838
SBUS<sb>:EXPResult:DETail ... 1493
SBUS<sb>:EXPResult:EXTension ... 1494
SBUS<sb>:EXPResult:PATH ... 1494
SBUS<sb>:EXPResult:SAVE ... 1493
SBUS<sb>:EXPResult:TIME ... 1493
SBUS<sb>:FORMat ... 1491
SBUS<sb>:HBTO:FCOunt? ... 2163
SBUS<sb>:HBTO:FILTer:BIT ... 2144
SBUS<sb>:HBTO:FILTer:CHKall ... 2143
SBUS<sb>:HBTO:FILTer:CLR ... 2143
SBUS<sb>:HBTO:FILTer:DMAX ... 2144
SBUS<sb>:HBTO:FILTer:DMIN ... 2145
SBUS<sb>:HBTO:FILTer:DOPerator ... 2145
SBUS<sb>:HBTO:FILTer:ERENable ... 2145
SBUS<sb>:HBTO:FILTer:ERRor<n>:ENABle ... 2145
SBUS<sb>:HBTO:FILTer:FIENable ... 2146
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:ENABle ... 2146
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:BIT ... 2144
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:DMAX ... 2144
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:DMIN ... 2145
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:DOPerator ... 2145
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:ENABle ... 2146
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:IMAX ... 2146
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:IMIN ... 2147
SBUS<sb>:HBTO:FILTer:FRAMe<fr>:FLD<fl>:IOPerator ... 2147
SBUS<sb>:HBTO:FILTer:FRENable ... 2146
SBUS<sb>:HBTO:FILTer:IMAX ... 2146
SBUS<sb>:HBTO:FILTer:IMIN ... 2147
SBUS<sb>:HBTO:FILTer:INVert ... 2143
SBUS<sb>:HBTO:FILTer:IOPerator ... 2147

SBUS<sb>:HBTO:FILTer:RST ... 2144
SBUS<sb>:HBTO:FORMat:ADDFrame ... 2148
SBUS<sb>:HBTO:FORMat:CLR ... 2149
SBUS<sb>:HBTO:FORMat:FCOunt? ... 2149
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ADDField ... 2150
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:COLor ... 2150
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:ADDValue ... 2155
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:BITCount ... 2153
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:BITorder ... 2153
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:COLor ... 2152
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel ... 2155
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue ... 2155
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:FORMat ... 2154
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:FSTBit ... 2152
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:NAME ... 2152
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:PARA ... 2156
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:PARB ... 2156
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:REPetition ... 2153
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLD<fl>:UNIT ... 2156
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:FLDCount? ... 2150
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ID1Field ... 2151
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ID1Value ... 2151
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ID2Field ... 2151
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ID2Value ... 2151
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ID3Field ... 2151
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:ID3Value ... 2151
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:NAME ... 2150
SBUS<sb>:HBTO:FORMat:FRAMe<fr>:TYPE ... 2151
SBUS<sb>:HBTO:FORMat:LOAD ... 2149
SBUS<sb>:HBTO:FORMat:SAVE ... 2149
SBUS<sb>:HBTO:FORMat:SELect ... 2148
SBUS<sb>:HBTO:FRAMe<fr>:BITRate? ... 2163
SBUS<sb>:HBTO:FRAMe<fr>:CRC? ... 2165
SBUS<sb>:HBTO:FRAMe<fr>:DATA? ... 2166
SBUS<sb>:HBTO:FRAMe<fr>:DTADdress? ... 2166
SBUS<sb>:HBTO:FRAMe<fr>:DTSYmbol? ... 2166
SBUS<sb>:HBTO:FRAMe<fr>:FCRC? ... 2167
SBUS<sb>:HBTO:FRAMe<fr>:FDATa? ... 2167
SBUS<sb>:HBTO:FRAMe<fr>:FDTaddress? ... 2167
SBUS<sb>:HBTO:FRAMe<fr>:FLD<fl>:FVALue? ... 2164
SBUS<sb>:HBTO:FRAMe<fr>:FLD<fl>:LABel? ... 2164
SBUS<sb>:HBTO:FRAMe<fr>:FLD<fl>:STATe? ... 2164
SBUS<sb>:HBTO:FRAMe<fr>:FLD<fl>:VALue? ... 2165
SBUS<sb>:HBTO:FRAMe<fr>:FLDCount? ... 2163
SBUS<sb>:HBTO:FRAMe<fr>:FSRaddress? ... 2167
SBUS<sb>:HBTO:FRAMe<fr>:FTPLenth? ... 2168
SBUS<sb>:HBTO:FRAMe<fr>:SRADdress? ... 2168
SBUS<sb>:HBTO:FRAMe<fr>:SRSYmbol? ... 2168
SBUS<sb>:HBTO:FRAMe<fr>:STARt? ... 2169
SBUS<sb>:HBTO:FRAMe<fr>:STATus? ... 2169

SBUS<sb>:HBTO:FRAMe<fr>:STOP? 2170
SBUS<sb>:HBTO:FRAMe<fr>:TPLenth? 2170
SBUS<sb>:HBTO:FRAMe<fr>:TYPE? 2170
SBUS<sb>:HBTO:MODE 2140
SBUS<sb>:HBTO:NEWList 2142
SBUS<sb>:HBTO:POLarity 2141
SBUS<sb>:HBTO:POSition 2141
SBUS<sb>:HBTO:SCALe 2141
SBUS<sb>:HBTO:SOURce 2141
SBUS<sb>:HBTO:SWTindex? 2162
SBUS<sb>:HBTO:SWTTime? 2162
SBUS<sb>:HBTO:SYMBols 2142
SBUS<sb>:I2C:FCOunt? 1619
SBUS<sb>:I2C:FILTer:BIT 1599
SBUS<sb>:I2C:FILTer:CHKall 1595
SBUS<sb>:I2C:FILTer:CLR 1595
SBUS<sb>:I2C:FILTer:DMAX 1596
SBUS<sb>:I2C:FILTer:DMIN 1597
SBUS<sb>:I2C:FILTer:DOPerator 1597
SBUS<sb>:I2C:FILTer:ERENable 1598
SBUS<sb>:I2C:FILTer:ERRor<n>:ENABle 1598
SBUS<sb>:I2C:FILTer:FIENable 1599
SBUS<sb>:I2C:FILTer:FRAMe<fr>:ENABle 1596
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:BIT 1599
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:DMAX 1596
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:DMIN 1597
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:DOPerator 1597
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:ENABle 1599
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:IMAX 1598
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:IMIN 1598
SBUS<sb>:I2C:FILTer:FRAMe<fr>:FLD<fl>:IOPerator 1599
SBUS<sb>:I2C:FILTer:FRENable 1596
SBUS<sb>:I2C:FILTer:IMAX 1598
SBUS<sb>:I2C:FILTer:IMIN 1598
SBUS<sb>:I2C:FILTer:INVert 1596
SBUS<sb>:I2C:FILTer:IOPerator 1599
SBUS<sb>:I2C:FILTer:RST 1596
SBUS<sb>:I2C:FORMat:ADDFrame 1601
SBUS<sb>:I2C:FORMat:CLR 1602
SBUS<sb>:I2C:FORMat:FCOunt? 1602
SBUS<sb>:I2C:FORMat:FRAMe<fr>:ADDField 1602
SBUS<sb>:I2C:FORMat:FRAMe<fr>:COLor 1603
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:ADDValue 1607
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:BITCount 1605
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:BITorder 1606
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:COLor 1604
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel 1608
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue 1607
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:FORMat 1606
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:FSTBit 1605

SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:NAME ... 1604
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:PARA ... 1609
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:PARB ... 1609
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:REPetition ... 1605
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLD<fl>:UNIT ... 1608
SBUS<sb>:I2C:FORMat:FRAMe<fr>:FLDCount? ... 1602
SBUS<sb>:I2C:FORMat:FRAMe<fr>:ID1Field ... 1603
SBUS<sb>:I2C:FORMat:FRAMe<fr>:ID1Value ... 1604
SBUS<sb>:I2C:FORMat:FRAMe<fr>:ID2Field ... 1603
SBUS<sb>:I2C:FORMat:FRAMe<fr>:ID2Value ... 1604
SBUS<sb>:I2C:FORMat:FRAMe<fr>:ID3Field ... 1603
SBUS<sb>:I2C:FORMat:FRAMe<fr>:ID3Value ... 1604
SBUS<sb>:I2C:FORMat:FRAMe<fr>:NAME ... 1603
SBUS<sb>:I2C:FORMat:FRAMe<fr>:TYPE ... 1603
SBUS<sb>:I2C:FORMat:LOAD ... 1601
SBUS<sb>:I2C:FORMat:SAVE ... 1601
SBUS<sb>:I2C:FORMat:SELect ... 1601
SBUS<sb>:I2C:FRAMe<fr>:AACCess? ... 1619
SBUS<sb>:I2C:FRAMe<fr>:ACCess? ... 1620
SBUS<sb>:I2C:FRAMe<fr>:ACOMplete? ... 1620
SBUS<sb>:I2C:FRAMe<fr>:ADBStart? ... 1620
SBUS<sb>:I2C:FRAMe<fr>:ADDRess? ... 1621
SBUS<sb>:I2C:FRAMe<fr>:ADEVice? ... 1621
SBUS<sb>:I2C:FRAMe<fr>:AMODe? ... 1621
SBUS<sb>:I2C:FRAMe<fr>:ASTart? ... 1622
SBUS<sb>:I2C:FRAMe<fr>:BITRate? ... 1622
SBUS<sb>:I2C:FRAMe<fr>:DATA? ... 1625
SBUS<sb>:I2C:FRAMe<fr>:FLD<fl>:FVALue? ... 1623
SBUS<sb>:I2C:FRAMe<fr>:FLD<fl>:LABel? ... 1623
SBUS<sb>:I2C:FRAMe<fr>:FLD<fl>:STARt? ... 1623
SBUS<sb>:I2C:FRAMe<fr>:FLD<fl>:STATe? ... 1624
SBUS<sb>:I2C:FRAMe<fr>:FLD<fl>:VALue? ... 1624
SBUS<sb>:I2C:FRAMe<fr>:FLDCount? ... 1622
SBUS<sb>:I2C:FRAMe<fr>:RWBStart? ... 1625
SBUS<sb>:I2C:FRAMe<fr>:STARt? ... 1625
SBUS<sb>:I2C:FRAMe<fr>:STATus? ... 1626
SBUS<sb>:I2C:FRAMe<fr>:STOP? ... 1626
SBUS<sb>:I2C:FRAMe<fr>:SYMBol? ... 1627
SBUS<sb>:I2C:NEWList ... 1594
SBUS<sb>:I2C:POSition ... 1593
SBUS<sb>:I2C:SCALe ... 1593
SBUS<sb>:I2C:SCL:HYSTeresis ... 1592
SBUS<sb>:I2C:SCL:SOURce ... 1592
SBUS<sb>:I2C:SCL:THReshold ... 1592
SBUS<sb>:I2C:SDA:HYSTeresis ... 1592
SBUS<sb>:I2C:SDA:SOURce ... 1593
SBUS<sb>:I2C:SDA:THReshold ... 1593
SBUS<sb>:I2C:SWTindex? ... 1618
SBUS<sb>:I2C:SWTTime? ... 1618
SBUS<sb>:I2C:SYMBols ... 1594

SBUS<sb>:I3C:FCOunt? 1652
SBUS<sb>:I3C:FILTer:BIT 1636
SBUS<sb>:I3C:FILTer:CHKall 1631
SBUS<sb>:I3C:FILTer:CLR 1632
SBUS<sb>:I3C:FILTer:DMAX 1633
SBUS<sb>:I3C:FILTer:DMIN 1633
SBUS<sb>:I3C:FILTer:DOPerator 1634
SBUS<sb>:I3C:FILTer:ERENable 1634
SBUS<sb>:I3C:FILTer:ERRor<n>:ENABle 1634
SBUS<sb>:I3C:FILTer:FIENable 1636
SBUS<sb>:I3C:FILTer:FRAMe<fr>:ENABle 1632
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:BIT 1636
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:DMAX 1633
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:DMIN 1633
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:DOPerator 1634
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:ENABle 1636
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:IMAX 1634
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:IMIN 1635
SBUS<sb>:I3C:FILTer:FRAMe<fr>:FLD<fl>:IOPerator 1635
SBUS<sb>:I3C:FILTer:FRENable 1632
SBUS<sb>:I3C:FILTer:IMAX 1634
SBUS<sb>:I3C:FILTer:IMIN 1635
SBUS<sb>:I3C:FILTer:INVert 1632
SBUS<sb>:I3C:FILTer:IOPerator 1635
SBUS<sb>:I3C:FILTer:RST 1632
SBUS<sb>:I3C:FORMat:ADDFrame 1637
SBUS<sb>:I3C:FORMat:CLR 1638
SBUS<sb>:I3C:FORMat:FCOunt? 1638
SBUS<sb>:I3C:FORMat:FRAMe<fr>:ADDField 1638
SBUS<sb>:I3C:FORMat:FRAMe<fr>:COLor 1639
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:ADDValue 1643
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:BITCount 1642
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:BITorder 1642
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:COLor 1641
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel 1644
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue 1644
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:FORMat 1643
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:FSTBit 1641
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:NAME 1641
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:PARA 1645
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:PARB 1645
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:REPetition 1642
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLD<fl>:UNIT 1645
SBUS<sb>:I3C:FORMat:FRAMe<fr>:FLDCount? 1639
SBUS<sb>:I3C:FORMat:FRAMe<fr>:ID1Field 1640
SBUS<sb>:I3C:FORMat:FRAMe<fr>:ID1Value 1640
SBUS<sb>:I3C:FORMat:FRAMe<fr>:ID2Field 1640
SBUS<sb>:I3C:FORMat:FRAMe<fr>:ID2Value 1640
SBUS<sb>:I3C:FORMat:FRAMe<fr>:ID3Field 1640
SBUS<sb>:I3C:FORMat:FRAMe<fr>:ID3Value 1640

SBUS<sb>:I3C:FORMat:FRAMe<fr>:NAME....1639
SBUS<sb>:I3C:FORMat:FRAMe<fr>:TYPE....1640
SBUS<sb>:I3C:FORMat:LOAD....1637
SBUS<sb>:I3C:FORMat:SAVE....1638
SBUS<sb>:I3C:FORMat:SELect....1637
SBUS<sb>:I3C:FRAMe<fr>:ACK?....1656
SBUS<sb>:I3C:FRAMe<fr>:ACKStart?....1656
SBUS<sb>:I3C:FRAMe<fr>:ADDRess?....1652
SBUS<sb>:I3C:FRAMe<fr>:ASTart?....1652
SBUS<sb>:I3C:FRAMe<fr>:BITRate?....1653
SBUS<sb>:I3C:FRAMe<fr>:COMMand?....1658
SBUS<sb>:I3C:FRAMe<fr>:CRC?....1658
SBUS<sb>:I3C:FRAMe<fr>:DATA?....1653
SBUS<sb>:I3C:FRAMe<fr>:FADDress?....1658
SBUS<sb>:I3C:FRAMe<fr>:FCOMmand?....1659
SBUS<sb>:I3C:FRAMe<fr>:FCRC?....1659
SBUS<sb>:I3C:FRAMe<fr>:FLD<fl>:FVALue?....1656
SBUS<sb>:I3C:FRAMe<fr>:FLD<fl>:LABel?....1657
SBUS<sb>:I3C:FRAMe<fr>:FLD<fl>:STATe?....1657
SBUS<sb>:I3C:FRAMe<fr>:FLD<fl>:VALue?....1658
SBUS<sb>:I3C:FRAMe<fr>:FLDCount?....1653
SBUS<sb>:I3C:FRAMe<fr>:RWBit?....1659
SBUS<sb>:I3C:FRAMe<fr>:RWBStart?....1654
SBUS<sb>:I3C:FRAMe<fr>:STARt?....1654
SBUS<sb>:I3C:FRAMe<fr>:STATus?....1654
SBUS<sb>:I3C:FRAMe<fr>:STOP?....1655
SBUS<sb>:I3C:FRAMe<fr>:SYMBol?....1655
SBUS<sb>:I3C:FRAMe<fr>:TYPE?....1660
SBUS<sb>:I3C:MINGap:SELect....1629
SBUS<sb>:I3C:MINGap:WIDTh....1629
SBUS<sb>:I3C:NEWList....1630
SBUS<sb>:I3C:POSition....1630
SBUS<sb>:I3C:SCALe....1630
SBUS<sb>:I3C:SCL:HYSTeresis....1627
SBUS<sb>:I3C:SCL:SOURce....1628
SBUS<sb>:I3C:SCL:THReshold....1628
SBUS<sb>:I3C:SDA:HYSTeresis....1628
SBUS<sb>:I3C:SDA:SOURce....1628
SBUS<sb>:I3C:SDA:THReshold....1629
SBUS<sb>:I3C:SWTindex?....1651
SBUS<sb>:I3C:SWTTime?....1651
SBUS<sb>:I3C:SYMBols....1630
SBUS<sb>:LIN:BITRate....1892
SBUS<sb>:LIN:DATA:HYSTeresis....1893
SBUS<sb>:LIN:DATA:SOURce....1893
SBUS<sb>:LIN:DATA:THReshold....1893
SBUS<sb>:LIN:FCOunt?....1919
SBUS<sb>:LIN:FILTer:BIT....1897
SBUS<sb>:LIN:FILTer:CHKall....1896
SBUS<sb>:LIN:FILTer:CLR....1896

SBUS<sb>:LIN:FILTer:DMAX ... 1897
SBUS<sb>:LIN:FILTer:DMIN ... 1898
SBUS<sb>:LIN:FILTer:DOPerator ... 1898
SBUS<sb>:LIN:FILTer:ERENable ... 1898
SBUS<sb>:LIN:FILTer:ERRor<n>:ENABle ... 1898
SBUS<sb>:LIN:FILTer:FIENable ... 1899
SBUS<sb>:LIN:FILTer:FRAMe<fr>:ENABle ... 1899
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:BIT ... 1897
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:DMAX ... 1897
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:DMIN ... 1898
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:DOPerator ... 1898
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:ENABle ... 1899
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:IMAX ... 1899
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:IMIN ... 1900
SBUS<sb>:LIN:FILTer:FRAMe<fr>:FLD<fl>:IOPerator ... 1900
SBUS<sb>:LIN:FILTer:FRENable ... 1899
SBUS<sb>:LIN:FILTer:IMAX ... 1899
SBUS<sb>:LIN:FILTer:IMIN ... 1900
SBUS<sb>:LIN:FILTer:INVert ... 1896
SBUS<sb>:LIN:FILTer:IOPerator ... 1900
SBUS<sb>:LIN:FILTer:RST ... 1897
SBUS<sb>:LIN:FORMat:ADDFrame ... 1902
SBUS<sb>:LIN:FORMat:CLR ... 1902
SBUS<sb>:LIN:FORMat:FCOunt? ... 1903
SBUS<sb>:LIN:FORMat:FRAMe<fr>:ADDField ... 1903
SBUS<sb>:LIN:FORMat:FRAMe<fr>:COLor ... 1904
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:ADDValue ... 1908
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:BITCount ... 1906
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:BITorder ... 1907
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:COLor ... 1905
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel ... 1909
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue ... 1908
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:FORMat ... 1907
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:FSTBit ... 1906
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:NAME ... 1905
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:PARA ... 1909
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:PARB ... 1909
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:REPetition ... 1906
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLD<fl>:UNIT ... 1909
SBUS<sb>:LIN:FORMat:FRAMe<fr>:FLDCount? ... 1903
SBUS<sb>:LIN:FORMat:FRAMe<fr>:ID1Field ... 1904
SBUS<sb>:LIN:FORMat:FRAMe<fr>:ID1Value ... 1905
SBUS<sb>:LIN:FORMat:FRAMe<fr>:ID2Field ... 1904
SBUS<sb>:LIN:FORMat:FRAMe<fr>:ID2Value ... 1905
SBUS<sb>:LIN:FORMat:FRAMe<fr>:ID3Field ... 1904
SBUS<sb>:LIN:FORMat:FRAMe<fr>:ID3Value ... 1905
SBUS<sb>:LIN:FORMat:FRAMe<fr>:NAME ... 1903
SBUS<sb>:LIN:FORMat:FRAMe<fr>:TYPE ... 1904
SBUS<sb>:LIN:FORMat:LOAD ... 1902
SBUS<sb>:LIN:FORMat:SAVE ... 1902

SBUS<sb>:LIN:FORMat:SELect ... 1901
SBUS<sb>:LIN:FRAMe<fr>:BITRate? ... 1920
SBUS<sb>:LIN:FRAMe<fr>:CSValue? ... 1922
SBUS<sb>:LIN:FRAMe<fr>:DATA? ... 1922
SBUS<sb>:LIN:FRAMe<fr>:FLD<fl>:FVALue? ... 1921
SBUS<sb>:LIN:FRAMe<fr>:FLD<fl>:LABel? ... 1921
SBUS<sb>:LIN:FRAMe<fr>:FLD<fl>:STATe? ... 1920
SBUS<sb>:LIN:FRAMe<fr>:FLD<fl>:VALue? ... 1921
SBUS<sb>:LIN:FRAMe<fr>:FLDCount? ... 1920
SBUS<sb>:LIN:FRAMe<fr>:IDPValue? ... 1922
SBUS<sb>:LIN:FRAMe<fr>:IDValue? ... 1923
SBUS<sb>:LIN:FRAMe<fr>:PIDentifier? ... 1924
SBUS<sb>:LIN:FRAMe<fr>:STARt? ... 1923
SBUS<sb>:LIN:FRAMe<fr>:STATus? ... 1923
SBUS<sb>:LIN:FRAMe<fr>:STOP? ... 1924
SBUS<sb>:LIN:FRAMe<fr>:SYMBol? ... 1924
SBUS<sb>:LIN:NEWList ... 1895
SBUS<sb>:LIN:POLarity ... 1894
SBUS<sb>:LIN:POSition ... 1894
SBUS<sb>:LIN:SCALe ... 1894
SBUS<sb>:LIN:STANdard ... 1894
SBUS<sb>:LIN:SWTindex? ... 1918
SBUS<sb>:LIN:SWTTime? ... 1919
SBUS<sb>:LIN:SYMBols ... 1895
SBUS<sb>:MANCh:BITRate:SELect ... 1790
SBUS<sb>:MANCh:BITRate:WIDTh ... 1791
SBUS<sb>:MANCh:DATA:HYSTeresis ... 1791
SBUS<sb>:MANCh:DATA:PHASe ... 1789
SBUS<sb>:MANCh:DATA:POLarity ... 1788
SBUS<sb>:MANCh:DATA:SOURce ... 1788
SBUS<sb>:MANCh:DATA:THLower ... 1791
SBUS<sb>:MANCh:DATA:THUPper ... 1791
SBUS<sb>:MANCh:ENABle:HYSTeresis ... 1792
SBUS<sb>:MANCh:ENABle:POLarity ... 1789
SBUS<sb>:MANCh:ENABle:SOURce ... 1789
SBUS<sb>:MANCh:ENABle:THReshold ... 1792
SBUS<sb>:MANCh:FCOunt? ... 1813
SBUS<sb>:MANCh:FILTer:BIT ... 1794
SBUS<sb>:MANCh:FILTer:CHKall ... 1793
SBUS<sb>:MANCh:FILTer:CLR ... 1794
SBUS<sb>:MANCh:FILTer:DMAX ... 1795
SBUS<sb>:MANCh:FILTer:DMIN ... 1795
SBUS<sb>:MANCh:FILTer:DOPerator ... 1796
SBUS<sb>:MANCh:FILTer:ERENable ... 1795
SBUS<sb>:MANCh:FILTer:ERRor<n>:ENABle ... 1795
SBUS<sb>:MANCh:FILTer:FIENable ... 1796
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:ENABle ... 1797
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:BIT ... 1794
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:DMAX ... 1795
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:DMIN ... 1795

SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:DOPerator....1796
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:ENABle....1796
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:IMAX....1797
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:IMIN....1797
SBUS<sb>:MANCh:FILTer:FRAMe<fr>:FLD<fl>:IOPerator....1798
SBUS<sb>:MANCh:FILTer:FRENable....1797
SBUS<sb>:MANCh:FILTer:IMAX....1797
SBUS<sb>:MANCh:FILTer:IMIN....1797
SBUS<sb>:MANCh:FILTer:INVert....1794
SBUS<sb>:MANCh:FILTer:IOPerator....1798
SBUS<sb>:MANCh:FILTer:RST....1794
SBUS<sb>:MANCh:FORMat:ADDFrame....1799
SBUS<sb>:MANCh:FORMat:CLR....1799
SBUS<sb>:MANCh:FORMat:FCOunt?....1800
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:ADDField....1800
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:COLor....1801
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:ADDValue....1804
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:BITCount....1802
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:BITorder....1803
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:CLMN....1804
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:COLor....1801
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:CONDition....1802
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel....1805
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue....1805
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:FORMat....1803
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:NAME....1801
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:PARA....1806
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:PARB....1806
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLD<fl>:UNIT....1806
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:FLDCount?....1800
SBUS<sb>:MANCh:FORMat:FRAMe<fr>:NAME....1801
SBUS<sb>:MANCh:FORMat:LOAD....1799
SBUS<sb>:MANCh:FORMat:SAVE....1799
SBUS<sb>:MANCh:FRAMe<fr>:CONE?....1816
SBUS<sb>:MANCh:FRAMe<fr>:CTHRee?....1817
SBUS<sb>:MANCh:FRAMe<fr>:CTWO?....1817
SBUS<sb>:MANCh:FRAMe<fr>:FLD<fl>:FVALue?....1815
SBUS<sb>:MANCh:FRAMe<fr>:FLD<fl>:LABel?....1814
SBUS<sb>:MANCh:FRAMe<fr>:FLD<fl>:STATe?....1813
SBUS<sb>:MANCh:FRAMe<fr>:FLD<fl>:VALue?....1814
SBUS<sb>:MANCh:FRAMe<fr>:FLDCount?....1813
SBUS<sb>:MANCh:FRAMe<fr>:STARt?....1815
SBUS<sb>:MANCh:FRAMe<fr>:STATus?....1815
SBUS<sb>:MANCh:FRAMe<fr>:STOP?....1816
SBUS<sb>:MANCh:FRAMe<fr>:TYPE?....1816
SBUS<sb>:MANCh:FRAMe<fr>:WBRate?....1813
SBUS<sb>:MANCh:MINGap:SELect....1790
SBUS<sb>:MANCh:MINGap:WIDTh....1790
SBUS<sb>:MANCh:POSition....1792
SBUS<sb>:MANCh:SCALe....1792

SBUS<sb>:MANCh:SWTindex? 1812
SBUS<sb>:MANCh:SWTTime? 1812
SBUS<sb>:MILStd:FILTer:BIT 1994
SBUS<sb>:MILStd:FILTer:CHKall 1993
SBUS<sb>:MILStd:FILTer:CLR 1993
SBUS<sb>:MILStd:FILTer:DMAX 1995
SBUS<sb>:MILStd:FILTer:DMIN 1995
SBUS<sb>:MILStd:FILTer:DOPerator 1995
SBUS<sb>:MILStd:FILTer:ERENable 1994
SBUS<sb>:MILStd:FILTer:ERRor<n>:ENABle 1994
SBUS<sb>:MILStd:FILTer:FIENable 1997
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:ENABle 1997
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:BIT 1994
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:DMAX 1995
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:DMIN 1995
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:DOPerator 1995
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:ENABle 1997
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:IMAX 1996
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:IMIN 1996
SBUS<sb>:MILStd:FILTer:FRAMe<fr>:FLD<fl>:IOPerator 1997
SBUS<sb>:MILStd:FILTer:FRENable 1997
SBUS<sb>:MILStd:FILTer:IMAX 1996
SBUS<sb>:MILStd:FILTer:IMIN 1996
SBUS<sb>:MILStd:FILTer:INVert 1993
SBUS<sb>:MILStd:FILTer:IOPerator 1997
SBUS<sb>:MILStd:FILTer:RST 1994
SBUS<sb>:MILStd:FORMat:ADDFrame 1999
SBUS<sb>:MILStd:FORMat:CLR 1999
SBUS<sb>:MILStd:FORMat:FCOunt? 2000
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:ADDField 2000
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:COLor 2001
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:ADDValue 2005
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:BITCount 2003
SBUS<sb>:MILStd:FORMAt:FRAMe<fr>:FLD<fl>:BITorder 2003
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:COLor 2002
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel 2005
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue 2005
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:FORMat 2004
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:FSTBit 2002
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:NAME 2002
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:PARA 2006
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:PARB 2006
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:REPetition 2003
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLD<fl>:UNIT 2006
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:FLDCount? 2000
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:ID1Field 2001
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:ID1Value 2001
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:ID2Field 2001
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:ID2Value 2001
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:ID3Field 2001

SBUS<sb>:MILStd:FORMat:FRAMe<fr>:ID3Value....2001
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:NAME....2000
SBUS<sb>:MILStd:FORMat:FRAMe<fr>:TYPE....2001
SBUS<sb>:MILStd:FORMat:LOAD....1999
SBUS<sb>:MILStd:FORMat:SAVE....1999
SBUS<sb>:MILStd:FORMat:SELect....1998
SBUS<sb>:MILStd:NEWList....1991
SBUS<sb>:MILStd:POLarity....1990
SBUS<sb>:MILStd:POSition....1991
SBUS<sb>:MILStd:SCALe....1992
SBUS<sb>:MILStd:SOURce....1990
SBUS<sb>:MILStd:SWTindex?....2012
SBUS<sb>:MILStd:SWTTime?....2012
SBUS<sb>:MILStd:SYMBols....1992
SBUS<sb>:MILStd:THReshold:HIGH....1990
SBUS<sb>:MILStd:THReshold:HYSTeresis....1991
SBUS<sb>:MILStd:THReshold:LOW....1991
SBUS<sb>:MILStd:WCOunt?....2013
SBUS<sb>:MILStd:WORD<w>:BITRate?....2013
SBUS<sb>:MILStd:WORD<w>:DATA?....2015
SBUS<sb>:MILStd:WORD<w>:FLD<fl>:FVALue?....2015
SBUS<sb>:MILStd:WORD<w>:FLD<fl>:LABel?....2014
SBUS<sb>:MILStd:WORD<w>:FLD<fl>:STATe?....2013
SBUS<sb>:MILStd:WORD<w>:FLD<fl>:VALue?....2014
SBUS<sb>:MILStd:WORD<w>:FLDCount?....2013
SBUS<sb>:MILStd:WORD<w>:INFO?....2015
SBUS<sb>:MILStd:WORD<w>:RTADdress?....2015
SBUS<sb>:MILStd:WORD<w>:STARt?....2016
SBUS<sb>:MILStd:WORD<w>:STATus?....2016
SBUS<sb>:MILStd:WORD<w>:STOP?....2017
SBUS<sb>:MILStd:WORD<w>:SYMBol?....2017
SBUS<sb>:MILStd:WORD<w>:TYPE?....2017
SBUS<sb>:NRZC:CLK:HYSTeresis....1732
SBUS<sb>:NRZC:CLK:POLarity....1729
SBUS<sb>:NRZC:CLK:SOURce....1729
SBUS<sb>:NRZC:CLK:THReshold....1731
SBUS<sb>:NRZC:DATA:HYSTeresis....1732
SBUS<sb>:NRZC:DATA:POLarity....1730
SBUS<sb>:NRZC:DATA:SOURce....1729
SBUS<sb>:NRZC:DATA:THReshold....1732
SBUS<sb>:NRZC:ENABle:HYSTeresis....1733
SBUS<sb>:NRZC:ENABle:POLarity....1730
SBUS<sb>:NRZC:ENABle:SOURce....1730
SBUS<sb>:NRZC:ENABle:THReshold....1732
SBUS<sb>:NRZC:FCOunt?....1753
SBUS<sb>:NRZC:FILTer:BIT....1735
SBUS<sb>:NRZC:FILTer:CHKall....1734
SBUS<sb>:NRZC:FILTer:CLR....1734
SBUS<sb>:NRZC:FILTer:DMAX....1736
SBUS<sb>:NRZC:FILTer:DMIN....1736

SBUS<sb>:NRZC:FILTer:DOPerator ... 1736
SBUS<sb>:NRZC:FILTer:ERENable ... 1735
SBUS<sb>:NRZC:FILTer:ERRor<n>:ENABle ... 1735
SBUS<sb>:NRZC:FILTer:FIENable ... 1737
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:ENABle ... 1737
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:BIT ... 1735
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:DMAX ... 1736
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:DMIN ... 1736
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:DOPerator ... 1736
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:ENABle ... 1737
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:IMAX ... 1738
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:IMIN ... 1738
SBUS<sb>:NRZC:FILTer:FRAMe<fr>:FLD<fl>:IOPerator ... 1738
SBUS<sb>:NRZC:FILTer:FRENable ... 1737
SBUS<sb>:NRZC:FILTer:IMAX ... 1738
SBUS<sb>:NRZC:FILTer:IMIN ... 1738
SBUS<sb>:NRZC:FILTer:INVert ... 1734
SBUS<sb>:NRZC:FILTer:IOPerator ... 1738
SBUS<sb>:NRZC:FILTer:RST ... 1735
SBUS<sb>:NRZC:FORMat:ADDFrame ... 1739
SBUS<sb>:NRZC:FORMat:CLR ... 1740
SBUS<sb>:NRZC:FORMat:FCOunt? ... 1740
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:ADDField ... 1741
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:COLor ... 1741
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:ADDValue ... 1745
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:BITCount ... 1742
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:BITorder ... 1744
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:CLMN ... 1744
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:COLor ... 1742
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:CONDition ... 1743
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel ... 1746
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue ... 1745
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:FORMat ... 1743
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:NAME ... 1742
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:PARA ... 1746
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:PARB ... 1746
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLD<fl>:UNIT ... 1746
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:FLDCount? ... 1741
SBUS<sb>:NRZC:FORMat:FRAMe<fr>:NAME ... 1741
SBUS<sb>:NRZC:FORMat:LOAD ... 1740
SBUS<sb>:NRZC:FORMat:SAVE ... 1740
SBUS<sb>:NRZC:FRAMe<fr>:CONE? ... 1757
SBUS<sb>:NRZC:FRAMe<fr>:CTHRee? ... 1758
SBUS<sb>:NRZC:FRAMe<fr>:CTWO? ... 1757
SBUS<sb>:NRZC:FRAMe<fr>:FLD<fl>:FVALue? ... 1755
SBUS<sb>:NRZC:FRAMe<fr>:FLD<fl>:LABel? ... 1755
SBUS<sb>:NRZC:FRAMe<fr>:FLD<fl>:STATe? ... 1754
SBUS<sb>:NRZC:FRAMe<fr>:FLD<fl>:VALue? ... 1755
SBUS<sb>:NRZC:FRAMe<fr>:FLDCount? ... 1753
SBUS<sb>:NRZC:FRAMe<fr>:STARt? ... 1756

SBUS<sb>:NRZC:FRAMe<fr>:STATus? 1755
SBUS<sb>:NRZC:FRAMe<fr>:STOP? 1756
SBUS<sb>:NRZC:FRAMe<fr>:TYPE? 1757
SBUS<sb>:NRZC:FRAMe<fr>:WBRate? 1754
SBUS<sb>:NRZC:MINGap:SELect 1731
SBUS<sb>:NRZC:MINGap:WIDTh 1731
SBUS<sb>:NRZC:POSition 1733
SBUS<sb>:NRZC:SCALe 1733
SBUS<sb>:NRZC:SWTindex? 1752
SBUS<sb>:NRZC:SWTTime? 1752
SBUS<sb>:NRZU:BITRate:SELect 1761
SBUS<sb>:NRZU:BITRate:WIDTh 1761
SBUS<sb>:NRZU:DATA:HYSTeresis 1761
SBUS<sb>:NRZU:DATA:POLarity 1759
SBUS<sb>:NRZU:DATA:SOURce 1758
SBUS<sb>:NRZU:DATA:THReshold 1761
SBUS<sb>:NRZU:ENABle:HYSTeresis 1762
SBUS<sb>:NRZU:ENABle:POLarity 1759
SBUS<sb>:NRZU:ENABle:SOURce 1759
SBUS<sb>:NRZU:ENABle:THReshold 1762
SBUS<sb>:NRZU:FCOunt? 1783
SBUS<sb>:NRZU:FILTer:BIT 1764
SBUS<sb>:NRZU:FILTer:CHKall 1763
SBUS<sb>:NRZU:FILTer:CLR 1764
SBUS<sb>:NRZU:FILTer:DMAX 1765
SBUS<sb>:NRZU:FILTer:DMIN 1765
SBUS<sb>:NRZU:FILTer:DOPerator 1766
SBUS<sb>:NRZU:FILTer:ERENable 1765
SBUS<sb>:NRZU:FILTer:ERRor<n>:ENABle 1765
SBUS<sb>:NRZU:FILTer:FIENable 1766
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:ENABle 1767
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:BIT 1764
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:DMAX 1765
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:DMIN 1765
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:DOPerator 1766
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:ENABle 1766
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:IMAX 1767
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:IMIN 1767
SBUS<sb>:NRZU:FILTer:FRAMe<fr>:FLD<fl>:IOPerator 1768
SBUS<sb>:NRZU:FILTer:FRENable 1767
SBUS<sb>:NRZU:FILTer:IMAX 1767
SBUS<sb>:NRZU:FILTer:IMIN 1767
SBUS<sb>:NRZU:FILTer:INVert 1764
SBUS<sb>:NRZU:FILTer:IOPerator 1768
SBUS<sb>:NRZU:FILTer:RST 1764
SBUS<sb>:NRZU:FORMat:ADDFrame 1769
SBUS<sb>:NRZU:FORMat:CLR 1769
SBUS<sb>:NRZU:FORMat:FCOunt? 1770
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:ADDField 1770
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:COLor 1771

SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:ADDValue....1774
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:BITCount....1772
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:BITorder....1773
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:CLMN....1774
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:COLor....1771
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:CONDition....1772
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel....1775
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue....1775
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:FORMat....1773
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:NAME....1771
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:PARA....1776
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:PARB....1776
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLD<fl>:UNIT....1776
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:FLDCount?....1770
SBUS<sb>:NRZU:FORMat:FRAMe<fr>:NAME....1771
SBUS<sb>:NRZU:FORMat:LOAD....1769
SBUS<sb>:NRZU:FORMat:SAVE....1769
SBUS<sb>:NRZU:FRAMe<fr>:CONE?....1786
SBUS<sb>:NRZU:FRAMe<fr>:CTHRee?....1787
SBUS<sb>:NRZU:FRAMe<fr>:CTWO?....1787
SBUS<sb>:NRZU:FRAMe<fr>:FLD<fl>:FVALue?....1785
SBUS<sb>:NRZU:FRAMe<fr>:FLD<fl>:LABel?....1784
SBUS<sb>:NRZU:FRAMe<fr>:FLD<fl>:STATe?....1783
SBUS<sb>:NRZU:FRAMe<fr>:FLD<fl>:VALue?....1784
SBUS<sb>:NRZU:FRAMe<fr>:FLDCount?....1783
SBUS<sb>:NRZU:FRAMe<fr>:STARt?....1785
SBUS<sb>:NRZU:FRAMe<fr>:STATus?....1785
SBUS<sb>:NRZU:FRAMe<fr>:STOP?....1786
SBUS<sb>:NRZU:FRAMe<fr>:TYPE?....1786
SBUS<sb>:NRZU:FRAMe<fr>:WBRate?....1783
SBUS<sb>:NRZU:MINGap:SELect....1760
SBUS<sb>:NRZU:MINGap:WIDTh....1760
SBUS<sb>:NRZU:POSition....1762
SBUS<sb>:NRZU:SCALe....1762
SBUS<sb>:NRZU:SWTindex?....1782
SBUS<sb>:NRZU:SWTTime?....1782
SBUS<sb>:OSPI:CK:HYSTeresis....1563
SBUS<sb>:OSPI:CK:SOURce....1564
SBUS<sb>:OSPI:CK:THReshold....1564
SBUS<sb>:OSPI:CSEL:HYSTeresis....1562
SBUS<sb>:OSPI:CSEL:POLarity....1562
SBUS<sb>:OSPI:CSEL:SOURce....1563
SBUS<sb>:OSPI:CSEL:THReshold....1563
SBUS<sb>:OSPI:DS:HYSTeresis....1567
SBUS<sb>:OSPI:DS:SOURce....1567
SBUS<sb>:OSPI:DS:THReshold....1567
SBUS<sb>:OSPI:FCOunt?....1585
SBUS<sb>:OSPI:FILTer:BIT....1569
SBUS<sb>:OSPI:FILTer:CHKall....1568
SBUS<sb>:OSPI:FILTer:CLR....1569

SBUS<sb>:OSPI:FILTer:DMAX ... 1570
SBUS<sb>:OSPI:FILTer:DMIN ... 1570
SBUS<sb>:OSPI:FILTer:DOPerator ... 1570
SBUS<sb>:OSPI:FILTer:ERENable ... 1572
SBUS<sb>:OSPI:FILTer:ERRor<n>:ENABle ... 1572
SBUS<sb>:OSPI:FILTer:FIENable ... 1572
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:ENABle ... 1573
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:BIT ... 1569
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:DMAX ... 1570
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:DMIN ... 1570
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:DOPerator ... 1570
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:ENABle ... 1572
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:IMAX ... 1571
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:IMIN ... 1571
SBUS<sb>:OSPI:FILTer:FRAMe<fr>:FLD<fl>:IOPerator ... 1572
SBUS<sb>:OSPI:FILTer:FRENable ... 1573
SBUS<sb>:OSPI:FILTer:IMAX ... 1571
SBUS<sb>:OSPI:FILTer:IMIN ... 1571
SBUS<sb>:OSPI:FILTer:INVert ... 1569
SBUS<sb>:OSPI:FILTer:IOPerator ... 1572
SBUS<sb>:OSPI:FILTer:RST ... 1569
SBUS<sb>:OSPI:FRAMe<fr>:ADDR? ... 1585
SBUS<sb>:OSPI:FRAMe<fr>:ADFormatted? ... 1585
SBUS<sb>:OSPI:FRAMe<fr>:BITRate? ... 1585
SBUS<sb>:OSPI:FRAMe<fr>:CEXTension? ... 1589
SBUS<sb>:OSPI:FRAMe<fr>:CMD? ... 1588
SBUS<sb>:OSPI:FRAMe<fr>:CMDFormatted? ... 1588
SBUS<sb>:OSPI:FRAMe<fr>:CXFormatted? ... 1589
SBUS<sb>:OSPI:FRAMe<fr>:DATA? ... 1586
SBUS<sb>:OSPI:FRAMe<fr>:DCOunt? ... 1589
SBUS<sb>:OSPI:FRAMe<fr>:FDATa? ... 1586
SBUS<sb>:OSPI:FRAMe<fr>:FLD<fl>:FVALue? ... 1587
SBUS<sb>:OSPI:FRAMe<fr>:FLD<fl>:LABel? ... 1587
SBUS<sb>:OSPI:FRAMe<fr>:FLD<fl>:STATe? ... 1588
SBUS<sb>:OSPI:FRAMe<fr>:FLD<fl>:VALue? ... 1587
SBUS<sb>:OSPI:FRAMe<fr>:FLDCount? ... 1586
SBUS<sb>:OSPI:FRAMe<fr>:STARt? ... 1590
SBUS<sb>:OSPI:FRAMe<fr>:STATus? ... 1590
SBUS<sb>:OSPI:FRAMe<fr>:STOP? ... 1591
SBUS<sb>:OSPI:FRAMe<fr>:TYPE? ... 1590
SBUS<sb>:OSPI:IOFR:HYSTeresis ... 1564
SBUS<sb>:OSPI:IOFR:POLarity ... 1565
SBUS<sb>:OSPI:IOFR:POSition ... 1565
SBUS<sb>:OSPI:IOFR:SCALe ... 1566
SBUS<sb>:OSPI:IOFR:SOURce ... 1566
SBUS<sb>:OSPI:IOFR:THReshold ... 1566
SBUS<sb>:OSPI:IOFV:HYSTeresis ... 1564
SBUS<sb>:OSPI:IOFV:POLarity ... 1565
SBUS<sb>:OSPI:IOFV:POSition ... 1565
SBUS<sb>:OSPI:IOFV:SCALe ... 1566

SBUS<sb>:OSPI:IOFV:SOURce....1566
SBUS<sb>:OSPI:IOFV:THReshold....1566
SBUS<sb>:OSPI:IOONe:HYSTeresis....1564
SBUS<sb>:OSPI:IOONe:POLarity....1565
SBUS<sb>:OSPI:IOONe:POSition....1565
SBUS<sb>:OSPI:IOONe:SCALe....1565
SBUS<sb>:OSPI:IOONe:SOURce....1566
SBUS<sb>:OSPI:IOONe:THReshold....1566
SBUS<sb>:OSPI:IOSV:HYSTeresis....1564
SBUS<sb>:OSPI:IOSV:POLarity....1565
SBUS<sb>:OSPI:IOSV:POSition....1565
SBUS<sb>:OSPI:IOSV:SCALe....1566
SBUS<sb>:OSPI:IOSV:SOURce....1566
SBUS<sb>:OSPI:IOSV:THReshold....1566
SBUS<sb>:OSPI:IOSX:HYSTeresis....1564
SBUS<sb>:OSPI:IOSX:POLarity....1565
SBUS<sb>:OSPI:IOSX:POSition....1565
SBUS<sb>:OSPI:IOSX:SCALe....1566
SBUS<sb>:OSPI:IOSX:SOURce....1566
SBUS<sb>:OSPI:IOSX:THReshold....1566
SBUS<sb>:OSPI:IOTHree:HYSTeresis....1564
SBUS<sb>:OSPI:IOTHree:POLarity....1565
SBUS<sb>:OSPI:IOTHree:POSition....1565
SBUS<sb>:OSPI:IOTHree:SCALe....1566
SBUS<sb>:OSPI:IOTHree:SOURce....1566
SBUS<sb>:OSPI:IOTHree:THReshold....1566
SBUS<sb>:OSPI:IOTWo:HYSTeresis....1564
SBUS<sb>:OSPI:IOTWo:POLarity....1565
SBUS<sb>:OSPI:IOTWo:POSition....1565
SBUS<sb>:OSPI:IOTWo:SCALe....1565
SBUS<sb>:OSPI:IOTWo:SOURce....1566
SBUS<sb>:OSPI:IOTWo:THReshold....1566
SBUS<sb>:OSPI:IOZero:HYSTeresis....1564
SBUS<sb>:OSPI:IOZero:POLarity....1565
SBUS<sb>:OSPI:IOZero:POSition....1565
SBUS<sb>:OSPI:IOZero:SCALe....1565
SBUS<sb>:OSPI:IOZero:SOURce....1566
SBUS<sb>:OSPI:IOZero:THReshold....1566
SBUS<sb>:OSPI:LDOPcode....1574
SBUS<sb>:OSPI:MODE....1563
SBUS<sb>:OSPI:OPCode:APPend....1573
SBUS<sb>:OSPI:OPCode:DALL....1574
SBUS<sb>:OSPI:OPCode:DELete....1574
SBUS<sb>:OSPI:OPCode:ITEM<n>:ADBYtes....1576
SBUS<sb>:OSPI:OPCode:ITEM<n>:ADMode....1577
SBUS<sb>:OSPI:OPCode:ITEM<n>:CMEXtension....1576
SBUS<sb>:OSPI:OPCode:ITEM<n>:CMMode....1576
SBUS<sb>:OSPI:OPCode:ITEM<n>:CODE....1575
SBUS<sb>:OSPI:OPCode:ITEM<n>:DTMode....1578
SBUS<sb>:OSPI:OPCode:ITEM<n>:DTTYpe....1578

SBUS<sb>:OSPI:OPCode:ITEM<n>:LACYcles ... 1577
SBUS<sb>:OSPI:OPCode:ITEM<n>:NAME ... 1575
SBUS<sb>:OSPI:OPCode:RESet ... 1574
SBUS<sb>:OSPI:OPCode:SIZE? ... 1575
SBUS<sb>:OSPI:SVOP ... 1575
SBUS<sb>:OSPI:SWTindex? ... 1584
SBUS<sb>:OSPI:SWTTime? ... 1584
SBUS<sb>:QSPI:CSEL:HYSTeresis ... 1529
SBUS<sb>:QSPI:CSEL:POLarity ... 1530
SBUS<sb>:QSPI:CSEL:SOURce ... 1530
SBUS<sb>:QSPI:CSEL:THReshold ... 1530
SBUS<sb>:QSPI:FCOunt? ... 1555
SBUS<sb>:QSPI:FILTer:BIT ... 1540
SBUS<sb>:QSPI:FILTer:CHKall ... 1539
SBUS<sb>:QSPI:FILTer:CLR ... 1539
SBUS<sb>:QSPI:FILTer:DMAX ... 1540
SBUS<sb>:QSPI:FILTer:DMIN ... 1541
SBUS<sb>:QSPI:FILTer:DOPerator ... 1541
SBUS<sb>:QSPI:FILTer:ERENable ... 1543
SBUS<sb>:QSPI:FILTer:ERRor<n>:ENABle ... 1543
SBUS<sb>:QSPI:FILTer:FIENable ... 1543
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:ENABle ... 1543
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:BIT ... 1540
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:DMAX ... 1540
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:DMIN ... 1541
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:DOPerator ... 1541
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:ENABle ... 1543
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:IMAX ... 1541
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:IMIN ... 1542
SBUS<sb>:QSPI:FILTer:FRAMe<fr>:FLD<fl>:IOPerator ... 1542
SBUS<sb>:QSPI:FILTer:FRENable ... 1543
SBUS<sb>:QSPI:FILTer:IMAX ... 1541
SBUS<sb>:QSPI:FILTer:IMIN ... 1542
SBUS<sb>:QSPI:FILTer:INVert ... 1539
SBUS<sb>:QSPI:FILTer:IOPerator ... 1542
SBUS<sb>:QSPI:FILTer:RST ... 1540
SBUS<sb>:QSPI:FRAMe<fr>:ADDR? ... 1555
SBUS<sb>:QSPI:FRAMe<fr>:ALT? ... 1556
SBUS<sb>:QSPI:FRAMe<fr>:BITRate? ... 1556
SBUS<sb>:QSPI:FRAMe<fr>:DATA? ... 1556
SBUS<sb>:QSPI:FRAMe<fr>:FDATa? ... 1557
SBUS<sb>:QSPI:FRAMe<fr>:FLD<fl>:FVALue? ... 1557
SBUS<sb>:QSPI:FRAMe<fr>:FLD<fl>:LABel? ... 1558
SBUS<sb>:QSPI:FRAMe<fr>:FLD<fl>:STATe? ... 1558
SBUS<sb>:QSPI:FRAMe<fr>:FLD<fl>:VALue? ... 1557
SBUS<sb>:QSPI:FRAMe<fr>:FLDCount? ... 1556
SBUS<sb>:QSPI:FRAMe<fr>:ILBL? ... 1559
SBUS<sb>:QSPI:FRAMe<fr>:IVALue? ... 1559
SBUS<sb>:QSPI:FRAMe<fr>:STARt? ... 1559
SBUS<sb>:QSPI:FRAMe<fr>:STATus? ... 1560

SBUS<sb>:QSPI:FRAMe<fr>:STOP? 1560
SBUS<sb>:QSPI:FRAMe<fr>:TYPE? 1559
SBUS<sb>:QSPI:INSTruction 1531
SBUS<sb>:QSPI:IOONe:HYSTeresis 1531
SBUS<sb>:QSPI:IOONe:POLarity 1531
SBUS<sb>:QSPI:IOONe:POSition 1531
SBUS<sb>:QSPI:IOONe:SCALe 1532
SBUS<sb>:QSPI:IOONe:SOURce 1532
SBUS<sb>:QSPI:IOONe:THReshold 1532
SBUS<sb>:QSPI:IOTHree:HYSTeresis 1532
SBUS<sb>:QSPI:IOTHree:POLarity 1533
SBUS<sb>:QSPI:IOTHree:POSition 1533
SBUS<sb>:QSPI:IOTHree:SCALe 1533
SBUS<sb>:QSPI:IOTHree:SOURce 1533
SBUS<sb>:QSPI:IOTHree:THReshold 1534
SBUS<sb>:QSPI:IOTWo:HYSTeresis 1534
SBUS<sb>:QSPI:IOTWo:POLarity 1534
SBUS<sb>:QSPI:IOTWo:POSition 1535
SBUS<sb>:QSPI:IOTWo:SCALe 1535
SBUS<sb>:QSPI:IOTWo:SOURce 1535
SBUS<sb>:QSPI:IOTWo:THReshold 1535
SBUS<sb>:QSPI:IOZero:HYSTeresis 1536
SBUS<sb>:QSPI:IOZero:POLarity 1536
SBUS<sb>:QSPI:IOZero:POSition 1536
SBUS<sb>:QSPI:IOZero:SCALe 1536
SBUS<sb>:QSPI:IOZero:SOURce 1537
SBUS<sb>:QSPI:IOZero:THReshold 1537
SBUS<sb>:QSPI:LDOPcode 1545
SBUS<sb>:QSPI:OPCode:APPend 1544
SBUS<sb>:QSPI:OPCode:DALL 1544
SBUS<sb>:QSPI:OPCode:DELete 1544
SBUS<sb>:QSPI:OPCode:ITEM<n>:ADBYtes 1545
SBUS<sb>:QSPI:OPCode:ITEM<n>:ADLanes 1546
SBUS<sb>:QSPI:OPCode:ITEM<n>:ALT 1546
SBUS<sb>:QSPI:OPCode:ITEM<n>:CODE 1546
SBUS<sb>:QSPI:OPCode:ITEM<n>:DATA 1547
SBUS<sb>:QSPI:OPCode:ITEM<n>:DDR 1547
SBUS<sb>:QSPI:OPCode:ITEM<n>:DMCYcles 1547
SBUS<sb>:QSPI:OPCode:ITEM<n>:DTLanes 1548
SBUS<sb>:QSPI:OPCode:ITEM<n>:NAME 1548
SBUS<sb>:QSPI:OPCode:RESet 1545
SBUS<sb>:QSPI:OPCode:SIZE? 1545
SBUS<sb>:QSPI:SCLK:HYSTeresis 1537
SBUS<sb>:QSPI:SCLK:POLarity 1537
SBUS<sb>:QSPI:SCLK:SOURce 1538
SBUS<sb>:QSPI:SCLK:THReshold 1538
SBUS<sb>:QSPI:SVOP 1548
SBUS<sb>:QSPI:SWTindex? 1554
SBUS<sb>:QSPI:SWTTime? 1554
SBUS<sb>:RESult 1491

SBUS<sb>:RFFE:CLOCk:HYSTeresis....2077
SBUS<sb>:RFFE:CLOCk:SOURce....2077
SBUS<sb>:RFFE:CLOCk:THReshold....2077
SBUS<sb>:RFFE:DATA:HYSTeresis....2078
SBUS<sb>:RFFE:DATA:SOURce....2078
SBUS<sb>:RFFE:DATA:THReshold....2078
SBUS<sb>:RFFE:FCOunt?....2102
SBUS<sb>:RFFE:FILTer:BIT....2082
SBUS<sb>:RFFE:FILTer:CHKall....2081
SBUS<sb>:RFFE:FILTer:CLR....2081
SBUS<sb>:RFFE:FILTer:DMAX....2082
SBUS<sb>:RFFE:FILTer:DMIN....2083
SBUS<sb>:RFFE:FILTer:DOPerator....2083
SBUS<sb>:RFFE:FILTer:ERENable....2085
SBUS<sb>:RFFE:FILTer:ERRor<n>:ENABle....2085
SBUS<sb>:RFFE:FILTer:FIENable....2084
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:ENABle....2082
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:BIT....2082
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:DMAX....2082
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:DMIN....2083
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:DOPerator....2083
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:ENABle....2084
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:IMAX....2084
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:IMIN....2084
SBUS<sb>:RFFE:FILTer:FRAMe<fr>:FLD<fl>:IOPerator....2085
SBUS<sb>:RFFE:FILTer:FRENable....2082
SBUS<sb>:RFFE:FILTer:IMAX....2084
SBUS<sb>:RFFE:FILTer:IMIN....2084
SBUS<sb>:RFFE:FILTer:INVert....2081
SBUS<sb>:RFFE:FILTer:IOPerator....2085
SBUS<sb>:RFFE:FILTer:RST....2081
SBUS<sb>:RFFE:FORMat:ADDFrame....2086
SBUS<sb>:RFFE:FORMat:CLR....2087
SBUS<sb>:RFFE:FORMat:FCOunt?....2087
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ADDField....2088
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:COLor....2089
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:ADDValue....2093
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:BITCount....2091
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:BITorder....2092
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:COLor....2090
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel....2094
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue....2093
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:FORMat....2092
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:FSTBit....2091
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:NAME....2090
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:PARA....2094
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:PARB....2094
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:REPetition....2091
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLD<fl>:UNIT....2094
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:FLDCount?....2088

SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ID1Field ... 2089
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ID1Value ... 2090
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ID2Field ... 2089
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ID2Value ... 2090
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ID3Field ... 2089
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:ID3Value ... 2090
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:NAME ... 2088
SBUS<sb>:RFFE:FORMat:FRAMe<fr>:TYPE ... 2089
SBUS<sb>:RFFE:FORMat:LOAD ... 2087
SBUS<sb>:RFFE:FORMat:SAVE ... 2087
SBUS<sb>:RFFE:FORMat:SELect ... 2086
SBUS<sb>:RFFE:FRAMe<fr>:ADDRess? ... 2102
SBUS<sb>:RFFE:FRAMe<fr>:BCOunt? ... 2103
SBUS<sb>:RFFE:FRAMe<fr>:DATA? ... 2103
SBUS<sb>:RFFE:FRAMe<fr>:FLD<fl>:FVALue? ... 2104
SBUS<sb>:RFFE:FRAMe<fr>:FLD<fl>:NAME? ... 2104
SBUS<sb>:RFFE:FRAMe<fr>:FLD<fl>:STATe? ... 2104
SBUS<sb>:RFFE:FRAMe<fr>:FLD<fl>:VALue? ... 2104
SBUS<sb>:RFFE:FRAMe<fr>:FLDCount? ... 2103
SBUS<sb>:RFFE:FRAMe<fr>:PADone? ... 2101
SBUS<sb>:RFFE:FRAMe<fr>:PADZero? ... 2102
SBUS<sb>:RFFE:FRAMe<fr>:PCTRl? ... 2102
SBUS<sb>:RFFE:FRAMe<fr>:RBTRate? ... 2105
SBUS<sb>:RFFE:FRAMe<fr>:SADD? ... 2105
SBUS<sb>:RFFE:FRAMe<fr>:STARt? ... 2105
SBUS<sb>:RFFE:FRAMe<fr>:STATe? ... 2106
SBUS<sb>:RFFE:FRAMe<fr>:STOP? ... 2106
SBUS<sb>:RFFE:FRAMe<fr>:SYMBol? ... 2108
SBUS<sb>:RFFE:FRAMe<fr>:TYPE? ... 2106
SBUS<sb>:RFFE:FRAMe<fr>:WBTRate? ... 2108
SBUS<sb>:RFFE:GFILter ... 2079
SBUS<sb>:RFFE:GFWidth ... 2079
SBUS<sb>:RFFE:NEWList ... 2108
SBUS<sb>:RFFE:POSition ... 2079
SBUS<sb>:RFFE:RDMD ... 2079
SBUS<sb>:RFFE:SCALe ... 2080
SBUS<sb>:RFFE:SWTindex? ... 2100
SBUS<sb>:RFFE:SWTTime? ... 2100
SBUS<sb>:RFFE:SYMBols ... 2108
SBUS<sb>:RMSBus ... 1492
SBUS<sb>:SENT:CLKPeriod ... 1925
SBUS<sb>:SENT:CLKTolerance ... 1926
SBUS<sb>:SENT:CRCMethod ... 1926
SBUS<sb>:SENT:CRCVersion ... 1926
SBUS<sb>:SENT:DATA:HYSTeresis ... 1927
SBUS<sb>:SENT:DATA:SOURce ... 1927
SBUS<sb>:SENT:DATA:THReshold ... 1927
SBUS<sb>:SENT:DNIBbles ... 1928
SBUS<sb>:SENT:FCOunt? ... 1952
SBUS<sb>:SENT:FILTer:BIT ... 1933

SBUS<sb>:SENT:FILTer:CHKall....1932
SBUS<sb>:SENT:FILTer:CLR....1932
SBUS<sb>:SENT:FILTer:DMAX....1934
SBUS<sb>:SENT:FILTer:DMIN....1934
SBUS<sb>:SENT:FILTer:DOPerator....1935
SBUS<sb>:SENT:FILTer:ERENable....1937
SBUS<sb>:SENT:FILTer:ERRor<n>:ENABle....1937
SBUS<sb>:SENT:FILTer:FIENable....1935
SBUS<sb>:SENT:FILTer:FRAMe<fr>:ENABle....1933
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:BIT....1933
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:DMAX....1934
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:DMIN....1934
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:DOPerator....1935
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:ENABle....1935
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:IMAX....1935
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:IMIN....1936
SBUS<sb>:SENT:FILTer:FRAMe<fr>:FLD<fl>:IOPerator....1936
SBUS<sb>:SENT:FILTer:FRENable....1933
SBUS<sb>:SENT:FILTer:IMAX....1935
SBUS<sb>:SENT:FILTer:IMIN....1936
SBUS<sb>:SENT:FILTer:INVert....1933
SBUS<sb>:SENT:FILTer:IOPerator....1936
SBUS<sb>:SENT:FILTer:RST....1933
SBUS<sb>:SENT:FORMat:ADDFrame....1938
SBUS<sb>:SENT:FORMat:CLR....1939
SBUS<sb>:SENT:FORMat:FCOunt?....1939
SBUS<sb>:SENT:FORMat:FRAMe<fr>:ADDField....1939
SBUS<sb>:SENT:FORMat:FRAMe<fr>:COLor....1940
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:ADDValue....1944
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:BITCount....1942
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:BITorder....1943
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:COLor....1941
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel....1945
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue....1945
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:FORMat....1943
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:FSTBit....1942
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:NAME....1941
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:PARA....1946
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:PARB....1946
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:REPetition....1943
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLD<fl>:UNIT....1945
SBUS<sb>:SENT:FORMat:FRAMe<fr>:FLDCount?....1939
SBUS<sb>:SENT:FORMat:FRAMe<fr>:ID1Field....1941
SBUS<sb>:SENT:FORMat:FRAMe<fr>:ID1Value....1941
SBUS<sb>:SENT:FORMat:FRAMe<fr>:ID2Field....1941
SBUS<sb>:SENT:FORMat:FRAMe<fr>:ID2Value....1941
SBUS<sb>:SENT:FORMat:FRAMe<fr>:ID3Field....1941
SBUS<sb>:SENT:FORMat:FRAMe<fr>:ID3Value....1941
SBUS<sb>:SENT:FORMat:FRAMe<fr>:NAME....1940
SBUS<sb>:SENT:FORMat:FRAMe<fr>:TYPE....1940

SBUS<sb>:SENT:FORMat:LOAD....1938
SBUS<sb>:SENT:FORMat:SAVE....1938
SBUS<sb>:SENT:FORMat:SELect....1938
SBUS<sb>:SENT:FRAMe<fr>:BITRate?....1953
SBUS<sb>:SENT:FRAMe<fr>:CSValue?....1953
SBUS<sb>:SENT:FRAMe<fr>:DATA?....1953
SBUS<sb>:SENT:FRAMe<fr>:FDValues?....1954
SBUS<sb>:SENT:FRAMe<fr>:FLD<fl>:FVALue?....1956
SBUS<sb>:SENT:FRAMe<fr>:FLD<fl>:LABel?....1957
SBUS<sb>:SENT:FRAMe<fr>:FLD<fl>:STATe?....1956
SBUS<sb>:SENT:FRAMe<fr>:FLD<fl>:VALue?....1956
SBUS<sb>:SENT:FRAMe<fr>:FLDCount?....1955
SBUS<sb>:SENT:FRAMe<fr>:FSCom?....1954
SBUS<sb>:SENT:FRAMe<fr>:FSDTa?....1954
SBUS<sb>:SENT:FRAMe<fr>:IDTYpe?....1954
SBUS<sb>:SENT:FRAMe<fr>:IDValue?....1955
SBUS<sb>:SENT:FRAMe<fr>:MTPDuration?....1955
SBUS<sb>:SENT:FRAMe<fr>:PAPTicks?....1957
SBUS<sb>:SENT:FRAMe<fr>:SCOM?....1957
SBUS<sb>:SENT:FRAMe<fr>:SDATa?....1958
SBUS<sb>:SENT:FRAMe<fr>:SENSor?....1958
SBUS<sb>:SENT:FRAMe<fr>:STARt?....1958
SBUS<sb>:SENT:FRAMe<fr>:STATus?....1959
SBUS<sb>:SENT:FRAMe<fr>:STOP?....1959
SBUS<sb>:SENT:FRAMe<fr>:SYMBol?....1960
SBUS<sb>:SENT:FRAMe<fr>:SYNCduration?....1960
SBUS<sb>:SENT:FRAMe<fr>:TYPE?....1960
SBUS<sb>:SENT:MODE....1928
SBUS<sb>:SENT:NEWList....1928
SBUS<sb>:SENT:POSition....1929
SBUS<sb>:SENT:PPFLength....1929
SBUS<sb>:SENT:PPULse....1929
SBUS<sb>:SENT:RDSL....1930
SBUS<sb>:SENT:SCALe....1930
SBUS<sb>:SENT:SFORmat....1930
SBUS<sb>:SENT:SWTindex?....1930
SBUS<sb>:SENT:SWTindex?....1951
SBUS<sb>:SENT:SWTTime?....1931
SBUS<sb>:SENT:SWTTime?....1952
SBUS<sb>:SENT:SYMBols....1931
SBUS<sb>:SPI:BORDer....1495
SBUS<sb>:SPI:CSELect:HYSTeresis....1496
SBUS<sb>:SPI:CSELect:POLarity....1496
SBUS<sb>:SPI:CSELect:SOURce....1496
SBUS<sb>:SPI:CSELect:THReshold....1497
SBUS<sb>:SPI:FCOunt?....1524
SBUS<sb>:SPI:FILTer:BIT....1503
SBUS<sb>:SPI:FILTer:CHKall....1502
SBUS<sb>:SPI:FILTer:CLR....1503
SBUS<sb>:SPI:FILTer:DMAX....1504

SBUS<sb>:SPI:FILTer:DMIN ... 1504
SBUS<sb>:SPI:FILTer:DOPerator ... 1504
SBUS<sb>:SPI:FILTer:ERENable ... 1505
SBUS<sb>:SPI:FILTer:ERRor<n>:ENABle ... 1505
SBUS<sb>:SPI:FILTer:FIENable ... 1505
SBUS<sb>:SPI:FILTer:FRAMe<fr>:ENABle ... 1505
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:BIT ... 1503
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:DMAX ... 1504
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:DMIN ... 1504
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:DOPerator ... 1504
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:ENABle ... 1505
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:IMAX ... 1506
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:IMIN ... 1506
SBUS<sb>:SPI:FILTer:FRAMe<fr>:FLD<fl>:IOPerator ... 1507
SBUS<sb>:SPI:FILTer:FRENable ... 1505
SBUS<sb>:SPI:FILTer:IMAX ... 1506
SBUS<sb>:SPI:FILTer:IMIN ... 1506
SBUS<sb>:SPI:FILTer:INVert ... 1503
SBUS<sb>:SPI:FILTer:IOPerator ... 1507
SBUS<sb>:SPI:FILTer:RST ... 1503
SBUS<sb>:SPI:FORMat:ADDFrame ... 1508
SBUS<sb>:SPI:FORMat:CLR ... 1509
SBUS<sb>:SPI:FORMat:FCOunt? ... 1509
SBUS<sb>:SPI:FORMat:FRAMe<fr>:ADDField ... 1509
SBUS<sb>:SPI:FORMat:FRAMe<fr>:COLor ... 1510
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:ADDValue ... 1514
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:BITCount ... 1512
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:BITorder ... 1513
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:COLor ... 1511
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel ... 1515
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue ... 1515
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:FORMat ... 1513
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:FSTBit ... 1512
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:NAME ... 1511
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:PARA ... 1516
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:PARB ... 1516
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:REPetition ... 1513
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLD<fl>:UNIT ... 1515
SBUS<sb>:SPI:FORMat:FRAMe<fr>:FLDCount? ... 1509
SBUS<sb>:SPI:FORMat:FRAMe<fr>:ID1Field ... 1511
SBUS<sb>:SPI:FORMat:FRAMe<fr>:ID1Value ... 1511
SBUS<sb>:SPI:FORMat:FRAMe<fr>:ID2Field ... 1511
SBUS<sb>:SPI:FORMat:FRAMe<fr>:ID2Value ... 1511
SBUS<sb>:SPI:FORMat:FRAMe<fr>:ID3Field ... 1511
SBUS<sb>:SPI:FORMat:FRAMe<fr>:ID3Value ... 1511
SBUS<sb>:SPI:FORMat:FRAMe<fr>:NAME ... 1510
SBUS<sb>:SPI:FORMat:FRAMe<fr>:TYPE ... 1510
SBUS<sb>:SPI:FORMat:LOAD ... 1508
SBUS<sb>:SPI:FORMat:SAVE ... 1508
SBUS<sb>:SPI:FORMat:SELect ... 1508

SBUS<sb>:SPI:FRAMe<fr>:BITRate?....1524
SBUS<sb>:SPI:FRAMe<fr>:DATA?....1525
SBUS<sb>:SPI:FRAMe<fr>:STARt?....1525
SBUS<sb>:SPI:FRAMe<fr>:STATus?....1525
SBUS<sb>:SPI:FRAMe<fr>:STOP?....1526
SBUS<sb>:SPI:FRAMe<fr>:WCOunt?....1526
SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:FMISo?....1526
SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:FMOSi?....1527
SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:MISO?....1527
SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:MOSI?....1527
SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:STARt?....1528
SBUS<sb>:SPI:FRAMe<fr>:WORD<w>:STOP?....1528
SBUS<sb>:SPI:FRCondition....1495
SBUS<sb>:SPI:MISO:HYSTeresis....1497
SBUS<sb>:SPI:MISO:POLarity....1497
SBUS<sb>:SPI:MISO:POSition....1501
SBUS<sb>:SPI:MISO:SCALe....1501
SBUS<sb>:SPI:MISO:SOURce....1497
SBUS<sb>:SPI:MISO:THReshold....1498
SBUS<sb>:SPI:MOSI:HYSTeresis....1498
SBUS<sb>:SPI:MOSI:POLarity....1498
SBUS<sb>:SPI:MOSI:POSition....1501
SBUS<sb>:SPI:MOSI:SCALe....1501
SBUS<sb>:SPI:MOSI:SOURce....1499
SBUS<sb>:SPI:MOSI:THReshold....1499
SBUS<sb>:SPI:SCLK:HYSTeresis....1499
SBUS<sb>:SPI:SCLK:SOURce....1499
SBUS<sb>:SPI:SCLK:THReshold....1500
SBUS<sb>:SPI:SWTindex?....1523
SBUS<sb>:SPI:SWTTime?....1523
SBUS<sb>:SPI:TIMeout....1500
SBUS<sb>:SPI:WSIZe....1500
SBUS<sb>:SPMI:FCOunt?....2071
SBUS<sb>:SPMI:FILTer:BIT....2051
SBUS<sb>:SPMI:FILTer:CHKall....2051
SBUS<sb>:SPMI:FILTer:CLR....2051
SBUS<sb>:SPMI:FILTer:DMAX....2052
SBUS<sb>:SPMI:FILTer:DMIN....2052
SBUS<sb>:SPMI:FILTer:DOPerator....2053
SBUS<sb>:SPMI:FILTer:ERENable....2053
SBUS<sb>:SPMI:FILTer:ERRor<n>:ENABle....2053
SBUS<sb>:SPMI:FILTer:FIENable....2055
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:ENABle....2055
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:BIT....2051
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:DMAX....2052
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:DMIN....2052
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:DOPerator....2053
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:ENABle....2055
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:IMAX....2054
SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:IMIN....2054

SBUS<sb>:SPMI:FILTer:FRAMe<fr>:FLD<fl>:IOPerator ... 2053
SBUS<sb>:SPMI:FILTer:FRENable ... 2055
SBUS<sb>:SPMI:FILTer:IMAX ... 2054
SBUS<sb>:SPMI:FILTer:IMIN ... 2054
SBUS<sb>:SPMI:FILTer:INVert ... 2051
SBUS<sb>:SPMI:FILTer:IOPerator ... 2053
SBUS<sb>:SPMI:FILTer:RST ... 2051
SBUS<sb>:SPMI:FORMat:ADDFrame ... 2056
SBUS<sb>:SPMI:FORMat:CLR ... 2057
SBUS<sb>:SPMI:FORMat:FCOunt? ... 2057
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ADDField ... 2058
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:COLor ... 2058
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:ADDValue ... 2063
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:BITCount ... 2061
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:BITorder ... 2061
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:COLor ... 2060
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel ... 2063
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue ... 2063
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:FORMat ... 2062
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:FSTBit ... 2060
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:NAME ... 2060
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:PARA ... 2064
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:PARB ... 2064
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:REPetition ... 2061
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLD<fl>:UNIT ... 2064
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:FLDCount? ... 2058
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ID1Field ... 2059
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ID1Value ... 2059
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ID2Field ... 2059
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ID2Value ... 2059
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ID3Field ... 2059
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:ID3Value ... 2059
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:NAME ... 2058
SBUS<sb>:SPMI:FORMat:FRAMe<fr>:TYPE ... 2059
SBUS<sb>:SPMI:FORMat:LOAD ... 2056
SBUS<sb>:SPMI:FORMat:SAVE ... 2057
SBUS<sb>:SPMI:FORMat:SELect ... 2056
SBUS<sb>:SPMI:FRAMe<fr>:ADDRess? ... 2071
SBUS<sb>:SPMI:FRAMe<fr>:BC? ... 2071
SBUS<sb>:SPMI:FRAMe<fr>:DATA? ... 2072
SBUS<sb>:SPMI:FRAMe<fr>:FLD<fl>:FVALue? ... 2072
SBUS<sb>:SPMI:FRAMe<fr>:FLD<fl>:LABel? ... 2073
SBUS<sb>:SPMI:FRAMe<fr>:FLD<fl>:STATe? ... 2073
SBUS<sb>:SPMI:FRAMe<fr>:FLD<fl>:VALue? ... 2073
SBUS<sb>:SPMI:FRAMe<fr>:FLDCount? ... 2072
SBUS<sb>:SPMI:FRAMe<fr>:RBRate? ... 2074
SBUS<sb>:SPMI:FRAMe<fr>:SA? ... 2074
SBUS<sb>:SPMI:FRAMe<fr>:STARt? ... 2074
SBUS<sb>:SPMI:FRAMe<fr>:STATus? ... 2074
SBUS<sb>:SPMI:FRAMe<fr>:STOP? ... 2075

SBUS<sb>:SPMI:FRAMe<fr>:SYMBol?....2076
SBUS<sb>:SPMI:FRAMe<fr>:TYPE?....2075
SBUS<sb>:SPMI:FRAMe<fr>:WBRate?....2076
SBUS<sb>:SPMI:GIDValue....2046
SBUS<sb>:SPMI:GSIDenable....2046
SBUS<sb>:SPMI:GTCHenable....2047
SBUS<sb>:SPMI:GTWDith....2047
SBUS<sb>:SPMI:NEWList....2050
SBUS<sb>:SPMI:POSition....2049
SBUS<sb>:SPMI:SCALe....2049
SBUS<sb>:SPMI:SCLK:HYSTeresis....2047
SBUS<sb>:SPMI:SCLK:SOURce....2047
SBUS<sb>:SPMI:SCLK:THReshold....2048
SBUS<sb>:SPMI:SDATa:HYSTeresis....2048
SBUS<sb>:SPMI:SDATa:SOURce....2048
SBUS<sb>:SPMI:SDATa:THReshold....2049
SBUS<sb>:SPMI:SWTindex?....2070
SBUS<sb>:SPMI:SWTTime?....2070
SBUS<sb>:SPMI:SYMBols....2049
SBUS<sb>:SWIRe:DATA:HYSTeresis....2019
SBUS<sb>:SWIRe:DATA:SOURce....2018
SBUS<sb>:SWIRe:DATA:THReshold....2019
SBUS<sb>:SWIRe:FCOunt?....2039
SBUS<sb>:SWIRe:FILTer:BIT....2022
SBUS<sb>:SWIRe:FILTer:CHKall....2021
SBUS<sb>:SWIRe:FILTer:CLR....2022
SBUS<sb>:SWIRe:FILTer:DMAX....2023
SBUS<sb>:SWIRe:FILTer:DMIN....2023
SBUS<sb>:SWIRe:FILTer:DOPerator....2024
SBUS<sb>:SWIRe:FILTer:ERENable....2023
SBUS<sb>:SWIRe:FILTer:ERRor<n>:ENABle....2023
SBUS<sb>:SWIRe:FILTer:FIENable....2024
SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:ENABle....2025
SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:FLD<fl>:BIT....2022
SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:FLD<fl>:DMAX....2023
SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:FLD<fl>:DMIN....2023
SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:FLD<fl>:DOPerator....2024
SBUS<sb>:SWIRe:FILTer:FRAMe<fr>:FLD<fl>:ENABle....2024
SBUS<sb>:SWIRe:FILTer:FRENable....2025
SBUS<sb>:SWIRe:FILTer:INVert....2022
SBUS<sb>:SWIRe:FILTer:RST....2022
SBUS<sb>:SWIRe:FORMat:ADDFrame....2026
SBUS<sb>:SWIRe:FORMat:CLR....2027
SBUS<sb>:SWIRe:FORMat:FCOunt?....2027
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ADDField....2027
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:COLor....2028
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:ADDValue....2032
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:BITCount....2030
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:BITorder....2031
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:COLor....2029

SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel ... 2033
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue ... 2033
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:FORMat ... 2031
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:FSTBit ... 2030
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:NAME ... 2029
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:PARA ... 2034
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:PARB ... 2034
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:REPetition ... 2031
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLD<fl>:UNIT ... 2033
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:FLDCount? ... 2027
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ID1Field ... 2029
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ID1Value ... 2029
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ID2Field ... 2029
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ID2Value ... 2029
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ID3Field ... 2029
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:ID3Value ... 2029
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:NAME ... 2028
SBUS<sb>:SWIRe:FORMat:FRAMe<fr>:TYPE ... 2028
SBUS<sb>:SWIRe:FORMat:LOAD ... 2026
SBUS<sb>:SWIRe:FORMat:SAVE ... 2026
SBUS<sb>:SWIRe:FORMat:SELect ... 2026
SBUS<sb>:SWIRe:FRAMe<fr>:BITRate? ... 2039
SBUS<sb>:SWIRe:FRAMe<fr>:CODParity? ... 2040
SBUS<sb>:SWIRe:FRAMe<fr>:DATA? ... 2040
SBUS<sb>:SWIRe:FRAMe<fr>:DATParity? ... 2041
SBUS<sb>:SWIRe:FRAMe<fr>:ESCParity? ... 2041
SBUS<sb>:SWIRe:FRAMe<fr>:FLD<fl>:FVALue? ... 2043
SBUS<sb>:SWIRe:FRAMe<fr>:FLD<fl>:STATus? ... 2042
SBUS<sb>:SWIRe:FRAMe<fr>:FLD<fl>:TYPE? ... 2042
SBUS<sb>:SWIRe:FRAMe<fr>:FLD<fl>:VALue? ... 2043
SBUS<sb>:SWIRe:FRAMe<fr>:STARt? ... 2044
SBUS<sb>:SWIRe:FRAMe<fr>:STATe? ... 2043
SBUS<sb>:SWIRe:FRAMe<fr>:STOP? ... 2044
SBUS<sb>:SWIRe:FRAMe<fr>:TYPE? ... 2045
SBUS<sb>:SWIRe:MGAP ... 2020
SBUS<sb>:SWIRe:MINGap ... 2020
SBUS<sb>:SWIRe:POSition ... 2020
SBUS<sb>:SWIRe:SCALe ... 2020
SBUS<sb>:SWIRe:STRBe:HYSTeresis ... 2020
SBUS<sb>:SWIRe:STRBe:SOURce ... 2019
SBUS<sb>:SWIRe:STRBe:THReshold ... 2019
SBUS<sb>:SWIRe:SWTindex? ... 2038
SBUS<sb>:SWIRe:SWTTime? ... 2038
SBUS<sb>:TBTO:FCOunt? ... 2194
SBUS<sb>:TBTO:FILTer:BIT ... 2175
SBUS<sb>:TBTO:FILTer:CHKall ... 2174
SBUS<sb>:TBTO:FILTer:CLR ... 2174
SBUS<sb>:TBTO:FILTer:DMAX ... 2175
SBUS<sb>:TBTO:FILTer:DMIN ... 2176
SBUS<sb>:TBTO:FILTer:DOPerator ... 2176

SBUS<sb>:TBTO:FILTer:ERENable....2177
SBUS<sb>:TBTO:FILTer:ERRor<n>:ENABle....2177
SBUS<sb>:TBTO:FILTer:FIENable....2177
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:ENABle....2177
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:BIT....2175
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:DMAX....2175
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:DMIN....2176
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:DOPerator....2176
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:ENABle....2177
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:IMAX....2178
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:IMIN....2178
SBUS<sb>:TBTO:FILTer:FRAMe<fr>:FLD<fl>:IOPerator....2178
SBUS<sb>:TBTO:FILTer:FRENable....2177
SBUS<sb>:TBTO:FILTer:IMAX....2178
SBUS<sb>:TBTO:FILTer:IMIN....2178
SBUS<sb>:TBTO:FILTer:INVert....2175
SBUS<sb>:TBTO:FILTer:IOPerator....2178
SBUS<sb>:TBTO:FILTer:RST....2175
SBUS<sb>:TBTO:FORMat:ADDFrame....2180
SBUS<sb>:TBTO:FORMat:CLR....2181
SBUS<sb>:TBTO:FORMat:FCOunt?....2181
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ADDField....2181
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:COLor....2182
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:ADDValue....2186
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:BITCount....2184
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:BITorder....2185
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:COLor....2183
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel....2187
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue....2186
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:FORMat....2185
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:FSTBit....2184
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:NAME....2183
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:PARA....2188
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:PARB....2188
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:REPetition....2184
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLD<fl>:UNIT....2187
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:FLDCount?....2181
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ID1Field....2182
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ID1Value....2183
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ID2Field....2182
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ID2Value....2183
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ID3Field....2182
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:ID3Value....2183
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:NAME....2182
SBUS<sb>:TBTO:FORMat:FRAMe<fr>:TYPE....2182
SBUS<sb>:TBTO:FORMat:LOAD....2180
SBUS<sb>:TBTO:FORMat:SAVE....2180
SBUS<sb>:TBTO:FORMat:SELect....2180
SBUS<sb>:TBTO:FRAMe<fr>:BITRate?....2195
SBUS<sb>:TBTO:FRAMe<fr>:CRC?....2197

SBUS<sb>:TBTO:FRAMe<fr>:DATA? 2197
SBUS<sb>:TBTO:FRAMe<fr>:DTADdress? 2197
SBUS<sb>:TBTO:FRAMe<fr>:DTSYmbol? 2198
SBUS<sb>:TBTO:FRAMe<fr>:FCRC? 2198
SBUS<sb>:TBTO:FRAMe<fr>:FDATa? 2198
SBUS<sb>:TBTO:FRAMe<fr>:FDTaddress? 2199
SBUS<sb>:TBTO:FRAMe<fr>:FLD<fl>:FVALue? 2195
SBUS<sb>:TBTO:FRAMe<fr>:FLD<fl>:LABel? 2196
SBUS<sb>:TBTO:FRAMe<fr>:FLD<fl>:STATe? 2196
SBUS<sb>:TBTO:FRAMe<fr>:FLD<fl>:VALue? 2196
SBUS<sb>:TBTO:FRAMe<fr>:FLDCount? 2195
SBUS<sb>:TBTO:FRAMe<fr>:FSRaddress? 2199
SBUS<sb>:TBTO:FRAMe<fr>:FTPLenth? 2199
SBUS<sb>:TBTO:FRAMe<fr>:SRADdress? 2199
SBUS<sb>:TBTO:FRAMe<fr>:SRSYmbol? 2200
SBUS<sb>:TBTO:FRAMe<fr>:STARt? 2200
SBUS<sb>:TBTO:FRAMe<fr>:STATus? 2200
SBUS<sb>:TBTO:FRAMe<fr>:STOP? 2201
SBUS<sb>:TBTO:FRAMe<fr>:TPLenth? 2201
SBUS<sb>:TBTO:FRAMe<fr>:TYPE? 2202
SBUS<sb>:TBTO:MODE 2171
SBUS<sb>:TBTO:NEWList 2171
SBUS<sb>:TBTO:POLarity 2172
SBUS<sb>:TBTO:POSition 2172
SBUS<sb>:TBTO:SCALe 2172
SBUS<sb>:TBTO:SRCMinus 2173
SBUS<sb>:TBTO:SRCPlus 2172
SBUS<sb>:TBTO:SWTindex? 2193
SBUS<sb>:TBTO:SWTTime? 2194
SBUS<sb>:TBTO:SYMBols 2173
SBUS<sb>:THReshold 1492
SBUS<sb>:TNOS:FCOunt? 2132
SBUS<sb>:TNOS:FILTer:BIT 2113
SBUS<sb>:TNOS:FILTer:CHKall 2112
SBUS<sb>:TNOS:FILTer:CLR 2112
SBUS<sb>:TNOS:FILTer:DMAX 2113
SBUS<sb>:TNOS:FILTer:DMIN 2114
SBUS<sb>:TNOS:FILTer:DOPerator 2114
SBUS<sb>:TNOS:FILTer:ERENable 2114
SBUS<sb>:TNOS:FILTer:ERRor<n>:ENABle 2114
SBUS<sb>:TNOS:FILTer:FIENable 2115
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:ENABle 2116
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:BIT 2113
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:DMAX 2113
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:DMIN 2114
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:DOPerator 2114
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:ENABle 2115
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:IMAX 2115
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:IMIN 2115
SBUS<sb>:TNOS:FILTer:FRAMe<fr>:FLD<fl>:IOPerator 2116

SBUS<sb>:TNOS:FILTer:FRENable....2116
SBUS<sb>:TNOS:FILTer:IMAX....2115
SBUS<sb>:TNOS:FILTer:IMIN....2115
SBUS<sb>:TNOS:FILTer:INVert....2113
SBUS<sb>:TNOS:FILTer:IOPerator....2116
SBUS<sb>:TNOS:FILTer:RST....2112
SBUS<sb>:TNOS:FORMat:ADDFrame....2118
SBUS<sb>:TNOS:FORMat:CLR....2118
SBUS<sb>:TNOS:FORMat:FCOunt?....2119
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ADDField....2119
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:COLor....2120
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:ADDValue....2124
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:BITCount....2122
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:BITorder....2123
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:COLor....2121
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel....2125
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue....2124
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:FORMat....2123
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:FSTBit....2122
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:NAME....2121
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:PARA....2125
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:PARB....2125
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:REPetition....2122
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLD<fl>:UNIT....2125
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:FLDCount?....2119
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ID1Field....2120
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ID1Value....2121
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ID2Field....2120
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ID2Value....2121
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ID3Field....2120
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:ID3Value....2121
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:NAME....2119
SBUS<sb>:TNOS:FORMat:FRAMe<fr>:TYPE....2120
SBUS<sb>:TNOS:FORMat:LOAD....2118
SBUS<sb>:TNOS:FORMat:SAVE....2118
SBUS<sb>:TNOS:FORMat:SELect....2117
SBUS<sb>:TNOS:FRAMe<fr>:BITRate?....2133
SBUS<sb>:TNOS:FRAMe<fr>:CRC?....2135
SBUS<sb>:TNOS:FRAMe<fr>:DATA?....2135
SBUS<sb>:TNOS:FRAMe<fr>:DTADdress?....2135
SBUS<sb>:TNOS:FRAMe<fr>:DTSYmbol?....2136
SBUS<sb>:TNOS:FRAMe<fr>:FCRC?....2136
SBUS<sb>:TNOS:FRAMe<fr>:FDATa?....2136
SBUS<sb>:TNOS:FRAMe<fr>:FDTaddress?....2136
SBUS<sb>:TNOS:FRAMe<fr>:FLD<fl>:FVALue?....2133
SBUS<sb>:TNOS:FRAMe<fr>:FLD<fl>:LABel?....2133
SBUS<sb>:TNOS:FRAMe<fr>:FLD<fl>:STATe?....2134
SBUS<sb>:TNOS:FRAMe<fr>:FLD<fl>:VALue?....2134
SBUS<sb>:TNOS:FRAMe<fr>:FLDCount?....2132
SBUS<sb>:TNOS:FRAMe<fr>:FSRaddress?....2137

SBUS<sb>:TNOS:FRAMe<fr>:FTPLenth? 2137
SBUS<sb>:TNOS:FRAMe<fr>:SRADdress? 2137
SBUS<sb>:TNOS:FRAMe<fr>:SRSYmbol? 2138
SBUS<sb>:TNOS:FRAMe<fr>:STARt? 2138
SBUS<sb>:TNOS:FRAMe<fr>:STATus? 2138
SBUS<sb>:TNOS:FRAMe<fr>:STOP? 2139
SBUS<sb>:TNOS:FRAMe<fr>:TPLenth? 2139
SBUS<sb>:TNOS:FRAMe<fr>:TYPE? 2140
SBUS<sb>:TNOS:NEWList 2111
SBUS<sb>:TNOS:POSition 2109
SBUS<sb>:TNOS:SCALe 2109
SBUS<sb>:TNOS:SOURce 2110
SBUS<sb>:TNOS:SWTindex? 2131
SBUS<sb>:TNOS:SWTTime? 2131
SBUS<sb>:TNOS:SYMBols 2110
SBUS<sb>:TNOS:THReshold:HYSTeresis 2110
SBUS<sb>:TNOS:THReshold:LOWer 2110
SBUS<sb>:TNOS:THReshold:UPPer 2111
SBUS<sb>:TYPE 1489
SBUS<sb>:UART:BITRate 1696
SBUS<sb>:UART:BORDer 1696
SBUS<sb>:UART:FILTer:BIT 1706
SBUS<sb>:UART:FILTer:CHKall 1702
SBUS<sb>:UART:FILTer:CLR 1702
SBUS<sb>:UART:FILTer:DMAX 1705
SBUS<sb>:UART:FILTer:DMIN 1705
SBUS<sb>:UART:FILTer:DOPerator 1704
SBUS<sb>:UART:FILTer:ERENable 1704
SBUS<sb>:UART:FILTer:ERRor<n>:ENABle 1704
SBUS<sb>:UART:FILTer:FIENable 1706
SBUS<sb>:UART:FILTer:FRAMe<fr>:ENABle 1706
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:BIT 1706
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:DMAX 1705
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:DMIN 1705
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:DOPerator 1704
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:ENABle 1706
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:IMAX 1703
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:IMIN 1703
SBUS<sb>:UART:FILTer:FRAMe<fr>:FLD<fl>:IOPerator 1704
SBUS<sb>:UART:FILTer:FRENable 1706
SBUS<sb>:UART:FILTer:IMAX 1703
SBUS<sb>:UART:FILTer:IMIN 1703
SBUS<sb>:UART:FILTer:INVert 1702
SBUS<sb>:UART:FILTer:IOPerator 1704
SBUS<sb>:UART:FILTer:RST 1703
SBUS<sb>:UART:FORMat:ADDFrame 1708
SBUS<sb>:UART:FORMat:CLR 1708
SBUS<sb>:UART:FORMat:FCOunt? 1709
SBUS<sb>:UART:FORMat:FRAMe<fr>:ADDField 1709
SBUS<sb>:UART:FORMat:FRAMe<fr>:COLor 1710

SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:ADDValue 1714
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:BITCount 1712
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:BITorder 1713
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:COLor 1711
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel 1714
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue 1714
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:FORMat 1713
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:FSTBit 1712
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:NAME 1711
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:PARA 1715
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:PARB 1715
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:REPetition 1712
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLD<fl>:UNIT 1715
SBUS<sb>:UART:FORMat:FRAMe<fr>:FLDCount? 1709
SBUS<sb>:UART:FORMat:FRAMe<fr>:ID1Field 1710
SBUS<sb>:UART:FORMat:FRAMe<fr>:ID1Value 1711
SBUS<sb>:UART:FORMat:FRAMe<fr>:ID2Field 1710
SBUS<sb>:UART:FORMat:FRAMe<fr>:ID2Value 1711
SBUS<sb>:UART:FORMat:FRAMe<fr>:ID3Field 1710
SBUS<sb>:UART:FORMat:FRAMe<fr>:ID3Value 1711
SBUS<sb>:UART:FORMat:FRAMe<fr>:NAME 1709
SBUS<sb>:UART:FORMat:FRAMe<fr>:TYPE 1710
SBUS<sb>:UART:FORMat:LOAD 1708
SBUS<sb>:UART:FORMat:SAVE 1708
SBUS<sb>:UART:FORMat:SELect 1707
SBUS<sb>:UART:PACKets 1697
SBUS<sb>:UART:PARity 1697
SBUS<sb>:UART:POLarity 1697
SBUS<sb>:UART:RX:HYSTeresis 1698
SBUS<sb>:UART:RX:POSition 1700
SBUS<sb>:UART:RX:SCALe 1701
SBUS<sb>:UART:RX:SOURce 1698
SBUS<sb>:UART:RX:THReshold 1698
SBUS<sb>:UART:SBIT 1699
SBUS<sb>:UART:SSIZe 1699
SBUS<sb>:UART:SWTindex? 1723
SBUS<sb>:UART:SWTTime? 1723
SBUS<sb>:UART:TOUT 1699
SBUS<sb>:UART:TX:HYSTeresis 1699
SBUS<sb>:UART:TX:POSition 1701
SBUS<sb>:UART:TX:SCALe 1701
SBUS<sb>:UART:TX:SOURce 1700
SBUS<sb>:UART:TX:THReshold 1700
SBUS<sb>:UART:WCOunt? 1724
SBUS<sb>:UART:WORD<w>:BITRate? 1724
SBUS<sb>:UART:WORD<w>:FLD<fl>:FVALue? 1728
SBUS<sb>:UART:WORD<w>:FLD<fl>:LABel? 1727
SBUS<sb>:UART:WORD<w>:FLD<fl>:STATe? 1724
SBUS<sb>:UART:WORD<w>:FLD<fl>:VALue? 1727
SBUS<sb>:UART:WORD<w>:FLDCount? 1724

SBUS<sb>:UART:WORD<w>:RXValue?....1725
SBUS<sb>:UART:WORD<w>:SOURce?....1725
SBUS<sb>:UART:WORD<w>:STARt?....1726
SBUS<sb>:UART:WORD<w>:STATe?....1726
SBUS<sb>:UART:WORD<w>:STOP?....1726
SBUS<sb>:UART:WORD<w>:TXValue?....1725
SBUS<sb>:USBHspeed:FCOunt?....2256
SBUS<sb>:USBHspeed:FILTer:BIT....2240
SBUS<sb>:USBHspeed:FILTer:CHKall....2236
SBUS<sb>:USBHspeed:FILTer:CLR....2236
SBUS<sb>:USBHspeed:FILTer:DMAX....2237
SBUS<sb>:USBHspeed:FILTer:DMIN....2237
SBUS<sb>:USBHspeed:FILTer:DOPerator....2238
SBUS<sb>:USBHspeed:FILTer:ERENable....2238
SBUS<sb>:USBHspeed:FILTer:ERRor<n>:ENABle....2238
SBUS<sb>:USBHspeed:FILTer:FIENable....2240
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:ENABle....2237
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:BIT....2240
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:DMAX....2237
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:DMIN....2237
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:DOPerator....2238
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:ENABle....2240
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:IMAX....2239
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:IMIN....2239
SBUS<sb>:USBHspeed:FILTer:FRAMe<fr>:FLD<fl>:IOPerator....2239
SBUS<sb>:USBHspeed:FILTer:FRENable....2237
SBUS<sb>:USBHspeed:FILTer:IMAX....2239
SBUS<sb>:USBHspeed:FILTer:IMIN....2239
SBUS<sb>:USBHspeed:FILTer:INVert....2236
SBUS<sb>:USBHspeed:FILTer:IOPerator....2239
SBUS<sb>:USBHspeed:FILTer:RST....2236
SBUS<sb>:USBHspeed:FORMat:ADDFrame....2242
SBUS<sb>:USBHspeed:FORMat:CLR....2242
SBUS<sb>:USBHspeed:FORMat:FCOunt?....2243
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ADDField....2243
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:COLor....2244
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:ADDValue....2248
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:BITCount....2246
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:BITorder....2247
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:COLor....2245
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel....2249
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue....2248
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:FORMat....2247
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:FSTBit....2246
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:NAME....2245
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:PARA....2249
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:PARB....2249
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:REPetition....2246
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLD<fl>:UNIT....2249
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:FLDCount?....2243

SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ID1Field....2244
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ID1Value....2245
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ID2Field....2244
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ID2Value....2245
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ID3Field....2244
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:ID3Value....2245
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:NAME....2243
SBUS<sb>:USBHspeed:FORMat:FRAMe<fr>:TYPE....2244
SBUS<sb>:USBHspeed:FORMat:LOAD....2242
SBUS<sb>:USBHspeed:FORMat:SAVE....2242
SBUS<sb>:USBHspeed:FORMat:SELect....2241
SBUS<sb>:USBHspeed:FRAMe<fr>:ADDRess?....2257
SBUS<sb>:USBHspeed:FRAMe<fr>:BITRate?....2257
SBUS<sb>:USBHspeed:FRAMe<fr>:CRC?....2261
SBUS<sb>:USBHspeed:FRAMe<fr>:DATA?....2257
SBUS<sb>:USBHspeed:FRAMe<fr>:ENDPoint?....2262
SBUS<sb>:USBHspeed:FRAMe<fr>:FADDress?....2261
SBUS<sb>:USBHspeed:FRAMe<fr>:FCRC?....2261
SBUS<sb>:USBHspeed:FRAMe<fr>:FLD<fl>:FVALue?....2259
SBUS<sb>:USBHspeed:FRAMe<fr>:FLD<fl>:LABel?....2260
SBUS<sb>:USBHspeed:FRAMe<fr>:FLD<fl>:STATe?....2260
SBUS<sb>:USBHspeed:FRAMe<fr>:FLD<fl>:VALue?....2261
SBUS<sb>:USBHspeed:FRAMe<fr>:FLDCount?....2257
SBUS<sb>:USBHspeed:FRAMe<fr>:FRNumber?....2262
SBUS<sb>:USBHspeed:FRAMe<fr>:PID?....2262
SBUS<sb>:USBHspeed:FRAMe<fr>:PIDName?....2263
SBUS<sb>:USBHspeed:FRAMe<fr>:SPET?....2263
SBUS<sb>:USBHspeed:FRAMe<fr>:SPEU?....2264
SBUS<sb>:USBHspeed:FRAMe<fr>:SPPort?....2264
SBUS<sb>:USBHspeed:FRAMe<fr>:SPS?....2265
SBUS<sb>:USBHspeed:FRAMe<fr>:SPSC?....2265
SBUS<sb>:USBHspeed:FRAMe<fr>:STARt?....2258
SBUS<sb>:USBHspeed:FRAMe<fr>:STATus?....2258
SBUS<sb>:USBHspeed:FRAMe<fr>:STOP?....2259
SBUS<sb>:USBHspeed:FRAMe<fr>:TYPE?....2263
SBUS<sb>:USBHspeed:POSition....2235
SBUS<sb>:USBHspeed:SCALe....2235
SBUS<sb>:USBHspeed:SOURce....2234
SBUS<sb>:USBHspeed:SWTindex?....2255
SBUS<sb>:USBHspeed:SWTTime?....2255
SBUS<sb>:USBHspeed:THReshold:HYSTeresis....2234
SBUS<sb>:USBHspeed:THReshold:LOWer....2234
SBUS<sb>:USBHspeed:THReshold:UPPer....2234
SBUS<sb>:USBone:DMINus:HYSTeresis....2204
SBUS<sb>:USBone:DMINus:SOURce....2203
SBUS<sb>:USBone:DMINus:THReshold....2204
SBUS<sb>:USBone:DPLus:HYSTeresis....2204
SBUS<sb>:USBone:DPLus:SOURce....2203
SBUS<sb>:USBone:DPLus:THReshold....2204
SBUS<sb>:USBone:FCOunt?....2226

SBUS<sb>:USBone:FILTer:BIT ... 2210
SBUS<sb>:USBone:FILTer:CHKall ... 2206
SBUS<sb>:USBone:FILTer:CLR ... 2206
SBUS<sb>:USBone:FILTer:DMAX ... 2207
SBUS<sb>:USBone:FILTer:DMIN ... 2208
SBUS<sb>:USBone:FILTer:DOPerator ... 2208
SBUS<sb>:USBone:FILTer:ERENable ... 2208
SBUS<sb>:USBone:FILTer:ERRor<n>:ENABle ... 2208
SBUS<sb>:USBone:FILTer:FIENable ... 2210
SBUS<sb>:USBone:FILTer:FRAMe<fr>:ENABle ... 2207
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:BIT ... 2210
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:DMAX ... 2207
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:DMIN ... 2208
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:DOPerator ... 2208
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:ENABle ... 2210
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:IMAX ... 2209
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:IMIN ... 2209
SBUS<sb>:USBone:FILTer:FRAMe<fr>:FLD<fl>:IOPerator ... 2209
SBUS<sb>:USBone:FILTer:FRENable ... 2207
SBUS<sb>:USBone:FILTer:IMAX ... 2209
SBUS<sb>:USBone:FILTer:IMIN ... 2209
SBUS<sb>:USBone:FILTer:INVert ... 2206
SBUS<sb>:USBone:FILTer:IOPerator ... 2209
SBUS<sb>:USBone:FILTer:RST ... 2207
SBUS<sb>:USBone:FORMat:ADDFrame ... 2212
SBUS<sb>:USBone:FORMat:CLR ... 2212
SBUS<sb>:USBone:FORMat:FCOunt? ... 2213
SBUS<sb>:USBone:FORMat:FRAMe<fr>:ADDField ... 2213
SBUS<sb>:USBone:FORMat:FRAMe<fr>:COLor ... 2214
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:ADDValue ... 2218
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:BITCount ... 2216
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:BITorder ... 2217
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:COLor ... 2215
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:LABel ... 2219
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:ENUM<p>:VALue ... 2218
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:FORMat ... 2217
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:FSTBit ... 2216
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:NAME ... 2215
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:PARA ... 2219
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:PARB ... 2219
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:REPetition ... 2216
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLD<fl>:UNIT ... 2219
SBUS<sb>:USBone:FORMat:FRAMe<fr>:FLDCount? ... 2213
SBUS<sb>:USBone:FORMat:FRAMe<fr>:ID1Field ... 2214
SBUS<sb>:USBone:FORMat:FRAMe<fr>:ID1Value ... 2215
SBUS<sb>:USBone:FORMat:FRAMe<fr>:ID2Field ... 2214
SBUS<sb>:USBone:FORMat:FRAMe<fr>:ID2Value ... 2215
SBUS<sb>:USBone:FORMat:FRAMe<fr>:ID3Field ... 2214
SBUS<sb>:USBone:FORMat:FRAMe<fr>:ID3Value ... 2215
SBUS<sb>:USBone:FORMat:FRAMe<fr>:NAME ... 2213

SBUS<sb>:USBone:FORMat:FRAMe<fr>:TYPE 2214
SBUS<sb>:USBone:FORMat:LOAD 2212
SBUS<sb>:USBone:FORMat:SAVE 2212
SBUS<sb>:USBone:FORMat:SELect 2211
SBUS<sb>:USBone:FRAMe<fr>:ADDRess? 2226
SBUS<sb>:USBone:FRAMe<fr>:BITRate? 2227
SBUS<sb>:USBone:FRAMe<fr>:CRC? 2231
SBUS<sb>:USBone:FRAMe<fr>:DATA? 2227
SBUS<sb>:USBone:FRAMe<fr>:ENDPoint? 2232
SBUS<sb>:USBone:FRAMe<fr>:FADDress? 2231
SBUS<sb>:USBone:FRAMe<fr>:FCRC? 2231
SBUS<sb>:USBone:FRAMe<fr>:FLD<fl>:FVALue? 2229
SBUS<sb>:USBone:FRAMe<fr>:FLD<fl>:LABel? 2229
SBUS<sb>:USBone:FRAMe<fr>:FLD<fl>:STATe? 2230
SBUS<sb>:USBone:FRAMe<fr>:FLD<fl>:VALue? 2230
SBUS<sb>:USBone:FRAMe<fr>:FLDCount? 2227
SBUS<sb>:USBone:FRAMe<fr>:FRNumber? 2232
SBUS<sb>:USBone:FRAMe<fr>:PID? 2232
SBUS<sb>:USBone:FRAMe<fr>:PIDName? 2232
SBUS<sb>:USBone:FRAMe<fr>:STARt? 2228
SBUS<sb>:USBone:FRAMe<fr>:STATus? 2228
SBUS<sb>:USBone:FRAMe<fr>:STOP? 2229
SBUS<sb>:USBone:FRAMe<fr>:TYPE? 2233
SBUS<sb>:USBone:MODE 2203
SBUS<sb>:USBone:POSition 2205
SBUS<sb>:USBone:SCALe 2205
SBUS<sb>:USBone:SWTindex? 2225
SBUS<sb>:USBone:SWTTime? 2225
SBUS<sb>:ZCOupling 1492
SBUS<sb>[:STATe] 1489
SENSe[:ROSCillator]:OUTPut:FREQuency? 1142
SENSe[:ROSCillator]:OUTPut[:ENABle] 1142
SENSe[:ROSCillator]:SOURce 1142
SERVice:REPort 1099
SESSion:LOAD[:EXECute] 1246
SESSion:SAVE:ABORt 1247
SESSion:SAVE:CHANnel 1247
SESSion:SAVE:REFerence 1247
SESSion:SAVE[:EXECute] 1247
SESSion:USERpref 1248
SINGle 1100
STATus:OPERation:CONDition? 2303
STATus:OPERation:ENABle 2303
STATus:OPERation:NTRansition 2304
STATus:OPERation:PTRansition 2304
STATus:OPERation[:EVENt]? 2304
STATus:PRESet 2303
STATus:QUEStionable:ADCState:CONDition? 2307
STATus:QUEStionable:ADCState:ENABle 2308
STATus:QUEStionable:ADCState:NTRansition 2309

STATus:QUEStionable:ADCState:PTRansition ... 2309
STATus:QUEStionable:ADCState[:EVENt]? ... 2307
STATus:QUEStionable:COVerload:CONDition? ... 2307
STATus:QUEStionable:COVerload:ENABle ... 2308
STATus:QUEStionable:COVerload:NTRansition ... 2309
STATus:QUEStionable:COVerload:PTRansition ... 2309
STATus:QUEStionable:COVerload[:EVENt]? ... 2307
STATus:QUEStionable:GOVerload:CONDition? ... 2307
STATus:QUEStionable:GOVerload:ENABle ... 2308
STATus:QUEStionable:GOVerload:NTRansition ... 2309
STATus:QUEStionable:GOVerload:PTRansition ... 2309
STATus:QUEStionable:GOVerload[:EVENt]? ... 2307
STATus:QUEStionable:IMPRecise:CONDition? ... 2307
STATus:QUEStionable:IMPRecise:ENABle ... 2308
STATus:QUEStionable:IMPRecise:NTRansition ... 2309
STATus:QUEStionable:IMPRecise:PTRansition ... 2309
STATus:QUEStionable:IMPRecise[:EVENt]? ... 2307
STATus:QUEStionable:MASK:CONDition? ... 2306
STATus:QUEStionable:MASK:ENABle ... 2308
STATus:QUEStionable:MASK:NTRansition ... 2308
STATus:QUEStionable:MASK:PTRansition ... 2309
STATus:QUEStionable:MASK[:EVENt]? ... 2307
STATus:QUEStionable:PLL:CONDition? ... 2307
STATus:QUEStionable:PLL:ENABle ... 2308
STATus:QUEStionable:PLL:NTRansition ... 2309
STATus:QUEStionable:PLL:PTRansition ... 2309
STATus:QUEStionable:PLL:RCONdition ... 2310
STATus:QUEStionable:PLL[:EVENt]? ... 2307
STATus:QUEStionable:PPSupply:CONDition? ... 2307
STATus:QUEStionable:PPSupply:ENABle ... 2308
STATus:QUEStionable:PPSupply:NTRansition ... 2309
STATus:QUEStionable:PPSupply:PTRansition ... 2309
STATus:QUEStionable:PPSupply[:EVENt]? ... 2307
STATus:QUEStionable:TEMPerature:CONDition? ... 2307
STATus:QUEStionable:TEMPerature:ENABle ... 2308
STATus:QUEStionable:TEMPerature:NTRansition ... 2309
STATus:QUEStionable:TEMPerature:PTRansition ... 2309
STATus:QUEStionable:TEMPerature[:EVENt]? ... 2307
STOP ... 1100
SYNChronize:DEVice<m>:CHANnels ... 2298
SYNChronize:DEVice<m>:COMMunicate:NET[:HOSTname] ... 2298
SYNChronize:DEVice<m>:CONNect ... 2299
SYNChronize:DEVice<m>:DISPlay ... 2299
SYNChronize:DEVice<m>:LOCKcontrols ... 2299
SYNChronize:DEVice<m>:NAME ... 2300
SYNChronize:DEVice<m>:SKEW:AUTO ... 2300
SYNChronize:DEVice<m>:SKEW[:VALue] ... 2300
SYNChronize:DEVice<m>:TIMebasesync ... 2300
SYNChronize:DEVice<m>[:ENABle] ... 2301
SYNChronize:DISConnect ... 2301

SYNChronize:LOAD:ABORt....2301
SYNChronize:LOAD[:WAVeform]....2301
SYSTem:APUP....1099
SYSTem:COMMunicate:NET[:HOSTname]....1063
SYSTem:DATE....1064
SYSTem:DISPlay:MESSage:STATe....1062
SYSTem:DISPlay:MESSage[:TEXT]....1063
SYSTem:DISPlay:UPDate....1062
SYSTem:EXIT....1064
SYSTem:FW:FILepath....1064
SYSTem:FW:STARt....1065
SYSTem:PRESet....1064
SYSTem:SHUTdown....1065
SYSTem:TIME....1065
TIMebase:DIVisions?....1101
TIMebase:HORizontal:POSition....1101
TIMebase:RANGe....1101
TIMebase:REFerence....1102
TIMebase:ROLL:ENABle....1102
TIMebase:ROLL:MTIMe....1102
TIMebase:ROLL:STATe?....1103
TIMebase:SCALe....1101
TREFerence<m>:CDR:SOFTware:ALGorithm....1194
TREFerence<m>:CDR:SOFTware:BWIDth....1194
TREFerence<m>:CDR:SOFTware:CFRequency:CRSYnc....1195
TREFerence<m>:CDR:SOFTware:PLL:DAMPing....1195
TREFerence<m>:CDR:SOFTware:PLL:ORDer....1195
TREFerence<m>:CDR:SOFTware:PLL:SYNC....1196
TREFerence<m>:CDR:SOFTware:RELBwidth....1196
TREFerence<m>:CDR:SOFTware:SELResults....1197
TREFerence<m>:CDR:SOFTware:SREStimate....1196
TREFerence<m>:CLK:FACTor....1197
TREFerence<m>:CLK:FREQuency....1197
TREFerence<m>:CLK:OFFSet....1198
TREFerence<m>:CLK:REFLevel....1198
TREFerence<m>:EDGE....1198
TREFerence<m>:ENABle....1199
TREFerence<m>:GATE....1199
TREFerence<m>:REFLevel....1199
TREFerence<m>:RFLSet....1200
TREFerence<m>:SOURce....1200
TREFerence<m>:STATe?....1200
TREFerence<m>:SYMRate....1200
TREFerence<m>:TYPE....1201
TRFS:COUNt?....1201
TRIGger:ACTions:BEEP....1175
TRIGger:ACTions:OUT:DELay....1176
TRIGger:ACTions:OUT:OVERload:STATus:CONDition?....2306
TRIGger:ACTions:OUT:OVERload:STATus:ENABle....2308
TRIGger:ACTions:OUT:OVERload:STATus:NTRansition....2308

TRIGger:ACTions:OUT:OVERload:STATus:PTRansition ... 2309
TRIGger:ACTions:OUT:OVERload:STATus:PTRansition ... 2309
TRIGger:ACTions:OUT:OVERload:STATus[:EVENt] ... 2307
TRIGger:ACTions:OUT:PLENgth ... 1176
TRIGger:ACTions:OUT:POLarity ... 1177
TRIGger:ACTions:OUT:SOURce ... 1176
TRIGger:ACTions:OUT:STATe ... 1176
TRIGger:ACTions:SCReenshot ... 1177
TRIGger:ACTions:SRESults ... 1177
TRIGger:ACTions:STOP ... 1178
TRIGger:ACTions:WFMSave ... 1178
TRIGger:ANEDge:COUPling ... 1148
TRIGger:ANEDge:CUToff:HIGHpass ... 1149
TRIGger:ANEDge:CUToff:LOWPass ... 1149
TRIGger:ANEDge:FILTer ... 1149
TRIGger:ANEDge:LEVel ... 1148
TRIGger:ANEDge:NREJect ... 1150
TRIGger:ANEDge:OVERload:STATus:CONDition? ... 2306
TRIGger:ANEDge:OVERload:STATus:ENABle ... 2308
TRIGger:ANEDge:OVERload:STATus:NTRansition ... 2309
TRIGger:ANEDge:OVERload:STATus:PTRansition ... 2309
TRIGger:ANEDge:OVERload:STATus[:EVENt] ... 2307
TRIGger:EVENt<ev>:EDGE:SLOPe ... 1148
TRIGger:EVENt<ev>:GLITch:POLarity ... 1150
TRIGger:EVENt<ev>:GLITch:RANGe ... 1150
TRIGger:EVENt<ev>:GLITch:WIDTh ... 1151
TRIGger:EVENt<ev>:INTerval:DELTa ... 1159
TRIGger:EVENt<ev>:INTerval:RANGe ... 1159
TRIGger:EVENt<ev>:INTerval:SLOPe ... 1160
TRIGger:EVENt<ev>:INTerval:WIDTh ... 1160
TRIGger:EVENt<ev>:LEVel<n>:RUNT:LOWer ... 1153
TRIGger:EVENt<ev>:LEVel<n>:RUNT:UPPer ... 1153
TRIGger:EVENt<ev>:LEVel<n>:SLEW:LOWer ... 1161
TRIGger:EVENt<ev>:LEVel<n>:SLEW:UPPer ... 1161
TRIGger:EVENt<ev>:LEVel<n>:WINDow:LOWer ... 1155
TRIGger:EVENt<ev>:LEVel<n>:WINDow:UPPer ... 1155
TRIGger:EVENt<ev>:LEVel<n>[:VALue] ... 1144
TRIGger:EVENt<ev>:PATTern:QUALify:ANALog:CHAN<n>:HLX ... 1167
TRIGger:EVENt<ev>:PATTern:QUALify:DIGital:CHAN<n>:HLX ... 1167
TRIGger:EVENt<ev>:PATTern:QUALify:DIGital:LOGic ... 1168
TRIGger:EVENt<ev>:PATTern:QUALify:LOGic ... 1167
TRIGger:EVENt<ev>:PATTern:QUALify:SOURces ... 1168
TRIGger:EVENt<ev>:RUNT:DELTa ... 1153
TRIGger:EVENt<ev>:RUNT:POLarity ... 1154
TRIGger:EVENt<ev>:RUNT:RANGe ... 1154
TRIGger:EVENt<ev>:RUNT:WIDTh ... 1155
TRIGger:EVENt<ev>:SETHold:CSOurce:EDGE ... 1163
TRIGger:EVENt<ev>:SETHold:CSOurce:LEVel ... 1163
TRIGger:EVENt<ev>:SETHold:CSOurce[:VALue] ... 1164
TRIGger:EVENt<ev>:SETHold:HTIMe ... 1164

TRIGger:EVENt<ev>:SETHold:STIMe....1164
TRIGger:EVENt<ev>:SLEW:DELTa....1161
TRIGger:EVENt<ev>:SLEW:RANGe....1162
TRIGger:EVENt<ev>:SLEW:RATE....1162
TRIGger:EVENt<ev>:SLEW:SLOPe....1163
TRIGger:EVENt<ev>:SOURce....1145
TRIGger:EVENt<ev>:STATe:QUALify:ANALog:CHAN<n>:HLX....1165
TRIGger:EVENt<ev>:STATe:QUALify:DIGital:CHAN<n>:HLX....1166
TRIGger:EVENt<ev>:STATe:QUALify:DIGital:LOGic....1166
TRIGger:EVENt<ev>:STATe:QUALify:LOGic....1165
TRIGger:EVENt<ev>:STATe:SLOPe....1166
TRIGger:EVENt<ev>:TIMeout:RANGe....1158
TRIGger:EVENt<ev>:TIMeout:TIME....1158
TRIGger:EVENt<ev>:TYPE....1144
TRIGger:EVENt<ev>:WIDTh:DELTa....1151
TRIGger:EVENt<ev>:WIDTh:POLarity....1151
TRIGger:EVENt<ev>:WIDTh:RANGe....1152
TRIGger:EVENt<ev>:WIDTh:WIDTh....1152
TRIGger:EVENt<ev>:WINDow:DELTa....1156
TRIGger:EVENt<ev>:WINDow:RANGe....1156
TRIGger:EVENt<ev>:WINDow:TIME....1157
TRIGger:EVENt<ev>:WINDow:WIDTh....1157
TRIGger:FILTermode....1174
TRIGger:FINDlevel....1145
TRIGger:FORCe....1169
TRIGger:HOLDoff:AUTotime?....1170
TRIGger:HOLDoff:EVENts....1171
TRIGger:HOLDoff:MAX....1171
TRIGger:HOLDoff:MIN....1171
TRIGger:HOLDoff:MODE....1169
TRIGger:HOLDoff:SCALing....1170
TRIGger:HOLDoff:TIME....1171
TRIGger:LFReject....1175
TRIGger:MEVents:AEVents....1146
TRIGger:MEVents:MODE....1144
TRIGger:MEVents:SEQuence<se>:COUNt....1146
TRIGger:MEVents:SEQuence<se>:DELay....1146
TRIGger:MEVents:SEQuence<se>:RESet:EVENt....1147
TRIGger:MEVents:SEQuence<se>:RESet:TIMeout:TIME....1147
TRIGger:MEVents:SEQuence<se>:RESet:TIMeout[:ENABle]....1147
TRIGger:MODE....1169
TRIGger:NOISe<m>:ABSolute....1172
TRIGger:NOISe<m>:EFFective?....1172
TRIGger:NOISe<m>:MODE....1173
TRIGger:NOISe<m>:PERDivision....1173
TRIGger:NOISe<m>:RELative....1173
TRIGger:NOISe<m>[:STATe]....1174
TRIGger:RFReject....1175
TRIGger:SBHW:CAN:ACKerror....1865
TRIGger:SBHW:CAN:BITSterror....1865

TRIGger:SBHW:CAN:BORDer ... 1865
TRIGger:SBHW:CAN:CRCerror ... 1866
TRIGger:SBHW:CAN:DCONdition ... 1866
TRIGger:SBHW:CAN:DLC ... 1866
TRIGger:SBHW:CAN:DLCCondition ... 1866
TRIGger:SBHW:CAN:DMIN ... 1867
TRIGger:SBHW:CAN:FDATa:BRS ... 1867
TRIGger:SBHW:CAN:FDATa:DPOSition ... 1867
TRIGger:SBHW:CAN:FDATa:ESI ... 1867
TRIGger:SBHW:CAN:FDATa:SCERror ... 1868
TRIGger:SBHW:CAN:FORMerror ... 1868
TRIGger:SBHW:CAN:FTYPe ... 1868
TRIGger:SBHW:CAN:ICONdition ... 1869
TRIGger:SBHW:CAN:IMAX ... 1869
TRIGger:SBHW:CAN:IMIN ... 1869
TRIGger:SBHW:CAN:ITYPe ... 1870
TRIGger:SBHW:CAN:TYPE ... 1870
TRIGger:SBHW:CAN:XDATa:AF:CONDition ... 1871
TRIGger:SBHW:CAN:XDATa:AF:MAX ... 1871
TRIGger:SBHW:CAN:XDATa:AF:MIN ... 1871
TRIGger:SBHW:CAN:XDATa:SDT:CONDition ... 1872
TRIGger:SBHW:CAN:XDATa:SDT:MAX ... 1872
TRIGger:SBHW:CAN:XDATa:SDT:MIN ... 1872
TRIGger:SBHW:CAN:XDATa:SEC ... 1873
TRIGger:SBHW:CAN:XDATa:VCID:CONDition ... 1873
TRIGger:SBHW:CAN:XDATa:VCID:MAX ... 1873
TRIGger:SBHW:CAN:XDATa:VCID:MIN ... 1873
TRIGger:SBHW:I2C:ACCess ... 1610
TRIGger:SBHW:I2C:ACONdition ... 1610
TRIGger:SBHW:I2C:ADDRess ... 1611
TRIGger:SBHW:I2C:ADDTo ... 1611
TRIGger:SBHW:I2C:ADNack ... 1611
TRIGger:SBHW:I2C:AMODe ... 1611
TRIGger:SBHW:I2C:DCONdition ... 1612
TRIGger:SBHW:I2C:DMIN ... 1612
TRIGger:SBHW:I2C:DPOSition ... 1612
TRIGger:SBHW:I2C:DRNack ... 1612
TRIGger:SBHW:I2C:DWNack ... 1613
TRIGger:SBHW:I2C:TYPE ... 1609
TRIGger:SBHW:LIN:CHKSerror ... 1913
TRIGger:SBHW:LIN:DCONdition ... 1913
TRIGger:SBHW:LIN:DMIN ... 1912
TRIGger:SBHW:LIN:DPOSition ... 1912
TRIGger:SBHW:LIN:ICONdition ... 1912
TRIGger:SBHW:LIN:IMAX ... 1912
TRIGger:SBHW:LIN:IMIN ... 1911
TRIGger:SBHW:LIN:IPERror ... 1911
TRIGger:SBHW:LIN:SYERror ... 1911
TRIGger:SBHW:LIN:TYPE ... 1910
TRIGger:SBHW:SPI:DMINpattern ... 1518

TRIGger:SBHW:SPI:DPOSition....1517
TRIGger:SBHW:SPI:FCONdition....1517
TRIGger:SBHW:SPI:PALignment....1517
TRIGger:SBHW:SPI:TYPE....1516
TRIGger:SBHW:UART:DATA....1716
TRIGger:SBHW:UART:DPOSition....1716
TRIGger:SBHW:UART:FCONdition....1716
TRIGger:SBHW:UART:OPERator....1717
TRIGger:SBHW:UART:SOURce....1717
TRIGger:SBHW:UART:TYPE....1717
TRIGger:SBSW:ARINc:BIT....1981
TRIGger:SBSW:ARINc:CHKall....1980
TRIGger:SBSW:ARINc:CLR....1980
TRIGger:SBSW:ARINc:DMAX....1981
TRIGger:SBSW:ARINc:DMIN....1981
TRIGger:SBSW:ARINc:DOPerator....1982
TRIGger:SBSW:ARINc:ERENable....1983
TRIGger:SBSW:ARINc:ERRor<m>:ENABle....1983
TRIGger:SBSW:ARINc:FIENable....1982
TRIGger:SBSW:ARINc:FRAMe<fr>:ENABle....1980
TRIGger:SBSW:ARINc:FRAMe<fr>:FLD<fl>:BIT....1981
TRIGger:SBSW:ARINc:FRAMe<fr>:FLD<fl>:DMAX....1981
TRIGger:SBSW:ARINc:FRAMe<fr>:FLD<fl>:DMIN....1981
TRIGger:SBSW:ARINc:FRAMe<fr>:FLD<fl>:DOPerator....1982
TRIGger:SBSW:ARINc:FRAMe<fr>:FLD<fl>:ENABle....1982
TRIGger:SBSW:ARINc:FRENable....1980
TRIGger:SBSW:ARINc:INVert....1980
TRIGger:SBSW:ARINc:RST....1980
TRIGger:SBSW:CAN:BIT....1875
TRIGger:SBSW:CAN:CHKall....1874
TRIGger:SBSW:CAN:CLR....1875
TRIGger:SBSW:CAN:DMAX....1876
TRIGger:SBSW:CAN:DMIN....1876
TRIGger:SBSW:CAN:DOPerator....1877
TRIGger:SBSW:CAN:ERENable....1878
TRIGger:SBSW:CAN:ERRor<m>:ENABle....1878
TRIGger:SBSW:CAN:FIENable....1877
TRIGger:SBSW:CAN:FRAMe<fr>:ENABle....1875
TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:BIT....1875
TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:DMAX....1876
TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:DMIN....1876
TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:DOPerator....1877
TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:ENABle....1877
TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:IMAX....1877
TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:IMIN....1878
TRIGger:SBSW:CAN:FRAMe<fr>:FLD<fl>:IOPerator....1878
TRIGger:SBSW:CAN:FRENable....1875
TRIGger:SBSW:CAN:IMAX....1877
TRIGger:SBSW:CAN:IMIN....1878
TRIGger:SBSW:CAN:INVert....1875

TRIGger:SBSW:CAN:IOPerator ... 1878
TRIGger:SBSW:CAN:RST ... 1875
TRIGger:SBSW:DPHY:BIT ... 1683
TRIGger:SBSW:DPHY:CHKall ... 1682
TRIGger:SBSW:DPHY:CLR ... 1682
TRIGger:SBSW:DPHY:DMAX ... 1684
TRIGger:SBSW:DPHY:DMIN ... 1684
TRIGger:SBSW:DPHY:DOPerator ... 1684
TRIGger:SBSW:DPHY:ERENable ... 1686
TRIGger:SBSW:DPHY:ERRor<m>:ENABle ... 1686
TRIGger:SBSW:DPHY:FIENable ... 1685
TRIGger:SBSW:DPHY:FRAMe<fr>:ENABle ... 1683
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:BIT ... 1683
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:DMAX ... 1684
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:DMIN ... 1684
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:DOPerator ... 1684
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:ENABle ... 1685
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:IMAX ... 1685
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:IMIN ... 1686
TRIGger:SBSW:DPHY:FRAMe<fr>:FLD<fl>:IOPerator ... 1686
TRIGger:SBSW:DPHY:FRENable ... 1683
TRIGger:SBSW:DPHY:IMAX ... 1685
TRIGger:SBSW:DPHY:IMIN ... 1686
TRIGger:SBSW:DPHY:INVert ... 1682
TRIGger:SBSW:DPHY:IOPerator ... 1686
TRIGger:SBSW:DPHY:RST ... 1683
TRIGger:SBSW:EBTB:BIT ... 1834
TRIGger:SBSW:EBTB:CHKall ... 1833
TRIGger:SBSW:EBTB:CLR ... 1833
TRIGger:SBSW:EBTB:DMAX ... 1834
TRIGger:SBSW:EBTB:DMIN ... 1835
TRIGger:SBSW:EBTB:DOPerator ... 1835
TRIGger:SBSW:EBTB:ERENable ... 1837
TRIGger:SBSW:EBTB:ERRor<m>:ENABle ... 1837
TRIGger:SBSW:EBTB:FIENable ... 1836
TRIGger:SBSW:EBTB:FRAMe<fr>:ENABle ... 1834
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:BIT ... 1834
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:DMAX ... 1834
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:DMIN ... 1835
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:DOPerator ... 1835
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:ENABle ... 1836
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:IMAX ... 1836
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:IMIN ... 1836
TRIGger:SBSW:EBTB:FRAMe<fr>:FLD<fl>:IOPerator ... 1837
TRIGger:SBSW:EBTB:FRENable ... 1834
TRIGger:SBSW:EBTB:IMAX ... 1836
TRIGger:SBSW:EBTB:IMIN ... 1836
TRIGger:SBSW:EBTB:INVert ... 1682
TRIGger:SBSW:EBTB:INVert ... 1833
TRIGger:SBSW:EBTB:IOPerator ... 1837

TRIGger:SBSW:EBTB:RST ... 1834
TRIGger:SBSW:HBTO:BIT ... 2158
TRIGger:SBSW:HBTO:CHKall ... 2157
TRIGger:SBSW:HBTO:CLR ... 2158
TRIGger:SBSW:HBTO:DMAX ... 2159
TRIGger:SBSW:HBTO:DMIN ... 2159
TRIGger:SBSW:HBTO:DOPerator ... 2160
TRIGger:SBSW:HBTO:ERENable ... 2161
TRIGger:SBSW:HBTO:ERRor<m>:ENABle ... 2161
TRIGger:SBSW:HBTO:FIENable ... 2160
TRIGger:SBSW:HBTO:FRAMe<fr>:ENABle ... 2158
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:BIT ... 2158
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:DMAX ... 2159
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:DMIN ... 2159
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:DOPerator ... 2160
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:ENABle ... 2160
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:IMAX ... 2160
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:IMIN ... 2161
TRIGger:SBSW:HBTO:FRAMe<fr>:FLD<fl>:IOPerator ... 2161
TRIGger:SBSW:HBTO:FRENable ... 2158
TRIGger:SBSW:HBTO:IMAX ... 2160
TRIGger:SBSW:HBTO:IMIN ... 2161
TRIGger:SBSW:HBTO:INVert ... 2158
TRIGger:SBSW:HBTO:IOPerator ... 2161
TRIGger:SBSW:HBTO:RST ... 2158
TRIGger:SBSW:I2C:BIT ... 1615
TRIGger:SBSW:I2C:CHKall ... 1614
TRIGger:SBSW:I2C:CLR ... 1614
TRIGger:SBSW:I2C:DMAX ... 1615
TRIGger:SBSW:I2C:DMIN ... 1615
TRIGger:SBSW:I2C:DOPerator ... 1616
TRIGger:SBSW:I2C:ERENable ... 1618
TRIGger:SBSW:I2C:ERRor<m>:ENABle ... 1618
TRIGger:SBSW:I2C:FIENable ... 1616
TRIGger:SBSW:I2C:FRAMe<fr>:ENABle ... 1614
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:BIT ... 1615
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:DMAX ... 1615
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:DMIN ... 1615
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:DOPerator ... 1616
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:ENABle ... 1616
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:IMAX ... 1617
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:IMIN ... 1617
TRIGger:SBSW:I2C:FRAMe<fr>:FLD<fl>:IOPerator ... 1617
TRIGger:SBSW:I2C:FRENable ... 1614
TRIGger:SBSW:I2C:IMAX ... 1617
TRIGger:SBSW:I2C:IMIN ... 1617
TRIGger:SBSW:I2C:INVert ... 1614
TRIGger:SBSW:I2C:IOPerator ... 1617
TRIGger:SBSW:I2C:RST ... 1614
TRIGger:SBSW:I3C:BIT ... 1647

TRIGger:SBSW:I3C:CHKall....1646
TRIGger:SBSW:I3C:CLR....1646
TRIGger:SBSW:I3C:DMAX....1648
TRIGger:SBSW:I3C:DMIN....1648
TRIGger:SBSW:I3C:DOPerator....1648
TRIGger:SBSW:I3C:ERENable....1650
TRIGger:SBSW:I3C:ERRor<m>:ENABle....1650
TRIGger:SBSW:I3C:FIENable....1649
TRIGger:SBSW:I3C:FRAMe<fr>:ENABle....1647
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:BIT....1647
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:DMAX....1648
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:DMIN....1648
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:DOPerator....1648
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:ENABle....1649
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:IMAX....1649
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:IMIN....1650
TRIGger:SBSW:I3C:FRAMe<fr>:FLD<fl>:IOPerator....1650
TRIGger:SBSW:I3C:FRENable....1647
TRIGger:SBSW:I3C:IMAX....1649
TRIGger:SBSW:I3C:IMIN....1650
TRIGger:SBSW:I3C:INVert....1647
TRIGger:SBSW:I3C:IOPerator....1650
TRIGger:SBSW:I3C:RST....1647
TRIGger:SBSW:LIN:BIT....1915
TRIGger:SBSW:LIN:CHKall....1914
TRIGger:SBSW:LIN:CLR....1914
TRIGger:SBSW:LIN:DMAX....1915
TRIGger:SBSW:LIN:DMIN....1916
TRIGger:SBSW:LIN:DOPerator....1916
TRIGger:SBSW:LIN:ERENable....1918
TRIGger:SBSW:LIN:ERRor<m>:ENABle....1918
TRIGger:SBSW:LIN:FIENable....1916
TRIGger:SBSW:LIN:FRAMe<fr>:ENABle....1915
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:BIT....1915
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:DMAX....1915
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:DMIN....1916
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:DOPerator....1916
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:ENABle....1916
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:IMAX....1917
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:IMIN....1917
TRIGger:SBSW:LIN:FRAMe<fr>:FLD<fl>:IOPerator....1918
TRIGger:SBSW:LIN:FRENable....1915
TRIGger:SBSW:LIN:IMAX....1917
TRIGger:SBSW:LIN:IMIN....1917
TRIGger:SBSW:LIN:INVert....1914
TRIGger:SBSW:LIN:IOPerator....1918
TRIGger:SBSW:LIN:RST....1914
TRIGger:SBSW:MANCh:BIT....1808
TRIGger:SBSW:MANCh:CHKall....1807
TRIGger:SBSW:MANCh:CLR....1807

TRIGger:SBSW:MANCh:DMAX....1809
TRIGger:SBSW:MANCh:DMIN....1809
TRIGger:SBSW:MANCh:DOPerator....1809
TRIGger:SBSW:MANCh:ERENable....1811
TRIGger:SBSW:MANCh:ERRor<m>:ENABle....1811
TRIGger:SBSW:MANCh:FIENable....1810
TRIGger:SBSW:MANCh:FRAMe<fr>:ENABle....1808
TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:BIT....1808
TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:DMAX....1809
TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:DMIN....1809
TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:DOPerator....1809
TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:ENABle....1810
TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:IMAX....1810
TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:IMIN....1811
TRIGger:SBSW:MANCh:FRAMe<fr>:FLD<fl>:IOPerator....1811
TRIGger:SBSW:MANCh:FRENable....1808
TRIGger:SBSW:MANCh:IMAX....1810
TRIGger:SBSW:MANCh:IMIN....1811
TRIGger:SBSW:MANCh:INVert....1808
TRIGger:SBSW:MANCh:IOPerator....1811
TRIGger:SBSW:MANCh:RST....1808
TRIGger:SBSW:MILStd:BIT....2008
TRIGger:SBSW:MILStd:CHKall....2007
TRIGger:SBSW:MILStd:CLR....2007
TRIGger:SBSW:MILStd:DMAX....2009
TRIGger:SBSW:MILStd:DMIN....2009
TRIGger:SBSW:MILStd:DOPerator....2009
TRIGger:SBSW:MILStd:ERENable....2011
TRIGger:SBSW:MILStd:ERRor<m>:ENABle....2011
TRIGger:SBSW:MILStd:FIENable....2010
TRIGger:SBSW:MILStd:FRAMe<fr>:ENABle....2008
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:BIT....2008
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:DMAX....2009
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:DMIN....2009
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:DOPerator....2009
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:ENABle....2010
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:IMAX....2010
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:IMIN....2011
TRIGger:SBSW:MILStd:FRAMe<fr>:FLD<fl>:IOPerator....2011
TRIGger:SBSW:MILStd:FRENable....2008
TRIGger:SBSW:MILStd:IMAX....2010
TRIGger:SBSW:MILStd:IMIN....2011
TRIGger:SBSW:MILStd:INVert....2008
TRIGger:SBSW:MILStd:IOPerator....2011
TRIGger:SBSW:MILStd:RST....2008
TRIGger:SBSW:NRZC:BIT....1749
TRIGger:SBSW:NRZC:CHKall....1748
TRIGger:SBSW:NRZC:CLR....1748
TRIGger:SBSW:NRZC:DMAX....1749
TRIGger:SBSW:NRZC:DMIN....1750

TRIGger:SBSW:NRZC:DOPerator ... 1750
TRIGger:SBSW:NRZC:ERENable ... 1752
TRIGger:SBSW:NRZC:ERRor<m>:ENABle ... 1752
TRIGger:SBSW:NRZC:FIENable ... 1750
TRIGger:SBSW:NRZC:FRAMe<fr>:ENABle ... 1748
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:BIT ... 1749
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:DMAX ... 1749
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:DMIN ... 1750
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:DOPerator ... 1750
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:ENABle ... 1750
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:IMAX ... 1751
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:IMIN ... 1751
TRIGger:SBSW:NRZC:FRAMe<fr>:FLD<fl>:IOPerator ... 1751
TRIGger:SBSW:NRZC:FRENable ... 1748
TRIGger:SBSW:NRZC:IMAX ... 1751
TRIGger:SBSW:NRZC:IMIN ... 1751
TRIGger:SBSW:NRZC:INVert ... 1748
TRIGger:SBSW:NRZC:IOPerator ... 1751
TRIGger:SBSW:NRZC:RST ... 1748
TRIGger:SBSW:NRZU:BIT ... 1778
TRIGger:SBSW:NRZU:CHKall ... 1777
TRIGger:SBSW:NRZU:CLR ... 1777
TRIGger:SBSW:NRZU:DMAX ... 1779
TRIGger:SBSW:NRZU:DMIN ... 1779
TRIGger:SBSW:NRZU:DOPerator ... 1779
TRIGger:SBSW:NRZU:ERENable ... 1781
TRIGger:SBSW:NRZU:ERRor<m>:ENABle ... 1781
TRIGger:SBSW:NRZU:FIENable ... 1780
TRIGger:SBSW:NRZU:FRAMe<fr>:ENABle ... 1778
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:BIT ... 1778
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:DMAX ... 1779
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:DMIN ... 1779
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:DOPerator ... 1779
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:ENABle ... 1780
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:IMAX ... 1780
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:IMIN ... 1781
TRIGger:SBSW:NRZU:FRAMe<fr>:FLD<fl>:IOPerator ... 1781
TRIGger:SBSW:NRZU:FRENable ... 1778
TRIGger:SBSW:NRZU:IMAX ... 1780
TRIGger:SBSW:NRZU:IMIN ... 1781
TRIGger:SBSW:NRZU:INVert ... 1778
TRIGger:SBSW:NRZU:IOPerator ... 1781
TRIGger:SBSW:NRZU:RST ... 1778
TRIGger:SBSW:OSPI:BIT ... 1580
TRIGger:SBSW:OSPI:CHKall ... 1579
TRIGger:SBSW:OSPI:CLR ... 1579
TRIGger:SBSW:OSPI:DMAX ... 1581
TRIGger:SBSW:OSPI:DMIN ... 1581
TRIGger:SBSW:OSPI:DOPerator ... 1581
TRIGger:SBSW:OSPI:ERENable ... 1583

TRIGger:SBSW:OSPI:ERRor<m>:ENABle ... 1583
TRIGger:SBSW:OSPI:FIENable ... 1582
TRIGger:SBSW:OSPI:FRAMe<fr>:ENABle ... 1580
TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:BIT ... 1580
TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:DMAX ... 1581
TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:DMIN ... 1581
TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:DOPerator ... 1581
TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:ENABle ... 1582
TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:IMAX ... 1582
TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:IMIN ... 1583
TRIGger:SBSW:OSPI:FRAMe<fr>:FLD<fl>:IOPerator ... 1583
TRIGger:SBSW:OSPI:FRENable ... 1580
TRIGger:SBSW:OSPI:IMAX ... 1582
TRIGger:SBSW:OSPI:IMIN ... 1583
TRIGger:SBSW:OSPI:INVert ... 1579
TRIGger:SBSW:OSPI:IOPerator ... 1583
TRIGger:SBSW:OSPI:RST ... 1580
TRIGger:SBSW:QSPI:BIT ... 1551
TRIGger:SBSW:QSPI:CHKall ... 1549
TRIGger:SBSW:QSPI:CLR ... 1550
TRIGger:SBSW:QSPI:DMAX ... 1551
TRIGger:SBSW:QSPI:DMIN ... 1551
TRIGger:SBSW:QSPI:DOPerator ... 1552
TRIGger:SBSW:QSPI:ERENable ... 1554
TRIGger:SBSW:QSPI:ERRor<m>:ENABle ... 1554
TRIGger:SBSW:QSPI:FIENable ... 1552
TRIGger:SBSW:QSPI:FRAMe<fr>:ENABle ... 1550
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:BIT ... 1551
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:DMAX ... 1551
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:DMIN ... 1551
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:DOPerator ... 1552
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:ENABle ... 1552
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:IMAX ... 1552
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:IMIN ... 1553
TRIGger:SBSW:QSPI:FRAMe<fr>:FLD<fl>:IOPerator ... 1553
TRIGger:SBSW:QSPI:FRENable ... 1550
TRIGger:SBSW:QSPI:IMAX ... 1552
TRIGger:SBSW:QSPI:IMIN ... 1553
TRIGger:SBSW:QSPI:INVert ... 1550
TRIGger:SBSW:QSPI:IOPerator ... 1553
TRIGger:SBSW:QSPI:RST ... 1550
TRIGger:SBSW:RFFE:BIT ... 2097
TRIGger:SBSW:RFFE:CHKall ... 2096
TRIGger:SBSW:RFFE:CLR ... 2096
TRIGger:SBSW:RFFE:DMAX ... 2097
TRIGger:SBSW:RFFE:DMIN ... 2097
TRIGger:SBSW:RFFE:DOPerator ... 2098
TRIGger:SBSW:RFFE:ERENable ... 2100
TRIGger:SBSW:RFFE:ERRor<m>:ENABle ... 2100
TRIGger:SBSW:RFFE:FIENable ... 2098

TRIGger:SBSW:RFFE:FRAMe<fr>:ENABle....2096
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:BIT....2097
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:DMAX....2097
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:DMIN....2097
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:DOPerator....2098
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:ENABle....2098
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:IMAX....2099
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:IMIN....2099
TRIGger:SBSW:RFFE:FRAMe<fr>:FLD<fl>:IOPerator....2099
TRIGger:SBSW:RFFE:FRENable....2096
TRIGger:SBSW:RFFE:IMAX....2099
TRIGger:SBSW:RFFE:IMIN....2099
TRIGger:SBSW:RFFE:INVert....2096
TRIGger:SBSW:RFFE:IOPerator....2099
TRIGger:SBSW:RFFE:RST....2096
TRIGger:SBSW:SENT:BIT....1948
TRIGger:SBSW:SENT:CHKall....1947
TRIGger:SBSW:SENT:CLR....1947
TRIGger:SBSW:SENT:DMAX....1949
TRIGger:SBSW:SENT:DMIN....1949
TRIGger:SBSW:SENT:DOPerator....1949
TRIGger:SBSW:SENT:ERENable....1951
TRIGger:SBSW:SENT:ERRor<m>:ENABle....1951
TRIGger:SBSW:SENT:FIENable....1948
TRIGger:SBSW:SENT:FRAMe<fr>:ENABle....1948
TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:BIT....1948
TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:DMAX....1949
TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:DMIN....1949
TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:DOPerator....1949
TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:ENABle....1948
TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:IMAX....1950
TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:IMIN....1950
TRIGger:SBSW:SENT:FRAMe<fr>:FLD<fl>:IOPerator....1951
TRIGger:SBSW:SENT:FRENable....1948
TRIGger:SBSW:SENT:IMAX....1950
TRIGger:SBSW:SENT:IMIN....1950
TRIGger:SBSW:SENT:INVert....1947
TRIGger:SBSW:SENT:IOPerator....1951
TRIGger:SBSW:SENT:RST....1947
TRIGger:SBSW:SPI:BIT....1520
TRIGger:SBSW:SPI:CHKall....1519
TRIGger:SBSW:SPI:CLR....1519
TRIGger:SBSW:SPI:DMAX....1520
TRIGger:SBSW:SPI:DMIN....1520
TRIGger:SBSW:SPI:DOPerator....1521
TRIGger:SBSW:SPI:ERENable....1523
TRIGger:SBSW:SPI:ERRor<m>:ENABle....1523
TRIGger:SBSW:SPI:FIENable....1521
TRIGger:SBSW:SPI:FRAMe<fr>:ENABle....1519
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:BIT....1520

TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:DMAX 1520
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:DMIN 1520
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:DOPerator 1521
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:ENABle 1521
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:IMAX 1522
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:IMIN 1522
TRIGger:SBSW:SPI:FRAMe<fr>:FLD<fl>:IOPerator 1522
TRIGger:SBSW:SPI:FRENable 1519
TRIGger:SBSW:SPI:IMAX 1522
TRIGger:SBSW:SPI:IMIN 1522
TRIGger:SBSW:SPI:INVert 1519
TRIGger:SBSW:SPI:IOPerator 1522
TRIGger:SBSW:SPI:RST 1519
TRIGger:SBSW:SPMI:BIT 2066
TRIGger:SBSW:SPMI:CHKall 2065
TRIGger:SBSW:SPMI:CLR 2066
TRIGger:SBSW:SPMI:DMAX 2067
TRIGger:SBSW:SPMI:DMIN 2067
TRIGger:SBSW:SPMI:DOPerator 2068
TRIGger:SBSW:SPMI:ERENable 2069
TRIGger:SBSW:SPMI:ERRor<m>:ENABle 2069
TRIGger:SBSW:SPMI:FIENable 2068
TRIGger:SBSW:SPMI:FRAMe<fr>:ENABle 2066
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:BIT 2066
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:DMAX 2067
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:DMIN 2067
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:DOPerator 2068
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:ENABle 2068
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:IMAX 2068
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:IMIN 2069
TRIGger:SBSW:SPMI:FRAMe<fr>:FLD<fl>:IOPerator 2069
TRIGger:SBSW:SPMI:FRENable 2066
TRIGger:SBSW:SPMI:IMAX 2068
TRIGger:SBSW:SPMI:IMIN 2069
TRIGger:SBSW:SPMI:INVert 2066
TRIGger:SBSW:SPMI:IOPerator 2069
TRIGger:SBSW:SPMI:RST 2066
TRIGger:SBSW:SWIRe:BIT 2036
TRIGger:SBSW:SWIRe:CHKall 2035
TRIGger:SBSW:SWIRe:CLR 2035
TRIGger:SBSW:SWIRe:DMAX 2036
TRIGger:SBSW:SWIRe:DMIN 2037
TRIGger:SBSW:SWIRe:DOPerator 2037
TRIGger:SBSW:SWIRe:ERENable 2038
TRIGger:SBSW:SWIRe:ERRor<m>:ENABle 2038
TRIGger:SBSW:SWIRe:FIENable 2037
TRIGger:SBSW:SWIRe:FRAMe<fr>:ENABle 2036
TRIGger:SBSW:SWIRe:FRAMe<fr>:FLD<fl>:BIT 2036
TRIGger:SBSW:SWIRe:FRAMe<fr>:FLD<fl>:DMAX 2036
TRIGger:SBSW:SWIRe:FRAMe<fr>:FLD<fl>:DMIN 2037

TRIGger:SBSW:SWIRe:FRAMe<fr>:FLD<fl>:DOPerator....2037
TRIGger:SBSW:SWIRe:FRAMe<fr>:FLD<fl>:ENABle....2037
TRIGger:SBSW:SWIRe:FRENable....2036
TRIGger:SBSW:SWIRe:INVert....2035
TRIGger:SBSW:SWIRe:RST....2035
TRIGger:SBSW:TBTO:BIT....2190
TRIGger:SBSW:TBTO:CHKall....2189
TRIGger:SBSW:TBTO:CLR....2189
TRIGger:SBSW:TBTO:DMAX....2190
TRIGger:SBSW:TBTO:DMIN....2191
TRIGger:SBSW:TBTO:DOPerator....2191
TRIGger:SBSW:TBTO:ERENable....2193
TRIGger:SBSW:TBTO:ERRor<m>:ENABle....2193
TRIGger:SBSW:TBTO:FIENable....2191
TRIGger:SBSW:TBTO:FRAMe<fr>:ENABle....2190
TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:BIT....2190
TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:DMAX....2190
TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:DMIN....2191
TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:DOPerator....2191
TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:ENABle....2191
TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:IMAX....2192
TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:IMIN....2192
TRIGger:SBSW:TBTO:FRAMe<fr>:FLD<fl>:IOPerator....2193
TRIGger:SBSW:TBTO:FRENable....2190
TRIGger:SBSW:TBTO:IMAX....2192
TRIGger:SBSW:TBTO:IMIN....2192
TRIGger:SBSW:TBTO:INVert....2189
TRIGger:SBSW:TBTO:IOPerator....2193
TRIGger:SBSW:TBTO:RST....2189
TRIGger:SBSW:TNOS:BIT....2128
TRIGger:SBSW:TNOS:CHKall....2127
TRIGger:SBSW:TNOS:CLR....2127
TRIGger:SBSW:TNOS:DMAX....2128
TRIGger:SBSW:TNOS:DMIN....2128
TRIGger:SBSW:TNOS:DOPerator....2129
TRIGger:SBSW:TNOS:ERENable....2131
TRIGger:SBSW:TNOS:ERRor<m>:ENABle....2131
TRIGger:SBSW:TNOS:FIENable....2129
TRIGger:SBSW:TNOS:FRAMe<fr>:ENABle....2127
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:BIT....2128
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:DMAX....2128
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:DMIN....2128
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:DOPerator....2129
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:ENABle....2129
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:IMAX....2130
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:IMIN....2130
TRIGger:SBSW:TNOS:FRAMe<fr>:FLD<fl>:IOPerator....2130
TRIGger:SBSW:TNOS:FRENable....2127
TRIGger:SBSW:TNOS:IMAX....2130
TRIGger:SBSW:TNOS:IMIN....2130

TRIGger:SBSW:TNOS:INVert....2127
TRIGger:SBSW:TNOS:IOPerator....2130
TRIGger:SBSW:TNOS:RST....2127
TRIGger:SBSW:UART:BIT....1719
TRIGger:SBSW:UART:CHKall....1718
TRIGger:SBSW:UART:CLR....1718
TRIGger:SBSW:UART:DMAX....1720
TRIGger:SBSW:UART:DMIN....1720
TRIGger:SBSW:UART:DOPerator....1720
TRIGger:SBSW:UART:ERENable....1722
TRIGger:SBSW:UART:ERRor<m>:ENABle....1722
TRIGger:SBSW:UART:FIENable....1721
TRIGger:SBSW:UART:FRAMe<fr>:ENABle....1719
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:BIT....1719
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:DMAX....1720
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:DMIN....1720
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:DOPerator....1720
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:ENABle....1721
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:IMAX....1721
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:IMIN....1722
TRIGger:SBSW:UART:FRAMe<fr>:FLD<fl>:IOPerator....1722
TRIGger:SBSW:UART:FRENable....1719
TRIGger:SBSW:UART:IMAX....1721
TRIGger:SBSW:UART:IMIN....1722
TRIGger:SBSW:UART:INVert....1718
TRIGger:SBSW:UART:IOPerator....1722
TRIGger:SBSW:UART:RST....1719
TRIGger:SBSW:USBHspeed:BIT....2252
TRIGger:SBSW:USBHspeed:CHKall....2251
TRIGger:SBSW:USBHspeed:CLR....2251
TRIGger:SBSW:USBHspeed:DMAX....2252
TRIGger:SBSW:USBHspeed:DMIN....2253
TRIGger:SBSW:USBHspeed:DOPerator....2253
TRIGger:SBSW:USBHspeed:ERENable....2255
TRIGger:SBSW:USBHspeed:ERRor<m>:ENABle....2255
TRIGger:SBSW:USBHspeed:FIENable....2253
TRIGger:SBSW:USBHspeed:FRAMe<fr>:ENABle....2251
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:BIT....2252
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:DMAX....2252
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:DMIN....2253
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:DOPerator....2253
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:ENABle....2253
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:IMAX....2254
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:IMIN....2254
TRIGger:SBSW:USBHspeed:FRAMe<fr>:FLD<fl>:IOPerator....2254
TRIGger:SBSW:USBHspeed:FRENable....2251
TRIGger:SBSW:USBHspeed:IMAX....2254
TRIGger:SBSW:USBHspeed:IMIN....2254
TRIGger:SBSW:USBHspeed:INVert....2251
TRIGger:SBSW:USBHspeed:IOPerator....2254

TRIGger:SBSW:USBHspeed:RST....2251
TRIGger:SBSW:USBone:BIT....2222
TRIGger:SBSW:USBone:CHKall....2221
TRIGger:SBSW:USBone:CLR....2221
TRIGger:SBSW:USBone:DMAX....2222
TRIGger:SBSW:USBone:DMIN....2222
TRIGger:SBSW:USBone:DOPerator....2223
TRIGger:SBSW:USBone:ERENable....2225
TRIGger:SBSW:USBone:ERRor<m>:ENABle....2225
TRIGger:SBSW:USBone:FIENable....2223
TRIGger:SBSW:USBone:FRAMe<fr>:ENABle....2221
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:BIT....2222
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:DMAX....2222
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:DMIN....2222
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:DOPerator....2223
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:ENABle....2223
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:IMAX....2224
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:IMIN....2224
TRIGger:SBSW:USBone:FRAMe<fr>:FLD<fl>:IOPerator....2224
TRIGger:SBSW:USBone:FRENable....2221
TRIGger:SBSW:USBone:IMAX....2224
TRIGger:SBSW:USBone:IMIN....2224
TRIGger:SBSW:USBone:INVert....2221
TRIGger:SBSW:USBone:IOPerator....2224
TRIGger:SBSW:USBone:RST....2221
TRIGger:ZONE:EXPRession[:DEFine]....1179
TRIGger:ZONE:HISTory....1184
TRPRobe:SETup:ATTenuation:UNIT?....1139
TRPRobe:SETup:ATTenuation[:AUTO]?....1139
TRPRobe:SETup:NAME?....1139
TRPRobe:SETup:STATe?....1139
TRPRobe:SETup:TYPE?....1140
USERdefined:PRESet:NAME....1097
USERdefined:PRESet:OPEN....1097
USERdefined:PRESet:SAVE....1097
USERdefined:PRESet[:ENABle]....1097
WGENerator<wg>:ARBGen:NAME....2292
WGENerator<wg>:ARBGen:OPEN....2292
WGENerator<wg>:ARBGen:RUNMode....2293
WGENerator<wg>:ARBGen:RUNSingle....2293
WGENerator<wg>:ARBGen:SAMPles?....2293
WGENerator<wg>:ARBGen:SRATe....2294
WGENerator<wg>:ARBGen[:SOURce]....2294
WGENerator<wg>:COUPling:ALL....2296
WGENerator<wg>:COUPling:AMPLitude....2297
WGENerator<wg>:COUPling:PHASeshift....2297
WGENerator<wg>:COUPling:STATe....2296
WGENerator<wg>:COUPling[:FREQuency]....2297
WGENerator<wg>:FREQuency....2279
WGENerator<wg>:FUNCtion:PULSe[:WIDTh]....2279

WGENerator<wg>:FUNCtion:RAMP[:SYMMetry]....2280
WGENerator<wg>:FUNCtion[:SELect]....2280
WGENerator<wg>:FUNCtion[:SQUare]:DCYCle....2280
WGENerator<wg>:GOVerload:STATus:CONDition?....2306
WGENerator<wg>:GOVerload:STATus:ENABle....2308
WGENerator<wg>:GOVerload:STATus:NTRansition....2309
WGENerator<wg>:GOVerload:STATus:PTRansition....2309
WGENerator<wg>:GOVerload:STATus[:EVENt]....2307
WGENerator<wg>:MODulation:AM:CAMPlitude....2282
WGENerator<wg>:MODulation:AM:DCYCle....2285
WGENerator<wg>:MODulation:AM:DEPTh....2285
WGENerator<wg>:MODulation:AM:FREQuency....2286
WGENerator<wg>:MODulation:AM:SYMMetry....2286
WGENerator<wg>:MODulation:AM[:FUNCtion]....2286
WGENerator<wg>:MODulation:CARRier:FREQuency....2286
WGENerator<wg>:MODulation:CARRier:PERiod....2287
WGENerator<wg>:MODulation:FM:DCYCle....2287
WGENerator<wg>:MODulation:FM:DEViation....2287
WGENerator<wg>:MODulation:FM:FREQuency....2288
WGENerator<wg>:MODulation:FM:SYMMetry....2288
WGENerator<wg>:MODulation:FM[:FUNCtion]....2288
WGENerator<wg>:MODulation:FSK:FONE....2289
WGENerator<wg>:MODulation:FSK:FTWO....2289
WGENerator<wg>:MODulation:FSK[:RATE]....2289
WGENerator<wg>:MODulation:NDCLevel....2289
WGENerator<wg>:MODulation:NLPCent....2290
WGENerator<wg>:MODulation:PWM:DCYCle....2290
WGENerator<wg>:MODulation:PWM:DEPTh....2290
WGENerator<wg>:MODulation:PWM:FREQuency....2291
WGENerator<wg>:MODulation:PWM:SYMMetry....2291
WGENerator<wg>:MODulation:PWM[:FUNCtion]....2291
WGENerator<wg>:MODulation:TYPE....2292
WGENerator<wg>:MODulation[:STATe]....2285
WGENerator<wg>:OUTPut[:LOAD]....2281
WGENerator<wg>:PERiod....2281
WGENerator<wg>:PRESet....2281
WGENerator<wg>:SOURce....2282
WGENerator<wg>:SWEep:FEND....2295
WGENerator<wg>:SWEep:FSTart....2295
WGENerator<wg>:SWEep:TIME....2295
WGENerator<wg>:SWEep:TYPE....2295
WGENerator<wg>:SWEep[:STATe]....2294
WGENerator<wg>:TEMPerature:STATus:CONDition?....2306
WGENerator<wg>:TEMPerature:STATus:ENABle....2308
WGENerator<wg>:TEMPerature:STATus:NTRansition....2309
WGENerator<wg>:TEMPerature:STATus:PTRansition....2309
WGENerator<wg>:TEMPerature:STATus[:EVENt]....2307
WGENerator<wg>:VOLTage:DCLevel....2283
WGENerator<wg>:VOLTage:INVersion....2283
WGENerator<wg>:VOLTage:OFFSet....2283

WGENerator<wg>:VOLTage[:VPP] 2283
WGENerator<wg>[:ENABle] 2284
XY<m>:SWAP 1479
XY<m>:XSOurce 1480
XY<m>:YSOurce 1479
XY<m>[:STATe] 1479
ZONE<m>:ACOMbination 1179
ZONE<m>:ADD 1179
ZONE<m>:AREA<n>:ADD 1180
ZONE<m>:AREA<n>:COUNt? 1180
ZONE<m>:AREA<n>:INTersect 1180
ZONE<m>:AREA<n>:LABel 1180
ZONE<m>:AREA<n>:POINt<o>:ADD 1181
ZONE<m>:AREA<n>:POINt<o>:COUNt? 1181
ZONE<m>:AREA<n>:POINt<o>:REMove 1182
ZONE<m>:AREA<n>:POINt<o>:VALid? 1183
ZONE<m>:AREA<n>:POINt<o>:X 1182
ZONE<m>:AREA<n>:POINt<o>:Y 1182
ZONE<m>:AREA<n>:REMove 1183
ZONE<m>:AREA<n>:STATe 1183
ZONE<m>:AREA<n>:VALid? 1181
ZONE<m>:COUNt? 1184
ZONE<m>:DIAGram 1184
ZONE<m>:REMove 1184
ZONE<m>:SOURce 1185
ZONE<m>[:VISible] 1185