

R&S®SMB100B

RF and Microwave signal generator

Getting Started

dataTec

Mess- und Prüftechnik. Die Experten.

**Ihr Ansprechpartner /
Your Partner:**

dataTec AG

E-Mail: info@datatec.eu

>>> www.datatec.eu



1422104502

Version 08

ROHDE & SCHWARZ

Make ideas real



This document describes the R&S®SMB100B instruments, stock no. 1422.1000.02.



Mess- und Prüftechnik. Die Experten.

**Ihr Ansprechpartner /
Your Partner:**

dataTec AG

E-Mail: info@datatec.eu

>>> www.datatec.eu

© 2025 Rohde & Schwarz

Muehldorfstr. 15, 81671 Muenchen, Germany

Phone: +49 89 41 29 - 0

Email: info@rohde-schwarz.com

Internet: www.rohde-schwarz.com

Subject to change – data without tolerance limits is not binding.

R&S® is a registered trademark of Rohde & Schwarz GmbH & Co. KG.

All other trademarks are the properties of their respective owners.

1422.1045.02 | Version 08 | R&S®SMB100B

Throughout this document, R&S® is indicated as R&S.

Contents

1 Safety and regulatory information.....	7
1.1 Safety instructions.....	7
1.2 Labels on R&S SMB100B.....	10
1.3 Warning messages in the documentation.....	11
1.4 CE declaration of conformity.....	12
1.5 Where to find key documents on Rohde & Schwarz.....	12
1.6 Korea certification class A.....	12
2 Documentation overview.....	13
2.1 Getting started manual.....	13
2.2 User manuals and help.....	13
2.3 Service manual.....	13
2.4 Instrument security procedures.....	14
2.5 Printed safety instructions.....	14
2.6 Specifications and product brochures.....	14
2.7 Calibration certificate.....	14
2.8 Release notes and open source acknowledgment.....	15
2.9 Application notes, application cards, white papers, etc.....	15
2.10 Videos.....	15
3 Key features.....	17
4 Preparing for use.....	19
4.1 Lifting and carrying.....	19
4.2 Unpacking and checking.....	19
4.3 Choosing the operating site.....	20
4.4 Setting up the R&S SMB100B.....	20

4.4.1	Placing the R&S SMB100B on a bench top.....	20
4.4.2	Mounting the product in a rack.....	22
4.5	Considerations for test setup.....	23
4.6	Connecting to power.....	23
4.7	Connecting to LAN.....	24
4.8	Connecting USB devices.....	25
4.9	Connecting to RF coaxial connectors.....	26
4.10	Connecting to RF 50 Ω.....	28
4.11	Connecting to Ref In/Ref Out.....	28
4.12	Switching on or off.....	28
5	Instrument tour.....	31
5.1	Front panel tour.....	31
5.1.1	Utility keys.....	32
5.1.2	Touchscreen.....	32
5.1.3	Function keys.....	33
5.1.4	Navigation controls.....	34
5.1.4.1	Rotary knob.....	34
5.1.4.2	Editing keys.....	34
5.1.4.3	Navigation keys.....	35
5.1.5	Display keys.....	35
5.1.6	USB connector.....	35
5.1.7	SD card slot.....	36
5.1.8	RF 50 Ω	36
5.1.9	Keypad.....	37
5.1.10	On/Standby.....	37
5.2	Rear panel tour.....	37
5.2.1	Connectors.....	39

6 Trying out the instrument.....	43
6.1 Generating an unmodulated carrier.....	43
6.2 Generating an RF frequency sweep signal.....	46
6.3 Saving and recalling settings.....	48
7 Operating the instrument.....	53
7.1 Means of manual interaction.....	53
7.2 Understanding the display information.....	54
7.2.1 Status bar.....	55
7.2.2 Tile diagram.....	55
7.2.3 Taskbar.....	56
7.2.4 Additional display characteristics.....	57
7.3 Accessing the functionality.....	58
7.4 Entering data.....	60
7.5 Undo and redo actions.....	61
7.6 Getting information and help.....	61
8 Contacting customer support.....	65
Index.....	67

1 Safety and regulatory information

The product documentation helps you use the product safely and efficiently. Follow the instructions provided here and in the following sections.

Intended use

The product is intended for the development, production and verification of electronic components and devices. It generates radio frequency (RF) signals for test setups in industrial, administrative, and laboratory environments. Use the product only for its designated purpose. Observe the operating conditions and performance limits stated in the specifications document.

Target audience

The target audience of this document includes developers, technicians, operators, administrators and maintenance personnel. The required skills and experience of the users depend on the test setup and application of the product.

Where do I find safety information?

Safety information is part of the product documentation. It warns you of potential dangers and gives instructions on how to prevent personal injury or damage caused by dangerous situations. Safety information is provided as follows:

- In [Section 1.1, "Safety instructions"](#), on page 7. The same information is provided in many languages in printed format. The printed "Safety Instructions" for "Mains-Powered Products, Not Heavy" (document number 1171.1771.99) are delivered with the product.
- Throughout the documentation, safety instructions are provided when you need to take care during setup or operation.

1.1 Safety instructions

Products from the Rohde & Schwarz group of companies are manufactured according to the highest technical standards. To use the products safely, follow the instructions provided here and in the product documentation. Keep the product documentation nearby and offer it to other users.

Safety instructions

Use the product only for its intended use and within its performance limits. Intended use and limits are described in the product documentation such as the specifications document, manuals and the printed "Safety Instructions" document. If you are unsure about the appropriate use, contact Rohde & Schwarz customer support.

Using the product requires skilled persons or specially trained personnel. These users also need sound knowledge of at least one of the languages in which the user interfaces and the product documentation are available.

Reconfigure or adjust the product only as described in the product documentation or the specifications document. Any other modifications can affect safety and are not permitted.

Never open the casing of the product. Only service personnel authorized by Rohde & Schwarz are allowed to repair the product. If any part of the product is damaged or broken, stop using the product. Contact Rohde & Schwarz customer support at <https://www.rohde-schwarz.com/support>.

Lifting and carrying the product

The maximum weight of the product is provided in the specifications document. You can lift or carry the product by yourself, if you can manage the weight on your own. Alternatively, you can use lifting or transporting equipment. Follow the instructions provided by the equipment manufacturer.

Choosing the operating site

Only use the product indoors. The product casing is not waterproof. Water that enters can electrically connect the casing with live parts, which can lead to electric shock, serious personal injury or death if you touch the casing.

If Rohde & Schwarz provides accessories designed for outdoor use of your product, e.g. a protective cover, you can use the product outdoors.

You can operate the product up to an altitude of 2000 m above sea level. If a higher altitude is permissible, the value is provided in the specifications document. The product is suitable for pollution degree 2 environments where nonconductive contamination can occur. For more information on environmental conditions such as ambient temperature and humidity, see the specifications document.

Setting up the product

Always place the product on a stable, flat and level surface with the bottom of the product facing down. If the product is designed for different positions, secure the product so that it cannot fall over.

If the product has foldable feet, always fold the feet completely in or out to ensure stability. The feet can collapse if they are not folded out completely or if the product is moved without lifting it. The foldable feet are designed to carry the weight of the product, but not an extra load.

If stacking is possible, keep in mind that a stack of products can fall over and cause injury.

If you mount products in a rack, ensure that the rack has sufficient load capacity and stability. Observe the specifications of the rack manufacturer. Always install the products from the bottom shelf to the top shelf so that the rack stands securely. Secure the product so that it cannot fall off the rack.

Connecting the product

Before connecting the interfaces or measuring inputs of the product to other products or electrical circuits, make sure that the other products or electrical circuits provide special protection against electric shock. This protection principle is referred to as SELV (safety extra-low voltage) and is based on a low voltage level and increased insulation. Exceptions are indicated by a measurement category on the product and given in the specifications document.

Connecting to power

The product is an overvoltage category II product. Connect the product to a fixed installation used to supply energy-consuming equipment such as household appliances and similar loads. Keep in mind that electrically powered products have risks, such as electric shock, fire, personal injury or even death. Replace parts that are relevant to safety only by original parts, e.g. power cables or fuses.

Take the following measures for your safety:

- Before switching on the product, ensure that the voltage and frequency indicated on the product match the available power source. If the power adapter does not adjust automatically, set the correct value and check the rating of the fuse.
- Only use the power cable delivered with the product. It complies with country-specific safety requirements. Only insert the plug into an outlet with protective conductor terminal.

Labels on R&S SMB100B





- Only use intact cables and route them carefully so that they cannot be damaged. Check the power cables regularly to ensure that they are undamaged. Also ensure that nobody can trip over loose cables.
- Only connect the product to a power source with a fuse protection of maximum 20 A.
- Ensure that you can disconnect the product from the power source at any time. Pull the power plug to disconnect the product. The power plug must be easily accessible. If the product is integrated into a system that does not meet these requirements, provide an easily accessible circuit breaker at the system level.

Cleaning the product

Use a dry, lint-free cloth to clean the product. When cleaning, keep in mind that the casing is not waterproof. Do not use liquid cleaning agents.

Meaning of safety labels

Safety labels on the product and its accessories warn against potential hazards.

	<p>Potential hazard</p> <p>Read the product documentation to avoid personal injury or product damage.</p>
	<p>Electrical hazard</p> <p>Indicates live parts. Risk of electric shock, fire, personal injury or even death.</p>
	<p>Hot surface</p> <p>Do not touch. Risk of skin burns. Risk of fire.</p>
	<p>Protective conductor terminal</p> <p>Connect this terminal to a grounded external conductor or to protective ground. This connection protects you against electric shock if an electric problem occurs.</p>

1.2 Labels on R&S SMB100B


Labels on the casing inform about:

- Personal safety, see "[Connecting to power](#)" on page 9.

Warning messages in the documentation

- Product and environment safety, see "[Labels regarding product and environment safety](#)" on page 11.
- Identification of the product, see the serial number on the rear panel.

Labels regarding product and environment safety

	Labeling in line with EN 50419 for disposal of electrical and electronic equipment after the product has come to the end of its life.
---	---

1.3 Warning messages in the documentation

A warning message points out a risk or danger that you need to be aware of. The signal word indicates the severity of the safety hazard and how likely it will occur if you do not follow the safety precautions.

DANGER

Imminently hazardous situation. Will result in death or serious injury if not avoided.

WARNING

Potentially hazardous situation. Could result in death or serious injury if not avoided.

CAUTION

Potentially hazardous situation. Could result in minor or moderate injury if not avoided.

NOTICE

Potential risks of damage. Could result in damage to the supported product or to other property.

1.4 CE declaration of conformity

The CE declaration of conformity of the base unit is delivered with the product. Keep the document for further reference. The current version of this CE declaration of conformity is available at:

www.rohde-schwarz.com/company-documents/smb100b

1.5 Where to find key documents on Rohde & Schwarz

Certificates issued to Rohde & Schwarz that are relevant for your country are provided at www.rohde-schwarz.com/key-documents, e.g. concerning:

- Quality management
- Environmental management
- Information security management
- Accreditations

1.6 Korea certification class A



이 기기는 업무용(A급) 전자파 적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.

2 Documentation overview

This section provides an overview of the R&S SMB100B user documentation. Unless specified otherwise, you find the documents at:

www.rohde-schwarz.com/manual/smb100b

2.1 Getting started manual

Introduces the R&S SMB100B and describes how to set up and start working with the product. Includes basic operations, typical measurement examples, and general information, e.g. safety instructions, etc. A printed version is delivered with the instrument.

2.2 User manuals and help

Contains the description of all instrument modes and functions. It also provides an introduction to remote control, a complete description of the remote control commands with programming examples, and information on maintenance, instrument interfaces and error messages. Includes the contents of the getting started manual.

The contents of the user manuals are available as help in the R&S SMB100B. The help offers quick, context-sensitive access to the complete information.

All user manuals are also available for download or for immediate display on the internet.

2.3 Service manual

Describes the performance test for checking compliance with rated specifications, firmware update, troubleshooting, adjustments, installing options and maintenance.

The service manual is available for registered users on the global Rohde & Schwarz information system (GLORIS):

<https://gloris.rohde-schwarz.com>

2.4 Instrument security procedures

Deals with security issues when working with the R&S SMB100B in secure areas. It is available for download on the internet.

2.5 Printed safety instructions

Provides safety information in many languages. The printed document is delivered with the product.

2.6 Specifications and product brochures

The specifications document, also known as the data sheet, contains the technical specifications of the R&S SMB100B. It also lists the firmware applications and their order numbers, and optional accessories.

The brochure provides an overview of the instrument and deals with the specific characteristics.

See www.rohde-schwarz.com/brochure-datasheet/smb100b

2.7 Calibration certificate

The document is available on <https://gloris.rohde-schwarz.com/calcert>. You need the device ID of your instrument, which you can find on a label on the rear panel.

2.8 Release notes and open source acknowledgment

The release notes list new features, improvements and known issues of the current software version, and describe the software installation.

The software uses several valuable open source software packages. An open source acknowledgment document provides verbatim license texts of the used open source software.

www.rohde-schwarz.com/firmware/smb100b

2.9 Application notes, application cards, white papers, etc.

These documents deal with special applications or background information on particular topics.

For some application sheets, see also:

www.rohde-schwarz.com/application/smb100b

2.10 Videos

Find various videos on Rohde & Schwarz products and test and measurement topics on YouTube: <https://www.youtube.com/@RohdeundSchwarz>



On the menu bar, search for your product to find related videos.

HOME VIDEOS SHORTS PLAYLISTS COMMUNITY CHANNELS ABOUT



Figure 2-1: Product search on YouTube

3 Key features

The R&S SMB100B is a high-performance signal generator developed to meet demanding customer requirements. Offering excellent signal characteristics and straightforward and intuitive operation, the signal generator makes signal generation fast and easy.

Outstanding key features of the R&S SMB100B are:

- Frequency range from 8 kHz up to 40 GHz
- Excellent SSB phase noise
- Low wideband noise
- High output power
- Closed loop power control
- User correction
- Pulse train generation
- SCPI macro recorder and code generator for generating executable remote control code from manual operating steps (for MATLAB®, CVI, etc.)
- Compact racks with a height of 2 U and different widths and depths
- 5" Graphical user interface with touchscreen

For more information, refer to the specifications document.

4 Preparing for use

Here, you can find basic information about setting up the product for the first time.

4.1 Lifting and carrying

For safety information, see ["Lifting and carrying the product"](#) on page 8.

Use the handles for lifting and carrying the R&S SMB100B.

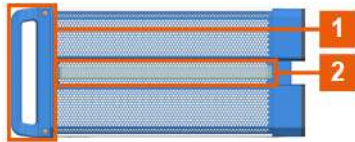


Figure 4-1: Instrument side view with front handles (1) and side handles (2)

4.2 Unpacking and checking

1. Unpack the R&S SMB100B carefully.
2. Retain the original packing material. Use it to protect the control elements and connectors when transporting or shipping the R&S SMB100B later.
See also section "Transporting" in the user manual.
3. Using the delivery notes, check the equipment for completeness.
4. Check the equipment for damage.

If the delivery is incomplete or equipment is damaged, contact Rohde & Schwarz.

4.3 Choosing the operating site

Specific operating conditions ensure proper operation and avoid damage to the product and connected devices. For information on environmental conditions such as ambient temperature and humidity, see the specifications document.

For safety information, see ["Choosing the operating site"](#) on page 8.

Electromagnetic compatibility classes

The electromagnetic compatibility (EMC) class indicates where you can operate the product. The EMC class of the product is given in the specifications document.

- Class B equipment is suitable for use in:
 - Residential environments
 - Environments that are directly connected to a low-voltage supply network that supplies residential buildings
- Class A equipment is intended for use in industrial environments. It can cause radio disturbances in residential environments due to possible conducted and radiated disturbances. It is therefore not suitable for class B environments. If class A equipment causes radio disturbances, take appropriate measures to eliminate them.

4.4 Setting up the R&S SMB100B

See also:

- ["Setting up the product"](#) on page 9
- ["Intended use"](#) on page 7

4.4.1 Placing the R&S SMB100B on a bench top

To place the product on a bench top

1. Place the product on a stable, flat and level surface. Ensure that the surface can support the weight of the product. For information on the weight, see the specifications document.


Setting up the R&S SMB100B

2. **CAUTION!** Foldable feet can collapse. For safety information, see "[Setting up the product](#)" on page 9.

Always fold the feet completely in or out. With folded-out feet, do not place anything on top or underneath the product.

3. **WARNING!** A stack of products can fall over and cause injury. Never stack more than three products on top of each other. Instead, mount them in a rack. Stack as follows:

- If the products have foldable feet, fold them in completely.
- It is best if all products have the same dimensions (width and length). If the products have different dimensions, stack according to size and place the smallest product on top.
- Do not exceed the permissible total load placed on the product at the bottom of the stack:
 - 50 kg when stacking products of identical dimensions (left figure).
 - 25 kg when stacking smaller products on top (middle figure).

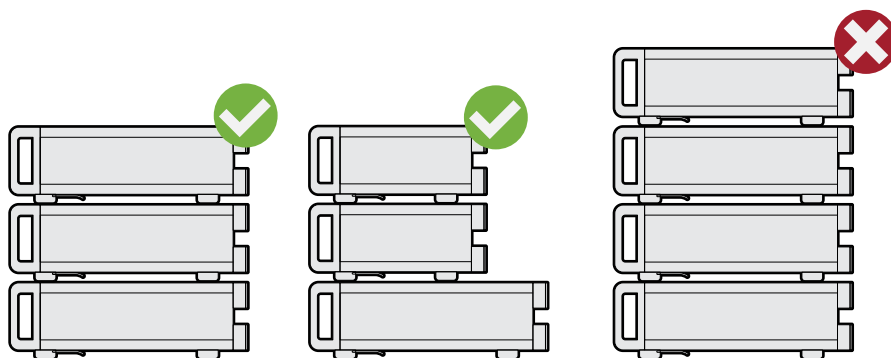

Left = Stacked correctly, same dimensions
 Middle = Stacked correctly, different dimensions
 Right = Stacked incorrectly, too many products

4. **NOTICE!** Overheating can damage the product.

Prevent overheating as follows:

- Keep a minimum distance of 10 cm between the fan openings of the product and any object in the vicinity to provide sufficient airflow and ventilation.
- Do not place the product next to heat-generating equipment such as radiators or other products.

4.4.2 Mounting the product in a rack

To prepare the rack

1. Observe the requirements and instructions in ["Setting up the product"](#) on page 9.
2. **NOTICE!** Insufficient airflow can cause overheating and damage the product. Design and implement an efficient ventilation concept for the rack.

To mount the product in a rack

1. Use an adapter kit that fits the dimensions of the R&S SMB100B to prepare the instrument for rack mounting.
 - a) Order the rack adapter kit designed for the R&S SMB100B.
For more information, refer to the specifications document.
 - b) Mount the adapter kit. Follow the assembly instructions provided with the adapter kit.
2. Lift the product to shelf height.
If the rack is high, use a safe climbing aid when placing on upper shelves.
3. Grab the handles at the front.
4. Push the R&S SMB100B onto the shelf until the rack brackets fit closely to the rack.
5. Tighten all screws at the rack brackets with a tightening torque of 1.2 Nm to secure the R&S SMB100B in the rack.

To unmount the product from a rack

1. Loosen the screws at the rack brackets.
2. **WARNING!** The product is heavy. For safety information, see ["Lifting and carrying the product"](#) on page 8.
Bring the lifting equipment to shelf height.
3. Remove the R&S SMB100B from the rack.
4. If placing the R&S SMB100B on a bench top again, unmount the adapter kit from the R&S SMB100B. Follow the instructions provided with the adapter kit.

4.5 Considerations for test setup

For safety information, see ["Connecting the product"](#) on page 9.

Cable selection to minimize electromagnetic interference

Electromagnetic interference (EMI) can affect the measurement results.

To suppress electromagnetic radiation during operation:

- Use high-quality shielded cables, for example, double-shielded RF, LAN and USB cables.
- Always terminate open cable ends.
- Ensure that connected external devices comply with EMC regulations.

Signal input and output levels

Keep the signal levels within the specified ranges to avoid damage to the R&S SMB100B and connected devices.

For more information, refer to the specifications document.

Preventing electrostatic discharge (ESD)

Electrostatic discharge is most likely to occur when you connect or disconnect a DUT.

- **NOTICE!** Electrostatic discharge can damage the electronic components of the product and the device under test (DUT).

Ground yourself to prevent electrostatic discharge damage:

- a) Use a wrist strap and cord to connect yourself to ground.
- b) Use a conductive floor mat and heel strap combination.

4.6 Connecting to power

For safety information, see ["Connecting to power"](#) on page 9.

1. Plug the AC power cable into the AC power connector on the rear panel. Only use the AC power cable delivered with the R&S SMB100B.
2. Plug the AC power cable into a power outlet with ground contact.

The required ratings are listed next to the AC power connector.

For more information, refer to the specifications document.

4.7 Connecting to LAN

Network environment


Before connecting the product to a local area network (LAN), consider the following:

- Install the latest firmware to reduce security risks.
- For internet or remote access, use secured connections if applicable.
- Ensure that the network settings comply with the security policies of your company. Contact your local system administrator or IT department before connecting your product to your company LAN.
- When connected to the LAN, the product may potentially be accessed from the internet, which may be a security risk. For example, attackers might misuse or damage the product.

To connect to LAN

- ▶ Connect the LAN socket on the rear panel via an RJ-45 cable to the LAN. Using DHCP (dynamic host configuration protocol), the R&S SMB100B assigns the IP address automatically.

If connected to the LAN, the R&S SMB100B displays the IP address and the host name at the left bottom of the home screen.

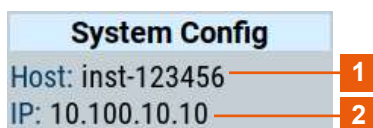

1 = Hostname
2 = IP address

If disconnected from the LAN, the R&S SMB100B displays the IP address 0.0.0.0.

See also section "Setting up remote control in the user manual.

4.8 Connecting USB devices

You can connect or disconnect all USB devices from the R&S SMB100B during operation.

To connect USB storage devices

USB storage devices, such as memory sticks, allow data transfer from or to the R&S SMB100B. You can also use them for firmware updates.

- Connect the USB storage device to any of the USB connectors.

To connect USB devices with an external power supply

1. **NOTICE!** Connected devices with external power supply can feed back current into the 5 V power supply of the USB interface and thus damage the R&S SMB100B.

Ensure that there is no connection between the positive pole of the power supply and the +5 V power pin of the USB interface (VBUS).

2. Connect the USB device to any of the USB connectors.

To connect a keyboard

- Connect the keyboard to any of the USB connectors.

When connected, the R&S SMB100B detects the keyboard automatically. A detected keyboard has the default layout English – US.

To connect a mouse

- Connect the mouse to any of the USB connectors.

When connected, the R&S SMB100B detects the mouse automatically.

To connect power sensors

Connect the power sensors of the R&S NRP families to any of the USB connectors.

See section "Using power sensors" in the user manual.

To connect a frequency multiplier

- ▶ Connect the frequency multiplier for control connection to the "USB" connector on the front panel or rear panel.

4.9 Connecting to RF coaxial connectors

Here, you find information on how to prepare and to connect to RF coaxial connectors of the R&S SMB100B. Use these RF connectors, for example, for output of the RF signal or for input of an external reference signal.

To prepare for connecting

1. **NOTICE!** Damaged or not clean connections can lead to RF insertion loss and mismatch, and even premature wear of the connectors.
Before connecting to the port, inspect the RF connector visually. Check that it is clean, undamaged and mechanically compatible.
2. **NOTICE!** DC voltage at the RF connector can damage the instrument. Never apply DC voltage to the RF input connectors.
Make sure that the values are within the DC limits given in the specifications document.
3. If your test setup has a DC component at the RF input, insert a DC blocker.
4. Use a high-quality RF cable that matches the RF connector type. See also ["Cable selection to minimize electromagnetic interference"](#) on page 23.
5. You can connect to two kinds of connectors:
 - ["To connect to screwable connectors"](#) on page 26
 - ["To connect to pluggable connectors"](#) on page 27

To connect to screwable connectors

To connect the cable with the connector, proceed as follows:

1. Carefully align the connector of the cable and the connector along a common axis.
2. Mate the connectors along the common axis until the male pin of the inner connector engages with the female socket of the outer connector.

Connecting to RF coaxial connectors

3. Turn the nut of the outer connector until you couple the connectors firmly.
4. **NOTICE!** Excessive tightening can damage the connectors.

Using a calibrated torque wrench torque the nut to the limit as in the table below. Hold the opposite connector part stationary with a spanner.

The R&S SMB100B provides screwable RF connectors as in [Table 4-1](#).

Table 4-1: Connector name, type, size, torque limit and nut opening

Connector		Torque limit		Nut opening	
Type	Name	lb-Inch	Nm	Inch	mm
N	RF 50 Ω *)	13.3	1.5	3/4	20
SMA	Ref In 1 GHz Ref Out 1 GHz	5	0.56	5/16	8
2.92 mm	RF 50 Ω *)	8	0.9	5/16	8

*) maximum frequency f_{\max} depends on the connector type: $f_{\max}(\text{N}) \leq 7 \text{ GHz}$,
 $f_{\max}(2.92 \text{ mm}) \leq 40 \text{ GHz}$

To connect to pluggable connectors

The R&S SMB100B provides pluggable Bayonet Neill-Concelman (BNC) connectors.

To connect the RF cable with the BNC connector, proceed as follows:

1. Carefully align the connector of the cable and the BNC connector along a common axis.
2. Mate the connectors along the common axis until the male pin of the connector of the cable engages with the female socket of the BNC connector.

For more information on handling and maintaining coaxial RF connectors, see the application note [1MA99](#).

For information on mounting test port adapters onto the RF connector, see the application note [1MA100](#).

4.10 Connecting to RF 50 Ω

1. Before connecting, disable the RF output:
In the home screen, switch off the RF block.
2. For connection, use the connector "RF 50 Ω" on the front panel.
See ["To connect to screwable connectors"](#) on page 26.

To prevent RF output switch-off

- **NOTICE!** High reflected powers can force the R&S SMB100B to switch off the RF output.

Connect a load with sufficient return loss.

For more information, refer to the specifications document.





4.11 Connecting to Ref In/Ref Out

For connection, the R&S SMB100B provides BNC connectors or SMA connectors on the rear panel. See ["To connect to pluggable connectors"](#) on page 27 and ["To connect to screwable connectors"](#) on page 26.

4.12 Switching on or off

The following table provides an overview of power states, LEDs and positions of the power switch.

Table 4-2: Overview of power states

State	LED	Position of power switch
Off	 gray	[0]
Standby	 orange  orange	[I]
Ready	 yellow	[I]

To switch on the R&S SMB100B

The R&S SMB100B is off but connected to power. See [Section 4.6, "Connecting to power"](#), on page 23.

1. Set the switch on the power supply to position [I] on the rear panel.

The LED of the [On/Standby] key on the front panel is orange.

2. Wait until the oven-controlled oscillator (OCXO) warms up.
For more information, refer to the specifications document.

3. Press the [On/Standby] key on the front panel.

The LED changes to green. The R&S SMB100B boots.

After booting, the R&S SMB100B starts up displaying the home screen on the screen on the front panel.

To check startup functions

When starting for the first time, the R&S SMB100B starts with the default settings. When restarting, the R&S SMB100B recalls the instrument configuration before shut-down.

See section "Saving and recalling instrument settings" in the user manual.

When switched on, the R&S SMB100B monitors the main functions and logs erroneous functions. See the following:

See section "Querying notifications" in the user manual.

To shut down the product

The product is in the ready state.

- Press the [On/Standby] key.

The operating system shuts down. The LED changes to orange. The product changes to standby state.

In the standby state, the power switch circuits and the OCXO are active. To deactivate them, disconnect the instrument from the power supply.

To disconnect from power

The R&S SMB100B is in the standby state.

1. **NOTICE!** Risk of data loss. If you disconnect the product from power when it is in the ready state, you can lose settings and data. Shut it down first.
Set the toggle switch on the power supply to position [0].
The LED of the [On/Standby] key is switched off.
2. Disconnect the R&S SMB100B from the power source.

5 Instrument tour

This section explains the control elements and the connectors of the R&S SMB100B. The views of the front panel and the rear panel help you to get familiar with the instrument and to perform the first steps. For specifications of the interfaces, see the specifications document.

The meanings of the labels on the R&S SMB100B are described in [Section 1.2, "Labels on R&S SMB100B"](#), on page 10.

5.1 Front panel tour

This section provides an overview of the control elements at the front panel of the R&S SMB100B. Most of the connectors are at the rear panel and are described in [Section 5.2, "Rear panel tour"](#), on page 37.



Figure 5-1: Front panel view of the R&S SMB100B RF signal generator

- 1 = Utility keys
- 2 = Touchscreen
- 3 = Function keys
- 4 = Navigation controls
- 5 = Display keys
- 6 = USB connector
- 7 = RF 50 Ω
- 8 = Keypad
- 9 = On/Standby



Figure 5-2: Front panel view of the R&S SMB100B Microwave signal generator

- 1 = Utility keys
- 2 = Touchscreen
- 3 = Function keys
- 4 = Navigation controls
- 5 = Display keys
- 6 = USB connector
- 7 = SD card slot
- 8 = RF 50 Ω
- 9 = Keypad
- 10 = On/Standby

5.1.1 Utility keys

The utility keys set the R&S SMB100B to a defined state, and provide access to basic settings and information on assistance.

Table 5-1: Utility keys

Utility Key	Assigned functions
[Preset]	Sets the instrument to a defined state
[Local]	Switches from remote control to local (manual) control
[Setup]	Accesses the general instrument settings
[Help]	Displays context-sensitive help text

5.1.2 Touchscreen

The screen display on the front panel is the graphical user interface. It shows the most important settings, the current configuration at a glance and provides access to the settings dialogs.

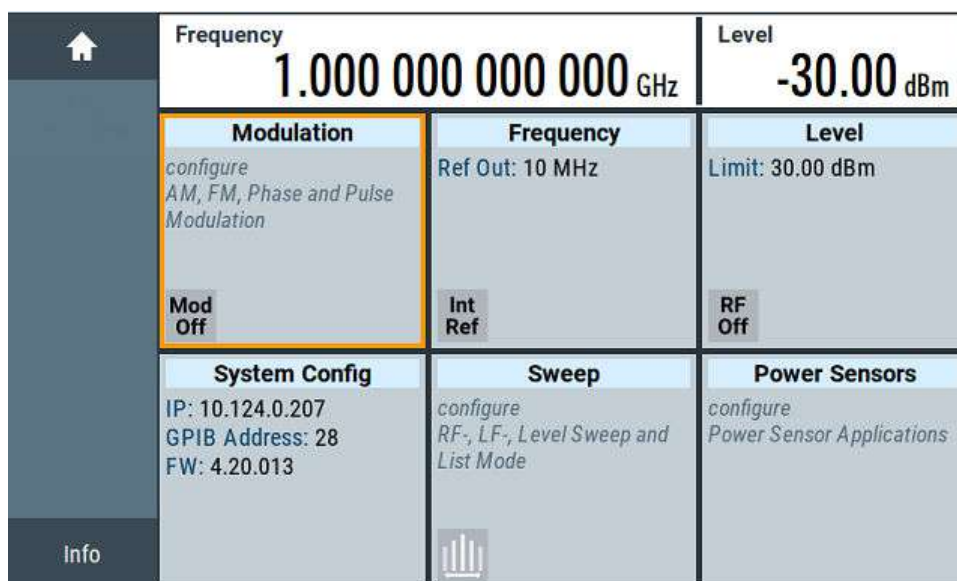


Figure 5-3: Touchscreen

The screen is touch-sensitive, offering an alternative means of user interaction for quick and easy handling of the instrument.

See also:

- [Section 7.2, "Understanding the display information"](#), on page 54.
- [Section 7, "Operating the instrument"](#), on page 53, for operating the touch-screen.
- Section "Cleaning" in the user manual, for cleaning the screen.

5.1.3 Function keys

Function keys provide access to the most common generator settings and functions. You can find a detailed description of the corresponding functions in the user manual.

Table 5-2: Function keys

Function key	Assigned functions
[Freq]	Activates frequency entry.
[Level]	Activates level entry.
[Mod on/off]	Switches the modulation on and off.
[RF on/off]	Switches the RF output on and off.

5.1.4 Navigation controls

The navigation controls include a rotary knob, navigation keys, and the display keys. They allow you to navigate within the display or within dialog boxes.

5.1.4.1 Rotary knob

The rotary knob has several functions:

- Increments (clockwise direction) or decrements (counterclockwise direction) numeric instrument parameters at a defined step width.
- Moves the selection, e.g. to a function block in the block diagram
- Shifts the selection bar within focused areas (e.g. lists).
- Acts like the [Enter] key, when it is pressed.
- Opens a context-sensitive menu, when it is pressed and held.

5.1.4.2 Editing keys

Editing keys enable you to confirm an entry, delete individual characters, or exit the current operation.

Table 5-3: Editing keys

Type of key	Description
[Esc] key	<p>Closes all kinds of dialog boxes, if the edit mode is not active. Quits the edit mode, if the edit mode is active. Equals selecting the "Cancel" button in dialogs, if provided.</p> <p>For "Edit" dialog boxes, the following applies:</p> <ul style="list-style-type: none"> • If data entry has been started, it retains the original value and closes the dialog box. • If data entry has not been started or has been completed, it closes the dialog box.
[Enter] key	<p>Has the same effect as pressing the rotary knob</p> <ul style="list-style-type: none"> • Concludes the entry of dimensionless entries. The new value is accepted. • With other entries, this key can be used instead of the default unit key. • In a dialog box, selects the default or focused element. • Calls the next dialog level. • Confirms and closes open input windows.
[Backspace] key	Deletes the character to the left of the cursor in editing mode.

5.1.4.3 Navigation keys

As an alternative to the rotary knob or the touchscreen, you can use the navigation keys to navigate through dialog boxes, diagrams, or tables.

Table 5-4: Navigation keys

Type of key	Description
[Up/Down] Key	<p>The [Up] and the [Down] key does the following:</p> <ul style="list-style-type: none"> • In a numeric edit dialog box, increase or decrease the instrument parameter. • In a list, scroll forward and backward through the list entries. • In a table, move the selection bar vertically. • In windows or dialog boxes with vertical scrollbar, move the scrollbar.
[Left/Right] Key	<p>The [Left] and the [Right] key does the following:</p> <ul style="list-style-type: none"> • In an alphanumeric edit dialog box, move the cursor. • In a list, scroll forward and backward through the list entries. • In a table, move the selection bar horizontally. • In windows or dialog boxes with horizontal scrollbar, move the scrollbar.

5.1.5 Display keys

The display keys arrange different windows on the display.

Table 5-5: Display keys

Display key	Assigned functions
[Home]	Returns to the initial feature screen.
[Next window]	Toggles between the entry fields in the taskbar.
[On/Off]	<ul style="list-style-type: none"> • Switches highlighted elements or a function block on and off. • Switches between two or more settings, e.g. items of selection lists. At the end of a list, the cursor is set on the first entry again.
[Undo]	Reverts the last operation.
[★ (User)]	Adds a parameter to the user menu for quick access.

5.1.6 USB connector

Female USB type A connector, to connect devices like a keyboard, a mouse, a memory stick, or the R&S NRP-Z3/Z4 cable for the R&S NRP power sensors.

How to: [Section 4.8, "Connecting USB devices"](#), on page 25

5.1.7 SD card slot

Option: R&S SMBB-B85 (R&S SMB100B microwave instruments only)

Slot for removable mass storage.

To prevent from unauthorized removal, the SD card holder includes wholes that provide the opportunity of sealing the SD card. We recommend that you seal the SD card crosswise.

5.1.8 RF 50 Ω

The connector type depends on the installed frequency option.

Table 5-6: RF connector types of the frequency options

Installed RF frequency option	Connector type	Frequency range
R&S SMBB-B101	N female	$f_{\max} \leq 6 \text{ GHz}$
R&S SMBB-B103		
R&S SMBB-B106		
R&S SMBB-B112	PC 2.92 mm female	$f_{\max} \leq 40 \text{ GHz}$
R&S SMBB-B120	Instrument equipped with interchangeable PC 2.92 mm test port adapter.	
R&S SMBB-B131		
R&S SMBB-B140(N)		

Table 5-7: RF connector type of the frequency option

Installed RF frequency option	Connector type	Frequency range
R&S SMBB-B101M	N female	$f_{\max} \leq 1 \text{ GHz}$

How to: [Section 4.10, "Connecting to RF 50 Ω"](#), on page 28

5.1.9 Keypad

The keypad enables you to enter alphanumeric parameters, including the corresponding units. It contains the following keys:

Table 5-8: Keys on the keypad

Type of key	Description
Alphanumeric keys	Enter numbers and (special) characters in edit dialog boxes.
Decimal point	Inserts a decimal point "." at the cursor position.
Sign key	Changes the sign of a numeric parameter. For an alphanumeric parameter, inserts a "-" at the cursor position.
Unit keys (G/n dB μ V, M/ μ μ V, k/m mV and x1 dB(m))	These keys add the selected unit to the entered numeric value and complete the entry. For level entries (e.g. in dB) or dimensionless values, all units have the value "1" as multiplying factor. Thus, they have the same function as an [Enter] key.

5.1.10 On/Standby

The [On/Standby] key switches the instrument from the standby to the ready state or vice versa.

The LED above the [On/Standby] key indicates the instrument state, see [Section 4.12, "Switching on or off"](#), on page 28.

5.2 Rear panel tour

This section provides an overview of the connectors at the rear panel of the instrument. For technical data of the connectors, refer to the data sheet.

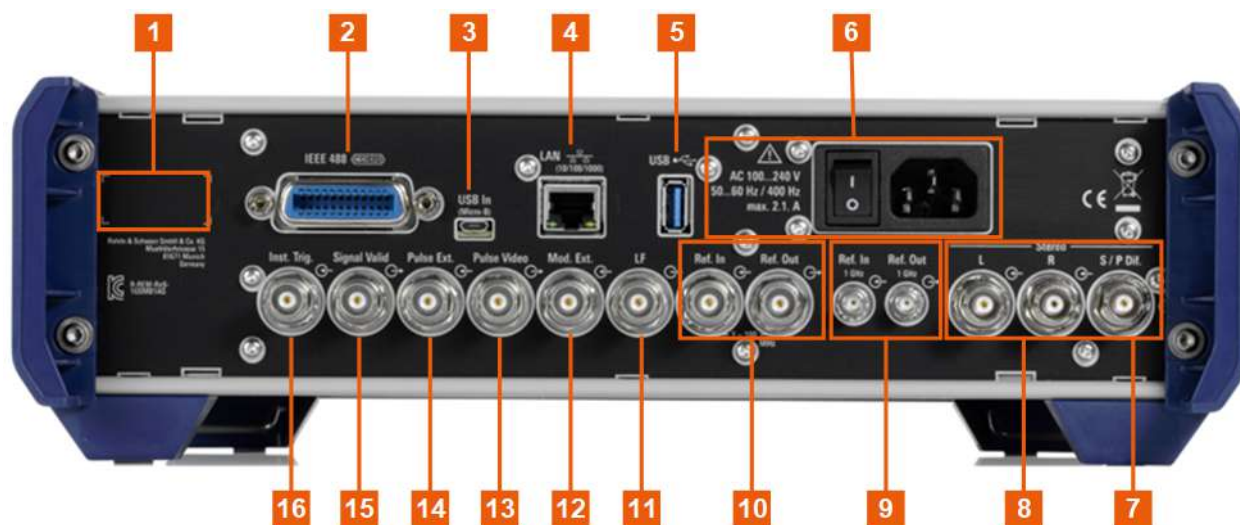


Figure 5-4: Rear panel view R&S SMB100B RF signal generator

- 1 = Serial number (six digits in the string 1400.1000.02-<serial number>-<checksum>)
- 2 = [IEC 625/IEEE 488](#)
- 3, 5 = [USB/USB In](#)
- 4 = [LAN](#)
- 6 = [AC power supply connector and switch](#)
- 7 = [S/P Dif](#)
- 8 = [Stereo L/R](#)
- 9, 10 = [Ref In/Ref Out](#)
- 11 = [LF](#)
- 12 = [Mod. Ext.](#)
- 13 = [Pulse Video](#)
- 14 = [Pulse Ext.](#)
- 15 = [Signal Valid](#)
- 16 = [Inst Trig](#)



Figure 5-5: Rear panel view R&S SMB100B Microwave signal generator

- 1 = Serial number (six digits in the string 1400.1000.02-<serial number>-<checksum>)
- 2 = [IEC 625/IEEE 488](#) (option R&S SMBB-K986)
- 3 = [LAN](#)
- 4 = [USB/USB In](#) (option R&S SMBB-K986)
- 5, 6 = [Ref In/Ref Out](#)
- 7 = [Inst Trig](#)
- 8 = [Signal Valid](#)
- 9 = [Pulse Ext.](#)
- 10 = [Pulse Video](#)
- 11 = [Mod. Ext.](#)
- 12 = [LF](#)
- 13 = [AC power supply connector and switch](#)

5.2.1 Connectors

IEC 625/IEEE 488

Option: R&S SMBB-B86/-K986

General purpose interface bus (GPIB) interface for remote control of the instrument. The interface complies with the standards IEC 625, IEEE 488 and SCPI.

Use this interface to connect a computer for remote control of the R&S SMB100B. See also the following sections:

- Section "Network operation and remote control" in the user manual
- "Annex: GPIB interface" in the user manual

USB/USB In

- Female USB (universal serial bus) 3.0 connector of type A (host USB), to connect devices like a keyboard, a mouse, a memory stick, or the R&S NRP-Z3/Z4 cable for the R&S NRP power sensors
- Option: R&S SMBB-B86/-K986
Female USB 2.0 connector of type Micro-B (USB In), for example, for remote control.

How to: [Section 4.8, "Connecting USB devices"](#), on page 25

LAN

RJ-45 connector to connect the R&S SMB100B to a LAN for remote control, remote operation, and data transfer.

How to: [Section 4.7, "Connecting to LAN"](#), on page 24

AC power supply connector and switch

Mains power switch for performing the following tasks:

- Connecting the internal power supply to the power source
- Disconnecting the internal power supply from the power source

How to: [Section 4.6, "Connecting to power"](#), on page 23.

S/P Dif

Option: R&S SMBB-B5

BNC input connector for digital stereo signals.

See also "Stereo Modulation" in the user manual.

Stereo L/R

Option: R&S SMBB-B5

BNC input connectors for analog stereo modulation signals. External modulation sources or the internal LF generator can be used.

See also section "Stereo Modulation" in the user manual.

Ref In/Ref Out

Input/output for external reference signal.

BNC connectors for reference signals from 1 MHz to 100 MHz.

SMA connectors for 1 GHz reference signals.

How to: [Section 4.11, "Connecting to Ref In/Ref Out"](#), on page 28

LF

BNC connector for output of the internal LF generator signal.

For more information, refer to the specifications document.

Mod. Ext.

BNC connector for input of external analog modulation signals.

Pulse Video

BNC connector for output of the internal pulse generator signal or the looped through pulse signal from Pulse Ext. connector (video signal).

Pulse Ext.

BNC connector for input of an external pulse modulation signal or an external trigger/gate signal for the pulse generator.

Signal Valid

BNC connector for output of a signal that determines the valid signal times (valid level and frequency) for all analog modulations.

Alternatively, you can use this connector to synchronize pulse signals by activating "Pulse Sync Out", see "Analog modulations > Modulation settings > Pulse generator > Pulse generator settings" in the user manual.

Inst Trig

BNC connector for input of external trigger signals. The signals trigger sweeps and list mode.

See section "Signal generation and triggering in the sweep and list modes" in the user manual.

6 Trying out the instrument

This section introduces the first steps with the R&S SMB100B. It shows how to operate and configure the instrument using simple examples. The complete description of the functionality and its usage is given in the R&S SMB100B user manual. Basic instrument operation is described in [Section 7, "Operating the instrument"](#), on page 53.

Prerequisites

The instrument is set up, connected to the power supply, and started up as described in [Section 4, "Preparing for use"](#), on page 19.

The first signal generation tasks explain how to generate an unmodulated signal, to configure the RF signal output, and how you can vary the RF frequency and level in sweep mode.

The instrument is manually operated via the touchscreen. Try out the following:

- [Generating an unmodulated carrier](#)..... 43
- [Generating an RF frequency sweep signal](#)..... 46
- [Saving and recalling settings](#)..... 48

6.1 Generating an unmodulated carrier

We start to generate a simple unmodulated signal. In this example, the R&S SMB100B can be in its minimal configuration.


1. On the R&S SMB100B front panel, press the [Preset] key to set a defined initial instrument state.
2. Set the frequency:
 - a) In the "Status Bar", tap the "Frequency" field.
 - b) On the on-screen keypad, enter "6" and press the "GHz" key.

Generating an unmodulated carrier



The on-screen key pad closes and the frequency value is displayed.

- To set the signal level, tap the "Level" field and enter the level in the same way.
- To activate RF signal output, select "Level" > "RF On" in the tile diagram.

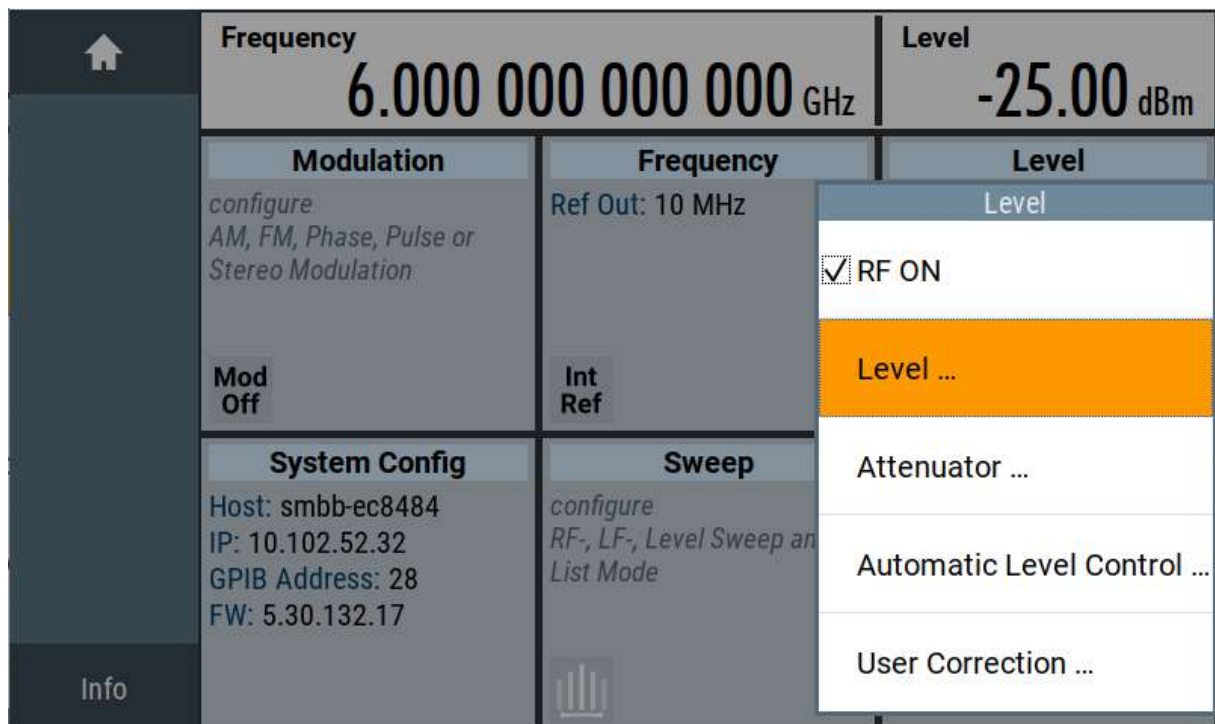

Generating an unmodulated carrier

The blue colored "RF On" icon indicates that the RF output is activated.

The R&S SMB100B provides the 6 GHz signal at the RF connector at the front panel.

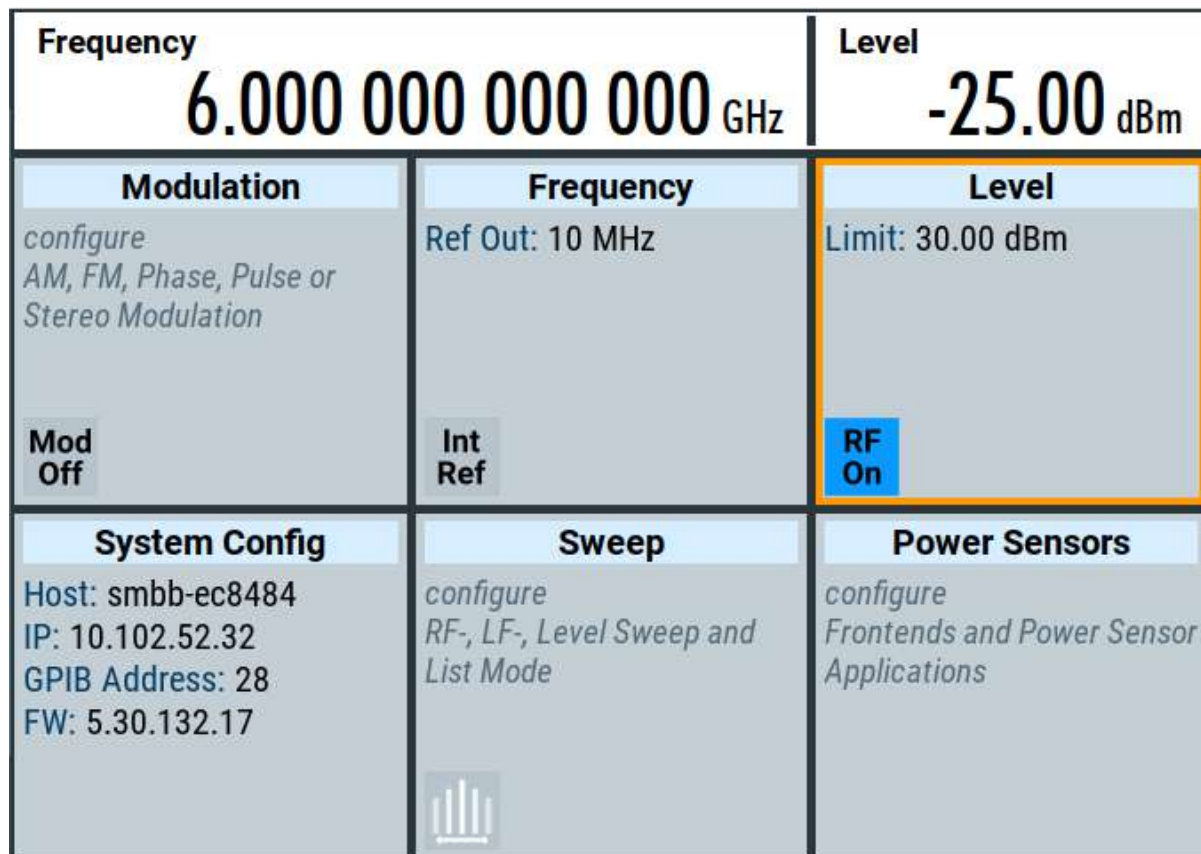


Figure 6-1: Generating an unmodulated signal

Alternative ways to access the instrument functions

To fulfill the same task, you can also use the front panel keys or the setting parameters provided in the frequency and level dialogs.

Try out the settings dialogs

- In the "Frequency" tile, select "Frequency...".
 - In the "RF Frequency" tab, tap the "Frequency" field.
 - Set the frequency via the on-screen keypad.
- Access the "RF Level" dialog via the "Level" tile.
 - In the "RF Level" tab, select "Amplitude".
 - Set the amplitude (level) via the on-screen keypad.

Generating an RF frequency sweep signal

3. Select "RF State > On" to activate the RF signal generation.

Try out the front panel keys

- Use the [Freq], [Level], and [RF on/off] key on the front panel.



Connect RF 50 Ω of the R&S SMB100B to a signal analyzer, for example R&S®FSW, to display the generated signal.

For the required settings of the signal analyzer, refer to its user manual or its online help.

6.2 Generating an RF frequency sweep signal

The "Sweep" operating mode allows you to generate an RF signal with periodically varying frequencies or amplitudes.

This example deals with an RF signal with varying frequency and constant level. To configure the sweep, you need to determine a defined start and end frequency with constant time intervals between the frequency steps.

The sweep function does not require specific options.

1. On the front panel, press the [Preset] key to set a defined initial instrument state.
2. Set the signal output level, if required, e.g. set "Level > -25 dBm".
3. In the tile diagram, select "Sweep" > "Frequency Sweep".
4. In the "General" tab:

Generating an RF frequency sweep signal

<div> <div>0</div> <div>General Auto</div> </div>		Frequency Range		X
State	0	Current Frequency 570.000 000 000 MHz		
Mode	Auto			
Shape	Sawtooth			
Spacing	Linear			
Reset Sweep		Dwell Time 15.0 ms		

- Select "Mode > Auto" to run the sweep continuously.
- Select "Shape > Sawtooth" to set the waveform shape of the sweep signal.
- Select "Spacing > Linear", to determine the calculation method for the frequency shift of a step.
- Set "Dwell Time > 15.0 ms", to determine the time interval of the sweep steps.

5. Select the "Frequency Range" tab.

<div> <div>1</div> <div>General Single</div> </div>	Frequency Range	Output	Edit Marker		X
Start Frequency 100.000 000 000 MHz		Stop Frequency 500.000 000 000 MHz			
Center Frequency 300.000 000 000 MHz		Span 400.000 000 000 MHz			
Spacing Linear		Step Linear 1.000 000 000 MHz			

Saving and recalling settings

- a) Set "Start Freq > 200 MHz" and "Stop Freq > 600 MHz" to determine the frequency sweep range.
 - b) Set the step width "Step Lin > 10.0 MHz" to determine the width for a frequency step.
6. In the "General" tab, activate the frequency sweep with "State > On".
 7. Close the sweep dialog.
(Alternatively, tap the "Home" button to minimize the dialog. The R&S SMB100B indicates the "Sweep" dialog as active dialog in the task bar.)
 8. To activate the RF signal output, select "Level" > "RF On".

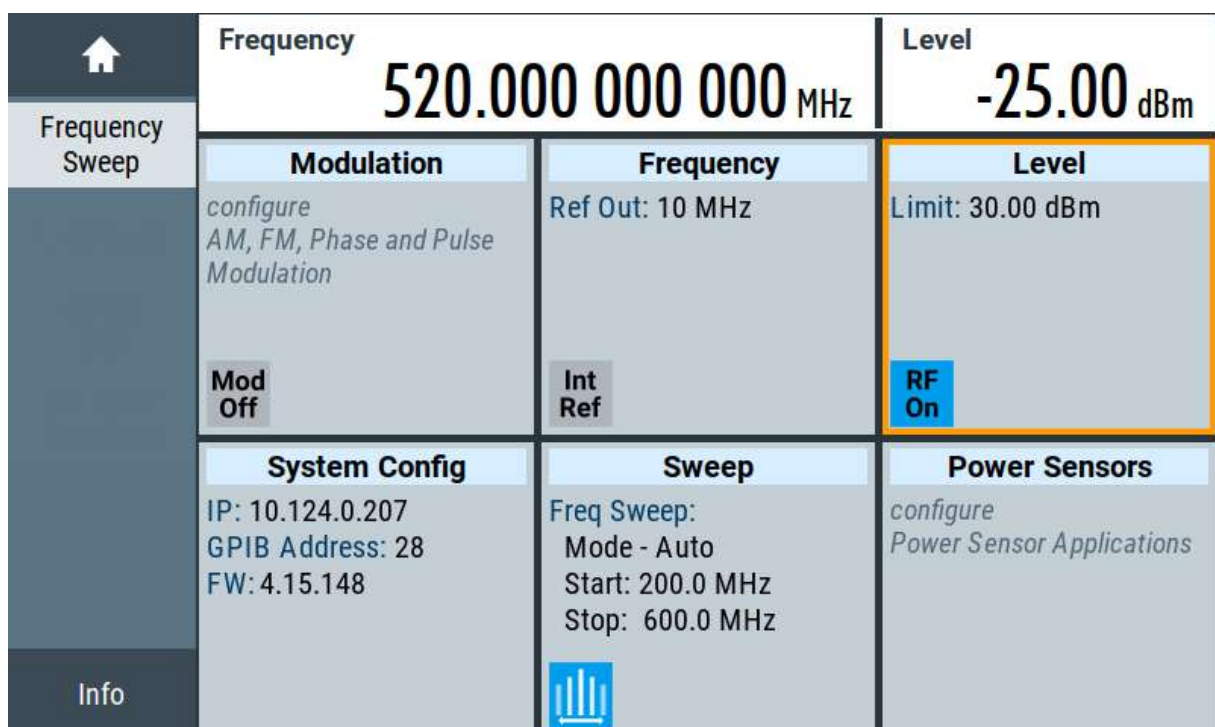


Figure 6-2: Generating a frequency sweep signal

The frequency field in the status bar indicates the continuously changing frequency, i.e. the running sweep.


6.3 Saving and recalling settings

To restore the results of our measurements later, we save the instrument settings in a file.

To save the instrument settings in a file

We assume, a test configuration as described in [Section 6.2, "Generating an RF frequency sweep signal"](#), on page 46.

1. Press the [Setup] key on the front panel.
2. In the "Setup" menu, select "Settings > Save/Recall".
3. In the "Save/Recall" dialog, select "Operation Mode > Save".

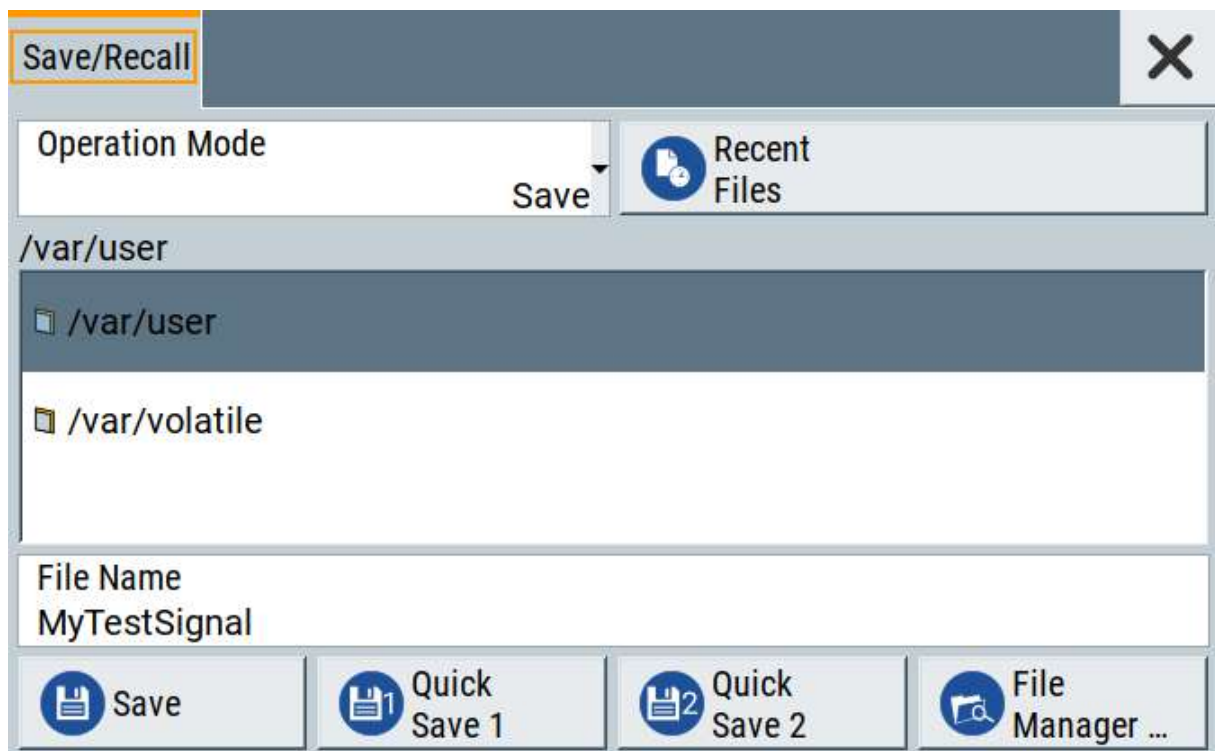

4. Tap the "Filename", use the on-screen keyboard, and enter *MyTestSignal*.
5. Tap the "Save" button.

The file `MyTestSignal.savrc1.txt` is stored in the default directory `/var/user/`.


To load saved instrument settings

You can restore the settings to the instrument at any time using the settings file.

1. Press the [Preset] button to restore the default instrument settings so you can check that the stored user settings are restored afterwards.
2. Press the [Setup] key on the front panel.
3. In the "Setup" menu, select "Settings > Save/Recall".

Saving and recalling settings

- In the "Save/Recall" dialog, select "Operation Mode > Recall".
Navigate to the directory the file is saved in and select the `MyTestSignal` file.

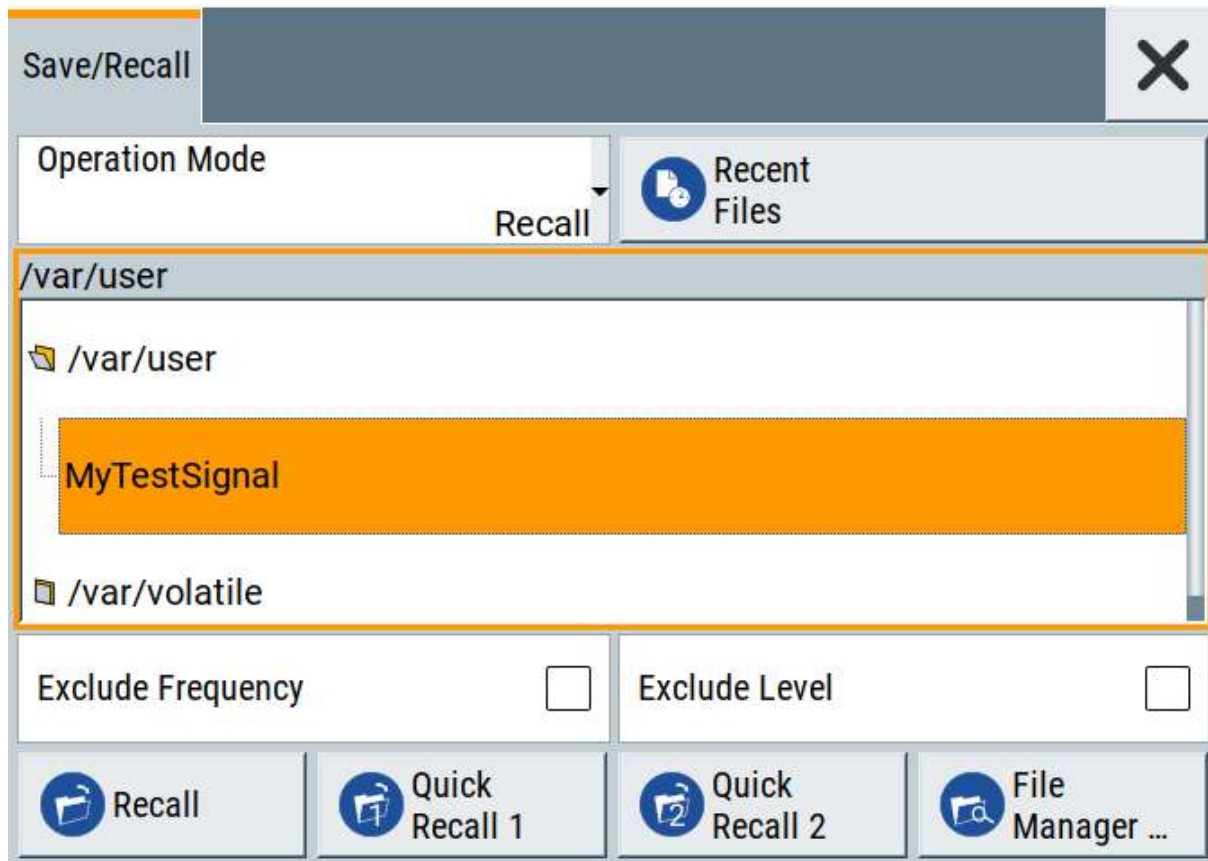

- Tap the "Recall" button.

All instrument settings are restored and the display resembles [Section 6.2, "Generating an RF frequency sweep signal"](#), on page 46, which shows the instrument display right before the settings were saved.



How to display all parameters with values different to their preset values


When you load a file to your instrument, you do not have enough information on the changed settings. In such case, it is useful to visualize all parameters that have been changed from their default state.

Try out the following:

- Touch and hold a spot in the tile diagram for at least 1 second to access the context-sensitive menu.

Saving and recalling settings

- Select "Mark All Parameters Changed from Preset".

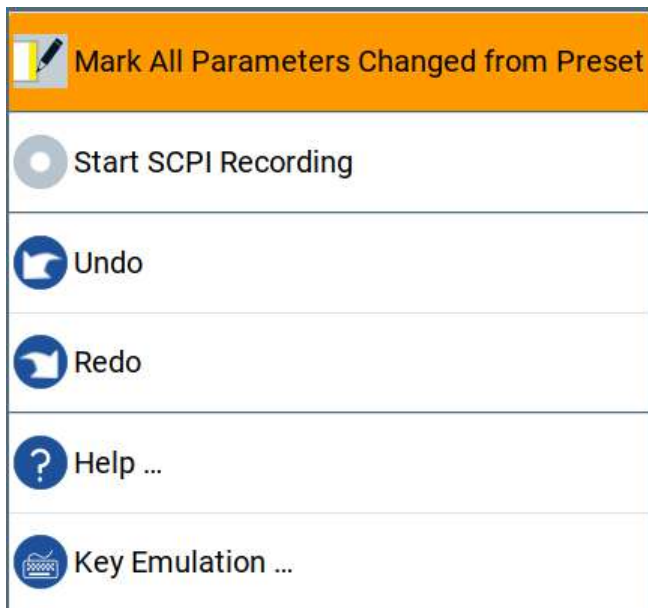

- All changed parameters are highlighted.

 Frequency Sweep Info	Frequency 580.000 000 000 MHz		Level -25.00 dBm
	Modulation <i>configure</i> AM, FM, Phase and Pulse Modulation Mod Off	Frequency Ref Out: 10 MHz Int Ref	Level Limit: 30.00 dBm RF On
	System Config IP: 10.124.0.207 GPIB Address: 28 FW: 4.15.148	Sweep Freq Sweep: Mode - Auto Start: 200.0 MHz Stop: 600.0 MHz 	Power Sensors <i>configure</i> Power Sensor Applications

7 Operating the instrument

This section provides an overview on basic operating tasks. There are three ways to operate the R&S SMB100B.

Manual operation

Use the touchscreen, keys and rotary knobs, or an optional mouse and/or keyboard. The principles of manual operation are explained in this section.

Remote control

Create programs to automatize repeating settings, tests, and measurements. The instrument is connected to a computer that runs the program.

This way of operation is described in the user manual, section "Network operation and remote control".

Remote operation

For remote monitoring and operation of the instrument, a VNC server is installed on the R&S SMB100B. You need a LAN connection to the computer, and a VNC client or browser to connect to the instrument.

This way of operation is described in the user manual, section "Network operation and remote control".

The following sections show how to operate the instrument manually.

• Means of manual interaction	53
• Understanding the display information	54
• Accessing the functionality	58
• Entering data	60
• Undo and redo actions	61
• Getting information and help	61

7.1 Means of manual interaction

For the manual interaction with the R&S SMB100B, you have several methods that you can use as an alternative to perform a task:

- Touchscreen:

Understanding the display information

Touchscreen operation is the most direct way to interact. Almost all control elements and actions on the screen are based on the standard operating system concept. You can tap any user interface element to set parameters in dialog boxes, enter data, scroll within a dialog etc., as if you work with a mouse pointer.

Tapping the screen works like clicking mouse buttons:

- Touch quickly = click: Selects a parameter or provokes an action.
 - Touch and hold = right-click: Opens a context-sensitive menu.
 - Touch and swipe = drag: Scrolls through the contents of a display element larger than the screen, e.g. a list or a table.
- Function keys and rotary knob:
The front panel provides nearly all functions and controls to operate the instrument in the classic way, without touchscreen.
 - Optional mouse and/or keyboard:
These devices work like known from PCs. The navigation keys on the front panel correspond to the keys on the keyboard.

This manual describes the manual interaction with the instrument via the touchscreen. It mentions the alternative methods using the keys on the instrument or the on-screen keypads if it deviates from the standard operating procedures. The usage of the touchscreen and navigation keys is described in [Section 7.3, "Accessing the functionality"](#), on page 58.

Throughout the manual, the term "select" refers to any of the following methods:

- Using a finger on the touchscreen
- Using a mouse pointer in the display
- Using a key on the instrument or on a keyboard

7.2 Understanding the display information

The home screen of the R&S SMB100B displays all main settings and generator states, divided into main operation areas.

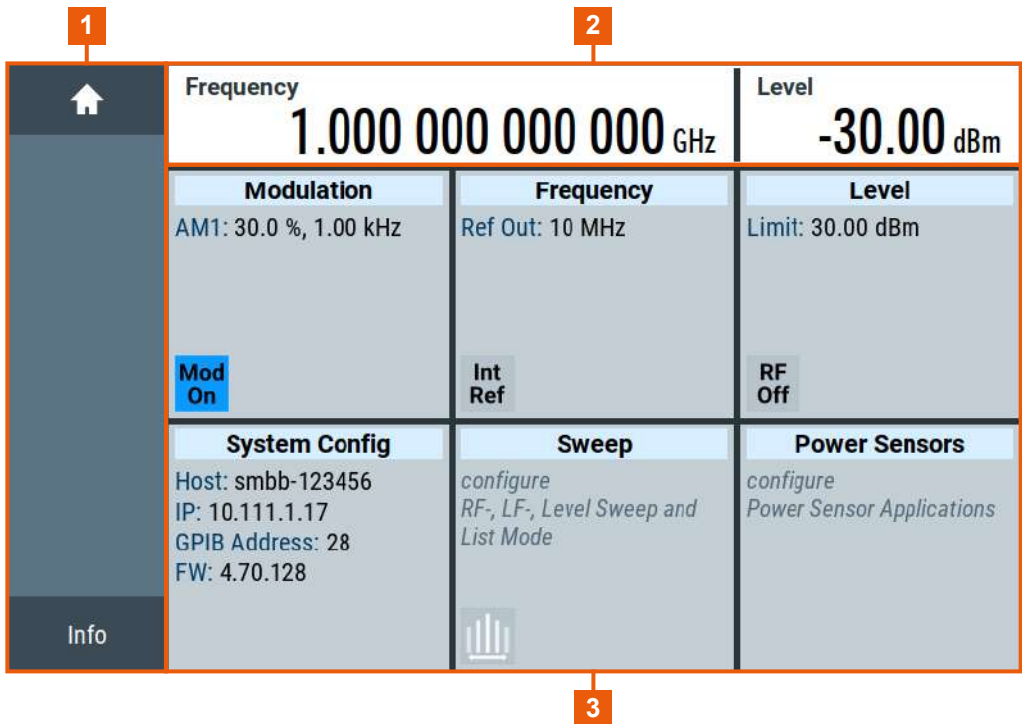


Figure 7-1: Home screen

- 1 = Taskbar/softkey bar with "Home" and "Info" key
- 2 = Status bar
- 3 = Tile diagram

- [Status bar](#)..... 55
- [Tile diagram](#)..... 55
- [Taskbar](#)..... 56
- [Additional display characteristics](#)..... 57

7.2.1 Status bar

The status bar at the top of the screen indicates the RF frequency and the level of the output signal provided to the DUT. You can set both parameters directly here.

7.2.2 Tile diagram

The tile diagram is the main entry to the settings of the R&S SMB100B.

Understanding the display information

Tile	Access to:
"Modulation"	<ul style="list-style-type: none"> Analog and stereo¹⁾, and pulse¹⁾ modulation settings Built-in LF generator
"System Config"	<ul style="list-style-type: none"> "Save/Recall": settings for saving and loading instrument configurations "Remote access": Network and emulation settings. "Setup": general system configuration
"Sweep"	<ul style="list-style-type: none"> Frequency and level sweeps List mode
"Frequency"	<ul style="list-style-type: none"> RF frequency and phase Reference frequency
"Level"	<ul style="list-style-type: none"> RF level Attenuator Automatic level control User correction
"Power sensors"	<ul style="list-style-type: none"> Power sensors
¹⁾ requires additional options	

7.2.3 Taskbar

The "Taskbar" shows a home and an info button, and assigns a labeled button whenever you open a dialog. If more dialogs are open than the taskbar can display, touch and swipe the taskbar to scroll up and down.

The buttons shown in the following example represent the variants.

Table 7-1: Example of buttons in the taskbar



"Home" button
Returns to the home screen.



"Busy" indicator
Indicates a running process.



"User Menu"
Lists parameters that can be defined for quick access.



Shows the current remote access connections when the instrument is remotely controlled.

Tip: An indicator in the "System Config" tile shows the current remote control status.

Understanding the display information




R&S NRP power sensors

Shows a connected external power sensor. The button displays the current readings when the sensor is active.



Active dialogs

Indicates the dialog name of each active dialog in a separate button.



"Info" key

Provides access to status and error messages.

Note: The warning symbol signifies a permanent error message.

7.2.4 Additional display characteristics

The following section provides a short insight on the indication of the screen in general, and significant elements that you see under specific modes, in dialogs or settings.

- **Appearance of active elements**


- *Active* elements like On/Off switches, state buttons have a **blue** background.
- *Selected* elements are framed or highlighted **orange**.
- *Inactive* elements are **gray**.

- **On-screen keypads**

Either a numerical or alphanumerical on-screen keypad appears when you enable an entry field, see [Section 7.4, "Entering data"](#), on page 60.

- **Info line**

The "Info line" shows brief status information and error messages. It appears when an event generates a message. If selected, the R&S SMB100B shows information on static errors and the error history.



- **Key parameters indicated in tab labels**

- **Scrollbar handle**

An arrow icon that appears when you touch a scrollbar helps you to scroll in a dialog or list.


If no scrollbar handle appears, you can touch and swipe an element to scroll up and down.

- **Progress indicators**

A busy icon indicates a currently running process. If a process takes some time, a progress bar shows the current state.

- **Context-sensitive menus**

Within the entire screen display, including single parameters, you can access context-sensitive menus that provide some additional functions.

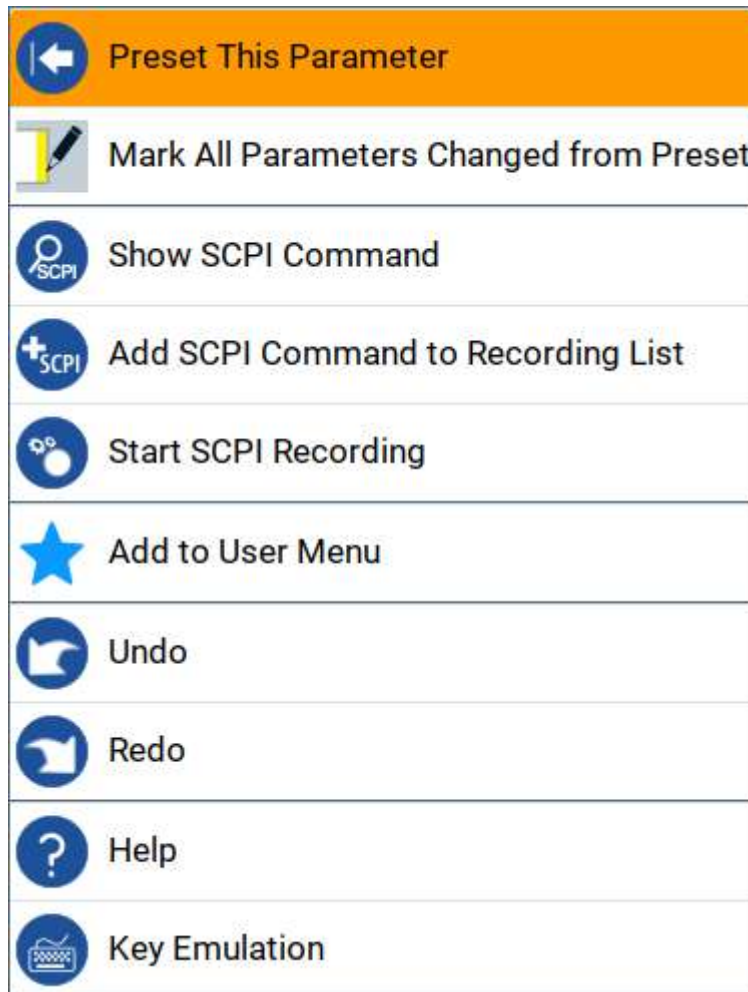

7.3 Accessing the functionality

All functionalities are provided in dialog boxes as known from computer programs. You can control the instrument intuitively with the touchscreen. This section provides an overview of the accessing methods.

The instrument's functions and settings can be accessed by selecting one of the following elements:

- System and function keys on the front panel of the instrument
- Taskbar/softkeys on the touchscreen
- Context-sensitive menus for specific elements on the touchscreen, or with the rotary knob (press and hold).
- Elements on the status bar in the touchscreen
- Displayed setting on the touchscreen that means block diagram and all settings available in dialogs.

To open a dialog box

- ▶ Perform one of the following actions:
 - Select the required tile, and then the menu entry.
 - Select the minimized view (button) on the taskbar.

Some of the utility keys access a dedicated dialog, too.

To minimize a dialog box

1. To return to the home screen, select the "Home" button.
2. To switch to another dialog, select the [Next Window] button.

To close a dialog box

To close a dialog box, you have the same controls as you know from computers or devices with touchscreen.

- ▶ Perform one of the following actions:
 - Select the "Close" icon in the upper right corner.
 - Select the [Esc] key on the front panel.
 - Drag and drop a minimized dialog from the taskbar to the tile diagram.

To select an option in a dialog box

- ▶ Select the required option.

7.4 Entering data

Some parameters have their own key on the front panel. For data input in dialog boxes, the instrument provides on-screen keypads for entering numeric and alphanumeric values. You can always set the parameters via the touchscreen, the front panel or an external keyboard.

To enter numeric values with the on-screen keypad

For numeric settings, the instrument displays the numeric keypad. The units specified correspond to the units of the parameter.

1. Enter the numeric value.

Tip: For a quick entry, you can enter a value in an exponential representation, for example *1e7* for *10000000*.

2. Tap the unit button to complete the entry.

The unit is added to the entry.

Tip: For a quick unit change, you can enter shortcuts, for example for a frequency value *1e8h* for *100 MHz*.

For an overview of shortcuts supported by the R&S SMB100B, see section "Unit Shortcuts" in the appendix of the user manual.

3. If the parameter does not require a unit, confirm the entered value by pressing "Enter".

To enter numeric values with the front panel controls

1. Change the currently used parameter value by using the rotary knob or the [Up/Down] keys.
2. If the parameter does not require a unit, confirm the entered value by pressing the [Enter] key or any of the unit keys.
The instrument highlights the editing line to confirm the entry.

If you edit numeric data in tables, enable edit mode first. Press [Enter] or press the rotary knob.

To enter alphanumeric values

If a field requires alphanumeric input, you can use the on-screen keyboard to enter letters and characters including special characters.

To complete an entry

- Press the [Enter] key or the rotary knob.

To correct an entry

1. Using the arrow keys, move the cursor to the right of the entry you want to delete.
2. Press the [Backspace] key.
3. Deletes the entry to the left of the cursor.
4. Enter your correction.

To abort an entry

- Press the [Esc] key.
The dialog box closes without changing the settings.

7.5 Undo and redo actions

Accessed via the context-sensitive menus, "Undo" allows you to restore one or more actions on the instrument. Depending on the available memory, the "Undo" steps can restore all actions.



"Redo" restores a previously undone action.

7.6 Getting information and help

In some dialog boxes, graphics are included to explain the way a setting works.

For further information, you can use the following sources:


- Tooltips give the value range of the parameter.
- The context help provides a functional description on a setting.

- The general help explains a dialog box, provides instructions, and general information.

To display context help

- To access a help topic, perform one of the following:
 - a) Tap and hold the parameter for which you need information.
 - b) In the opening context menu, tap "Help".
 - c) Tap the parameter.
 - d) Press the [Help] key.

The "Help" dialog opens. You can browse the help for further information.

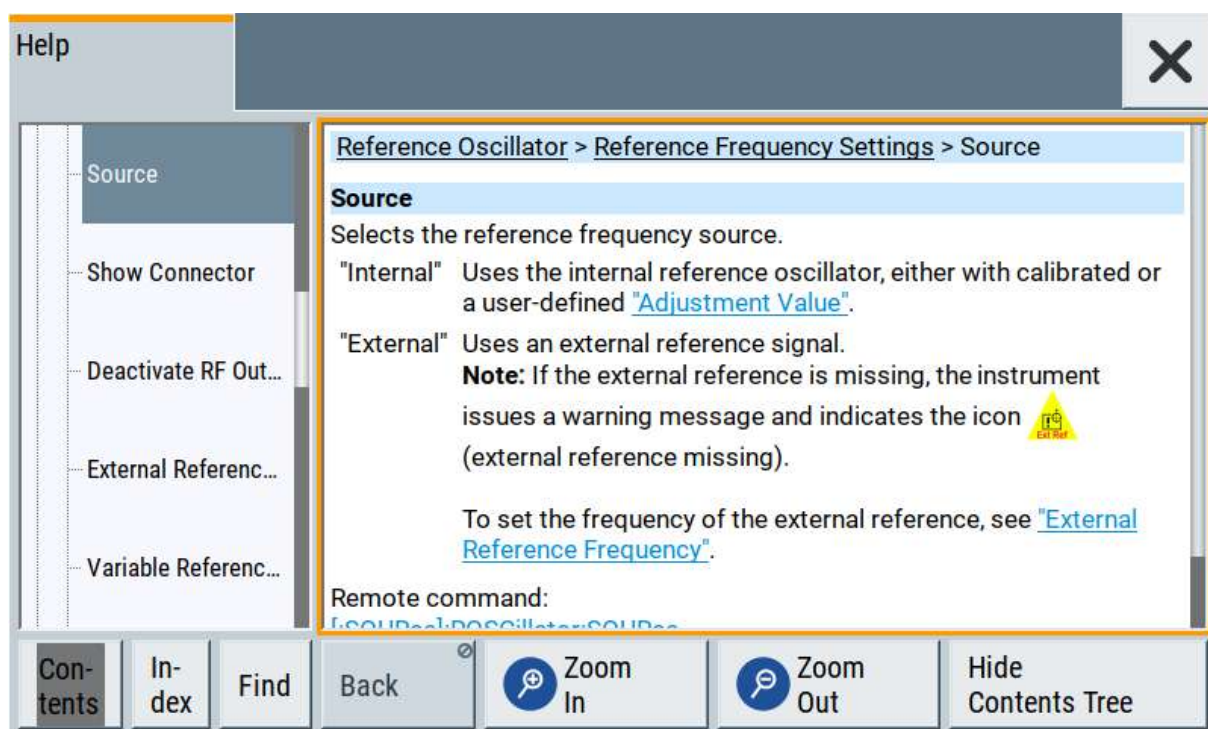

Contents of the help dialog box

The help dialog box covers two main areas:

- "Contents" - contains a table of help contents
- "Topic" - contains a specific help topic

The help system also provides an "Index" and a "Find" area, and "Zoom" functions that are accessed via the corresponding buttons.

To open general help

- Press the yellow [Help] key on the front panel.

If a dialog box is opened, the help topic for the current tab is shown. Otherwise the "Contents" page appears.

Navigating in the table of contents and in the help topics

1. To move through the displayed content entries, tap on an entry.
Entries with a plus sign contain further entries.
2. To display a help topic, tap on the topic name.
3. To follow a cross-reference, tap on the link text.
4. To return to the previous page, select "Back".
This function scrolls back all steps that you have performed before.
5. Use the "scroll bars" to shift the visible section of content shown.
6. To maximize the "Topics" area, tap the "Hide Contents Tree" button to hide the contents tree.

Using the index

1. Select the "Index" button.
2. Enter the first characters of the topic that you are interested in.
The entries starting with these characters are displayed.
3. Tap on the index entry.
The corresponding help topic is displayed.

8 Contacting customer support

Technical support – where and when you need it

For quick, expert help with any Rohde & Schwarz product, contact our customer support center. A team of highly qualified engineers provides support and works with you to find a solution to your query on any aspect of the operation, programming or applications of Rohde & Schwarz products.

Contact information

Contact our customer support center at www.rohde-schwarz.com/support, or follow this QR code:



Figure 8-1: QR code to the Rohde & Schwarz support page

Index

A

Active elements	57
Alphanumeric values	
Entering	60
Application cards	15
Application notes	15

B

Bench top, placing	20
Brochures	14

C

Calibration certificate	14
Carrying the instrument	19
Checking the instrument	19
Connecting	
Keyboard	25
LAN	24
Memory stick	25
Mouse	25
Power	23
To Ref In/Ref Out	28
To RF	28
To RF coaxial connectors	26
USB devices	25
Connecting to RF coaxial connectors	
To connect to pluggable connectors ...	27
To connect to screwable connectors ...	26
To prepare for connecting	26
Connector	
AC power supply	40
GPIB	39
IEC/IEEE	39
Inst Trig	41
LAN	39
LF	40
Mod. Ext.	40
Pulse Ext.	40
Pulse Video	40
Ref In	40
Ref Out	40
RF 50 Ω	36
S/P Dif	40
Signal Valid	41
Stereo L/R	40

USB	35, 39
USB In	39
Context-sensitive menu	57
Customer support	65

D

Data entry	60
Data sheets	14
Dialog boxes	58
Display	
Active elements	57
Context-sensitive menu	57
Info line	57
Information	54
On-screen keypad	57
Overview	32
Status bar	55
Tab labels	57
Taskbar	56
Tile diagram	55
Documentation overview	13

F

Front panel tour	31
Function keys	
Details - see user manual	33
Overview	33

G

Getting started	13
-----------------------	----

H

Help	13, 62
------------	--------

I

Info line	57
Input connector	40
Input connectors	
S/P Dif	40
Stereo L/R	40
Instrument	
Carrying	19
Checking	19
Lifting	19
Operating site	20
Unpacking	19
Instrument help	13

Instrument security procedures	14
Instrument tour	31

K

Key

★ (User)	35
Arrow	35
Backspace	34
Down	35
Enter	34
Esc	34
Freq	33
Help	32
Home	35
Left	35
Level	33
Local	32
Mod on/off	33
Next window	35
On/Off	35
On/Standby	37
Preset	32
Resize window	35
RF on/off	33
Right	35
Setup	32
Up	35

Keyboard

On-screen	60
Usage	53

Keypad

On-screen	60
Overview	37

L

LAN

Connecting	24
Environment	24

Lifting the instrument	19
------------------------------	----

Loading

Trying out	49
------------------	----

M

Manual interaction	53
Mounting, in a rack	22
Mouse	
Usage	53

N

Navigation

Keys	35
------------	----

Navigation controls

Overview	34
----------------	----

Network

Environment	24
-------------------	----

Numeric data entry	60
--------------------------	----

Numeric values

Entering	60
----------------	----

O

On-screen keypad	57
------------------------	----

Open source acknowledgment (OSA)	15
--	----

Operating site

Choosing	20
Setting up the instrument	20

Operation

Concepts	53
Manual	53

Output connector	40, 41
------------------------	--------

Output connectors

RF 50 Ω	36
---------------	----

P

Placing, on a bench top	20
-------------------------------	----

Power

Connecting the instrument	23
---------------------------------	----

Power On	37
----------------	----

Power supply

Connector	40
-----------------	----

Preparing for use	19
-------------------------	----

R

Rack, mounting	22
----------------------	----

Release notes	15
---------------------	----

Remote control	53
----------------------	----

Remote Desktop	53
----------------------	----

Remote operation	53
------------------------	----

RF 50 Ω connector	36
-------------------------	----

Rotary knob	34
-------------------	----

S

S/P Dif connector	40
-------------------------	----

Safety instructions	7, 14
---------------------------	-------

Saving	48
--------------	----

SD card slot	36
--------------------	----

Security procedures	14
---------------------------	----

Service manual	13
----------------------	----

Softkey bar	
See Taskbar	56
Specifications	14
Standby	37
Status bar	
Display	55
Stereo L/R connector	40
Switching	
On or off	28

T

Tab labels	57
Text entry	60
Tile diagram	
Display	55
Tooltips	
Show	62
Touchscreen	32
Compared with mouse	53
Usage	53

U

Unpacking the instrument	19
User manual	13
Utility keys	
Details - see user manual	32
Overview	32

V

Videos	15
VNC	53

W

Web interface	53
White papers	15